

The Safety Manager's Guide to

LEADING EDGE SELF-RETRACTING LIFELINES

What is Leading Edge? Leading Edge is an application where in the event of a fall, the lifeline of the Self Retracting lanyard may come in contact with an exposed edge, or sharp edge. In many scenarios, leading edge applications occur when the harness wearer is tied off or anchored below their back D-ring, however it is possible when anchor points are overhead as well.

LEADING EDGE APPLICATION

Any type of at-height work, in which a fall potential exists over an edge. Leading Edge applications most commonly occur when tie off is at foot level, or even over head in some instances.

FOOT-LEVEL TIE OFF


When workers are tied off, or using an anchor point at their feet.

SRL-LE, HORIZONTAL SRL-LE

Interchangeable terms for leading edge self-retracting lifeline; must include an integral energy absorber element next to the worker.

SRL, OVERHEAD SRL

Interchangeable terms for traditional self-retracting lifelines used in applications other than leading edge. It is important to note that while all SRLs are rated to ANSI Z359.14 for overhead use, only a subset of these will be Leading Edge SRLs.

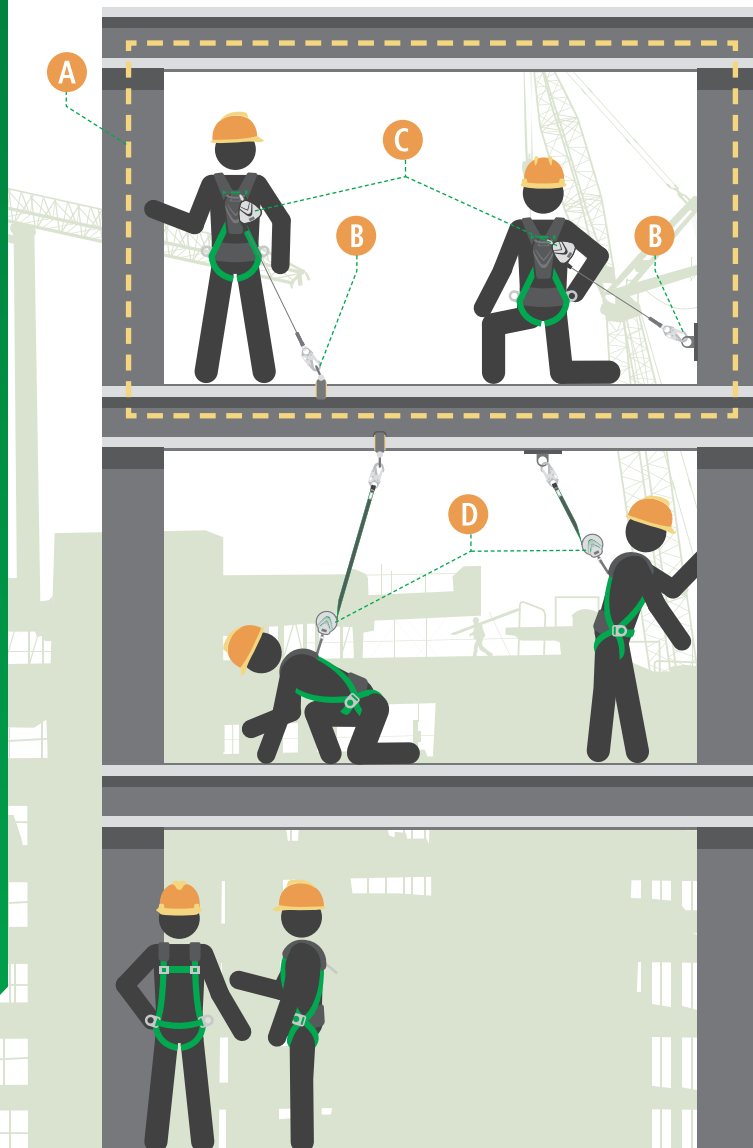


WE KNOW WHAT'S AT STAKE.

Leading Edge TESTING & APPROVALS


The American National Standards Institute ANSI Z359 Fall Protection Committee says that in order for an SRL to be labeled "LE" by ANSI, it must be:

**TESTED ON A
STEEL EDGE,
WITH A RADIUS
OF 0.005"
(0.127 mm)**

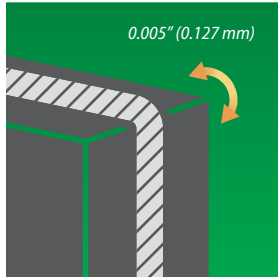

AND

Meet certain requirements for:

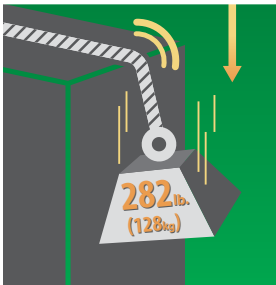


**DYNAMIC
PERFORMANCE**



**DYNAMIC
STRENGTH**




**STATIC
STRENGTH**

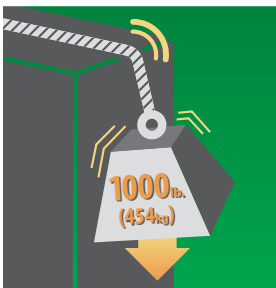

Overhead SRL vs. SRL-LE **WHICH IS BEST?**



OVERHEAD SRL IS IDEAL FOR:

At-height work where there is no risk for the lifeline to come in contact with an edge in a fall event, for example climbing rebar or confined space entry.

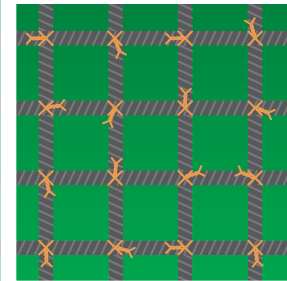

SRL-LE IS A MUST FOR:

Leading edge and/or sharp edge applications. These applications are found in many industries, but commonly include steel erection and deck laying as a prime example.

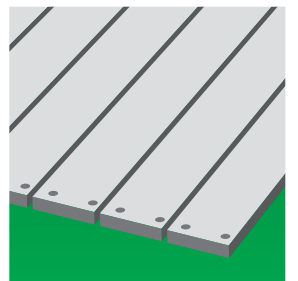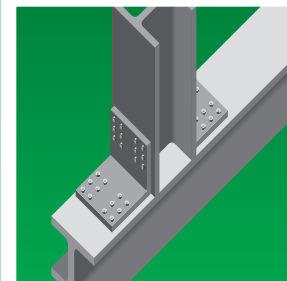

If you aren't sure which type of SRL to choose, remember a leading edge SRL can cover a variety of applications and tie-off points, whereas traditional SRLs may have some limitations in these areas.



DO YOU HAVE THE RIGHT FALL PROTECTION?

Learn more about MSA's leading edge solutions
at www.MSAafety.com/leadingedgefallprotection.