


Installation Instructions for Neue Series Passage Leversets


Step 1.

- Fold template where indicated.
- Position template on door edge at desired latch height.
- Firmly hold template and mark latch height and handle fixing holes at 60mm backset (refer template).
- Measure door thickness and mark centre.
- Drill 25mm (1") latch hole.
Note: it is important to drill this hole squarely.
- Drill one 50mm (2") hole or one 54mm (2 1/8") hole through door face at required backset as marked on template.

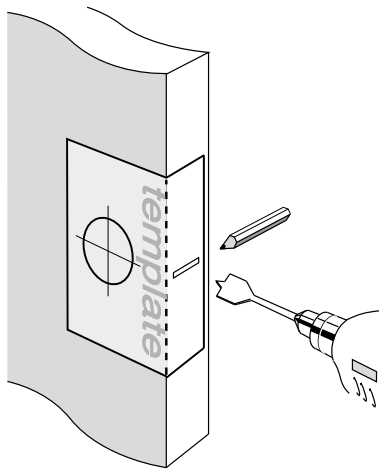

Step 2.


- Mark and chisel door edge for latch face plate to a recess of 2mm or until flush with door. Use latch face plate as a template.
- Pre-drill wood screw holes with suitable drill size.
- Insert latch and fasten with wood screws provided.

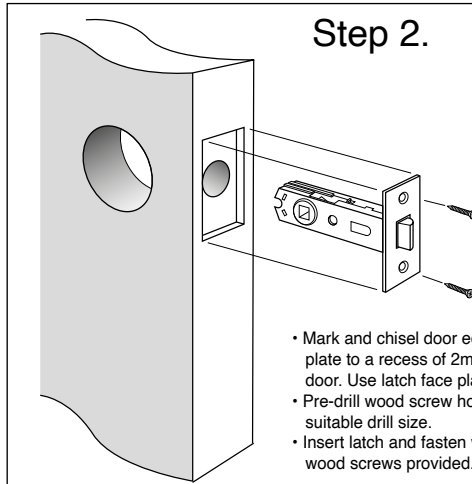

Step 3.

Install lever assemblies to door

- Insert square drive spindle (1) through latch in door.
- Identify which side of the door each lever assembly will need to be located in order to allow both levers to move in a downward motion once installed.
- Remove rosette covers (2) from both lever assemblies.
- Place one lever assembly (3) onto the square drive spindle.
- Place other lever assembly (4) into position, locating it onto the other end of spindle.
- Fasten both lever assemblies together with screws provided (5):
Use long screws for thick doors and short screws for thin doors. Each under-rose features a countersunk hole and a threaded hole. Install one screw from either side, through the countersunk hole, through the latch and into the threaded hole of the opposite under-rose. Then tighten the screw head on each side.
- Re-apply rosette covers (2) to both under-roses by pushing the covers over the rubber rings until flush with door.
- For Square Rosette covers tighten grub-screw (6), using allen key (7), located on underneath side of rosette.

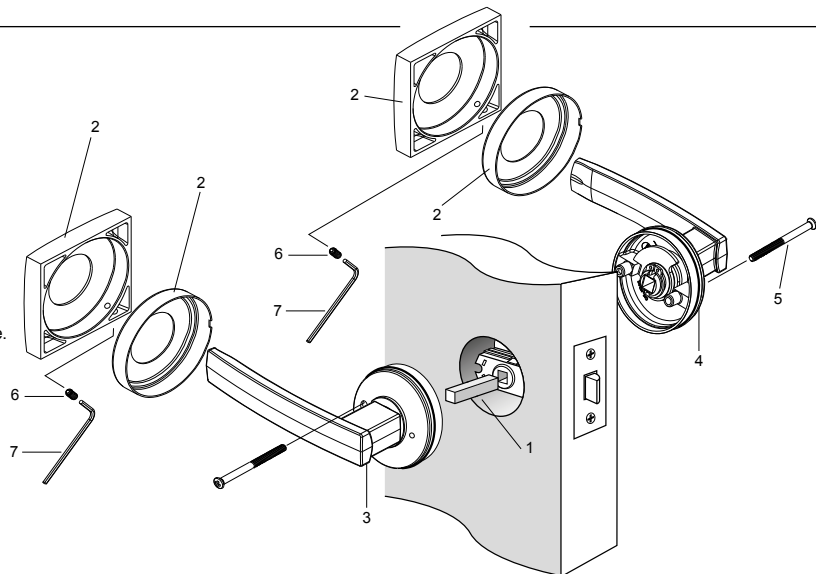

NOTE: Carefully follow these instructions when installing.
Screws to be tightened to a recommended 2.5Nm torque.



Mark centre-line
of latch hole

Mark centre-line
of latch hole

FOLD HERE

Fit here on door edge

54mm (2 1/8") hole
or drill 50mm (2")
hole – refer Step 1.

BACKSET 60mm (2 3/8")

Fit here on door edge

Suits doors 32mm (1 1/4") to
45mm (1 3/4") thick.



ALLEGION

1800 098 094

info.au@allegion.com
gainsboroughhardware.com.au

PRINT TO SCALE

