#### **CARE AND MAINTENANCE**

#### **Door Furniture**

At twelve (12) monthly intervals, the fixing screws securing the furniture to the door, both surface fix and through fix, should be checked and tightened as required. Loose fitting furniture which fails will not be covered under warranty.

All door furniture should only be wiped clean with a soft damp cloth. In the case of Satin Stainless Steel or Satin Chrome Plate, a non-abrasive mild household detergent may be used to remove ingrained grime.

## **Locks & Latches**

Care should be taken to ensure the internal components are kept free of dirt and woodchips during installation as this is the most common cause of malfunction and will not be covered under warranty. Tubular latches used in external situations should be lubricated by an aerosol lubricant at twelve (12) monthly intervals.

#### Note

For applications that are subject to high use/ abuse or in corrosive environments, additional preventative maintenance will be required at a minimum of three (3) monthly intervals.

#### WARRANTY

Our goods come with guarantees that cannot be excluded under the local consumer law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



# G3 Series with QuickFix™ Passage and Privacy

# INSTALLATION INSTRUCTIONS

#### **Box contents**

- Rose & lever set contains 2 factory fitted screws
- Strike
- Latch
- Pack of 6 fixing screws
   (includes 2 anti-rotational screws)
- Jig template

### Door thickness

- Passage set 30mm 50mm
- Privacy set 30mm 42mm

# **Tools required**

- Tape measure
- Pencil
- Level
- Drill
- Drill bits 4mm & 8mm
- Spade bit 25mm
- Hammer
- Chisel
- Screwdriver (Phillips)

Allegion (Australia) Pty Ltd
Freephone 1800 098 094
Email auinfo@allegion.com
www.allegion.com.au


Allegion (New Zealand) Limited
Freephone 0800 477 869
Email nzinfo@allegion.com
www.allegion.co.nz





# 1. DOOR PREPARATION

Measure 970mm from floor, on door and jamb.

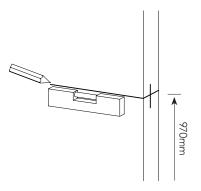


# 5. PREPARE JAMB & INSTALL STRIKE

Measure Ø8mm either side of centre mark, drill Ø25x15mm hole. Use strike as a guide to mark and chisel recess, allowing space behind strike plate for the dust box. Insert dust box, drill holes and screw strike in place.




# 9. TIGHTEN SCREWS




# 2. DRILL SPINDLE HOLE

Using the jig, mark and drill Ø25mm spindle hole on both sides of the door.

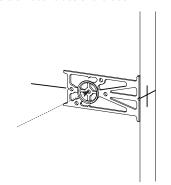


# 6. INSTALL FURNITURE

Attach QuickFix $^{\text{\tiny{M}}}$  furniture with preinstalled studs and screws.

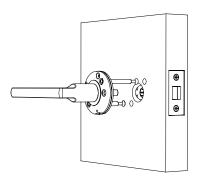


# 10. FIT ANTI-ROTATIONAL SCREWS

OPTIONAL for residential applications REQUIRED for commercial applications (Form Series only)

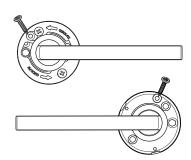


## 3. DRILL HOLES


Position jig within the drilled spindle hole. Mark 2x holes (labelled QF) and optional privacy (labelled PR). Drill pilot holes Ø4mm from both sides of the door. Re-drill Ø8mm holes on both sides of the door. Drill barrel hole Ø25x85mm.



# 7. INSTALL FURNITURE

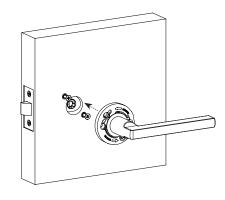


# 11. FIT ROSE COVER

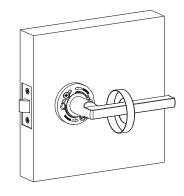


## 4. PREPARE & INSTALL LATCH

Use latch as guide to mark and chisel latch recess. Install latch to ensure the curved latch bolt faces the door jamb. Drill pilot holes and screw in latch.

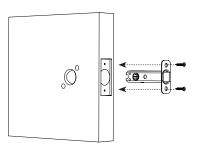

# 8. ROTATE BEZEL

Rotate bezel to lock in place.

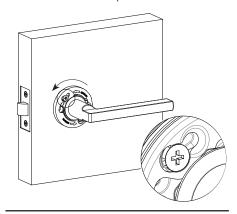

## 12. FIT PRIVACY PIN

PRIVACY ONLY

