


#### Vivienne King Spindle Bed Frame with Headboard

SKU# WEVIV03KB2

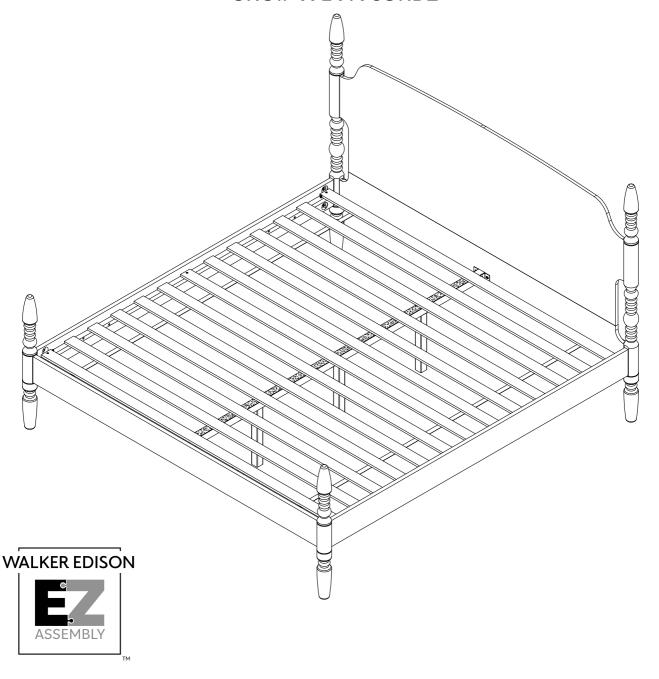

#### For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com



#### we Time to get started

Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

#### **Estimated time for assembly**

Say Goodbye to Frustration! 60 Minutes or Less to Build No Stress Required





#### People recommended for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.



#### **Tools Needed**

Grab a Phillips head screwdriver to conquer this assembly



#### Use power tools with caution


You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.





Scan to get assembly tips and help!

#### WE Parts List

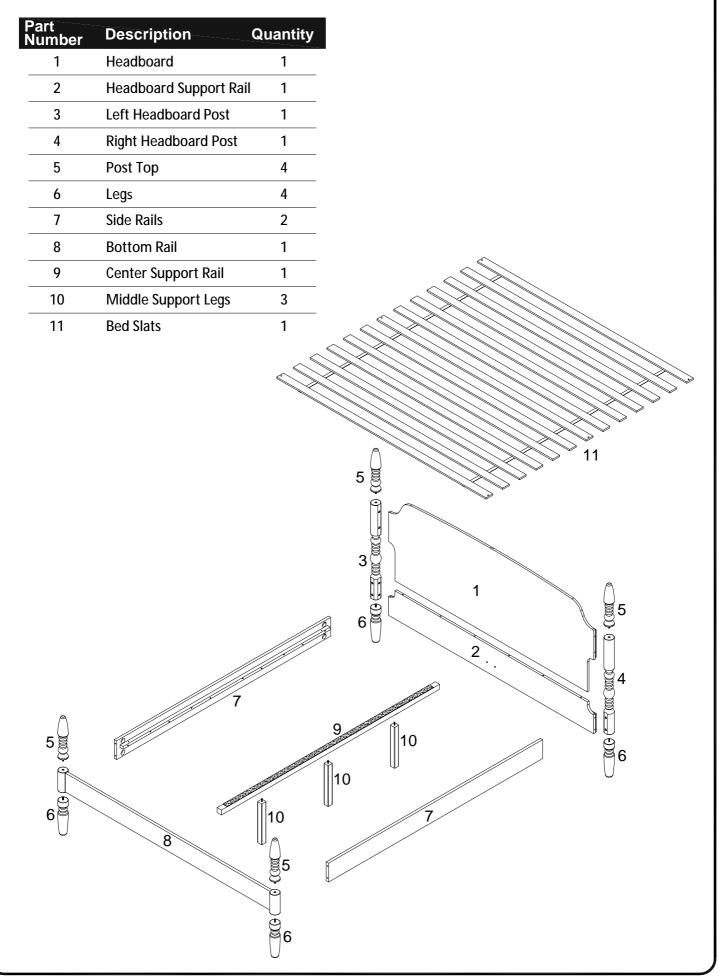


#### we Hardware List

	Part	Size	Name	Quantity
А		8x40mm	Wooden dowel	6
В		8x30mm	Wooden dowel	4
С		5/16"x20mm	Bolt	4
D		5/16"x16x1.2mm	Washer	4
E		M4	Нех Кеу	1
F		5/16"x83mm	Bolt	16
G		5/16"	Half - moon washer	16
Н		5/16"	Nut	16
J		12x90	Wrench	1
K		105x40x32mm	U Bracket	2
L	<(})	3x15mm	Screw	4
M	<	4x25mm	Screw	6

The hardware quantities listed above are required for proper assembly. Extra hardware pieces may be included.

Let's get started! Lay the Headboard (1) on its front and insert wood dowels (A) into the holes on the bottom.

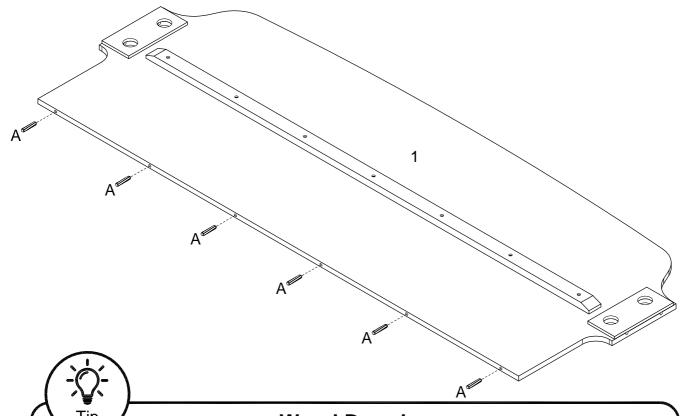


#### **Wood Dowels**

Dowels are essential in furniture assembly for creating strong, precise connections.


They ensure structural integrity, prevent shifting, and simplify alignment,

resulting in sturdier, longer-lasting furniture.

Follow these steps:



L




 Select appropriate size dowel compared to size of drill hole and alignment in instructions. If unsure of placement place dowel next to drill hole to compare size and ensure correct placement.

2: Insert into drill hole and press firmly to ensure placement is set.

3: Align the dowel with corresponding piece and press together until secure.


Next, attach the Headboard Support Rail (2) to the Headboard (1) by the dowels.

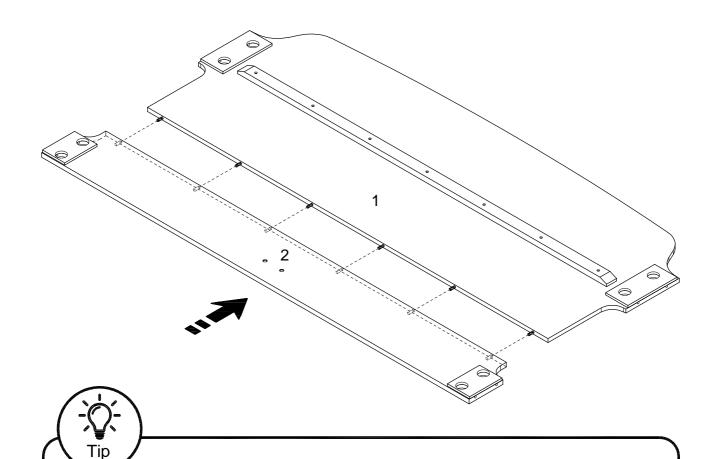


To keep your product looking its best and scratch-free, try assembling it on a soft surface like carpet or a blanket. This helps prevent any accidental scratches and keeps your furniture in top shape!




Twist the Legs (6) and Post Tops (5) into the Left and Right Headboard Posts (3 & 4) making sure the tops are on the end with the longer solid piece.

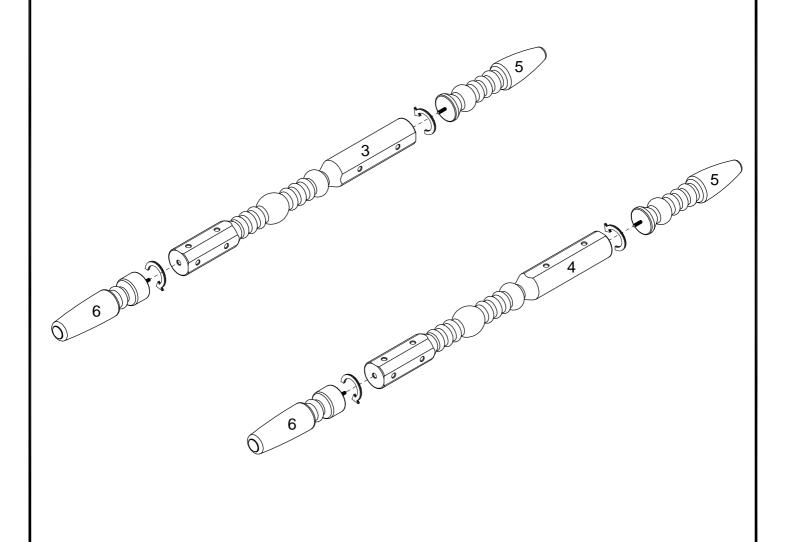


Next, twist in the Bolts (F) to the Left and Right Headboard Posts (3 & 4). For now, leave the four holes in the image without bolts empty.

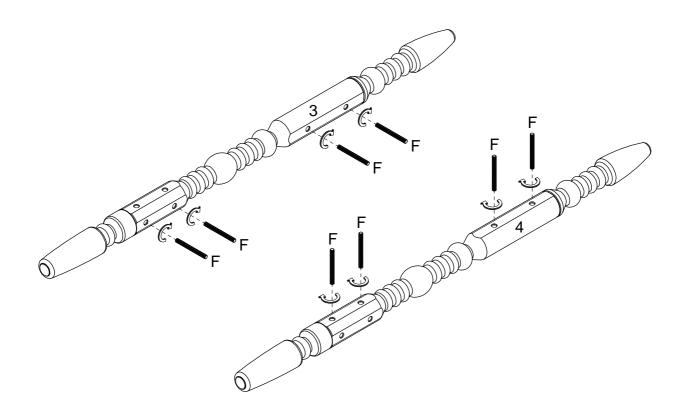


Now let's finish the headboard! Insert the bolts in the Headboard Posts (3 & 4) into the Headboard (1) and Headboard Rail (2). To secure, put the Half Moon Washer (G) over bolt in the circle openings on the Headboard (1) and then tighten the Nut (H) on top with the Wrench (J).

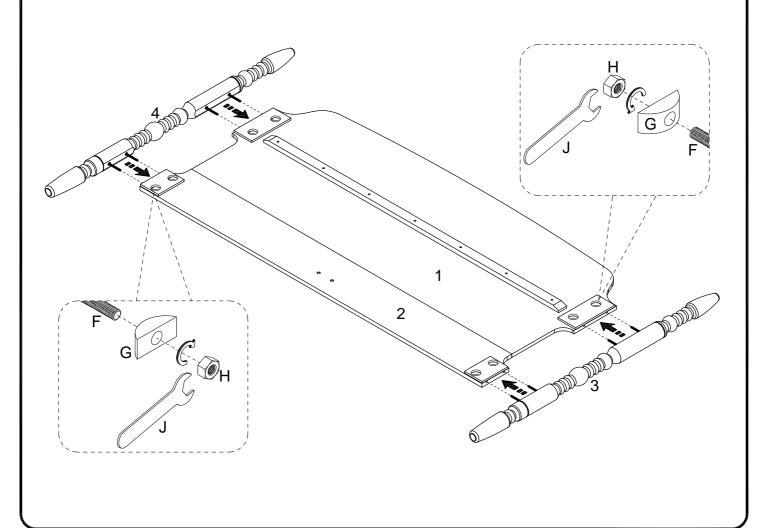


Turn the assembled headboard over and twist in Bolts (F) to the front side of the Left and Right Headboard Posts (3 & 4). Also attach the U Bracket (K) to the Headboard Rail (2) with a Washer(D) and Bolt (C).

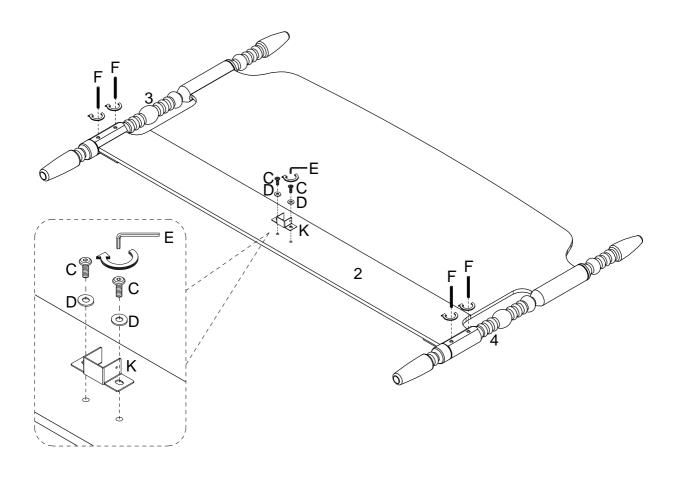


Next, twist the Legs (6) and Post Tops (5) into the Bottom Rail (8). Tip: The Bottom Rail is not directional so add the Legs to either side.

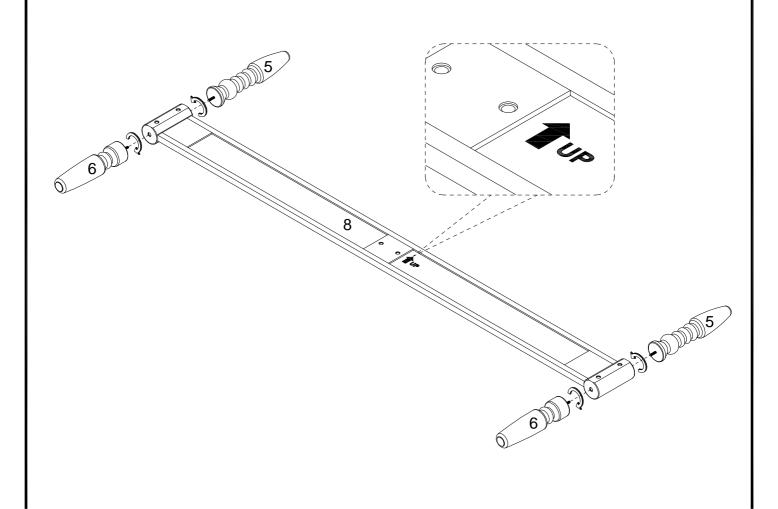


Twist in Bolts (F) and attach the U Bracket (K) with a Washer (D) and Bolt (C).

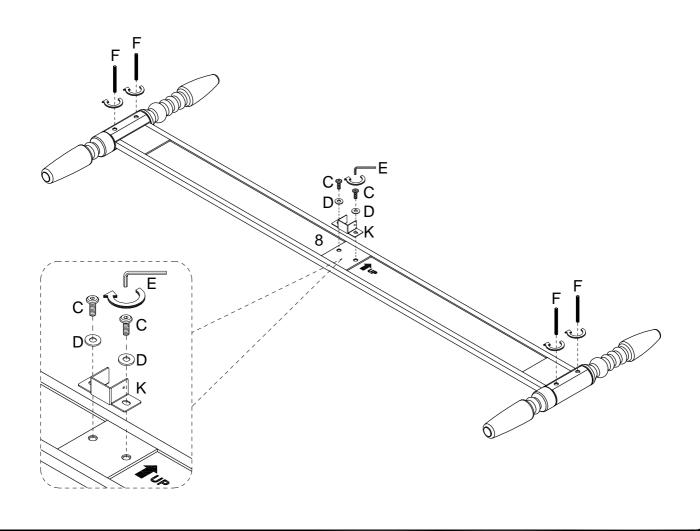


Find some yoga blocks, books, or anything you have near you to prop up the Side Rails (7) while attaching them to the Headboard posts (3 & 4). To secure, put the Half Moon Washer (G) over bolt in the circle openings of the Side Rails (7) and then tighten the Nut (H) on top with the Wrench (J).

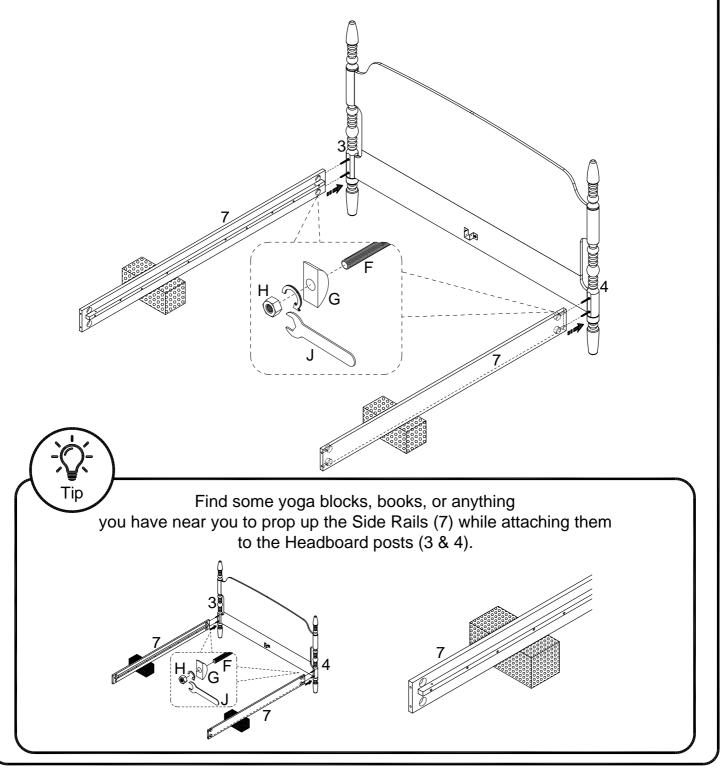


Attach the Bottom Rail (8) to the Side Rails (7) the same way with the Half Moon Washers (G) and Nuts (H).

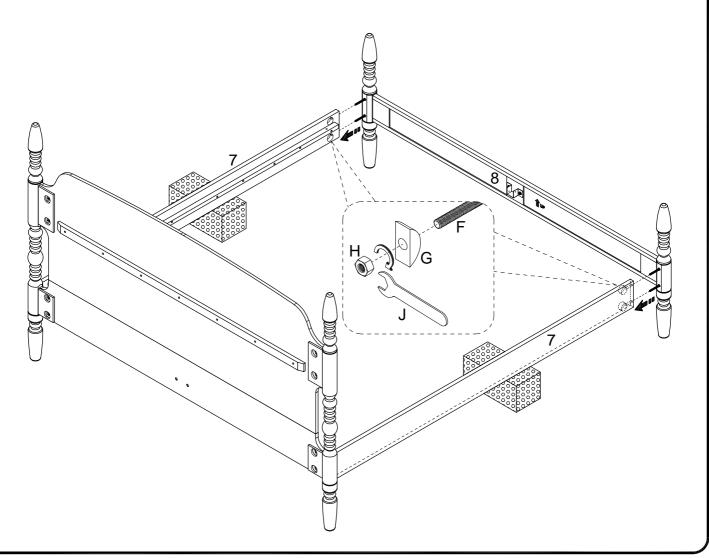


Twist off the caps on the Middle Support Legs (10) and then twist the legs into the Center Support Rail (9).

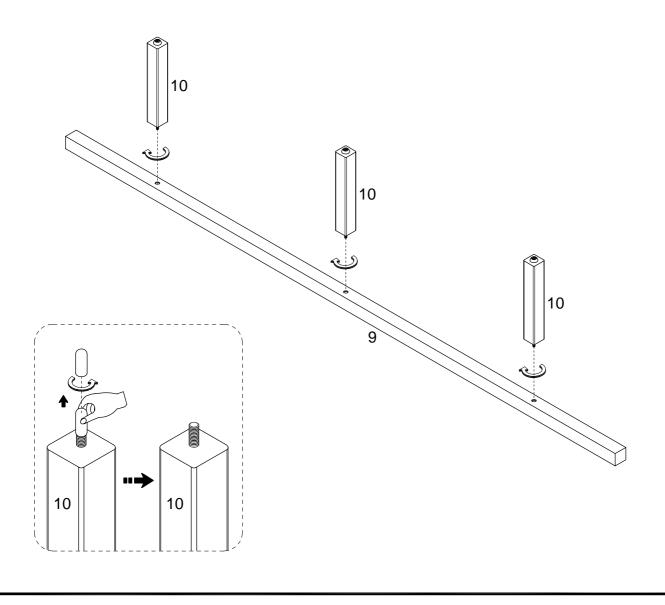


Place the Center Support Rail (9) in the U brackets and secure through the sides with screws (L).

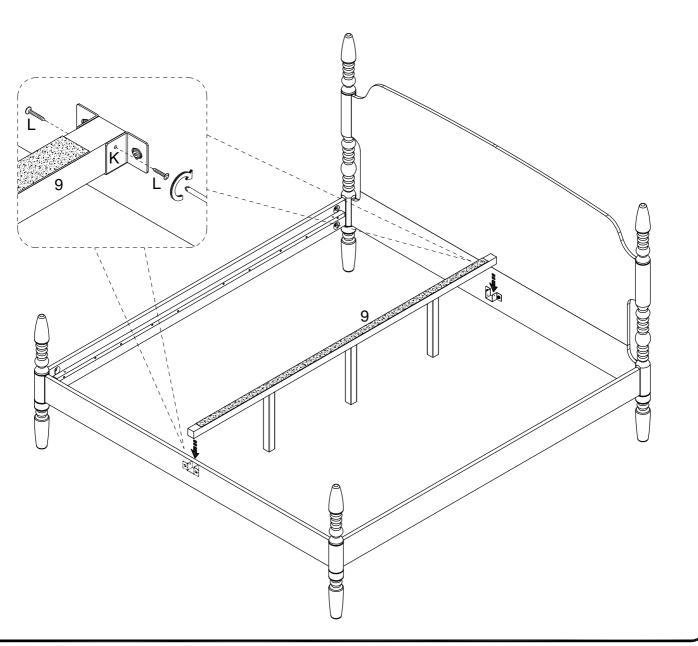


If needed, adjust the levelers on the Middle Support Legs (10).

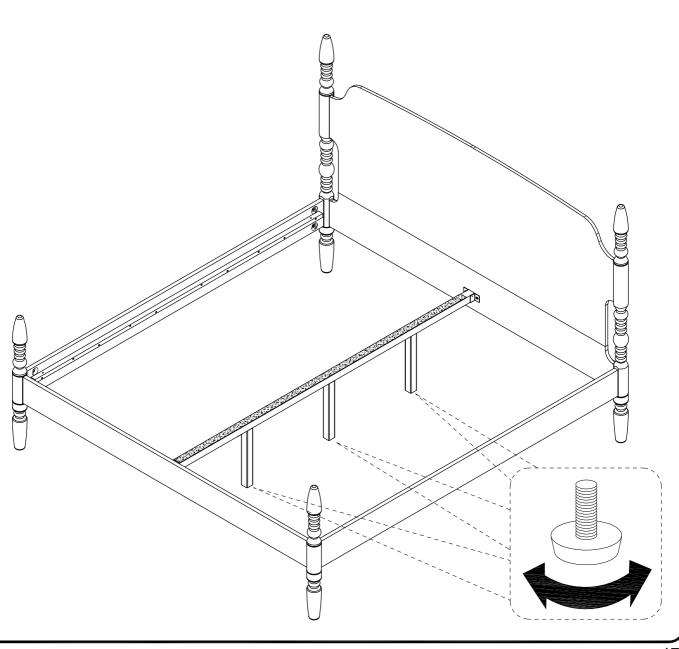


Place the dowels (B) into the holes on each end of the Side Rails (7), this will help when aligning the slats.

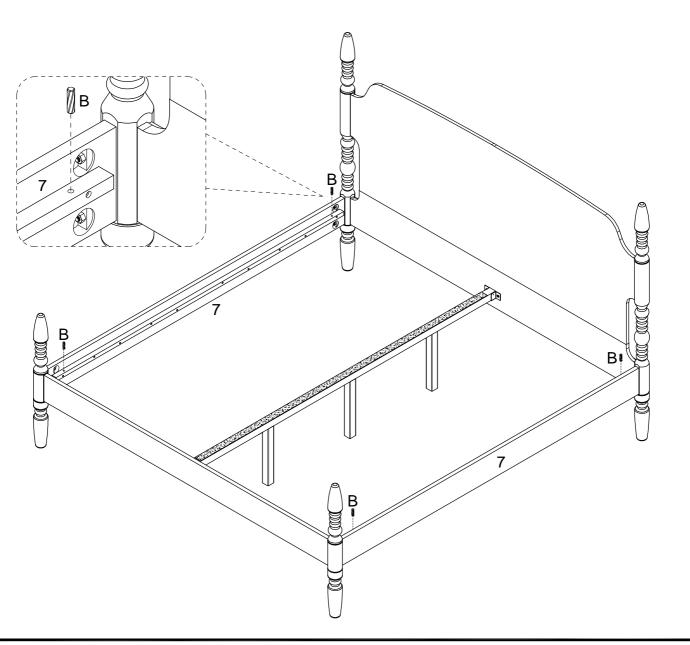

Last Step! Roll out the Slats (11) and secure with screws (M).

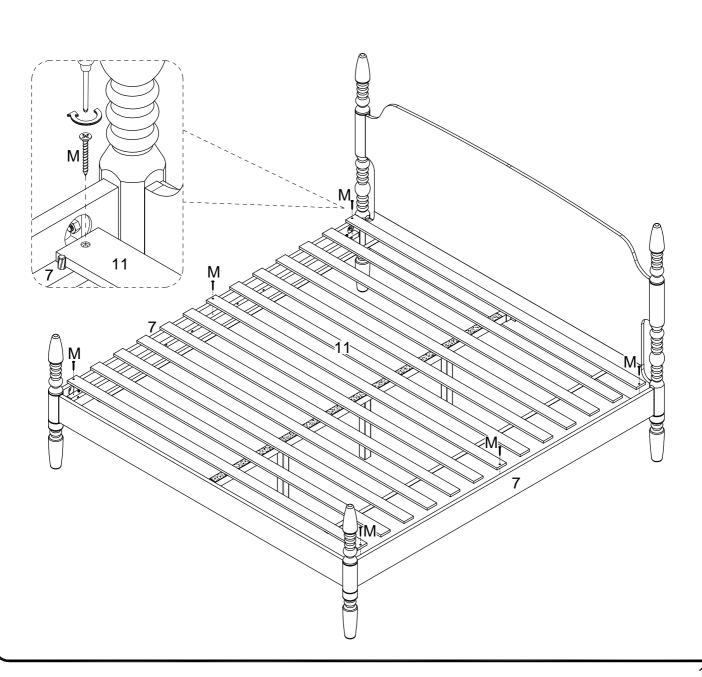

#### **Final Assembly**

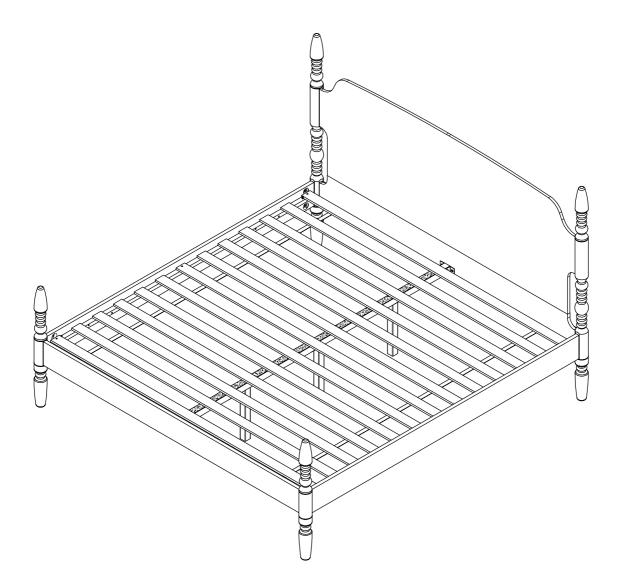

#### Congratulations on your new piece of furniture!

We would love to hear about it and see it.

Please leave us a review or post a picture with

#mywalkeredisonhome

# Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at 801-433-3008

Email us at service@walkeredison.com

Visit our Customer Service website at walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

