


IMPORTANT SAFETY INSTRUCTIONS AND INSTALLATION GUIDE

Color-Changing Smart LED Flood Lights

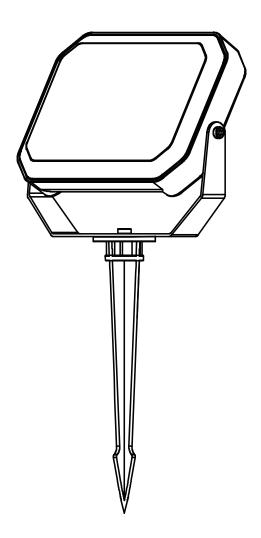

READ BEFORE USAGE SAVE THESE INSTRUCTIONS

Questions, problems, missing parts? Before returning to the store, call Feit Electric Customer Service 8 a.m. - 5 p.m., PST, Monday - Friday

1-866-326-BULB (2852)

FEIT.COM

REV001

Table of Contents

Safety Information	2
Maintenance and Care	2
FCC Statement	2
Warranty	
Pre-Installation	3
Mounting Installation	4
Remote & Power Supply Instructions	5
Battery & Troubleshooting	5
Smart Setup Instruction	6

Important Safety Information

READ ALL INSTRUCTIONS

All safety and operating instructions in this manual must be followed before using this product.

These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with this install guide, current electrical codes and/or the current National Electric Code (NEC).

Ground Fault Circuit Interrupter (GFCI) protection is to be provided on the circuit(s) or for the wet location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.

Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW,SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOOW, SJW, SJOOW, SJOOW, SJTW, SJTOW, or SJTOOW.

To disconnect, turn off the unit, then remove the plug from the outlet. Do not turn off by pulling on the cord.

To reduce the risk of fire, keep away from combustible materials while in operation.

To reduce the risk of injury, close supervision is necessary when this product is used near children.

Operating Temperature: -20°C to 40°C.

Product Specifications:

120 VAC, 60 Hz, 24 Watts Dimmable with APP or RF Remote Suitable for Wet Locations 120 Beam Angle IP65 Water Resistant

FCC Statement

Supplier's Declaration of Conformity: 47 CFR § 2.1077 Compliance Information Responsible Party: Feit Electric Company 4901 Gregg Road, Pico Rivera, CA 90660. USA 562-463-2852 Unique Identifier: FLD/RGBW/AG/4

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Recrient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the

dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20cm between

Limited Warranty

the radiator and your body.

This product is warrantied to be free from defects in workmanship and materials for up to 1 year from date of purchase. If the product fails within the warranty period, please visit feit.com/help for instructions on replacement/refund or call 866.326.BULB. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.



WARNING: RISK OF SHOCK. When using outdoor use portable luminaires, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.



WARNING: Do not use an extension cord near water or in areas where water may accumulate. Keep away from pools or spas. Keep plugs dry.



WARNING: Eye damage can be caused by high light intensity, Never look directly into the light source.

BATTERY WARNING:

Risk of fire, explosion, and burns. Do not disassemble, crush, heat above 100° C / 212° For incinerate. REPLACE ONLY WITH ONE CR2025 BATTERY. KEEP AWAY FROM CHILDREN. DO NOT DISASSEMBLE AND DO NOT DISPOSE OF IN FIRE.

CAUTION:

Dispose of used battery promptly according to local recycling or waste regulations. Clean battery contacts and also device contacts prior to installing battery. Ensure the battery is installed correctly with regard to polarity (+ and –). Remove battery from remote when not being used for an extended period of time. Remove used battery promptly. The LEDs in this flood light are not replaceable.

WARNING:

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN.

Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.

If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.

Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.

Dispose of used button battery immediately and safely. Flat battery can still be dangerous.


The performance specifications (life hours) printed on this manual should only be considered an approximation of expected performance.

Pre-Installation

TOOLS REQUIRED (NOT INCLUDED)




HARDWARE INCLUDED

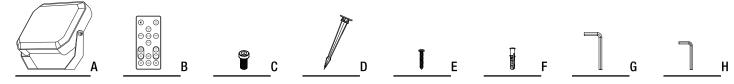

Part	Description	Quantity
Α	Color-Changing Smart LED Flood Light	4
В	Remote Control	1
С	Mounting Screw (M5 x10mm)	4
D	Mounting Stake	4
Е	Socket Screws	8
F	Wall Anchors	8
G	5/32 in. Hex Key	1
Н	7/64 in. Hex key	1




Product Dimensions

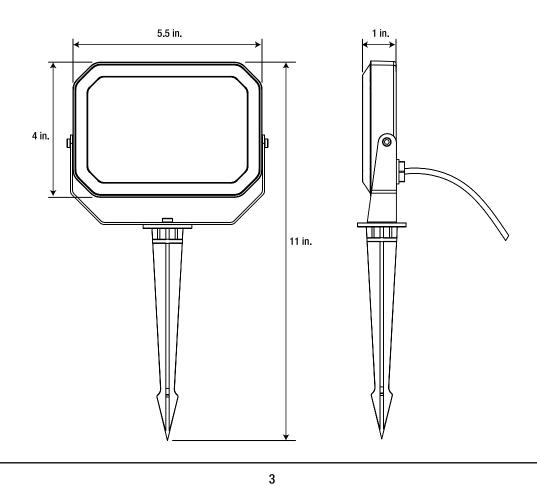

Mounting with Ground Stake

1 Insert Ground Stake

Identify your desired mounting location. Push the mounting stake (D) into the ground. Using a rubber mallet (not included), insert the mounting stake (D) deep enough into the ground to ensure your fully assembled color-changing smart LED flood light (A) is stable and will not tip over.

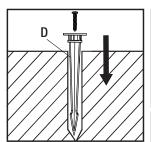


NOTE: When installing the product in hard or dry soil, water the soil several hours beforehand to make the installation easier. You can also break up the ground with a stake or a fork. Don't force the stake into the ground as excess force can break or bend the stake.




NOTE: Do not push on the color-changing smart LED flood light (A) or you may damage the unit.

2 Attach the Smart LED Flood Light to Mounting Stake


Using the 5/32 hex key (G), remove the mounting screw from the mounting stake (D) (ensure that the tightening nut in the ground stake [D] does not fall out). Point color-changing smart LED flood light (A) downward and mount it on the stake (D). Insert the mounting screw and tighten it with the 5/32 hex key (G).

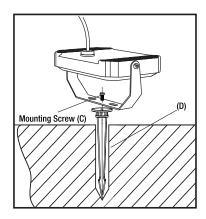

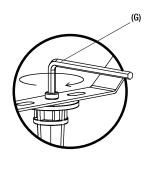

3 Adjust the Smart LED Flood Light Angle


Point the smart LED flood light (A) in your desired direction and tighten the pivoting bolt using the 7/64 hex key (H).

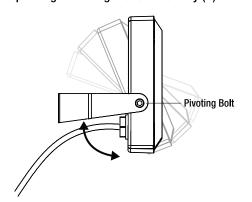

Wall Mounting Installation


1 Installing the Screws

Using a pencil (not included), mark your desired mounting location. Make another mark 2 inches away. Use a power drill (not included) to pierce two holes in the marked locations.

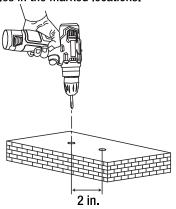


2 Installing the Anchors

Install the two wall anchors (F) into the holes. If necessary, use a rubber mallet (not included) to insert the wall anchors (F) securely.

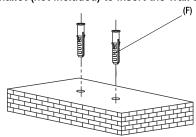


3 Installing the Smart LED Flood Light

Point the light downward and insert the two socket screws (E) through the left and right slots of the color-changing smart LED light (A). Tighten the socket using the 5/32 hex key (G).

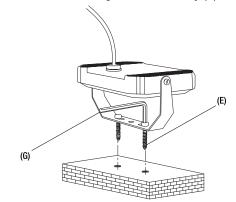

4 Adjust the Smart LED Flood Light Angle

Point the smart LED flood light (A) in your desired direction and tighten the pivoting bolt using the 7/64 hex key (H).

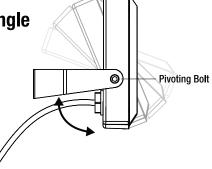

RF Remote Control


Play and \bigcirc Press to pause effect Turn On and Off MODE + Next effect **Decrease Speed** AUTO Increase Speed Automatically cycle through different effects Previous effect White Increase Adjust the color **Brightness** temperature on W Decrease White setting Brightness Red Blue Green

Pair: Unplug and plug in the power supply, within 20 seconds, hold the power button on the remote for 5 seconds. The light will flash rapidly 3 times to indicate successful pairing.


Unpair: Unplug and plug in the power supply, within 20 seconds, hold the play and pause button on the remote for 5 seconds. The light will flash slowly 5 times to indicate successful unpairing.

Replacing Battery

Always purchase the correct size and grade of battery most suitable for the intended use. Clean the battery contacts and also those of the device prior to battery installation. Ensure the battery is installed correctly with regard to polarity (+ and -).

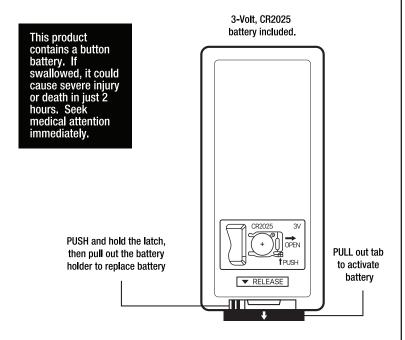

Power Supply Control Box

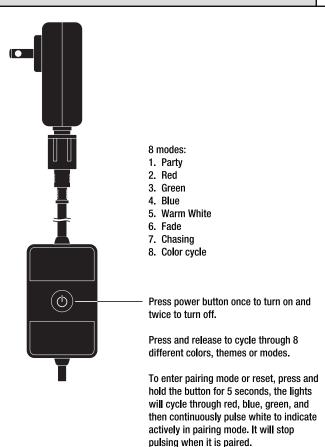

Troubleshooting Tips - Wi-Fi

If you are having difficulty connecting:

Make sure the Wi-Fi network is a 2.4 GHz network. Smart LED flood lights will not connect to a 5 GHz network.

Test your Wi-Fi network with other devices such as your phone to make sure it is operating properly.

The Wi-Fi connection may not have good coverage during set up. Try moving the smart LED flood lights closer to your Wi-Fi router.

Your Wi-Fi network password is case sensitive, make sure you are entering correctly. Devices plugged into your smart LED flood lights must be ON in order to be controlled via the mobile app.

Please also check the App User Guide for more information.

For additional remote controls please contact Feit Electric at 1-866-326-BULB (2852).

Getting Started:

1 Download the Feit Electric App on Your Smart Device






2 Install Your Smart LED Flood Lights

See "Installation" Section on page 4.

3 Plug in Your Smart LED Flood Lights

Plug the smart LED flood lights into an outdoor rated GFCI receptacle.

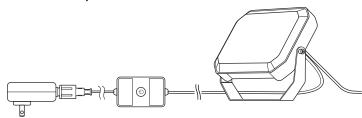

You are now ready to use the smart LED flood lights via RF Remote. See "RF Remote Control" section for more details.

To activate smart features proceed to steps 4 & 5.

Need Help?

Thank you for your purchase
Questions, comments or feedback?
We'd love to hear from you.
Visit feit.com/help for support or connect with us:








4 Pair Your Device

Press and hold the control button for 5 seconds when lights are on to enter pairing mode. Lights will blink.

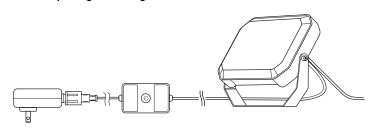


5 Launch the Feit Electric App to Complete the Set Up

Tap **Add Device** or the + sign, then select **Chasing Floodlight** and confirm. You will be prompted to enter your Wi-Fi network and password.





(Optional) Connect to Google Assistant or Alexa Using the In-App Guide

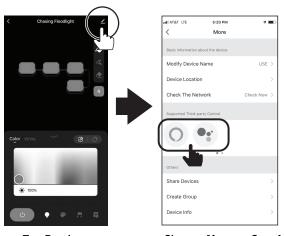

Tap Pen icon

Choose Alexa or Google