

KD-UFS42

4K/18G Universal Format Switcher with 4 Inputs (2xHDMI, DP, VGA), HDMI and HDBaseT Mirrored Outputs with Rx Included, Audio De-Embed, CEC Display Control, Auto Switching. KD-App and KDPlug & Present™ Ready



KEY DIGITAL APP READY KDPLUG & PRESENT

4K @ 60Hz 18G CEC MANAGER™



Key digital®

The Experts in Digital Video Technology and Solutions™

Default static IP address:
192.168.1.239, port 23

Table of Contents

About KD-UFS42	3
Quick Setup Guide	5
Connect	5
Configure	6
Control	9
Application Examples	11
Mounting Options	13
Connections, Buttons, and LEDs	14
System Integration with KD-CamUSB, KD-Amp220, KD-App	22
TCP/IP and RS-232 Commands	24
Specifications	29
Warranty Information	29
Product Warnings & Safety Instructions	29



Default IP Address: 192.168.1.239

Operation Manual

Please visit www.keydigital.com for the latest product documentation, firmware, control drivers and software downloads. Product features and specifications are subject to change without notice

Always follow the instructions provided in this Operating Manual.

About KD-UFS42

Key Digital® KD-UFS42 is a 4K/18G KD-App Ready Presentation Switcher kit with CEC Manager™, auto switching, and audio de-embedding creating a user-friendly, simplified presentation system. KD-UFS42 features two HDMI, one Display Port, and one VGA + L/R analog audio input. Mirrored HDMI and HDBaseT outputs enable audience + presenter views and the HDBaseT output marries in with the included KD-X40MRx for integrating monitors or projectors up to 40m / 131ft away when the selected source is outputting 4K/UHD (up to 70m / 230ft at 1080p). Designed for professional audio video installations in huddle spaces, conference rooms, classrooms, lecture halls, auditoriums, and more, KD-UFS42 enables the connected video sources to be displayed on up to two connected displays while analog (balanced/unbalanced) and digital (PCM) audio de-embed ports feed audio of the selected source into an amplifier, DSP, or sound bar. Integrating KD-UFS42 with KD-AMP220 and KD-CAMUSB will enable an app-ready all-in-one solution for control of video switching, sound and speech enforcement, and PTZ camera control. Key Digital CEC Manager™ enables basic controls of the connected displays for a simplistic all-in-one integration system. KD-UFS42 presentation switcher supports all SD, HD, VESA and Ultra HD/4K video standards with HDR header information included in a variety of 4K EDID handshakes. In addition to IR, RS-232, and TCP/IP control, KD-UFS42 can also be controlled via trigger voltage and features status monitoring LEDs.

Key Features

- **Presentation Switcher Kit:** Includes KD-UFS42 and KD-X40MRx.
- **Presentation Switching:** 2 HDMI, 1 Display Port, and 1 VGA + L/R audio source selection by push button, IP, RS-232, IR, auto switching, or trigger control.
- **Ultra HD/4K:** Supports up to 4096x2160 or 3840x2160 24/25/30/60hz at 4:4:4 (signals up to 18Gbps bandwidth)
- **Auto-Switching:** Automatic selection of newly detected source and switching from newly disconnected source when enabled
- **CEC Manager™:** Power, volume, and muting controls of the connected display/projector without any additional control wiring. Selection of desired CEC command recipient.
- **KD-App Ready:** Network scan & detect populates pre-built GUI including connected display/projector controls via CEC Manager™
- **Ease of Integration:** Complete configuration using Key Digital Management Software™ Pro
- **Audio De-embedding:** Audio of the selected source is de-embedded at the unit's analog L/R balanced/unbalanced and PCM digital audio connectors.
- **KD-AMP220 Control Mode:** Command forward to KD-Amp220 for an all-in-one user-friendly control UI of video switching, audio and speech enforcement

- **PTZ USB Camera Integration:** Add KD-CAMUSB for full PTZ control via KD-App. Use with KD-XUSB2 extender for USB signal extension over CAT5e/6.
- **HDCP Licensing:** Fully licensed and compatible with HDCP 2.2
- **HDR10+ and Dolby Vision:** More life-like images through a greater range of luminance levels
- **Power Over HDBaseT:** Rx unit (included) and wall plate Tx unit (sold separately) powered by KD-UFS42
- **Installation:** Half-rack width with rack and under-table mounting ears included
- **Signal Extension:** For resolution and cable quality
 - 4K/UHD (18G): Up to 40m / 131ft
 - 1080p: Up to 70m / 230ft
- **Deep Color Support:** Up to UHD/4K 30Hz 4:4:4/12 bits or 60Hz 4:2:2/12 bit
- **Full Buffer System™:** Manages TMDS re-clocking / signal re-generation, HDCP authentication to source & display, EDID Control handshake, and Hot Plug Detection Voltage
- **EDID Management:** Internal library with 15 internal EDID handshakes including 4K with HDR in addition to native EDID data copied from the Rx display/device
- **RS-232:** Bi-Directional control to/from Tx and Rx/Presentation Switch unit
- **Unit Control Mode:** Provides TCP/IP and RS-232 control and status of/from Tx unit
- **EDID Management:** Internal library with 15 internal EDID handshakes including 4K with HDR in addition to native EDID data copied from the output/display 1
- **Lossless Compressed Digital Audio:** Dolby® TrueHD, Dolby® Digital Plus, DTS-HD Master Audio™, and Dolby® Atmos
- **Control System Support:** Key Digital® App ready. Compass Control® Pro ready. Fully controllable by all IR, RS-232, and TCP/IP supported control systems via open API.

Accessories

- Qty 1: Power supply, 48V / 1.04A, 50W, Model KD-PS50W48VC
- Qty 1: Remote control and battery set (model KD-RMPS)
- Qty 2: Mounting bracket (L-Bracket)
- Qty 4: L-Bracket mounting screw
- Qty 1: Half-rack ear mount
- Qty 1: Short rack ear
- Qty 4: Rack Ear Screw
- Qty 1: RX Extender (model KD-X40MRx)
- Qty 2: Mounting bracket for KD-X40MRx (L-Bracket)
- Qty 4: L-Bracket mounting screw for KD-X40MRx
- Qty 1: 6-pin blue color terminal block plug
- Qty 1: 6-pin green color terminal block plug
- Qty 2: 3-pin green color terminal block plug
- Qty 1: 6ft Micro USB to USB A data cable (USB 2.0)
- Qty 1: IR Emitter (3.5mm mono)
- Qty 1: IR Sensor (3.5mm stereo)


Quick Setup Guide

Begin with the KD-UFS42 and KD-X40MRx, all source, display devices, audio system, and any other connected peripherals powered off.

Connect

1. **Connect video sources** into the HDMI, Display Port, and VGA input ports of KD-UFS42
2. **Connect video displays/projectors** to the HDMI output ports of KD-UFS42 and/or KD-X40MRX
3. **Connect CAT5e/6 cabling** from KD-UFS42's HDBaseT outputs to KD-X40MRX HDBaseT input
4. **Connect audio** to send audio of the select source into KD-Amp220 use KD-UFS42's analog audio de-embed port. For other audio systems use the digital or analog outputs ports located on KD-UFS42 or KD-X40MRx.
5. **(Optional) Connect RS-232 wiring for Integrated System.** If utilizing KD-AMP220 or KD-CAMUSB integration control mode, connect RS-232 wiring from KD-UFS42 Unit Control TxD and Ground pins into KD-AMP220 and KD-CAMUSB RxD and Ground. Using a stripped mono or stereo audio cable is recommended, but other cables will work as well. See below diagram
6. **Connect Control System.** For KD-App control and/or IP control from a control system or PC, connect TCP/IP port to network. RS-232 and IR control may also be utilized, but IP control is required for KD-CamUSB and KD-Amp220 integrated systems.
7. **(Optional) Connect display/projector's IR/RS-232** from control system into pass-thru ports of KD-UFS42 and IR/RS-232 ports of the KD-X40MRX.
 - a. Alternatively, KD-UFS42 CEC Manager features can send power on and off commands via CEC on the HDMI connection.
8. **Connect power.** Screw-in power supply to the KD-UFS42 unit, and then connect power to outlets.
9. Power on sources, displays, audio systems, connected computers, USB devices and hosts to use system.


Integrated Systems Wiring: KD-UFS42 with KD-Amp220 and KD-CamUSB

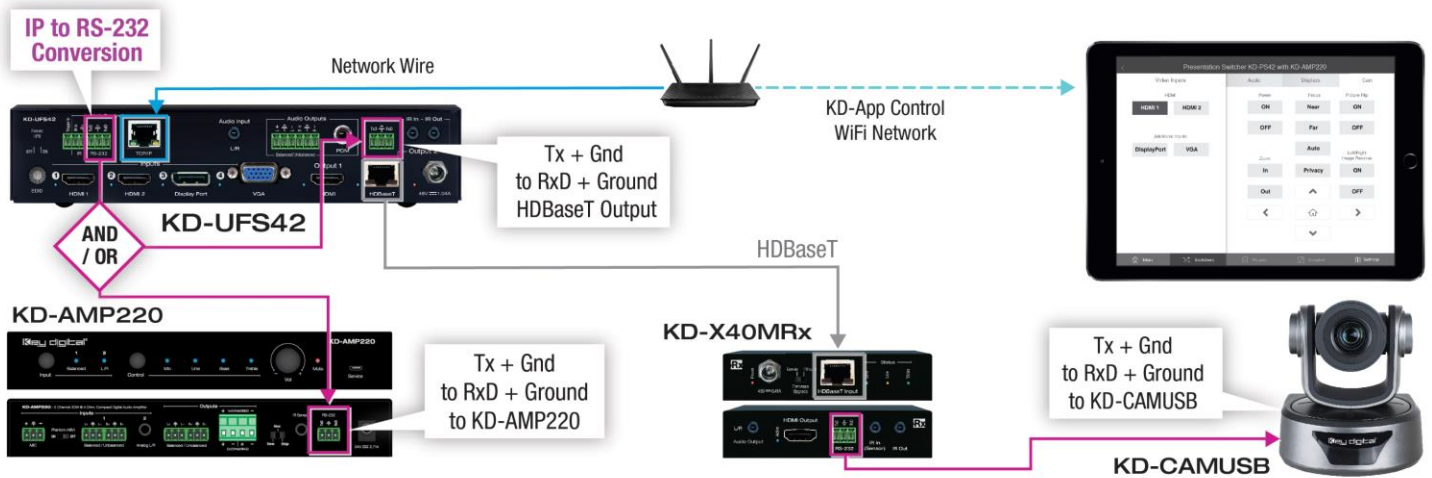


Configure

Configure KD-UFS42 with Key Digital Management Software Pro (KDMS Pro). Download [HERE](#)

1. Connect to KD-UFS42 from your PC using the USB micro port on the face of the unit
2. Open the KDMS Pro software and perform a USB scan (fig. 1a). Choose “NO” and Start Scan when the USB Device Scan prompt appears (fig. 1b)
3. Choose the detected device from the Devices window (fig. 2a)
4. Set the desired Device Name in the KD-UFS42 Information window (fig. 2b)
5. In the Network Settings section of the Properties window, enter the desired IP settings (fig. 2c)
 - a. IP Address (default is 192.168.1.239)
 - b. Subnet Mask (default is 255.255.255.0)
 - c. Gateway (default is 192.168.1.1)
 - d. Port (default is 23)
 - e. Note: If using KD-App, please do not change the port number.
6. Save (fig. 2d)

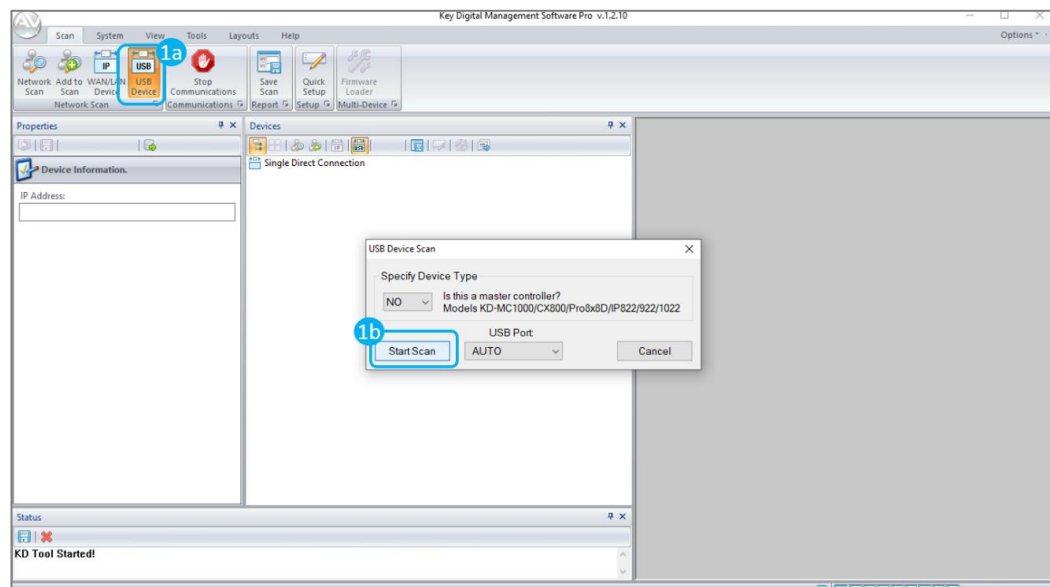


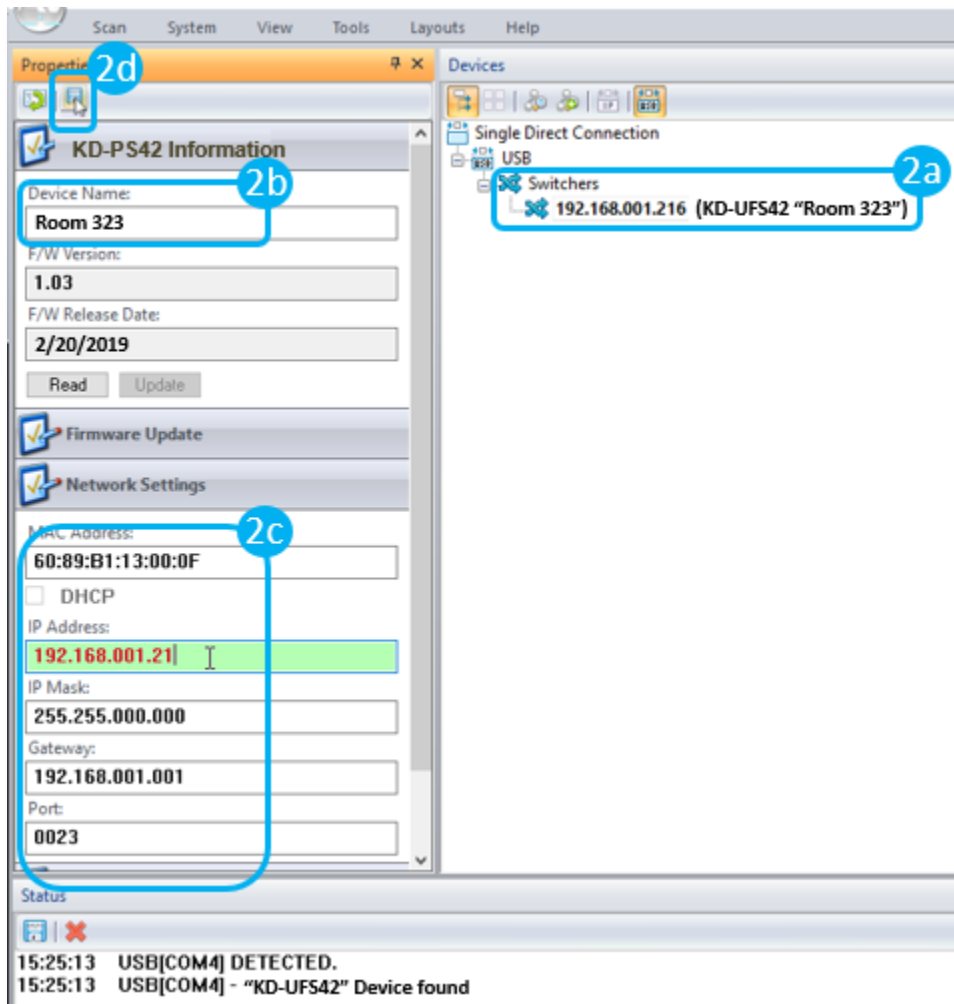


7. Set the EDID handshaking to position “A” for 4K video with 2ch audio. Choose setting “4” for 1080p video with 2ch audio.
8. Refer to the Connections, Buttons, and LEDs section for more information on the remaining control rotaries, slide switches, etc. Full access to all settings/commands is achieved via terminal session using Tera Term or PuTTY software.

Additional configuration steps for control by KD-App and KDMS Pro


9. Set the desired Input/Output names by entering the Input/Output Settings section of the properties window, and selecting the Change Input/Output Name button (fig. 3a), selecting the desired input/output and entering the name (fig. 3b)

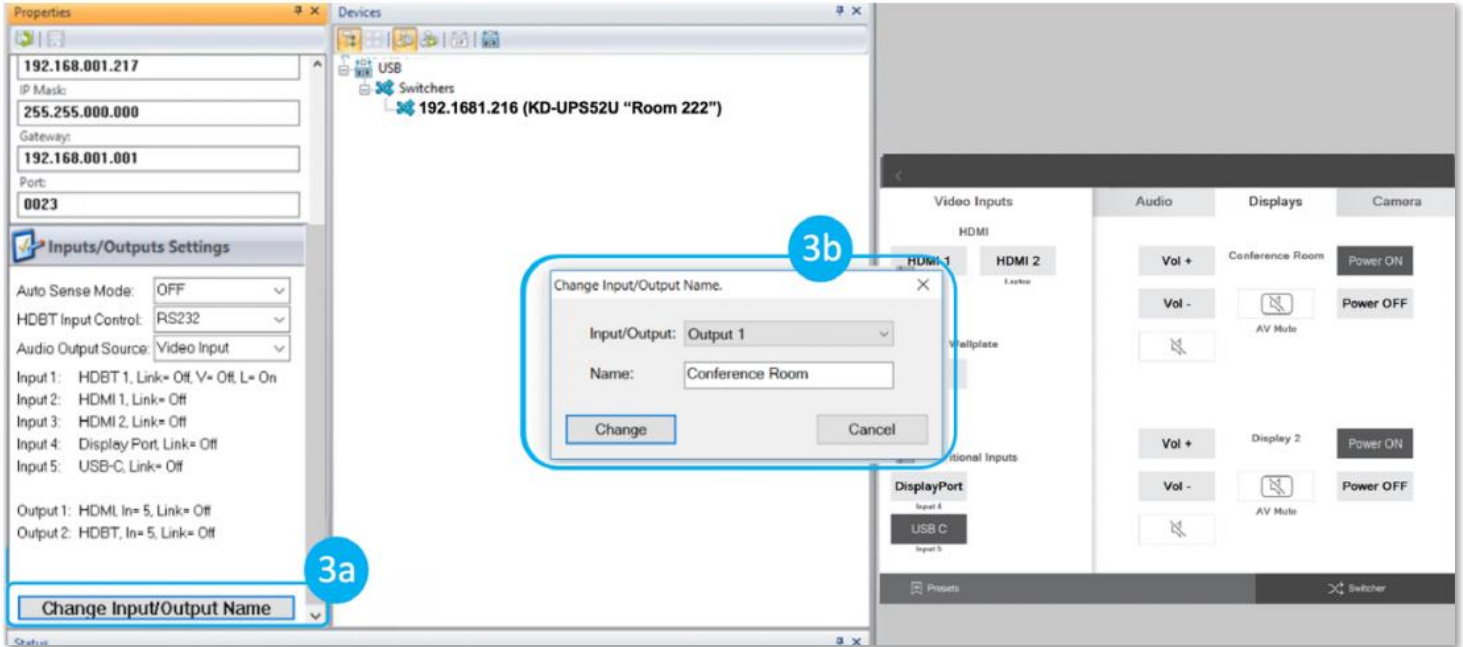

10. If utilizing KD-CamUSB integration control mode, choose the quantity of cameras needed to control (fig 4a). Press Apply (fig 4b)
 - a. Note: Controlling more than two cameras will require the use of active third-party RS-232 signal distribution. Maximum of seven cameras is supported.

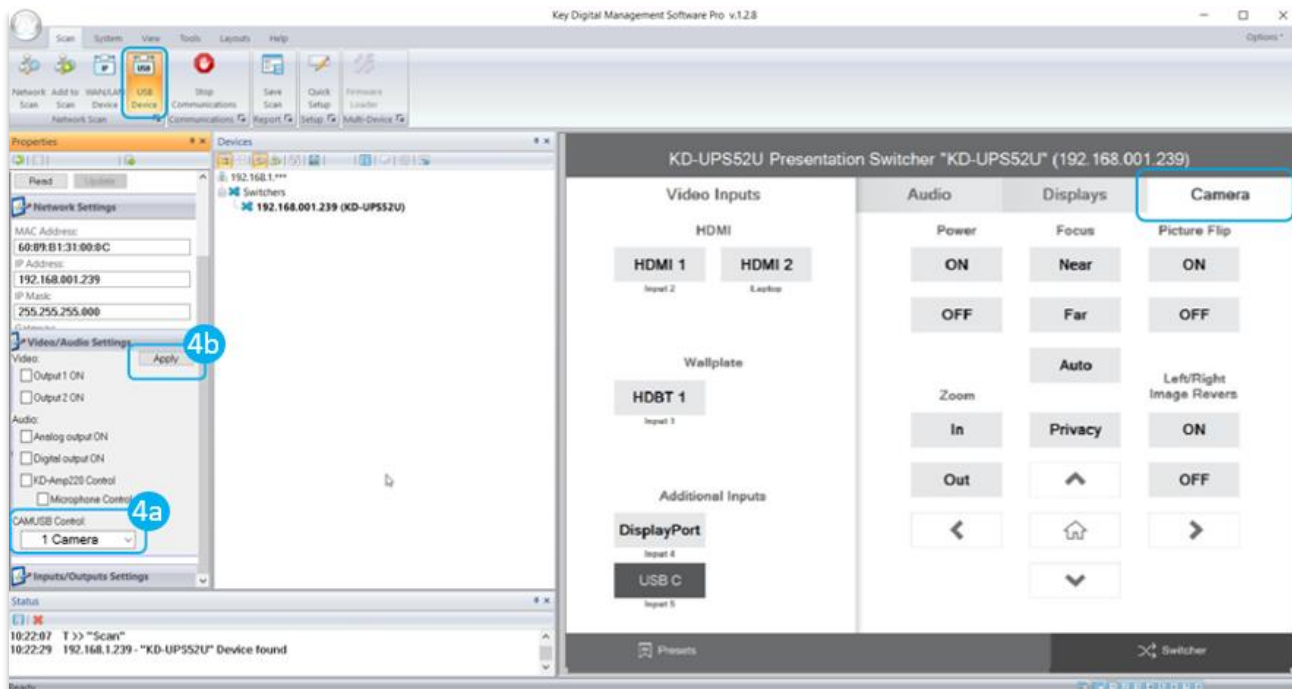

11. If utilizing KD-AMP220 integration control mode, choose the KD-AMP220 Control selection box (fig. 5a) in the Audio/Video properties section. To control the mix level of KD-AMP220's microphone input, choose the selection box for Microphone Control (fig. 5b).

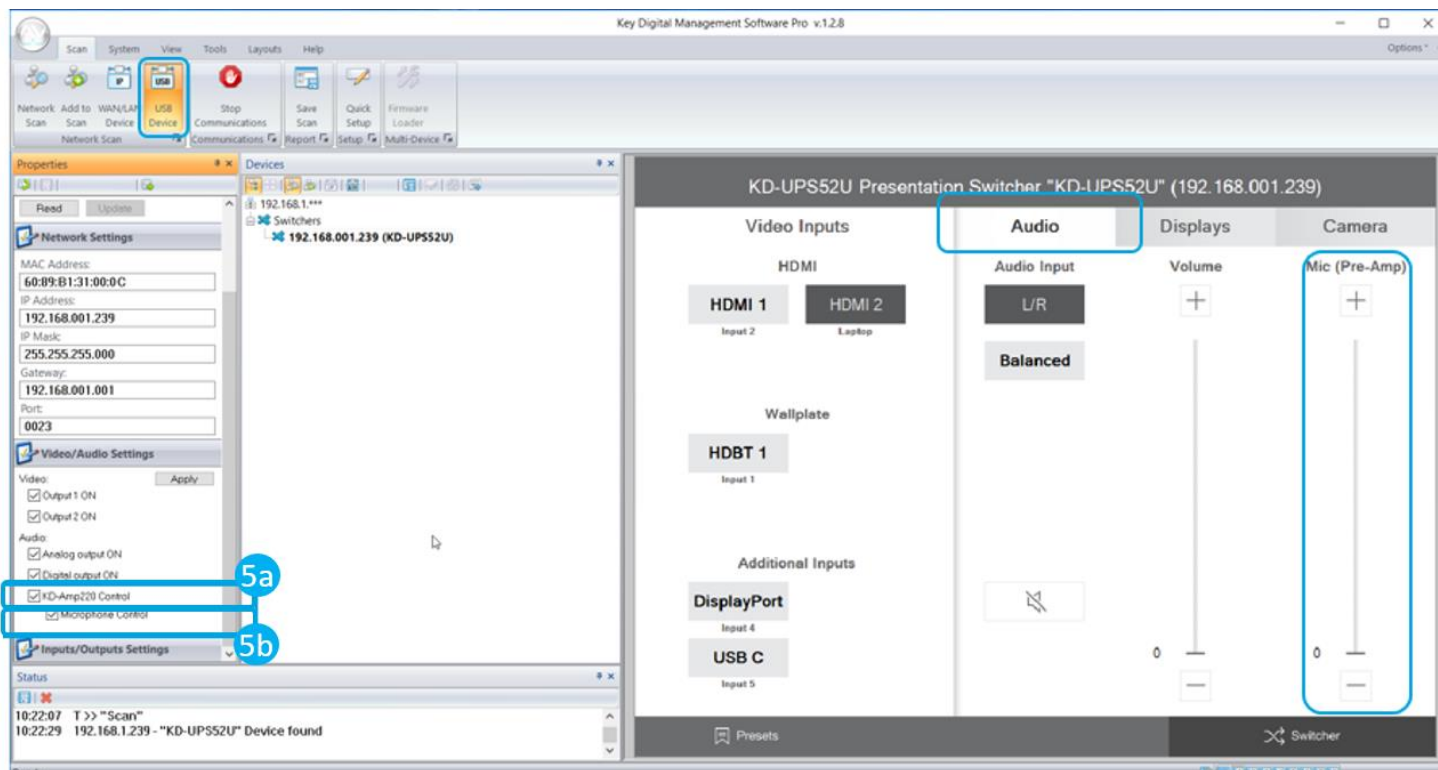


12. Your unit is now ready to control from the KDMS™ Control Panel, KD-App, or by professional control system.

Control

Option 1: Control via Remote Control

1. Output 1 display/projector control via CEC
2. Output 2 display/projector control via CEC
3. Input selection of KD-UFS42 connected sources
4. KD-CamUSB (sold separately) IR control

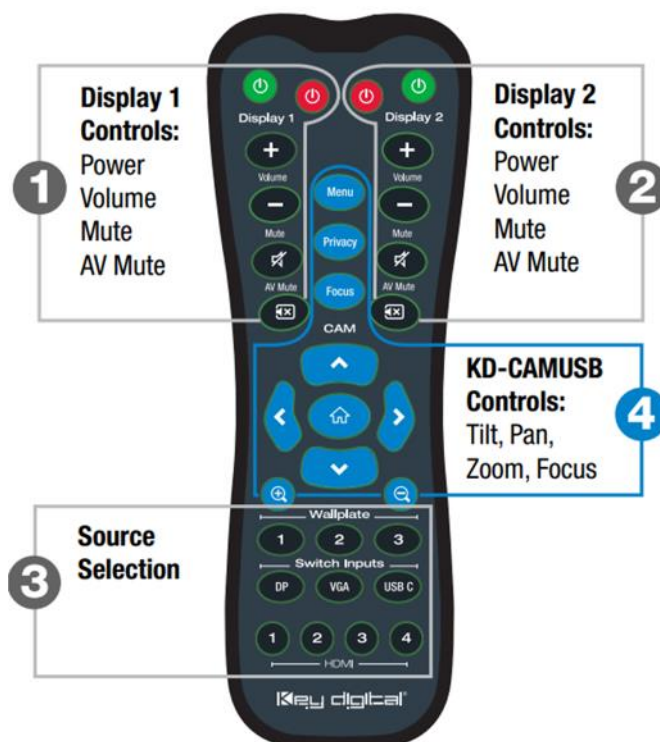

Option 2: Control via KD-App, KDMS Pro™

KD-UFS42 is controllable by Key Digital's user-friendly [iOS App](#) (downloadable in the App Store) or Key Digital® Management Software™ ([downloadable here](#)).

1. Connect and Configure your KD-UFS42 as described in this Connect & Configure sections
2. Download and open KD-App and/or KDMS™
3. Ensure the iOS device and/or PC computer are on the same network with KD-UFS42
4. Perform a network scan in the KD-App/KDMS™
5. Select and control the selected KD-UFS42




Option 3: Control via professional control system

KD-UFS42 allows control over serial interface for bi-directional communication.

- **For RS-232 control** use pins 4, 5, and 6 of the Unit Control port
- **For TCP/IP control** the default static IP address is 192.168.1.239, with port 23

Default static IP address:
192.168.1.239, port 23

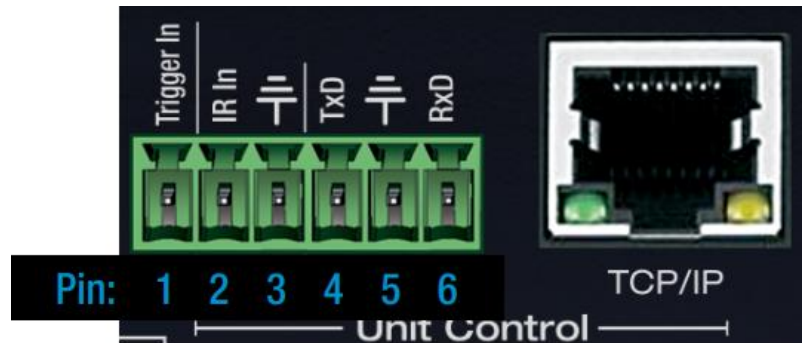


- For the past 10 years, most Key Digital matrix switches have supported a standard audio + video switching command. KD-UFS42 is also controllable by this command, so if you have previously integrated Key Digital matrixes by third-party control systems you may have success using the same driver/module.
 - a. **Switching Video + Audio together** (two commands supported)
 - i. SPO01Slyy yy = input number (01-05)
 - ii. SPOSlyy yy = input number (01-05)
 - b. **Display CEC On / Off**
 - i. SPOxxTVy xx = output number (01-02), y = ON or OFF
- See the TCP/IP and RS-232 Commands section for full command set.



Test for proper operation of the unit and cables in your system before permanently securing the unit for final installation. Ensure that you leave enough ventilation space to provide sufficient airflow and cooling

Application Examples


Complete Key Digital Presentation Solution

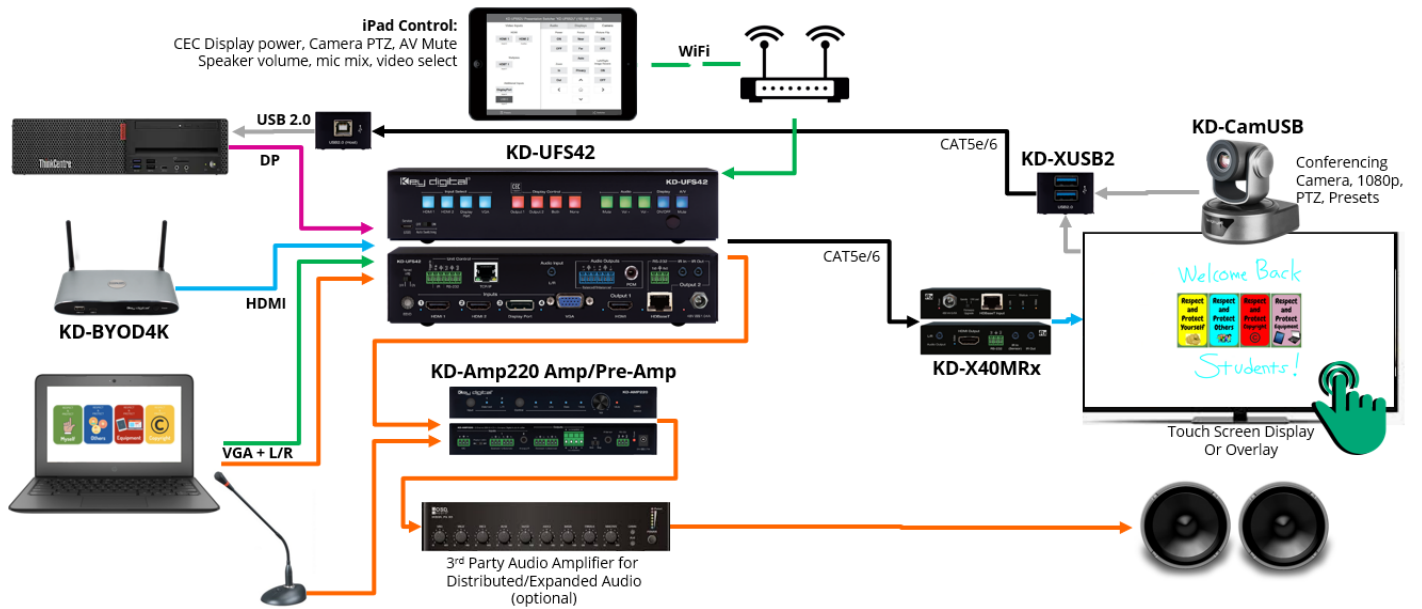


CEC Controlled Presentation Space



Simple Conference Room / Hybrid Classroom

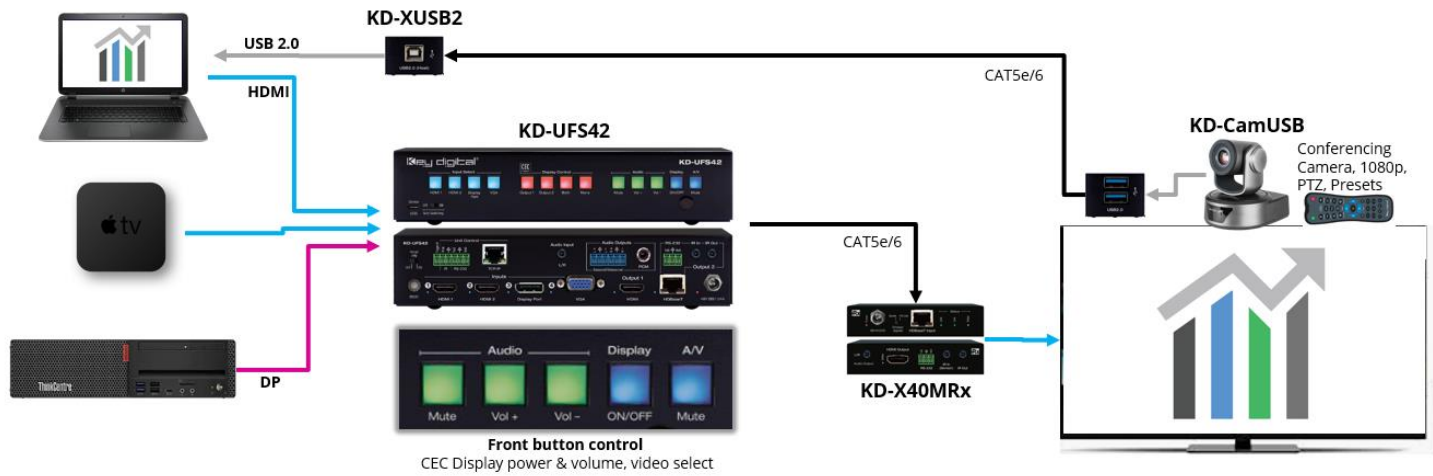

Lecture Hall with Wired and Wireless Presentation

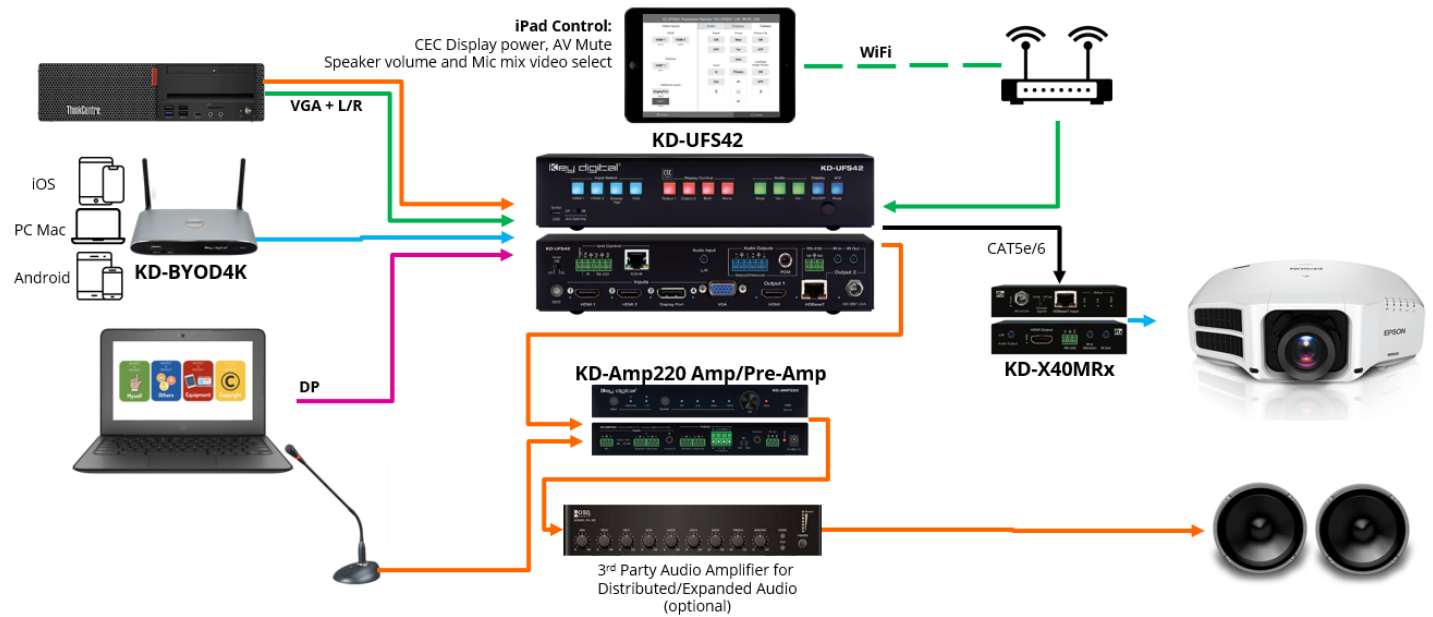


Mounting Options

KD-UFS42 includes hardware for multiple mounting options.

- For mounting in a standard-width rack, use the included half-rack blank and short rack ear



- For mounting under table or on wall, use the included L brackets

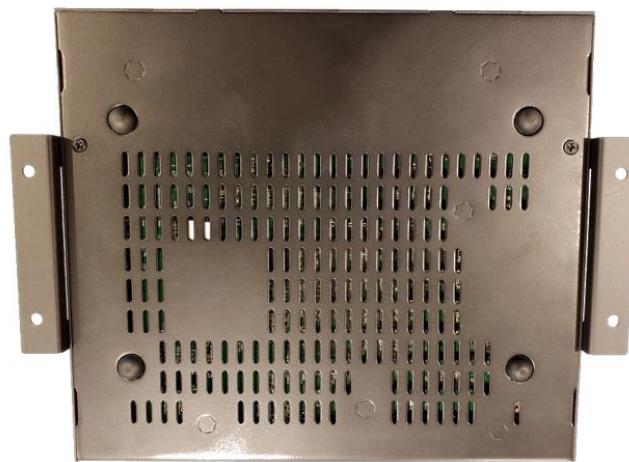

- For mounting two units side by side in a standard-width rack, use KD-BKTHF (sold separately)



Connections, Buttons, and LEDs

Inputs and EDID Handshaking Rotary



HDMI (Input 1 and 2): Using an HDMI cable, connect your HDMI sources.

- Supports up to UHD/4K @ 50/60 fps [4:4:4], 18Gbps
- Supports HDR10 and Dolby Vision
 - Dolby Vision only available through HDMI inputs & outputs, not HDBaseT.
- Compliant with HDCP 2.2 and previous
- Supports lossless compressed audio formats including Dolby® TrueHD, Dolby® Digital Plus, Dolby Atmos®, and DTS-HD Master Audio™
- Does not support CEC pass through from connected Rx unit / presentation switch
- Link light to the left of each port illuminates when there is an active HDMI signal passing through.

Display Port (Input 3): Using a Display Port cable, connect your source.

- Supports up to UHD/4K @ 50/60 fps [4:4:4], 18Gbps
- Supports HDR
- Supports Display Port version 1.3 and previous
- Compliant with HDCP 2.2 and previous

VGA (Input 4): Using a VGA (DB15) cable and 3.5mm stereo cable, connect your source.

- Supported resolutions: 640x480@60/75, 800x600@56/60/75, 1024x768@60/75, 1280x720@60, 1280x768@60/75, 1366x768@60/75, 1280x1024@60/75, 1440x900@60/75, 1600x900@60, 1600x1200@60, 1920x1080@60, 1920x1200@60s
- Video Scaler built-in for up-scale & down-scale to desired output resolution
- Default video output is 1920x1080p / 60fps

L/R Audio: Using a 3.5mm stereo cable, connect your audio source to be associated with the VGA video input.


- Embedded with VGA Input
- 2 VRMS line audio
- Sampling Frequency: 48kHz, Data Length: 24Bits

Supported standard 4K video formats:

	Resolution	Bandwidth
1	4K@24/25/30 [4:4:4] 8bit	< 10.2Gbps
2	4K@24/25/30 [4:2:2] 8/10/12bit	< 10.2Gbps
3	4K@50/60 [4:2:0] 8bit	< 10.2Gbps
4	4K@24/25/30 [4:4:4] 10/12bit	< 18Gbps
5	4K@50/60 [4:2:2] 8/10/12bit	< 18Gbps
6	4K@50/60 [4:2:0] 10/12bit	< 18Gbps
7	4K@50/60 [4:4:4] 8bit	< 18Gbps

EDID Handshaking Rotary

- EDID authentication is provided from the unit to the connected inputs/sources.
- Inputs/sources connected to a KD Transmitter receive their EDID handshake from the KD Transmitter
- The EDID file (AKA “handshake” is selected using the EDID rotary and provides a list of compatible video and audio formats as well as digital data, informing the source device what it should outputs.
- Most sources will comply with a new EDID file without a power-cycle, but devices do behave differently
- Adjustments may speed up sync time during source selection

Position	EDID Handshake Description	EDID Rotary
0	Copy EDID from HDMI Output 1	 <p>Note: Default position is “A”</p>
1	1080i, 2CH AUDIO	
2	1080i, DOLBY/DTS 5.1	
3	1080i, HD AUDIO	
4	1080p, 2CH AUDIO	
5	1080p, DOLBY/DTS 5.1	
6	1080p, HD AUDIO	
7	4Kx2K@60, 10.2G, HDR, 2CH AUDIO	
8	4Kx2K@60, 10.2G, HDR, DOLBY/DTS 5.1	
9	4Kx2K@60, 10.2G, HDR, HD AUDIO	
A	4Kx2K@60, 18G, HDR, 2CH AUDIO	<p>IMPORTANT: Please apply light pressure to the EDID rotary when making your selection.</p>
B	4Kx2K@60, 18G, HDR, DOLBY/DTS 5.1	
C	4Kx2K@60, 18G, HDR, HD AUDIO	
D	1280x720p@60 DVI (no audio)	
E	1920x1080p@60 DVI (no audio)	
F	4Kx2K@30, 10.2G, HDR, 2CH AUDIO	

Outputs

The HDMI and HDBaseT outputs are mirrored. The selected source is viewed on both outputs simultaneously.



HDMI (Output 1): Using an HDMI cable, connect your display or system. For DVI-D/DVI-I sources use an appropriate adapter. For Display Port, use active adapters.

- Supports up to UHD/4K @ 50/60 fps [4:4:4], 18Gbps
- Supports HDR10
- Compliant with HDCP 2.2 and previous
- Supports lossless compressed audio formats including Dolby® TrueHD, Dolby® Digital Plus, Dolby Atmos®, and DTS-HD Master Audio™
- Supports CEC Manager™ control of connected supporting display. Does not support CEC pass through.
- Link light to the left of port illuminates when there is HPD from the connected display.

HDBaseT (Output 2): Connect a CAT5e/6 cable to the Rx unit at the HDBaseT Input port.

- 4K/UHD (18G): Up to 100m / 328ft
- 1080p: Up to 150m / 492ft in Long Range Mode
- Use with included KD-X40MRx.
- Compatible with third party HDBaseT Rx, including projectors, but cannot be guaranteed.
- Provides power over HDBaseT to connected transmitter
- Link light to the left of the port illuminates solid from healthy HDBaseT connectivity with Rx unit.
- Does not support Dolby® Vision

Audio Outputs



- Analog and digital de-embedded audio from the selected source

- There are no volume or tone control features
- There are no pre-amp features

Audio Input Signal Format	Analog Output	Digital Output
2ch PCM	Pass-Through	Pass-Through
Multi-Channel PCM	Front L/R Pass-Through	MUTE
Dolby®, DTS™ 5.1 / 6.1	MUTE	Pass-Through
HD Audio (incl. Dolby®, DTS™ 7.1)	MUTE	MUTE

Analog L/R Balance/Unbalanced

- 6-pin terminal block
- Drives audio signals up to 2 VRMS with a sampling rate of 192kHz
- Automatically mutes if audio formatting is not PCM 2ch
- Pin assignment:
 - Left + is Pin 1; Left - is Pin 3; Left Ground is Pin 2
 - Right + is Pin 4; Right - is Pin 6; Right Ground is Pin 5


PCM Digital

- RCA coaxial
- SPDIF IEC 60958 format
- Compatible with sampling rates up to 192kHz
- Supports multi-channel Dolby® surround formats up to 5.1 and DTV™ 6.1
- Automatically mutes if audio formatting is not PCM, Dolby®, or DTS™

Service USB Port

- Micro USB port
- Used for configuration and control from PC via KDMS Pro or third-party control terminal
- Used for firmware updates (consult with Key Digital tech support before updating firmware)
- Supports USB driver for Windows 10, 7, XP, Mac, Linux
- Will register as “Prolific USB-to-Serial Comm Port in Device Manager
- Can be used as RS-232 control port. Baud rate is 57,600 unless adjusted otherwise



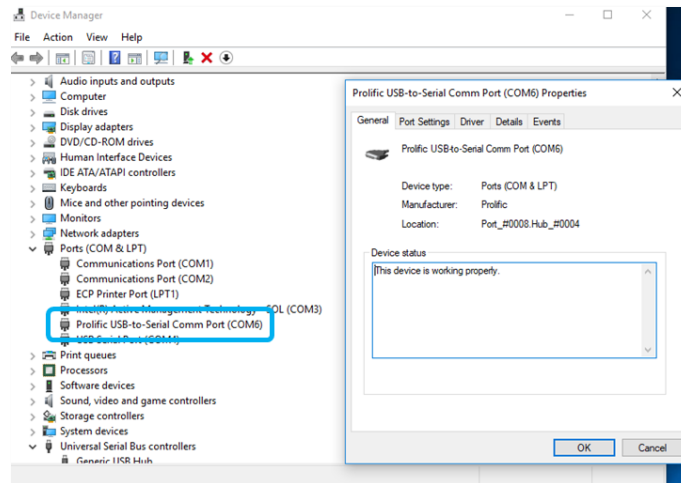

Front Panel Buttons



Input Source (Blue)

- Used for selecting the desired source to be routed to both outputs.
- When an input source selection occurs, a Power On CEC command is sent to the display(s) enabled on the Display Control button section

CEC Manager™ Display Control (Red)

- Choose the display that you desire CEC control commands be sent to

CEC Manager™ Commands (Green & Blue)

- Sends CEC commands via HDMI to the display(s) specified by the Display Control buttons.
- Ensure that CEC is enabled on your displays/projectors. Depending on the manufacturer, HDMI-CEC may be given a different name. View [THIS ARTICLE](#) for a list of CEC names and how to enable CEC on popular displays.
- With KD-Amp220 mode enabled, Mute, Vol +, and Vol -, buttons send RS-232 commands to the KD-Amp220 instead of CEC commands to the displays(s)
- When Vol + or Vol - button is held, the command is sent every 0.5 second
- Pressing the A/V Mute button sends a black screen to the output. It is not a CEC command.


Note: Press and hold HDMI 1 + A/V Mute buttons simultaneously for 10 seconds to apply a factory default reset. Release the buttons when all front LEDs turn off and the unit will re-boot.

Unit Control Ports



Unit Control Phoenix Connector

- 6-pin terminal block for Trigger In, IR and RS-232
- TCP/IP and RS-232 commands may be found in the TCP/IP & RS-232 Commands section
- Pinout:
 - Pin 1 = Trigger In
 - Pin 2 = IR In
 - Pin 3 = IR/Trigger Ground
 - Pin 4 = RS-232 Tx Data
 - Pin 5 = RS-232 Ground
 - Pin 6 = RS-232 Tx Data

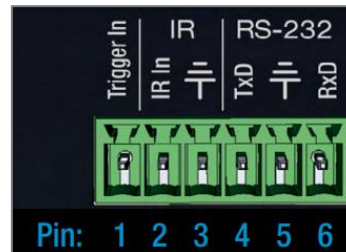

TCP/IP Control Port

- **Default static IP address is 192.168.1.239, port 23**
- Connect an ether cable from the KD-UFS42 to a network router or connect a straight through cable directly from a PC
- Unit configuration, control, and firmware updates are achieved with Key Digital Management software downloaded at www.keydigital.com

IR Sensor

- Used to collect line-of-sight IR from remote control
- Receives signals from a 90° angle at up to 30ft away.
- Mount an IR emitter from Compass Control Pro or to control by another professional control system

HDBaseT Control Pass-Thru Ports



Output 2 HDBaseT IR In & Out Pass-Thru

- 2x 3.5mm mono
- Pinout
 - Tip = Signal
 - Sleeve = Ground
- IR In corresponds with IR Out port of KD-X40MRx
- IR Out corresponds with IR In port of KD-X40MRx
- Maximum supported IR burst frequency = 55kHz

Output 2 HDBaseT RS-232 Pass-Thru

- 3-pin terminal block
- Pinout:
 - Pin 1 = RS-232 Tx Data
 - Pin 2 = Ground
 - Pin 3 = RS-232 Rx Data
- Corresponds with RS-232 control ports of KD-X40MRx

Power



- 48V/1.04A (50W) Power Supply
- Provides power to KD-UFS42, and KD-X40MRx.

Auto Switching and Forced HPD Switches



Auto Switching

- **ON:** Unit will automatically select a newly detected active source. If current source is disconnected or becomes inactive, auto sensing will sequentially advance to an active input/source
- **OFF:** Unit is in normal mode and regular switching functionality will occur
- IF Auto sensing has been set via any method other than the front toggle switch, it will be automatically disabled when the KD-UFS42 is manually controlled by the front panel button, IR, RS-232, TCP/IP, or USB control. If fixed Auto Switching is required, please set via the front toggle switch


Forced HPD Troubleshooting Tool

- **ON:** Hot Plug Detection (HPD) voltage is fixed on at the connected displays and sources
- **OFF:** HPD voltage is passed through HDMI cabling as typical HDMI behavior.

System Integration with KD-CamUSB, KD-Amp220, KD-App

KD-UFS42 may be integrated with KD-CamUSB and/or KD-Amp220 and controlled by the Key Digital iOS app for a simplistic, user-friendly AV system that does not require programming a professional control system.

- Download the Key Digital iOS app for free from the App Store
- Ensure Connection steps 5, 6, and 7 have been completed according to the [Quick Setup Guide](#) section

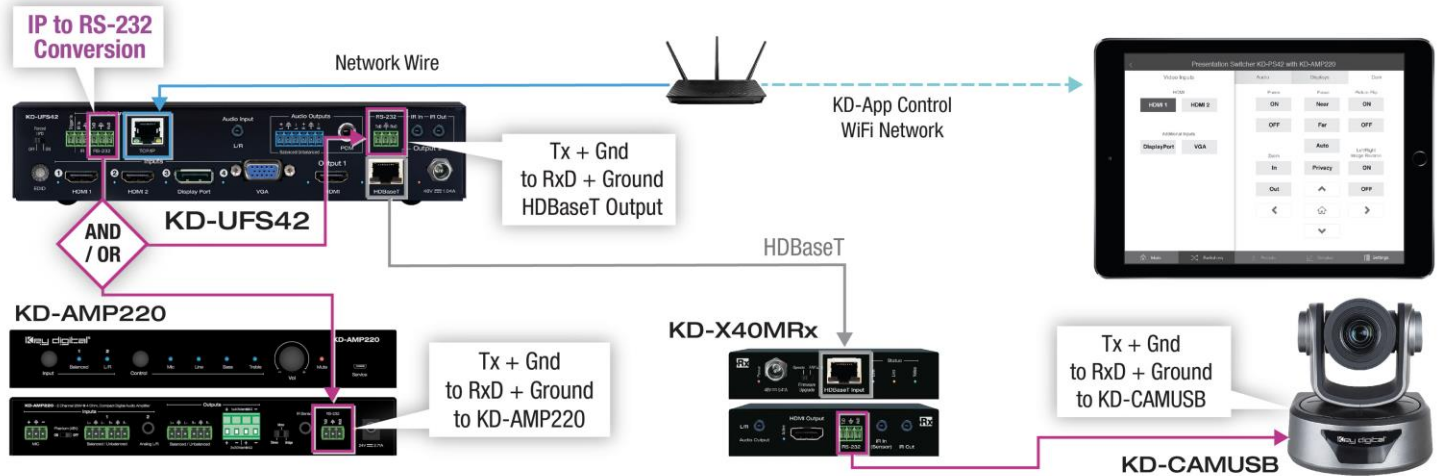

- Ensure Configuration steps 4, 5, 9, 10, and 11 have been completed, as instructed in the [Quick Setup Guide](#) section
- Ensure the iPad / iOS device is on the same network with KD-UFS42
- Open Key Digital app and press DEVICES button to begin scan
- Select the KD-UFS42 unit to enter control GUI

KD-UFS42 control GUI


Video source selection is always visible at the left-side of screen.

Input names entered in KDMS Pro are visible as sub-text beneath each Video Input button

Display CEC control page is visible on the right-side of screen.

If an output is turned OFF in KDMS Pro, that display control button group is no longer visible.

Output names entered in KDMS Pro are visible at the top-center of each Display control button group.


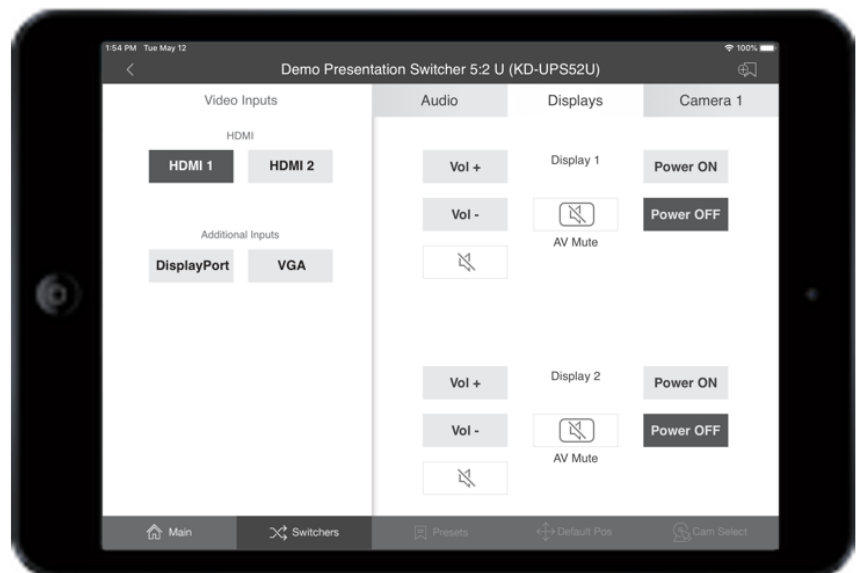


If KD-Amp220 control and KD-CamUSB mode have been activated, the Audio and Camera page tabs are visible. They are invisible if they have not been activated.

Audio Control

With KD-Amp220 control mode activated, the Audio control page may be entered, offering speaker volume and mute, microphone mix level (optional), and KD-Amp220 source selection.


Enable Microphone Control in KDMS Pro to make the Mic mix level controls visible.

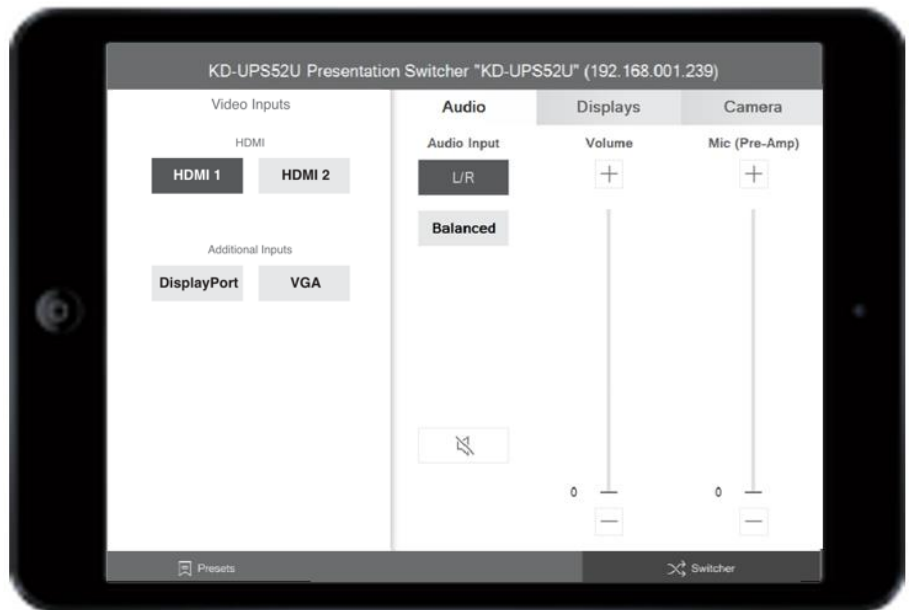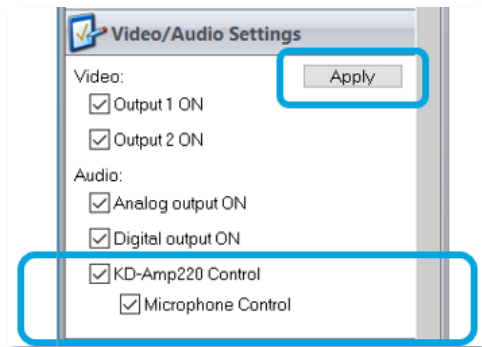

Camera Control


With KD-CamUSB control mode activated, the Camera control page may be entered for pan, tilt, zoom, power, preset calling and preset creation.

Up to 7 KD-CamUSB cameras may be controlled, with the camera selection button on the bottom-right corner of the screen.

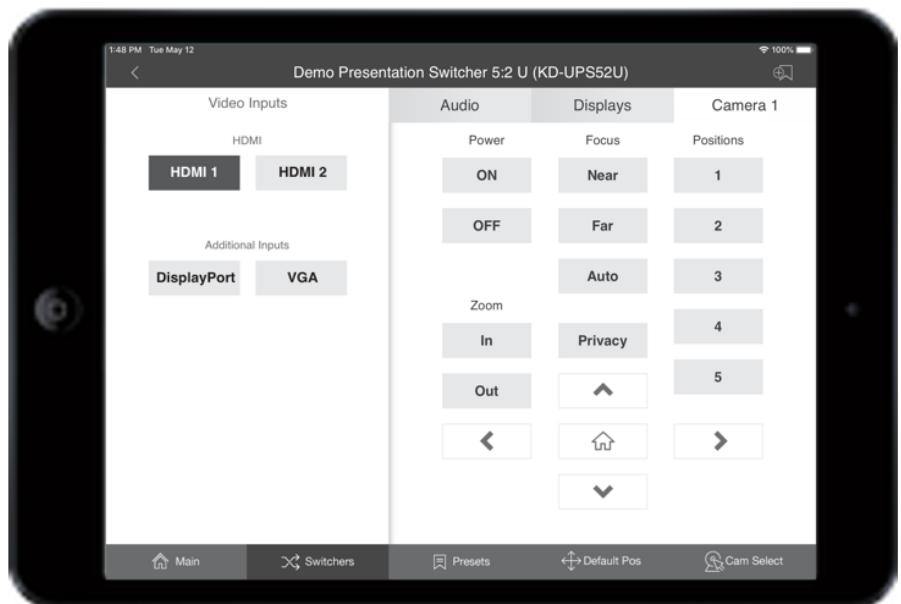

TCP/IP and RS-232 Commands

- KD-UFS42 allows control over serial interface for bi-directional communication.
- Use Unit Control pins 4, 5, and 6 for RS-232 communication
- Serial interface may also be accessed using a TCP/IP connection or using the USB Service port
- **Default IP address is 192.168.1.239, with default port 23**

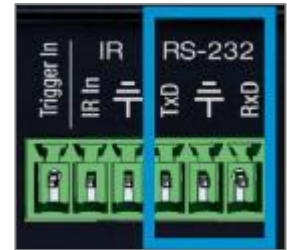

Connection Protocol

- Baud Rate = 57,600 bits per second as default
 - Note: Activating KD-CamUSB or KD-Amp220 control mode will automatically adjust the baud-rate to 9,600. It must be 9,600 to support KD-CamUSB and KD-Amp220 Integrated Systems
- Data Bits = 8
- Stop Bits = 1
- Parity = None
- Flow Control = None
- Carriage Return = Required at end of each string

Notes:

- Commands are not case-sensitive
- Spaces are shown for clarity; commands should NOT have any spaces
- After a new command is received, a prompt should be sent back

Help Command (H). Returns entire API in readable format:

KD-UFS42> help

```

-----
--                               Key DigitalSystems HELP                               --
-----
-- KD-UFS42           System Address = 00           F/W Version : 1.04           --
--
-- Azz                : All Commands may have Prefix System Address zz=[01-99] --
-- H                  : Help                                                    --
-- PF                 : Power Off                                               --
-- PN                 : Power ON                                                --
-- STA                : Show Global System Status                               --

```



```

--
-- Video Output Setup Commands: xx = [01-02,A=All], yy = [01-04,U,D]
-- ( yy : 01=HDMI1, 02=HDMI2, 03=DisplayPort[DP], 04=VGA )
-- SPO SI yy      : Set Output to Video Input yy
-- SPO xx SI yy   : Set Output to Video Input yy
-- SPO xx ON/OFF  : Set Output xx ON/OFF
-- SPO xx VM E/D  : Set Output xx Video Mute Enable/Disable
-- SPO xx DBG ON/OFF : Set Output xx Debug Mode ON/OFF
--
-- VGA Input Setup Commands:
-- SPV EDID x : Set VGA EDID to x,
--             [0=1920x1080@60, 1=1920x1200@60, 2=1360x768@60, 3=1280x720@60]
-- SPV RES x  : Set Output Resolution (Video Scale) x
--             [0=Auto, 1=1080p@50, 2=1080p@60, 3=720p@50, 4=720p@60,]
--             [5=1280x1024@60, 6=1024x768@60, 7=1360x768@60, 8=1920x1200@60]
-- SPV AR x   : Set Aspect Ratio x, [0=Auto, 1=16:9, 2=4:3]
-- SPV PM x   : Set Picture Mode x,
--             [0=Standard, 1=Natural, 2=Dynamic, 3=Movie]
-- SPV CT x   : Set Color Tone x, [0=Standard, 1=Cool, 2=Warm, 3=User]
-- SPV CTR xxx : Set Red Color Tone xxx = [1-255]
-- SPV CTG xxx : Set Green Color Tone xxx = [1-255]
-- SPV CTB xxx : Set Blue Color Tone xxx = [1-255]
-- SPV PB xxx  : Set Picture Brightness xxx = [0-100]
-- SPV PC xxx  : Set Picture Contrast xxx = [0-100]
-- SPV MIH xxx : Move Output Horizontal Image xxx = [0-100]
-- SPV MIV xxx : Move Output Vertical Image xxx = [0-100]
-- SPV AHS xxx : Adjust Output Horizontal(Width) Size to xxx = [0-100]
-- SPV AP xxx  : Adjust Output Phase to xxx = [0-100]
--
-- Display Control Commands: xx = [01-02,A=All]

```

```

-- SPO xx TV ON/OFF : Set Display xx ON/OFF (Turn TV On/OFF) --
-- SPO xx AV U/D : Set Display xx Volume Up/Down --
-- SPO xx AM E/D/T : Set Display xx Audio Mute Enabled/Disabled/Toggle--
-- --
-- Audio Output Setup Commands: [E=Enable, D=Disable] --
-- SPO AA E/D : Set External Analog Audio Output Enable/Disable --
-- SPO DA E/D : Set External PCM/Digital Audio Output Enable/Disable --
-- SPO AMP ON/OFF : Set AMP220 Control Mode ON/OFF --
-- SPO MIC ON/OFF : Set AMP220 MIC Mode ON/OFF --
-- --
-- Input/Output/Device Naming Commands (Max. 16 Chars) --
-- SPI xx WN cccccccccccccccc : Write Input xx Name --
-- SPI xx RN : Read Input xx Name --
-- SPO xx WN cccccccccccccccc : Write Output xx Name --
-- SPO xx RN : Read Output xx Name --
-- SPC WN cccccccccccccccc : Write Device Name --
-- SPC RN : Read Device Name --
-- --
-- Network Setup, ( xxx=[000-255], zzzz=[0001~9999] ) --
-- SPCETIPA xxx.xxx.xxx.xxx : Set Host IP Address to xxx.xxx.xxx.xxx --
-- SPCETIPM xxx.xxx.xxx.xxx : Set Net Mask to xxx.xxx.xxx.xxx --
-- SPCETIPR xxx.xxx.xxx.xxx : Set Route IP Address to xxx.xxx.xxx.xxx --
-- SPCETIPP zzzz : Set TCP/IP Port to zzzz --
-- SPCETIPB : Apply New Network Config --
-- --
-- System Address Setup Command: xx = [00-99], 00 = Single --
-- SPC Axx : Set System Address to xx --
-- --
-- System Control Setup Commands: --
-- SPC AS x : Set Auto Sense Mode x = [0:OFF,1=AUTO,2=FORCED ON] --

```

```
-- SPC FB E/D : Enable/Disable Front Panel Buttons --
-- SPC CAM z : Set CAMUSB Control Mode z = [0-7] --
-- SPC RSB z : Set RS232 Baud Rate to z bps, z=[0-4] --
--           [0:57600, 1:38400, 2:19200, 3:9600, 4:4800] --
-- SPC DF : Reset to Factory Defaults --
-- SPC DF00 : Reset to Factory Defaults without Network Reset --
```

Status Command (STA). Returns unit status and settings in readable format:

```
KD-UFS42> sta
-----
--           Key Digital Systems STATUS           --
-----
-- Model: KD-UFS42, System Address = 00, Device Name: KD-UFS42 --
-- Main F/W Ver: 1.04, Splitter Ver: 1.00, CEC Ver: 1.05 --
-- -- --
-- Power : ON --
-- RS232 : Baud Rate=57600bps, Data=8bit, Parity=None, Stop=1bit --
-- Front Panel Button : Enabled --
-- CAMUSB Control Mode : 0 --
-- -- --
-- Network Setting(Web Server/TCP Control) Status --
-- MAC Address = 60:89:B1:30:00:15 --
-- Host IP Address = 192.168.001.239 --
-- Net Mask = 255.255.255.000 --
-- Router IP Address = 192.168.001.001 --
-- TCP Port = 0023 --
-- -- --
-- Video Input Status --
-- EDID = DEFAULT 10, FORCED HPD = OFF, AUTO SENSE = OFF --
```

```

-- 01 : HDMI1, LINK = OFF --
-- 02 : HDMI2, LINK = OFF --
-- 03 : DP , LINK = OFF --
-- 04 : VGA , EDID = DEFAULT 0, LINK = OFF --
-- RES=2, AR=0, PM=0, CT=0, CTR=128, CTG=128, CTB=128, PB= 50, PC= 50,--
-- MIH= 50, MIV= 50, AHS= 50, AP= 50 --
-- --
-- Video Output Status (D=Disable, E=Enable) --
-- HDMI Output : IN = 01, OUT = ON , V/MUTE = D, LINK = OFF, DBG = OFF --
-- HDBT Output : IN = 01, OUT = ON , V/MUTE = D, LINK = OFF, DBG = OFF --
-- --
-- Display Output Status (CEC Control) --
-- HDMI Output : TV = ON , A/V MUTE = Disable, A/MUTE = Disable --
-- HDBT Output : TV = ON , A/V MUTE = Disable, A/MUTE = Disable --
-- --
-- Audio Output Status --
-- Audio Output : IN = Video 01, Balanced = Disable, PCM = Enabled --
-- AMP220 Mode = OFF, MIC Mode = OFF --

```

Specifications

Technical

- AV Inputs: 2x HDMI, 1x Display Port, 1x VGA
- AV Outputs: 1x HDBaseT RJ45, 1x HDMI, 1x Analog Audio on 6-pin terminal block, 1x Digital Audio on PCM RCA
- DDC Signal (Data): Input DDC Signal: 5 Volts p-p (TTL)
- HDMI Video/Audio Signal: Input Video Signal: 1.2 Volts p-p
- Display Port Video/Audio Signal: Input Video Signal: 1.2 Volts p-p
- VGA Video Signal: Input Video Signal: 1.2 Volts p-p
- RJ45 Connectors: Shielded Link Connector, 2x HDBaseT, 1x LAN
- Unit Control: TCP/IP on RJ45, Bi-directional RS-232, Serial IR, IR sensor, USB Micro
- RS-232 Connector: 1x 3-pin terminal for unit control, 2x 3-pin terminal for pass-thru to/from HDBaseT Input and HDBaseT output
- IR Connectors: 1x IR Sensor, 1x 2-pin terminal for unit control, 1x 3.5mm mono for IR input pass-thru to HDBaseT Output, 1x 3.5mm mono for IR output pass-thru from HDBaseT Output
- RS-232 Connector: 3-pin phoenix terminal

General

- Regulation: CE, RoHS, WEEE, EAC
- Enclosure: Black metal
- Product Dimensions: 8.27 x 6.42 x 1.75" (210 x 163 x 44.4mm)
- Product Weight: Weight: 3.5 lbs / 1.59kg
- Packaging Dimensions: 15.16 x 9.10 x 3.94 (385 x 230 x 100 mm)
- Packaging Weight: 11.0 lbs / 5kg

Warranty Information

All Key Digital® products are built to high manufacturing standards and should provide years of trouble-free operation. They are backed by a Key Digital Limited 3 Year Product Warranty Policy.

<http://www.keydigital.com/warranty.htm>

Product Warnings & Safety Instructions



Important Product Warnings:

1. Connect all cables before providing power to the unit.

2. Test for proper operation before securing unit behind walls or in hard to access spaces.
3. If installing the unit into wall or mounting bracket into sheet-rock, provide proper screw support with bolts or sheet-rock anchors.



Safety Instructions:

Please be sure to follow these instructions for safe operation of your unit.

1. Read and follow all instructions.
2. Heed all warnings.
3. Do not use this device near water.
4. Clean only with dry cloth.
5. Install in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Only use attachments/accessories specified by the manufacturer.
8. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way including:
 - Damage to the power supply or power plug
 - Exposure to rain or moisture



Power Supply Use:

You MUST use the Power Supply provided with your unit or you VOID the Key Digital® Warranty and risk damage to your unit and associated equipment.