

ASSEMBLY AND INSTALLATION INSTRUCTIONS


H0330

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

2. Read and save this instructions.

Hardware Package (included):

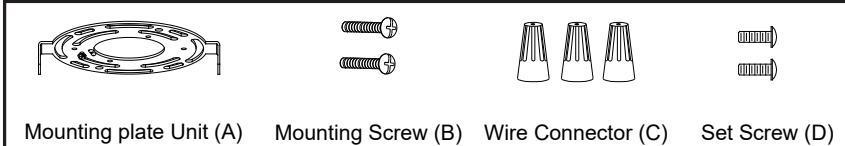

Installation Steps

Turn off the power at fuse or circuit box

1. Unscrew the two set screws (D) and separate the mounting plate unit (A) from the canopy.

2. Attach the mounting plate unit (A) to the outlet box by using two mounting screws (B).

3. Adjusting the steel wires and fixture wire length:

a. Reduce the steel wires and fixture wire length:

Push the steel wires and fixture wire into the canopy to adjust the steel wires and fixture wire the desired length.

b. Increase the steel wires and fixture wire length:

Press the buttons under the canopy, pull the steel wires and fixture wire from the canopy to adjust the steel wires to desired length. Release the buttons to hold the steel wires and fixture wire in position as shown in the diagram.

After adjusting the length of the cables and wires, the remaining cables and wires are arranged and placed in the canopy.

4. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:

---Connect the hot wire (black insulation) from the fixture to the black wire from the power source.


---Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.

---Attach the fixture ground wire (bare wire) to the mounting plate unit (A) with the green ground screw, then connect it to the house ground wire with the wire connector (C).

Carefully put the wires back into the outlet box.


5. Attach the canopy to the mounting plate unit (A), and then secure it with two set screws (D).

Turn on the power at fuse or circuit box

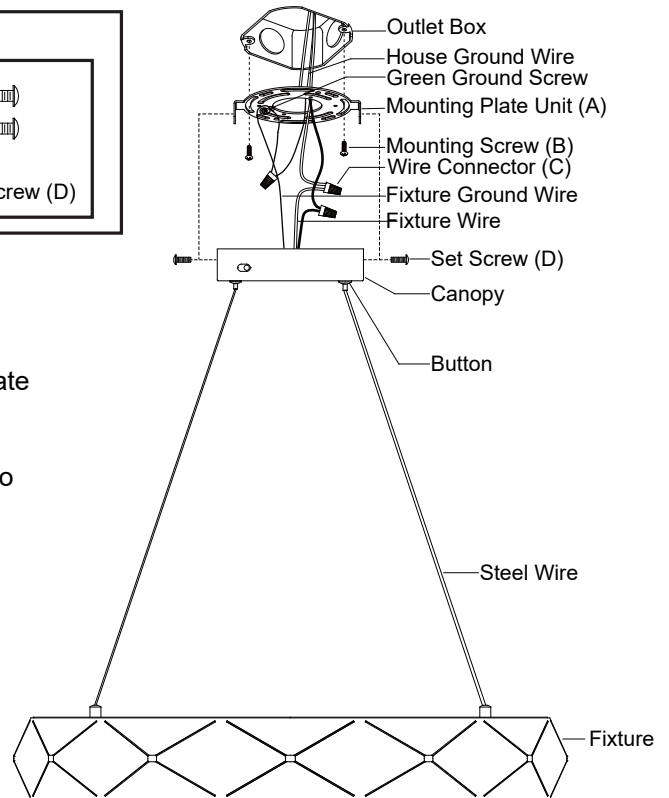

Adjusting the Correlated Color Temperature (CCT) of the Light

Customize the correlated color temperature (CCT) of the LED light by moving the toggle switch (For Reference).

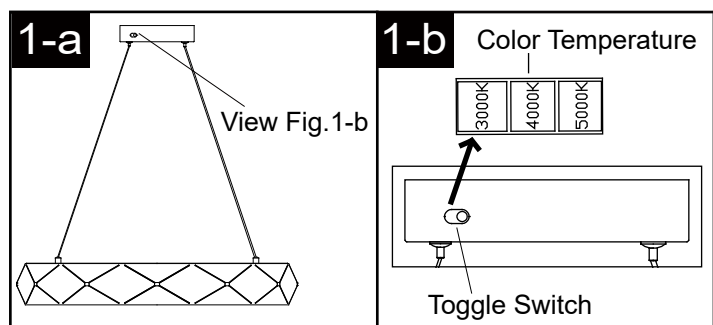



- Move the toggle switch to 3000K, the color temperature is set at Soft White.
- Move the toggle switch to 4000K, the color temperature is set at Bright White.
- Move the toggle switch to 5000K, the color temperature is set at Daylight.

Note: Dimming range: 100% full illumination to 10% of full illumination.

This fixture is dimmable with a forward phase electronic dimmer. Dimmers tested to be compatible with this fixture are the Lutron: TGCL-153PH, MACL-153MH, SCL-153P, DVWCL-153PH.

If you are unfamiliar with electrical installations, it is recommended you have a qualified electrician for your installations.

The following parts are available for reorder if damaged or missing.

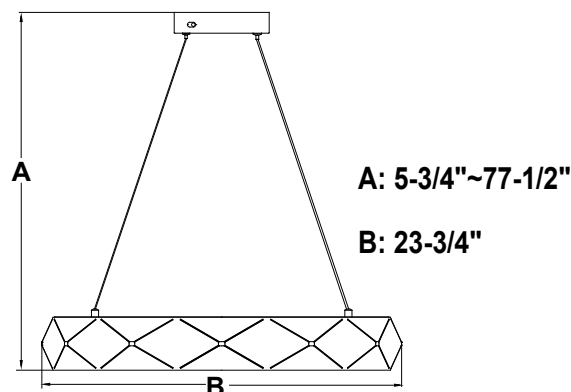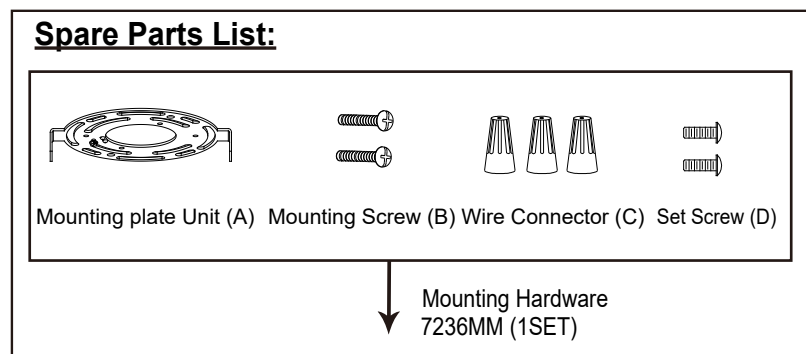

5 Year Limited Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

In addition:

- Any product with an integrated motion sensor or dusk-to-dawn photocell is supported by a 5-year warranty for the functionality of the product.
- Any product with integrated LED modules is covered by a 5-year warranty on the LED functionality.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com
1-800-482-9235