


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0462

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instruction.

Hardware Package (included):

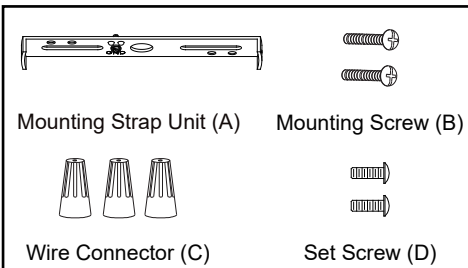


Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew the two set screws (D) and separate the mounting strap unit (A) from the canopy.
2. Attach the mounting strap unit (A) to outlet box by using two mounting screws (B).
3. Twist the tube onto the fixture.
4. Adjust the length of the cord.
 - a. Reduce the cord length:
Adjust the length of the cord and push the cord into the canopy.
 - b. Increase the cord length:
Press the button under the canopy. Pull the cord from the canopy to adjust the cord to desired length. Release the buttons to hold the cord in position, as shown in diagram.After adjusting the length of the cord, the remaining cord are arranged and placed in the canopy.
5. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with the wire connector (C).Carefully put the wires back into the outlet box.
6. Attach the canopy to the mounting strap unit (A), and then secure it with two set screws (D).
7. Attach the glass shade to the fixture, then screw it with the inner acrylic.


Turn on the power at fuse or circuit box.

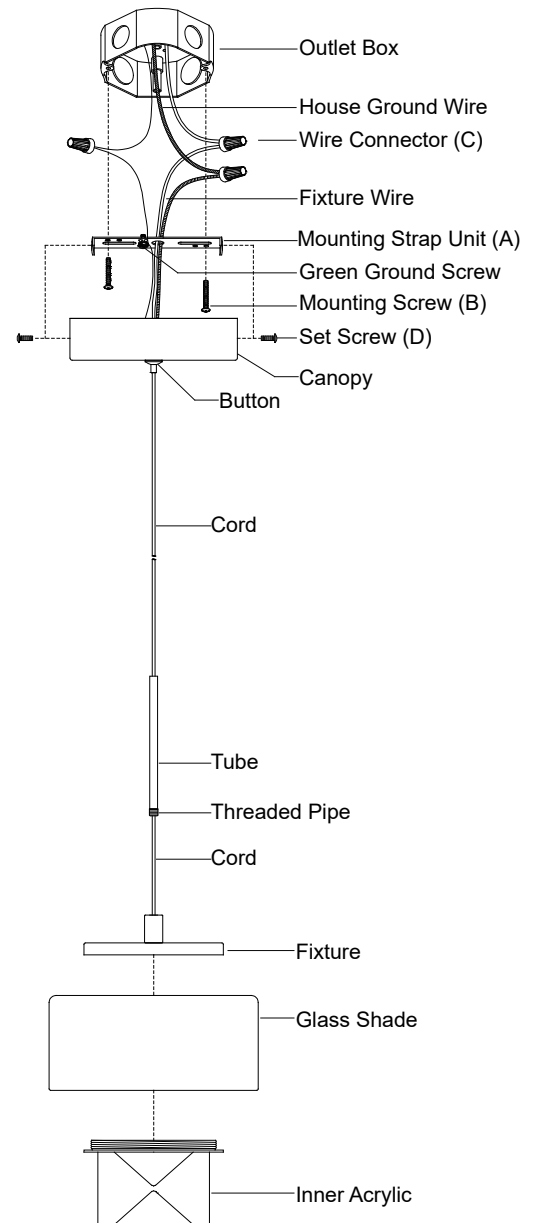

Note: Dimming range: 100% full illumination to 10% of full illumination.
This fixture is dimmable with a forward phase electronic dimmer. Dimmers tested to be compatible with this fixture are the Lutron: TGCL-153PH, MACL-153MH, SCL-153P, DVWCL-153PH.
If you are unfamiliar with electrical installations, it is recommended you have a qualified electrician for your installations.

The following parts are available for reorder if damaged or missing.


Spare Parts List:




Mounting Strap Unit (A) Mounting Screw (B) Wire Connector (C) Set Screw (D)



Mounting Hardware
7237MM (1 SET)



Glass Shade
10611SG

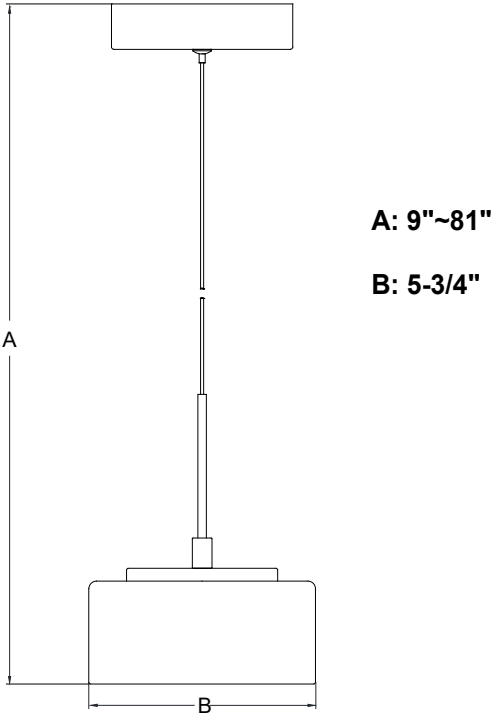

5 Year Limited Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

- In addition:
- Any product with an integrated motion sensor or dusk-to-dawn photocell is supported by a 5-year warranty for the functionality of the product.
 - Any product with integrated LED modules is covered by a 5-year warranty on the LED functionality.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?
info@vaxcel.com
1-800-482-9235