


# Avancer Smart Toilet

## INSTALLATION INSTRUCTIONS



TOUCHLESS  
 technology

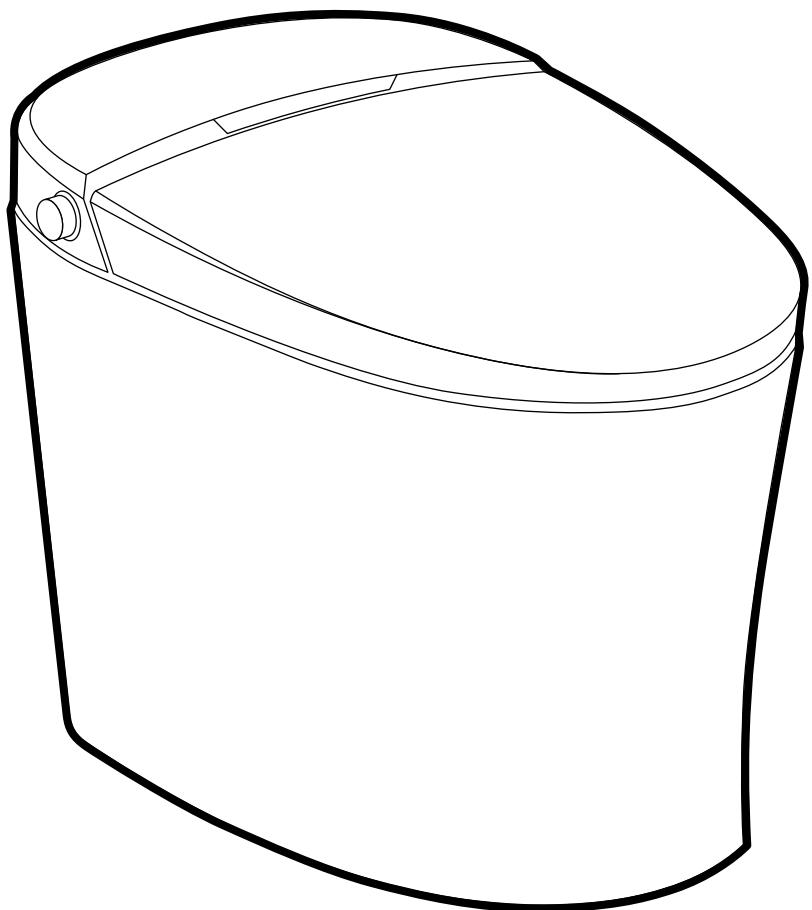

## PRIOR TO INSTALLATION:

- Inspect product to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- All dimensions are nominal! Be sure to measure your toilet prior to installation.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.
- Two people are recommended to handle and install this product as it is fragile.


## QUESTIONS OR CONCERNS?

Please contact us:


1-434-623-4766

info@swissmadison.com

## INCLUDED PARTS:

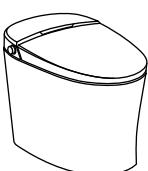

Tankless Toilet

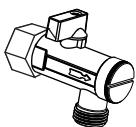


Angle Valve



Sealing Flange




Braided Hose



Flange



Floor Anchor Kit




Remote


## SUGGESTED TOOLS & MATERIALS:



Safety Glasses



Sealant



Tape Measure



Wrench




Level



Bucket



Drill

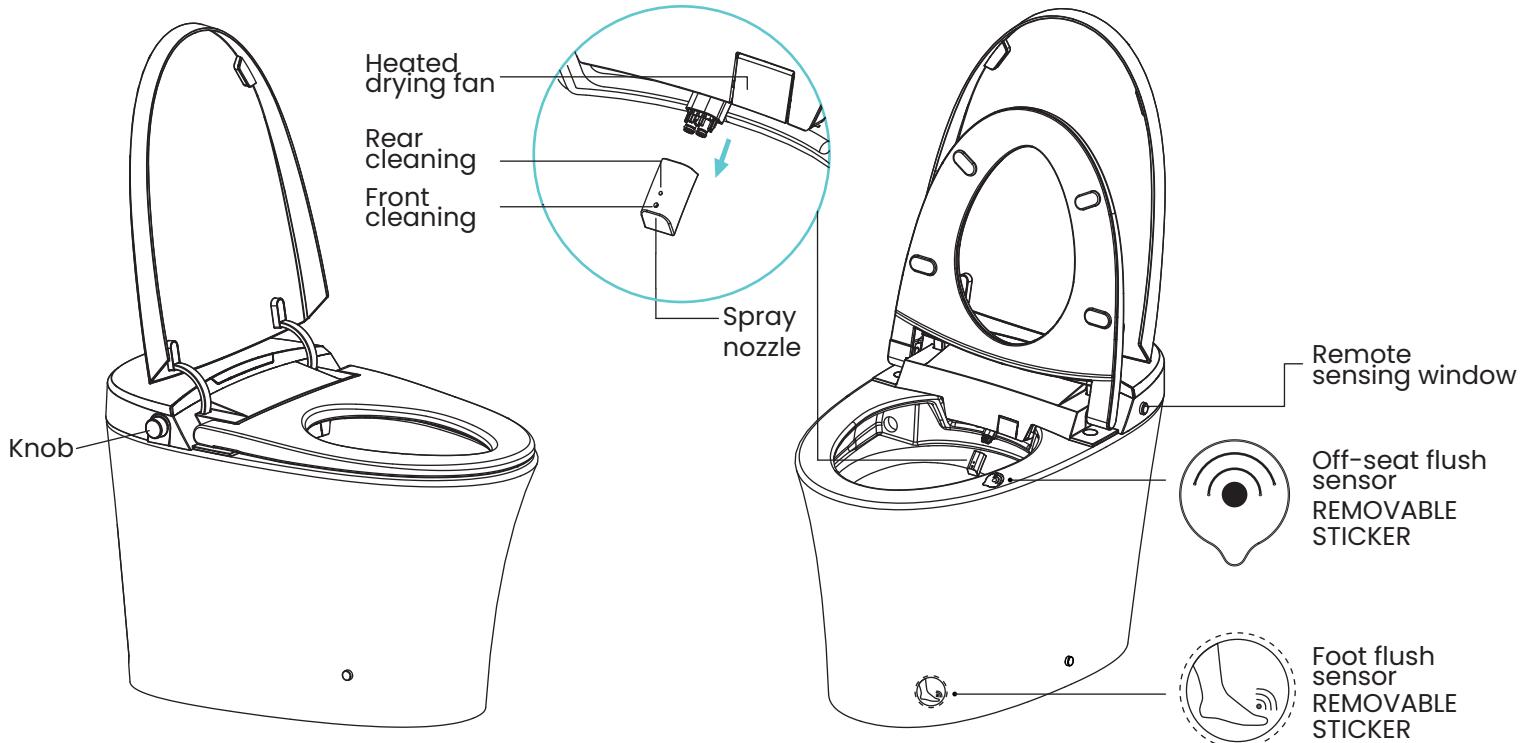


## PRODUCT FEATURES:

- **Automatic Flushing:** Toilet will automatically flush as you walk away from the bowl. When the user sits less than 60 seconds it will activate a half flush. When the user sits for more than 60 seconds, it will activate a full flush.
- **Side Manual Flush:** Press the knob on the side of the toilet to manually activate a full flush.
- **Foot-Sensor Flushing:** Tap the foot sensor area to activate a half flush.
- **Soft-Close Seat.**
- **Heated Seat:** Adjust 6 level seat temperature with the remote. The seat temperature will automatically lower to level 1 after 10 minutes.
- **Bidet Wash:** Rear and front massage wash with 6 level water temperature adjustment and 3 level water pressure adjustment.
- **Self-Cleaning:** Self-cleaning, anti-bacterial spray nozzle, anti-bacterial seat.
- **Night Light:** Smart white night light, normally off.
- **User Settings:** Adjustable male and female automatic wash settings to personalize your experience.


## SPECIFICATION PARAMETERS:

- Requires power to operate
- Requires one 9V battery for back up flushing
- Rated Voltage: 110V-120V
- Rated Power: 1200-1400W
- IP Rating: IPX4
- Flush Volume: Full flush 1.6 GPF / Half flush 1.1 GPF
- Flush Type: Vortex™
- Rough-in: 12"
- Waste Outlet: S-trap 12"
- Outer Outlet Diameter: 3.5"
- Water Pressure Range: 0.09MPa ( dynamic water pressure, flow rate 4 gal/min or more) - 0.8MPa (static water pressure)
- Bidet Heating Power: 1400W
- Drying Heating Power: 250W
- Warm Air Volume: Over 7 ft³ / min

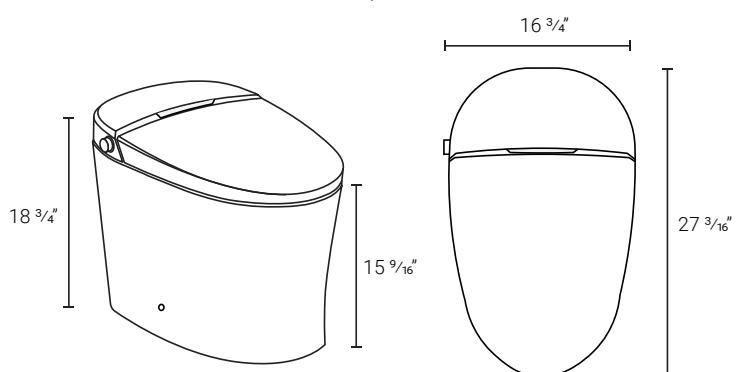


## 1 Check Pressure

- The minimum dynamic working water pressure is 0.09MPa or more (4 gal/min or more), failure to meet this pressure will not achieve the best flushing effect. If you do not have a water pressure testing device, open the angle valve and connect water inlet for 10s, once the water volume is above 0.66 gal, the minimum water pressure of the product is ensured.

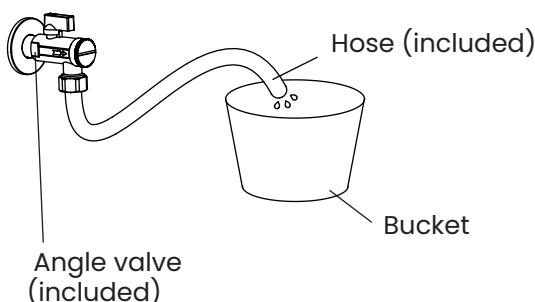


## 3 Install Mounting Bracket

- Assemble the mounting bracket with bolts and then install them to the pre-installed flange plate on the ground and lock tight with nuts.

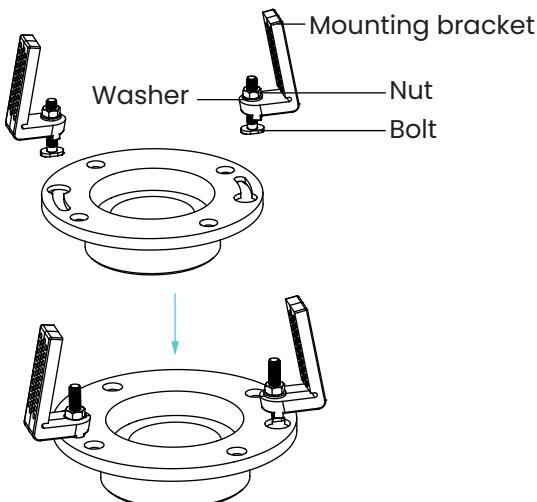


## 2 Rough-In & Install Angle Valve

- Measure the wall from behind the toilet to the middle of the floor drain. Your rough-in measurement should be 12".
- Install angle valve at proper position on the wall according to toilet inlet placement.
- Align cardboard with the centerline of the drain outlet, then draw a contour line according to the cardboard.

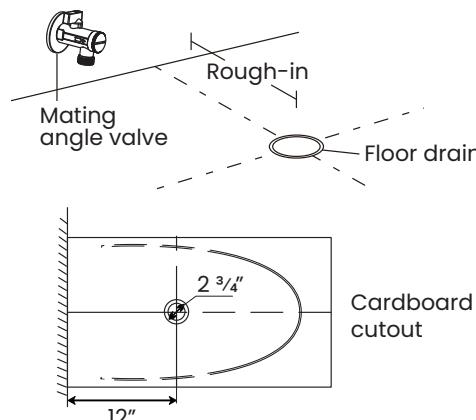

## 4 Connect to Water Supply


- Connect the water inlet and angle valve of the toilet with the matching hose and tighten it.

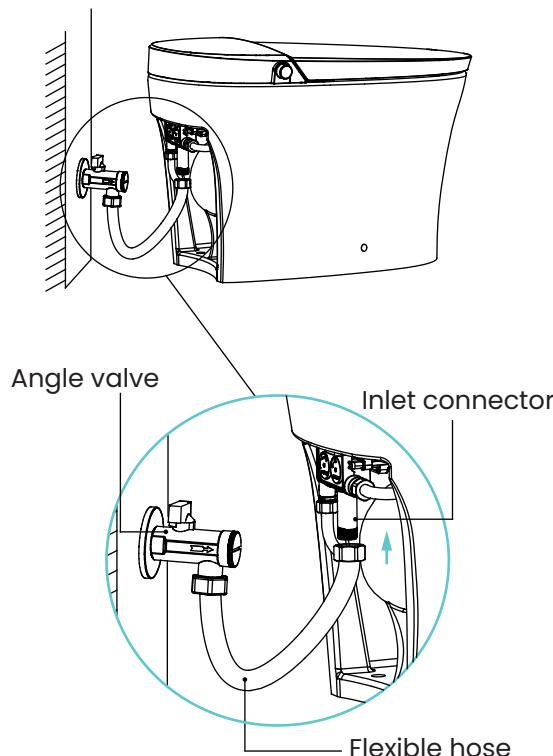

## 5 Turn on Angle Valve


- Check thread connection and check for leaks.
- Unscrew angle valve counterclockwise to open all the way.

**NOTE:** When opening for the first time, the angle valve handle has a larger torque.

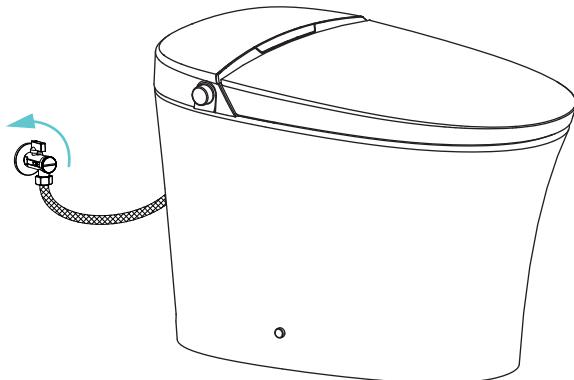


## 6 Install Toilet

- Install toilet by putting sealing flange into drain outlet. This should be done by two people, the toilet is heavy.

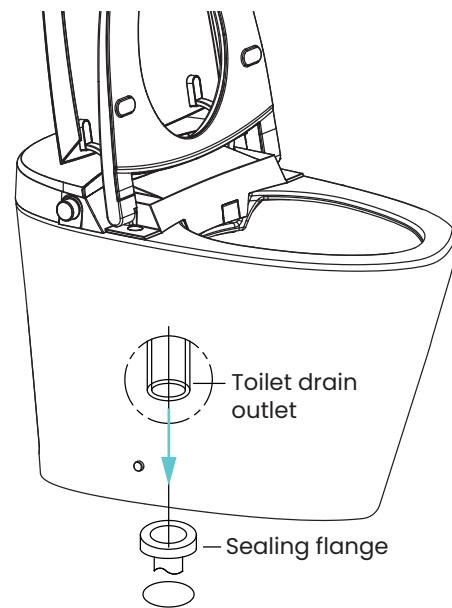

## 7 Secure Toilet


- Put the screw through the anchor and then install it through the holes on both sides of the toilet to the mounting bracket and tighten.
- Cover installation bolts with bolt covers.
- Apply a thin bead of sealant around toilet base.

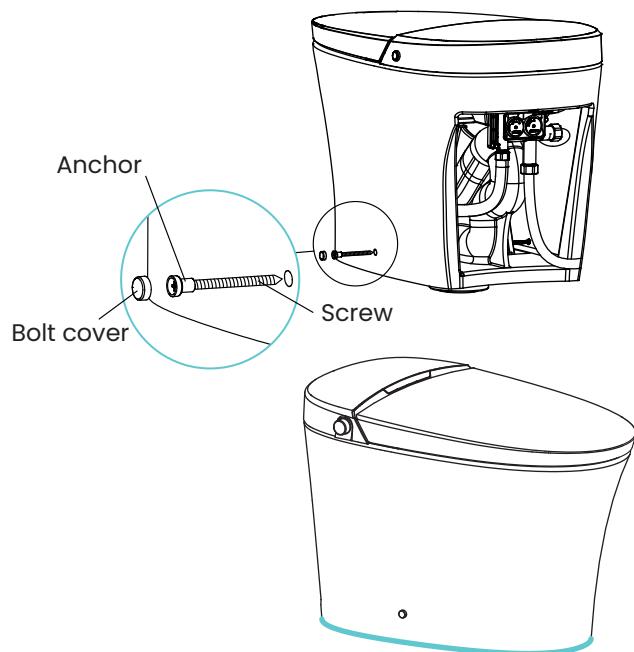

## 8 Connect Power

- Insert power line leakage protection plus into the power socket. Press the reset switch and look for the indicator lights to indicate the power is on. Once connected to power, the toilet will beep and the knob will light up and start self testing. After self testing is complete, the knob will light up and proceed to normal function.

**NOTE:** Press electric leakage test button prior to usage, the reset switch pops up indicating that the leakage protection function is normal. Press the TEST button (then RESET button) every month to assure proper operation.

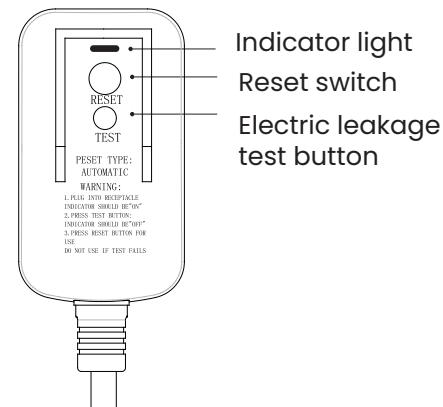


## MAINTENANCE

### 1 Daily Usage Caution

- Turn off power supply before cleaning.
- Use only a soft, damp cloth to clean the toilet. Avoid using harsh chemicals.


### 2 Cleaning Filter

- The filter should be cleaned if the water pressure is normal, but the toilet is not flushing normally.
- Disconnect the water supply and turn off water supply at the angle valve.
- Unscrew angle valve nut and remove.
- Remove filter net and use a brush to clean.
- Re-install filter and angle valve nut, turn on the angle valve and connect power.

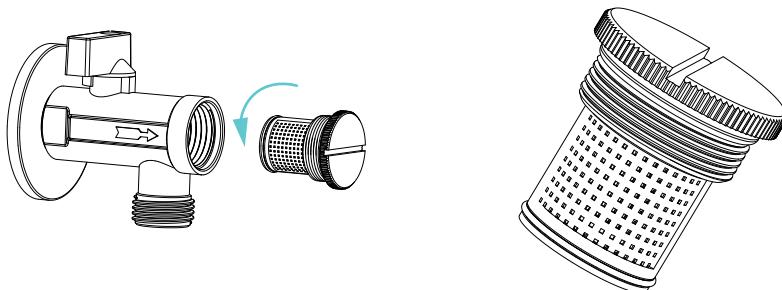

### 3 Spray Nozzle Maintenance & Care


- Nozzle will self clean when the user gets off the seat. Rotate the knob clockwise to manually clean the nozzle, the knob will automatically extend and flush nozzle with water.
- To disassemble the nozzle, wait until it moves forward, then disassemble and clean. Do not pull or push the wand to avoid damage. Use a soft cloth or brush to clean. When cleaning is finished, put the nozzle back into the toilet and press the "stop" button to automatically retract the nozzle.

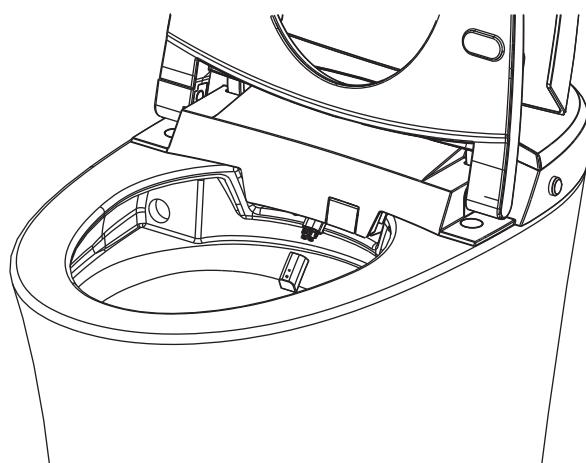

## USAGE


### 1 Manual Flushing

- Press the knob to manually activate a full flush.

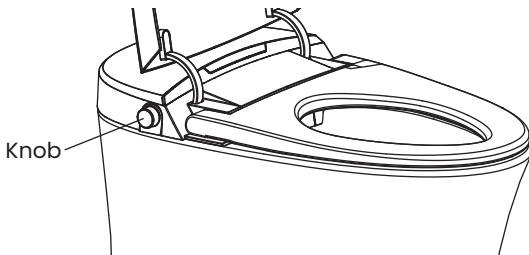

### 2 Activating Foot Sensor Flushing

- To turn on foot-sensor flushing, press the "STOP" and the "FULL FLUSHING" button on the remote simultaneously. Repeat to turn off.
- This function will not work while the user is sitting.

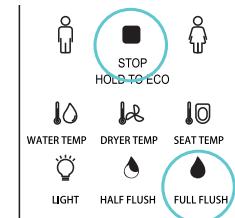



### 3 Knob Functions

- Rotate clockwise to start rear cleaning, rotate counterclockwise to start front cleaning. Rear and front cleaning will automatically enter drying mode after completion.
- If user is not seated and the knob is rotated clockwise, manual nozzle cleaning will begin.
- After starting the rear and front cleaning, turn the knob clockwise to move the spray rod forward, and counterclockwise to move the spray rod backwards. Hold down the knob to switch to the water pressure adjustment mode. Turning the knob clockwise in this mode will increase the water pressure, and counterclockwise will decrease the water pressure. Hold the knob again to switch back to spray rod position adjustment mode.
- After starting the drying function, turning the knob clockwise will increase the wind temperature, and counterclockwise will decrease the wind temperature.
- Press the knob at any time to stop the current function. Pressing the knob after functions stop will flush the toilet.
- Hold down the knob after use to turn off the toilet and put it in standby mode, the light will turn off. In power saving mode, the light will breathe.
- If the toilet is in standby mode, press the knob to enter normal working mode.

### 4 Battery Installation & Replacement

- Pull out the power plug and turn off water supply.
- Fully open the seat and cover, take out the left and right decorative covers, unscrew the screws counterclockwise, and take out the gasket.
- Pull up the cover slightly with both hands so the back end of the cover is separated from the ceramic positioning column, you may hear a "clicking" sound.
- Pull out the plug-in connecting line, loosen the water inlet pipe and remove the whole seat and cover.
- Place the seat flat with bottom facing up, be careful not to scratch the top of the seat.
- Remove the battery box cover from the bottom of the seat to install or replace the 9V battery.
- Place the battery cover over the new battery then turn on water supply and power.

NOTE: Optional for back up flushing use only, battery not included.

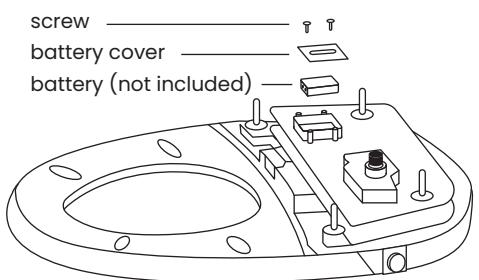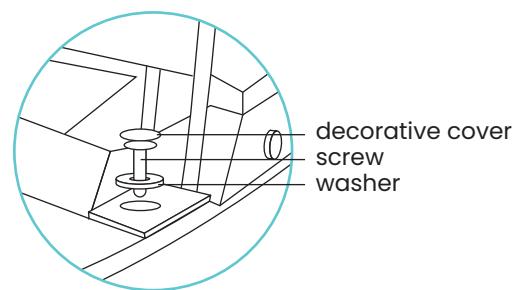

## TROUBLESHOOTING

### 1. How to flush without water supply:

- Put around 2.1 gal of water into a bucket and pour into bowl to flush.

### 2. What to do when not in use for a long period of time (over three days):

- Unplug and remove the battery box and all batteries.
- Drain out water by flushing the toilet after turning off the angle valve to prevent water from entering.
- Drain out water inside pipe by unscrewing the hose from the angle valve, draining, then re-installing.
- It is suggested to put antifreeze inside the bowl to prevent any remaining water from freezing.
- When ready to use again, reconnect water and power supply.

PROBLEM	CAUSE	SOLUTION
Not Flushing	Water supply hose is buckling and causing a block.	Solve the buckling.
	Fill valve is off.	Turn on the fill valve.
	Water supply is cut off.	Connect water supply and wait for the water.
Poor Flushing	Water supply hose is buckling and causing a block.	Solve the buckling.
	Fill valve is not fully turned on.	Turn on fill valve fully.
	The filter is dirty and blocked.	Clean the filter.
Low Water Temperature	Water temperature is set to normal.	Reset the water temperature.
Low Seat Temperature	Seat temperature is set to normal.	Reset the seat temperature.
	In standby mode.	Switch to normal function mode and wait 3 minutes before use.
Low Wind Temperature	Wind temperature is set to normal.	Reset the wind temperature.
No Wind	In standby or power saving mode.	Shift to function mode.
Spray Wand Not Retracting	Power is off.	Push back the wand lightly and wait for power.
	Clogged by impurities.	Clear away the impurities.
Spray Wand Not Extending	Power is off.	Push back the wand lightly and wait for power.
	Not sitting in the sensing area.	Sit in the sensing area.
Remote Not Working	Reverse the polarity of the battery.	Reload the battery.
CAUTION	If the problems cannot be solved as per above methods, please disconnect power and contact Swiss Madison for maintenance.	
	If the leakage circuit breaker trips off often, the product has an electric leakage. Shut off the power and contact Swiss Madison for maintenance.	

## WARNINGS

### DANGER – To reduce the risk of electrocution:

- Do not use while bathing.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a product that has fallen into water. Unplug immediately.
- Do not wash the main unit or electrical plug with water or detergent.
- Do not handle the electrical plug with wet hands.
- Do not put a hand or other staff over the outlet of air dryer or block the outlet of air dryer.
- Never disassemble, repair or modify this product.
- During installation, disassembly, repair and maintenance of the product, the power plug must be switched off and water supply be shut off.

### WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons.

- Close supervision is necessary when this product is used by, on, or near children.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors, operate around aerosol (spray) products or where oxygen is being administered.
- Connect this product to a properly grounded outlet only. See Grounding Instructions.
- Do not throw cigarettes and other burning stuff into toilet, otherwise it might cause fire.
- This product is electric appliance, so it must be placed far away from water. Please don't drench with liquid.
- Do not lay on side or upside the product during the electrical circuit.
- It is prohibited to use other electric appliances in the same socket.
- It is forbidden to use the power extension or unstable loose outlet.
- The old aging water supply hose can not be used, otherwise it might cause leakage, fire or electrical shock. Installation of the bidet seat should include specified components and new water supply hose.

## IMPORTANT SAFETY INSTRUCTIONS

**CAUTION** – Failure to follow the instruction may cause injury or property damage.

1. Do not install or use the product in wet places as steam room etc.
2. It is recommended to use water-proof electrical outlet which should be installed in the place where is not easily got wet.
3. This product should be used with 110V-120V,50/60Hz electrical current only, load current is at least 15A. Power plug must be equipped with ground fault circuit interrupter or ground fault electrical leakage protector or similar high sensitive, rapid type leakage switch (Rated sensitive current under 6mA).
4. When it thunders, it is strongly recommended to pull out the power plug.
5. Do not stand on ceramic toilet.
6. Ceramic toilet must install floor fixing bolt.
7. Do not stand on product unit, seat and cover.
8. Do not lean against the seat cover when using the product, to avoid damage.
9. This product is equipped with soft-closing seal cover. Heavy pressing or pushing may damage the soft-closing damper.
10. Do not use lacquer thinner, petrol, liquid medicine, detergent, insecticide, toilet cleanser and scrubbing brush to clean the product.
11. Exposure to direct sunlight is prohibited.
12. Only use tap water or potable water; otherwise it may cause chafing.
13. Do not connect water supply to heater outlet. Make sure inlet water temperature at 37.4~95°F.
14. When the room temperature is under zero degree, please dry up the water tank, to avoid freezing.
15. Raise rest room temperature to prevent the toilet from damage due to freezing.
16. When move the product from cold or wet environment into normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from electrical short-circuit.
17. When not using the product over three (3) days, drain the water out of the container and pull the electrical plug from the wall outlet.
18. Stop using the product and shut off the power when product malfunctions, please contact the service people for professional service.

### GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.


**DANGER** – Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided – if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

# Avancer Remote

## INSTALLATION INSTRUCTIONS

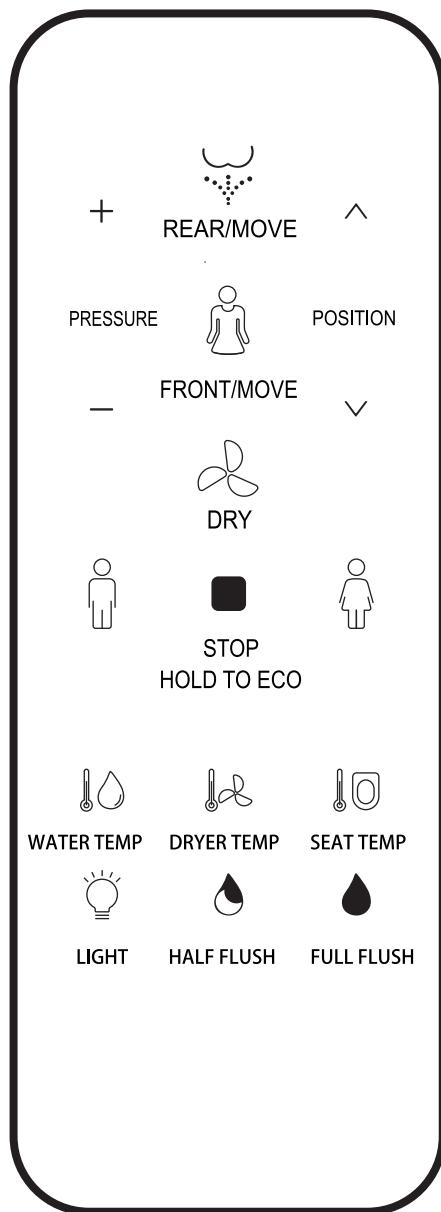



## PRIOR TO INSTALLATION:

- Inspect product to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- All dimensions are nominal! Be sure to measure prior to installation.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

## QUESTIONS OR CONCERNS?

Please contact us:


1-434-623-4766

[info@swissmadison.com](mailto:info@swissmadison.com)

## INCLUDED PARTS:




Smart Seat  
Bidet Remote



Hardware



Wall Mount



Level



Screwdriver



Drill

## SUGGESTED TOOLS & MATERIALS:

## 1 Install Sensor Mount

- The installation method depends on the wall it is being installed on. Determine appropriate installation method and follow the instructions below.


**Method A: Screw fixing** - suitable for installation on rough walls.

**Method B: Adhesive fixing** - suitable for installation on tiles and other smooth walls.

## Method A: Screw Fixing


### 1a Mark & Pre-Drill Holes

- Place the remote wall mount on the wall and mark the location of the two mounting holes. Drill 6 mm diameter holes on the marks with a depth of 35 mm. Make sure the placement is reachable from the toilet seat.

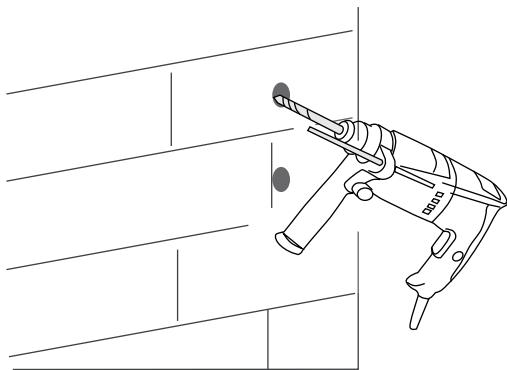

### 1b Install Wall Mount


- Put the anchor into the wall holes and ensure the wall mount is tight against the wall.
- Align the wall mount hole with the anchor and tighten the screw, and then cover with the silicone gasket.

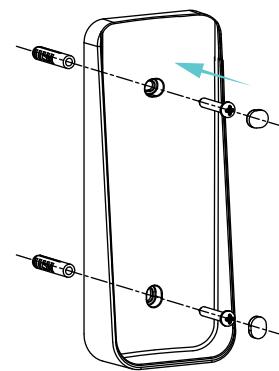

### 1c Install Batteries


- Put batteries into the remote control and put on battery cover.

**NOTE:** Batteries not included

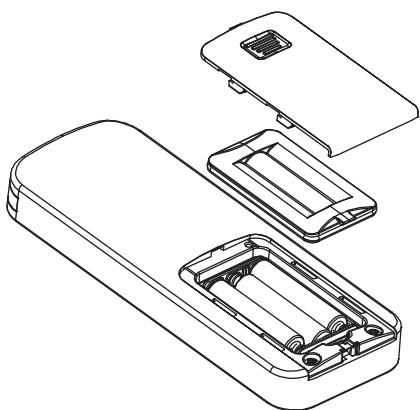

### 1d Hang Remote

- Put remote into the wall mount.

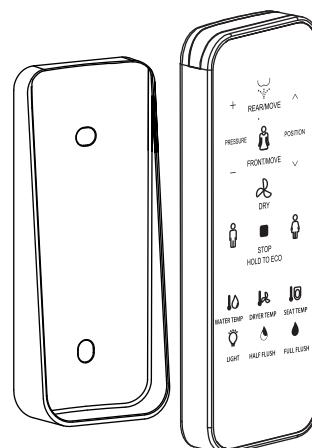


**NOTE:** Please do not install and use the product in moist places such as a steam room, or in a place where it can easily get wet.

## Method B: Adhesive Fixing


### 1a Prep Wall

- Clean and dry the desired installation area on the wall. Make sure the placement is reachable from the toilet seat.

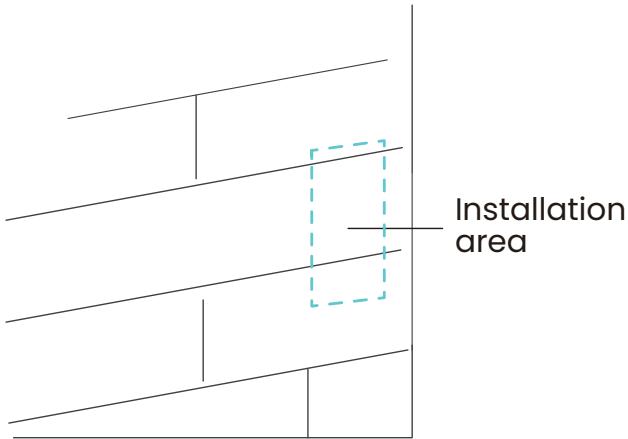

### 1b Install Wall Mount


- Remove the adhesive tape on the back of the wall mount and place it firmly against the wall, then cover with the holes with the silicone gaskets.

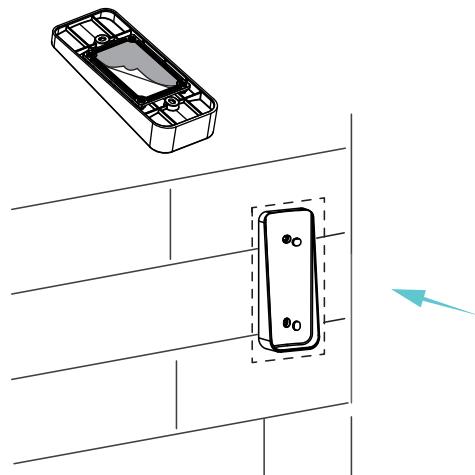

### 1c Install Batteries


- Put batteries into the remote control and put on battery cover.

NOTE: Batteries not included

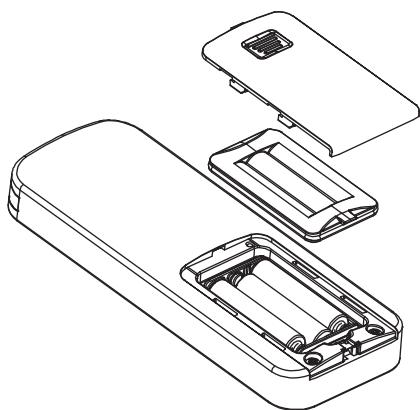


### 1d Hang Remote

- Put remote into the wall mount.

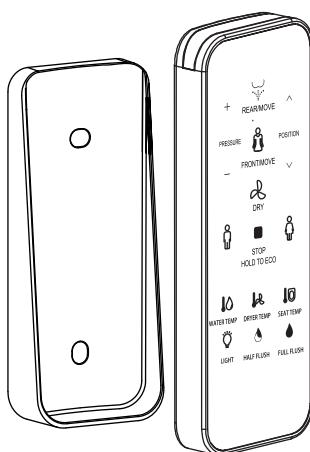

NOTE: Please do not install and use the product in moist places such as a steam room, or in a place where it can easily get wet.

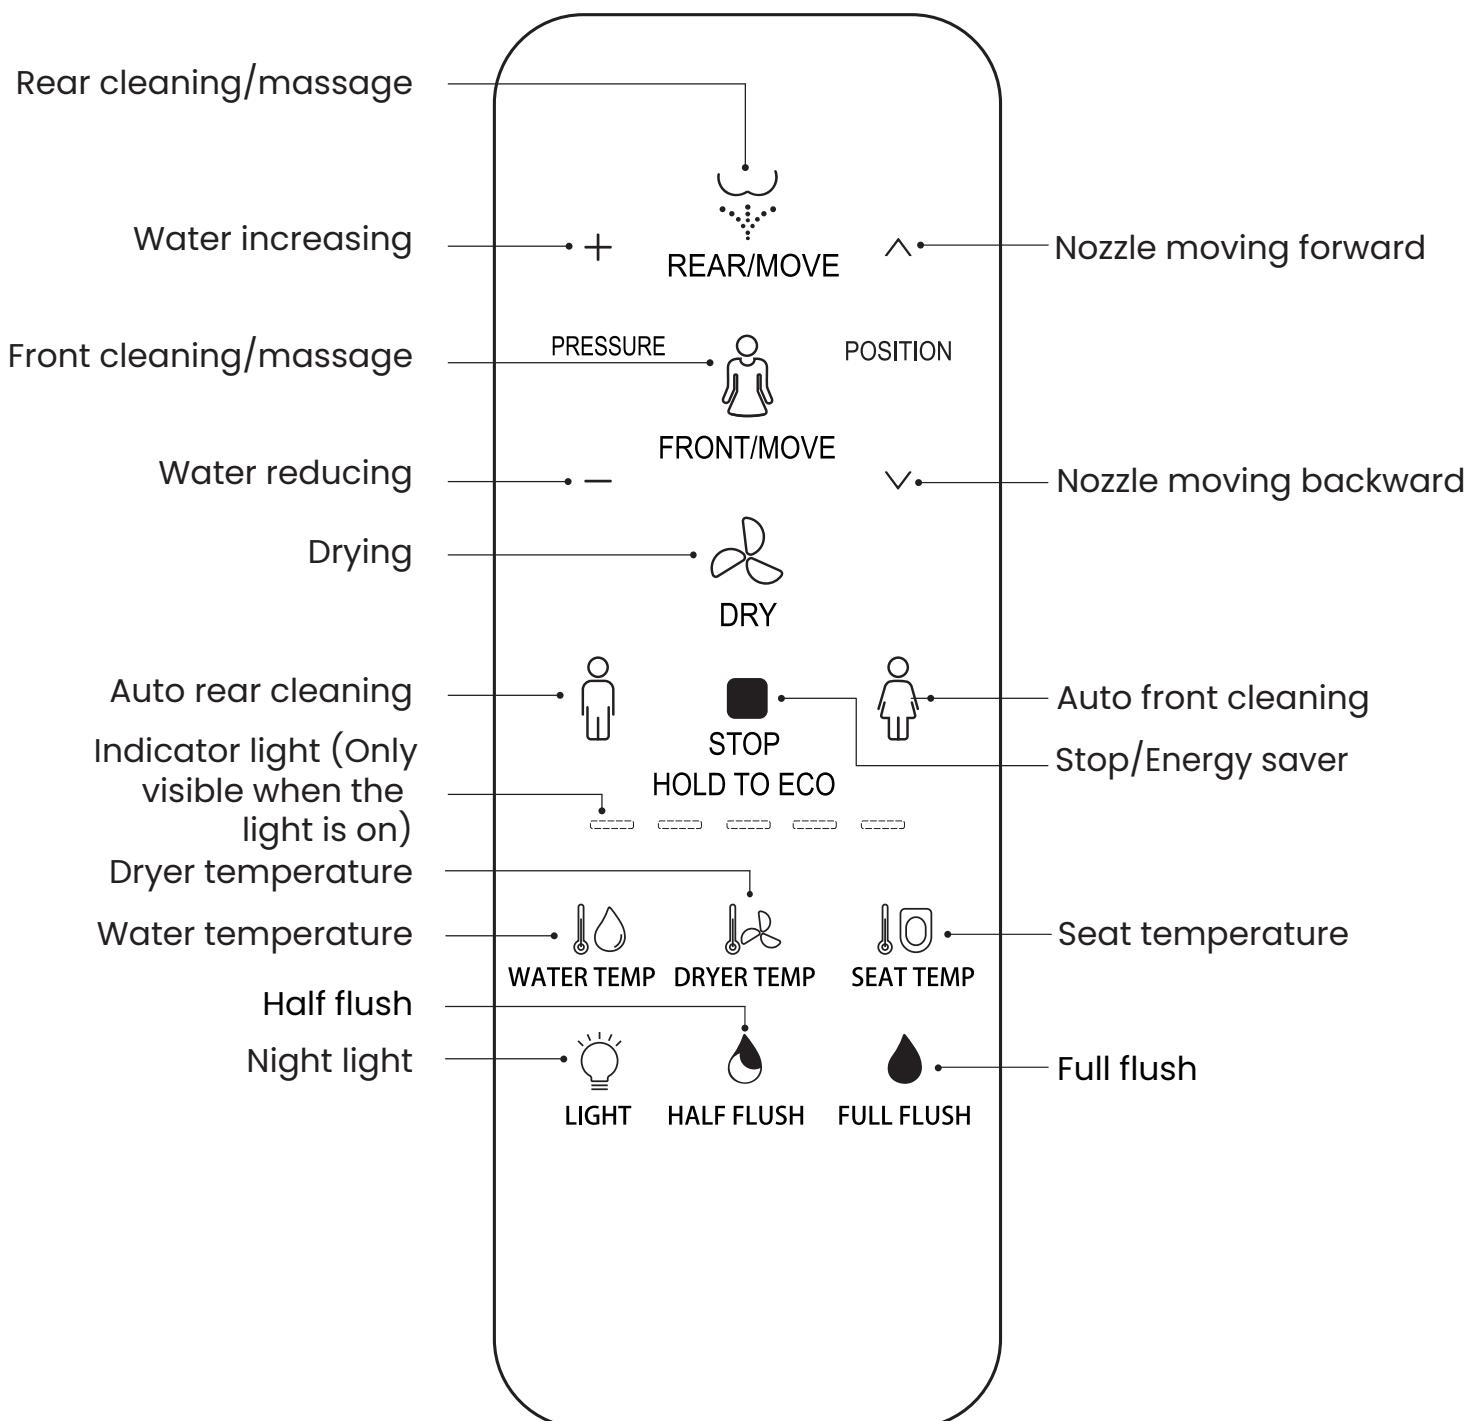


## Rear/Front Cleaning

Press "REAR/MOVE" button, the indicator light will be on to show the current water temperature level and it will begin rear cleaning. Press the "REAR/MOVE" button again to shift to massage cleaning (the nozzle will move forward and backward). The cleaning will last for one cycle and will stop automatically. To stop before the cycle is complete press the "STOP" button.

Press "FRONT/MOVE" button, the indicator light will be on to show the current water temperature level and it will begin front cleaning. Press the "FRONT/MOVE" button again to shift to massage cleaning (the nozzle will move forward and backward). The cleaning will last for one cycle and will stop automatically. To stop before the cycle is complete press the "STOP" button.

## Drying Operation

Press the "DRY" button, the indicator light will be on to show the current wind temperature level and it will begin drying. The drying will stop after a complete cycle or if the user leaves the seat.

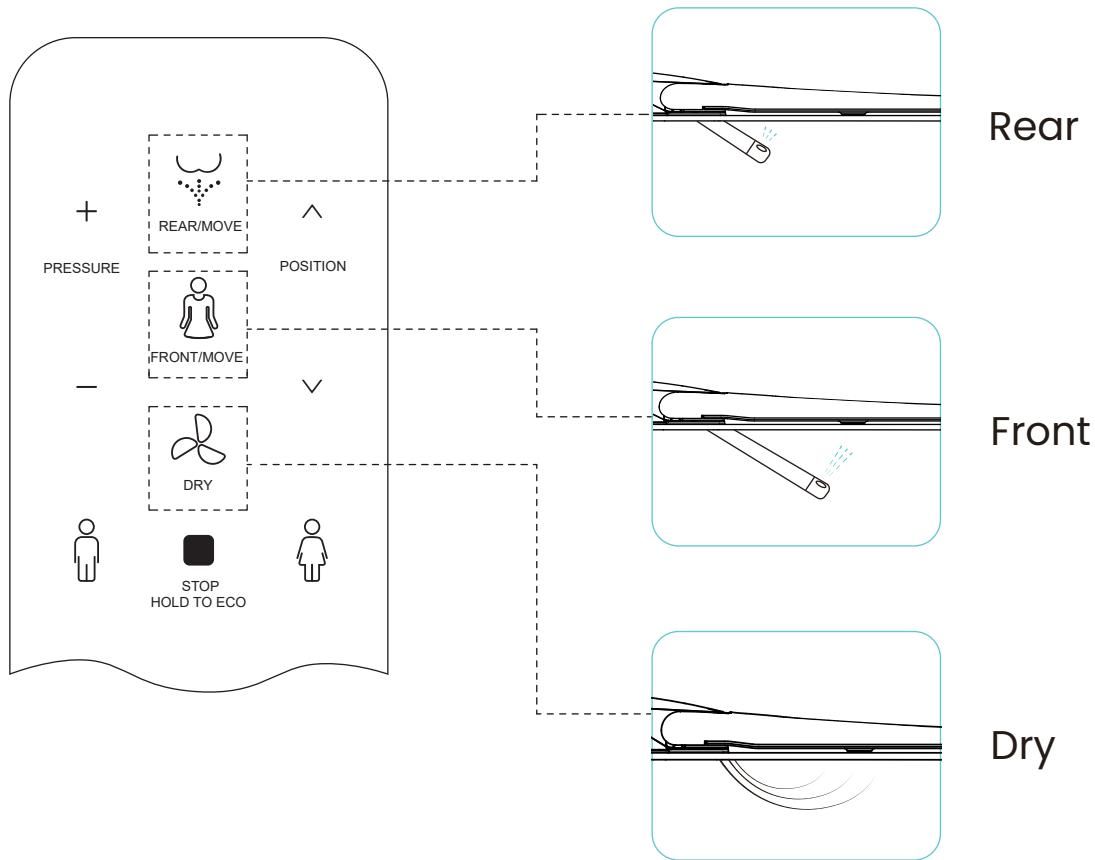


## Water Volume Adjustment

Press “+” or “-” button during rear or front cleaning, the indicator light will be on showing the current water volume adjustment level. The water adjustment has 3 levels.

## Spray Nozzle Position Adjustment

Press “V” or “^” button during rear or front cleaning, the indicator light will be on showing the current nozzle position. The nozzle position adjustment has 5 levels.

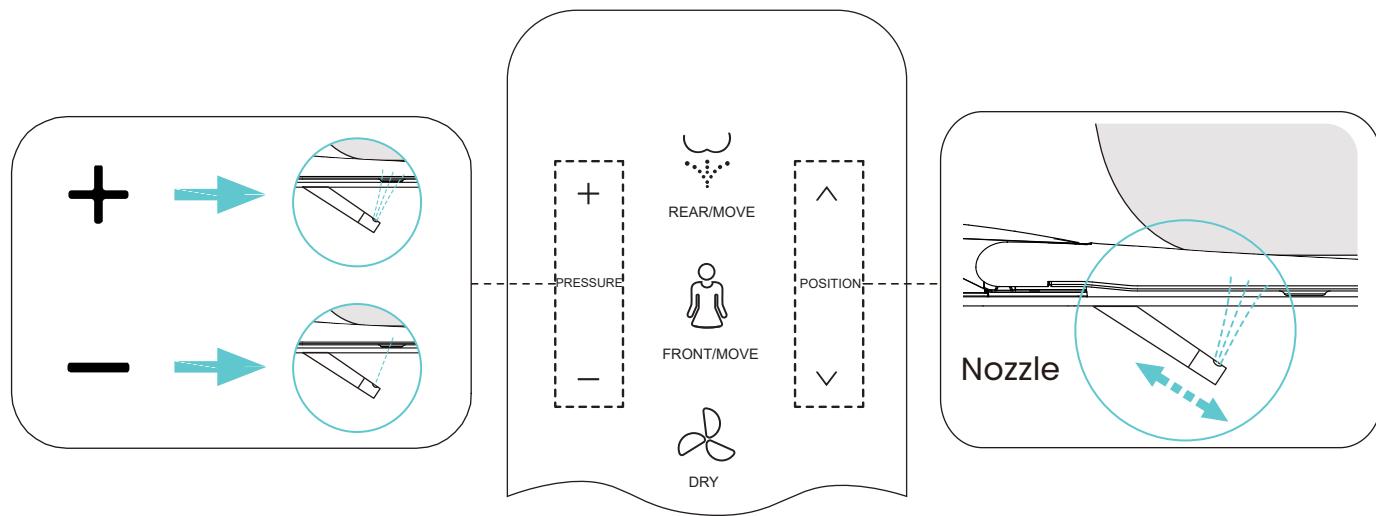


## Half Flush / Full Flush

Press the “FULL FLUSH” button to activate a full flush.

Press the “HALF FLUSH” button to activate a half flush.

Hold the “FULL FLUSH” button to turn on/off the auto flush function. Toilet will automatically flush as you walk away from the bowl. When the user sits less than 60 seconds it will activate a half flush. When the user sits for more than 60 seconds, it will activate a full flush.

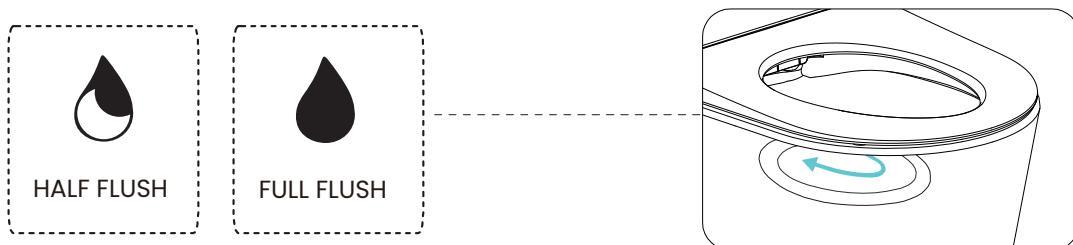

## Energy Saver

Hold the "STOP" button for more than 3 seconds to enter energy saving mode. The indicator light will be off and the energy saving light will be on. Hold the "STOP" button for another 3 seconds to exit energy saving mode. The indicator light will be on and the energy saving light will be off.

During energy saving mode, the seat temperature will be at level 1.

**NOTE:** If user sits on the seat, the energy saver mode is paused and enters into the function mode, the seat starts to heat immediately. The energy saver mode restores after user leaves.

## Auto Function

The automatic function default settings are on the middle level for water volume, nozzle position, water temperature, air temperature and seat temperature.

Quickly pressing the "♂" or the "♀" button will activate automatic male rear wash and female bidet wash.

You can custom set the water volume, nozzle position, water temperature and air temperature. After the setting is complete, hold the automatic user setting button for 3 seconds to save the settings. Your settings will be saved for the next time you press the programmed button. You are able to set the automatic function to enable cleaning and drying.

The automatic function mode will be off if you press another button during operation.



♂ Auto rear cleaning → Rear cleaning 20s → Massage cleaning 30s →  
♀ Rear cleaning 40s → Dry 180s → Automatic stop

♂ Auto front cleaning → Front cleaning 20s → Massage cleaning 30s →  
♀ Front cleaning 40s → Dry 180s → Automatic stop


## Temperature Adjustment

**Water Temperature:** Press the “WATER TEMP” button to adjust the water temperature level from 0 to 5 during a cycle. The indicator will show the water temperature level if it’s on. When the indicator is off, the water temperature level is 0.

**NOTE:** The water temperature is set at 50°F at level 0. If the room temperature is higher than 50°F , the water will not be heated.

**Dryer Temperature:** Press the “DRYER TEMP” button to adjust the dryer temperature level from 0 to 5 during a cycle. The indicator will show the dryer temperature level if it’s on. When the indicator is off, the dryer temperature level is 0.

**Seat Temperature:** Press the “SEAT TEMP” button to adjust the seat temperature level from 0 to 5 during a cycle. The indicator will show the seat temperature level if it’s on. When the indicator is off, the seat temperature level is 0.

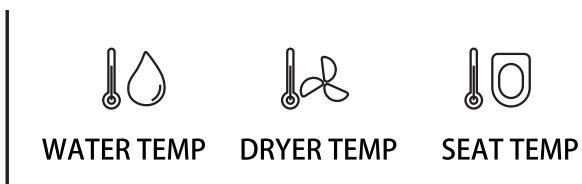

## Night Light

Press the “LIGHT” button to turn on/off the white night light. Hold the “LIGHT” button to enter smart night light mode - in this mode, the night light will be on or off by detecting lightness of surroundings. Press the “LIGHT” button again to exit smart night light mode.



## User Code

The user code needs to be set to avoid disturbance from remote controls when more than one smart toilets are used in the house. Turn on the toilet for setting while turning off others. Press user code combination buttons (Press "STOP" button first and then press "REAR" button) to enter user code setting mode, the indicator lights will be on and keep flashing.

(IR remote control) Press water volume "+" "-" buttons to select user code. The indicator shows the corresponding user code. Press the user code combination buttons again to save settings and exit. The buzzer will beep notifying it is set successfully. When the main unit is powered off to restart or batteries are removed from remote control, the user code will be cleared and need to be reset. After entering setting mode, if there's no operation for 10 seconds, the remote control will exit setting mode automatically and return to previous states.

## Quite Mode

Hold the "SEAT TEMP" button to turn on/off quite mode.

## Foot Sensor

Firstly press and hold the "STOP" key, and press the "FULL FLUSH" key to turn the foot sense function on or off. In the seated status, foot sense function is invalid.

### NOTE:

The buzzer will "BEEP" when the user presses one button which means the main unit received the signal and will conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit didn't receive the signal, then you should adjust the remote control direction and repress the button.

In case of power cut during wand's spray operation, the wand cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.

When a body touches the seat and you hear a "CLICK", the front cleaning, rear cleaning and drying functions are in operation. The nozzle will continue to spray for 1-2 seconds after user stands up during spray operation, so please press "STOP" button before standing up.

## ONE-YEAR LIMITED WARRANTY

Swiss Madison® products are made with quality materials and excellent craftsmanship to provide our customers with beautiful, durable, long-lasting products. Should there be any defects in materials or craftsmanship under regular use that are discovered within the first year after delivery, Swiss Madison® will provide replacement parts at no charge, or at its discretion, replace any product or part of the product that is deemed defective, under normal installation, use, service or maintenance. This warranty applies only to the original purchaser. Proof of purchase must be submitted with any warranty claim.

Swiss Madison® recommends that all installations of Swiss Madison® products to be conducted by a licensed plumber or contractor. Swiss Madison® will not be held responsible for any damage or product failure due to improper installation, misuse, or failure to utilize a licensed plumber or contractor for installation. Swiss Madison® is not responsible for any installation or removal costs.

### THIS ONE-YEAR LIMITED WARRANTY WILL BE VOIDED IF:

- The installation instructions were not followed by the installer
- The product has been moved from its initial place of installation
- The product has in any way been modified from its original condition
- The product has been subjected to improper maintenance, abuse, misuse, excessive use of chemicals, accidents, or other damages

Swiss Madison® makes no warranty that its products comply with any local building or plumbing codes. It is the consumer's responsibility and obligation to determine local code compliance prior to and during installation.

Swiss Madison® is not responsible for any special, incidental or consequential damages associated with the installation, replacement, return or use of the original purchaser's product. This includes, but is not limited to: freight costs, labor, travel time, lost profit, home damages and other contingent liabilities and costs (including, without limitation, costs associated with 'professionals' or 'experts', investigations, audits, analyses, attorneys and any other professional/hired services). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

The Swiss Madison® warranty is a comprehensive and explicit limit of liability. All other warranties are hereby disclaimed and waived.

**QUESTIONS OR CONCERNs?** Please contact us directly at: 1-434-MADISON (623-4766)



### **WARNING:**

Contents of your order may contain sharp and possibly other harmful pieces and may cause hazard to children and adults. Swiss Madison® is not responsible in any way for personal injuries or damages.