

LINDALE PLAYSET FSC - F29360

INSTALLATION AND OPERATING INSTRUCTIONS

WARNING

To reduce the risk of serious injury or death, you must read and follow these instructions. Keep and refer to these instructions often and give them to any future owner of this play set. Manufacturer contact information provided below.

OBSTACLE FREE SAFETY ZONE - 27' 5/8" x 26' 1-1/2" (8.25m x 7.96m) area requires Protective Surfacing. See page 3.


MAXIMUM VERTICAL FALL HEIGHT - 6'4" (1.93m)

CAPACITY - 9 Users Maximum, Ages 3 to 10;

Weight Limit **110 lbs. (49.9 kg)** per child.

RESIDENTIAL HOME USE ONLY. Not intended for public areas such as multi-unit residences, schools, churches, nurseries, day cares or parks.

WARNING. Only for domestic use.

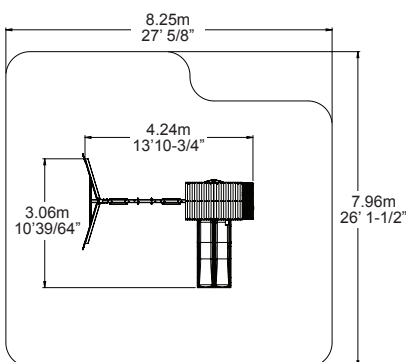

10 - 14 Hrs

**TWO PERSON
ASSEMBLY**



FOR OUTDOOR FAMILY DOMESTIC USE ONLY



Cedar Summit by KidKraft
4630 Olin Road
Dallas, TX 75244, United States

customerservice@kidkraft.com
Online Parts Replacement: parts.kidkraft.com
To warranty your product: kidkraft.com/warranty/
Customer Service: 1(800) 933-0771 or (972) 385-0100

KidKraft Netherlands BV
Olympisch Stadion 8
1076 DE Amsterdam, The Netherlands

Europe Customer Service: +31 (0)20 305 8620
europecustomerservice@kidkraft.com
EU Online Parts Replacement: parts.kidkraft.eu

Table of Contents

Warnings and Safe Play Instructions	pg. 2
Protective Surfacing Guidelines	pg. 3
Instructions for Proper Maintenance	pg. 4
About Our Wood	pg. 5
KidKraft Limited Warranty	pg. 6
Keys to Assembly Success	pg. 7
Part ID	pg. 8
Step-By-Step Instructions	pg. 16
Installation of I.D./Warning Plaque	pg. 72

9409360

Rev 08/13/2020

Warnings and Safe Play Instructions



CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



WARNING

SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

COLLISION HAZARD

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover).

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

WARNING:

Lawn swings are designed for use by children two years of age and older. The use by children under the age of two can result in entrapment between the seat and back rest because the child's body may pass through the opening, causing entrapment of the child's head. Such entrapment may result in strangulation. NEVER place children in a rearward facing position or with legs between the seat and backrest.

STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the playhouse until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).

WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.



WARNING – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- ✓ Dress children with well fitting and full foot enclosing footwear.
- ✓ Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- ✓ Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- ✓ On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.
- ✗ Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- ✗ Do not allow children to walk, in front, between, behind or close to moving rides.
- ✗ Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- ✗ Do not let children get off rides while they are in motion.
- ✗ Do not permit climbing on equipment when it is wet.
- ✗ Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- ✗ Do not allow children to swing empty rides or seats.
- ✗ Do not allow children to go down slide head first or run up slide.

! Protective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2,45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1,5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1,22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles


You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 *Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height - vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below - of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 6 feet (1,8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1,8 m) in all directions.

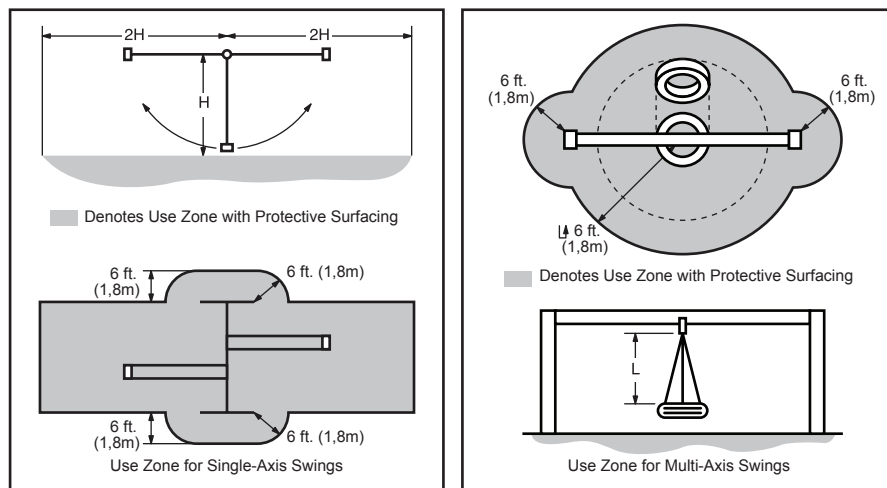



Instructions for Proper Maintenance

Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

Check the following at the beginning of the play season:

HARDWARE:

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies **DO NOT OVER-TIGHTEN** as to cause crushing and splintering of wood.
- ✓ Check for sharp edges or protruding screw threads, add washers if required.

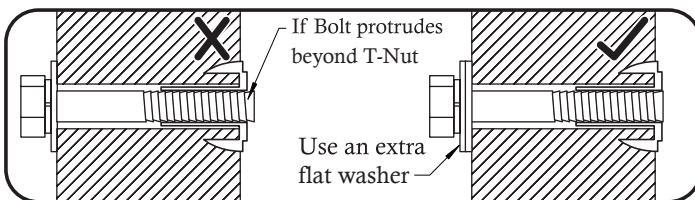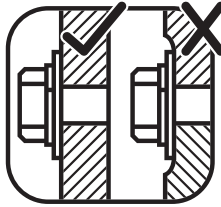

SHOCK ABSORBING SURFACING:

- ✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

GROUND STAKES (ANCHORS):

- ✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary.

SWING HANGERS:

- ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

SWINGS, ROPES AND RIDES:

- ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed.
- ✓ Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment.

WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.

Check twice a month during play season:

HARDWARE:

- ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. **DO NOT OVER-TIGHTEN.** This will cause splintering of wood.
- ✓ Check for sharp edges or protruding screw threads. Add washers if required.

SHOCK ABSORBING SURFACING:

- ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

Check once a month during play season:

SWING HANGERS:

- ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

SWINGS AND RIDES:

- ✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage. Replace if structurally damaged or deteriorated.

Check at the end of the play season:

SWINGS AND RIDES:

- ✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.

SHOCK ABSORBING SURFACING:

- ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.
2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.

KidKraft Limited Warranty

MISSING OR DAMAGED PARTS:

KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig.1

Fig. 1	<u>Product Age (All Parts)</u>	<u>Consumer Pays</u>
	0-90 Days from date of purchase	\$0 for Part + Free Shipping

DEFECTS IN MATERIAL AND WORKMANSHIP:

KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2	<u>Product Age (All Parts)</u>	<u>Consumer Pays</u>
	91 Days to 1 Year	\$0 for Part + Free Shipping

WOOD ROT, DECAY, AND INSECT DAMAGE:

All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty**. See Fig. 3

Fig. 3	<u>Product Age (Wood Parts)</u>	<u>Consumer Pays</u>
	0 Days to 1 Year	\$0 for Part + Free Shipping
	After 1 Year to 5 Year	\$0 for Part + Shipping & Handling
	Over 5 Years	100% for Part (if available) + Shipping & Handling

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.

This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.


Keys to Assembly Success

Tools Required

<ul style="list-style-type: none"> • Tape Measure • Carpenters Level • Carpenters Square • Claw Hammer • Standard or Cordless Drill • Rubber Mallet 	<ul style="list-style-type: none"> • #1 Phillips, #2 Robertson and Screwdriver • Ratchet with extension (1/2" & 9/16" sockets) 	<ul style="list-style-type: none"> • Open End Wrench (1/2" & 9/16") • Adjustable Wrench • 1/8" & 3/16" Drill Bits 	<ul style="list-style-type: none"> • 3/16" Hex Key • 8' Step Ladder • Safety Glasses • Adult Helpers • Pencil
---	--	--	--

Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.

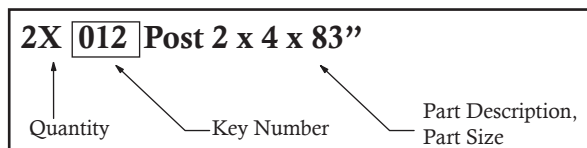


Symbols

Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

<p>This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.</p>		<p>Check that set or assembly is properly level before proceeding.</p> <p>Use Level</p>
<p>Use Help</p>	<p>Use Help</p>	<p>Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!</p>
<p>Measure Distance</p>	<p>Check that assembly is square before tightening bolts.</p>	<p>Square Assembly</p>
<p>Use a measuring tape to assure proper location.</p>		<p>Pre-drill 1/8" & 3/16" Bit</p> <p>Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.</p> <p>Tighten Bolts</p> <p>This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.</p>

CAUTION – Protrusion Hazard

Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.

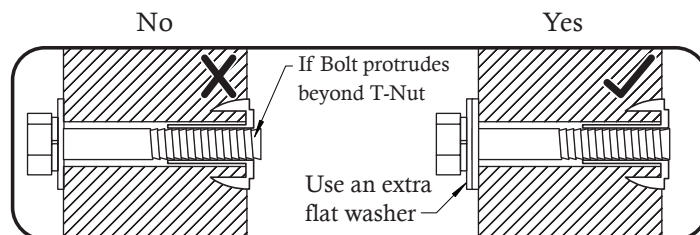


Proper Hardware Assembly


Lag screws require drilling pilot holes to avoid splitting wood. Only a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.


For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" is slightly larger than 1/4".


Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.

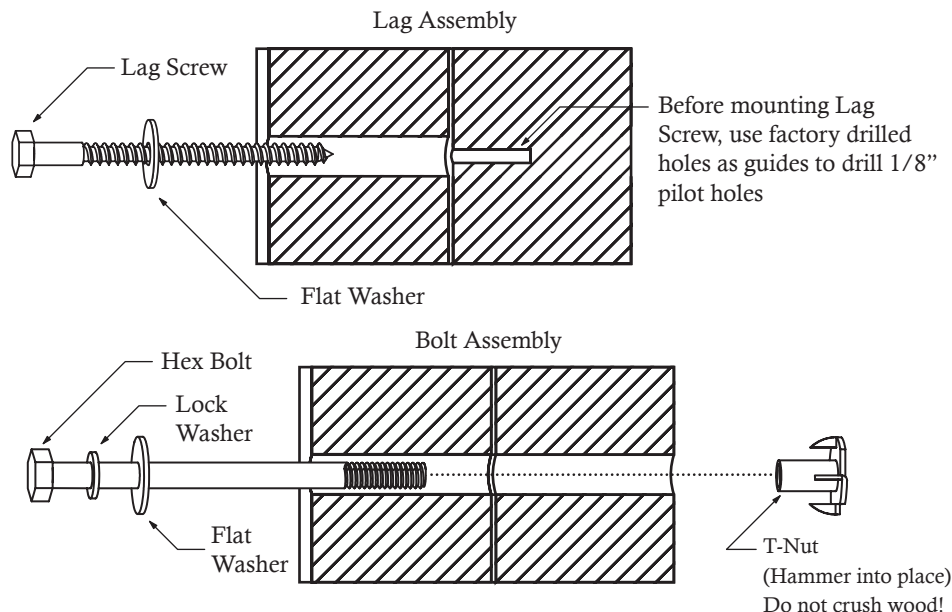



Part Identification (Reduced Part Size)


4x - 9819 - 15.9 x 76.2 x 878.9 mm - 3839819
 5/8 x 3 x 34-5/8"


1x - 9820 - 15.9 x 76.2 x 878.9 mm - 3839820
 5/8 x 3 x 34-5/8"

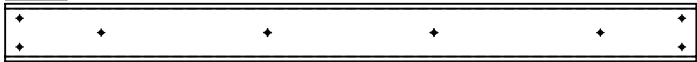
1x - 9821 - 15.9 x 76.2 x 914.4 mm - 3589821
 5/8 x 3 x 36"

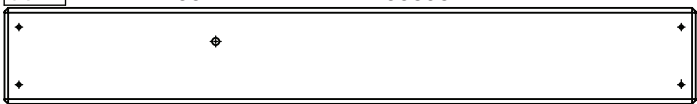
2x - 9824 - 15.9 x 133.4 x 914.4 mm - 3589824
 5/8 x 5-1/4" x 36"

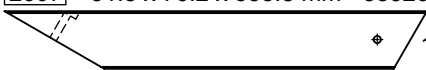
2x - 2607 - 31.8 x 76.2 x 558.8 mm - 3832607
 1-1/4 X 3 X 22"

2x - 9833 - 15.9 x 133.4 x 914.4 mm - 3589833
 5/8 x 5-1/4" x 36"

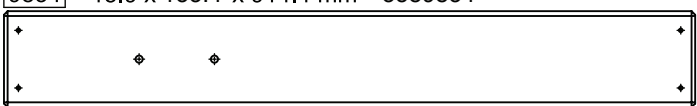2x - 9834 - 15.9 x 133.4 x 914.4 mm - 3589834
 5/8 x 5-1/4" x 36"

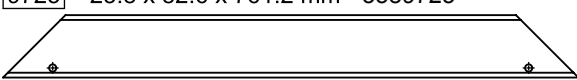
1x - 9725 - 23.8 x 82.6 x 761.2 mm - 3589725
 15/16 x 3-1/4 x 30"

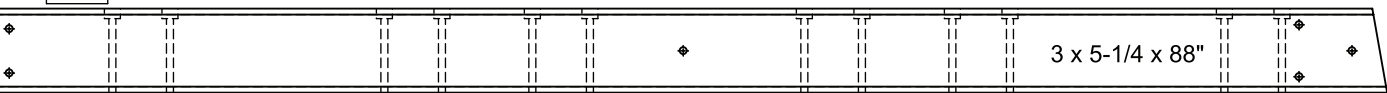1x - 2614 - 76.2 x 133.4 x 2235.2 mm - 3832614
 3 x 5-1/4 x 88"


1x - 9885 - 15.9 x 63.5 x 849.8 mm - 3839885
 5/8 x 2-1/2 x 33-7/16"

Part Identification (Reduced Part Size)

1x - 9306 - 31.8 x 914.4 x 2336.8mm - 37839306
1-1/4 x 36 x 92"

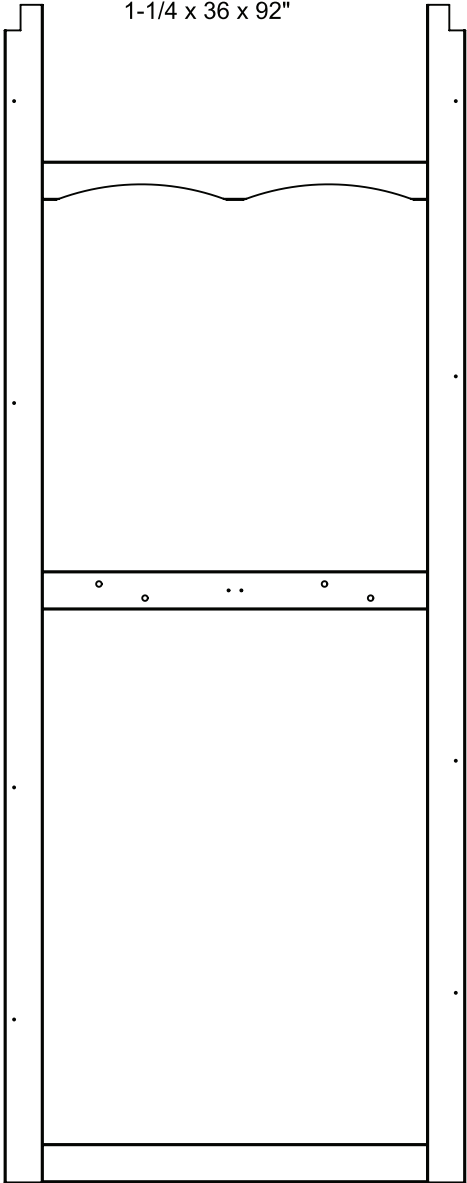

1x - 9307 - 31.8 x 914.4 x 2336.8mm - 37839307
1-1/4 x 36 x 92"

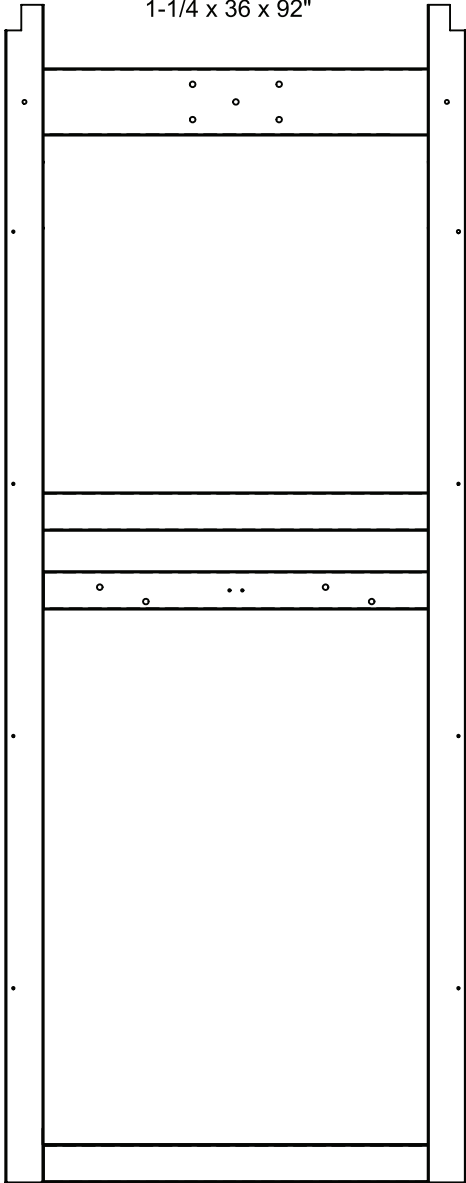

Part Identification (Reduced Part Size)


2x - [9814] - 38.1 x 38.1 x 1141 mm - 3839814




1x - [9815] - 38.1 x 76.2 x 1143 mm - 3839815



9x - [9816] - 15.9 x 114.3 x 848.8 mm - 3589816




1x - [9817] - 15.9 x 88.9 x 848.8 mm - 3589817




2x - [9822] - 38.1 x 63.5 x 1244.6 mm - 3589822




1x - [9823] - 15.9 x 133.4 x 914.4 mm - 3589823




2x - [9825] - 31.8 x 50.8 x 1371.6 mm - 3839825




4x - [9826] - 31.8 x 50.8 x 898.1 mm - 3839826



1x - [9723] - 23.8 x 82.6 x 905.7 mm - 3589723




1x - [2615] - 76.2 x 76.2 x 1294.3 mm - 3832615




1x - [2616] - 23.8 x 82.6 x 1181.1 mm - 3832616



2x - [2613] - 50.8 x 76.2 x 2201.9 mm - 3832613



2x - [2606] - 23.8 x 82.6 x 362.0 mm - 3832606




8x - [9812] - 31.8 x 76.2 x 387.4 mm - 3839812




7x - [9818] - 15.9 x 76.2 x 396.2 mm - 3839818



3x - [9813] - 31.8 x 38.1 x 990.6 mm - 3839813




1x - [9726] - 23.8 x 82.6 x 592.3 mm - 3589726





2x - [9724] - 23.8 x 82.6 x 584.8 mm - 3589724




Part Identification (Reduced Part Size)

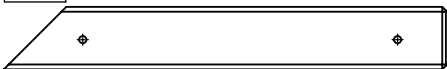2x - [9727] - 23.8 x 82.6 x 584.8 mm - 3589727
 15/16 x 3-1/4 x 23"

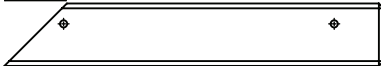
2x - [9728] - 23.8 x 82.6 x 500.2 mm - 3589728
 15/16 x 3-1/4 x 19-11/16"

2x - [9729] - 23.8 x 101.6 x 584.8 mm - 3589729
 15/16 x 4 x 23"

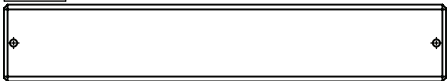1x - [9730] - 23.8 x 101.6 x 584.8 mm - 3589730
 15/16 x 4 x 23"


1-1/8 x 37-1/2 x 39-15/16"
1x - [9312] - 28.6 x 952.5 x 1014.4mm - 37589312

.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.






1-1/8 x 37-1/2 x 39-11/16"
1x - [9313] - 28.6 x 952.5 x 1008mm - 37589313

.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.
.	.	.



Part Identification (Reduced Part Size)

1-1/4 x 45 x 90"
1x - 9314 - 31.8 x 1143 x 2286mm - 37839314

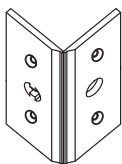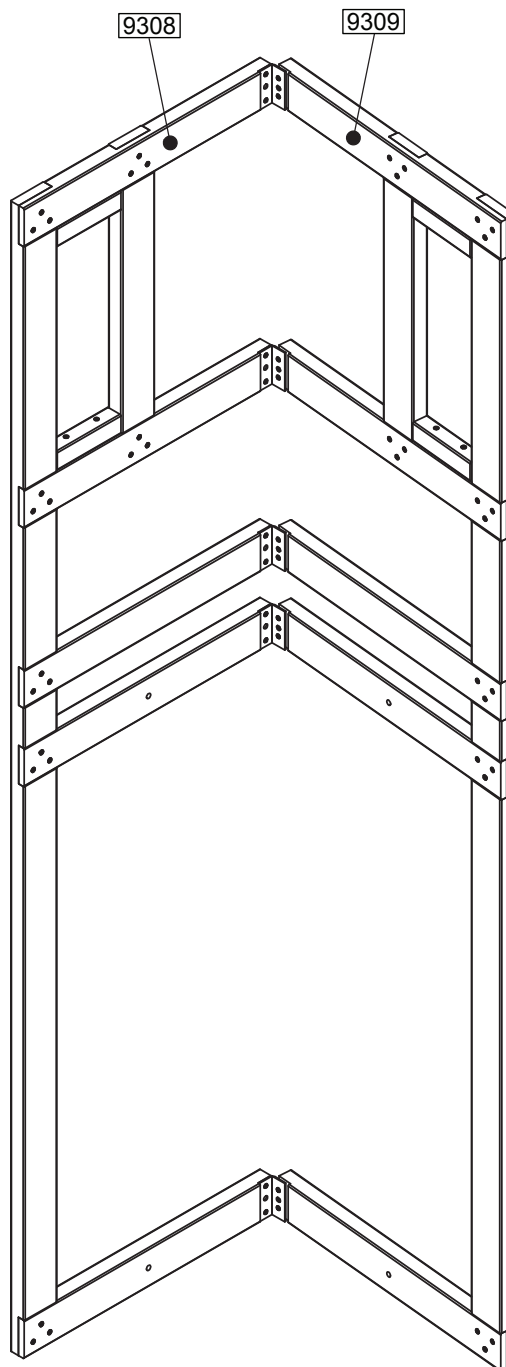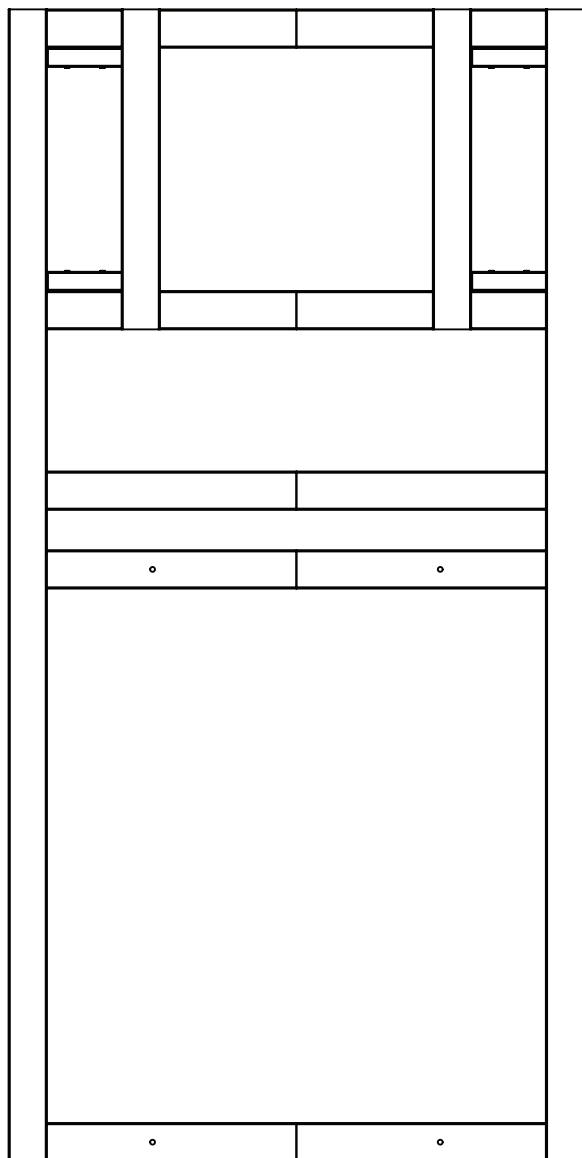

9327884



(S0) - 52933505

If you need to order parts, please order below part #

9308 - 37839308 - Window Panel Left - 1pc

9309 - 37839309 - Window Panel Right -1pc




9327884 - Hinge - 1pc

(S0) - 52933505 - Truss Screw #8 x 7/8" - 1pc

Part Identification (Reduced Part Size)

1-1/4 x 45 x 90"

1x - [9315] - 31.8 x 1143 x 2286mm - 37839315

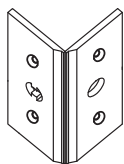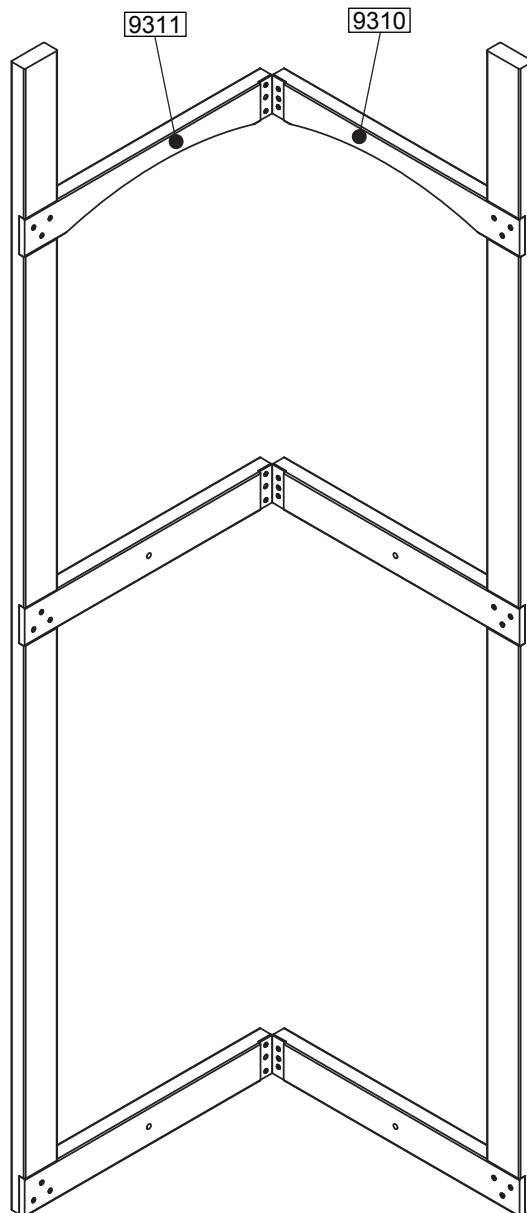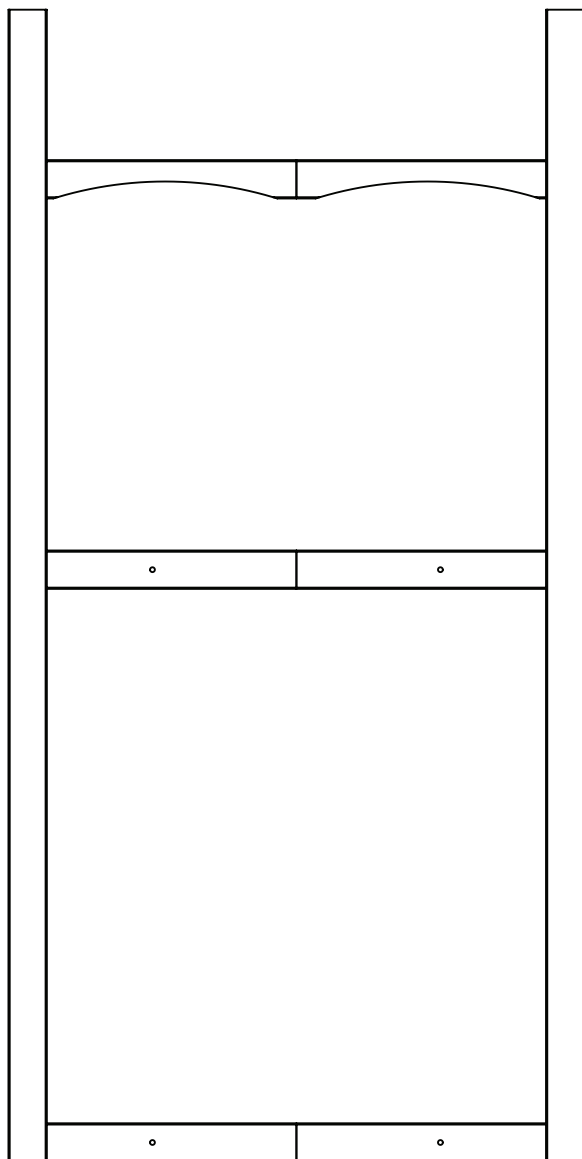

9327884



(S0) - 52933505

If you need to order parts, please order below part #

[9310] - 37839310 - Panel - 1pc

[9311] - 37839311 - Ride Maze Panel Right -1pc


9327884 - Hinge - 1pc

(S0) - 52933505 - Truss Screw #8 x 7/8" - 1pc

Hardware Identification (Actual Size)


11x - **LW2** - 5/16" - 51303300

7.9mm




12x - **FW1** - 1/4" - 51103200

6.4mm

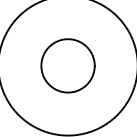


8x - **TN1** - 1/4" - 54503200

6.4mm

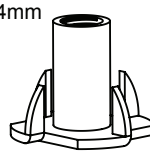

19x - **TN2** - 5/16" - 54503300

7.9mm

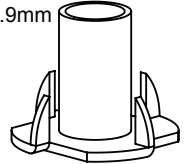


18x - **LW1** - 1/4" - 51303200

6.4mm




71x - **FW2** - 5/16" - 51103300

7.9mm

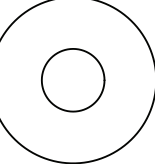


23x - **LN2** - 5/16" - 54303300

7.9mm

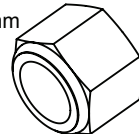

10x - **BN1** - 1/4" - 54803200

6.4mm

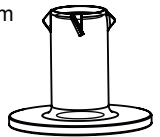


12x - **FW3** - #8 - 51003500




10x - **FW0** - 3/16" - 51103100

4.8mm



10x - **PB2** - 1/4 x 1-1/4" - 53433212

6.4 x 31.8mm




49x - **S7** - #12 x 2" - 52433620

50.8mm




2x - **S10** - #8 x 1" - 52433510

25.4mm




4x - **S18** - #6 x 1" - 52013910

25.4mm



24x - **S37** - #7 x 5/8" - 52433009

15.8mm



40x - **S0** - #8 x 7/8" - 52933505

22.2mm




4x - **S11** - #8 x 2" - 52043520

50.8mm



4x - **WL3** - 1/4 x 1-3/8" - 52613216

34.9mm

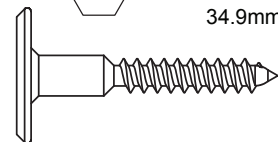


120x - **S20** - #8 x 1-3/8" - 52043516

34.9mm



18x - **WL5** - 1/4 x 2-1/2" - 52613222

6.4 x 63.5mm

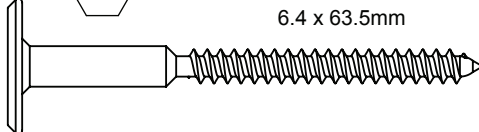


28x - **S3** - #8 x 2-1/2" - 52043522

63.5mm




8x - **H1** - 1/4 x 1-1/2" - 53703212

6.4 x 38.1mm



4x - **G27** - 5/16 x 1-3/4" - 53703313

7.9 x 44.5mm




24x - **S4** - #8 x 3" - 52043530

76.2mm




8x - **WB7** - 5/16 x 3" - 53613330

7.9 x 76.2mm




4x - **WB10** - 5/16 x 2-5/8" - 53613329

7.9 x 66.7mm

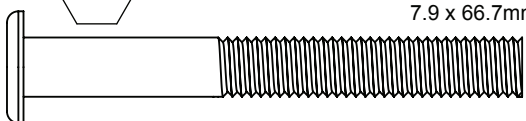


2x - **WB9** - 5/16 x 2-1/8" - 53613324

7.9 x 54mm





7x - **G21** - 5/16 x 3-3/4" - 53703333

7.9 x 95.3mm

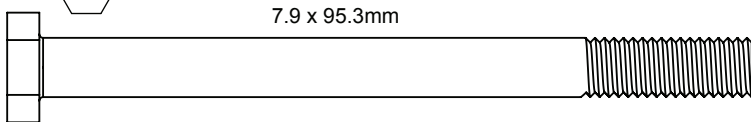

3x - **G4** - 5/16 x 4" - 53703340

7.9 x 101.5mm

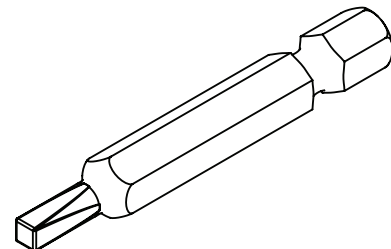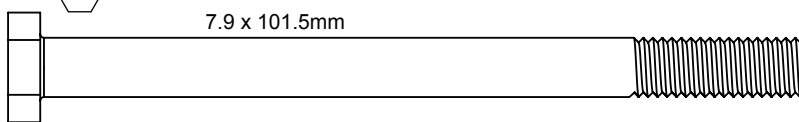


1x - **D4** - #2 x 2 - 9200014

14x - **G7** - 5/16 x 5-1/2" - 53703352



7.9 x 139.7mm



Part Identification (Reduced Part Size)

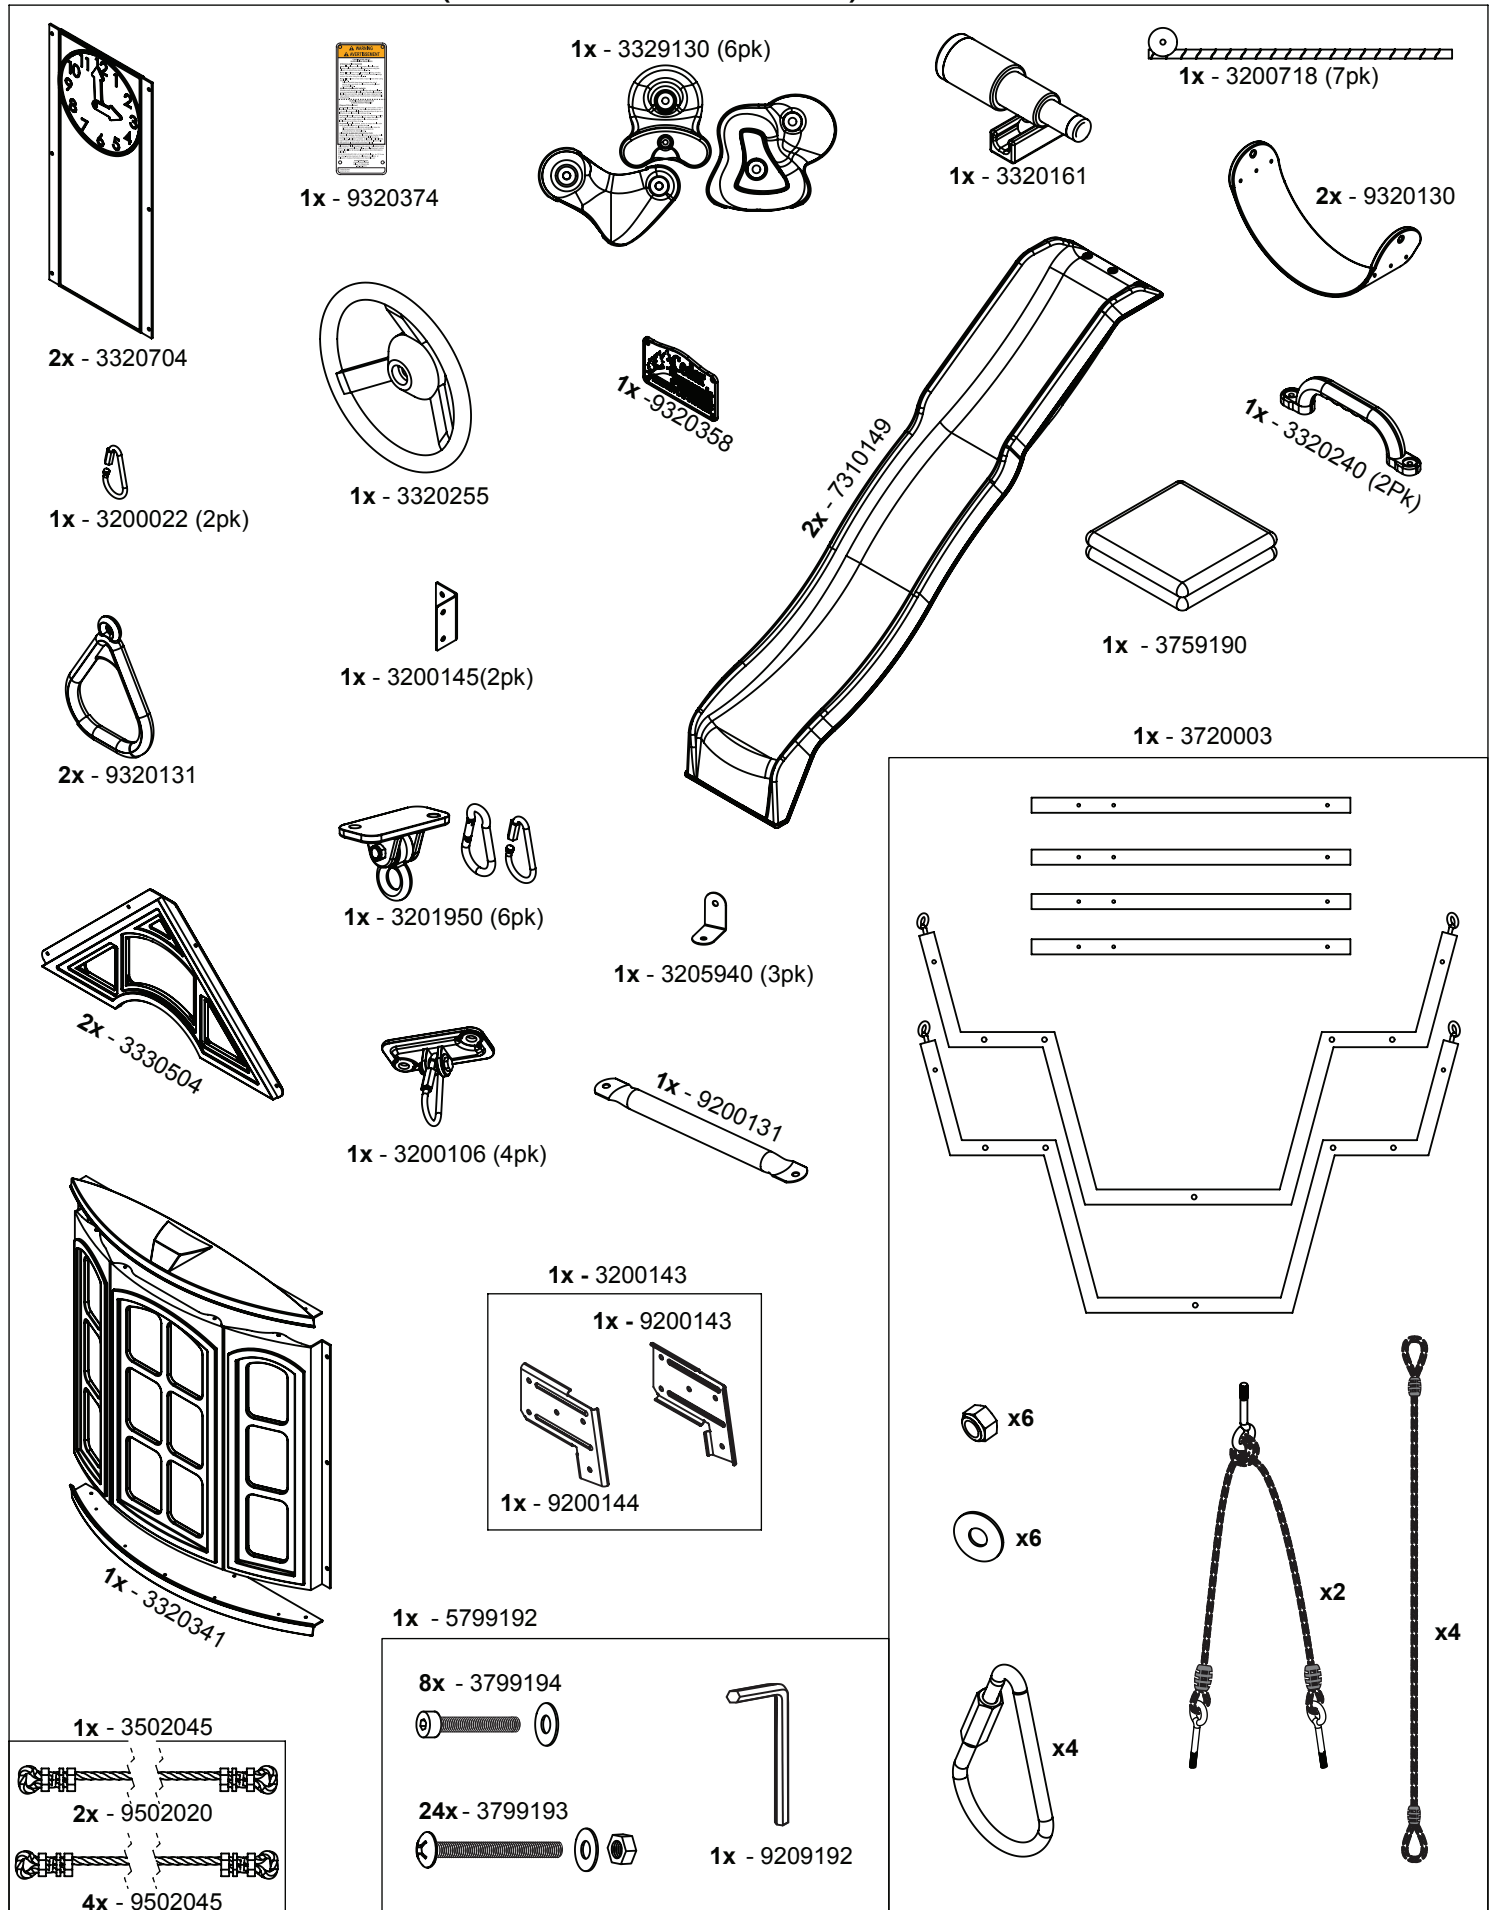


Step 1: Inventory Parts - Read This Before Starting Assembly

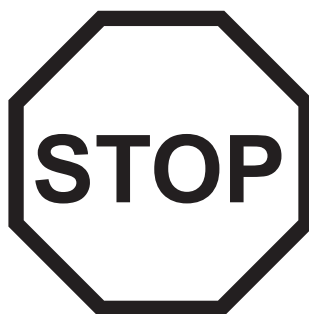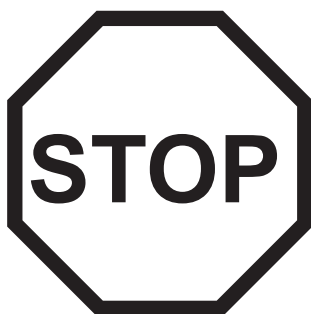

A. This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.

- The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.

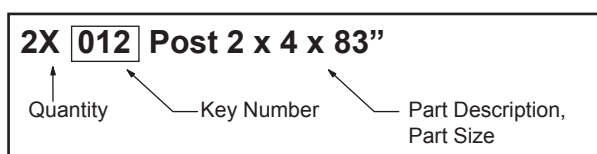

- Please refer to Page 7 for proper hardware assembly.
- Each step indicates which bolts and/or screws you will need for assembly, as well as any flat washers, lock washers, t-nuts or lock nuts.

B. If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. Call us before going back to the store.

customerservice@kidkraft.com

Online Parts Replacement: parts.kidkraft.com

To warranty your product: kidkraft.com/warranty/

Customer Service:

1(800) 933-0771 or (972) 385-0100

Europe Customer Service: +31 (0)20 305 8620

europecustomerservice@kidkraft.com

EU Online Parts Replacement: parts.kidkraft.eu

C. Read the assembly manual completely, paying special attention to EN71 and ASTM warnings; notes; and safety/maintenance information on pages 1 - 7.

D. Before you discard your cartons fill out the form below.

- The carton I.D. stamp is located on the end of each carton. The tracking number is located on the KidKraft ID Plaque (9320374).
- Please retain this information for future reference. You will need this information if you contact the Consumer Relations Department.

MODEL NUMBER: **F29360**

CARTON I.D. STAMP: ____ (Box 1)

CARTON I.D. STAMP: ____ (Box 4)

CARTON I.D. STAMP: ____ (Box 2)



CARTON I.D. STAMP: ____ (Box 5)

CARTON I.D. STAMP: ____ (Box 3)

CARTON I.D. STAMP: ____ (Box 6)


TRACKING NUMBER (from ID Plaque): _____

Step 2

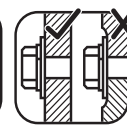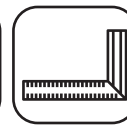

Pre-drill each hole using
a 3/16" drill bit for WL5.

IMPORTANT: Note hole orientation.

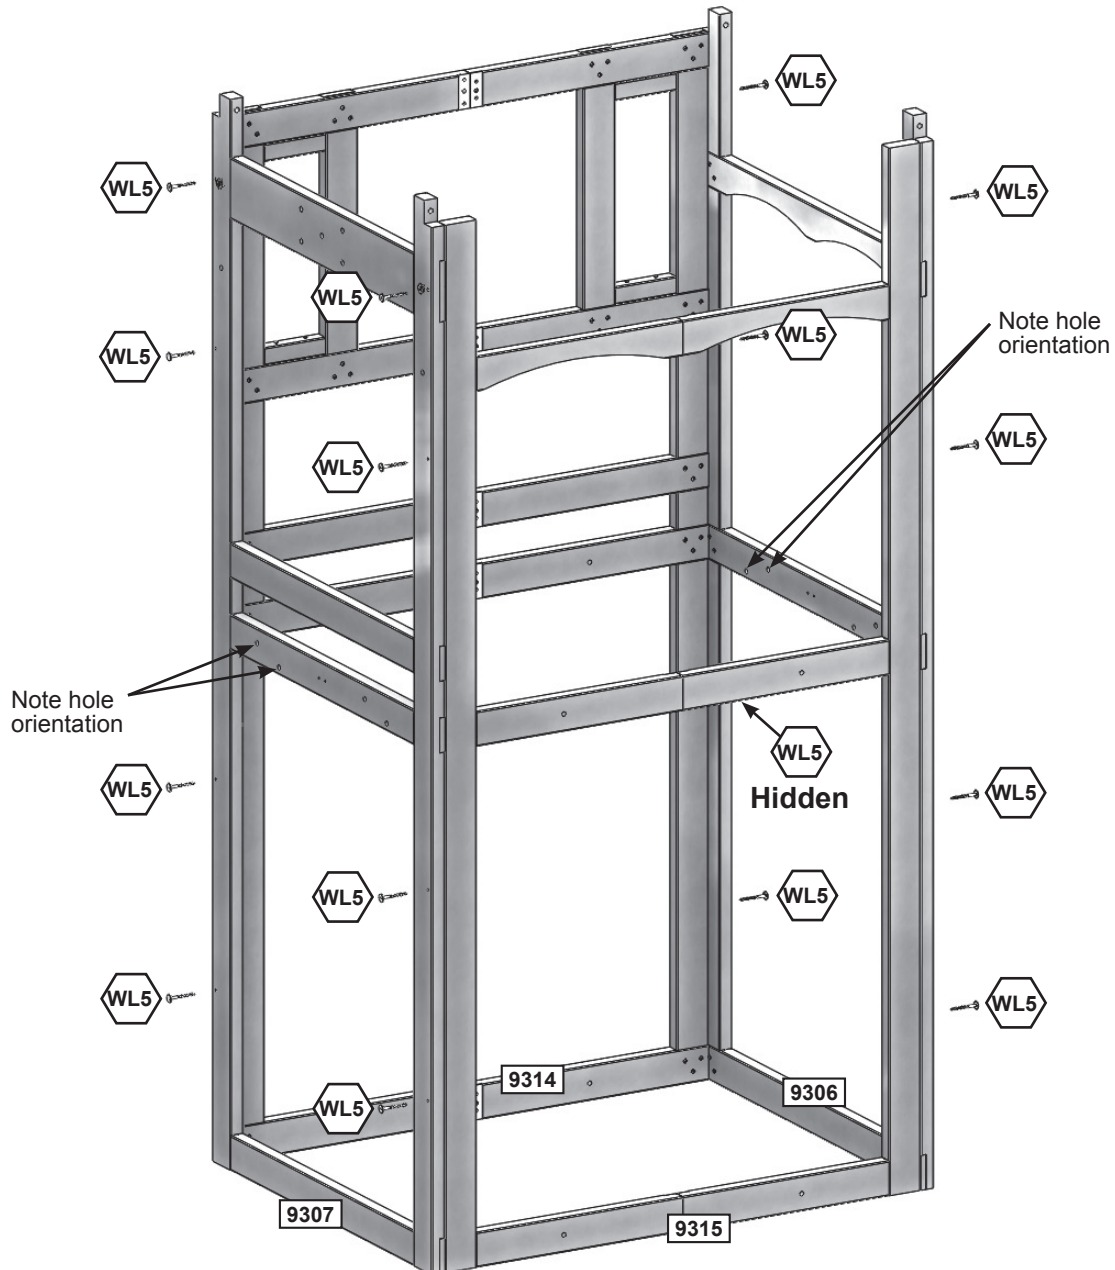

Wood Parts


- 1 x **9314** 31.8 x 1043 x 3386mm (1-1/4 x 45 x 90")
- 1 x **9307** 31.8 x 914.4 x 2336.8 mm (1-1/4 x 36 x 92")
- 1 x **9315** 31.8 x 1043 x 3386mm (1-1/4 x 45 x 90")

- 1 x **9306** 31.8 x 914.4 x 2336.8 mm (1-1/4 x 36 x 92")

Hardware

- 16 x **WL5** 6.4 x 63.5 mm (1/4 x 2-1/2")

Step 3

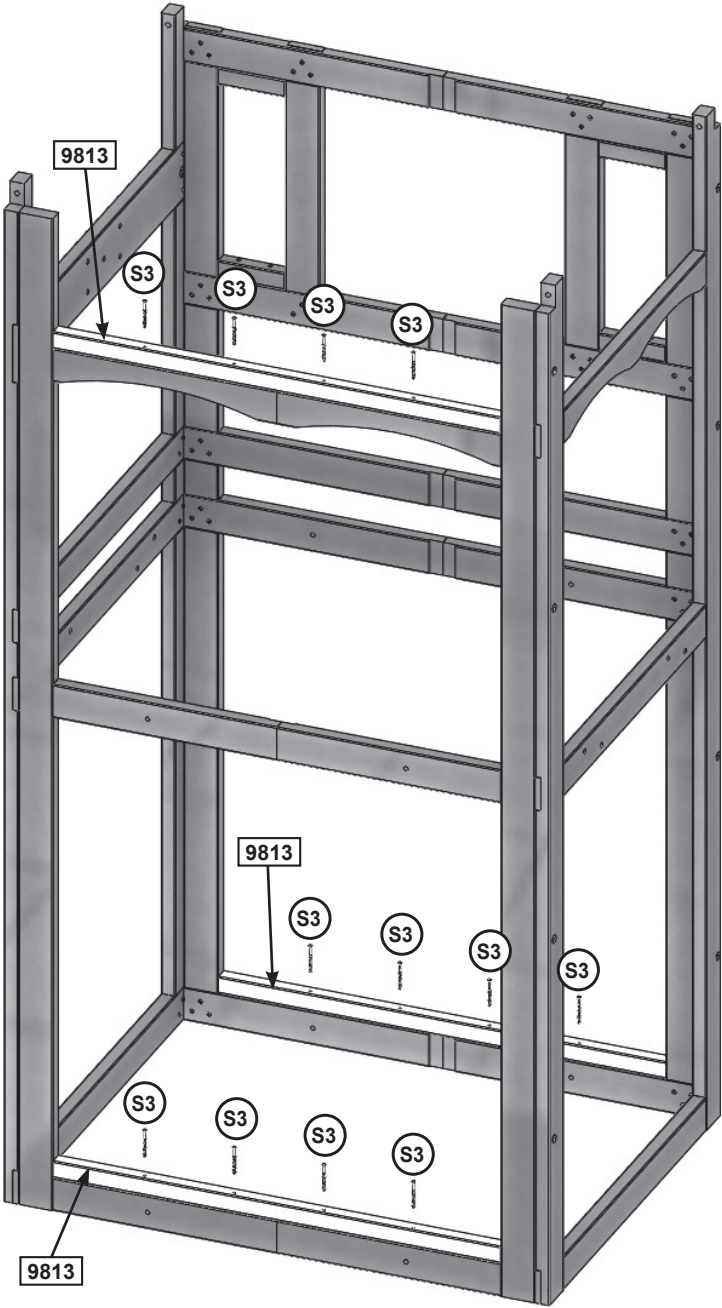


Wood Parts

3 x 9813 31.8 x 38.1 x 990.6 mm (1-1/4 x 1-1/2 x 39")

Hardware

12 x S3 #8 x 63.5 mm (#8 x 2-1/2")

Step 4

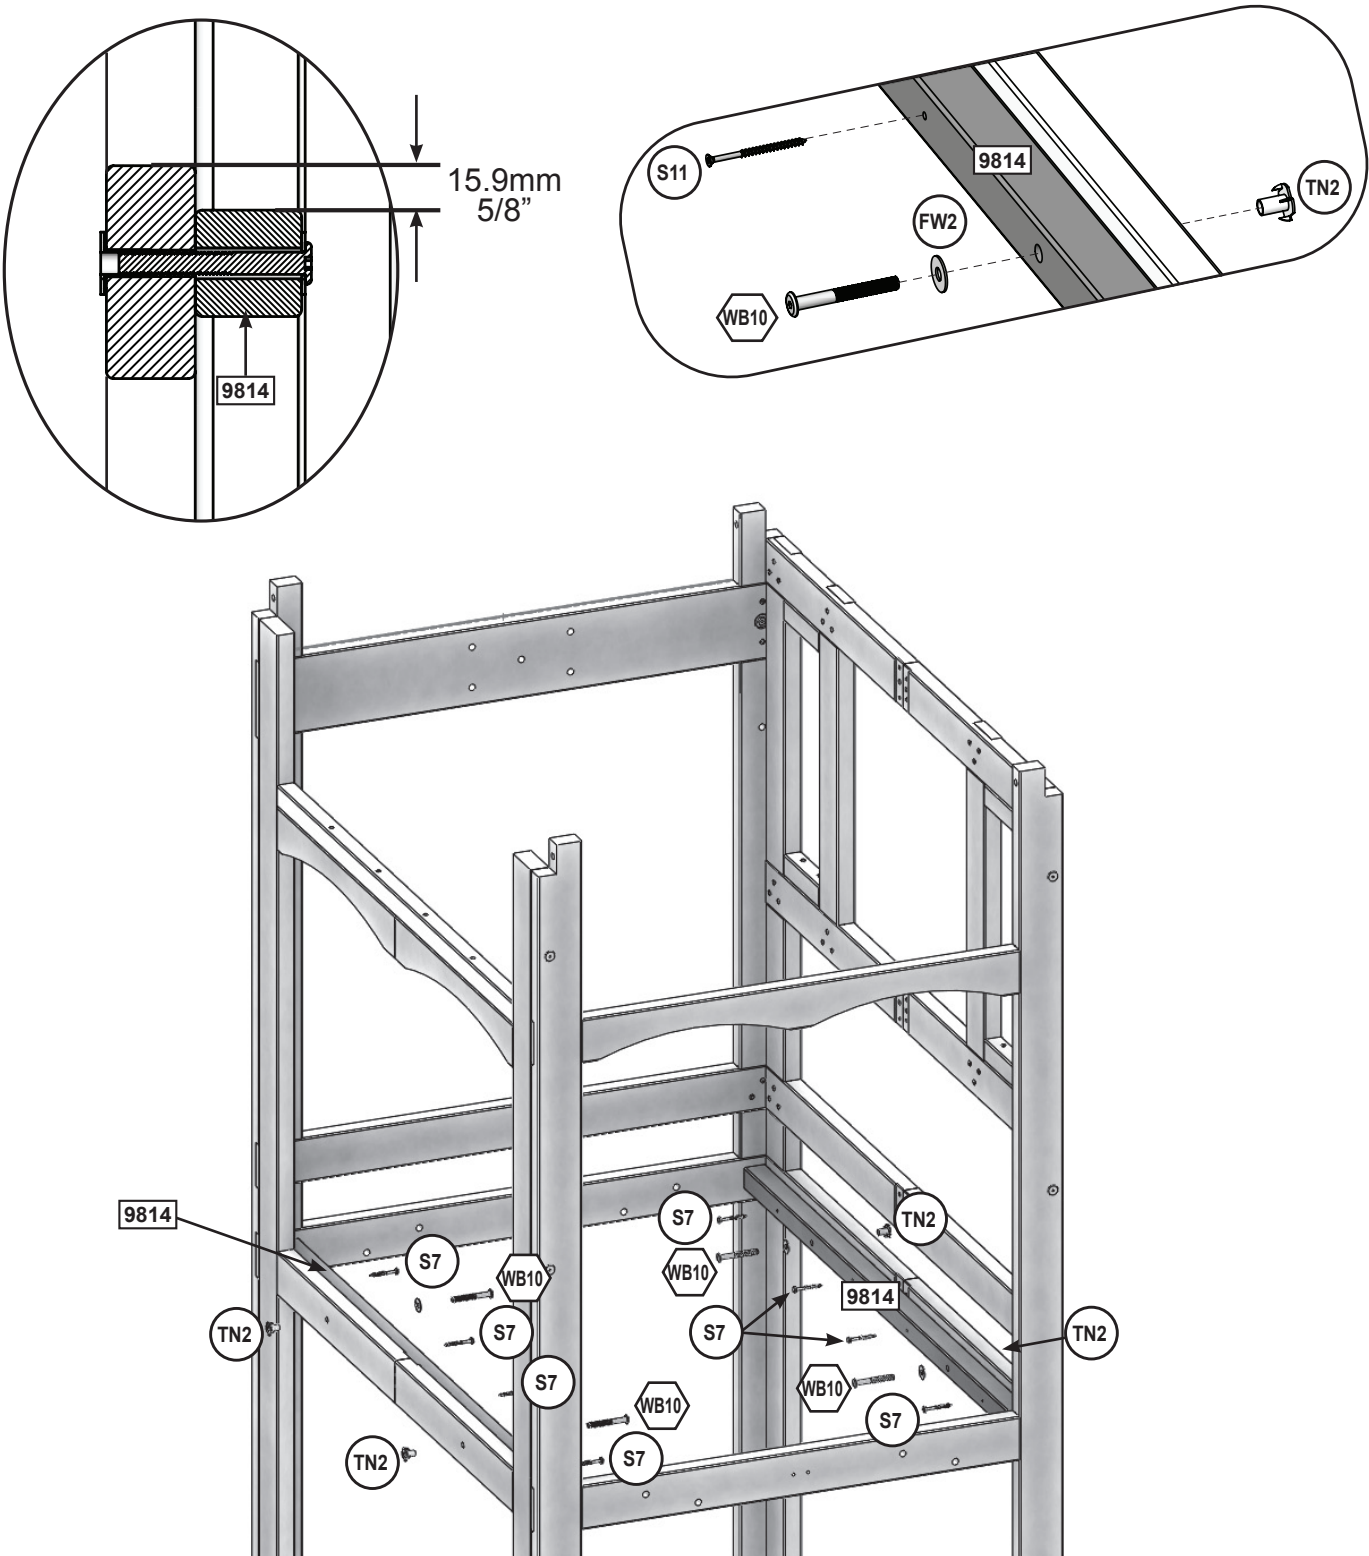

Wood Parts



2 x 9814 38.1 x 38.1 x 1141 mm (1-1/2 x 1-1/2 x 44-15/16")

Hardware

4 x WB10 7.9mm x 66.6 mm (5/16 x 2-5/8")(FW2, TN2)

8 x S7 #12 x 50.8mm (#12 x 2")

Step 5

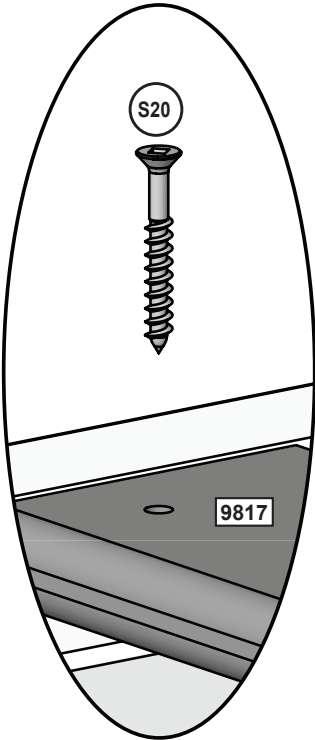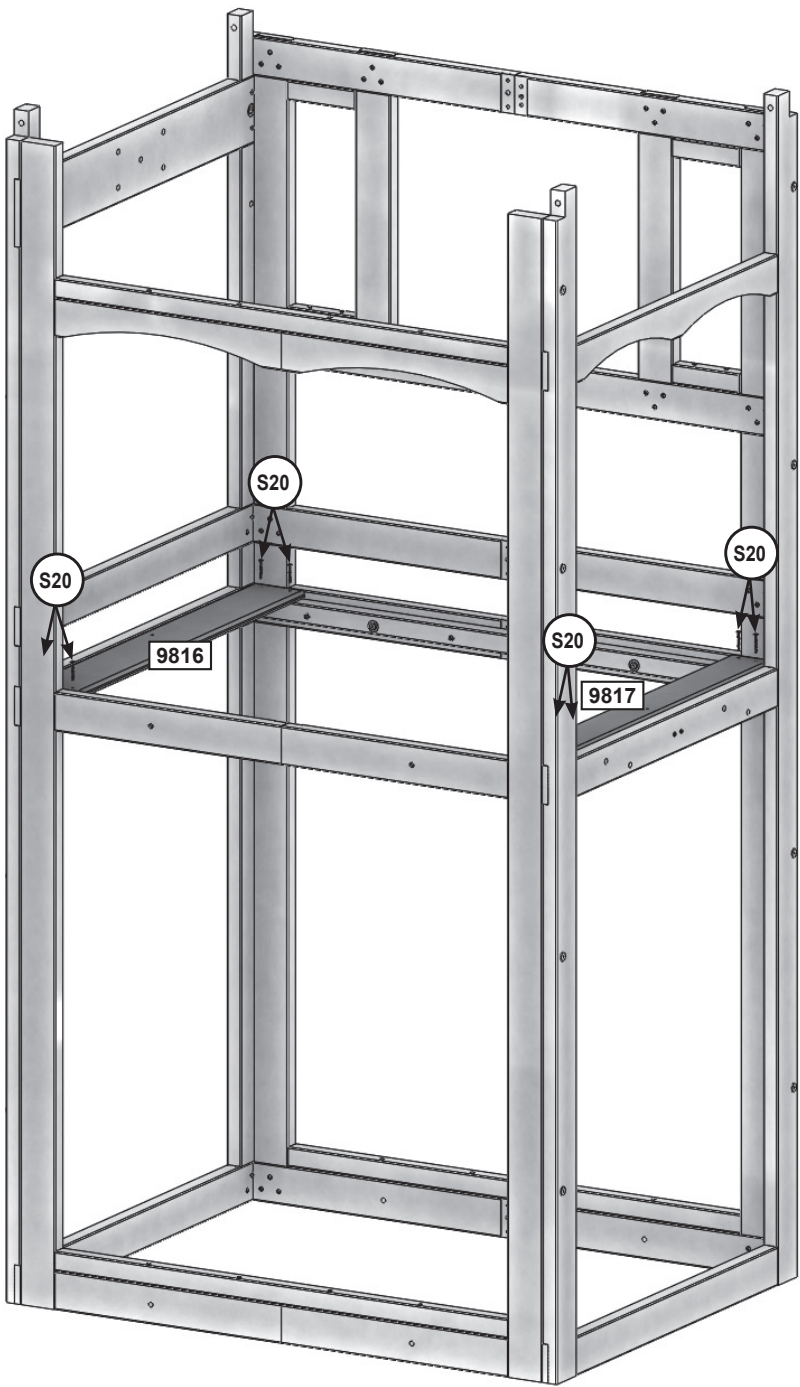




Wood Parts

- 1 x 9816 15.9 x 114.3 x 848.8 mm (5/8 x 4-1/2 x 33-7/16")
- 1 x 9817 15.9 x 88.9 x 848.8 mm (5/8 x 3-1/2 x 33-7/16")

Hardware

- 8 x S20 #8 x 35mm (#8 x 1-3/8")

Step 6

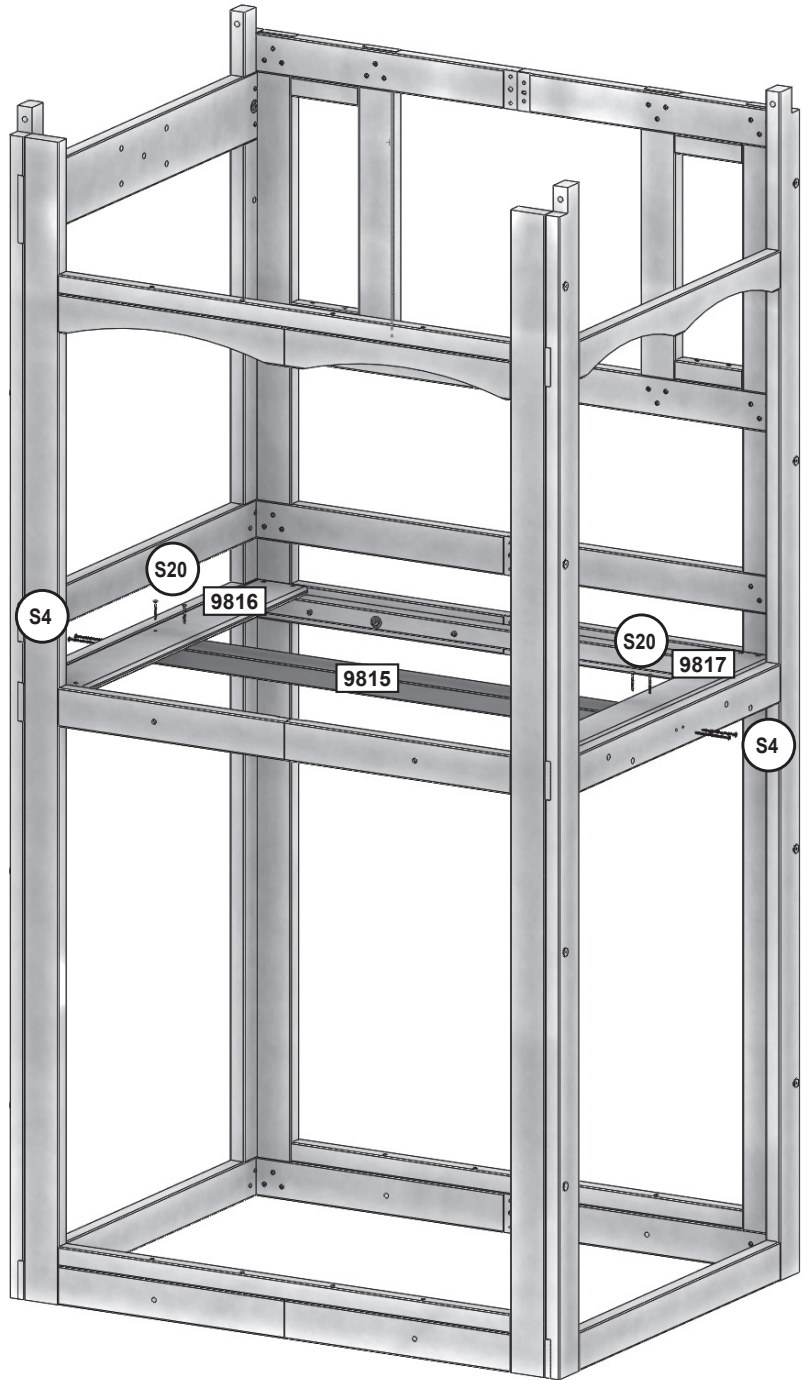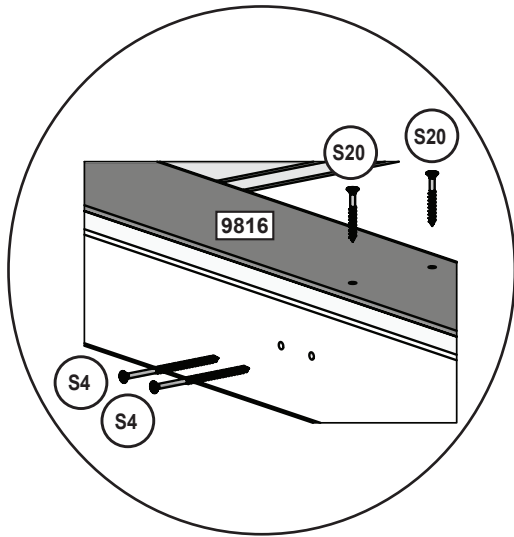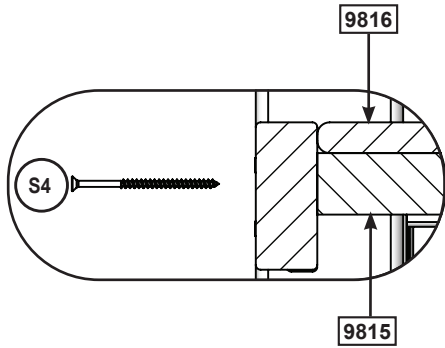

Wood Parts



1 x 9815 38.1 x 76.2 x 1143 mm (1-1/2 X 3" X 45")

Hardware

4 x S20 #8 x 35mm (#8 x 1-3/8")

4 x S4 #8 x 76.2mm (#8 x 3")

Step 7

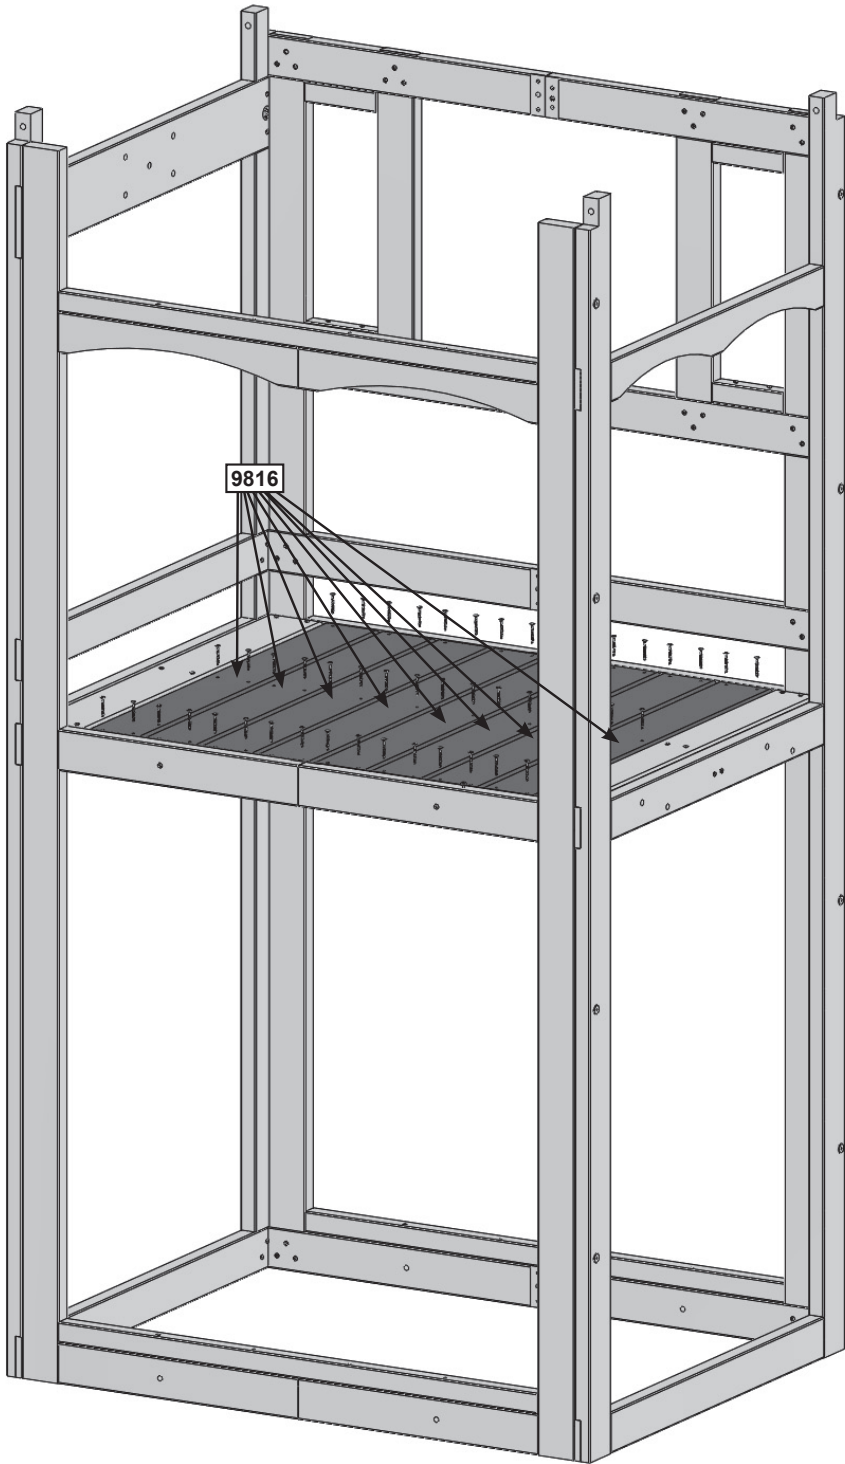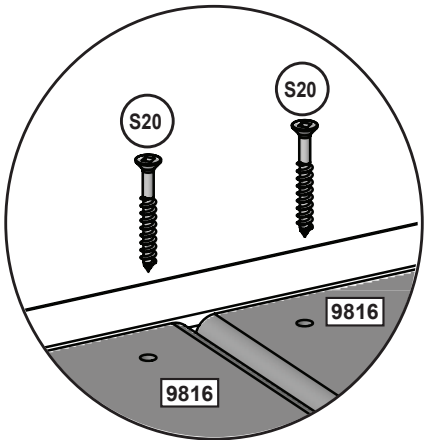



Wood Parts

8 x 9816 15.9 x 114.3 x 848.8 mm (5/8 X 4-1/2 X 33-7/16")

Hardware

48 x S20 #8 x 35mm (#8 x 1-3/8")

Step 8

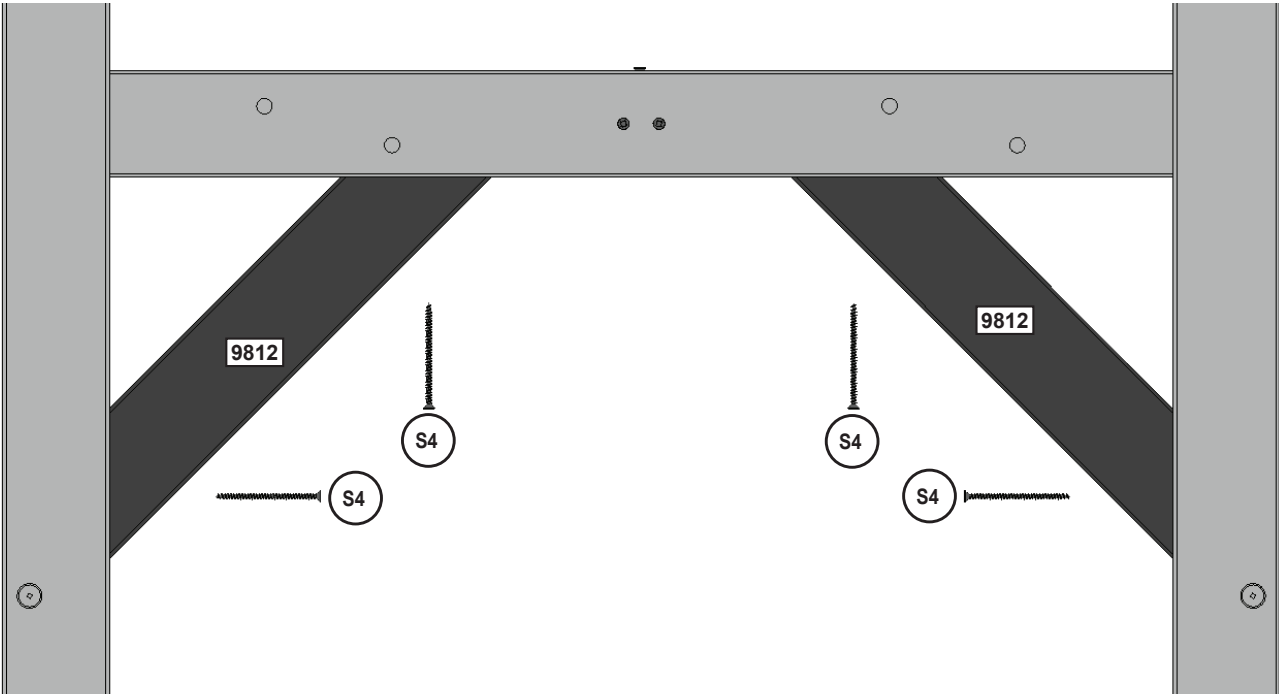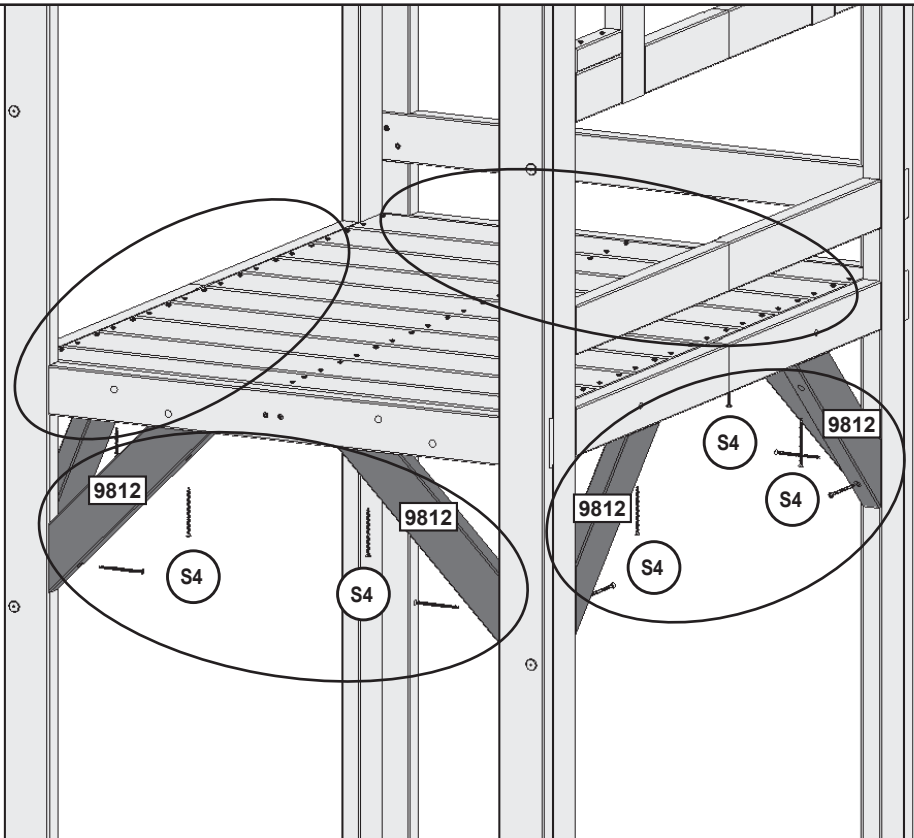

Wood Parts

8 x 9812 31.8 x 76.2 x 387.4 mm (1-1/4 X 3 X 15-1/4")

Hardware


16 x S4 #8 x 76.2mm (#8 x 3")

Step 9




IMPORTANT!
Follow hole pattern

Pre-drill holes using a
1/8" drill bit.

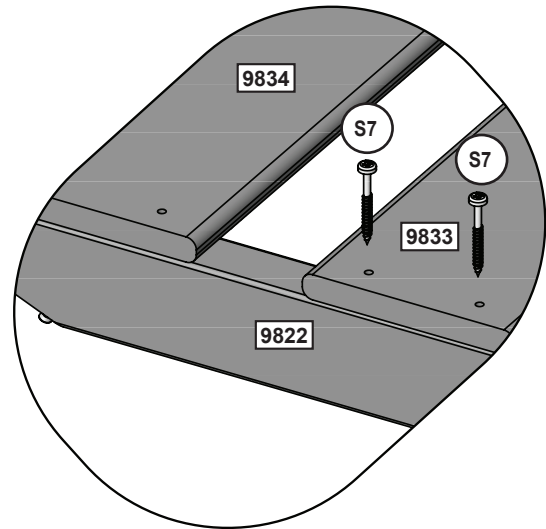

Do not attach
Put aside until
Step 13

Center first board
and evenly space
remaining

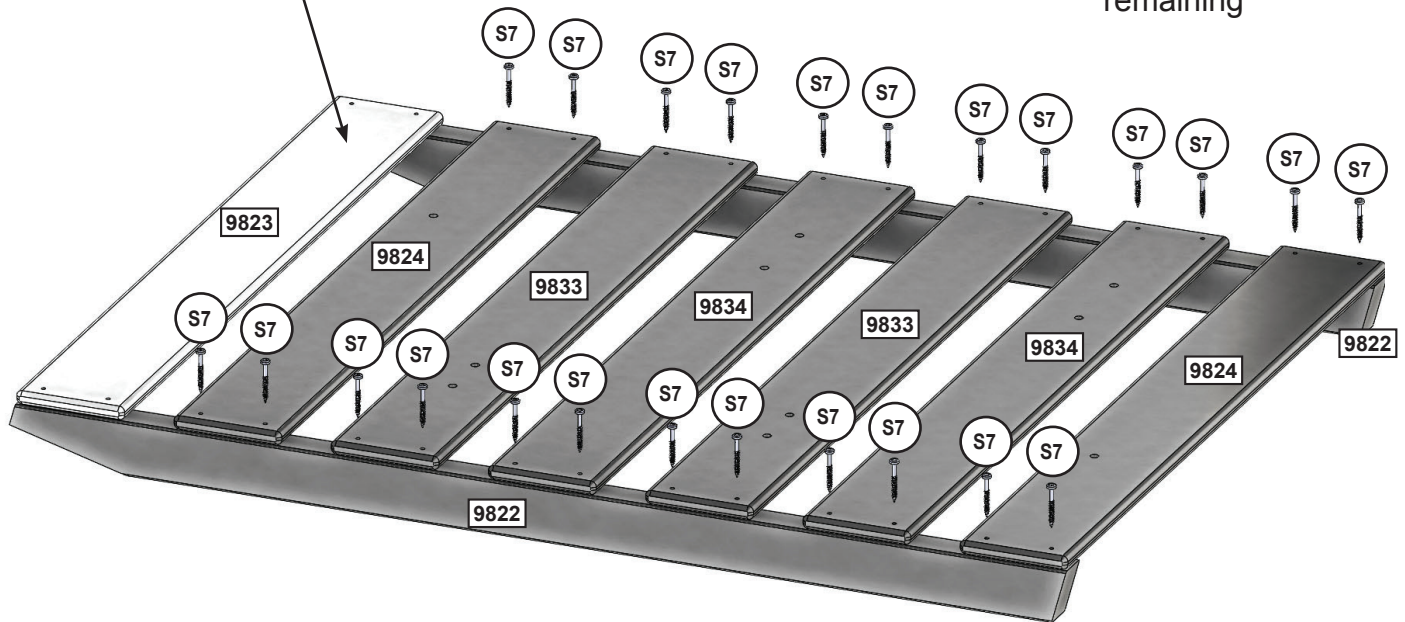

Wood Parts

2 x 38.1 x 63.5 x 1244.6 mm (1-1/2 x 2-1/2 x 49")
1 x 15.9 x 133.4 x 914.4 mm (5/8 x 5-1/4 x 36")
2 x 15.9 x 133.4 x 914.4 mm (5/8 x 5-1/4 x 36")




2 x 15.9 x 133.4 x 914.4 mm (5/8 x 5-1/4 x 36")
2 x 15.9 x 133.4 x 914.4 mm (5/8 x 5-1/4 x 36")

Hardware

24 x #12 x 50.8mm (#12 x 2")

Step 10

Note: Make sure all hardware is used to properly secure each rock.

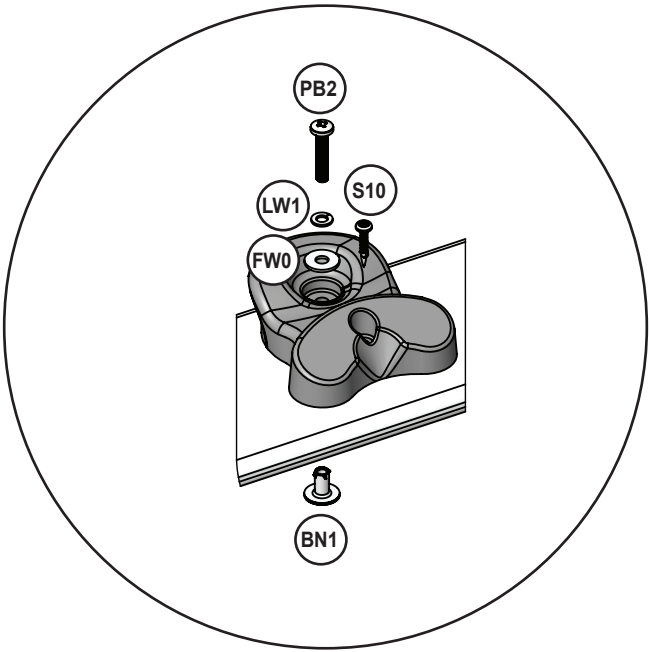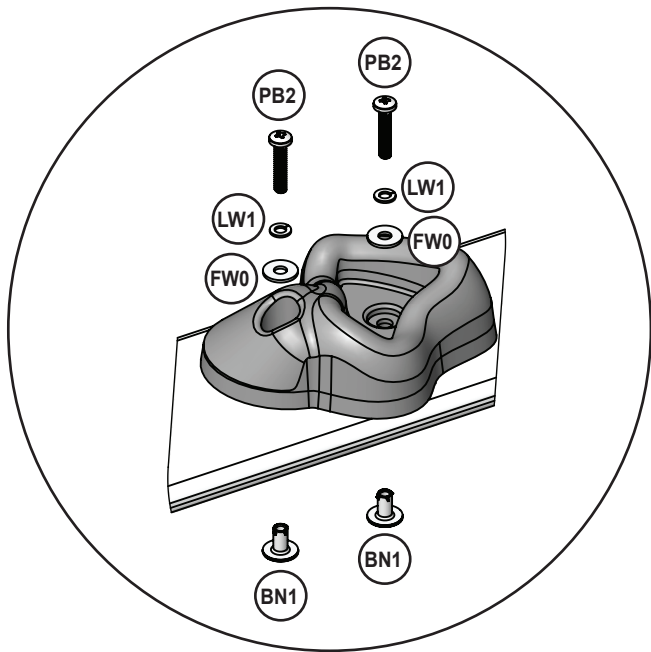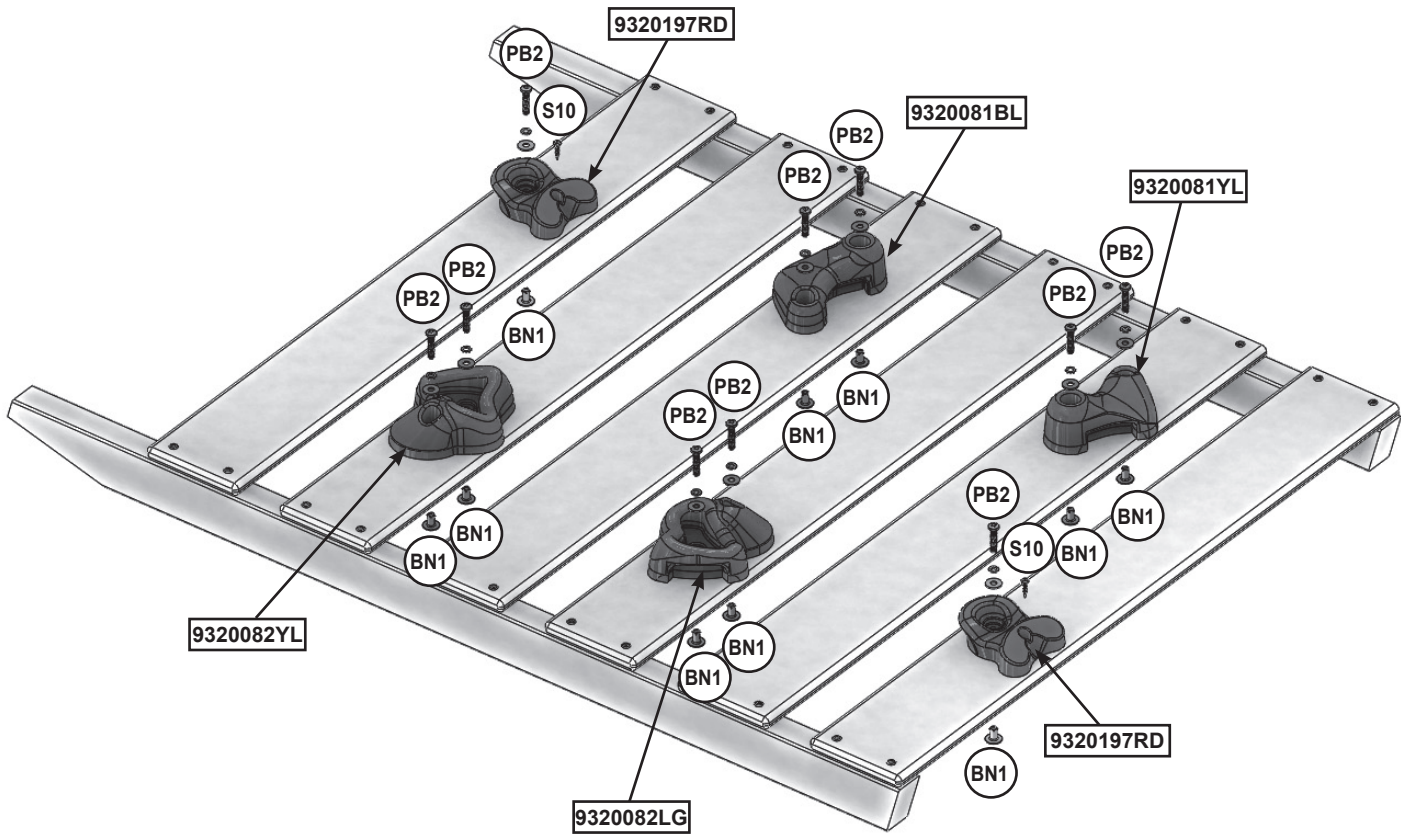



Hardware

- 10 x PB2 7.9mm x 32 mm (5/16 x 1-1/4") (FW0, LW1, BN1)
- 2 x S10 #8 x 25.4 mm (#8 x 1")

Other Parts

- | | |
|---------------|---------------|
| 2 x 9320197RD | 1 x 9320082YL |
| 1 x 9320082LG | 1 x 9320081YL |
| 1 x 9320081BL | |

Step 11

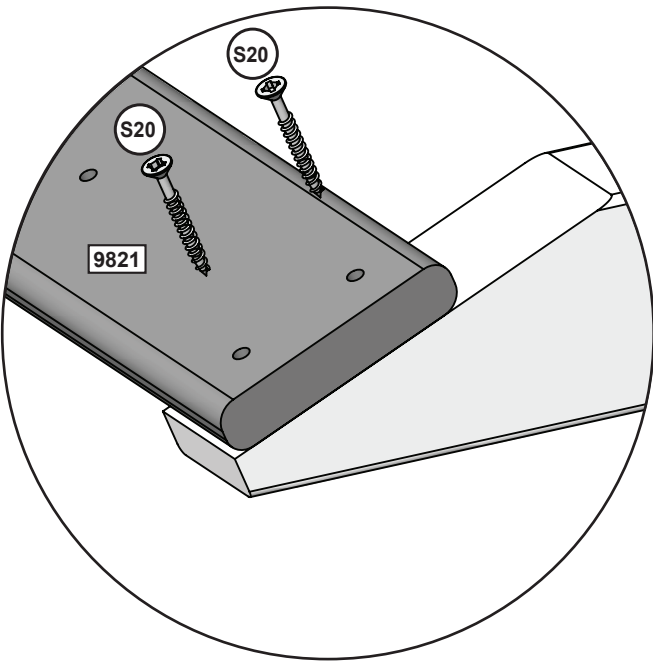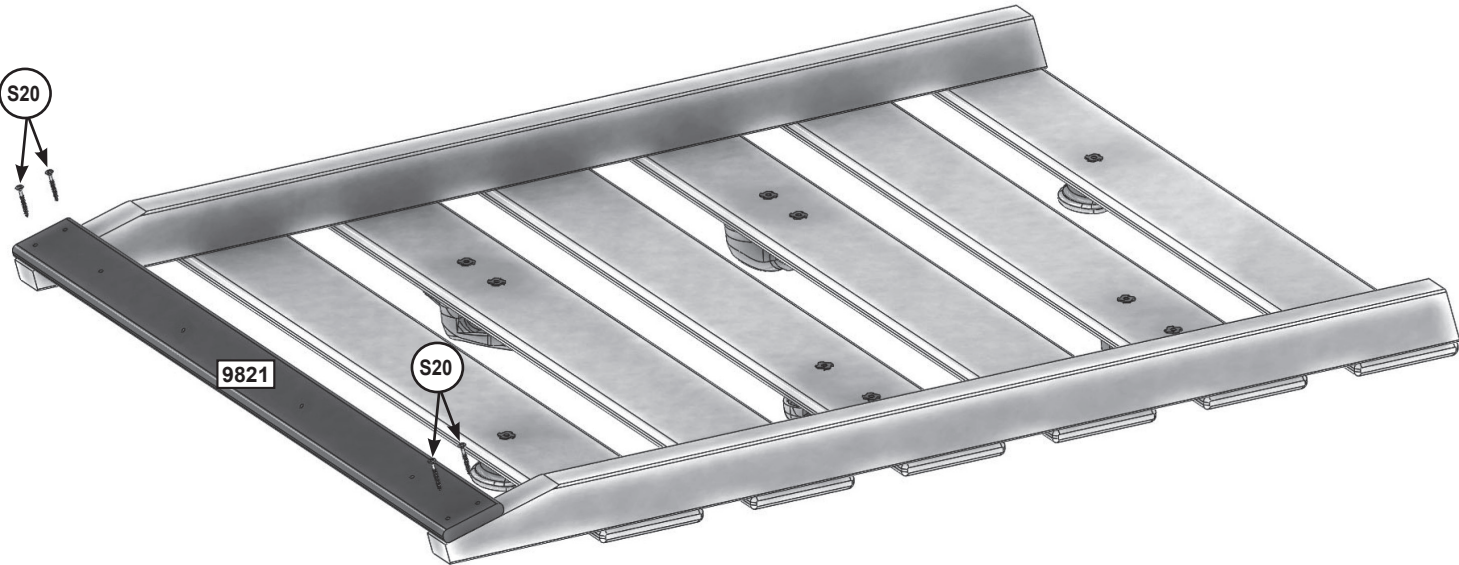

Wood Parts


1 x 9821 15.9 x 76.2 x 914.4 mm (5/8 x 3 x 36")

Hardware

4 x S20 #8 x 35mm (#8 x 1-3/8")



Step 12

Install TN1
(will be used in Step 46)

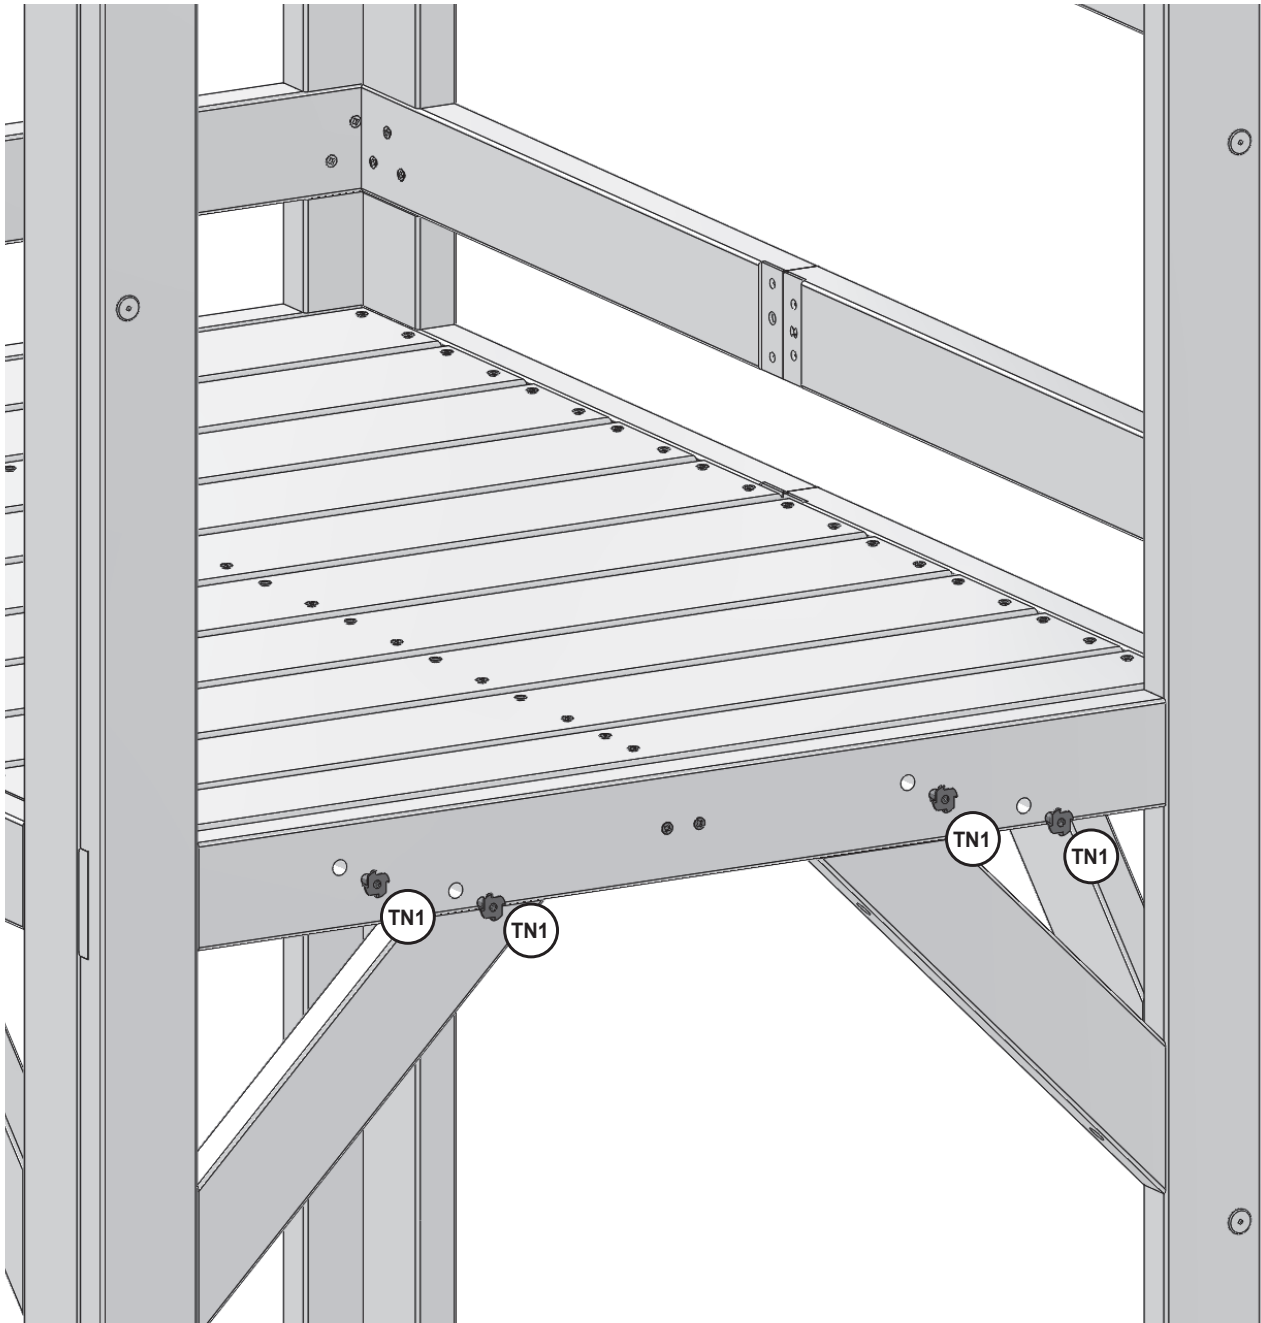


Hardware
4 x TN1

Step 13

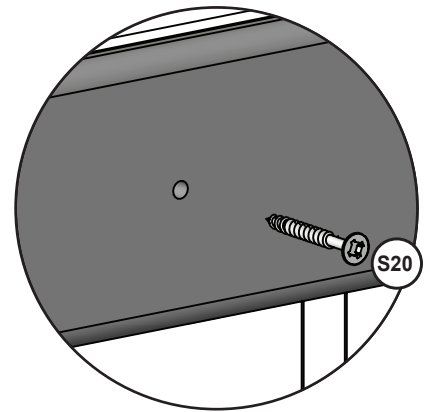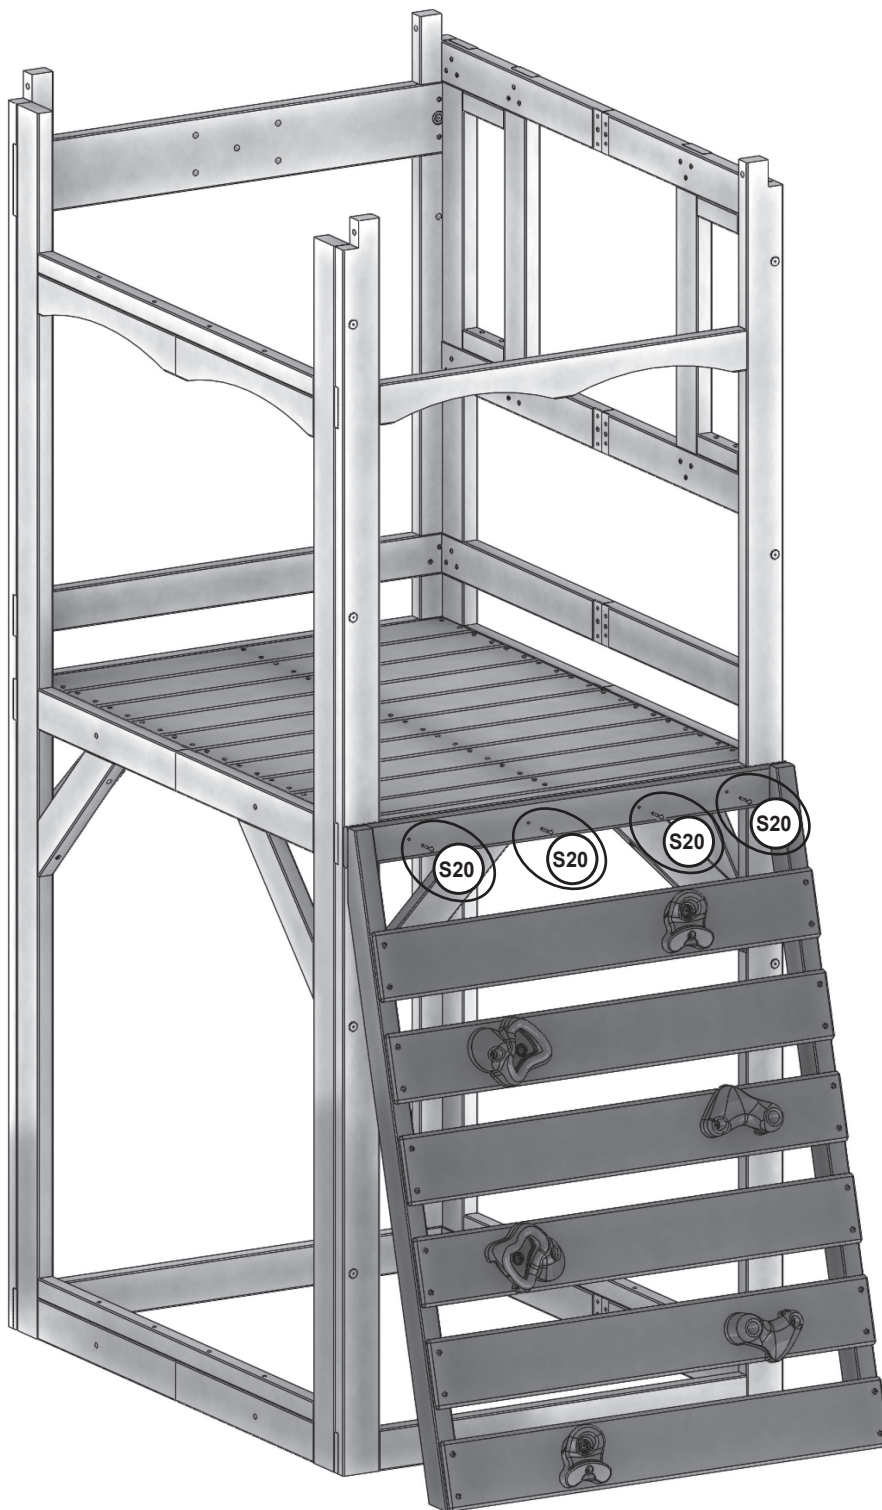


Hardware

4 x  #8 x 35 mm (#8 x 1-3/8")

Step 14




Pre-drill holes using a
1/8" drill bit.

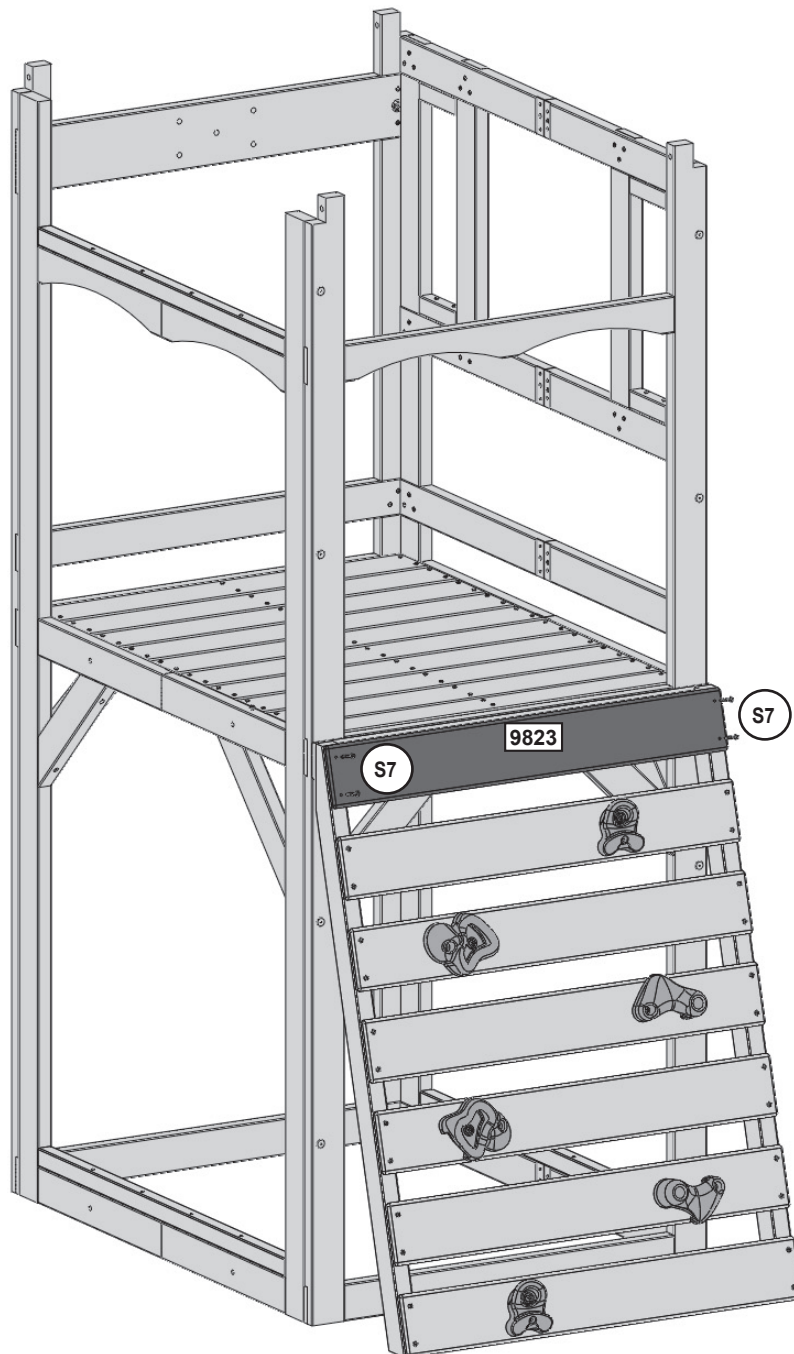


Hardware

4 x  #12 x 50.8mm (#12 x 2")



Step 15

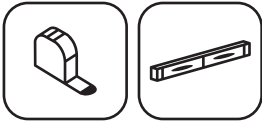

Center 9820 board and evenly space the rest

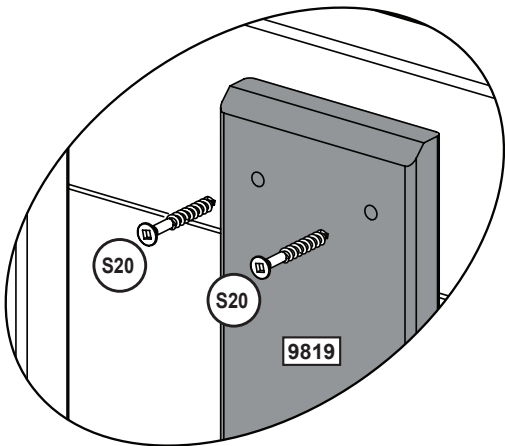

Beveled edge faces out

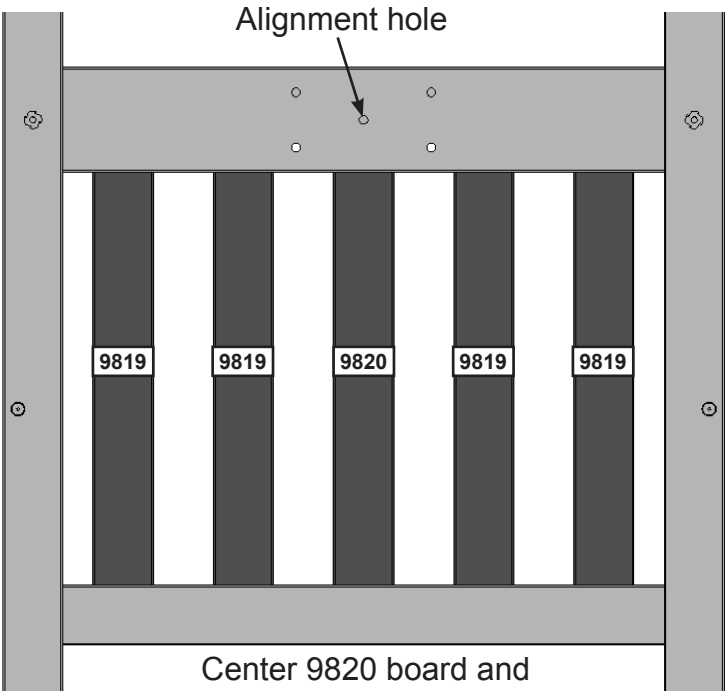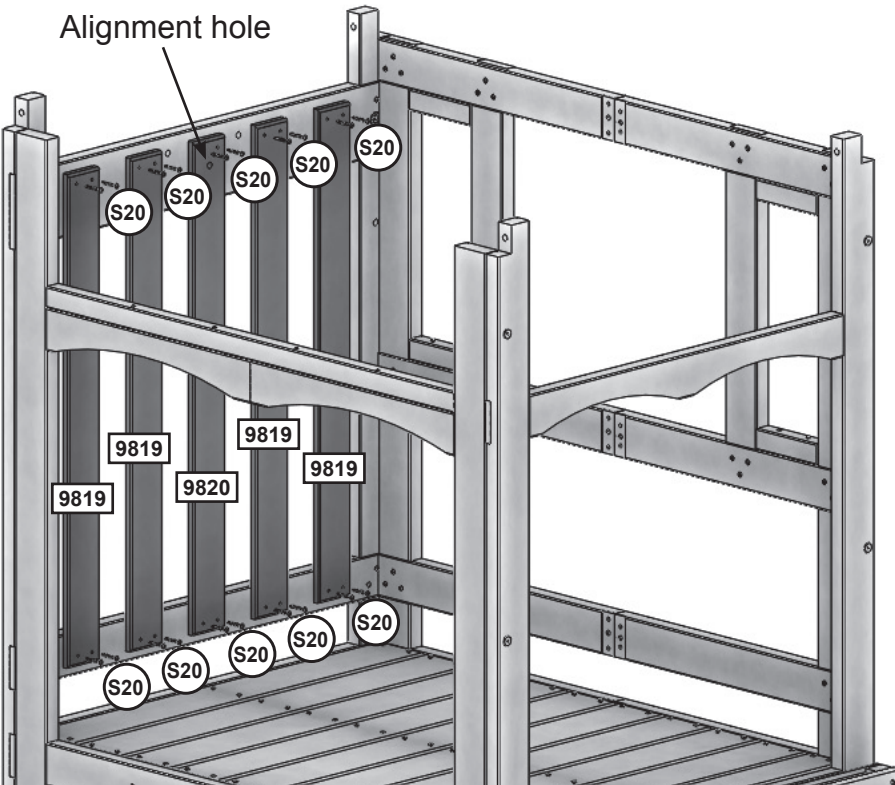


Center 9820 board and evenly space the rest



Wood Parts	
4 x 9819	15.9 x 76.2 x 878.9 mm (5/8 x 3 x 34-5/8")
1 x 9820	15.9 x 76.2 x 878.9 mm (5/8 x 3 x 34-5/8")

Hardware	
20 x S20	#8 x 34.9 mm (#8 x 1-3/8")


Step 16



Center first board and evenly space the rest

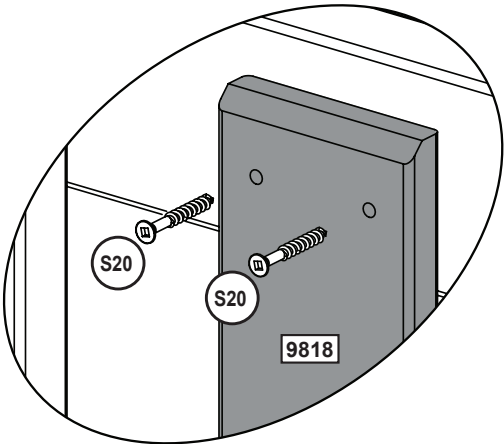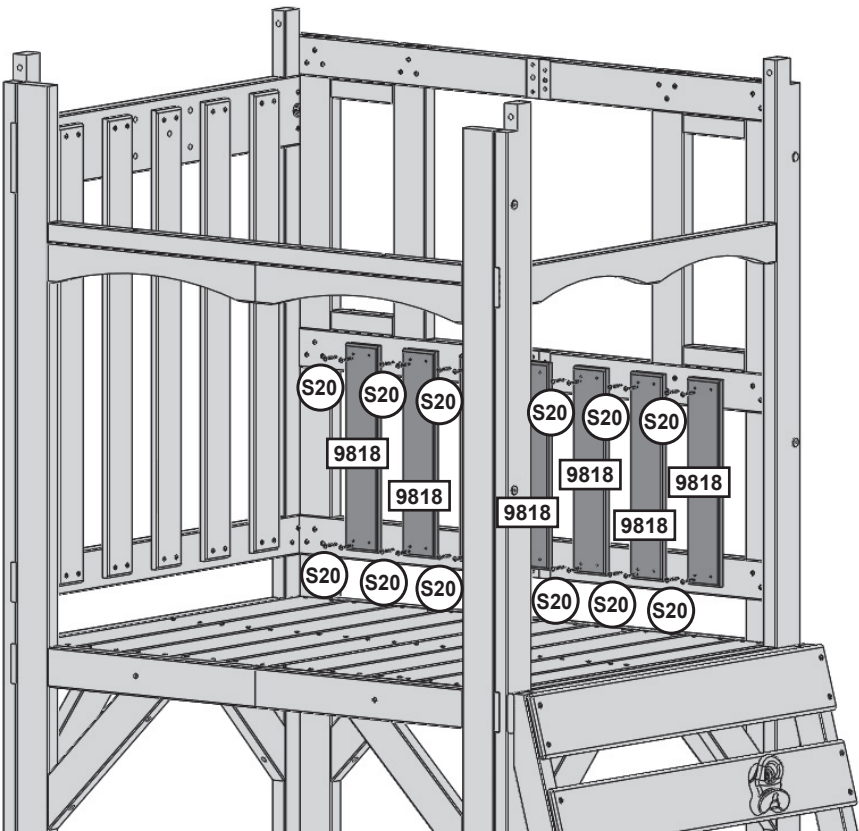

Beveled edge faces out

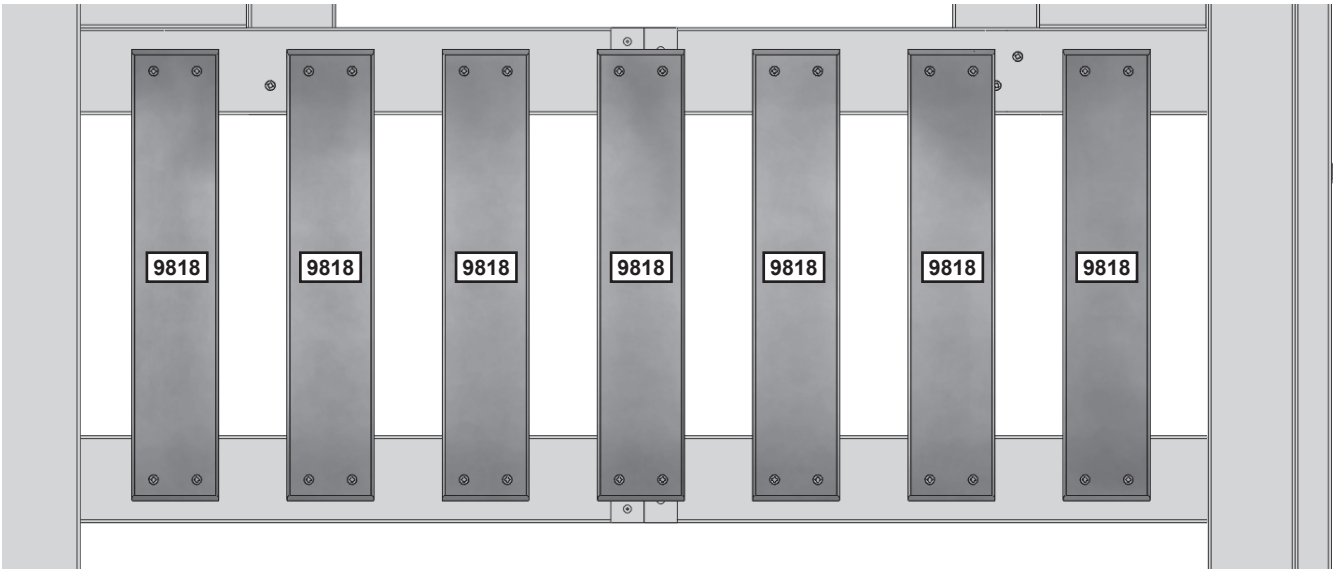


Wood Parts

7 x 9818 15.9 x 76.2 x 396.2 mm (5/8 x 3 x 15-5/8")


Hardware

28 x S20 #8 x 34.9 mm (#8 x 1-3/8")

Step 17




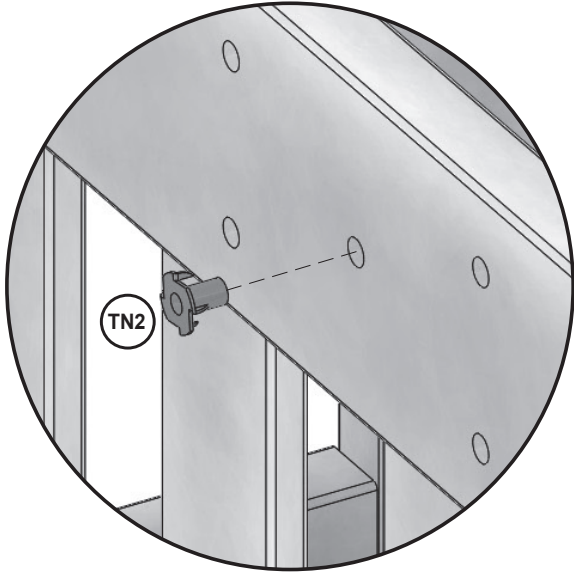


Install TN2
(will be used in Step 25)

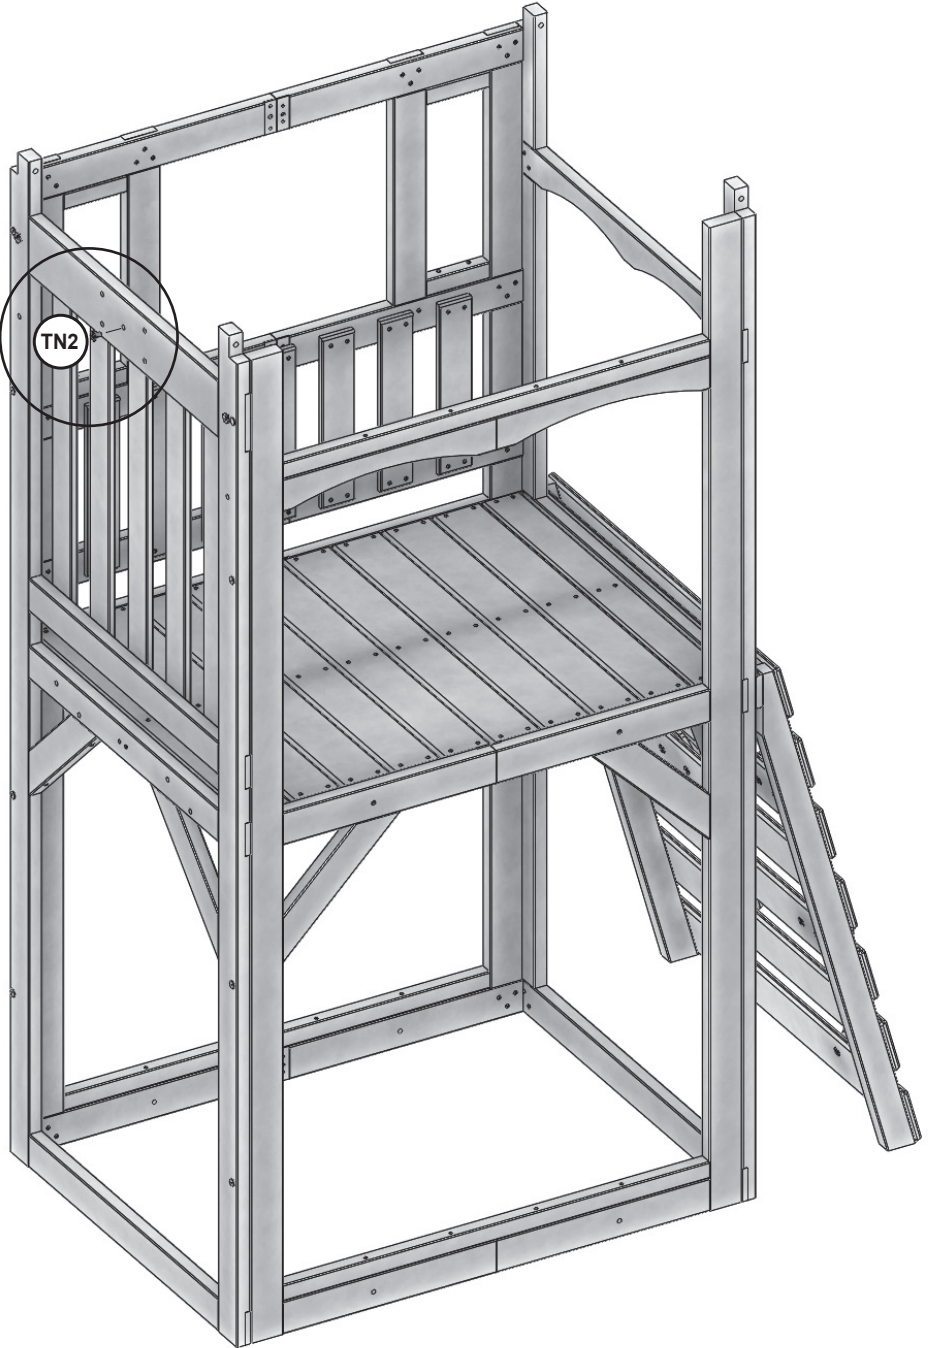

Hardware
1 x TN2

Step 18

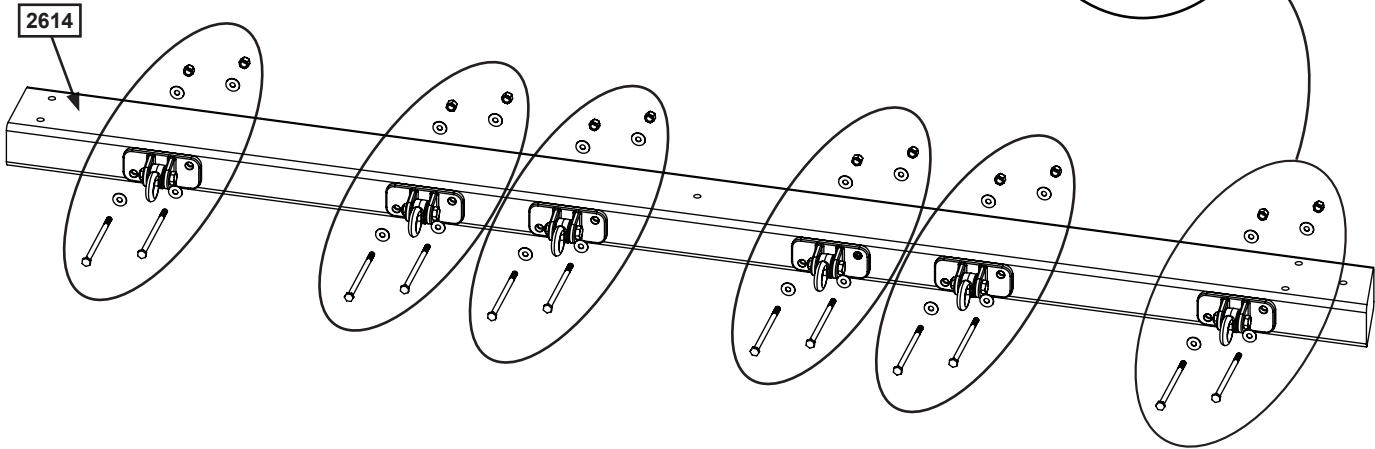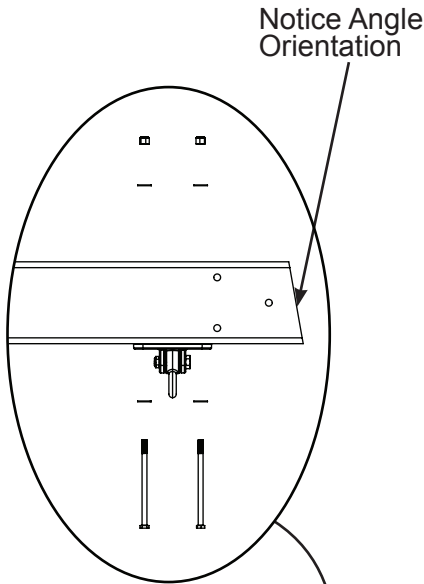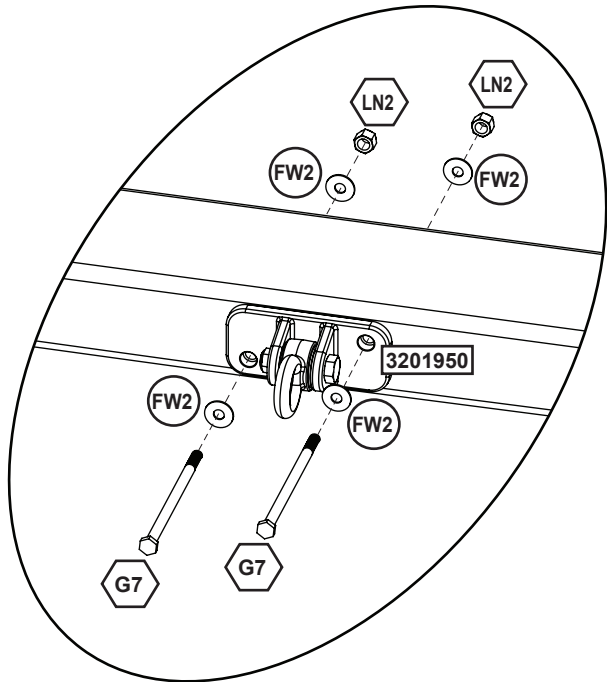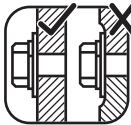

Wood Parts

1 x 2614 76.2 x 133.4 x 2235.2 mm (3" x 5-1/4" x 88")



Hardware

12 x G7 7.9mm x 139.7 mm (5/16 x 5-1/2") (LN2, 2 x FW2)

Other Parts


1 x 3201950

Step 19

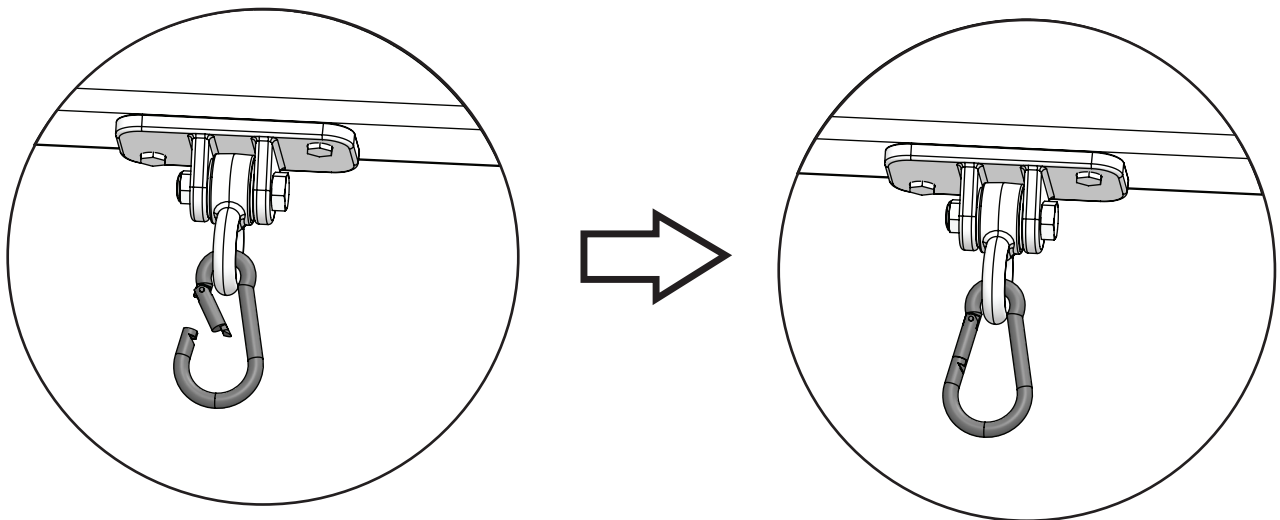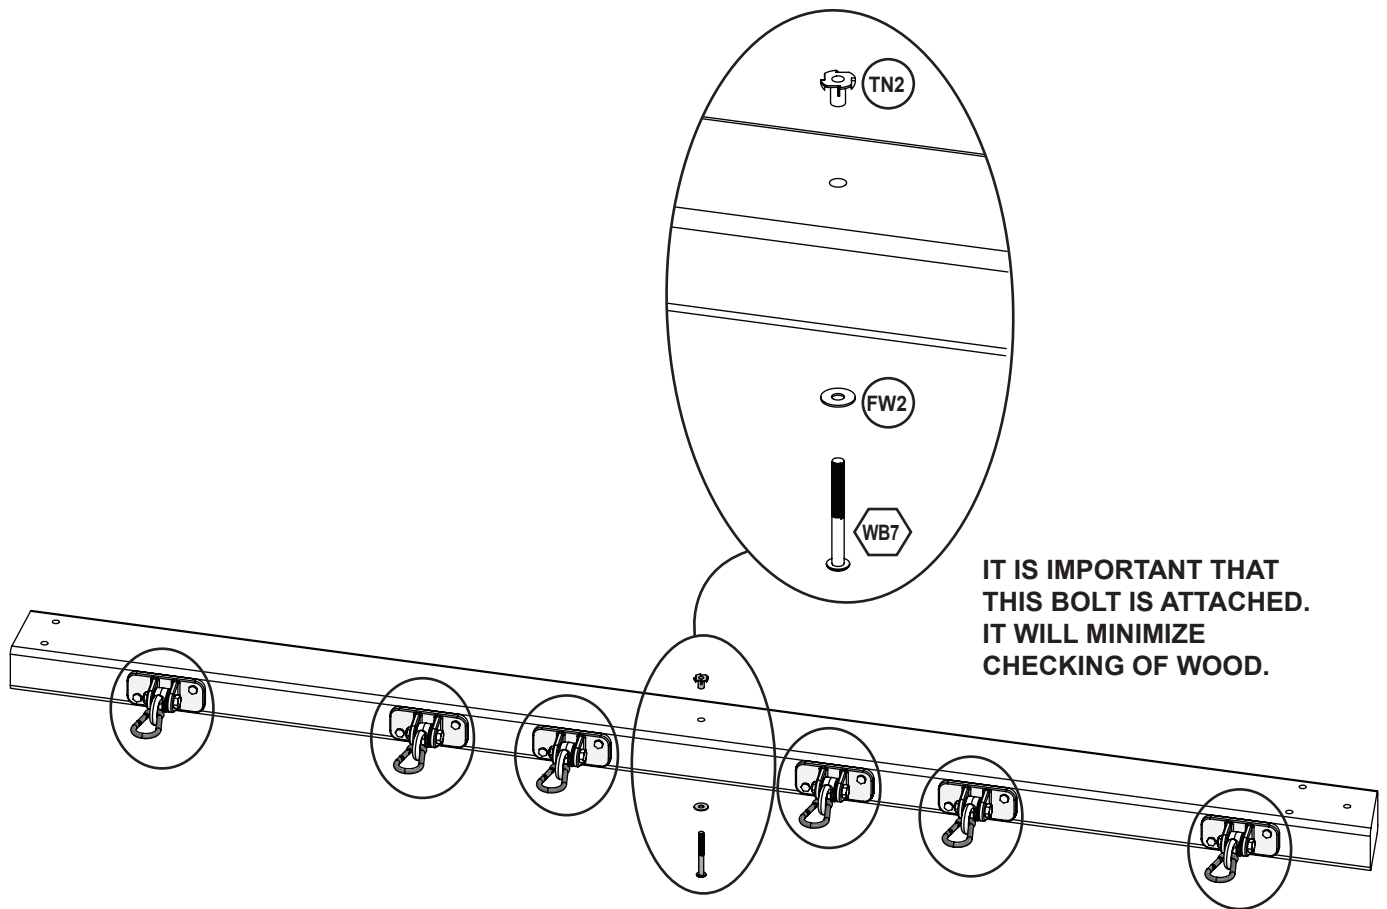


Caution: The Spring Loaded Quick Link must be attached to the Heavy Duty Swing Hanger in the closed position.



Hardware

1 x  7.9mm x 76.2mm (5/16 x 3") (FW2 , TN2)



Step 20

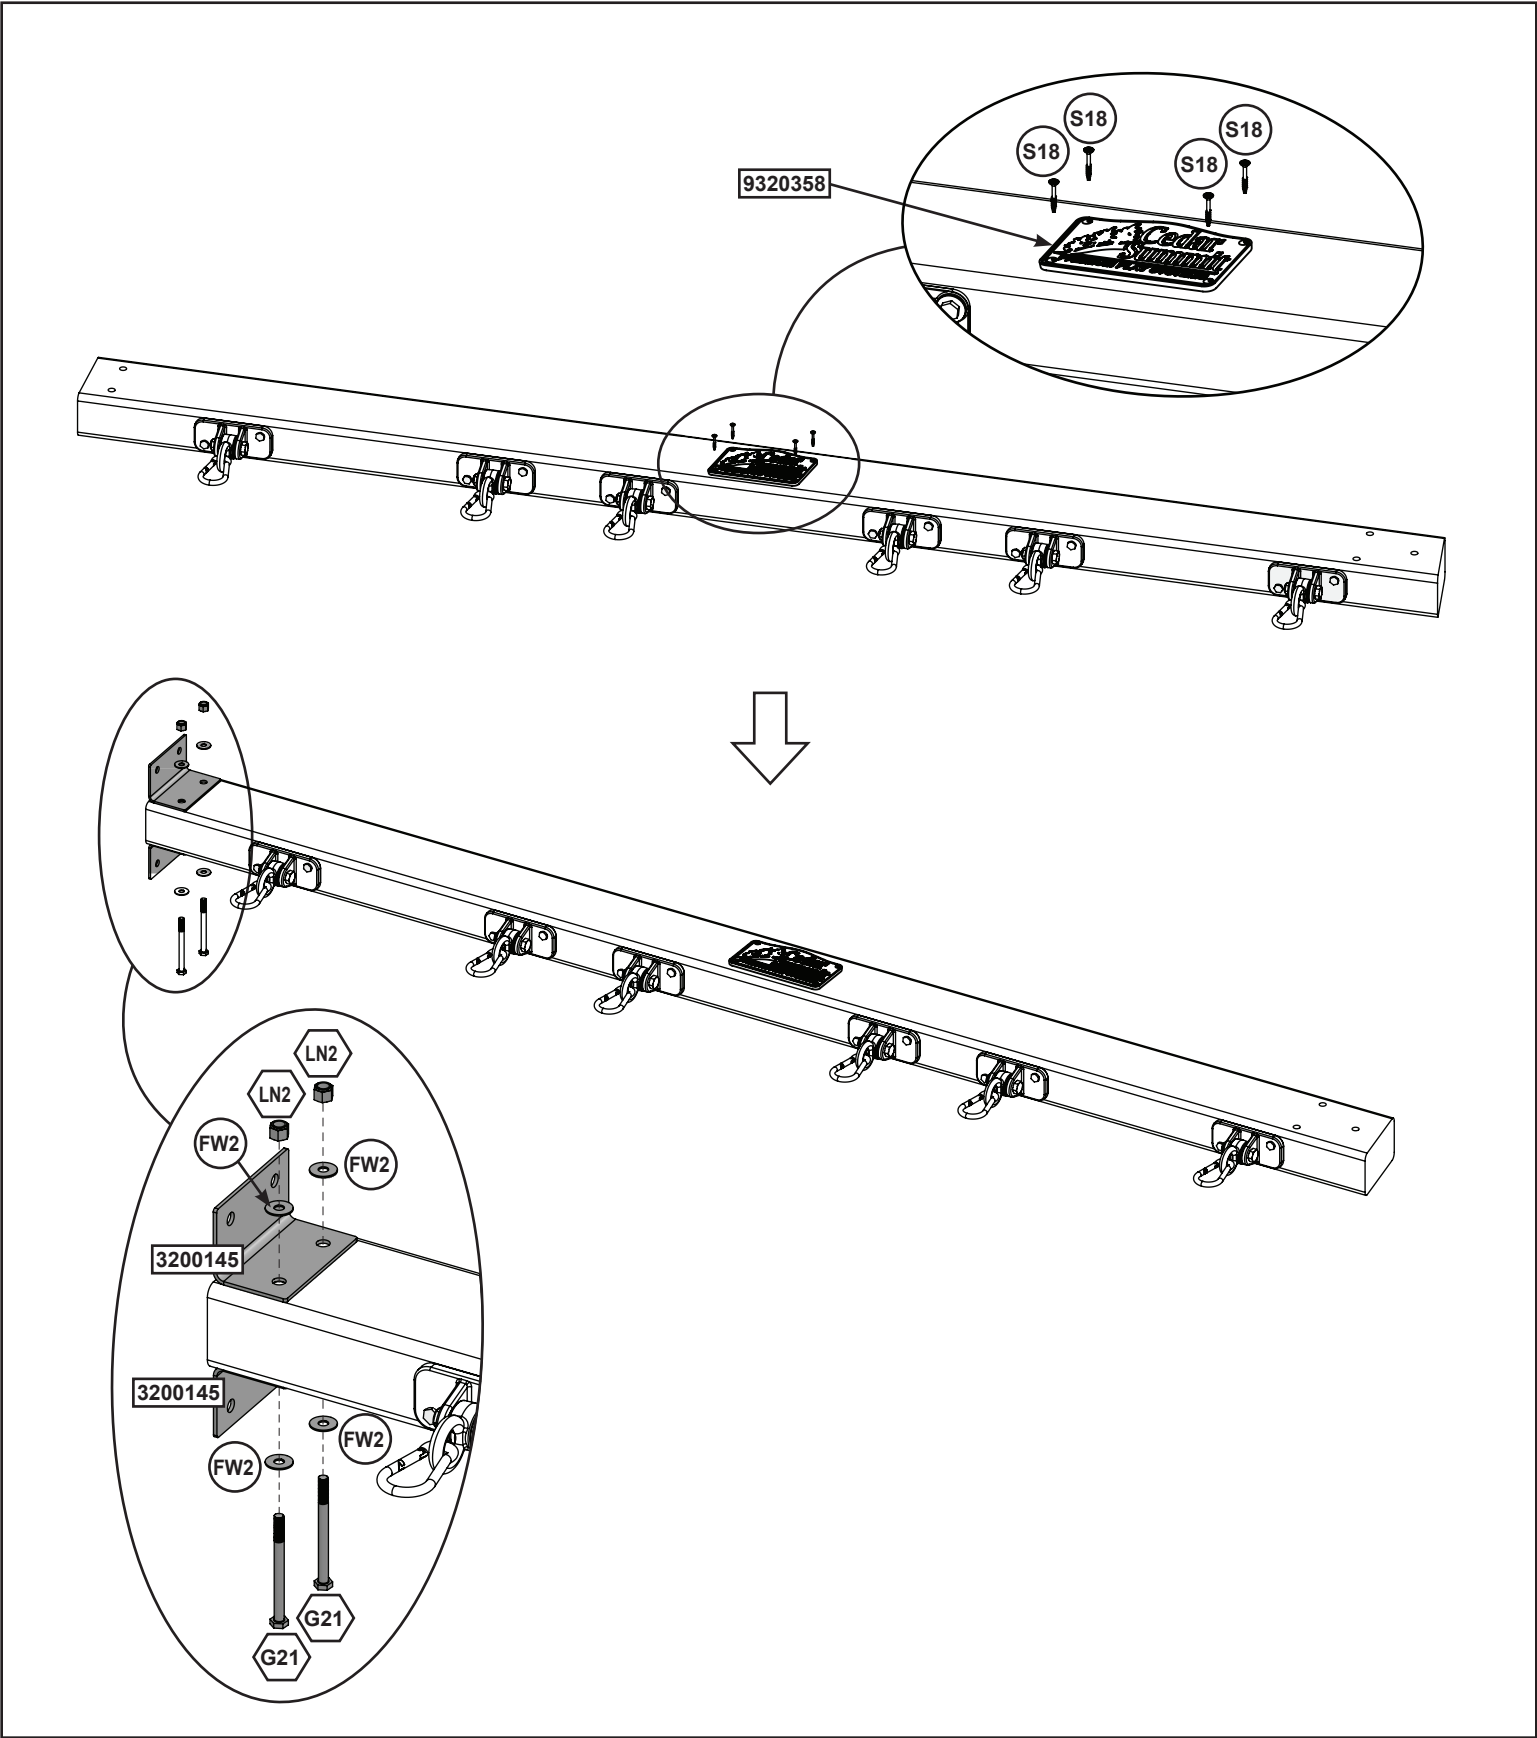



Hardware

- 2 x  7.9 x 95 mm (5/16 x 3-3/4") (2 x FW2, LN2)
4 x  #6 x 25.4 mm (#6 x 1")

Other Parts

- 1 x 
1 x 

Step 21

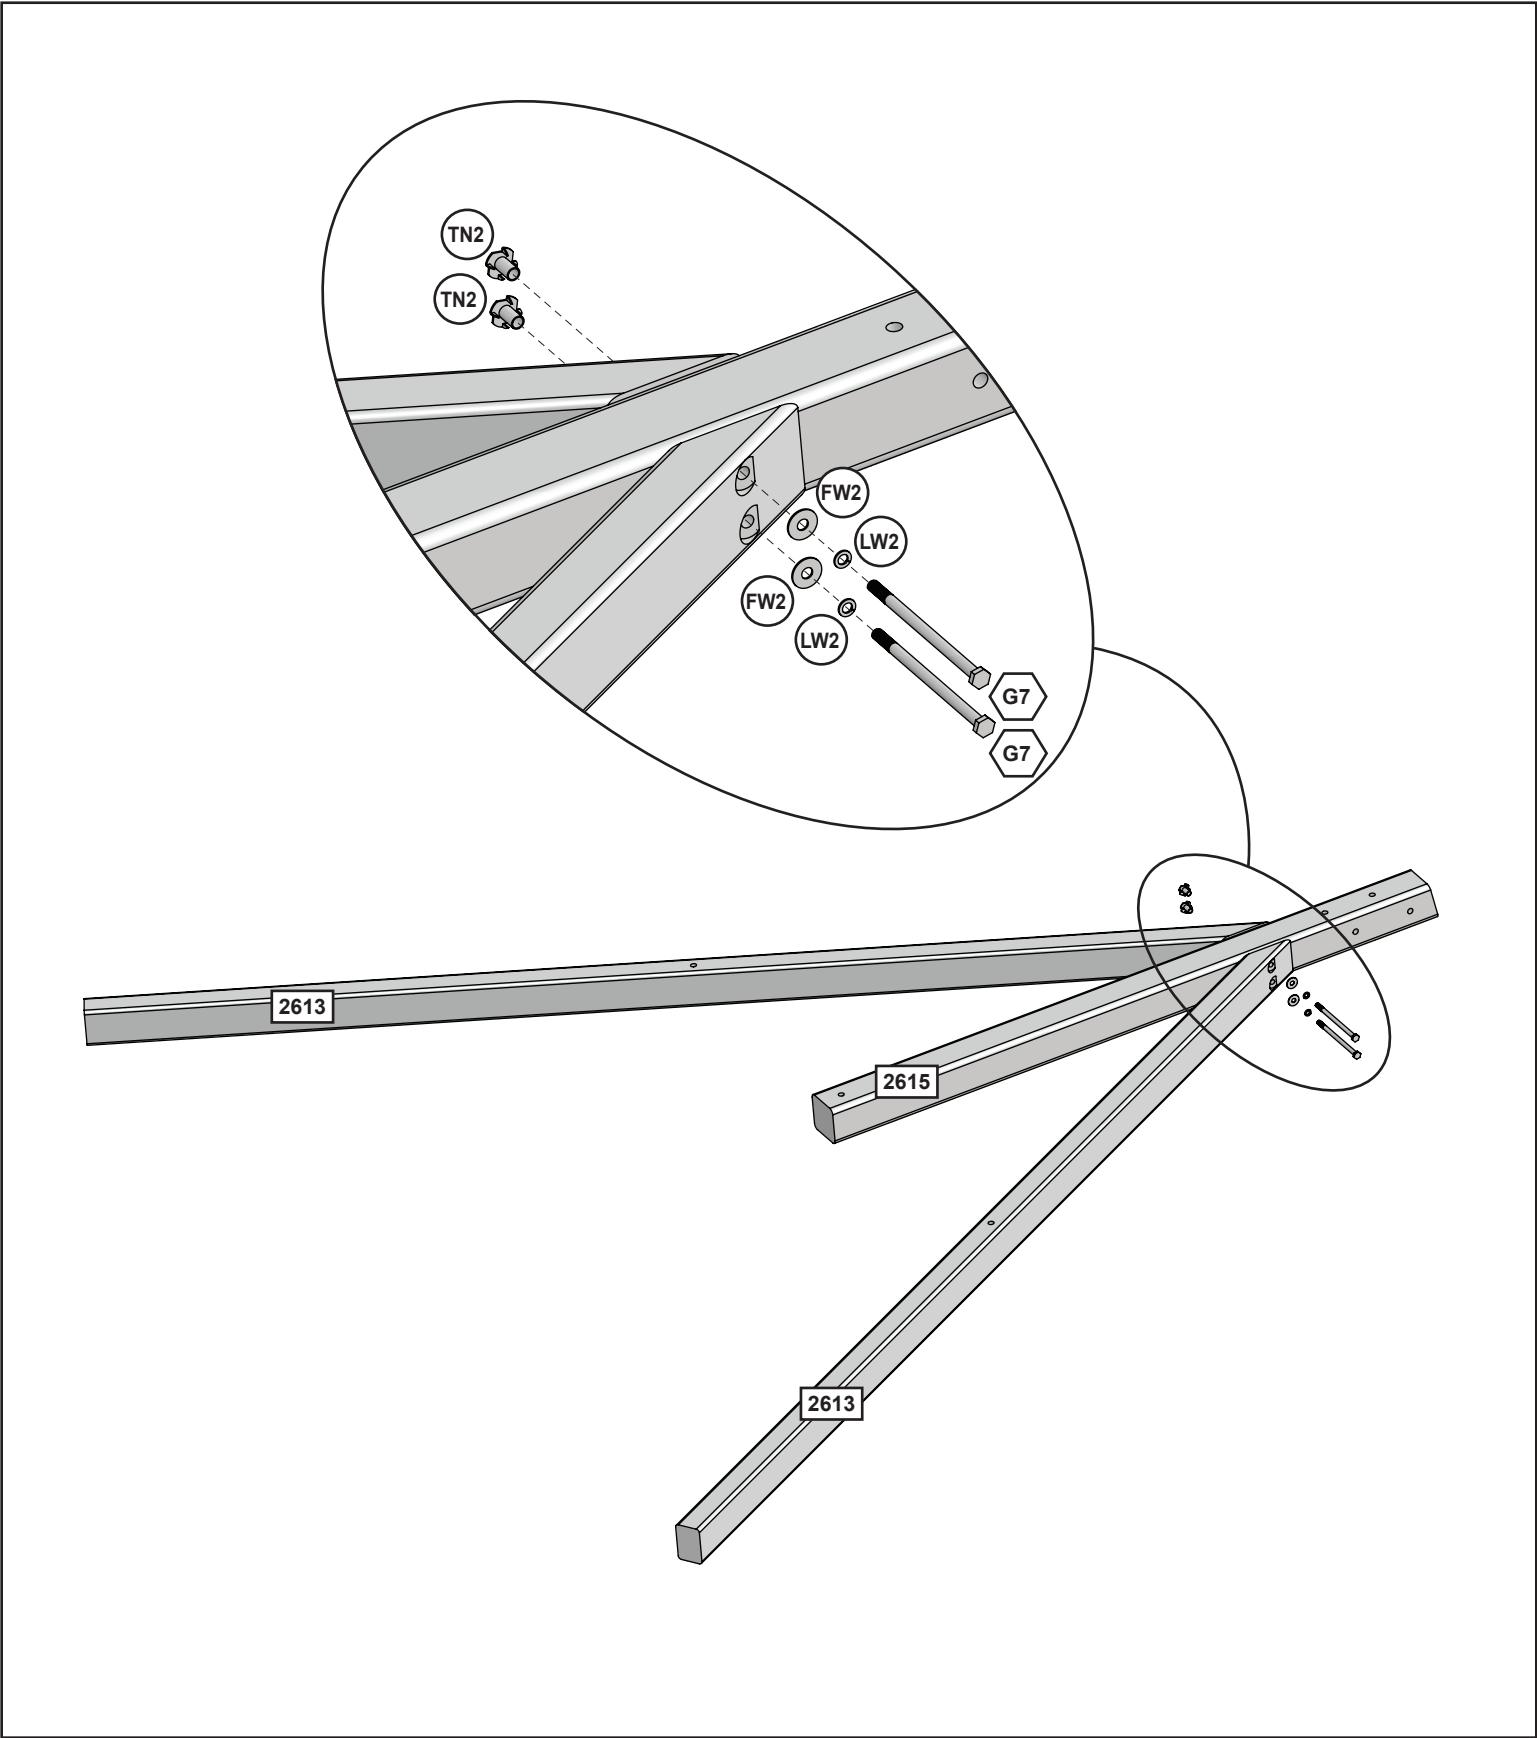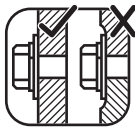

Wood Parts

- 2 x 2613 50.8 x 76.2 x 2201.9 mm (2 x 3 x 86-11/16")
- 1 x 2615 76.2 x 76.2 x 1294.3 mm (3 x 3 x 50-15/16")


Hardware

- 2 x G7 7.9 x 139.7 mm (5/16 x 5-1/2") (LW2, FW2, TN2)

Step 22



IT IS IMPORTANT THAT THESE BOLTS ARE ATTACHED. THEY WILL MINIMIZE CHECKING OF WOOD.

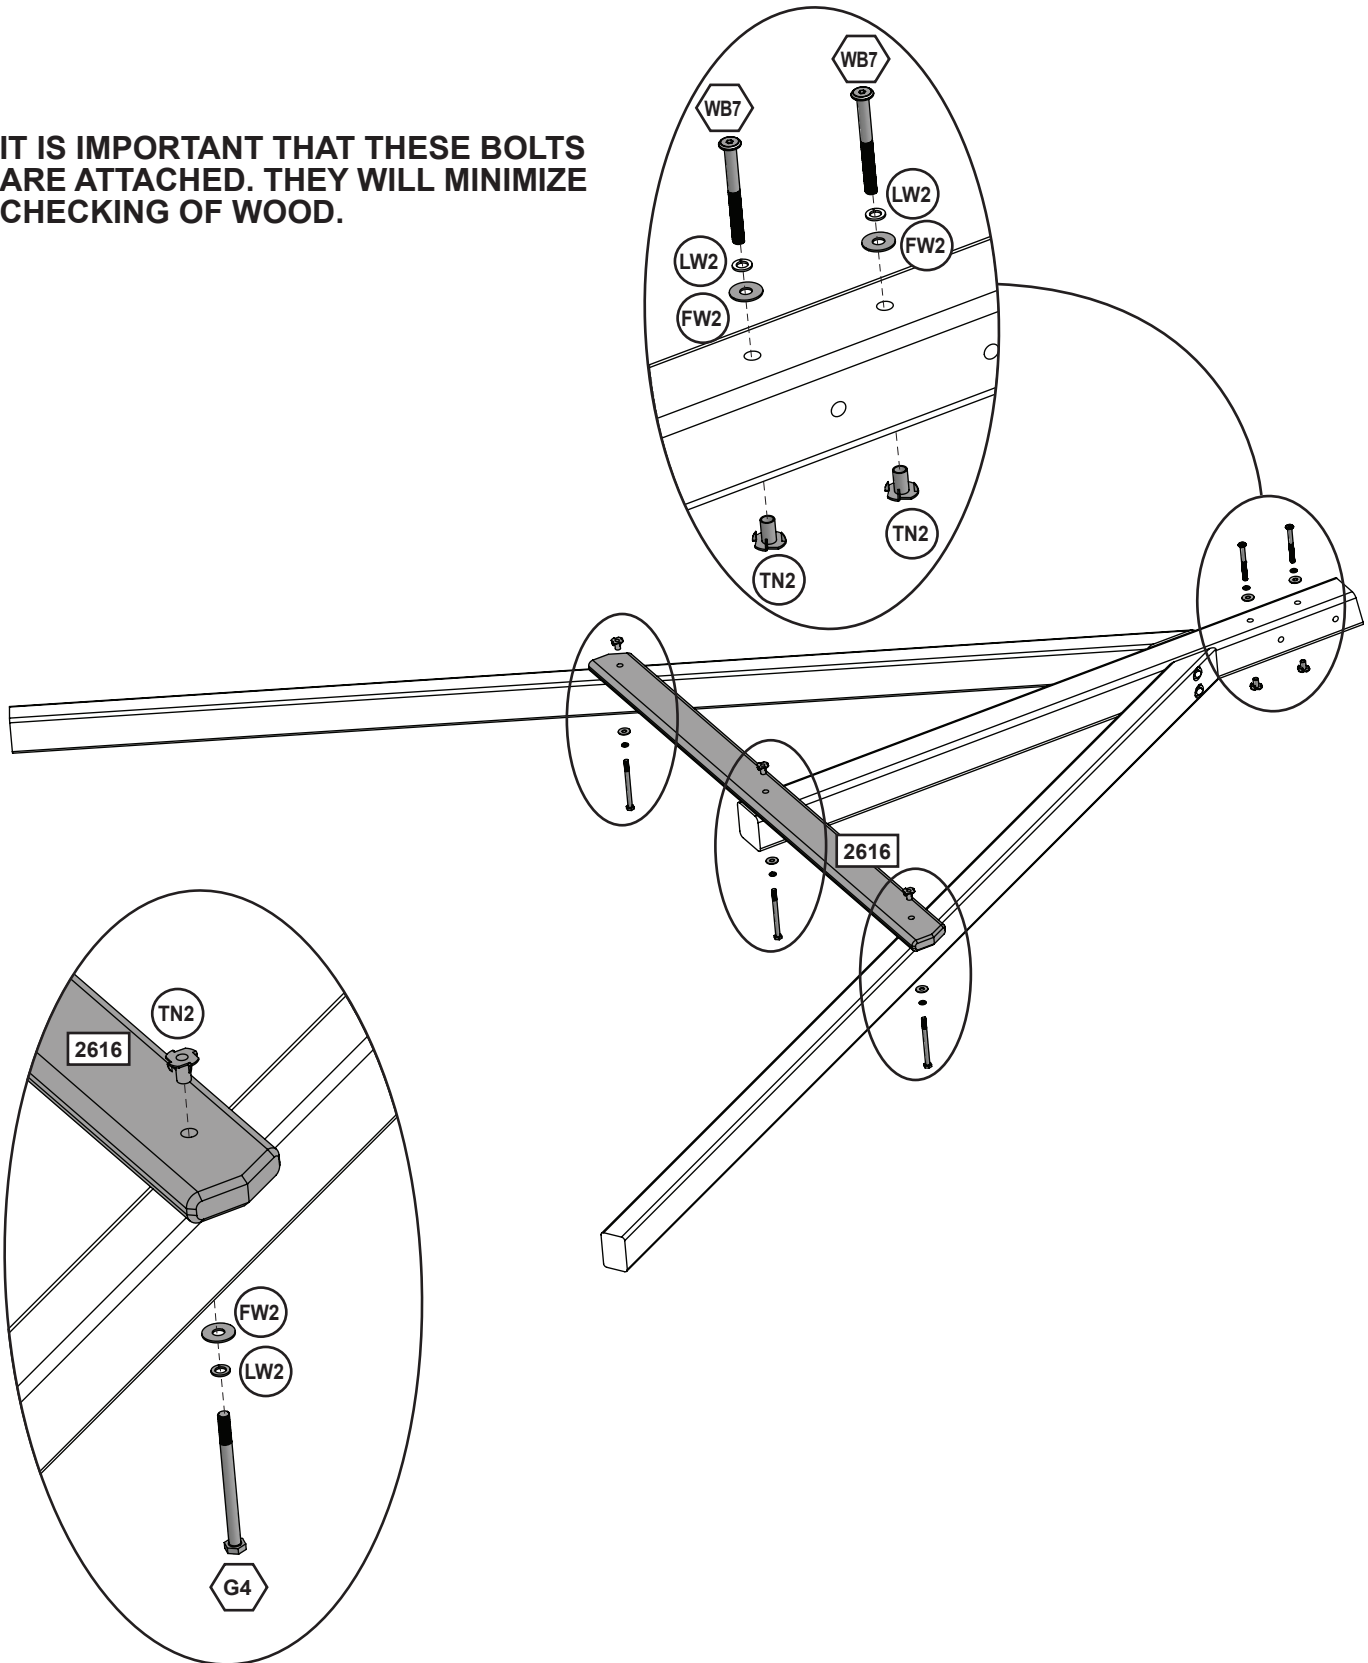

Wood Parts



1 x **2616** 23.8 x 82.6 x 1181.1mm (15/16 x 3-1/4 x 46-1/2")


Hardware



3 x **G4** 7.9mm x 101.6mm (5/16 x 4") (LW2, FW2, TN2)

2 x **WB7** 7.9mm x 76.2mm (5/16 x 3") (LW2, FW2, TN2)


Step 23

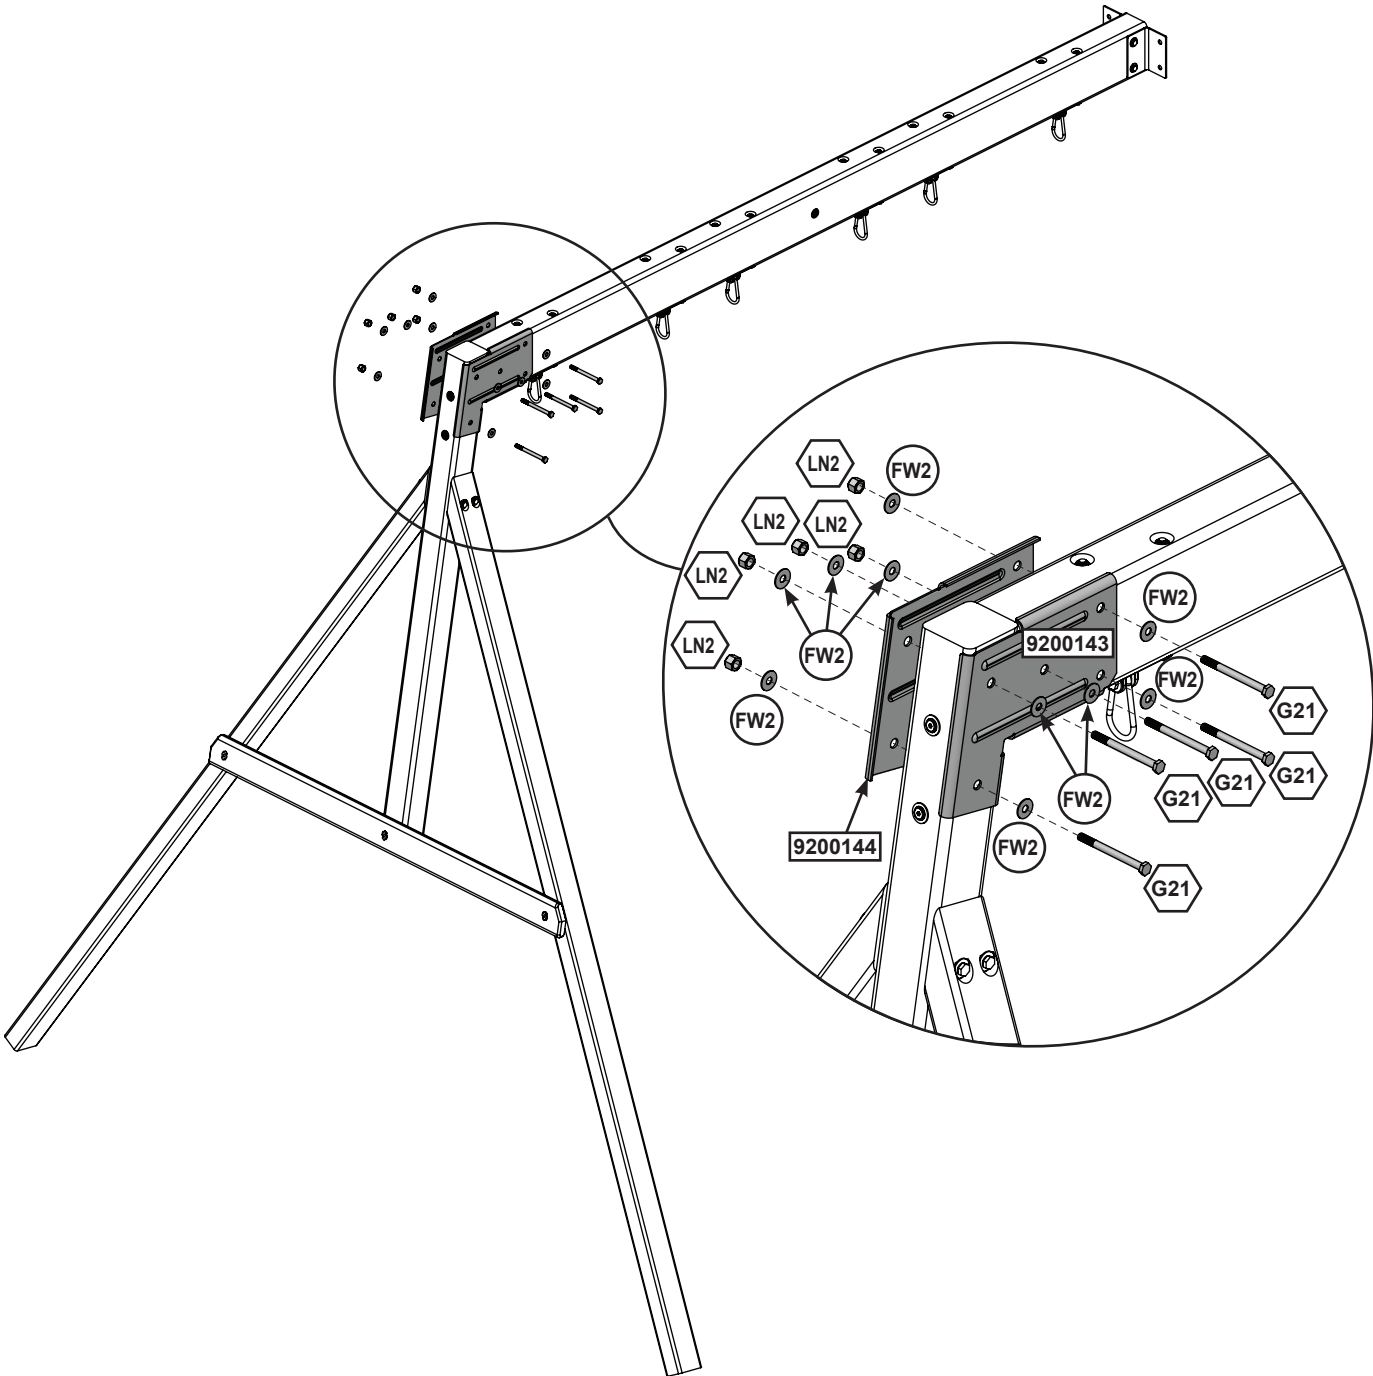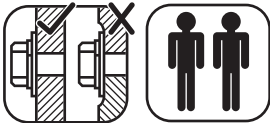


Hardware
5 x  7.9 x 95 mm (5/16 x 3-3/4") (LN2, 2 x FW2)

Other Parts
1 x 
1 x 


Step 24

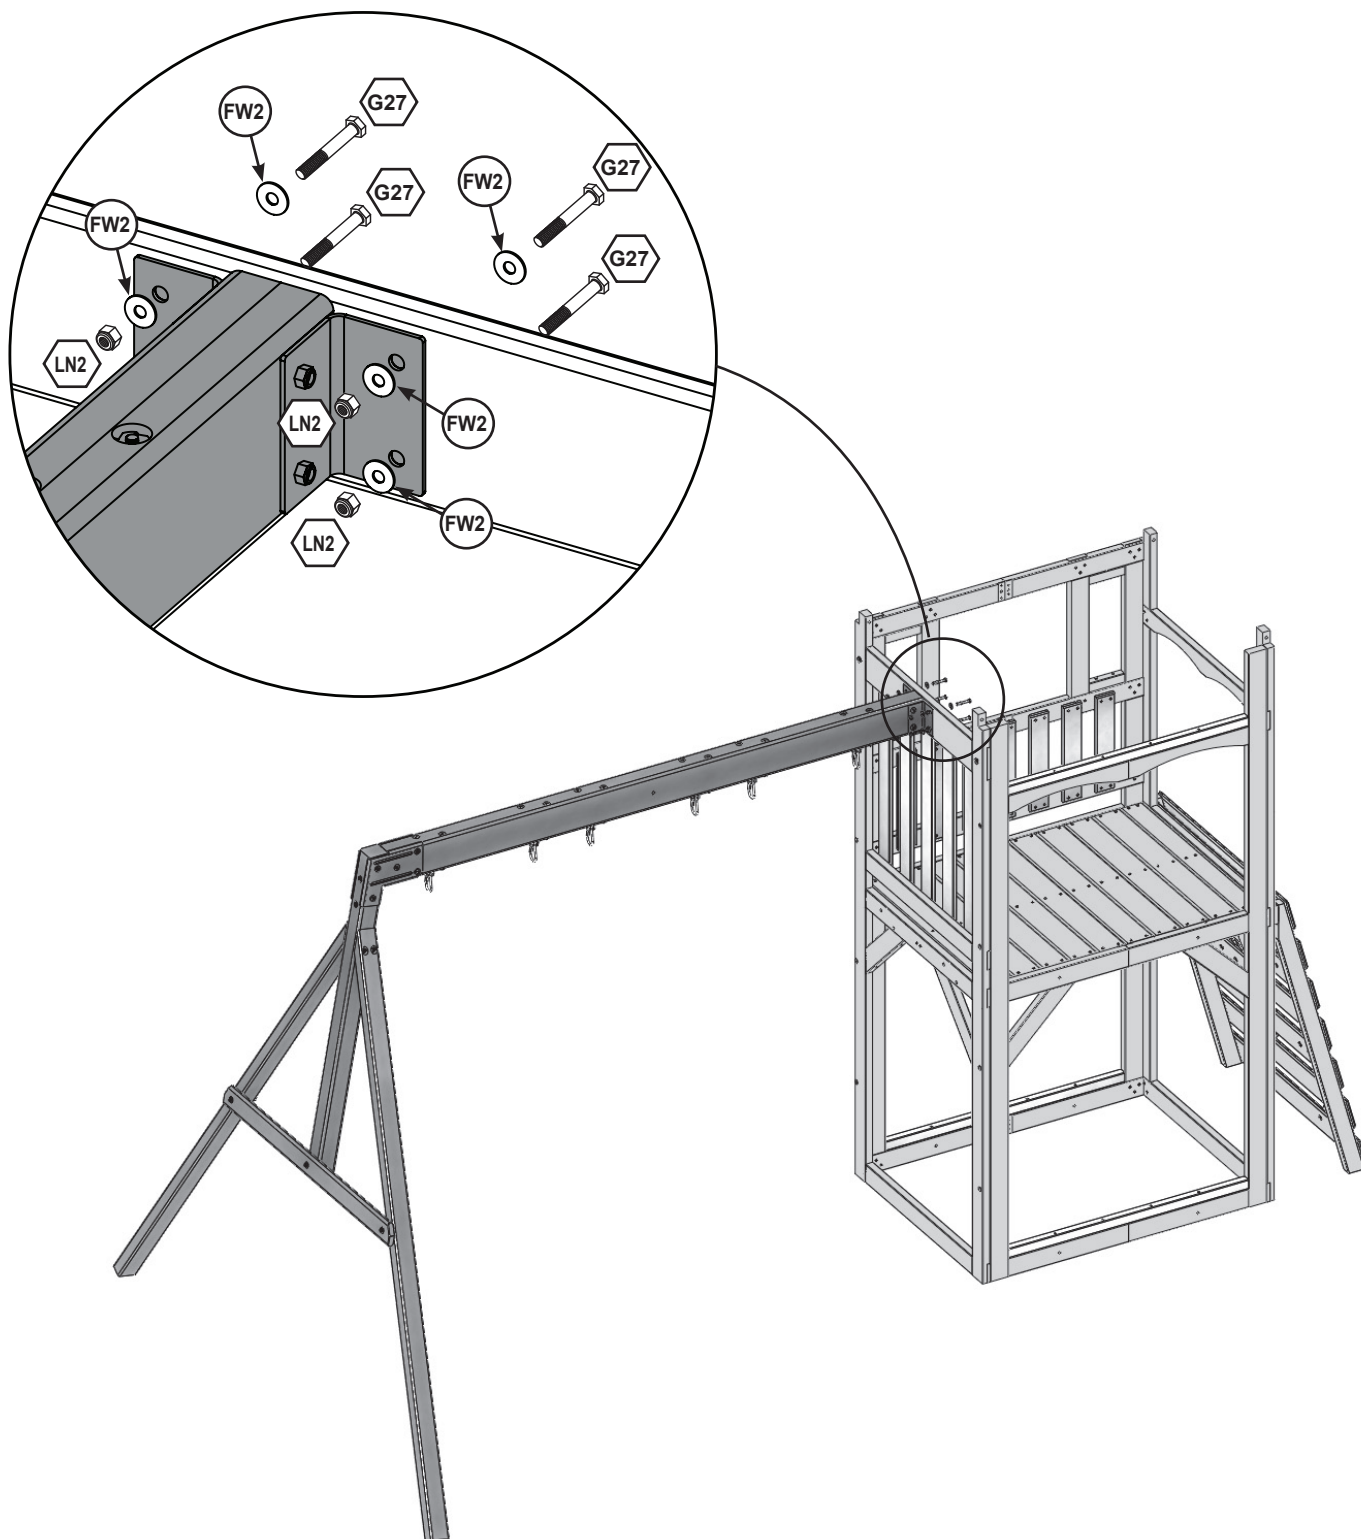


Hardware

4 x  7.9 x 44.5 mm (5/16 x 1-3/4") (LN2, 2 x FW2)


Step 25

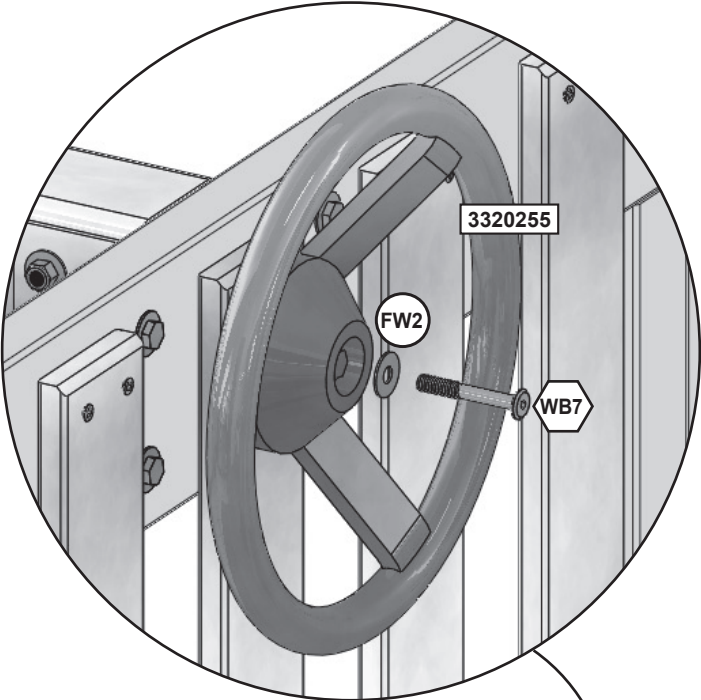


Note: T-Nut previously installed in Step 17.

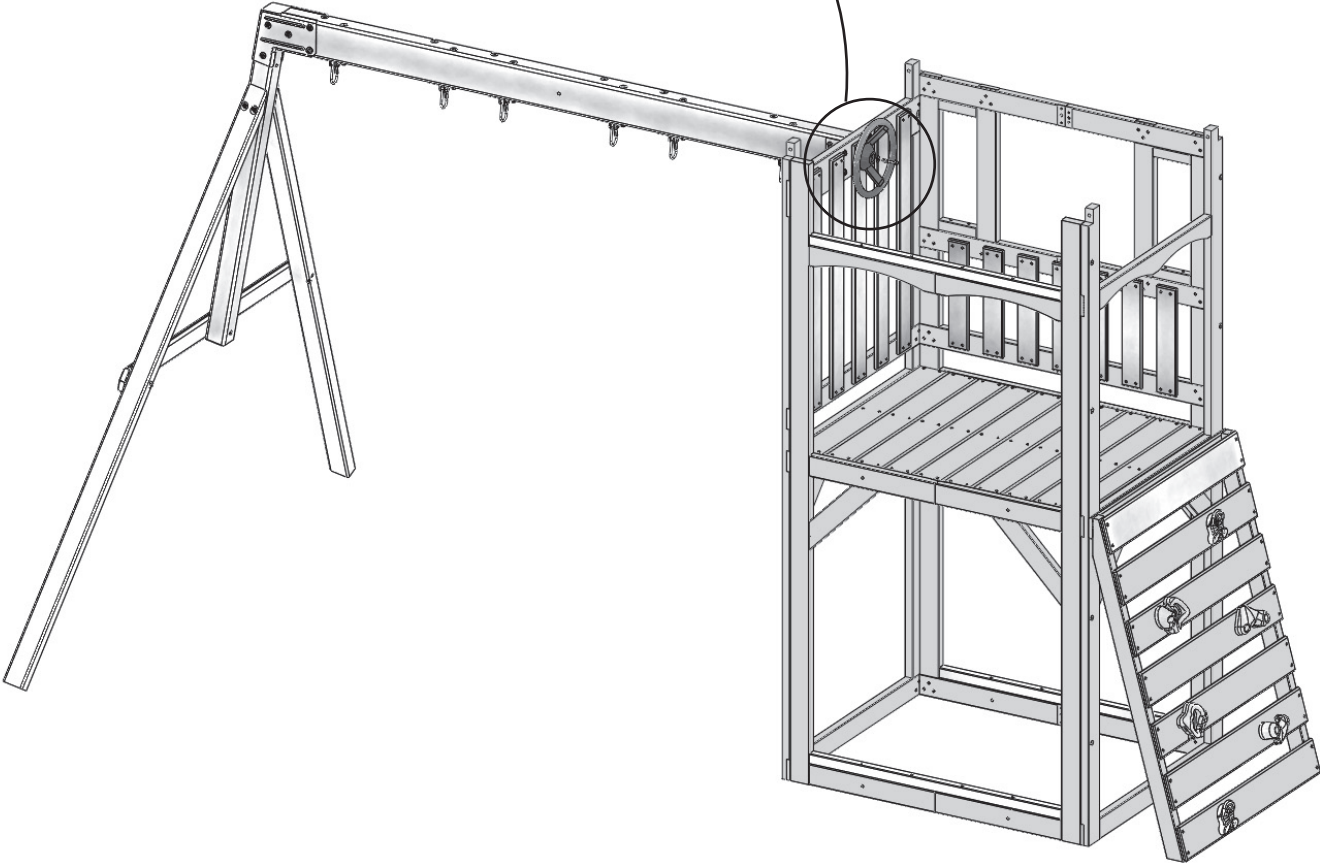

Hardware
1 x  7.9mm x 76.2mm (5/16 x 3") (FW2)

Other Parts
1 x 

Step 26 x 2

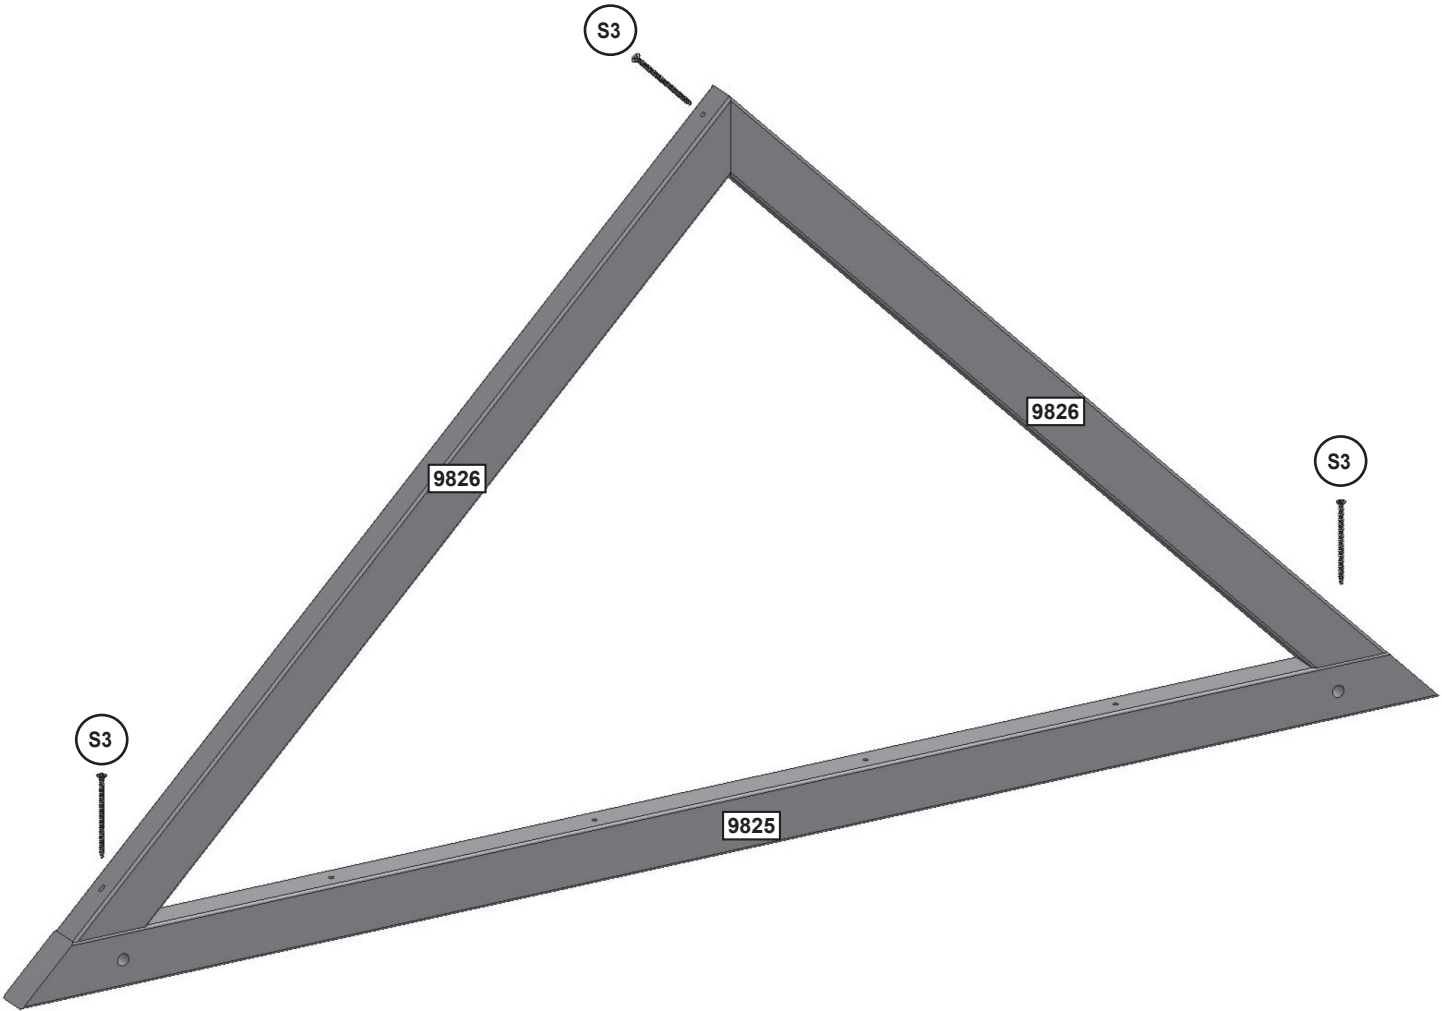


Wood Parts

- 2 x 9825 31.8 x 50.8 x 1371.6 mm (1-1/4 x 2 x 54")
- 4 x 9826 31.8 x 50.8 x 898.1 mm (1-1/4 x 2 x 35-3/8")

Hardware

- 6 x S3 #8 x 64mm (#8 x 2-1/2")

Step 27

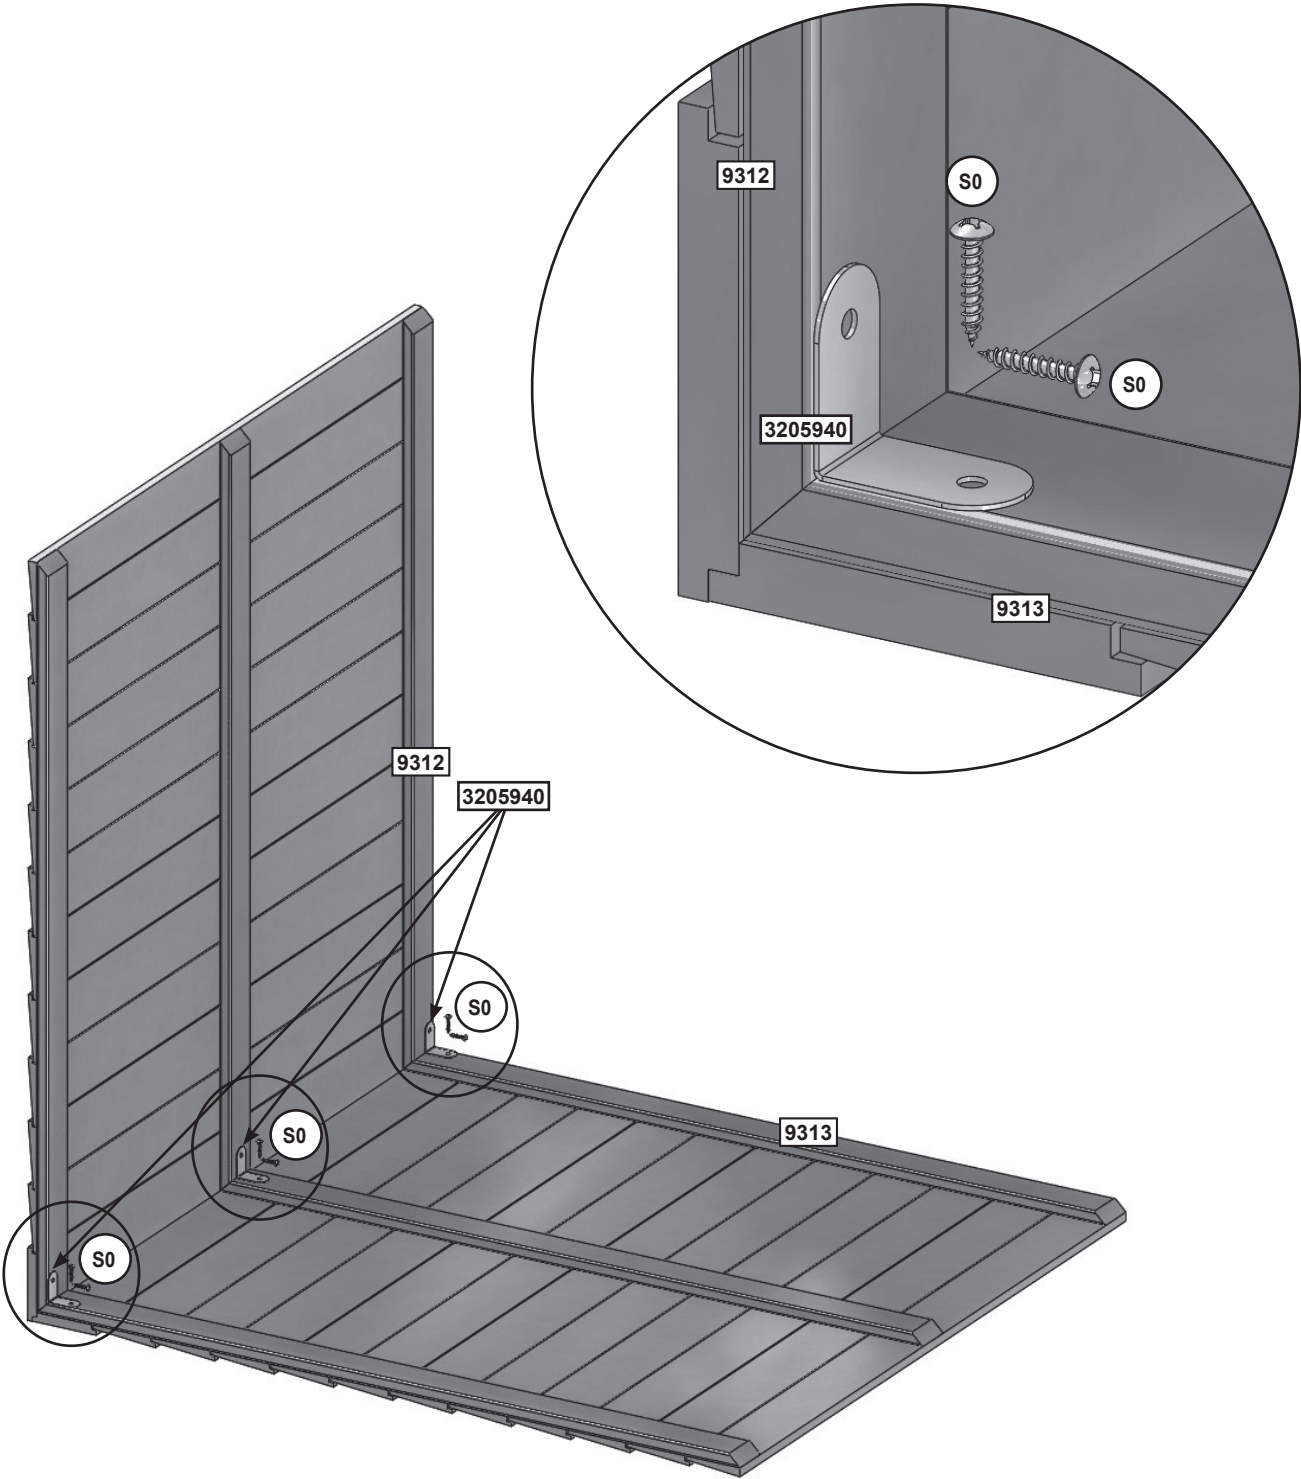

Wood Parts

- 1 x 9312 28.6 x 952.5 x 1014.4 mm (1-1/8 x 37-1/2 x 39-15/16")
1 x 9313 28.6 x 952.5 x 1008 mm (1-1/8 x 37-1/2 x 39-11/16")

Hardware

- 6 x S0 #8 x 22.2mm (#8 x 7/8")




Other Parts

- 1 x 3205940

Step 28




Gables should be flush to inside edges on both sides

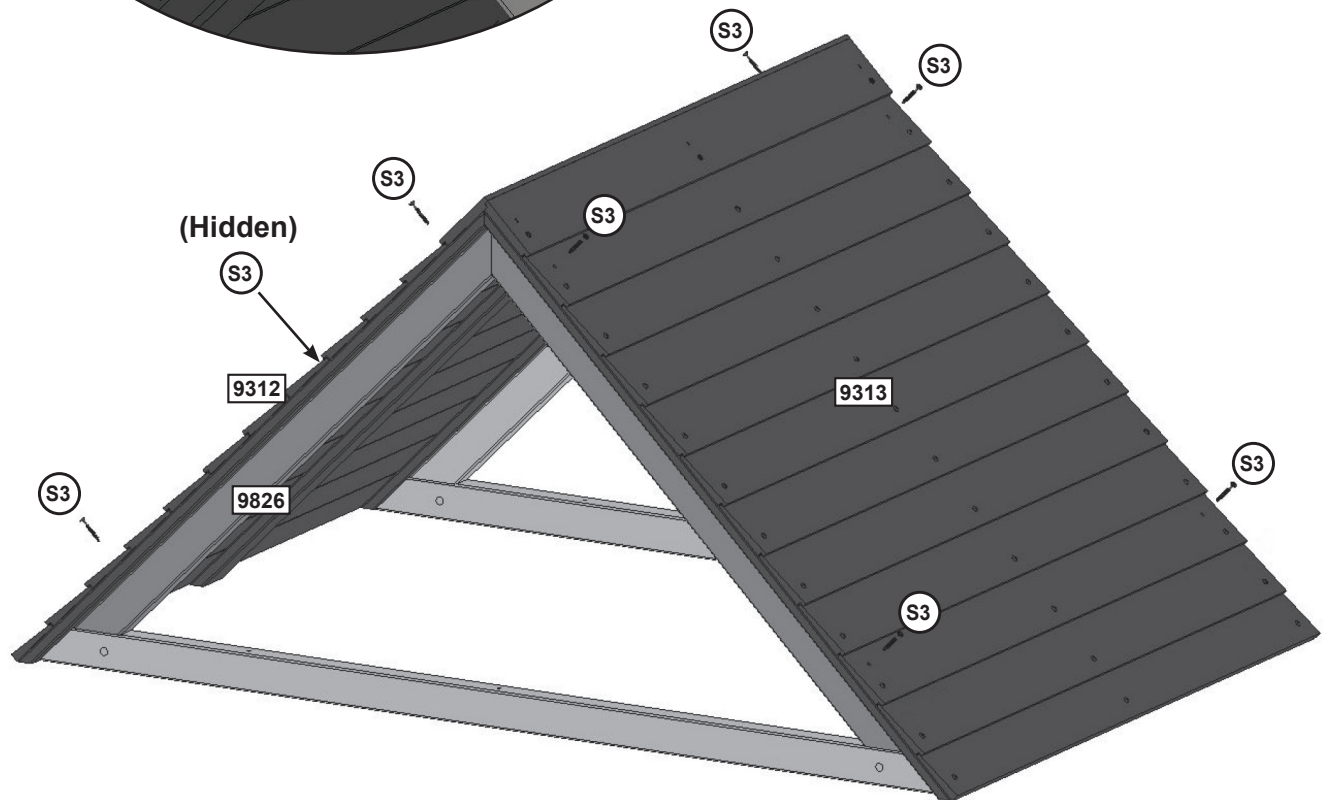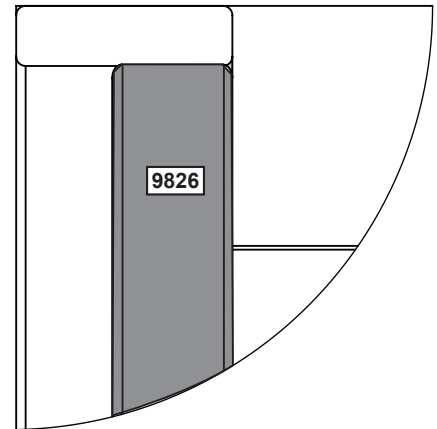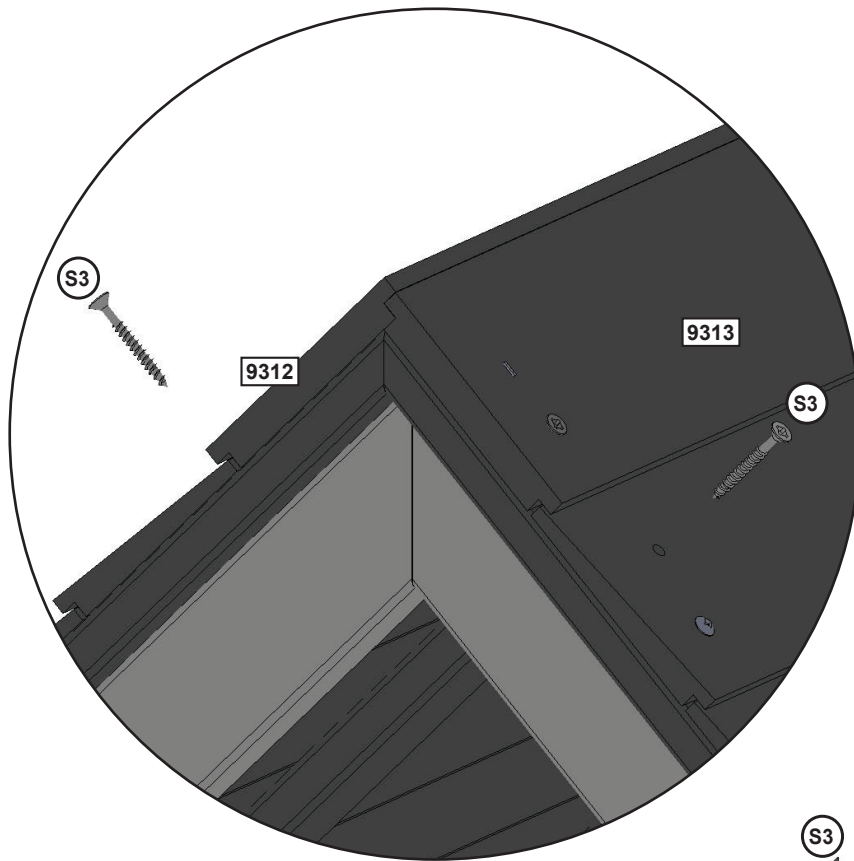

Hardware

8 x (S3) #8 x 63.5 mm (#8 x 2-1/2")



Step 29

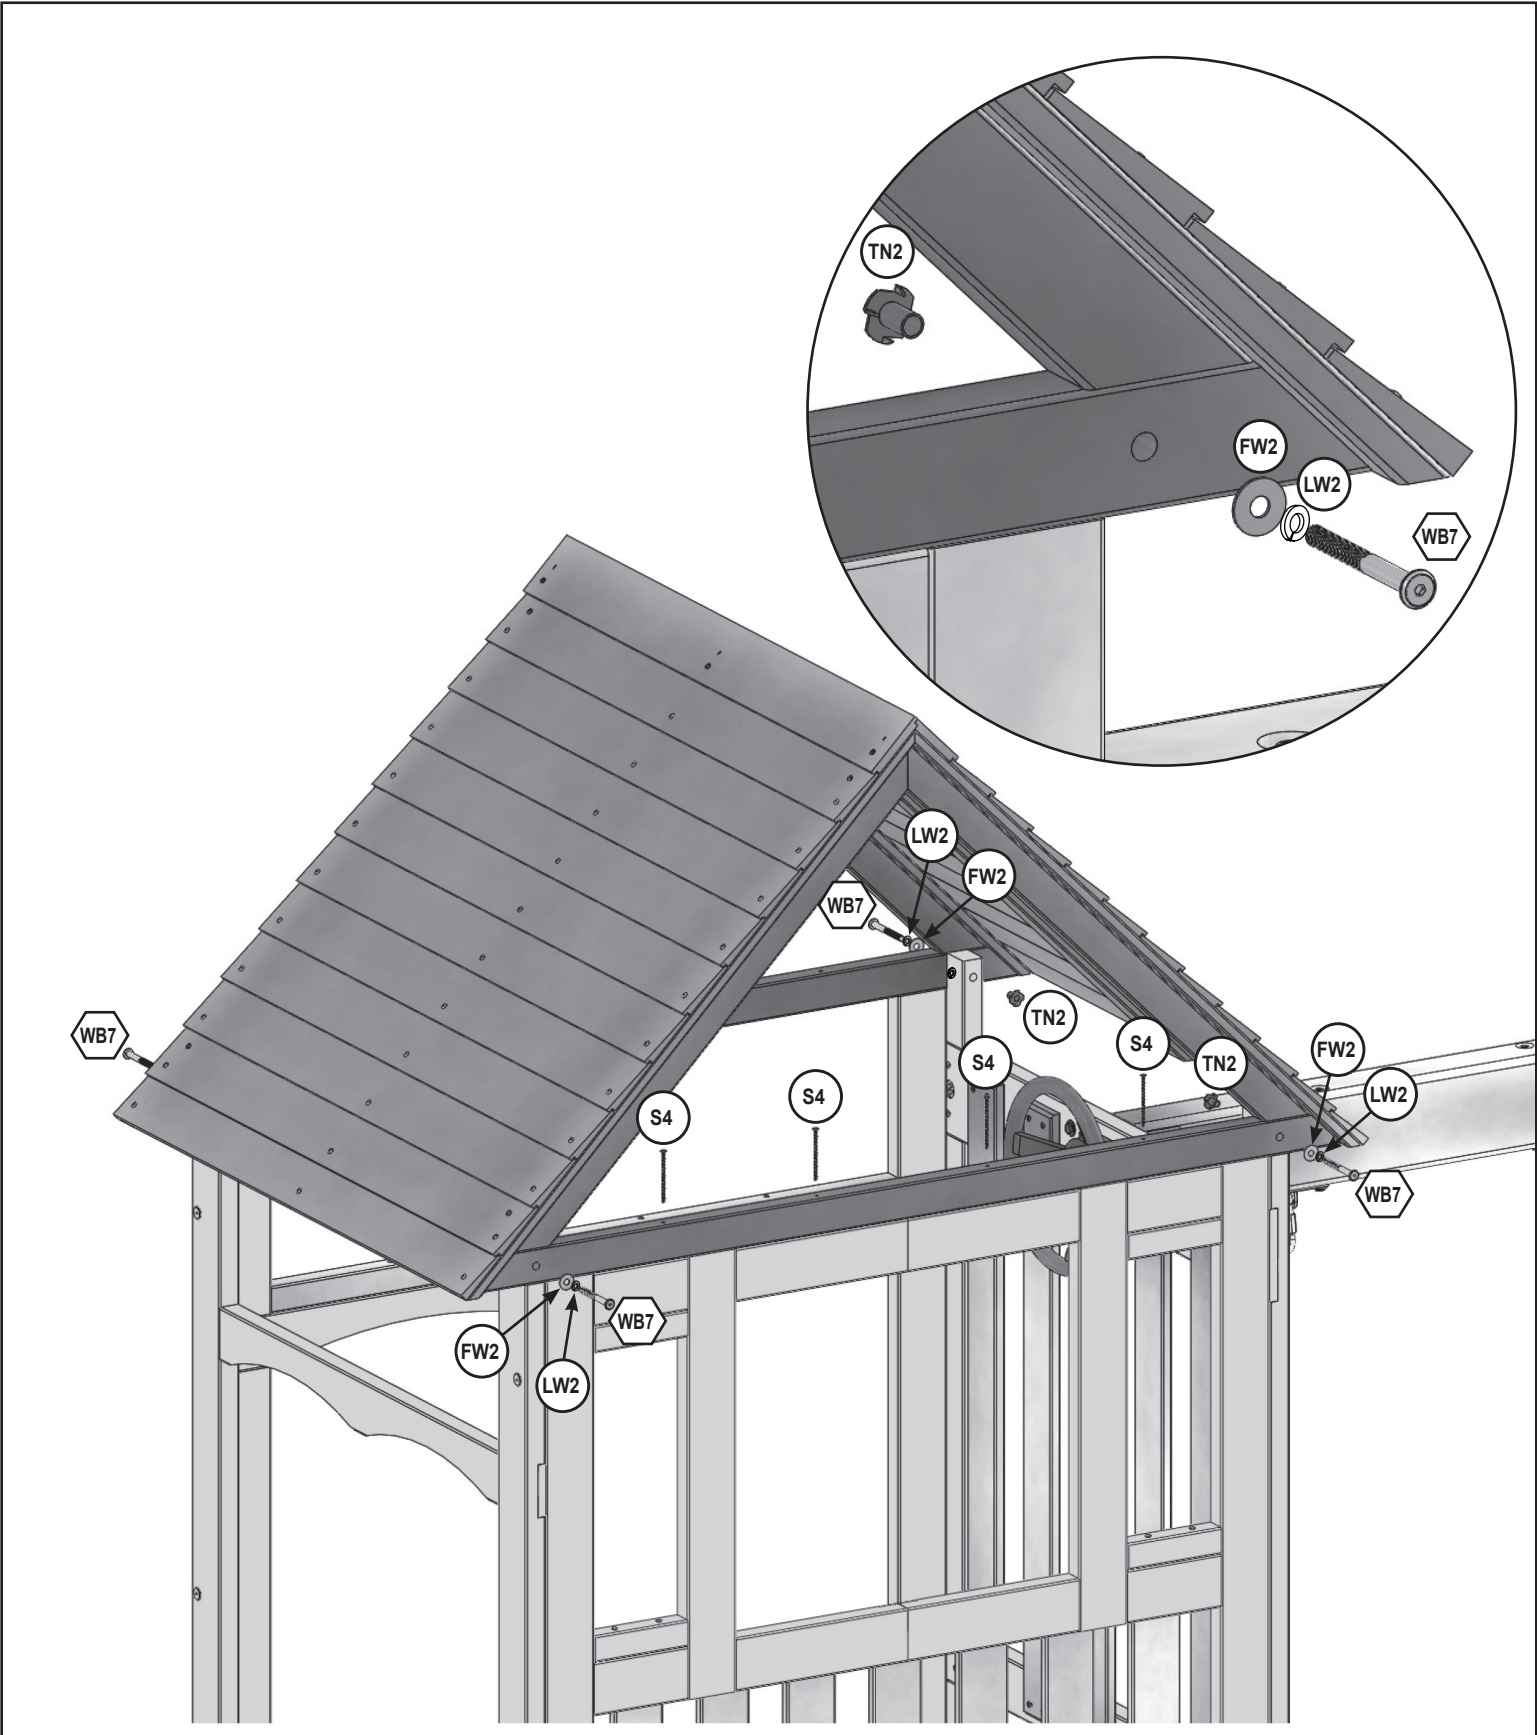

Hardware

- 4 x 7.9mm x 76.2mm (5/16 x 3") (LW2, FW2, TN2)
- 4 x #8 x 76.2mm (#8 x 3")



Step 30

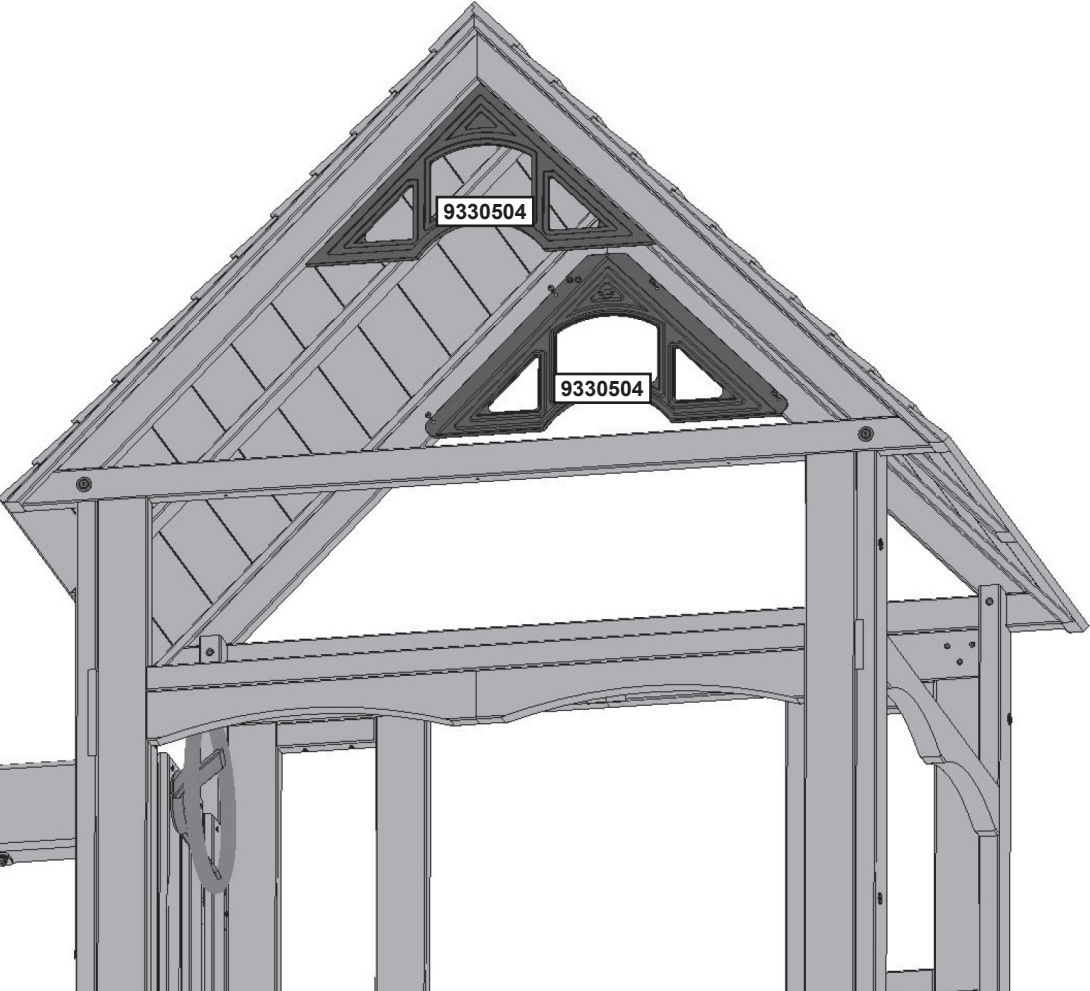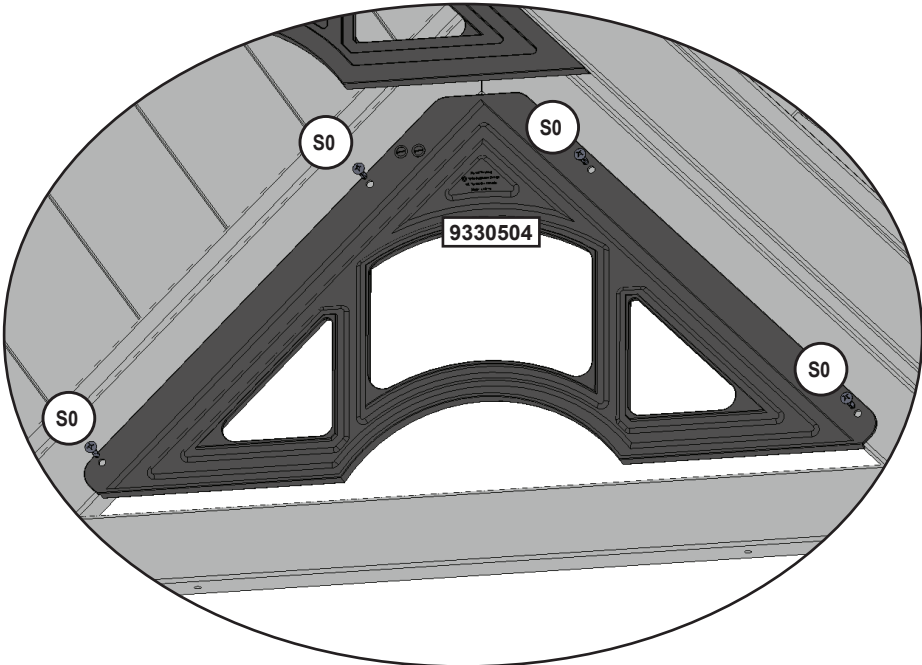



Hardware
8 x S0 #8 x 22.2mm (#8 x 7/8")

Other Parts
2 x 9330504



Step 31

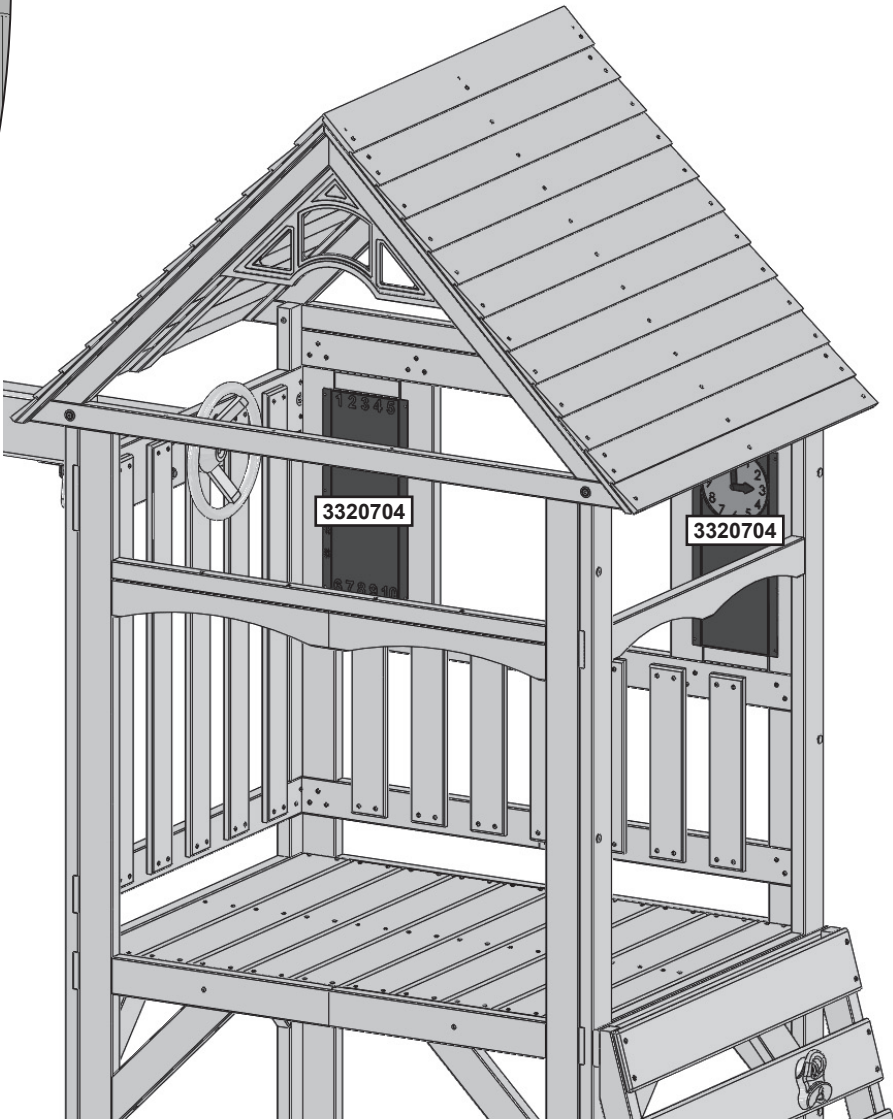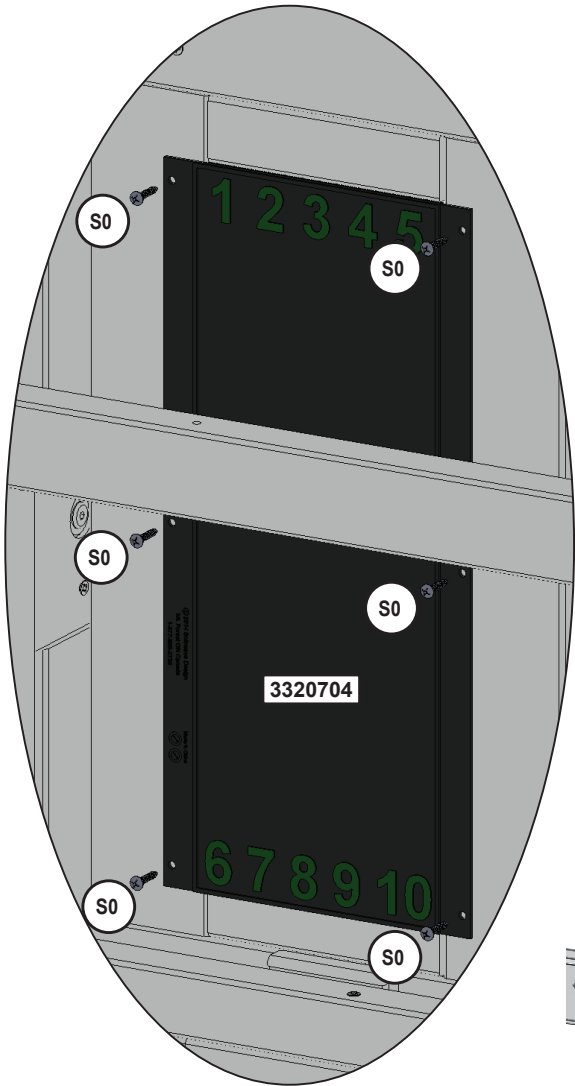

Hardware
12 x  #8 x 22.2mm (#8 x 7/8")

Other Parts
2 x 

Step 32

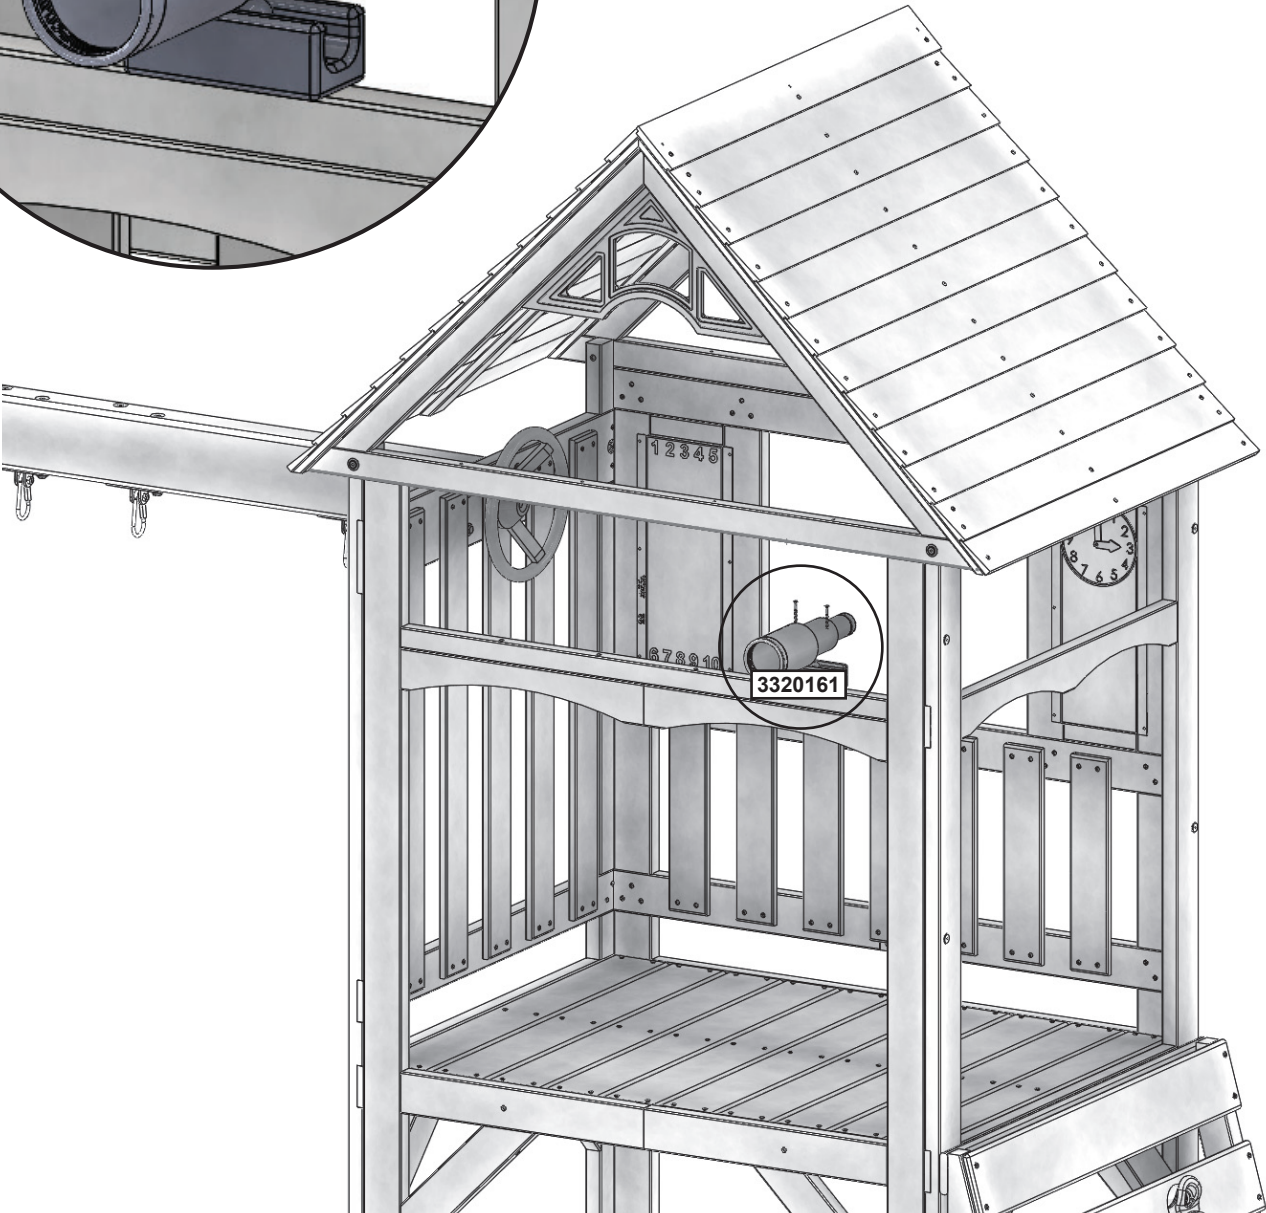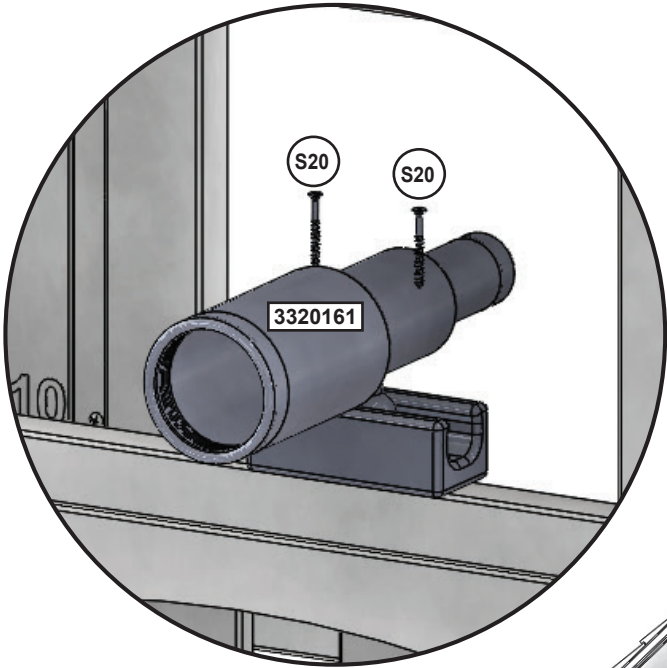


Hardware

2 x  #8 x 35mm (#8 x 1-3/8")


Other Parts

1 x 

Step 33

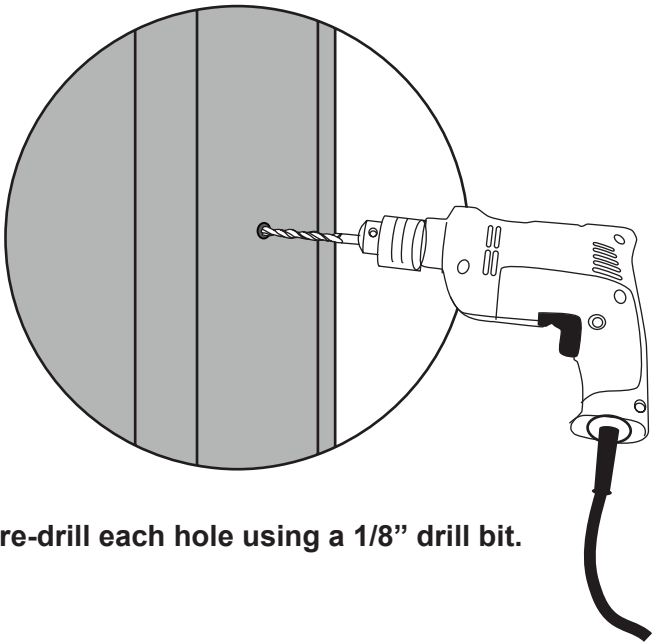

Pre-drill each hole using a 1/8" drill bit.

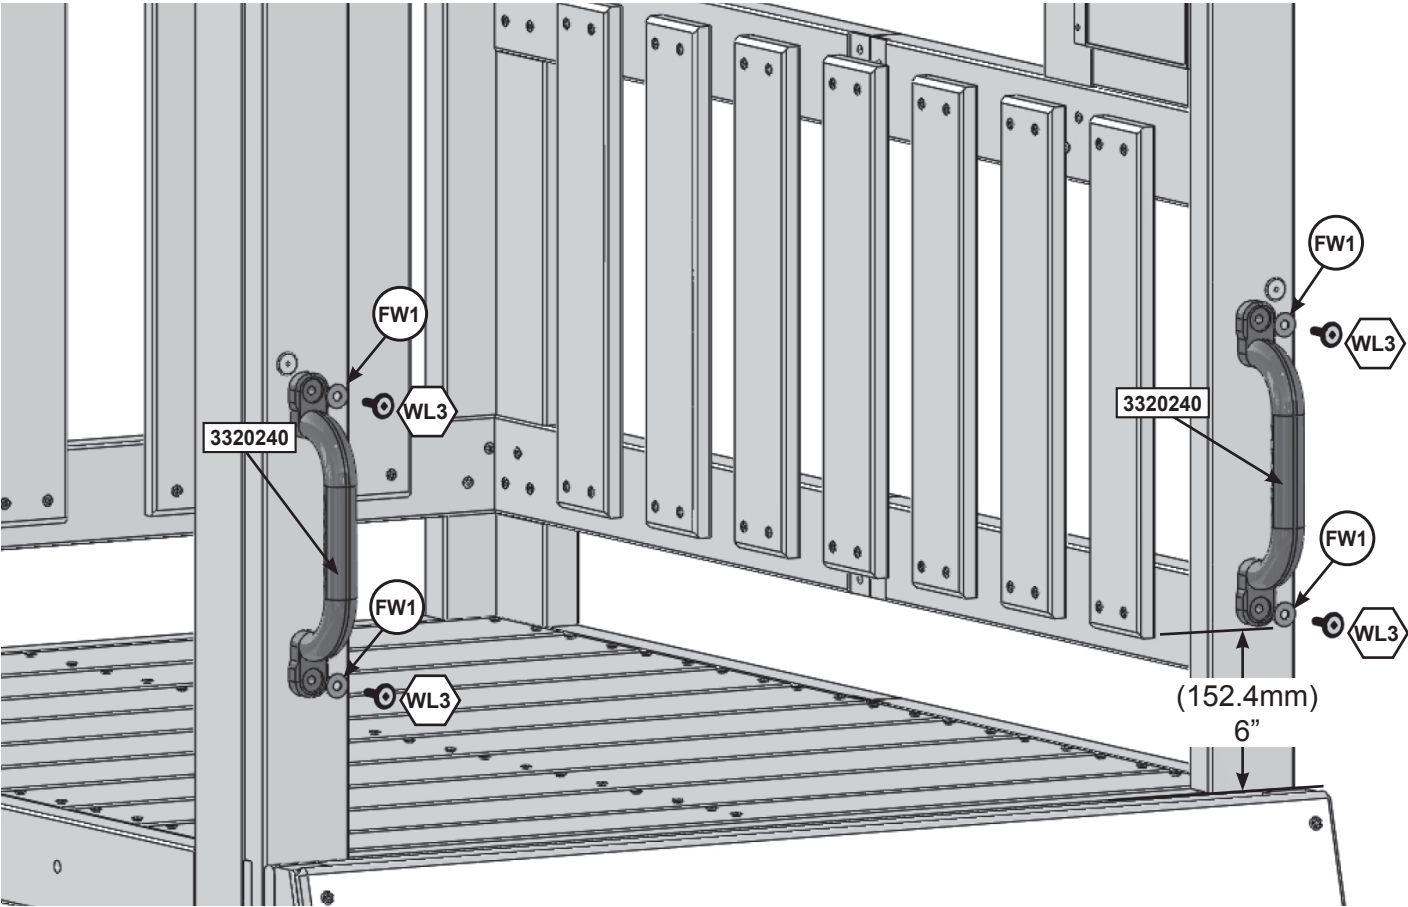


Hardware

4 x 6.4 x 35 mm (1/4 x 1-3/8") (FW1)

Other Parts

1 x


Step 34

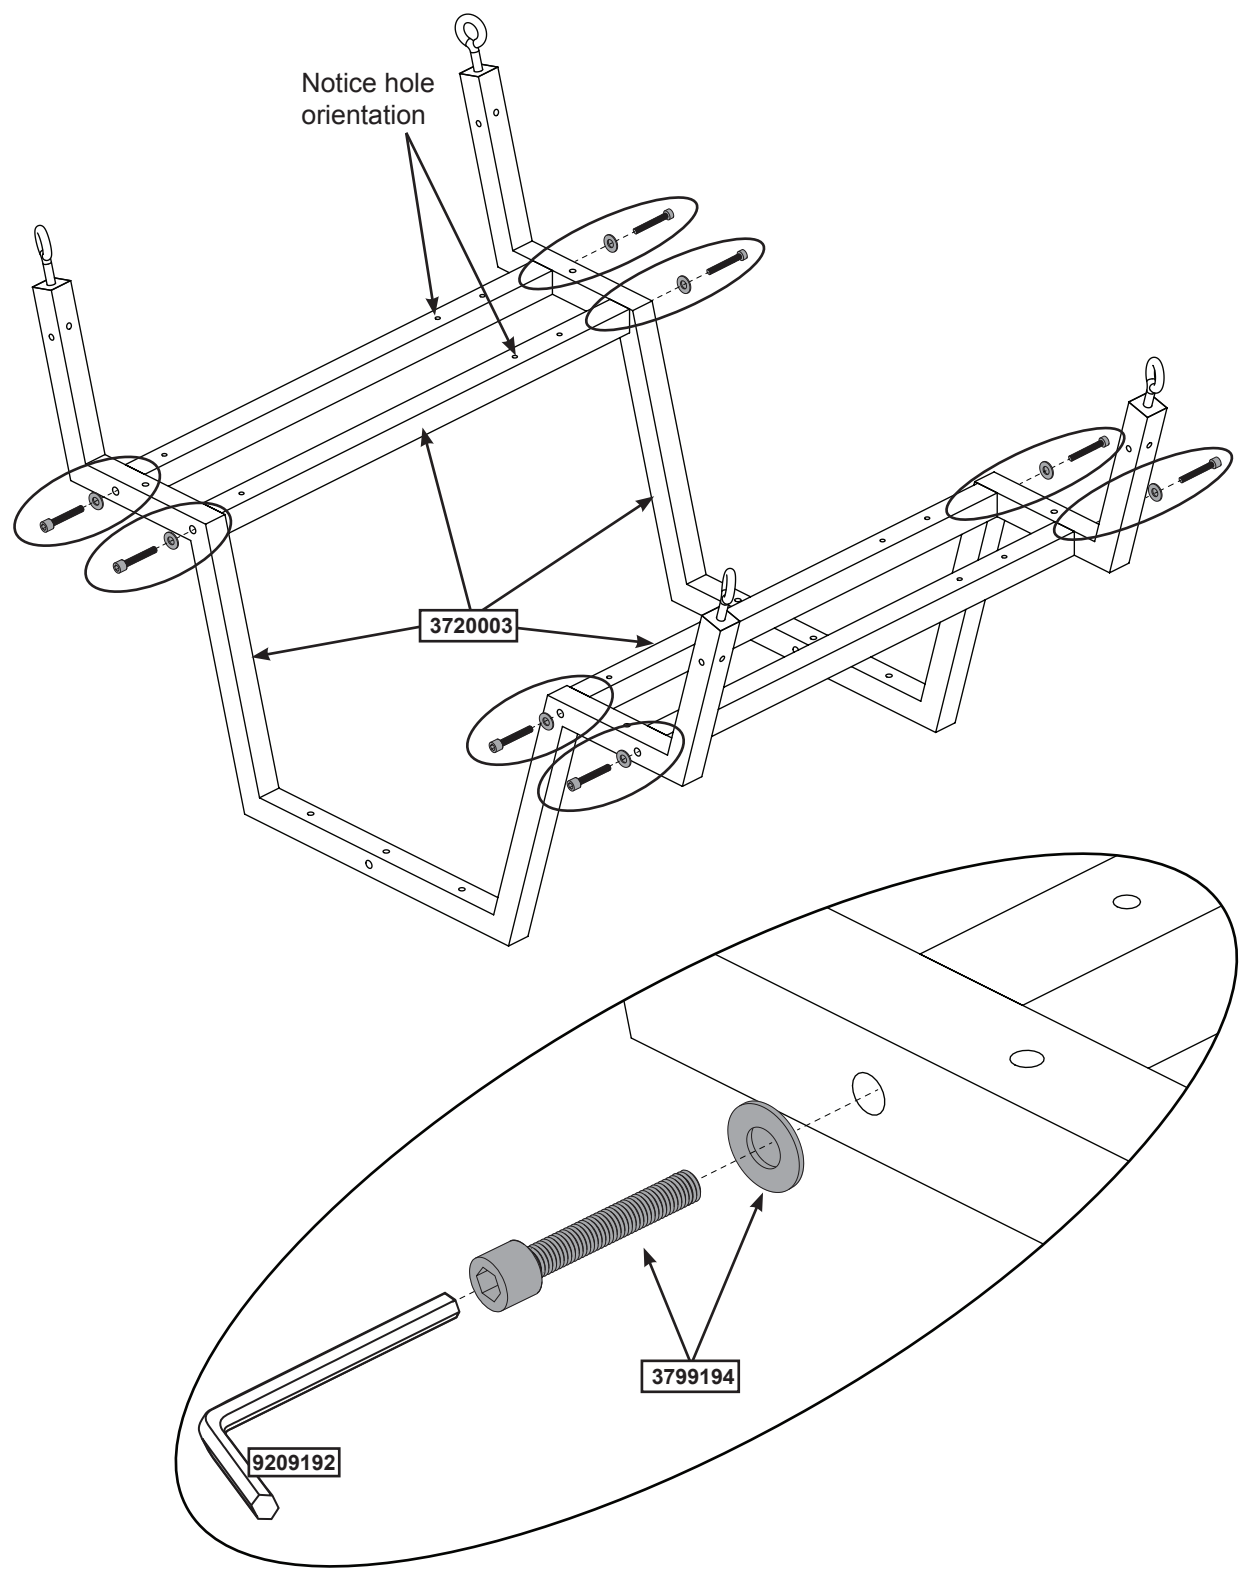


Other Parts

- 8 x 3799194
- 1 x 3720003
- 1 x 9209192

Step 35

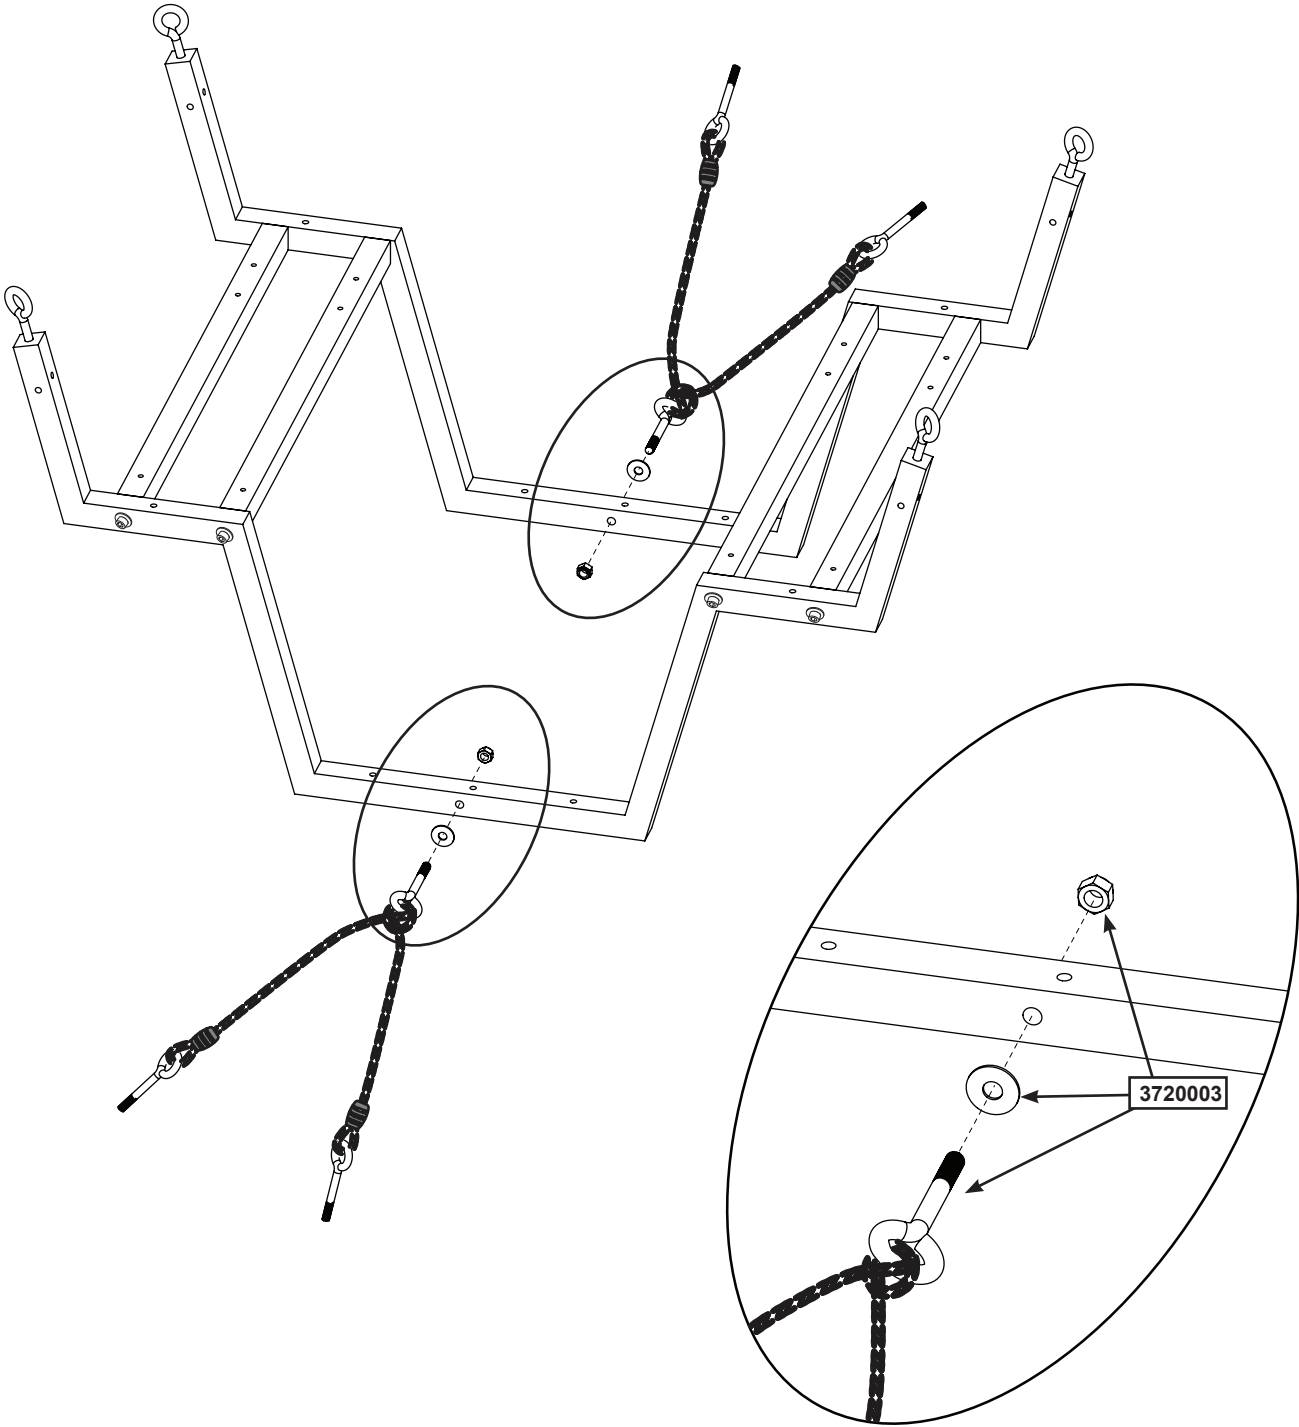

Step 36

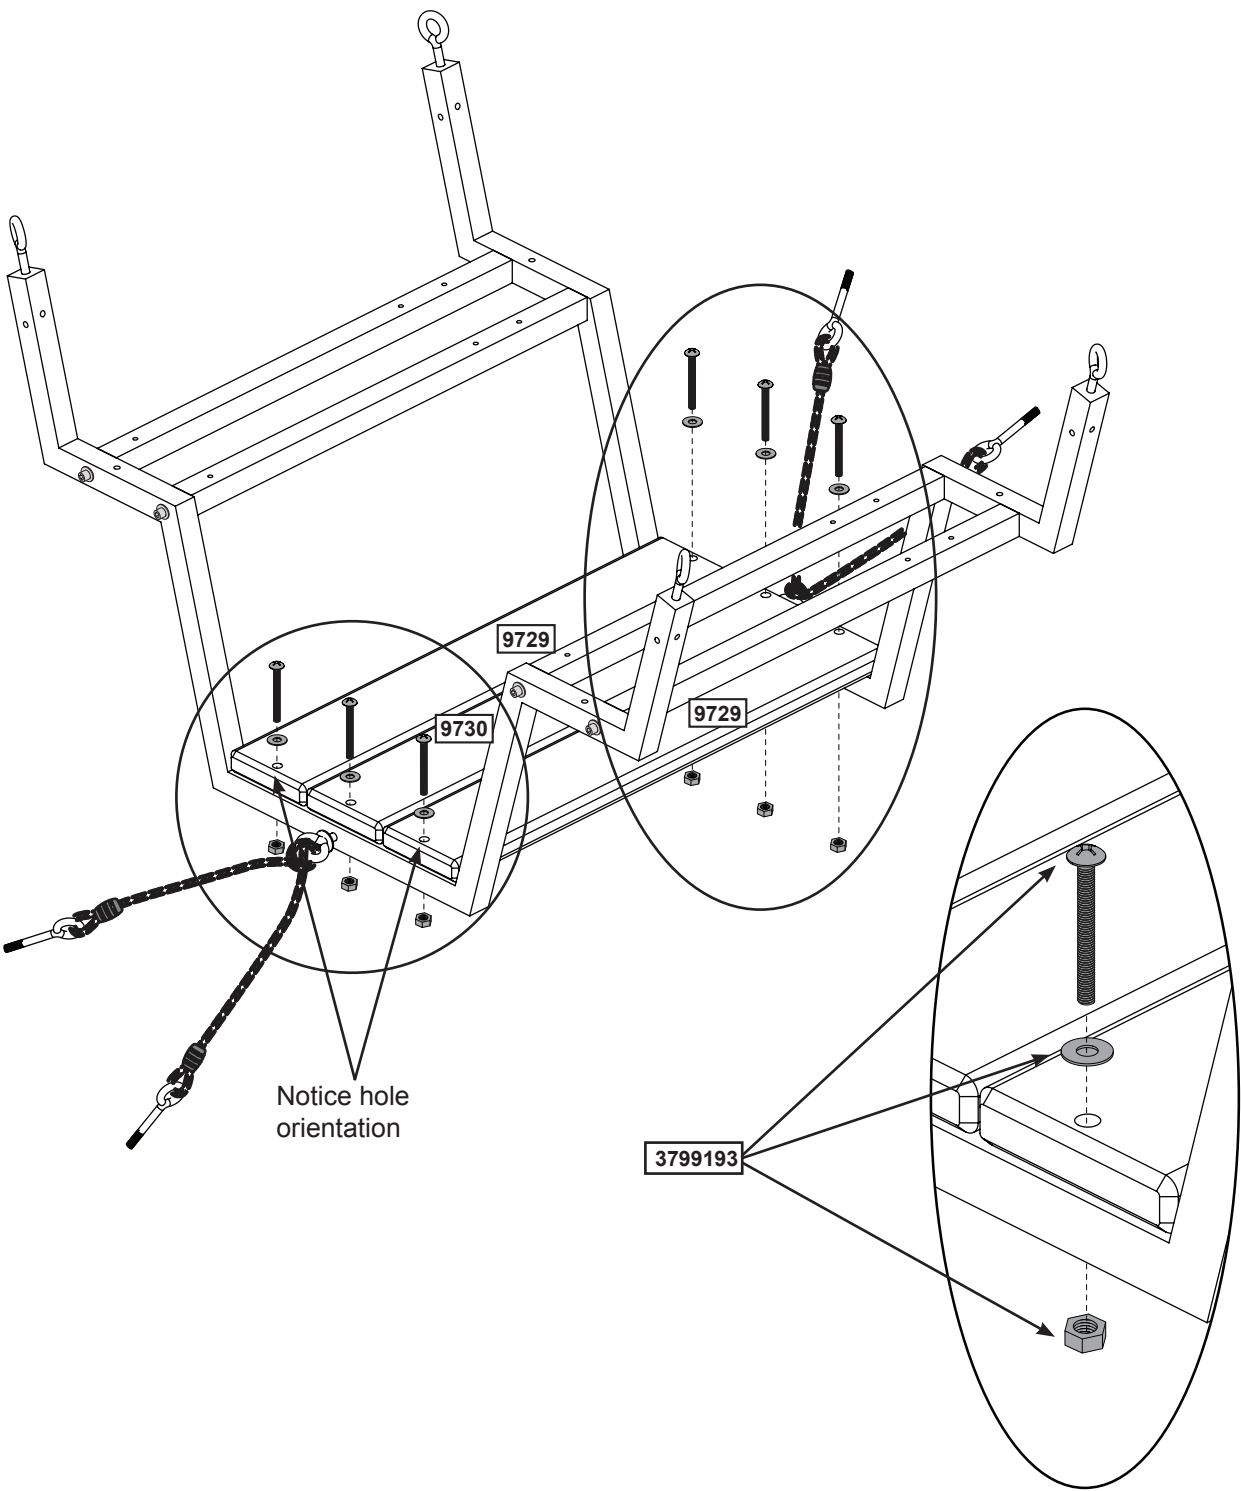


Wood Parts

- 2 x 9729 23.8 x 101.6 x 584.8 mm (15/16" x 4" x 23")
- 1 x 9730 23.8 x 101.6 x 584.8 mm (15/16" x 4" x 23")

Other Parts

- 6 x 3799193

Step 37

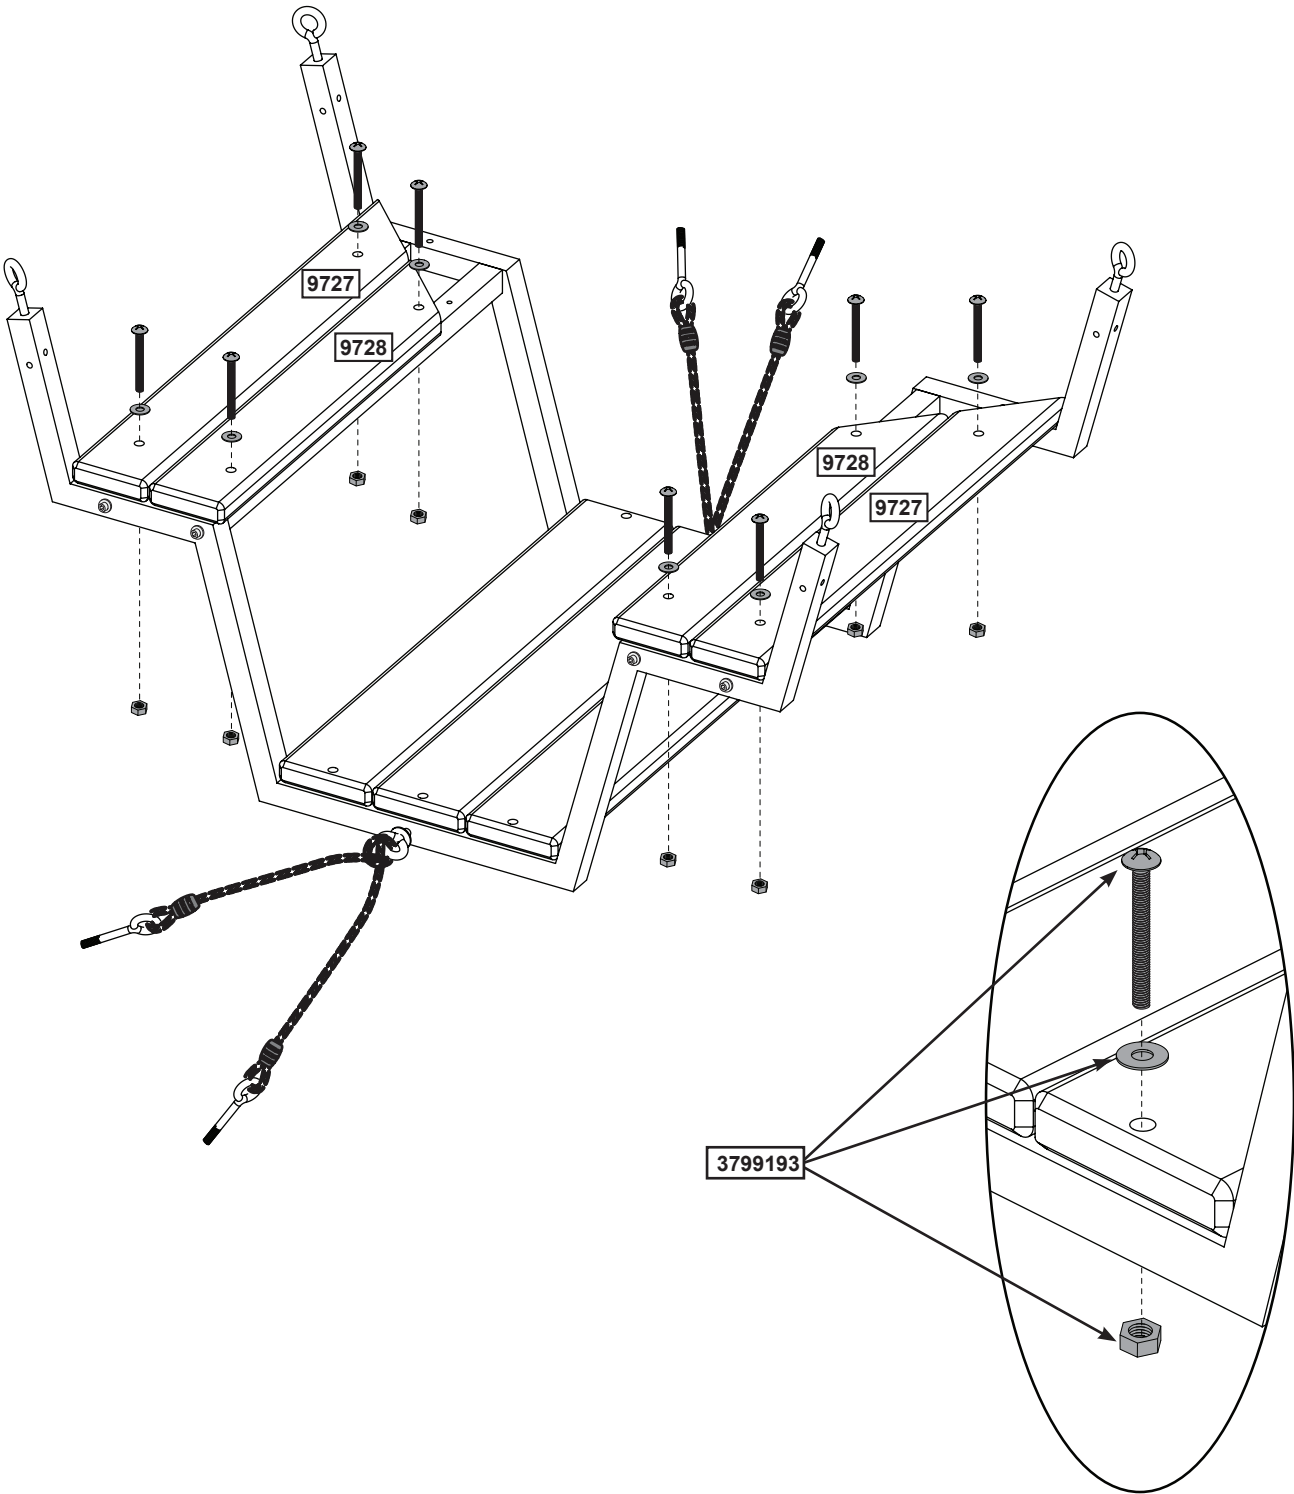


Wood Parts

- 2 x 9727 23.8 x 82.6 x 584.8 mm (15/16" x 3-1/4" x 23")
- 2 x 9728 23.8 x 82.6 x 500.2 mm (15/16" x 3-1/4" x 19-11/16")

Other Parts

- 8 x 3799193

Step 38

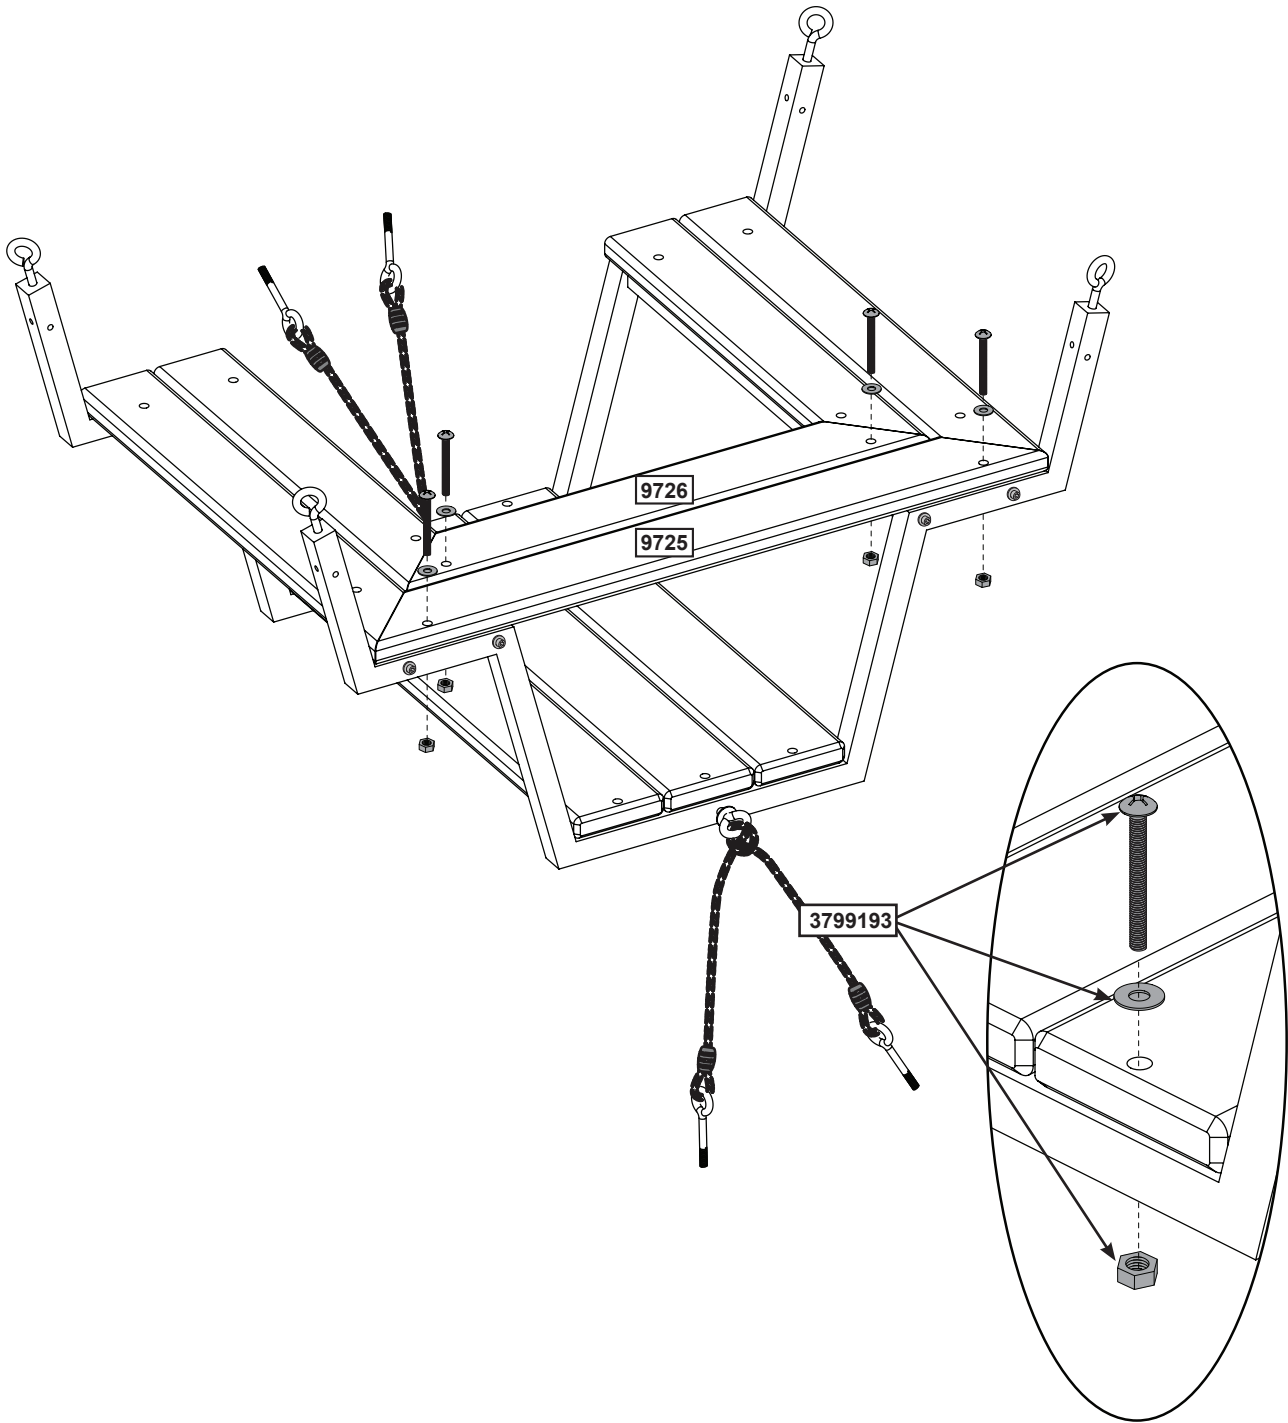


Wood Parts

- 1 x 9725 23.8 x 82.6 x 761.2 mm (15/16" x 3-1/4" x 30")
1 x 9726 23.8 x 82.6 x 592.3 mm (15/16" x 3-1/4" x 23-5/16")

Other Parts

- 4 x 3799193

Step 39

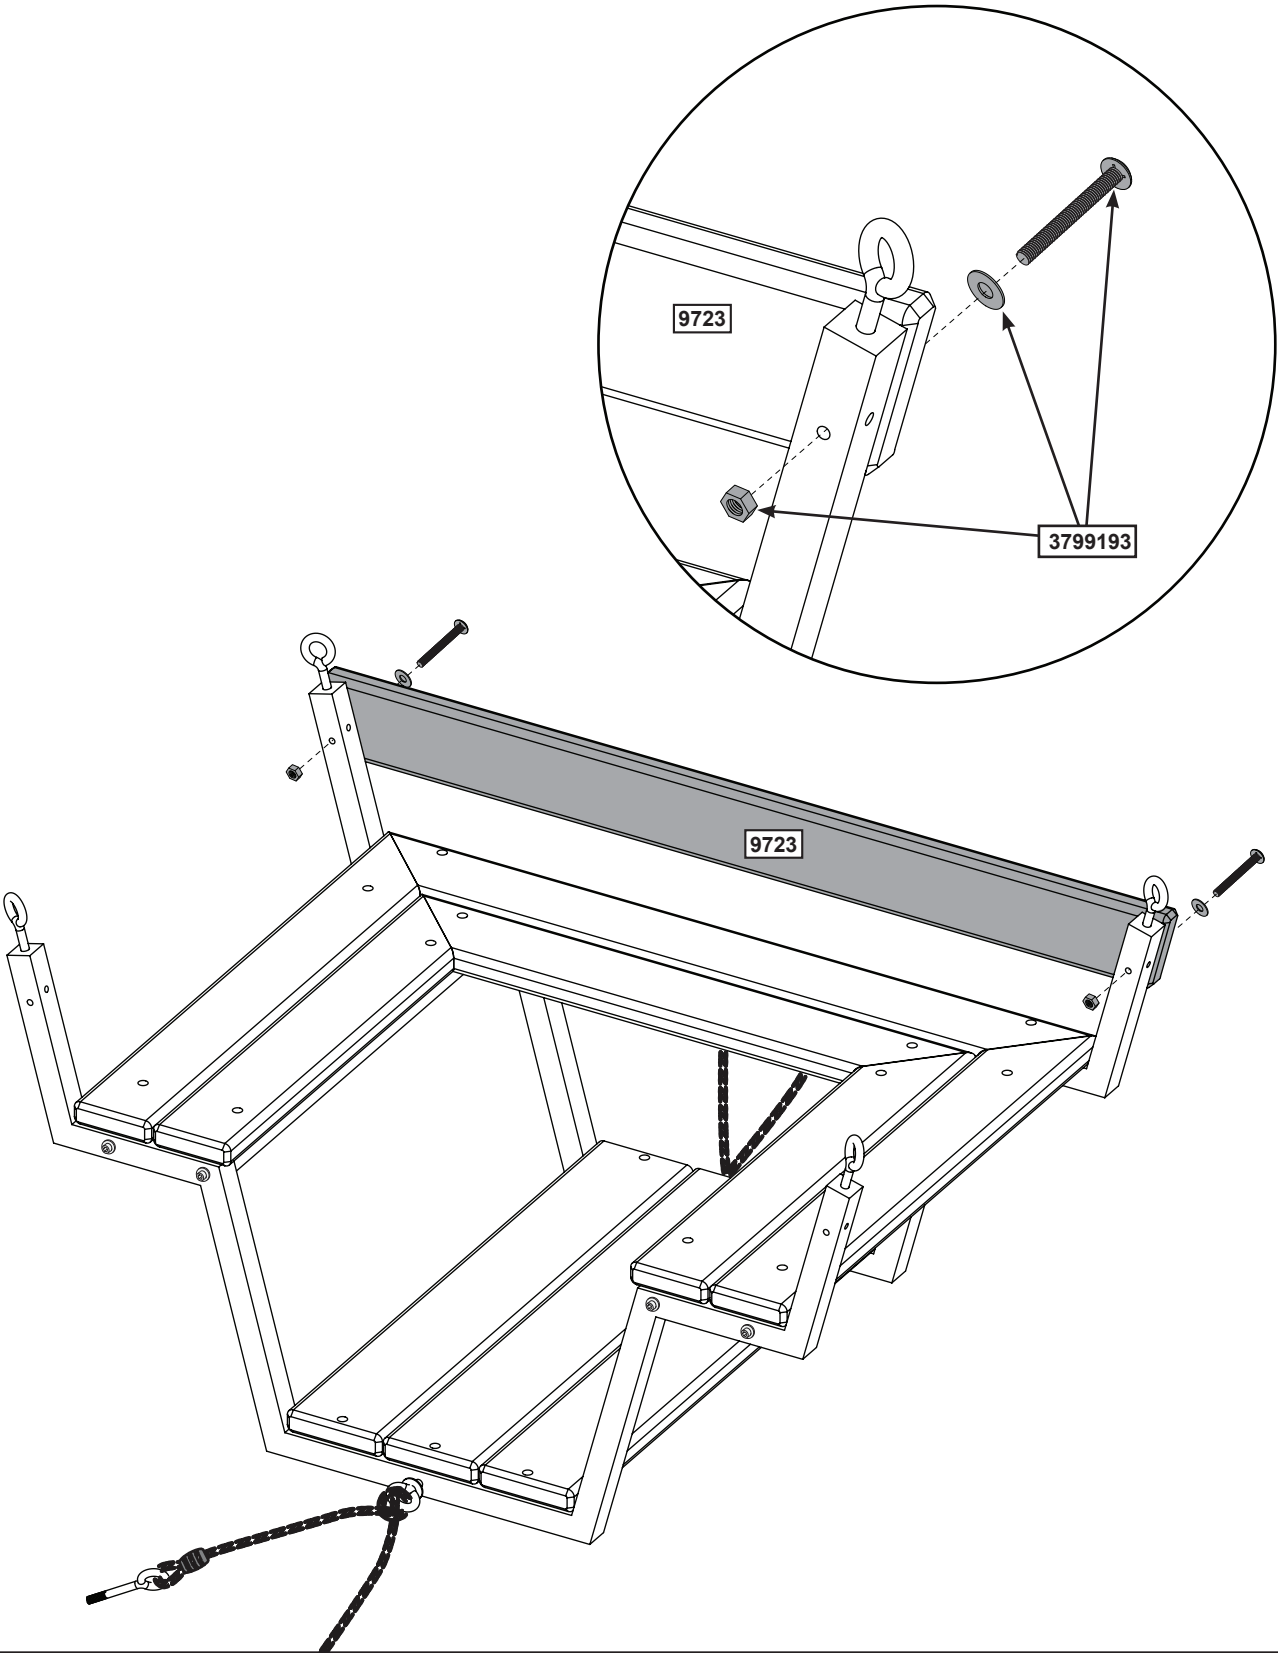


Wood Parts

1 x 9723 23.8 x 82.6 x 905.7 mm (15/16" x 3-1/4" x 35-5/8")

Other Parts

2 x 3799193

Step 40

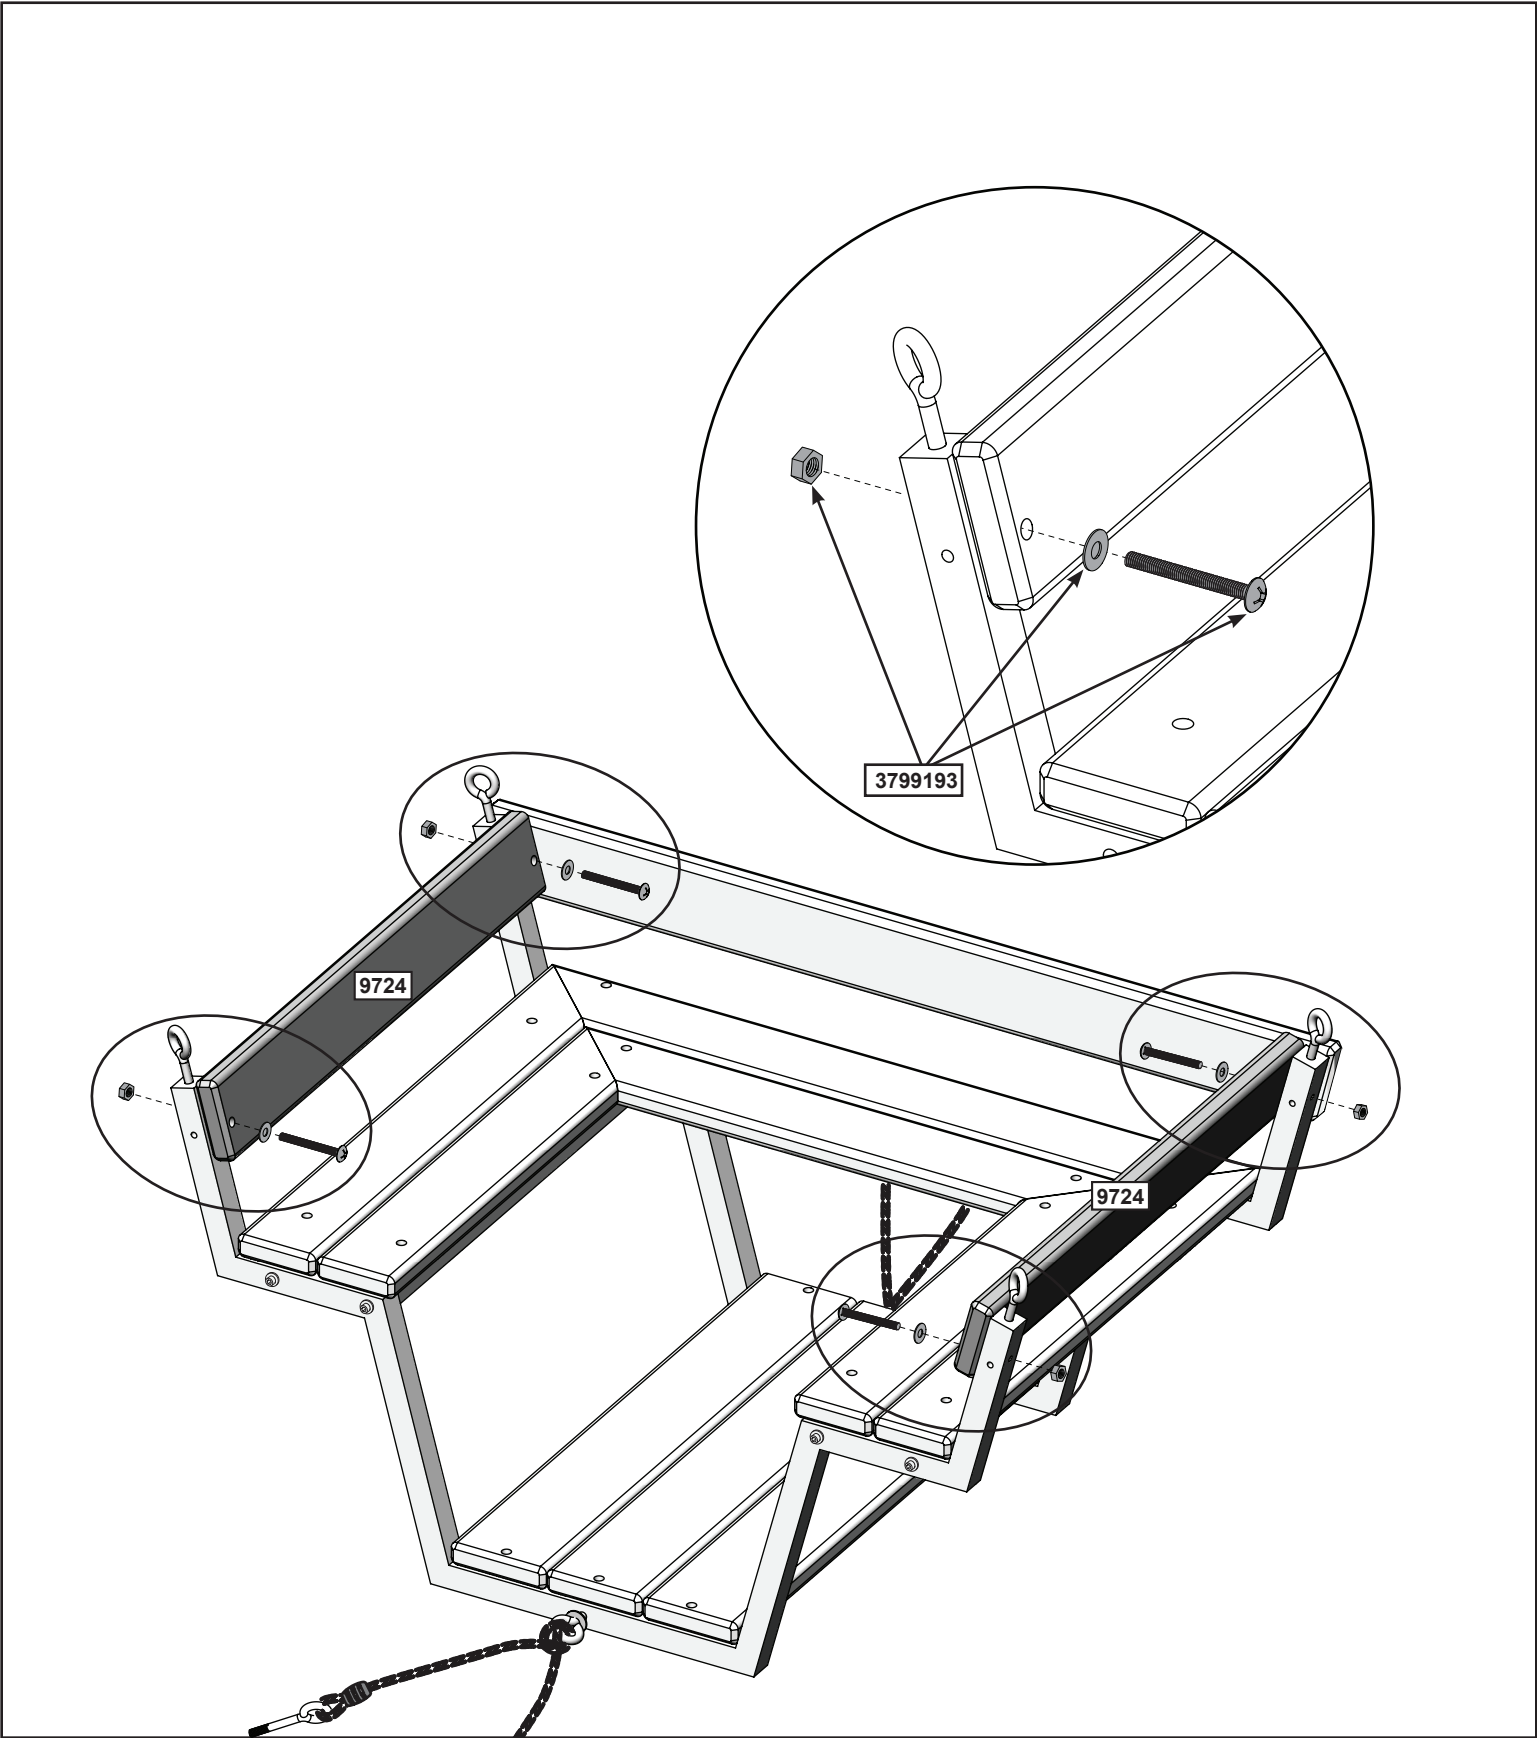


Wood Parts

2 x 9724 23.8 x 82.6 x 584.8 mm (15/16" x 3-1/4" x 23")

Other Parts


4 x 3799193

Step 41

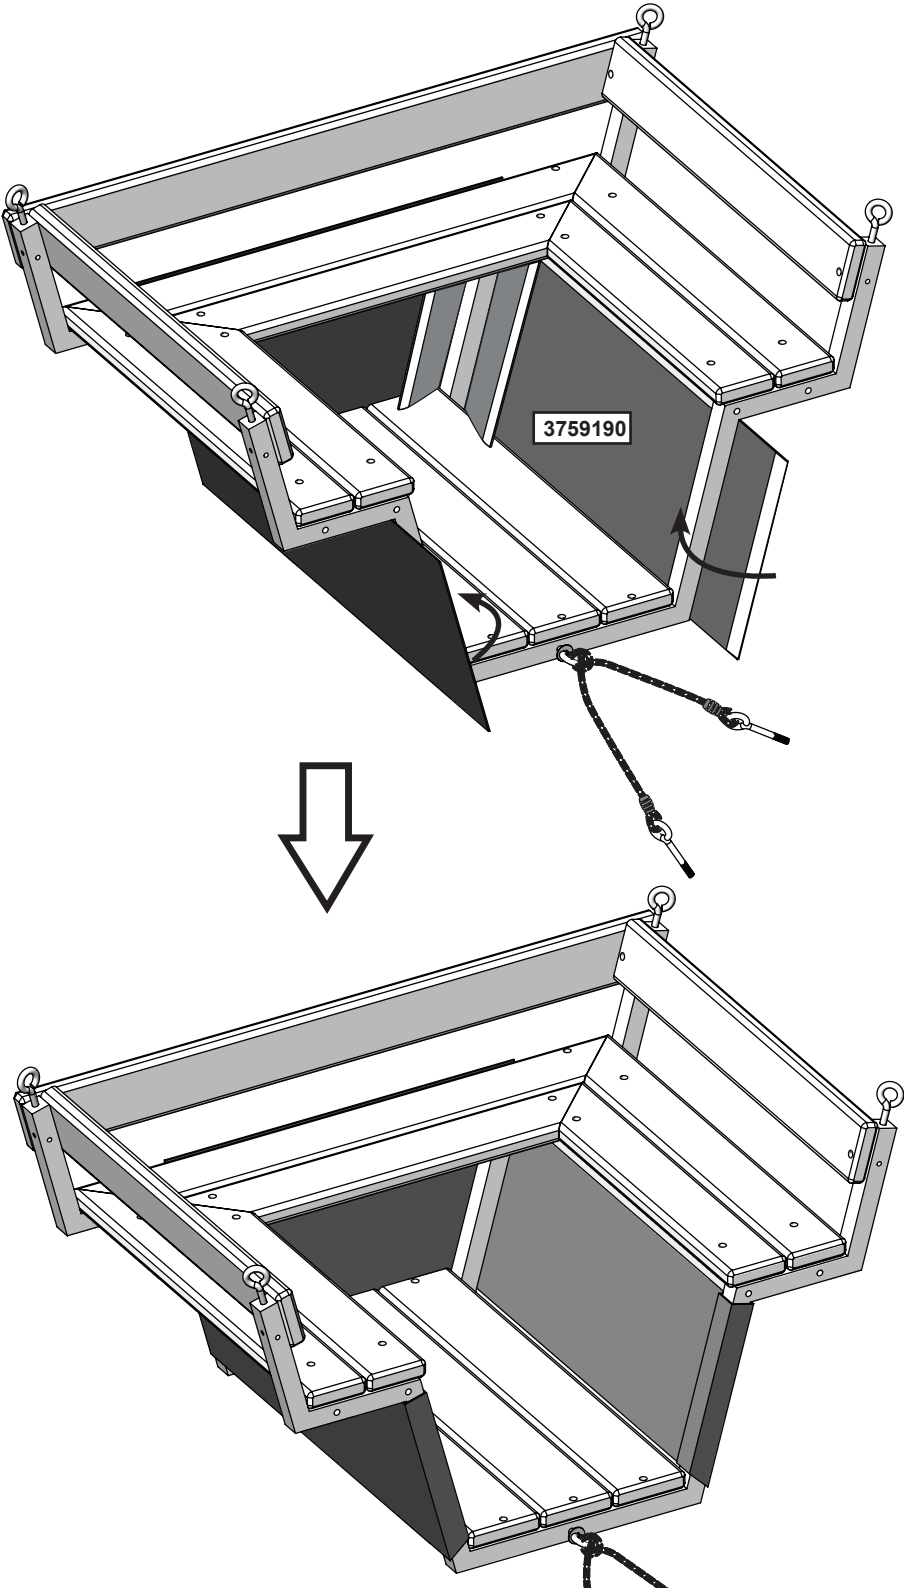


Other Parts
1 x 3759190

Step 42

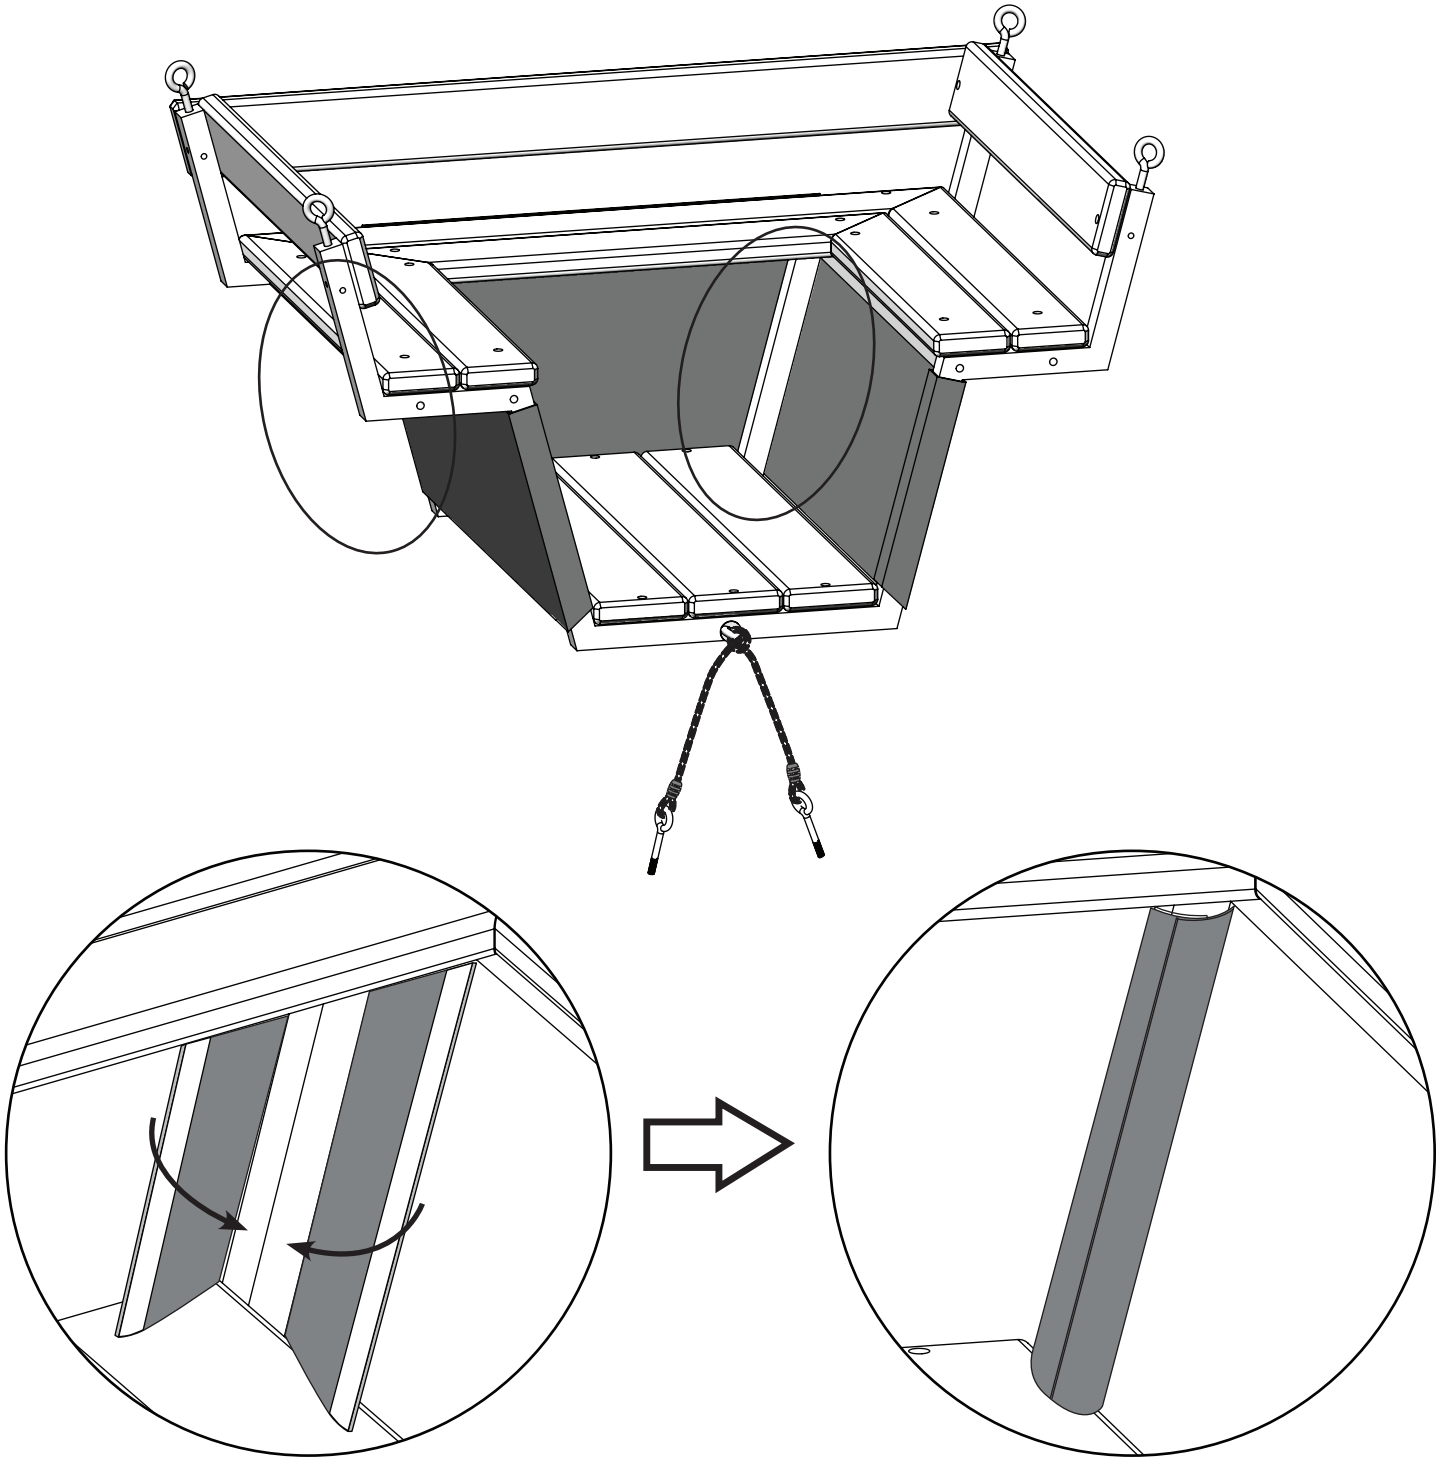



Step 43

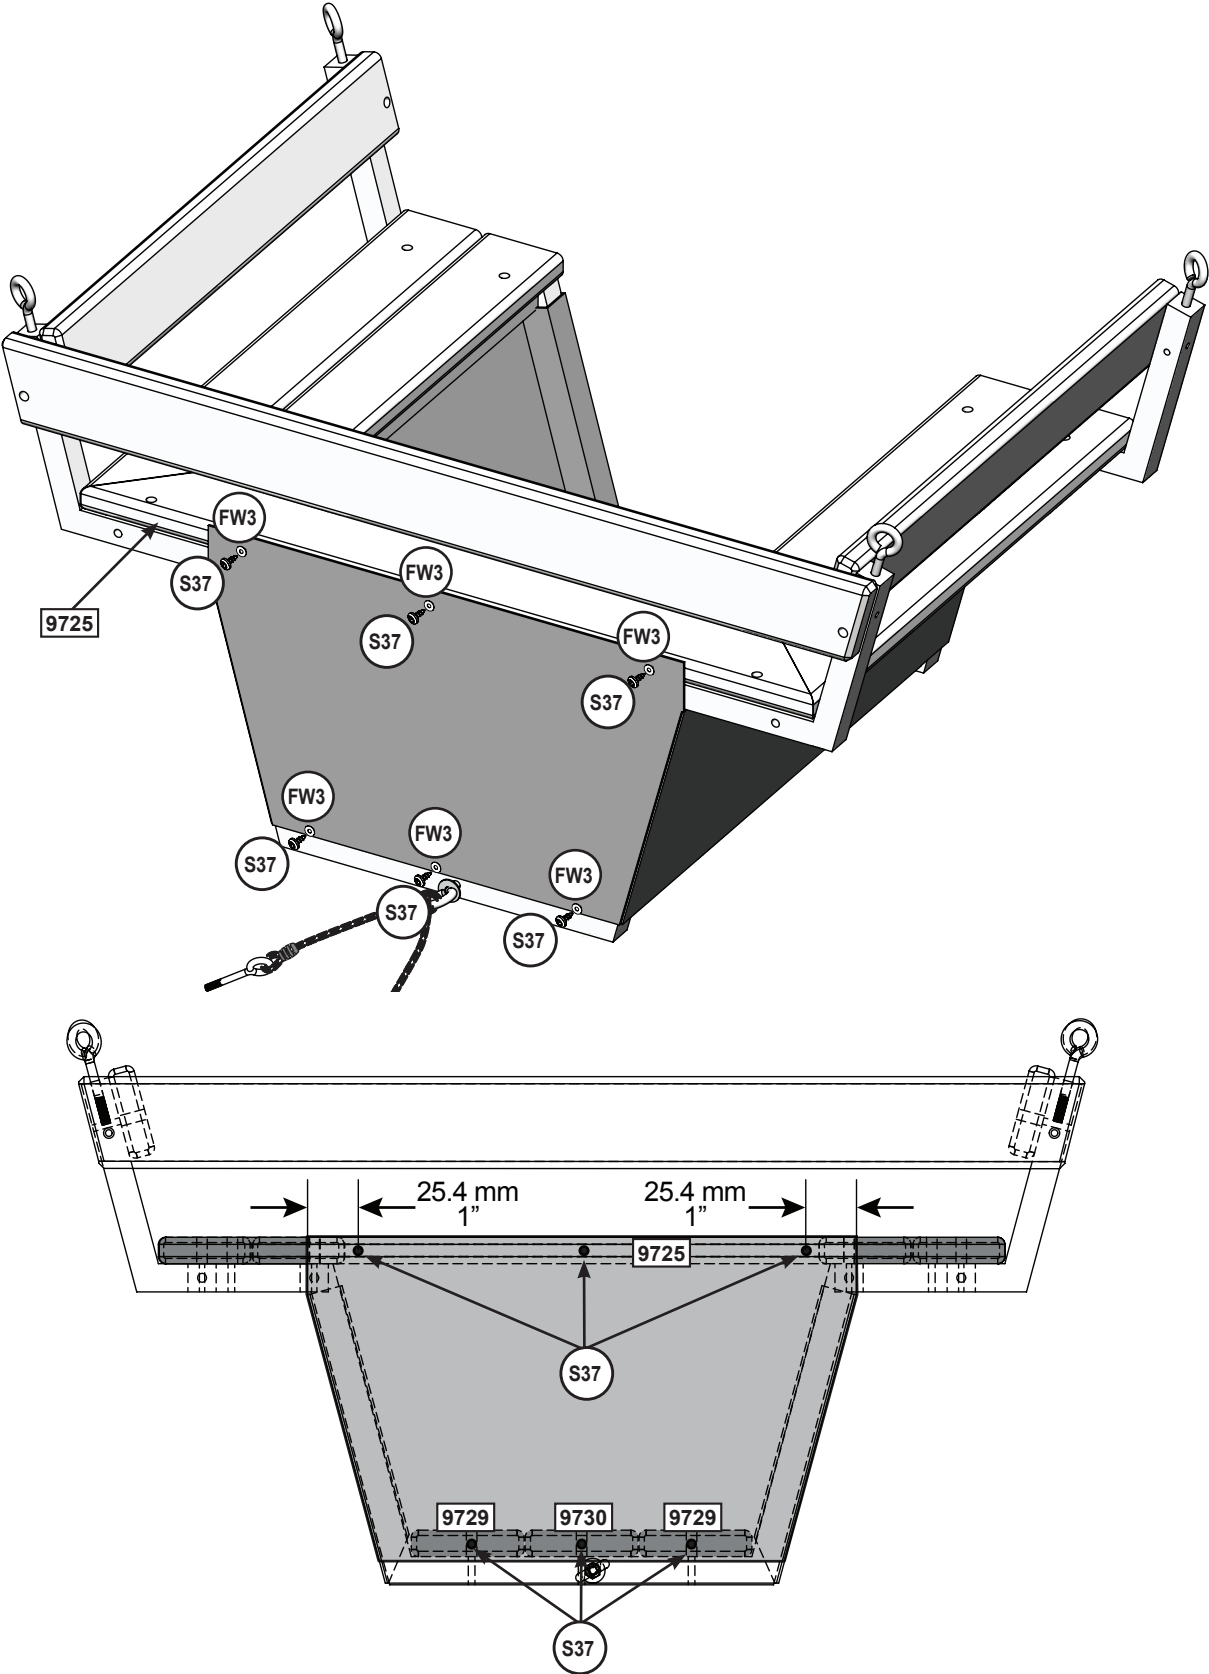

Hardware

6 x S37 #7 x 15.87mm (#7 x 5/8") (FW3)



Step 44

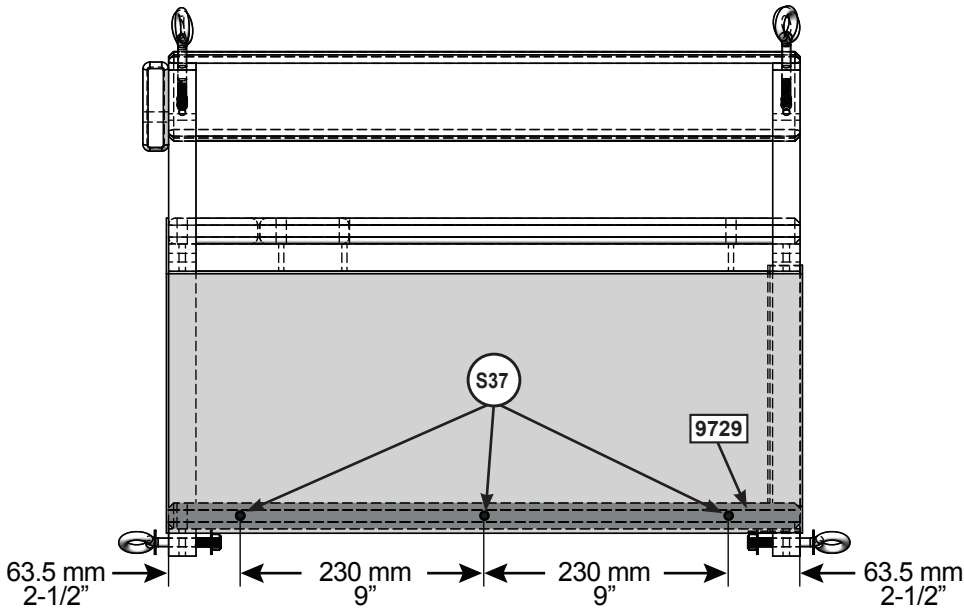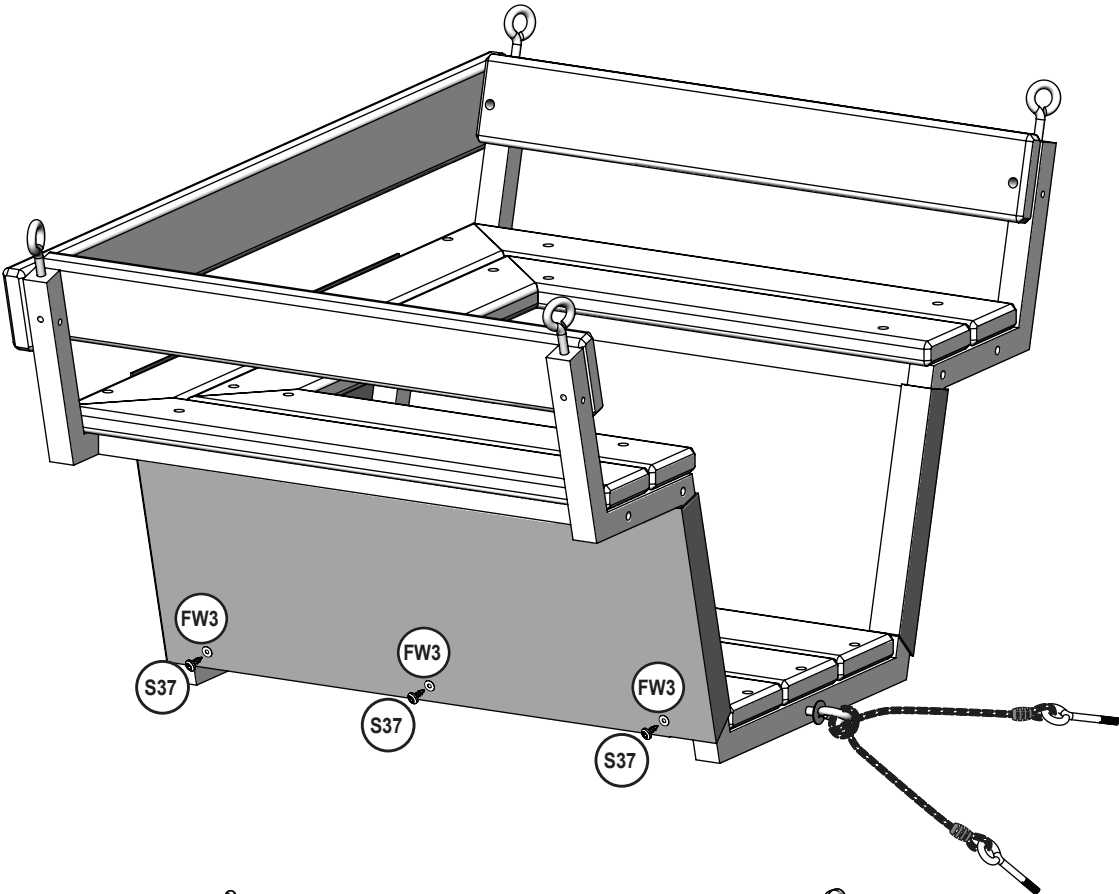

Hardware

3 x (S37) #7 x 15.87mm (#7 x 5/8") (FW3)


Step 45

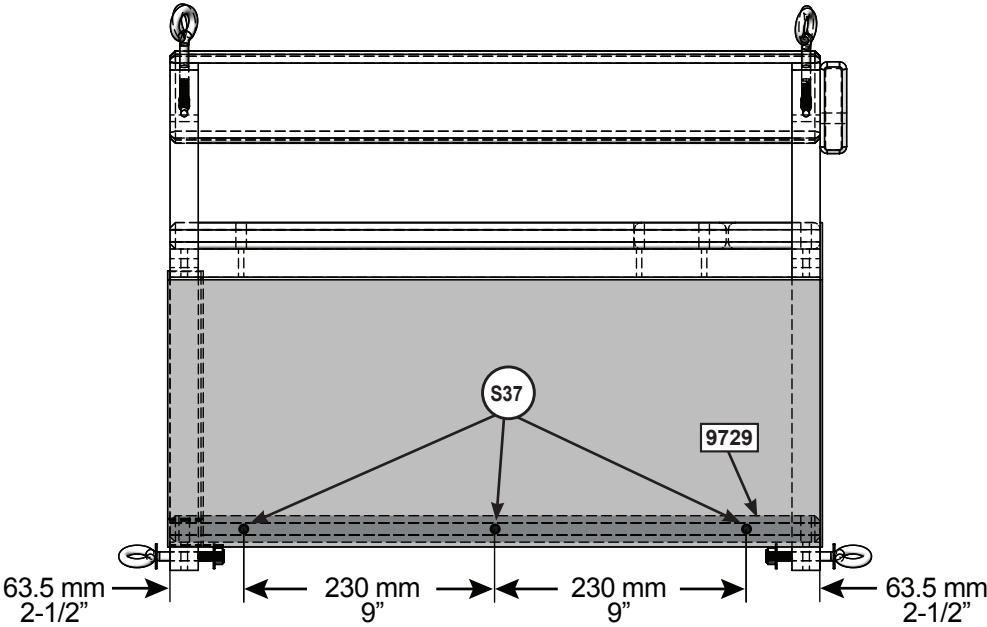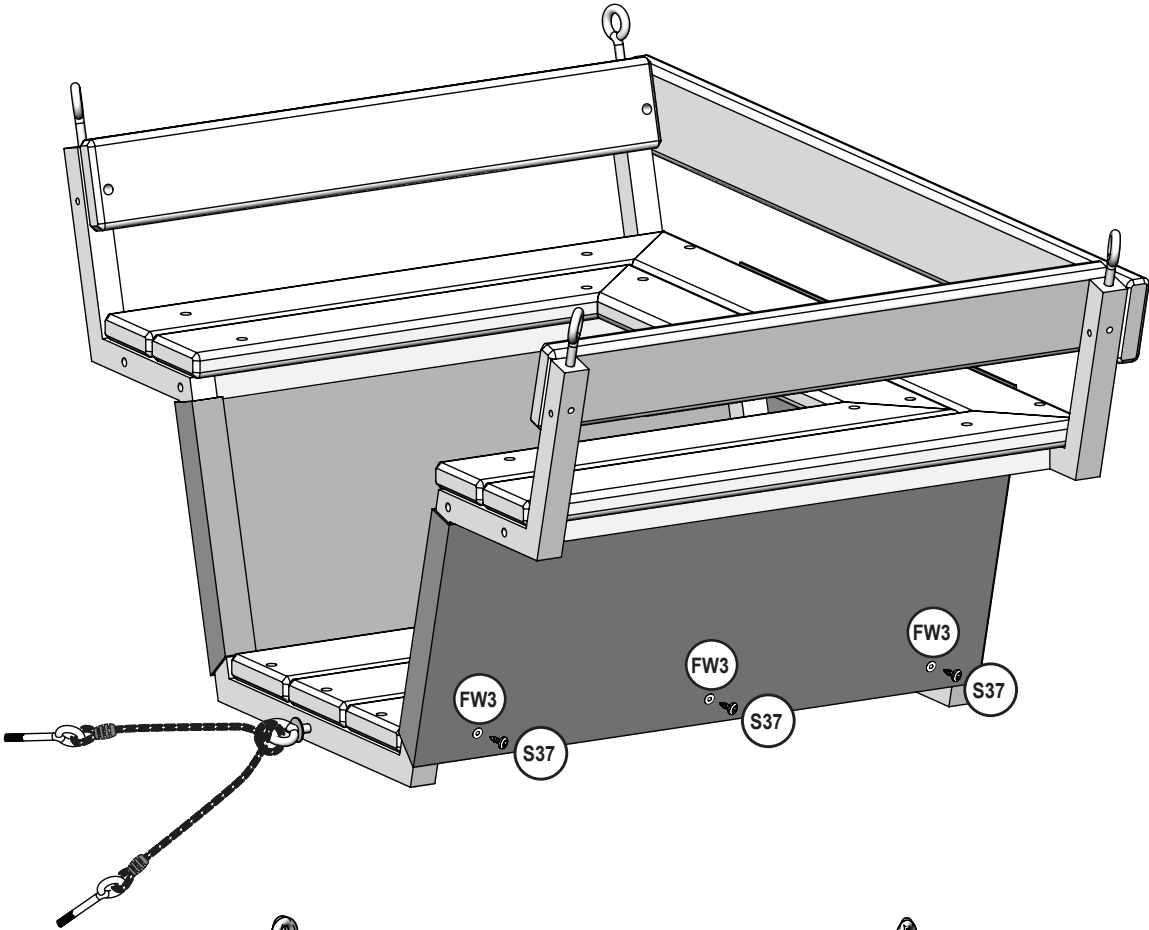


Hardware

3 x S37 #7 x 15.87mm (#7 x 5/8") (FW3)



Step 46

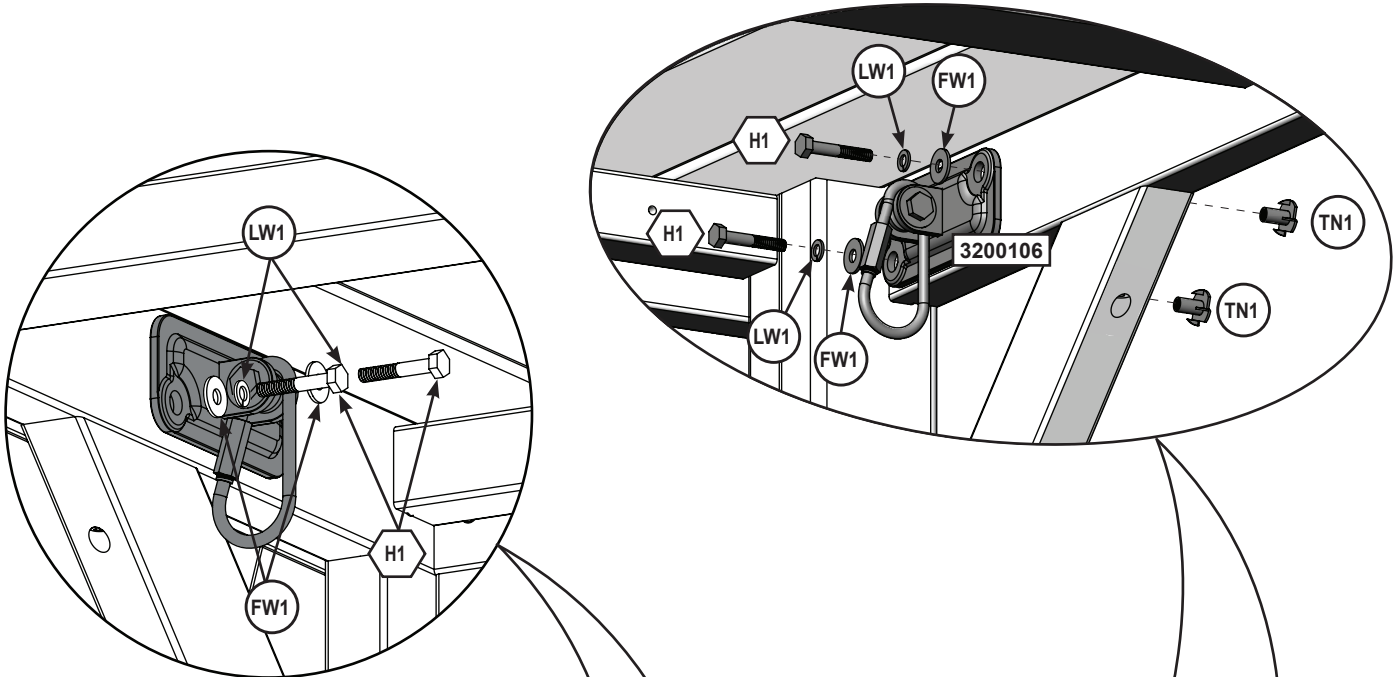


Note: T-Nut previously installed in Step 12.

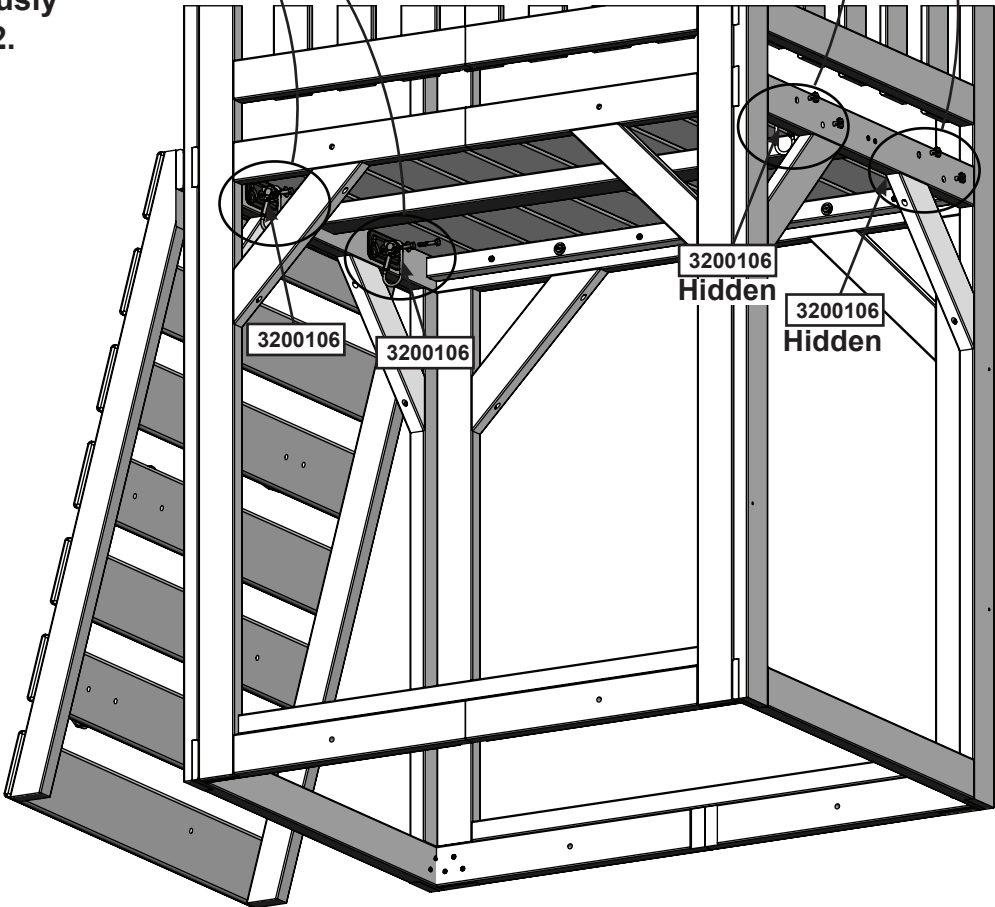


Hardware

- 4 x  6.4mm x 38.1mm (1/4 x 1-1/2") (LW1, FW1, TN1)
4 x  6.4mm x 38.1mm (1/4 x 1-1/2") (LW1, FW1)

Other Parts


- 1 x 

Step 47

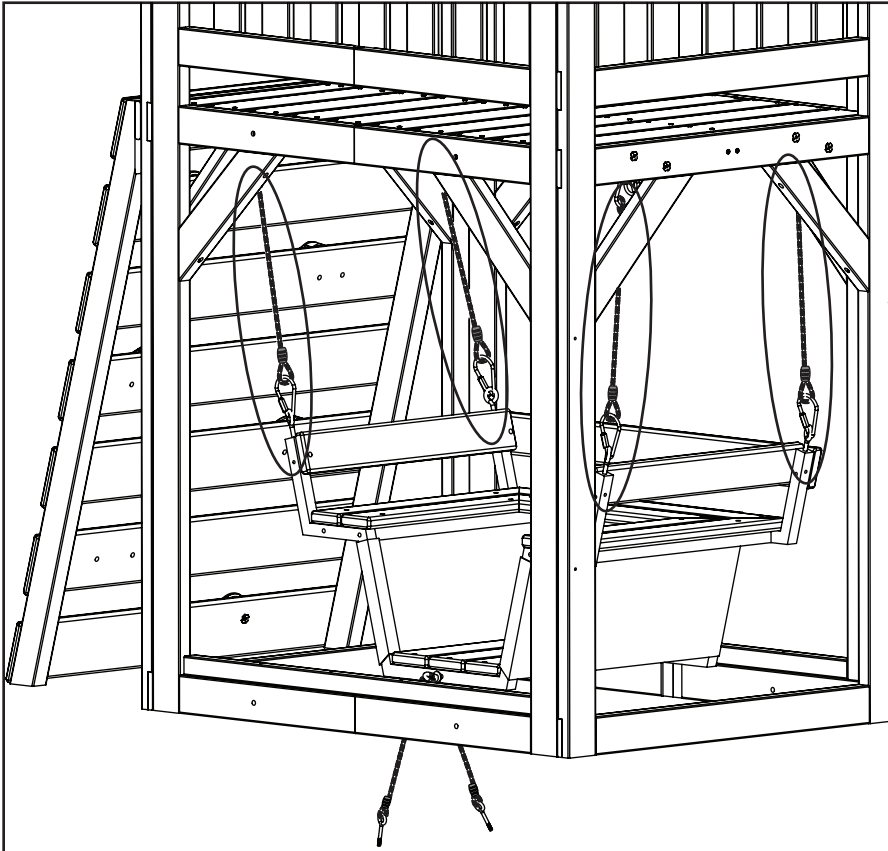


Quick Link



Tighten Threaded Quick Link using adjustable wrench

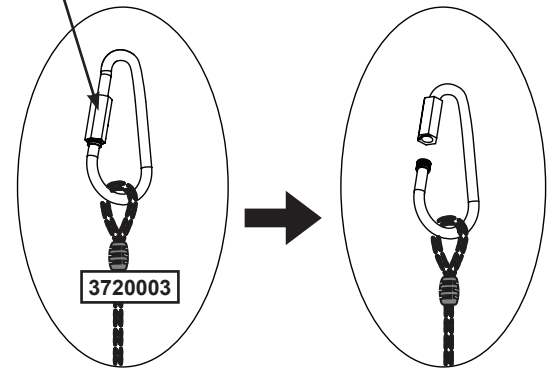

Caution: Threaded Quick Links must be installed with the gate completely down covering the threads and tighten as instructed.

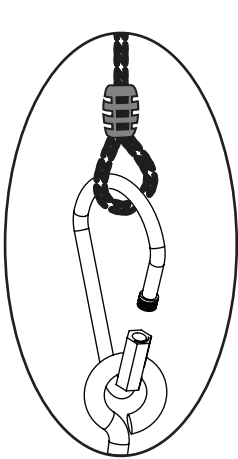


Threaded Quick Links attach to chat swing and the fort.

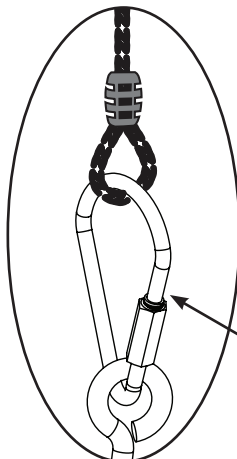


Tighten Threaded Link using adjustable wrench

Quick Link

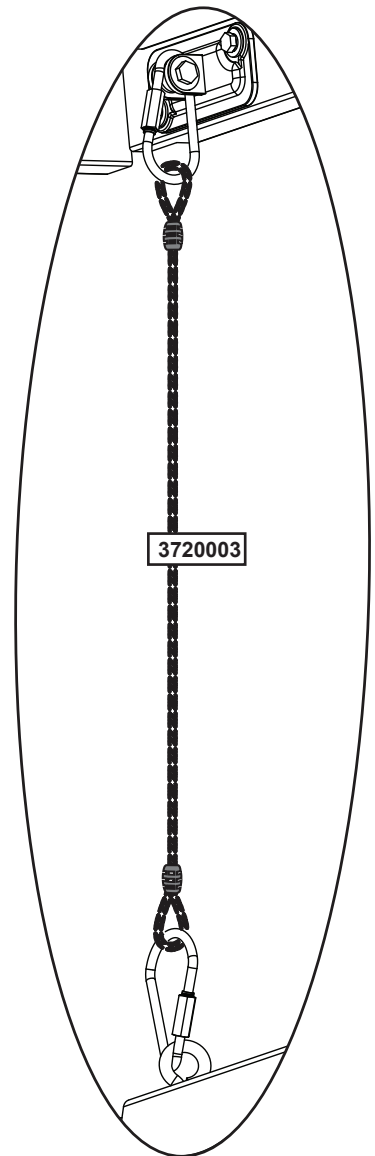

Step 48


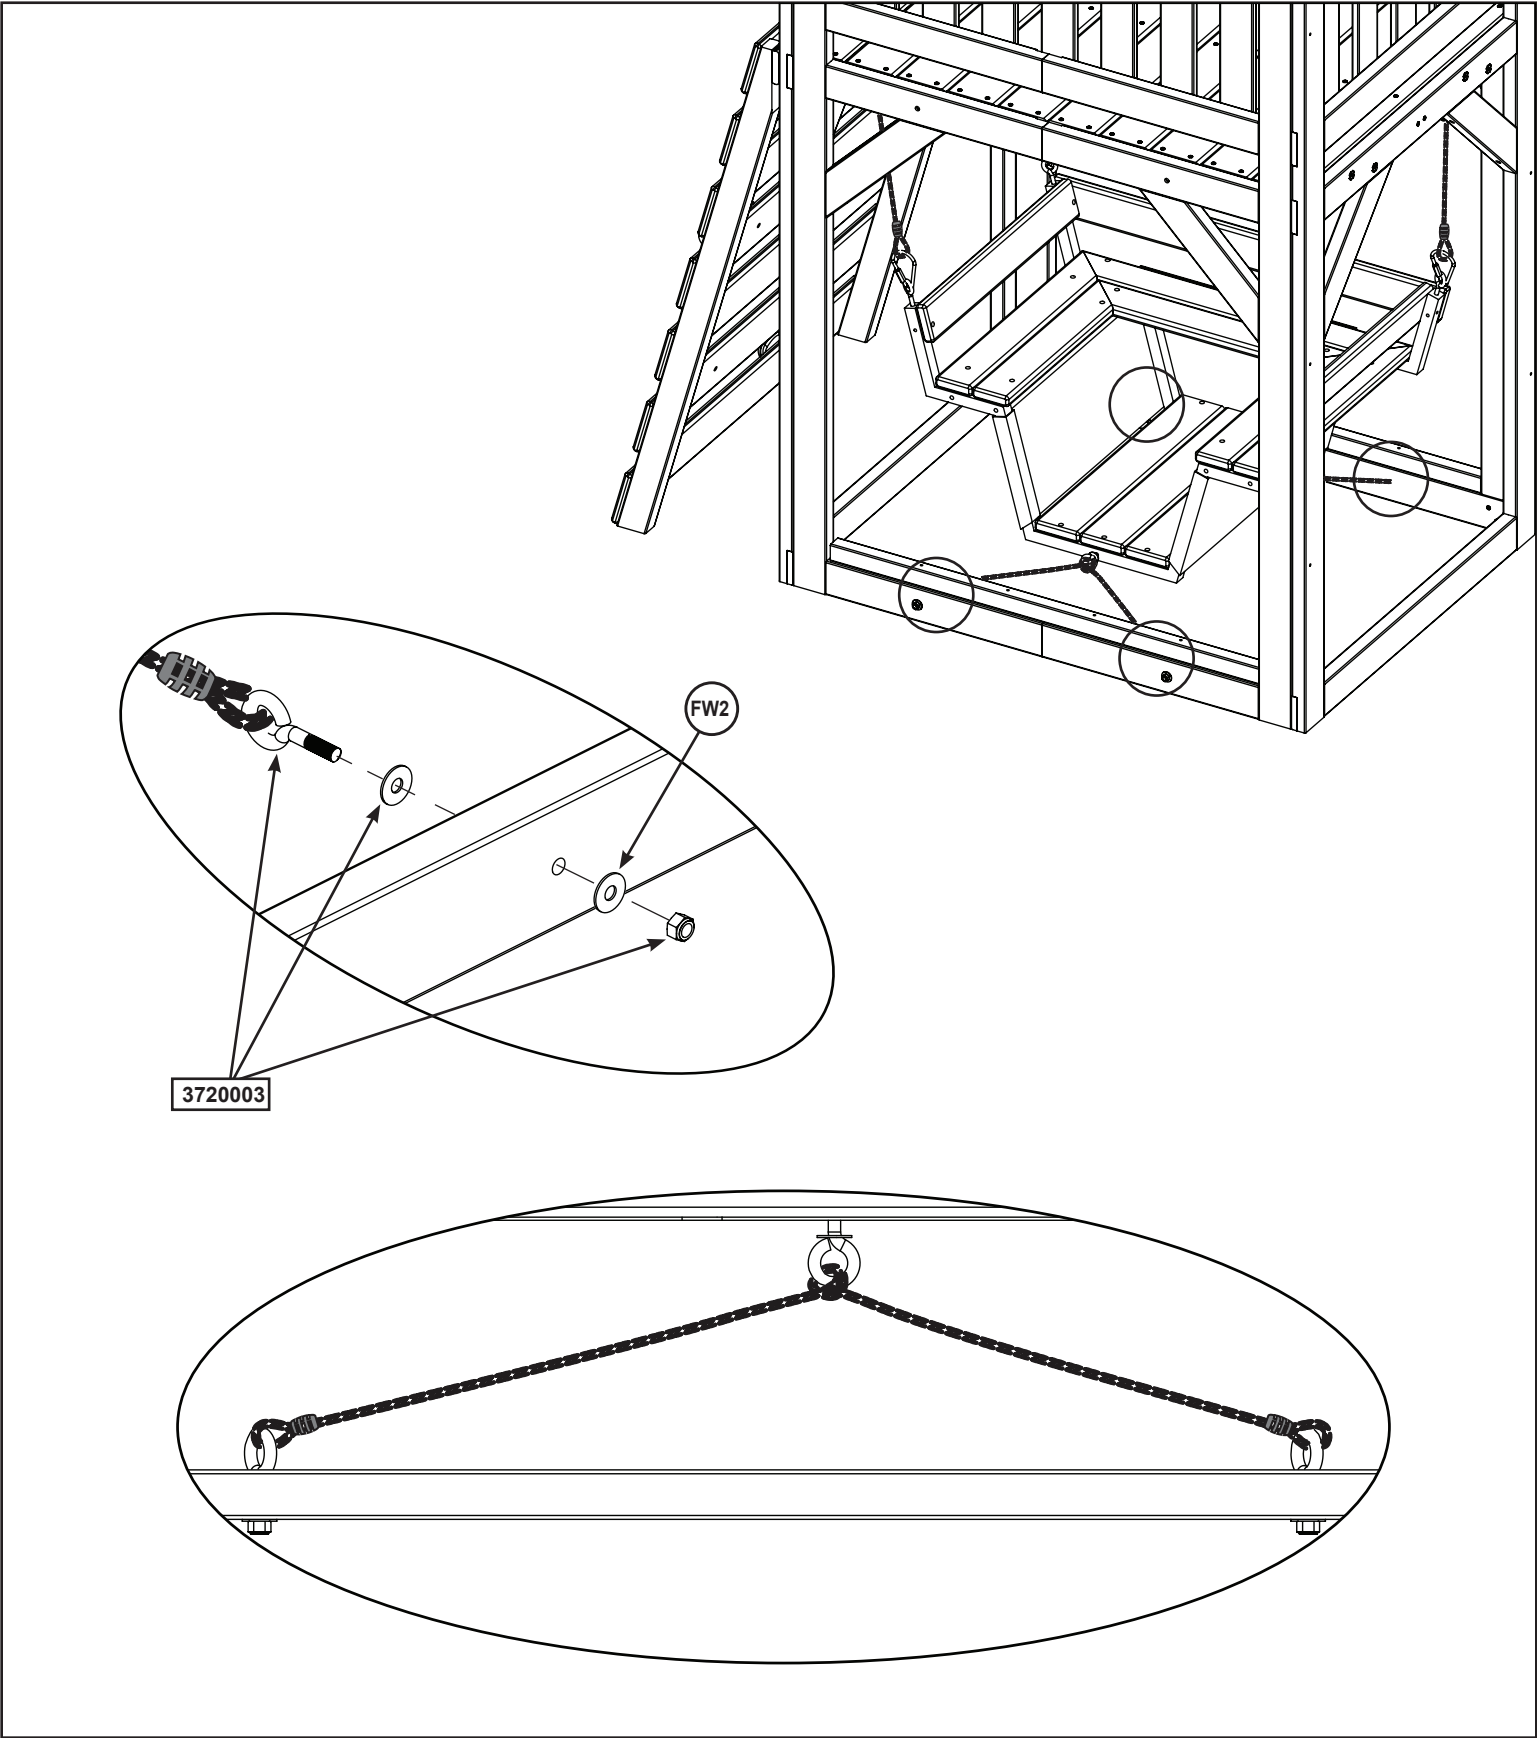



Hardware
4 x FW2


Step 49




Note: Pre-drill all holes using a 1/8" drill bit before installing the S7 screws.

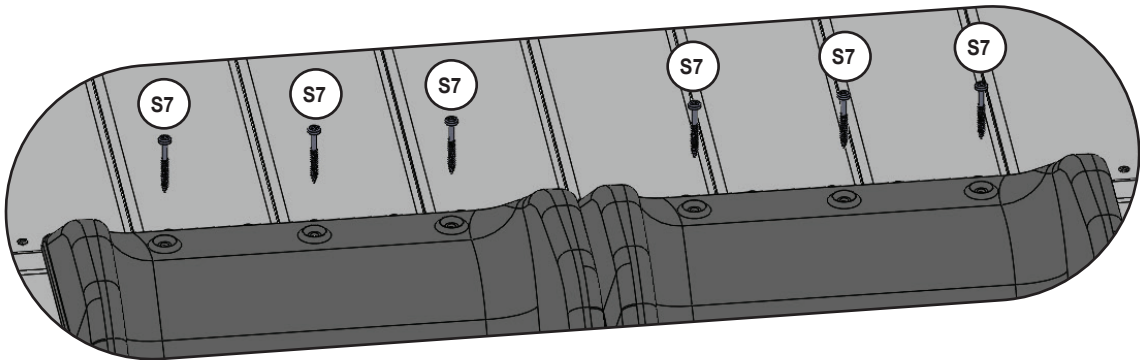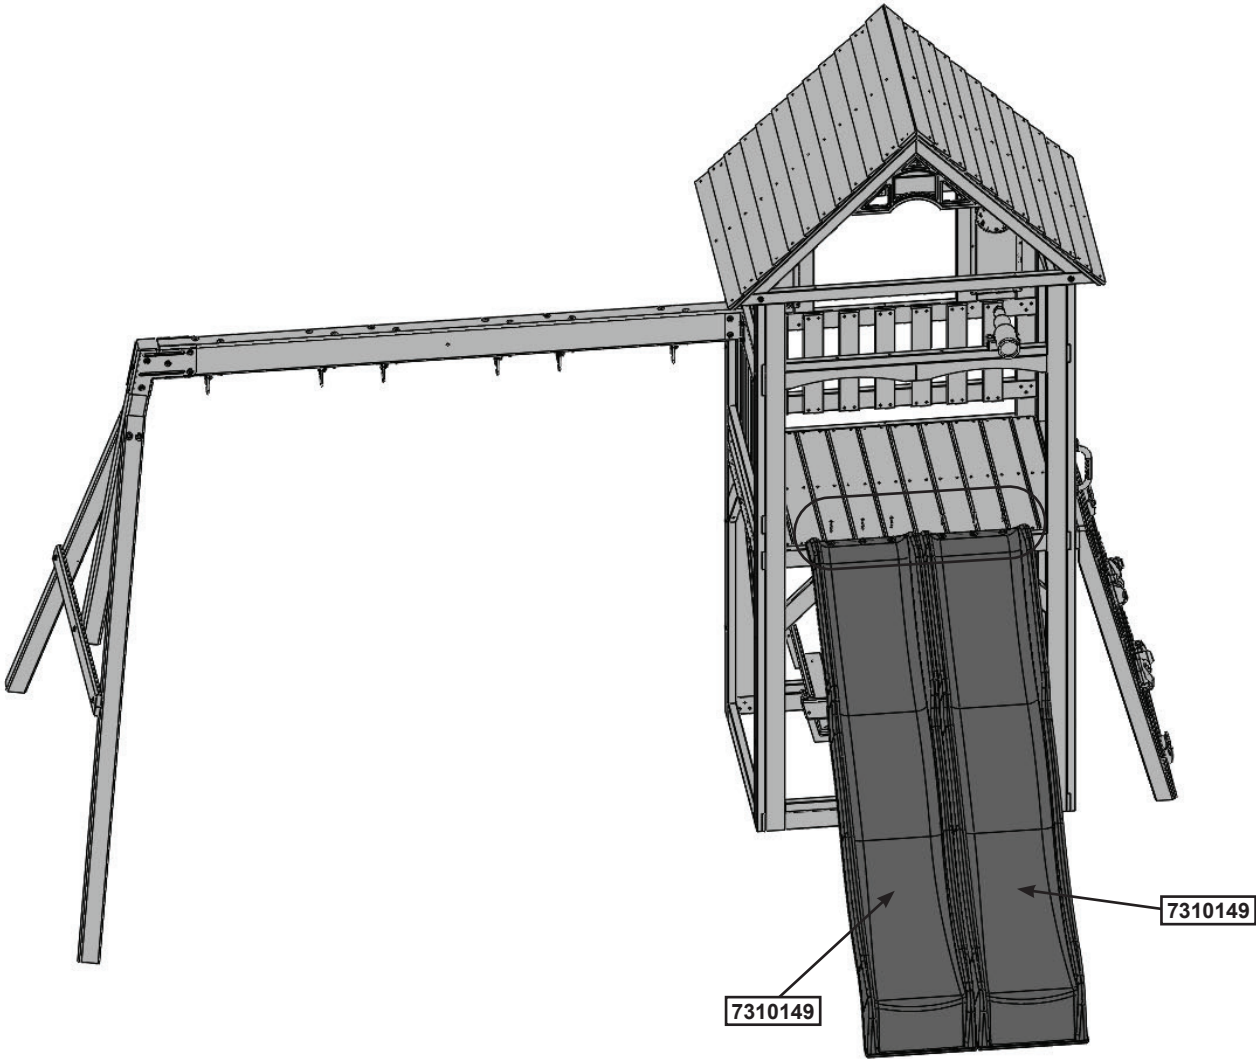



Hardware
6 x  #12 x 50.8mm (#12 x 2")

Other Parts
2 x 

Step 50

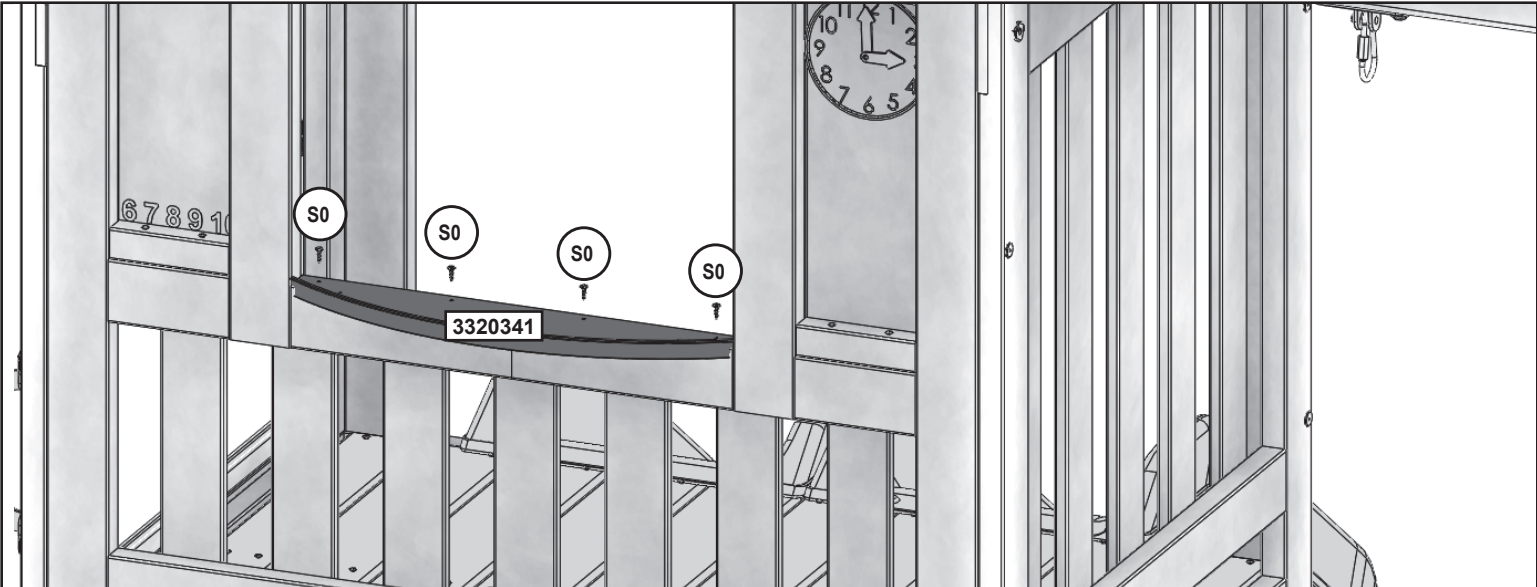

Inside View

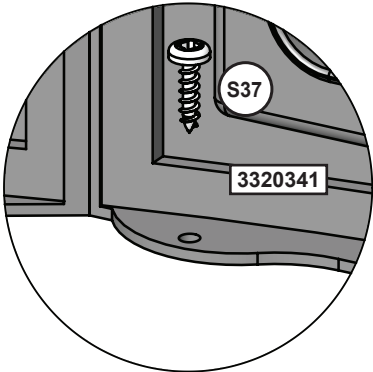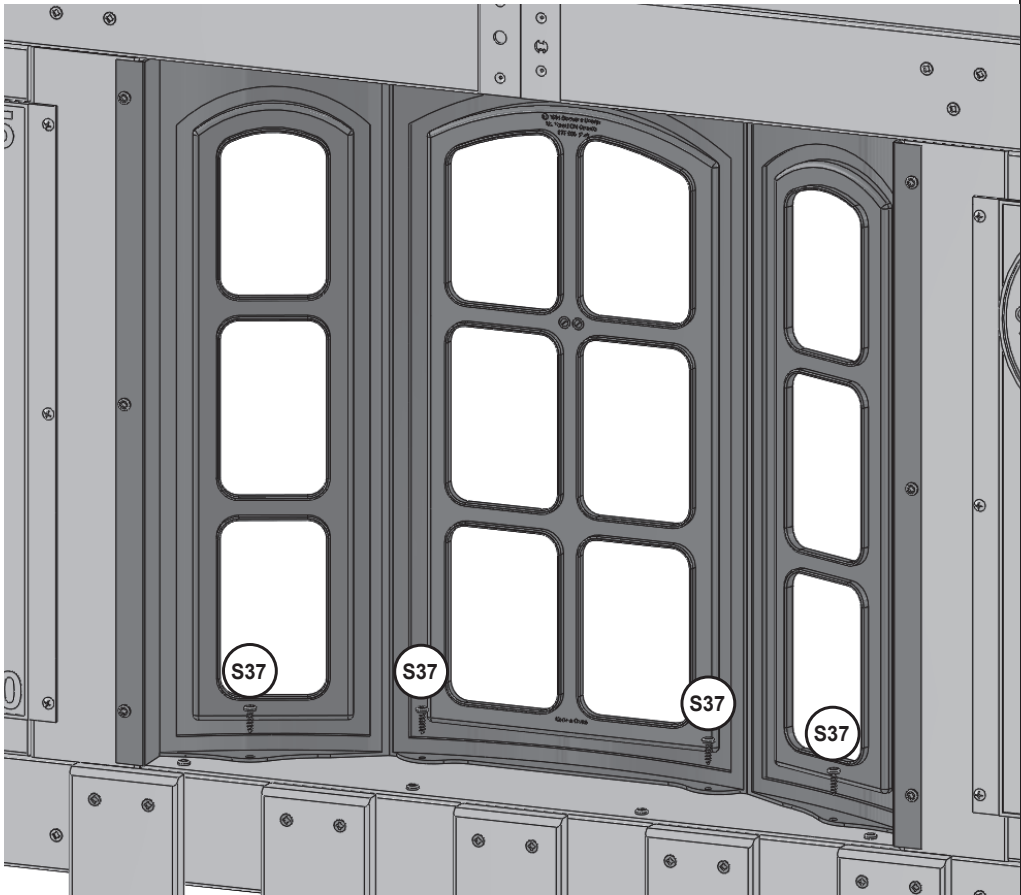


Hardware

- 4 x S0 #8 x 22.2mm (#8 x 7/8")
- 4 x S37 #7 x 16 mm (#7 x 5/8")


Other Parts

- 1 x 3320341

Step 51

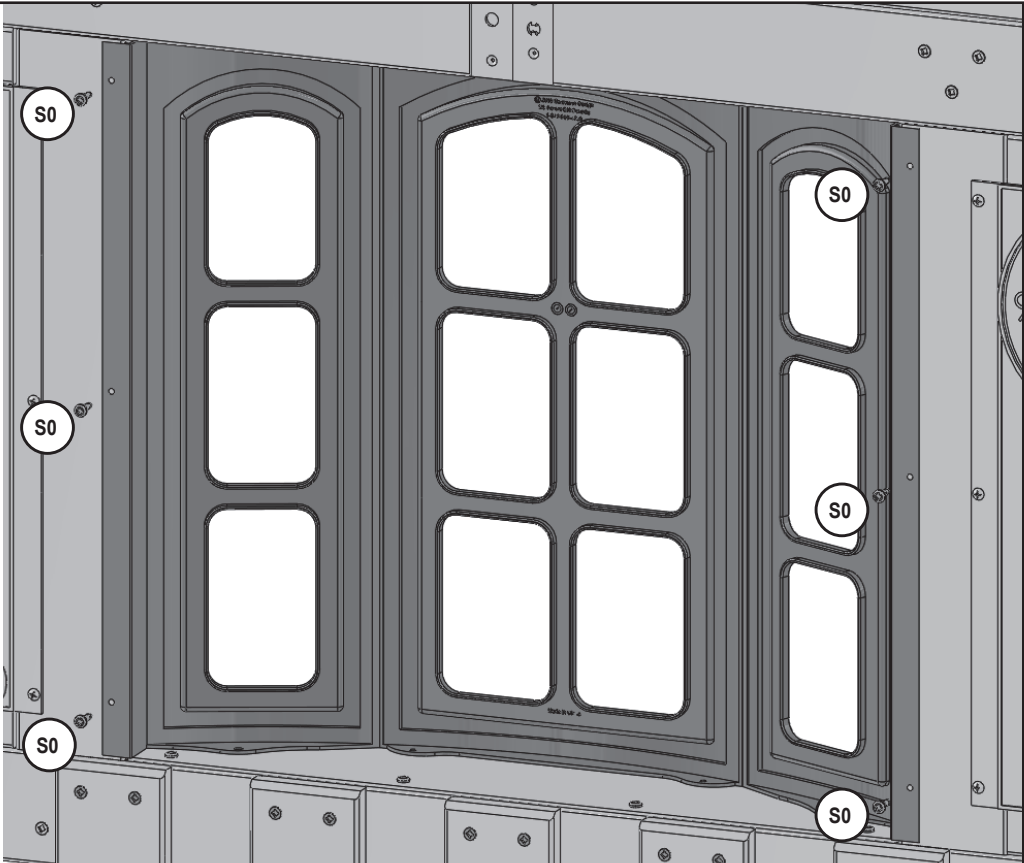

Outside View

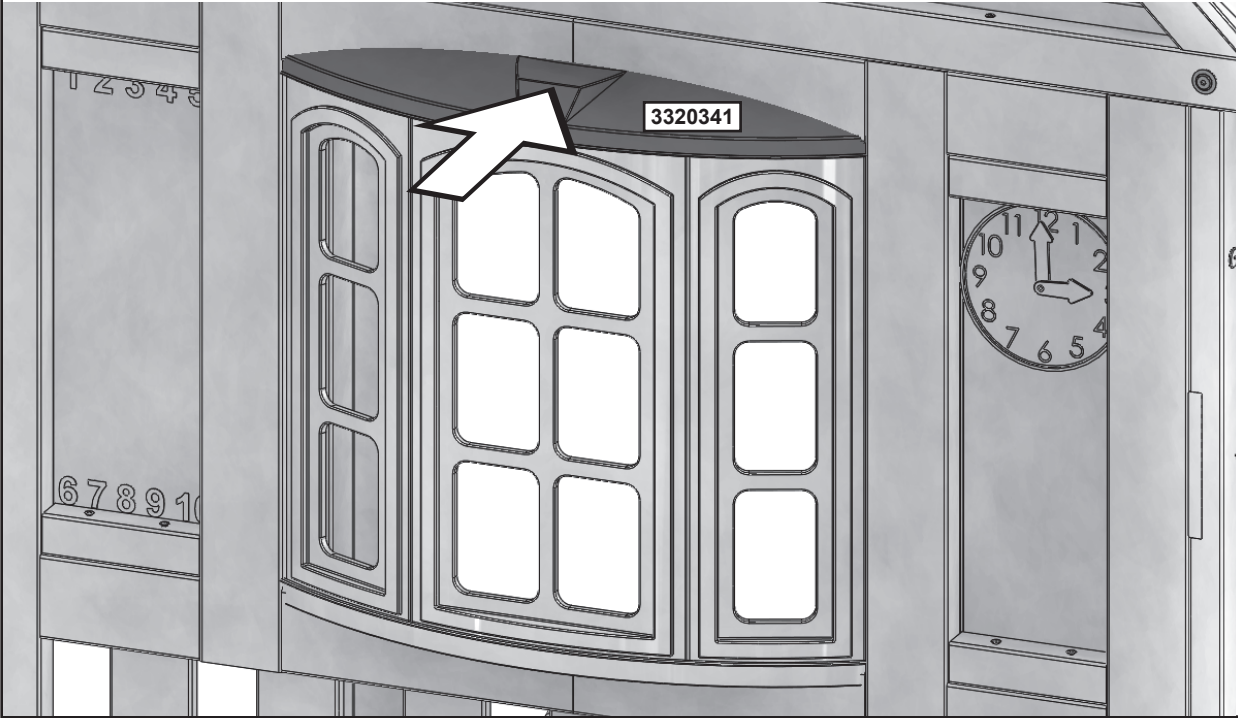


Hardware

6 x (S0) #8 x 22.2mm (#8 x 7/8")

Step 52

Inside View

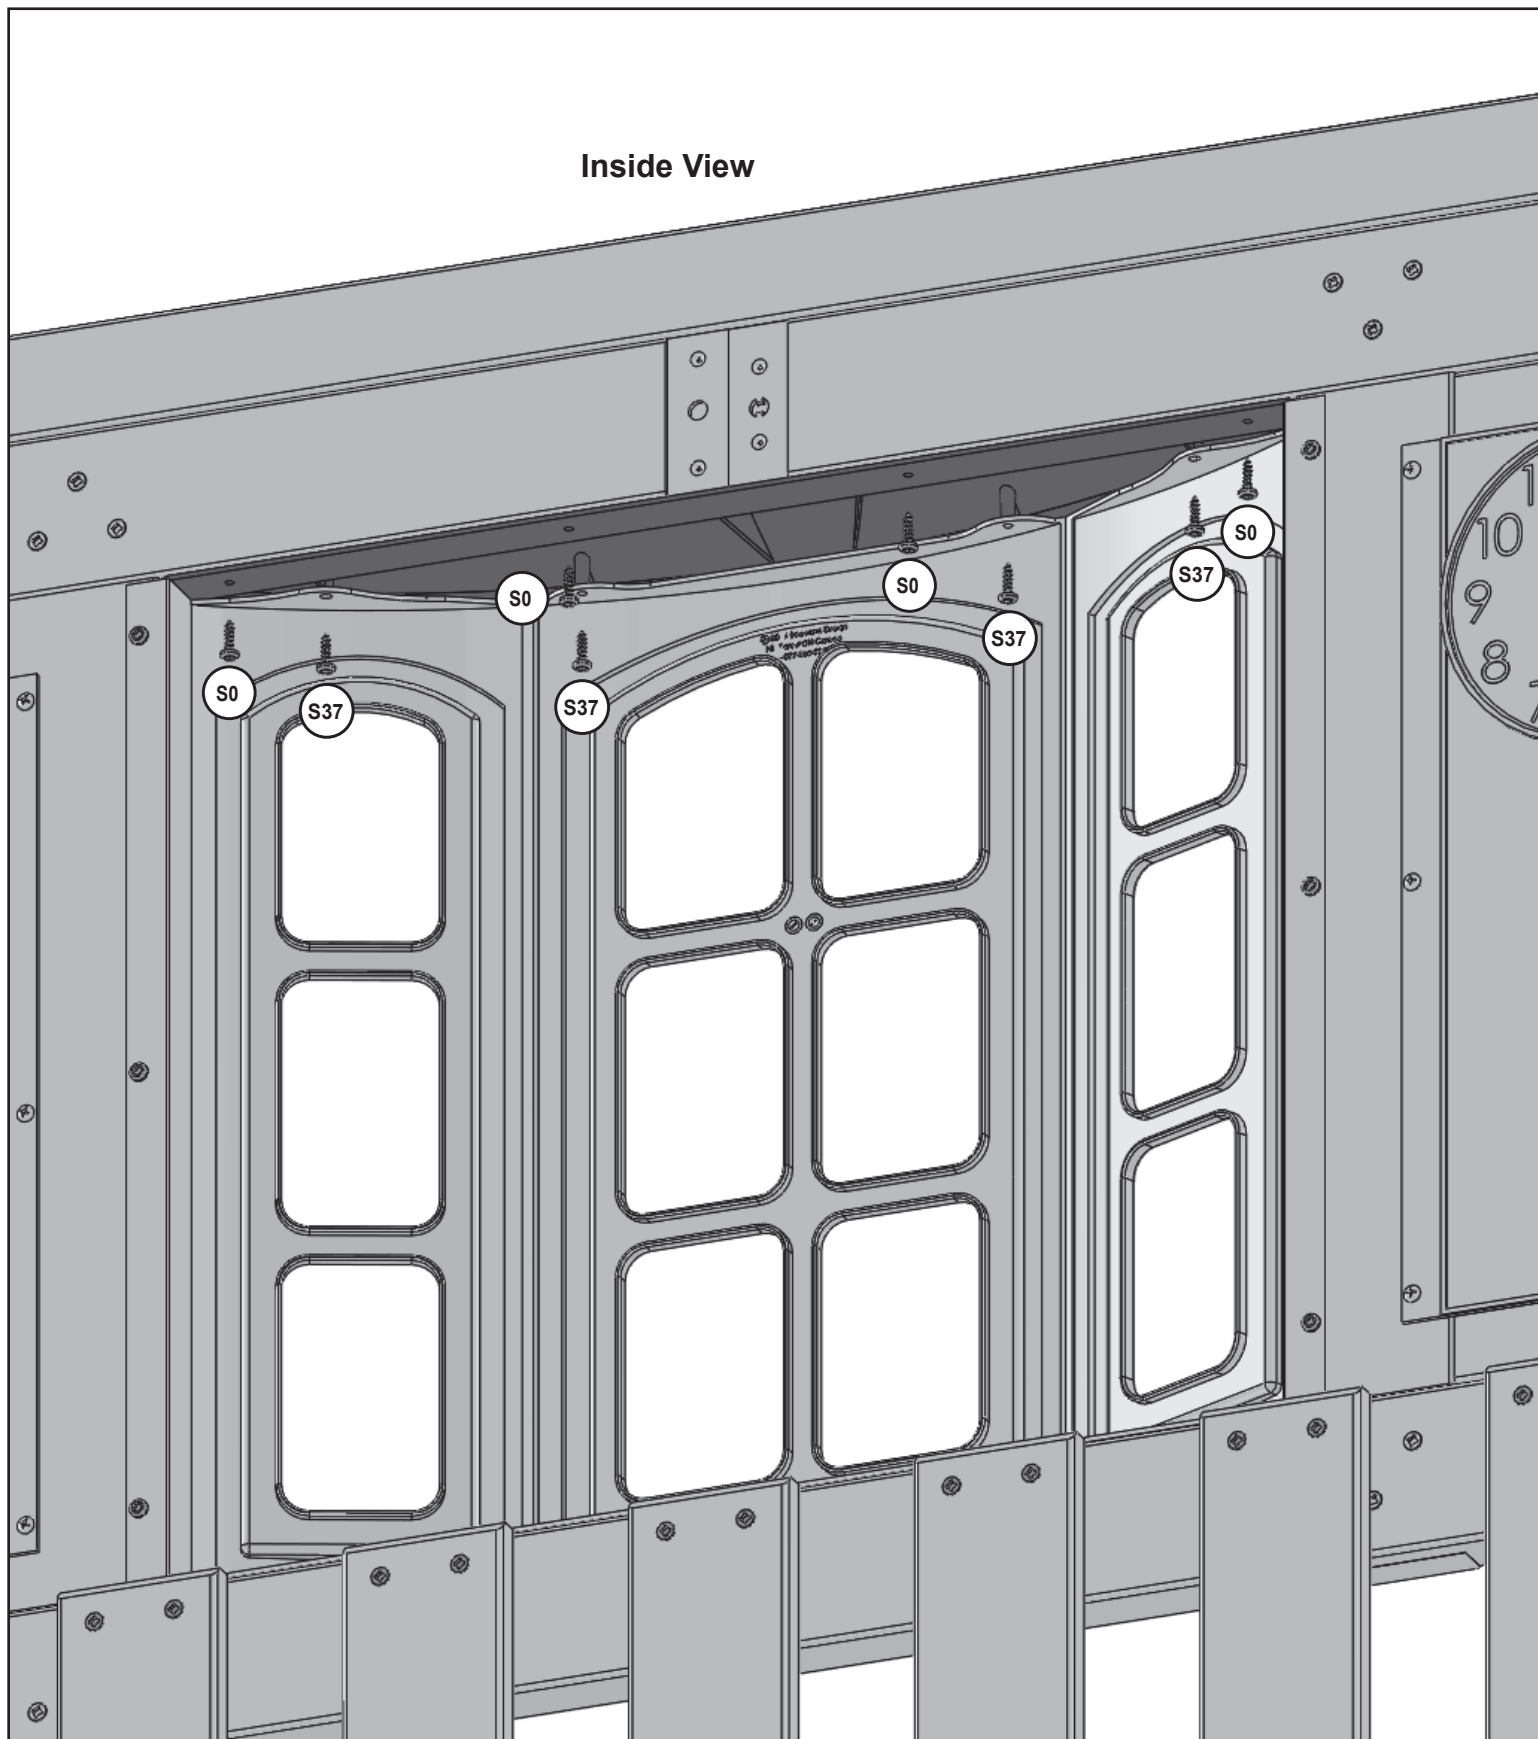

Hardware


4 x  #8 x 22.2 mm (#8 x 7/8")

4 x  #7 x 16 mm (#7 x 5/8")

Step 53



Pre-drill hole
using a 3/16"
drill bit for WL5

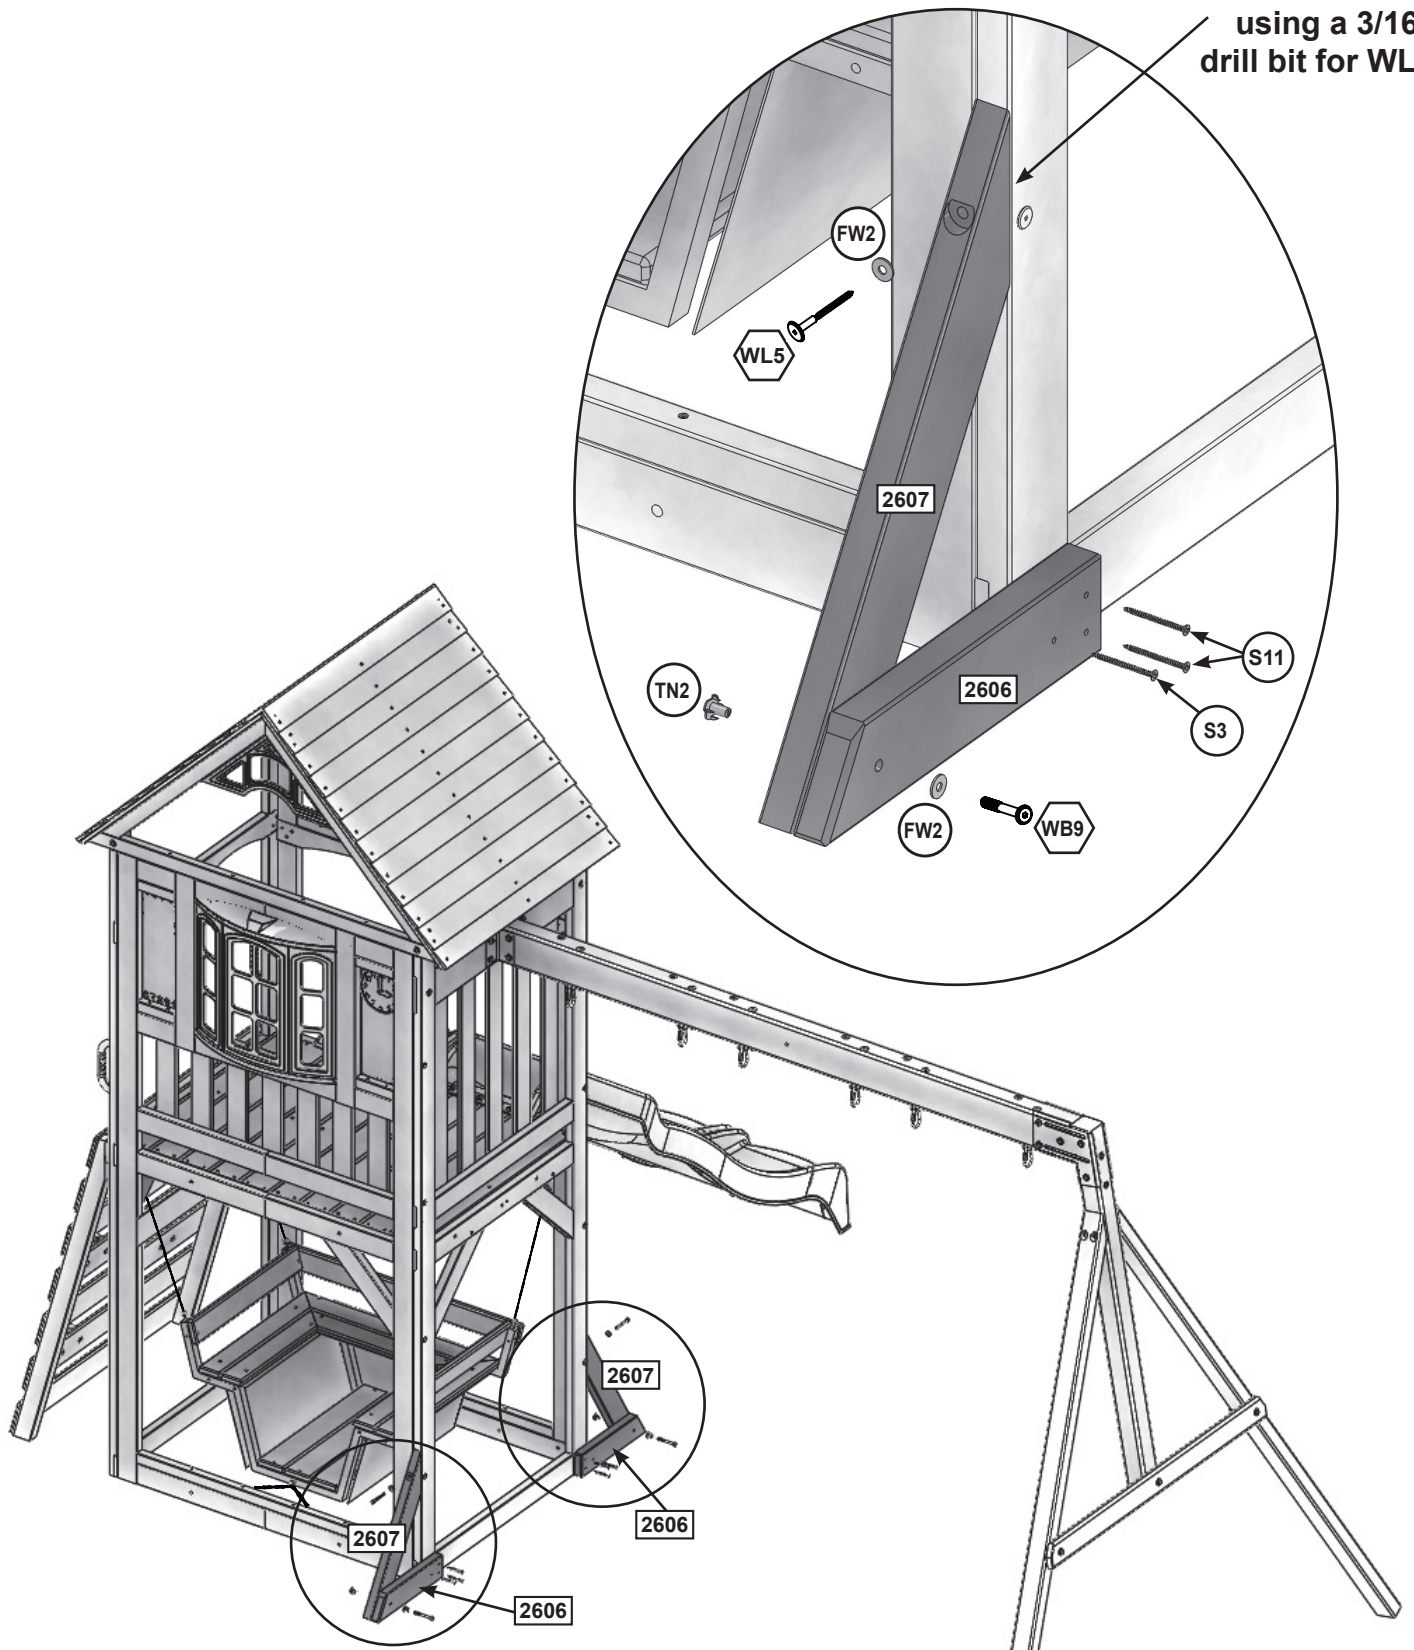



Wood Parts

- 2 x 2606 23.8 x 82.6 x 362 mm (15/16 x 3-1/4 x 14-1/4")
2 x 2607 31.8 x 76.2 x 558.8 mm (1-1/4 x 3 x 22")

Hardware

- 2 x WB9 7.9 x 54 mm (5/16 x 2-1/8") (FW2, TN2) 2 x S3 #8 x 64 mm (#8 x 2-1/2")
2 x WL5 6.4 x 63.5 mm (1/4 x 2-1/2") (FW2) 4 x S11 #8 x 50.8 mm (#8 x 2")

Step 54

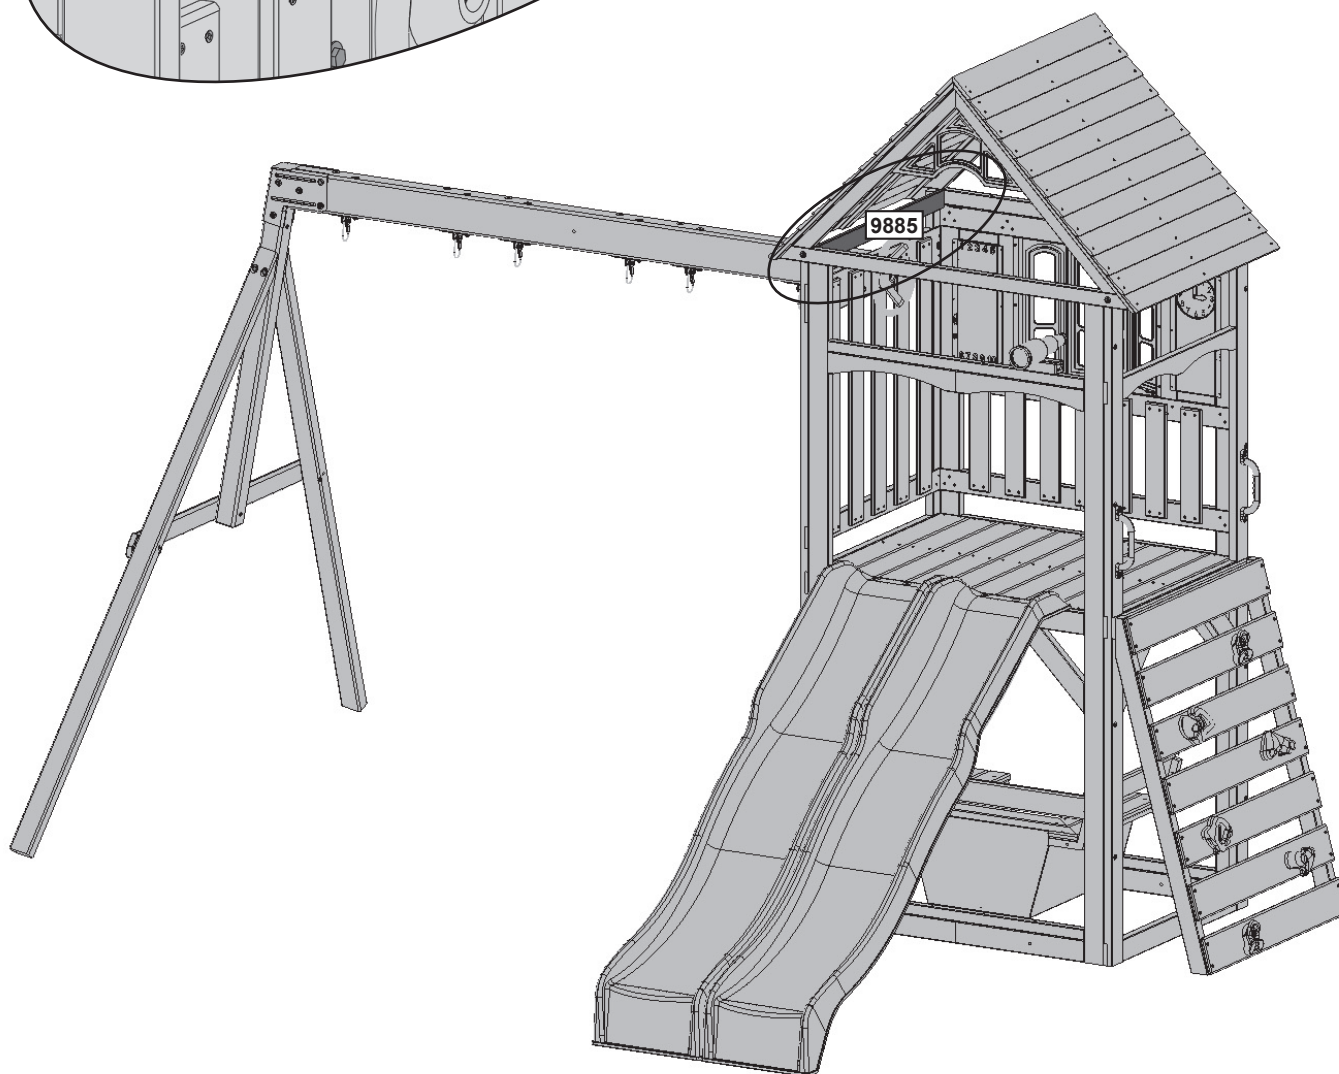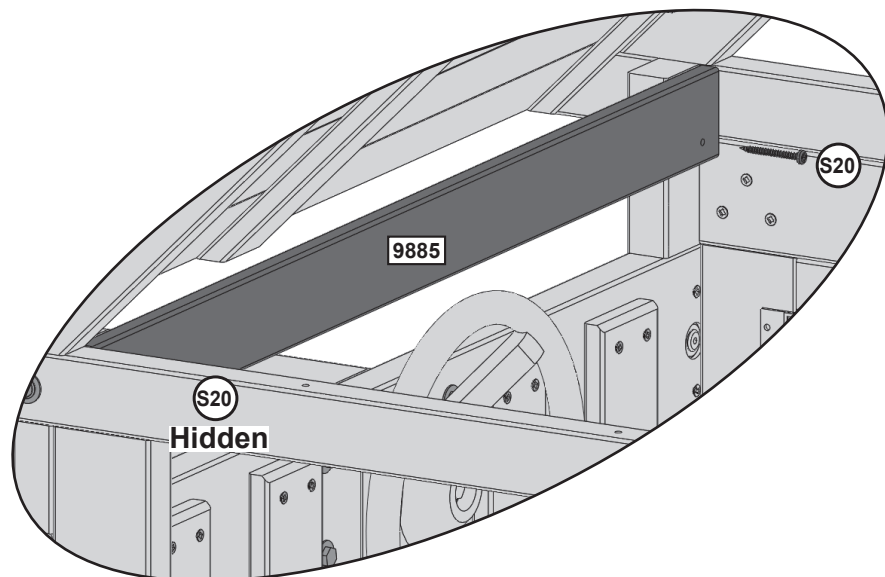



Wood Parts

1 x 9885 15.9 x 63.5 x 849.8 mm (5/8 x 2-1/2 x 33-7/16")

Hardware

2 x S20 #8 x 34.9 mm (#8 x 1-3/8")

Step 55

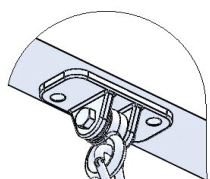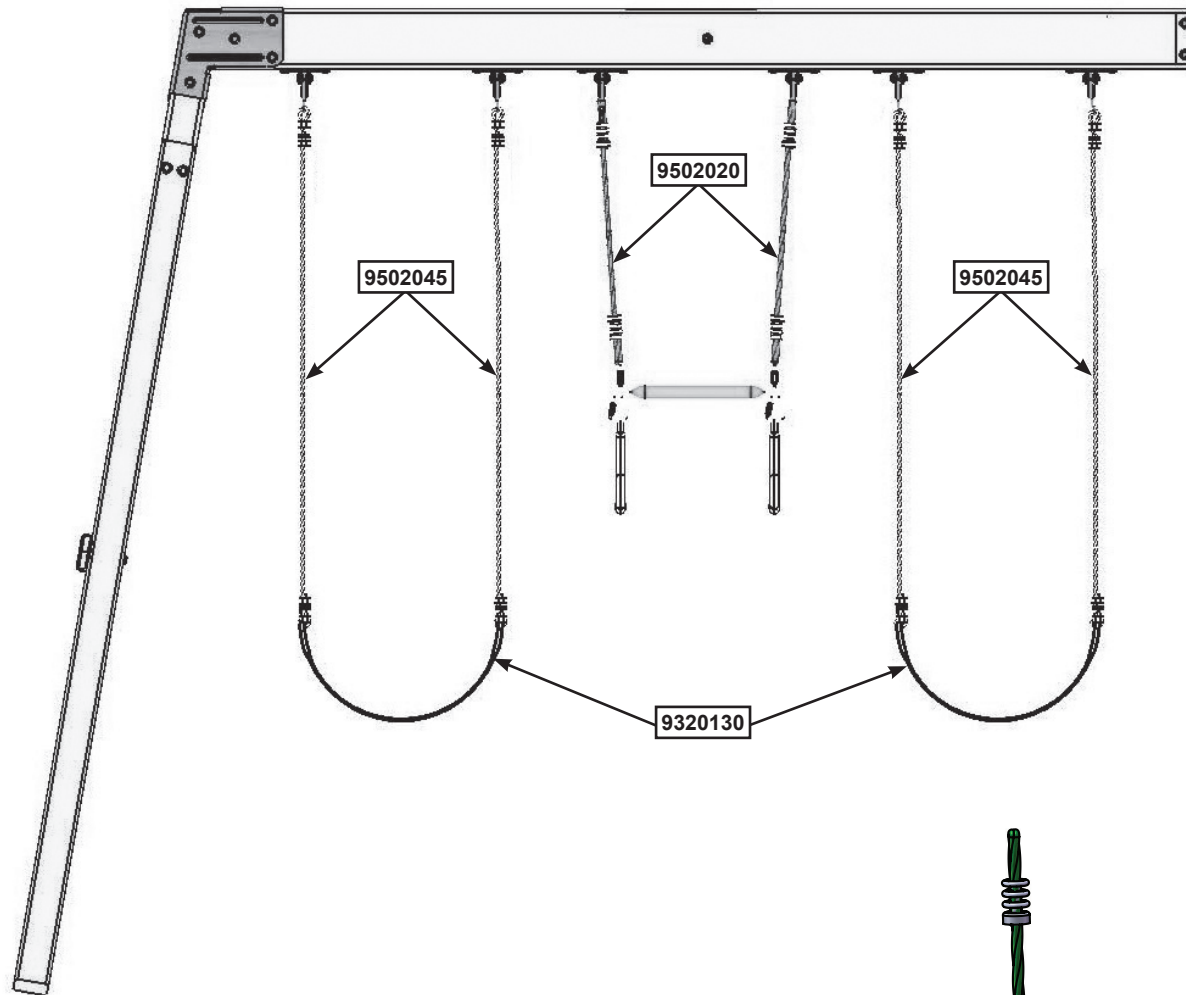


Quick Link

Tighten
Threaded Link
using adjustable
wrench



Threaded Link
attach to Swing and
Acro ropes.

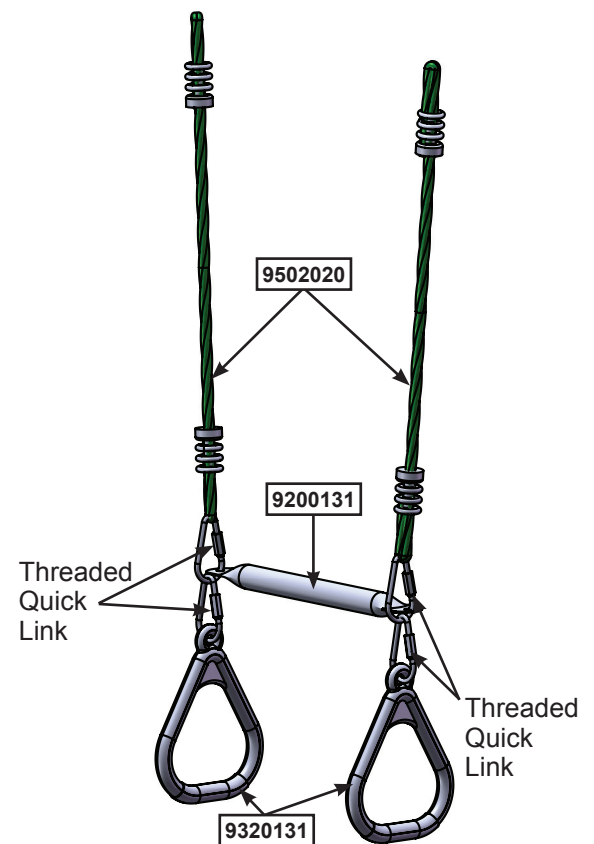


Other Parts

2 x 9502020	2 x 9320130	2 x 9320131
4 x 9502045	1 x 9200131	2 x 9200020

Step 56



**MOVE FORT TO FINAL
LOCATION PRIOR TO STAKING
FINAL LOCATION MUST BE
LEVEL GROUND**

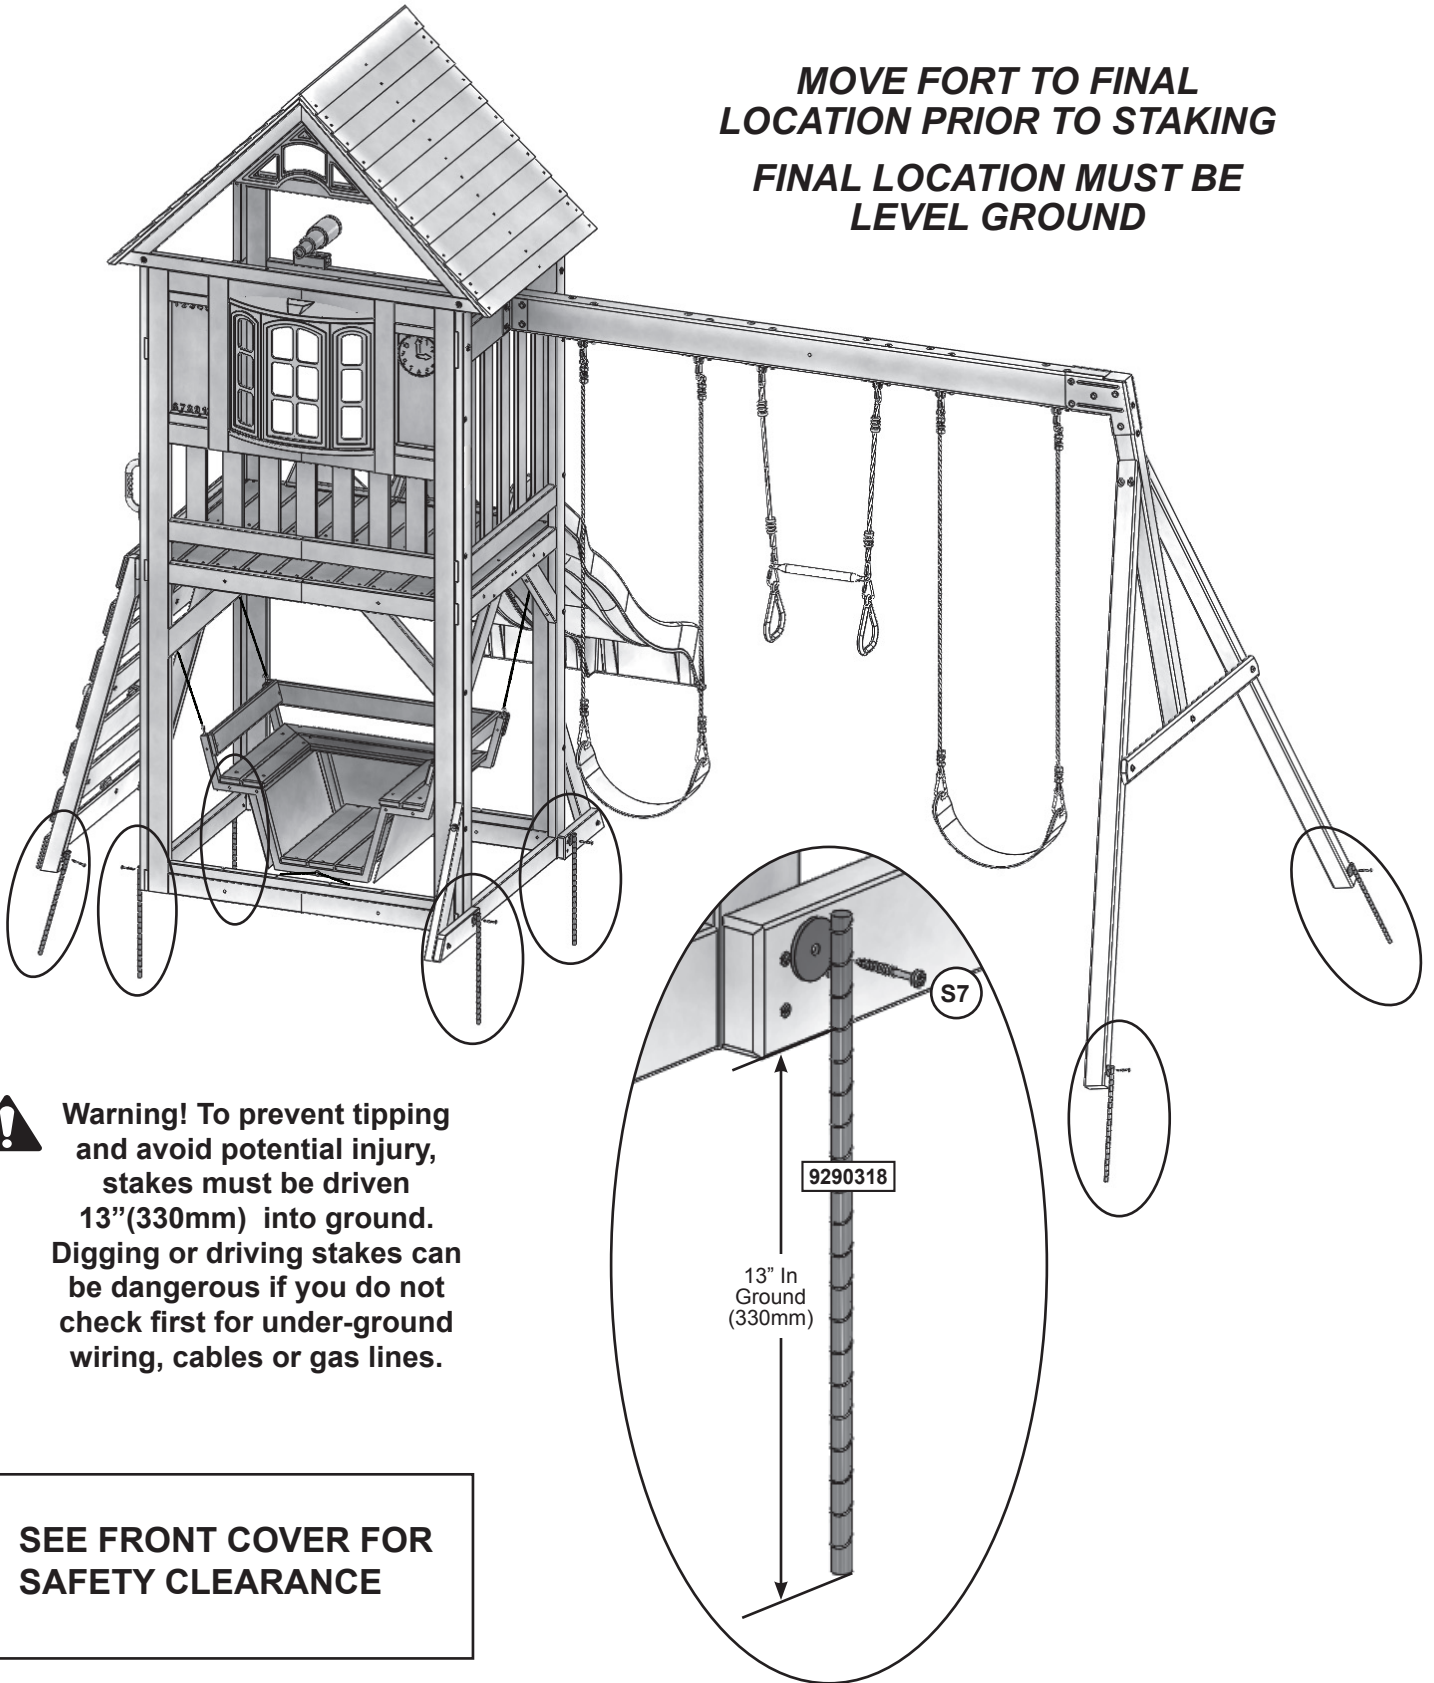

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13"(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for under-ground wiring, cables or gas lines.

**SEE FRONT COVER FOR
SAFETY CLEARANCE**

Hardware

7 x **S7** #12 x 50.8 mm (#12 x 2")



Other Parts

7 x **9290318**

Step 57

ATTACH THIS WARNING & I.D. PLAQUE TO THIS LOCATION ON YOUR PLAY EQUIPMENT!


This provides warnings concerning safety and important contact information. A Tracking Number is provided to allow you to get critical information or order replacement parts for this specific model.

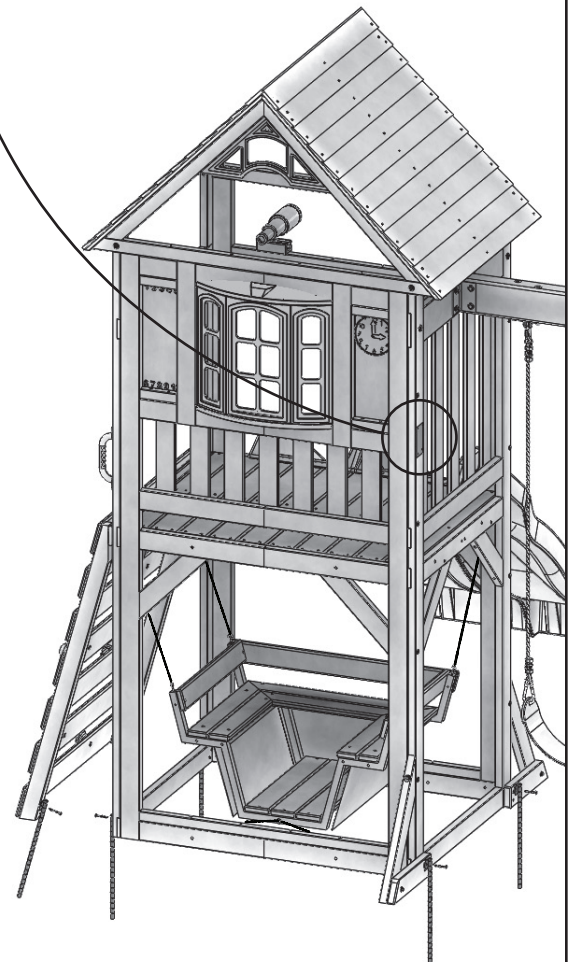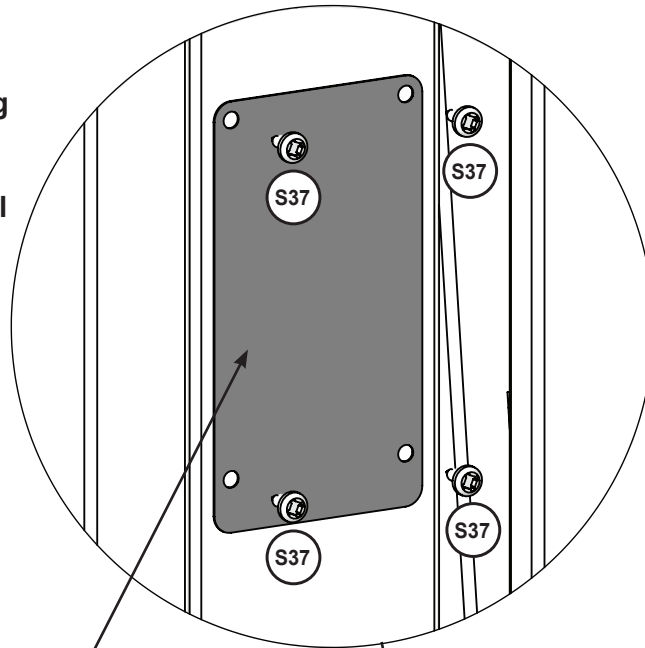

Hardware

4 x  #7 x 16 mm (#7 x 5/8")

Other Parts

1 x 

[illegible]

CEDAR SUMMIT
Consumer Registration Card

First Name

Initial

Last Name

--	--	--

Street

Apt. No.

--	--

City

State/Province

ZIP/Postal Code

--	--	--

Country

Telephone Number

--	--

E-Mail Address

--

Model Name

Model Number

(Box Labels)

--	--

Serial Number (on ID Plaque)

--

Date Purchase

Purchased From

--	--

MM / DD / YY

How would you rate this product for quality?

☐ Excellent

☐ Very Good

☐ Average

☐ Below Average

☐ Poor

How would you rate this product for ease of assembly?

☐ Excellent

☐ Very Good

☐ Average

☐ Below Average

☐ Poor

How would you rate our instructions?

☐ Excellent

☐ Very Good

☐ Average

☐ Below Average

☐ Poor

How would you rate the quality of packaging?

☐ Excellent

☐ Very Good

☐ Average

☐ Below Average

☐ Poor

Would you recommend the purchase of our products to friends and family?

☐ Yes

☐ No

Comments:

--

MAIL TO:

KidKraft
4630 Olin Road
Dallas, TX 75244
United States
Attention: Customer Service



Fill out your registration card online at
www.cedarsummitplay.com/
registration

Cedar Summit by KidKraft would like to say
Thank You for your time and feedback.

CUT ALONG LINE

