


## 9. POSITION MOTION SENSOR AND CAMERA

For optimal performance, base of motion sensor should be placed parallel and 9 feet above the ground. Camera can be angled in a different direction than lights.

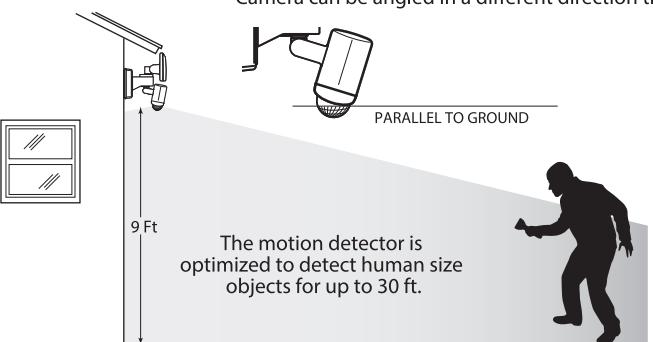

## 10. APP SETUP

## Download and install the Feit Electric app

Search for the Feit Electric app in the App Store or Google Play Store.



Download and install the Feit Electric app on your smart device.


## Set up the flood light camera using the Feit Electric app

- Check to be sure the flood light camera is in pairing mode. The BLUE indicator light must be blinking rapidly to connect. If not already blinking, press and hold the Reset Button until you hear an audible tone. Use the Feit Electric app to complete the set up.
- Tap Add Device or the + sign, then select Flood Light Camera and confirm. You will be prompted to enter your Wi-Fi network and password.



Be sure to connect to a 2.4 GHz Wi-Fi network that covers your installation location.

## Optional - Connect to Google Assistant or Alexa using the in app guide

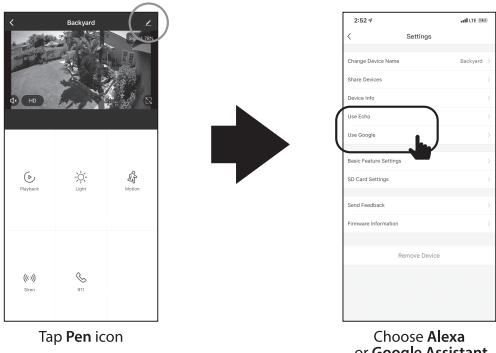

## Optional - See App User Guide to setup Siri Shortcuts

Need Help?



For 24/7 customer support, visit [feit.com/help](http://feit.com/help)

## Camera will not connect to my Wi-Fi network

- Make sure the LED is blinking blue. If the LED is blinking red, you will need to press and hold Reset Button located behind the cover on the side of the camera (see the Resetting Unit & Accessing SD Card section).
- Make sure the Wi-Fi network is a 2.4GHz network, device will not connect to a 5GHz network.
- Test your Wi-Fi network with other devices such as your phone or computer to make sure it is operating properly.
- The Wi-Fi connection may be out of range during pairing. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection.
- Your Wi-Fi network password is case sensitive, make sure you are entering it correctly.

## The camera is off-line

- There could be a temporary issue with your internet connection (e.g., service disruption). Please try again in a few minutes.
- Make sure your Wi-Fi router is turned On.
- The camera may not have power to it, make sure the wall switch and breaker is in the On position.
- Cycle the power Off and On. You will hear an audible tone and the status LED should blink red then to a solid blue in about 1 minute. If it does not turn blue after a minute, please go through the setup process again to reconnect to your Wi-Fi signal.
- Make sure the camera is getting a good signal from your Wi-Fi router. Use your phone to check range, it is recommended to have at least 2 signal bars showing for proper connection.
- The camera may have been disconnected from your Wi-Fi network, press and hold Reset Button (see the Resetting Unit & Accessing SD Card section) until you see a blinking blue LED and hear an audible tone.

## What do the blinking LEDs mean?

- Blinking BLUE = Pairing Mode
- Blinking RED = No Wi-Fi Connection
- Solid RED = Rebooting
- Solid BLUE = Connected to Internet

## Live video stream is slow to load

Camera streaming issues may be caused by any of the following:

- Your phone's cellular connection, which is reliant on mobile coverage and signal reception is slow.
- Limited internet bandwidth at home, for example, other video streaming services running at the same time on your network can cause congestion slowing down the internet upload and download speeds.
- Wi-Fi reception may not be stable or work reliably if the camera's Wi-Fi signal strength is less than 2 signal bars. You may need to install a Wi-Fi repeater or extender to boost the Wi-Fi signal.

## How to reset the camera to reenter pairing mode?

- Press and hold reset button located behind the cover on the side of the camera (see the Resetting Unit & Accessing SD Card section) until you see a blinking blue LED and hear an audible tone.

## The camera is not recording?

- Make sure Record Switch is turned On in app, under SD Card Settings. This is located in the Settings menu on the upper right corner in the control panel.
- Make sure that the microSD card is installed correctly. To confirm the camera is recognizing the microSD card, go to the SD Card Settings in the Settings menu and make sure microSD Card Capacity menu shows Total Capacity, Used and Free Space. If this does not appear you may consider reformatting the microSD card.

WARNING: Reformatting microSD card will delete all videos stored on card. Please go through the trouble shooting section before doing so or contact our Customer Support Team.

## How do I set the camera to Event or Continuous Recording?

- In the Settings menu under SD Card Settings make sure Record Switch is turned On and then select Event Recording or Continuous Recording.

## How can I check the available space on the SD Card?

In the Settings menu under SD Card Settings, you will see Used Space and Free Space.

**Note:** Only compatible with FAT32 format. Camera will not support microSD cards larger than 128GB.

## What happens when the microSD card reaches full capacity?

You will get notification if storage is almost full. Once the microSD card reaches full capacity, new videos will start rewriting (deleting) over the oldest videos.

## Can I use a new microSD card if I do not want to record over existing videos?

Yes, you can use a new microSD card if you do not want to record over existing videos by removing the side cover on the camera and replacing the existing microSD card with a new one **as long as it does not exceed 128GB and only compatible with FAT32 format**. Once this is completed you will need to format the microSD card by going to the SD Card Settings in the Settings menu and pressing Format SD Card then Confirm.

WARNING: Reformatting microSD card will delete all content stored on card.

# Flood Light Security Camera Installation Guide



## IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

## LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to 1 year from date of purchase. If the product fails within the warranty period, please visit [feit.com/help](http://feit.com/help) for help. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.



SD™, microSD™, and SDHC™ are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries, or both.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The device can be used in mobile (min 7.87 in.) exposure condition without restriction.







## WARNING:

This product may represent a possible shock or fire hazard if improperly installed or attached in any way. Product should be installed in accordance with the owner's manual, current electrical codes and/or the current National Electric Code (NEC).


1. J-Box (not included)
2. Mounting Bar
3. J-Box Screws (2 pieces)
4. Spacers (2 pieces)
5. Mounting Gasket
6. Mounting Plate
7. Terminal Block
8. Mounting Plate Screws (2 pieces)
9. Mounting Bar Screw (1 piece)
10. Fixture Body
11. Mounting Holes
12. Rubber Washers (2 pieces)
13. Decorative Nuts (2 pieces)
14. LED Flood Lights
15. Camera Lens and Photocell Sensor
16. Speaker
17. Motion Sensor
18. Mic
19. Indicator Light

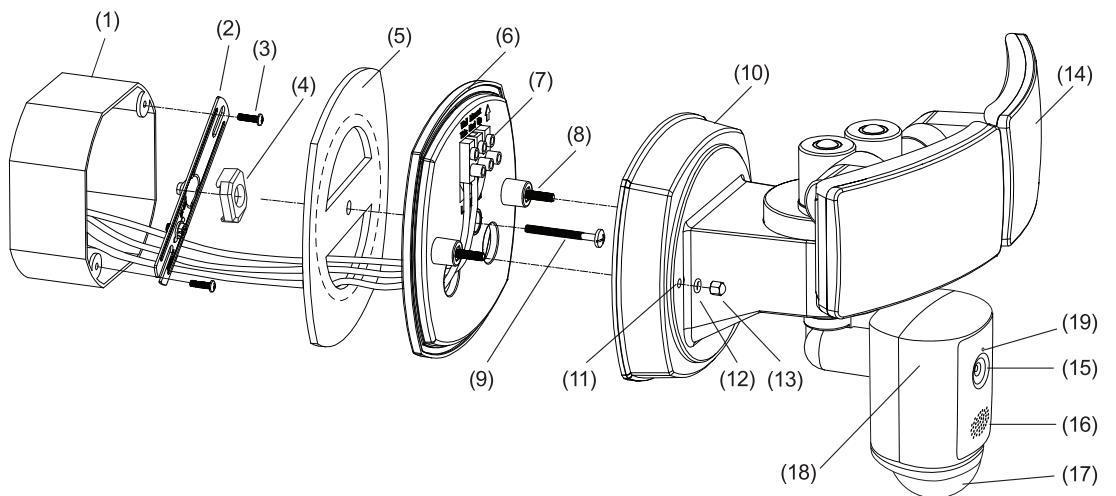


## PARTS INCLUDED (not drawn to scale)

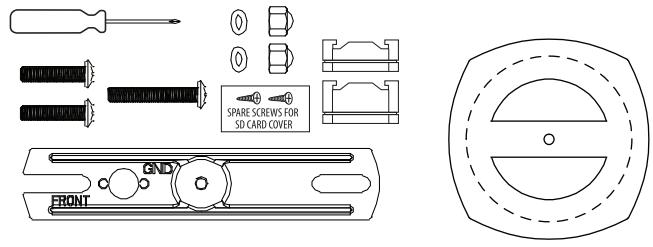

## TOOLS REQUIRED (not included)

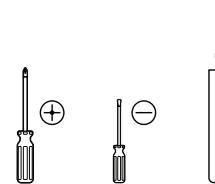


## RESETTING UNIT & ACCESSING SD CARD

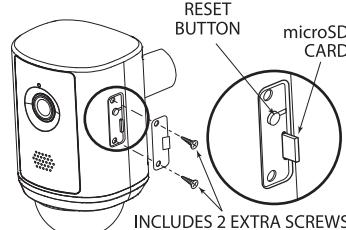

To access Reset Button and microSD™ card, remove cover using a small screwdriver (included). To reset the unit, (unit must be connected to power) press the Reset Button for 15 seconds or until you hear an audible tone. To remove microSD card, push card in with your finger and release. Card will eject halfway.


## PRE-INSTALLATION

Remove the Mounting Plate (6) by unscrewing and removing the Decorative Nuts (13) and Rubber Washers (12).

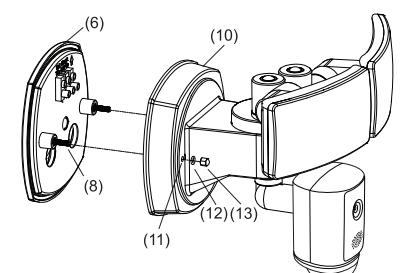


## RISK OF ELECTRIC SHOCK: TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING.

## ADJUSTING LED FLOOD LIGHTS AND CAMERA

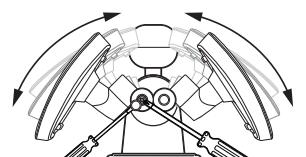


### Top View

Remove screw cap(s) with a small flathead screwdriver. Position flood light(s) where desired (left or right), THEN tighten this screw.

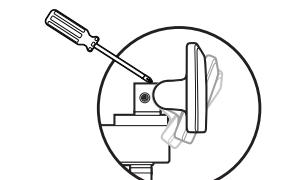

### Left Side View

Position flood light(s) where desired (up or down), THEN tighten this screw.

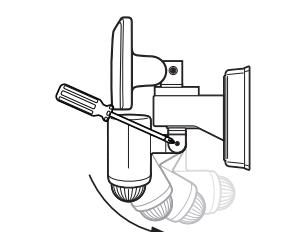


### Right Side View

Position camera where desired (up or down) THEN tighten this screw.

## EXTERNAL J-BOX INSTALLATION


1. Turn main power Off at circuit breaker or fuse box.

2. Install Mounting Bar (2) to an External J-Box (1) using provided J-Box Screws (3). Add Spacer (4) to eliminate gap between Mounting Bar and Mounting Plate.

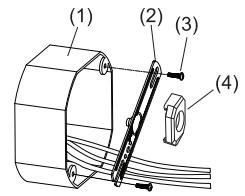


NOTE: Spacer (4) may or may not be needed.

3. Extend and feed J-Box wires through openings on Mounting Gasket (5) and Mounting Plate (6).

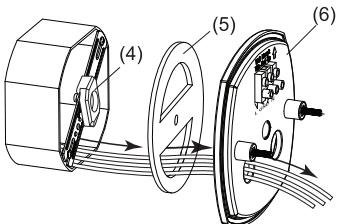


NOTE: Tear away at perforation on Mounting Gasket (5)

4. Secure Mounting Gasket (5) and Mounting Plate (6) to Mounting Bar (2) using Mounting Bar Screw (9). Do not over-tighten.

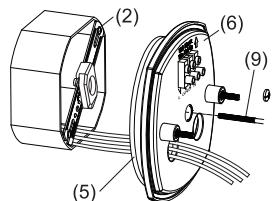


5. Connect power supply wires directly to Terminal Block (7). Secure wires to Terminal Block by using a small flat-head screwdriver. See detail.

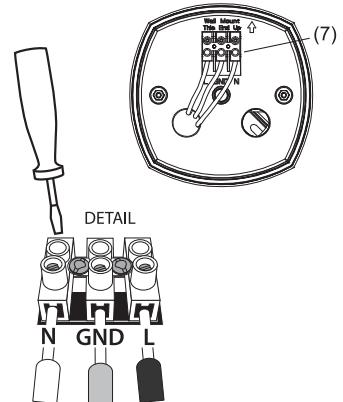

CONNECT:  
Black wire to "L" input.  
Ground wire to "GND" input.  
White wire to "N" input.

6. Position and align the Mounting Holes (11) on Fixture Body (10) to the Mounting Plate Screws (8). Secure Fixture Body (10) to Mounting Plate (6) using Rubber Washers (12) and Decorative Nuts (13).

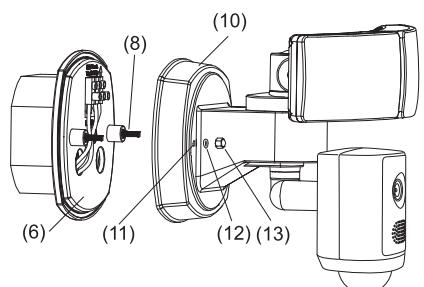


7. Turn power On at circuit breaker or fuse box. Turn On wall switch if connected to one. Ensure lights work before proceeding to step 8.

8. Once fixture is tightly secured to J-Box, apply silicone sealant around the base of the fixture to prevent moisture from reaching the connections.

## FLUSH J-BOX INSTALLATION


1. Turn main power Off at circuit breaker or fuse box.

2. Install Mounting Bar (2) to a Flush J-Box (1) using provided J-Box Screws (3). Add Spacer (4) to eliminate gap between Mounting Bar and Mounting Plate.

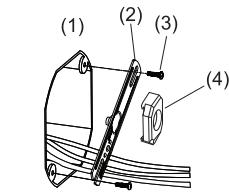


NOTE: Spacer (4) only needed if J-Box is recessed too deep.

3. Extend and feed J-Box wires through openings on Mounting Gasket (5) and Mounting Plate (6).

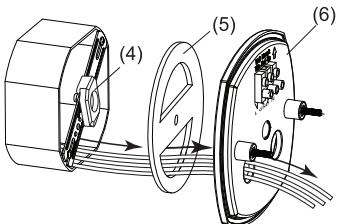


NOTE: Do not tear away at perforation on Mounting Gasket (5)

4. Secure Mounting Gasket (5) and Mounting Plate (6) to Mounting Bar (2) using Mounting Bar Screw (9). Do not over-tighten.

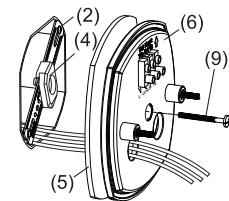


5. Connect power supply wires directly to Terminal Block (7). Secure wires to Terminal Block by using a small flat-head screwdriver. See detail.

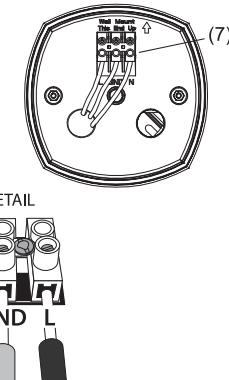

CONNECT:  
Black wire to "L" input.  
Ground wire to "GND" input.  
White wire to "N" input.

6. Position and align the Mounting Holes (11) on Fixture Body (10) to the Mounting Plate Screws (8). Secure Fixture Body (10) to Mounting Plate (6) using Rubber Washers (12) and Decorative Nuts (13).

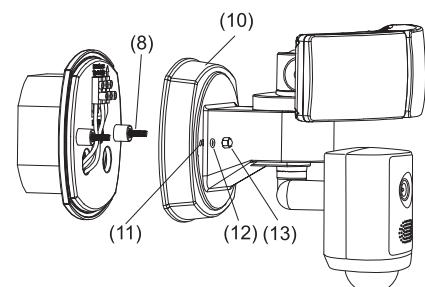

7. Turn power On at circuit breaker or fuse box. Turn On wall switch if connected to one. Ensure lights work before proceeding to step 8.

8. Once fixture is tightly secured to J-Box, apply silicone sealant around the base of the fixture to prevent moisture from reaching the connections.

*Continued*

*Continued*