


ChildLife®

Playsets Since 1945

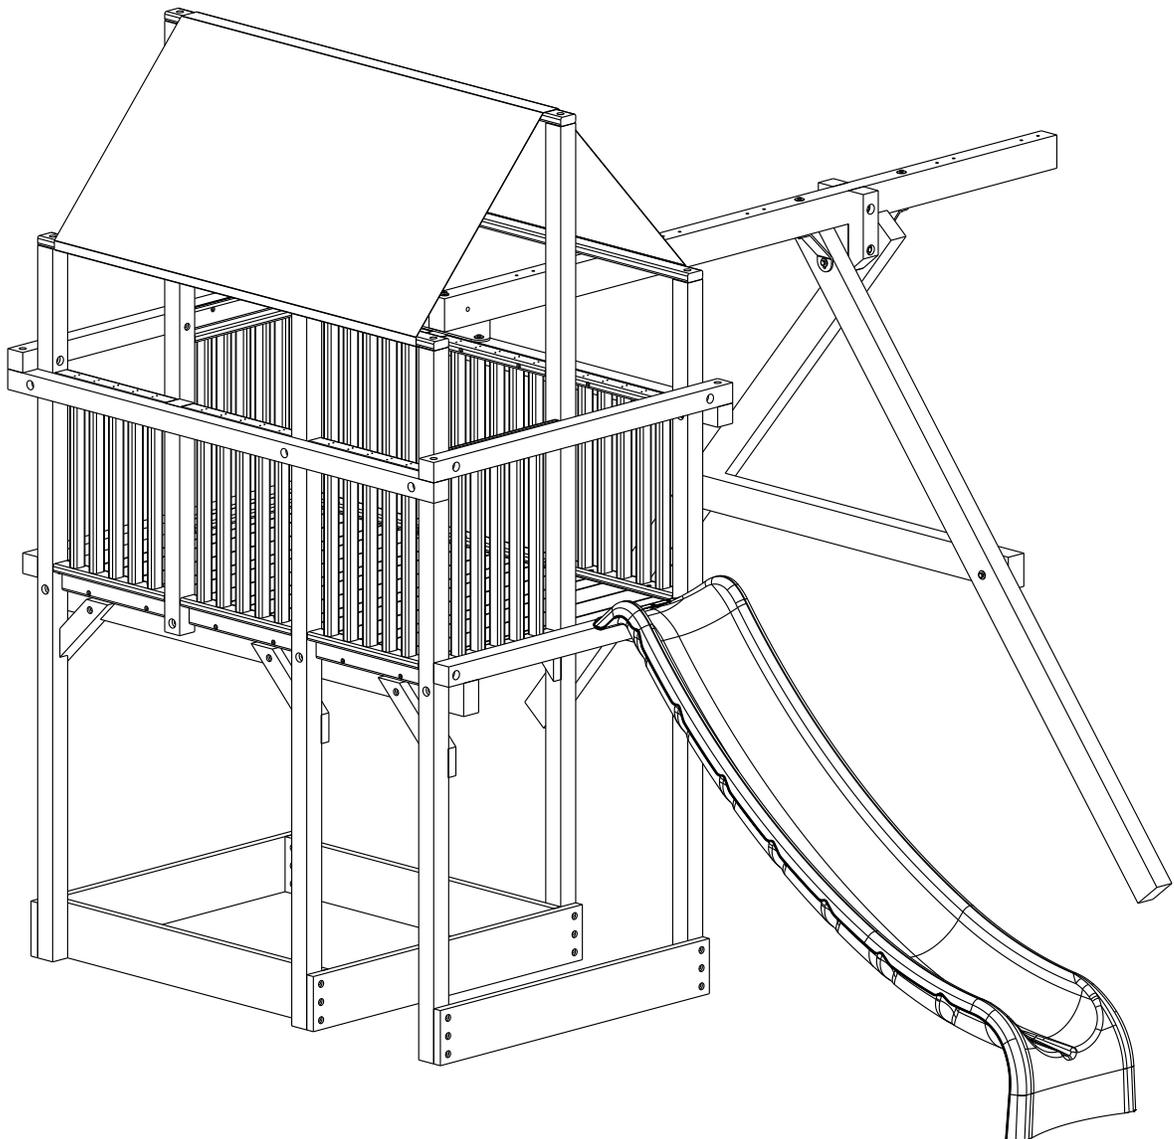

PG-MA-0033-00

I N T R O D U C T I O N

Welcome to our family of ready-to-build backyard play equipment. WOODPLAY playsets are designed with ease of assembly in mind and we provide these step-by-step installation instructions.

After reading the information below, locate your structure site and carefully unpack parts. As you unpack your playset, notice the part identification tags on each part and become familiar with each part before beginning assembly. **Remember that a little extra time spent familiarizing yourself with the parts and instructions before you begin will help you avoid mistakes and save you time later.**

Choosing A Location For Your Playset

When selecting your structure site, always keep the child's safety in mind. Here are some recommendations to help you create a safe play area.

A. The playset should be located on level ground. The stationary components such as ladders and slides are **REQUIRED** to be a minimum of six feet from any structure or obstruction such as a fence, garage, house, tree or overhanging branches, electrical wires or clotheslines. Any swinging equipment is also **REQUIRED** to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well. We also recommend that you do not install your playset near a lake, river, swimming pool or other water hazard.

B. The U.S. Consumer Product Safety Commission (CPSC) recommends that you install and maintain a resilient surface under your play equipment. The CPSC's Consumer

Information Sheet for Playground Surfacing Materials is on the last page. A resilient surface, should be installed after the equipment has been completely assembled according to these instructions. The equipment must rest on solid ground. Please note that this product has a maximum fall height of 8'.

Do not install home playground equipment indoors, or over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious or fatal injury.

Responsible on-site adult supervision is one of the most important contributions to children's safety that you can make. WOODPLAY strongly recommends on-site adult supervision of children of all ages. Safe swinging and climbing skills need to be taught to children, just like any other physical activity.

Maintaining Your Playset

Here are some maintenance tips required to insure safe enjoyment of your equipment for years to come.

A. At the beginning of each usage season and every two weeks during, check: nuts and bolts and tighten as needed, swing seats, chains, ladders, slides, rope and wood components for signs of deterioration and replace if necessary.

B. On a yearly basis, we recommend that you coat your playset with a sealant or preservative. You may also want to spot sand any areas prior to sealing. Be sure that the sealant you select is non-toxic and child safe. Your local WOODPLAY dealer may offer a complete sealant and maintenance program.

C. Do not use line trimmers or "weed eaters" around your play equipment. The line will remove both paint and wood from uprights and base pieces. Any damage resulting from this type of abuse is not covered under our limited warranty.

D. Remove plastic swing seats and take indoors or do not use when the temperature drops below 0° F.

E. When the time comes to disassemble and dispose of the play equipment, do so in such a way that no hazards will exist at the time the equipment is discarded.

If you have any questions about your playset, or are in need of replacement parts, contact your local WOODPLAY Representative. Please keep these instructions for future reference.

Adults Must:

- Limit climbing and swinging heights to each child's ability.
- Verify that suspended climbing ropes are secured at both ends.
- Verify that suspended climbing ropes cannot be looped back on themselves.
- Dress children appropriately for play. Use well-fitting Shoes that do not have slippery soles.
- Avoid ponchos, scarves, hoods, loose-fitting clothing, neckties, and any clothing with a drawstring. Serious injury could result should any part of the children's clothing become entangled in the equipment.
- Do not allow children to play wearing helmets.
- Remember that children are inventive. When they develop games that are unsafe, be alert and change the rules.
- Note the weight limit for any single user on WOODPLAY equipment is 200 pounds. Limit the number of users to one on each swing. The tower portion of the play system will accommodate four to six additional users with a max combined weight of 1100 pounds for entire playset.
- This product is intended for use by children from ages 3 to 12 years of age

Teach Children:



- Not to walk close to, in front of, behind, or between moving items.
- Not to twist the swing ropes, or loop them over the top support bar, since this may reduce the strength of the rope.
- Not to swing empty swing seats.
- Not to swing sideways into the path of adjacent swings.
- Not to use the equipment in a manner other than that for which it is intended.
- Not to get off the equipment while it is in motion.
- Not to jump off the tower.
- Not to climb or swing when they are wet or when the equipment is wet.
- To sit in the center of the swings with their full weight on the seats.
- To hold on to swings and climbers with both hands.
- Not to stand in the swing seats.
- Not to ride or leave bicycles or other toys in the swing area.
- Not to use hammers, saws, nails, or wrenches on the equipment.
- Not to swing so high that chains become slack, or above the height of the swing support.
- Not to jump on a slide.
- Not to climb on top of the swing support.
- Not to attach to the playground equipment any item that is not specifically designed for use with the equipment, such as (but not limited to) jump ropes, clotheslines, pet leashes, cables, and chains. These may become strangulation hazards.
- To slide feet first, never head first.
- To watch for other children while swinging or playing near the equipment.

HARDWARE IDENTIFICATION


NOTE TO INSTALLER

You must assemble this product in accordance with these Assembly Instructions.
After assembly is complete, please give this Owner's Manual to the owner of the play system.


Measurement taken from bottom of bolt head to the bottom of bolt

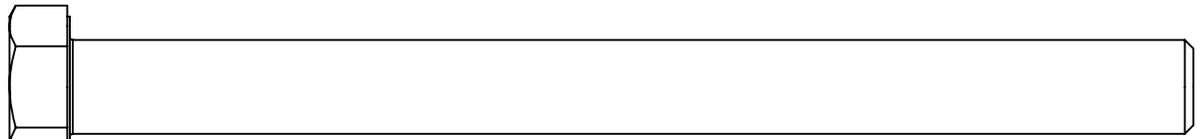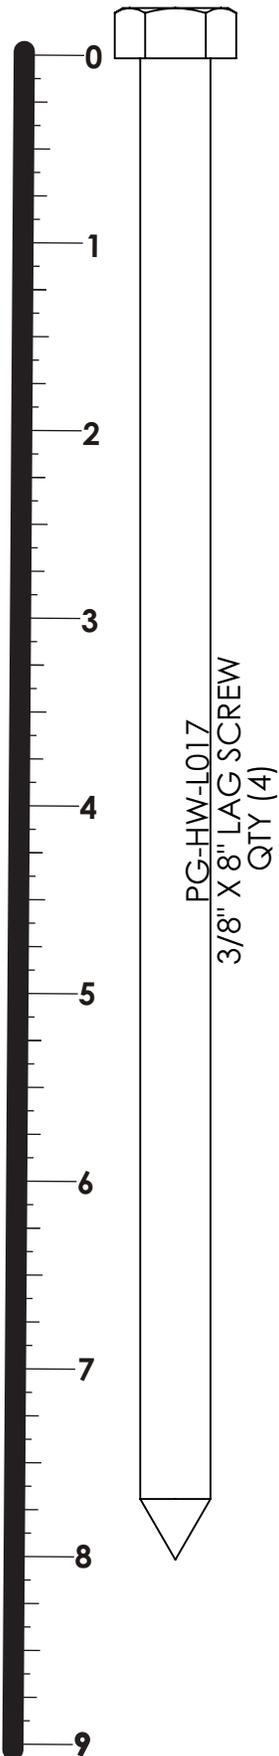


PG-HW-B013
1/2-13 x 6 Hex Head Bolt
QTY: (22)

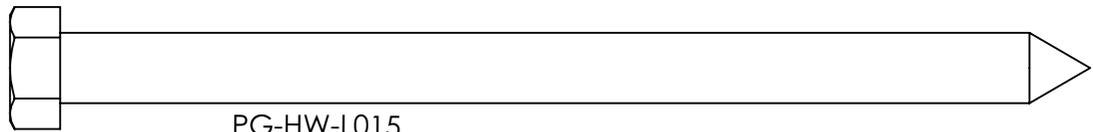


PG-HW-L015
3/8" X 5 1/2" LAG SCREW
QTY (12)

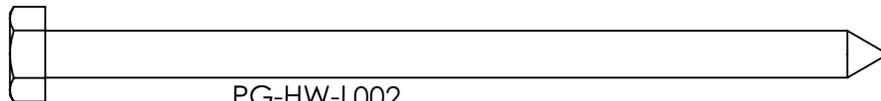


PG-HW-L002
1/4" X 4 1/2" LAG SCREW
QTY (12)

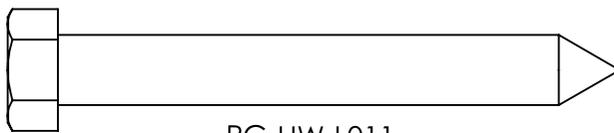


PG-HW-L011
3/8" X 3" LAG SCREW
QTY (27)

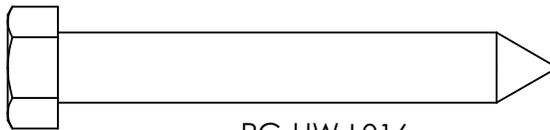


PG-HW-L016
3/8" X 2.5" LAG SCREW
QTY (30)

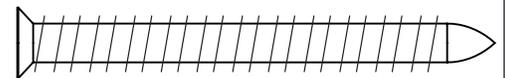


PG-HW-S012
#10" X 2 1/2" Flat Head Screw
QTY (2)

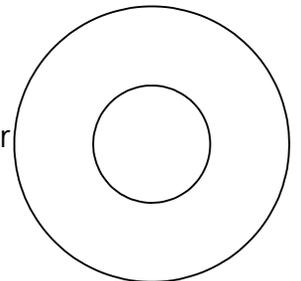


PG-HW-W005
1/2" Flat Washer
QTY (44)

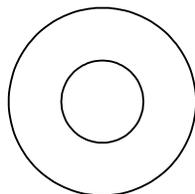


PG-HW-W004
3/8" Flat Washer
QTY (64)

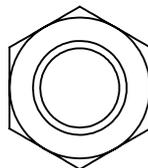

PG-HW-N004
1/2-13 Lock Nut
QTY (22)

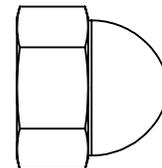







PG-HW-N005
1/2-13 Acorn Nut
QTY (22)

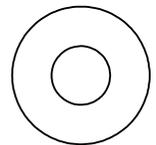


PG-HW-W002
1/4" Flat Washer
QTY (12)

STANDARD PARTS LIST


PART NUMBER	CORNER POST TABLE	QTY.
PG-4X4-114-CP	113 1/2" Corner Post 5' Deck Height	4
PG-4X4-114-CP-A	113 1/2" Middle Corner Post 5' Deck Height	2
PG-4X4-126-CP-B	125 1/2" Corner Post 6' Deck Height	4
PG-4X4-126-CP-C	125 1/2" Middle Corner Post 6' Deck Height	2

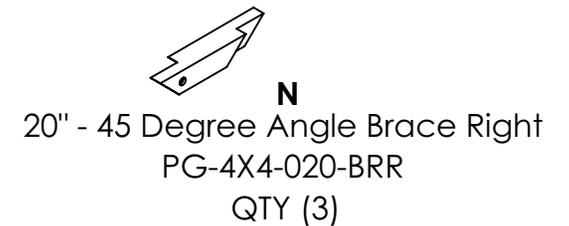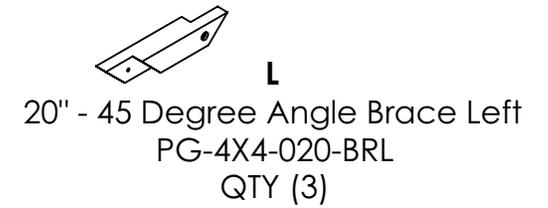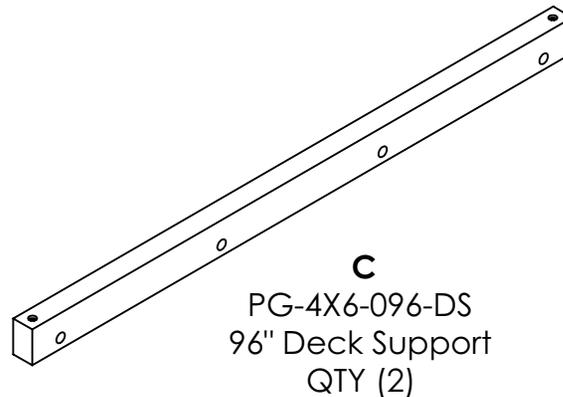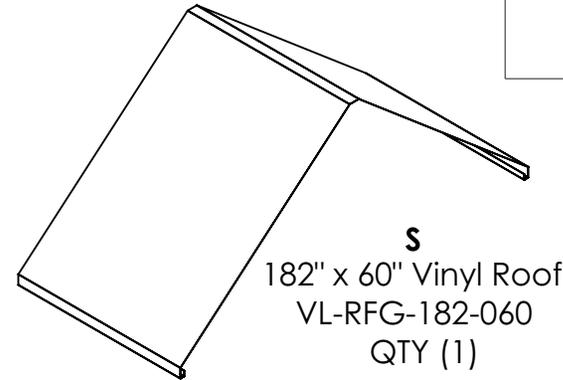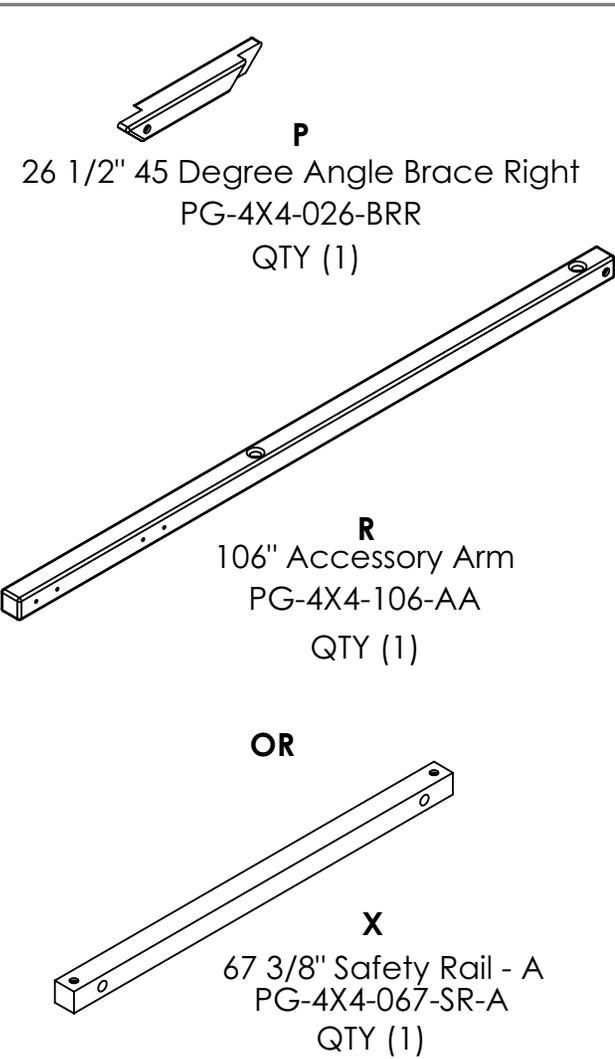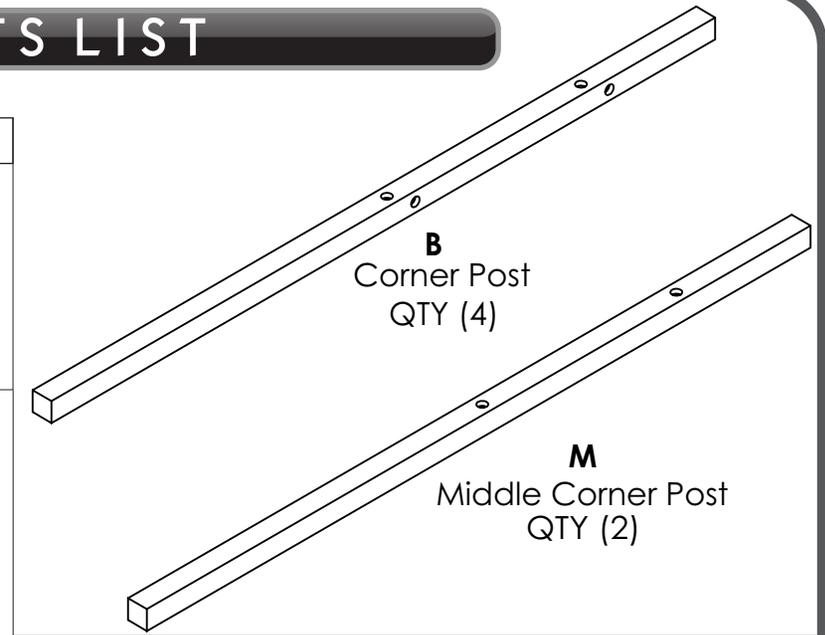


STANDARD PARTS LIST- (CONTINUED)

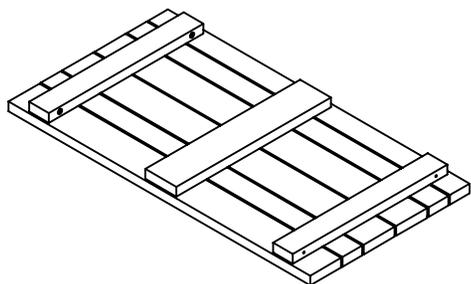


I
RW-DEK-054-029
53 5/8" Deck - 28 3/8" Wide
QTY (1)

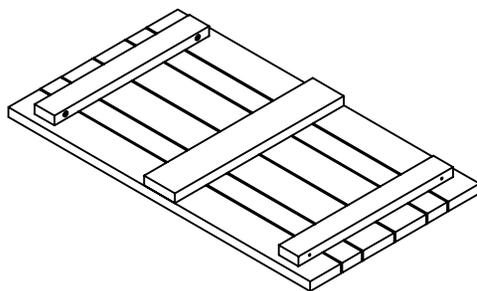


D
RW-DEK-054-030
53 5/8" Deck - 30 1/8" Wide
QTY (2)

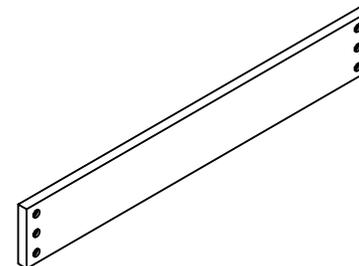


A
PG-210-061-SBS
60 5/8" Sandbox Side
QTY (5)

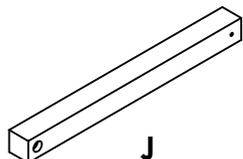


J
37 7/8" Vertical Panel Divider
PG-4X4-038-VPD
QTY (2)

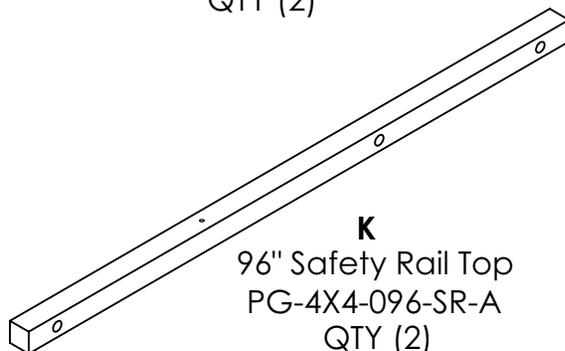


K
96" Safety Rail Top
PG-4X4-096-SR-A
QTY (2)

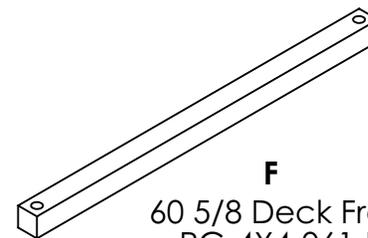


F
60 5/8" Deck Frame
PG-4X4-061-DF
QTY (2)

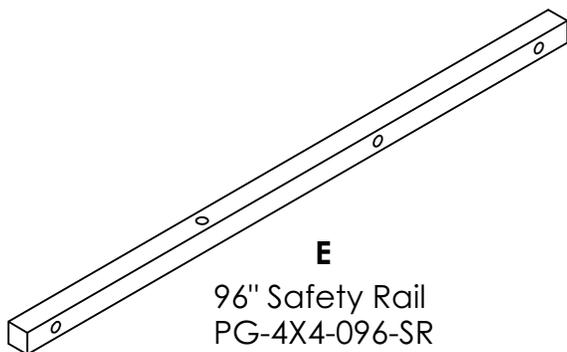

E
96" Safety Rail
PG-4X4-096-SR
QTY (2)

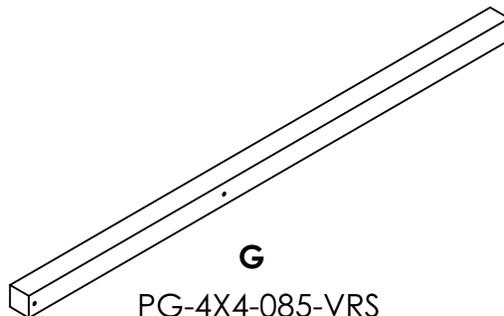

G
PG-4X4-085-VRS
85" Vertical Roof Support
QTY (2)

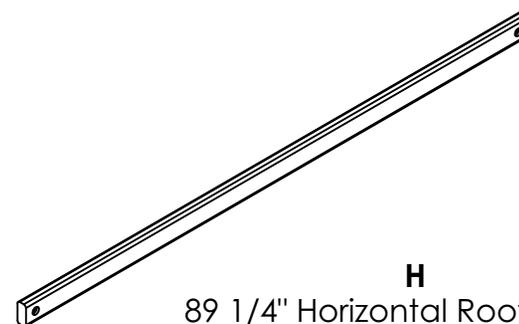


H
89 1/4" Horizontal Roof Support
PG-2X4-089-HRS
QTY (4)

ACCESSORY PARTS LIST (OPTIONAL)



PARTS FOR SIDE PANEL:


PART NUMBER	DESCRIPTION	QTY.
PG-2X4-025-PBT	25" Panel Top	1
PG-2X4-025-PBB-A	25" Panel Bottom Drilled	1
PG-2X3-030-PR	2 X 3 X 30-1/4 Panel Rung	5
PG-2X4-025-PBB	25" Panel Bottom	1

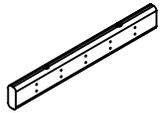


25" PANEL TOP
PG-2X4-025-PBT



2 x 3 x 30-1/4 PANEL RUNG
PG-2X3-030-PR

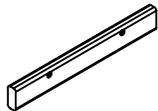

25" PANEL BOTTOM
PG-2X4-025-PBB

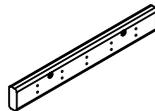

25" PANEL BOTTOM DRILLED
PG-2X4-025-PBB-A

5 Foot Step Ladder

ITEM	DESCRIPTION	PART NUMBER	QTY.
T	102" Step Ladder Rail Left	PG-4X4-102-STP-LRL	1
U	102" Step Ladder Rail Right	PG-4X4-102-STP-LRR	1
V	21" Ladder Step	PG-2X6-021-STP	6

6 Foot Step Ladder

ITEM	DESCRIPTION	PART NUMBER	QTY.
T	89 7/8" Step Ladder Rail Left	PG-4X4-090-STP-LRL	1
U	89 7/8" Step Ladder Rail Right	PG-4X4-090-STP-LRR	1
V	21" Ladder Step	PG-2X6-021-STP	7

5 Foot Rock Wall


ITEM	DESCRIPTION	PART NUMBER	QTY.
CW-R	89 7/8" Climbing Wall Rail	PG-4X4-090-CWR	2
CW-A	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-A	3
CW-B	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-B	4
CW-E	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-E	1
CW-D	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-D	4
CW-O	CLIMBING ROCK	PG-AC-0003	16

6 Foot Rock Wall

ITEM	DESCRIPTION	PART NUMBER	QTY.
CW-R	102" Climbing Wall Rail Right	PG-4X4-102-CWR	2
CW-A	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-A	3
CW-B	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-B	5
CW-C	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-C	3
CW-E	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-E	1
CW-D	53 7/8" x 1 x 5 1/2 Climbing Wall Board	PG-546-054-CWB-D	2
CW-O	CLIMBING ROCK	PG-AC-0003	16

1. Lay two **Corner Posts B** and one **Middle Corner Post M** on flat ground, then attach **Deck Support C** and **Sandbox Side A** as shown.

Wall Assembly 1 (side A)

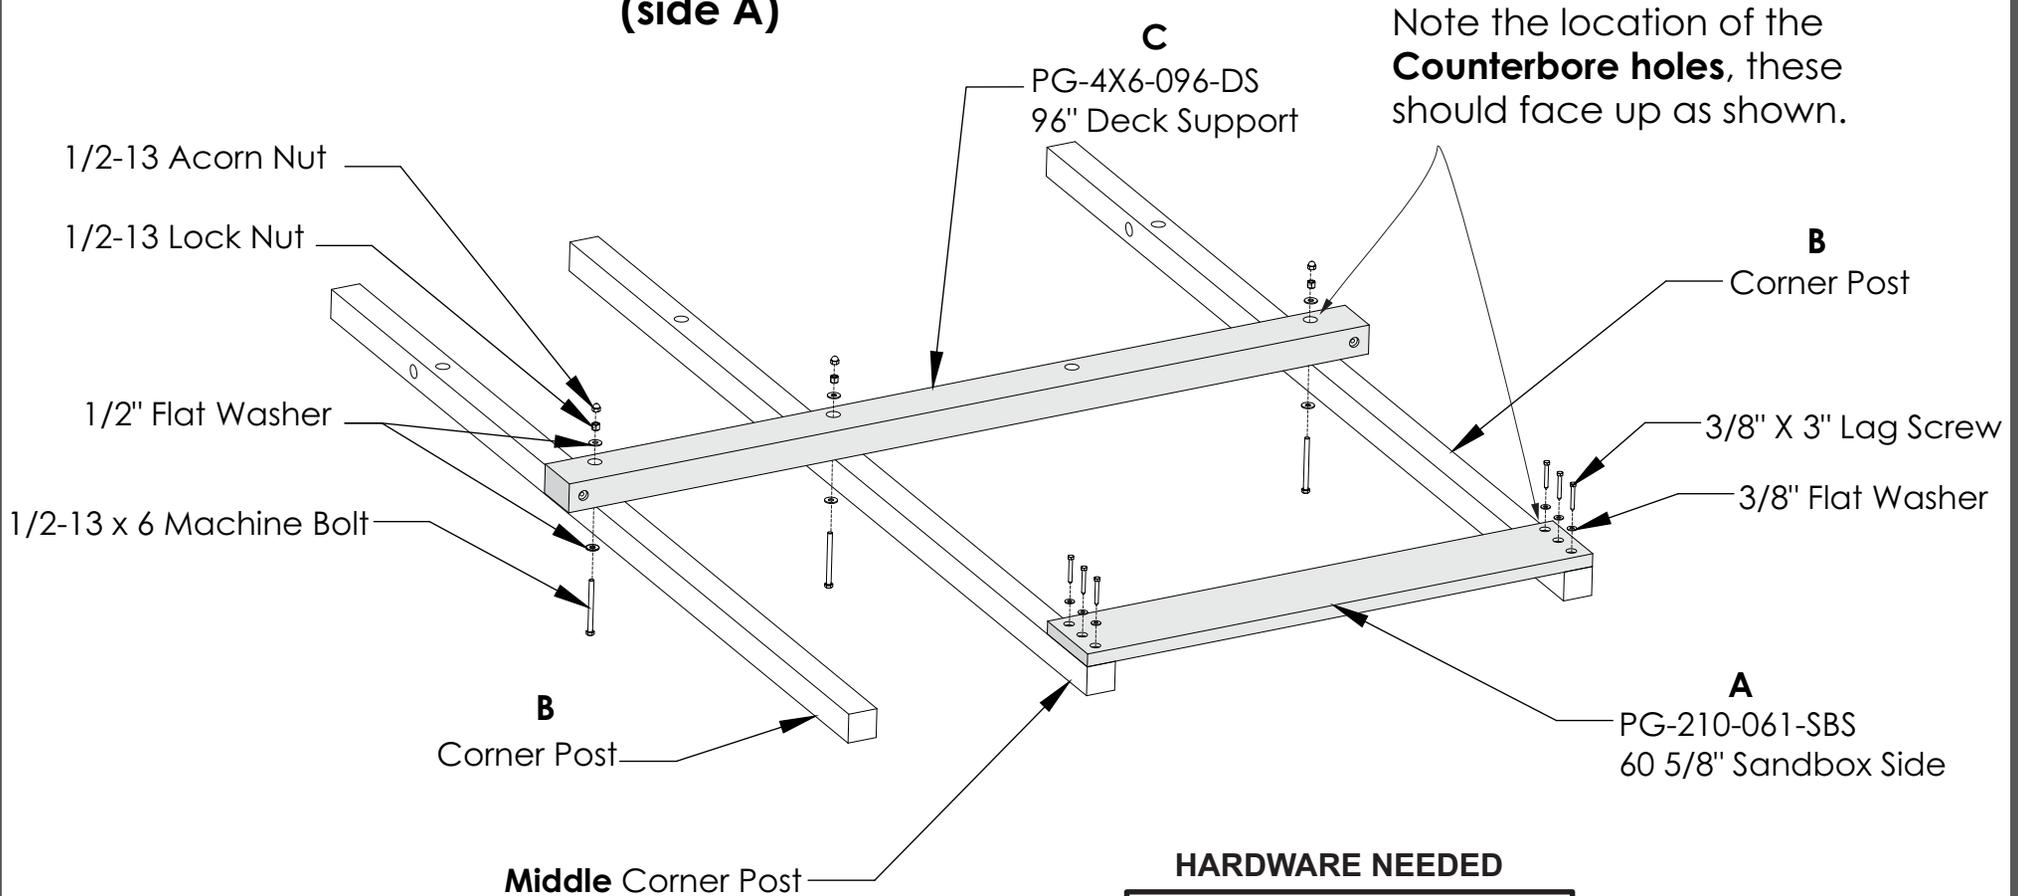


HARDWARE NEEDED

DESCRIPTION	QTY.
1/2" ACORN NUT	3
1/2" LOCK NUT	3
1/2" FLAT WASHER	6
1/2" x 6" BOLT	3
3/8" X3" LAG SCREW	6
3/8" FLAT WASHER	6

2. Flip Assembly 1 over (from previous step) & attach **Safety Rail K**.

Flip Assembly 1 from previous step over & attach Safety Rail.

Wall Assembly 1 (side B)

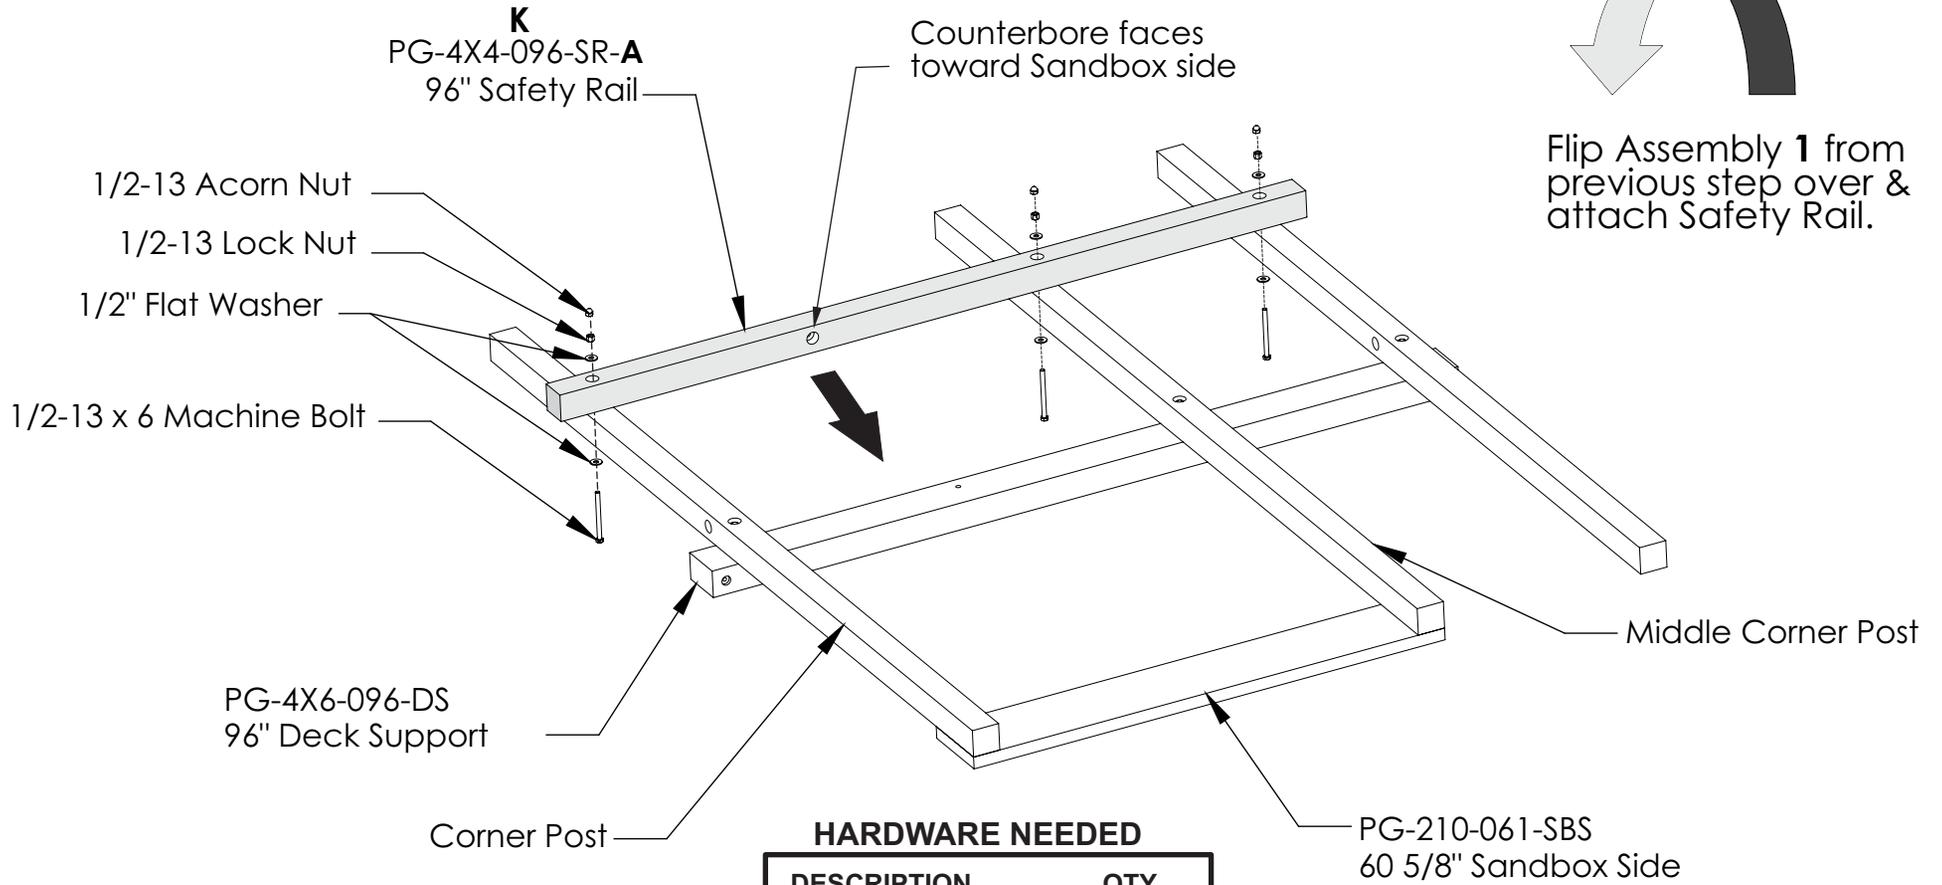


HARDWARE NEEDED

DESCRIPTION	QTY.
1/2" ACORN NUT	3
1/2" LOCK NUT	3
1/2" FLAT WASHER	6
1/2" x 6" BOLT	3

3. Lay two **Corner Posts B** and one **Middle Corner Post M** on flat ground, then attach **Deck Support C** and **Sandbox Side A** as shown.

Wall Assembly 2 (side A)

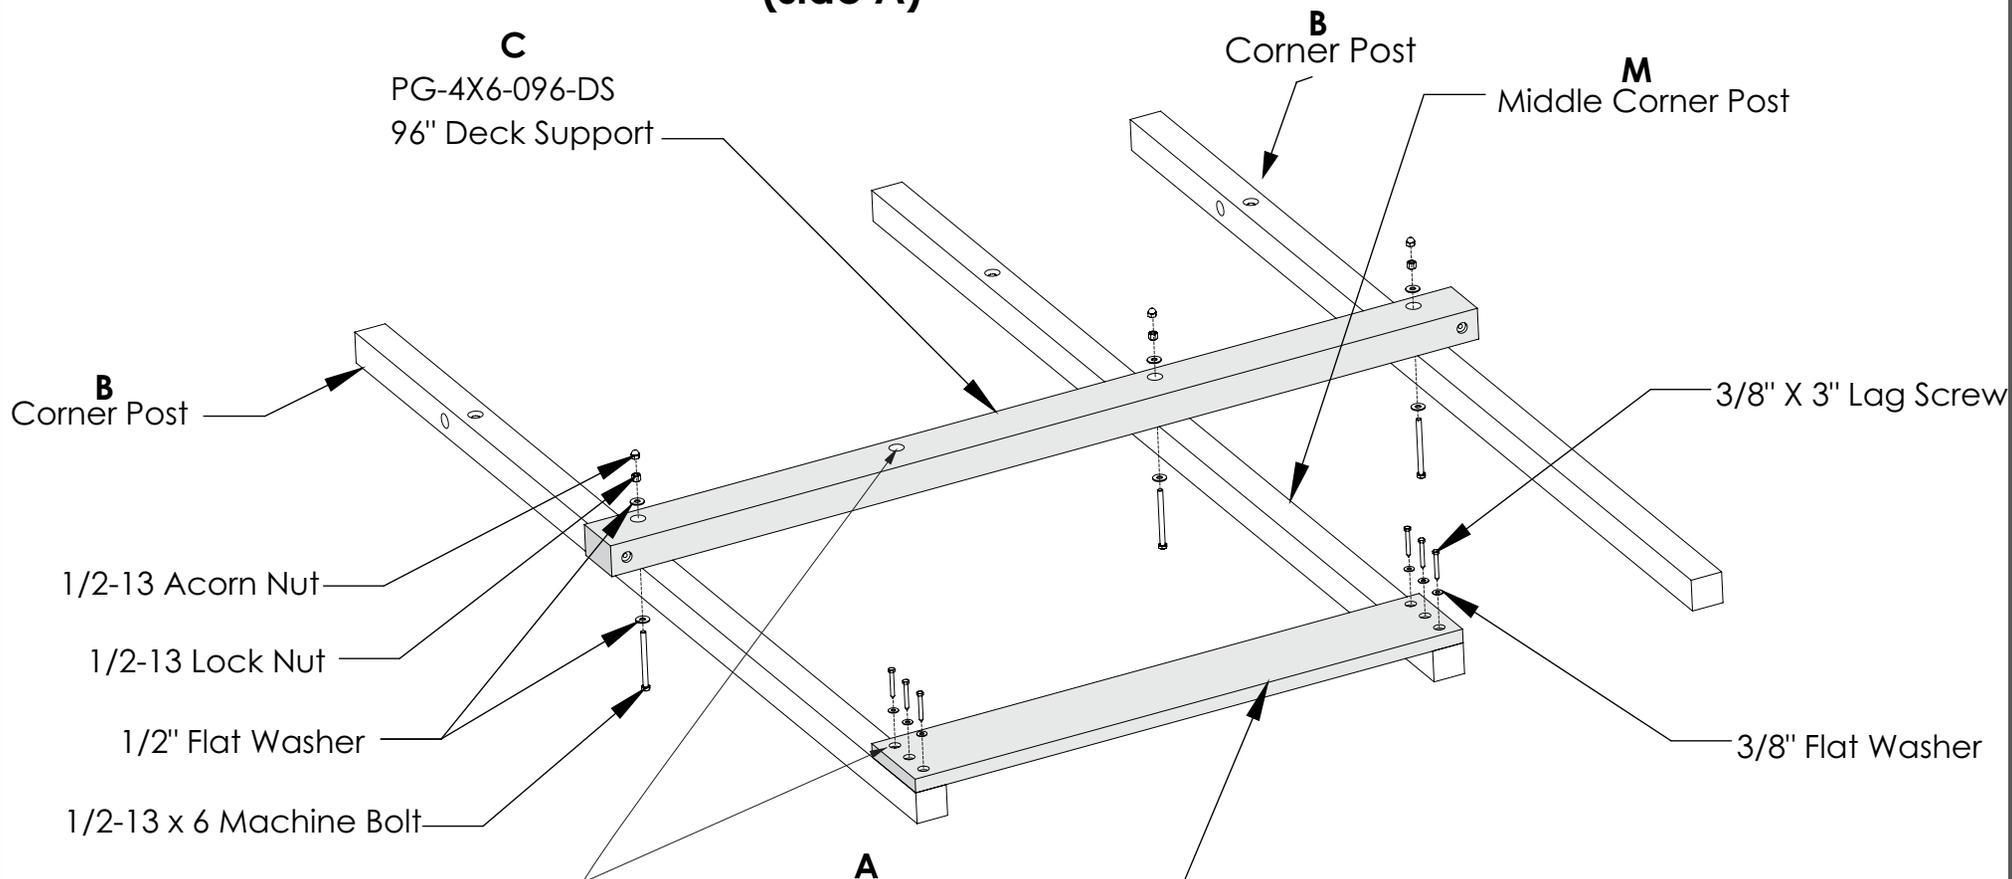


Note the location of the **Counterbore holes**, these should face up as shown.

PG-210-061-SBS
60 5/8" Sandbox Side

HARDWARE NEEDED

DESCRIPTION	QTY.
1/2" ACORN NUT	3
1/2" LOCK NUT	3
1/2" FLAT WASHER	6
1/2" x 6" BOLT	3
3/8" X3" LAG SCREW	6
3/8" FLAT WASHER	6

4. Flip Assembly 1 over (from previous step) & attach **Safety Rail E**.

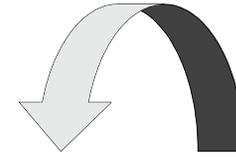


Flip Assembly 2 from previous step over & attach Safety Rail.

HARDWARE NEEDED

DESCRIPTION	QTY.
1/2" ACORN NUT	3
1/2" LOCK NUT	3
1/2" FLAT WASHER	6
1/2" x 6" BOLT	3


**Wall Assembly 2
(side B)**

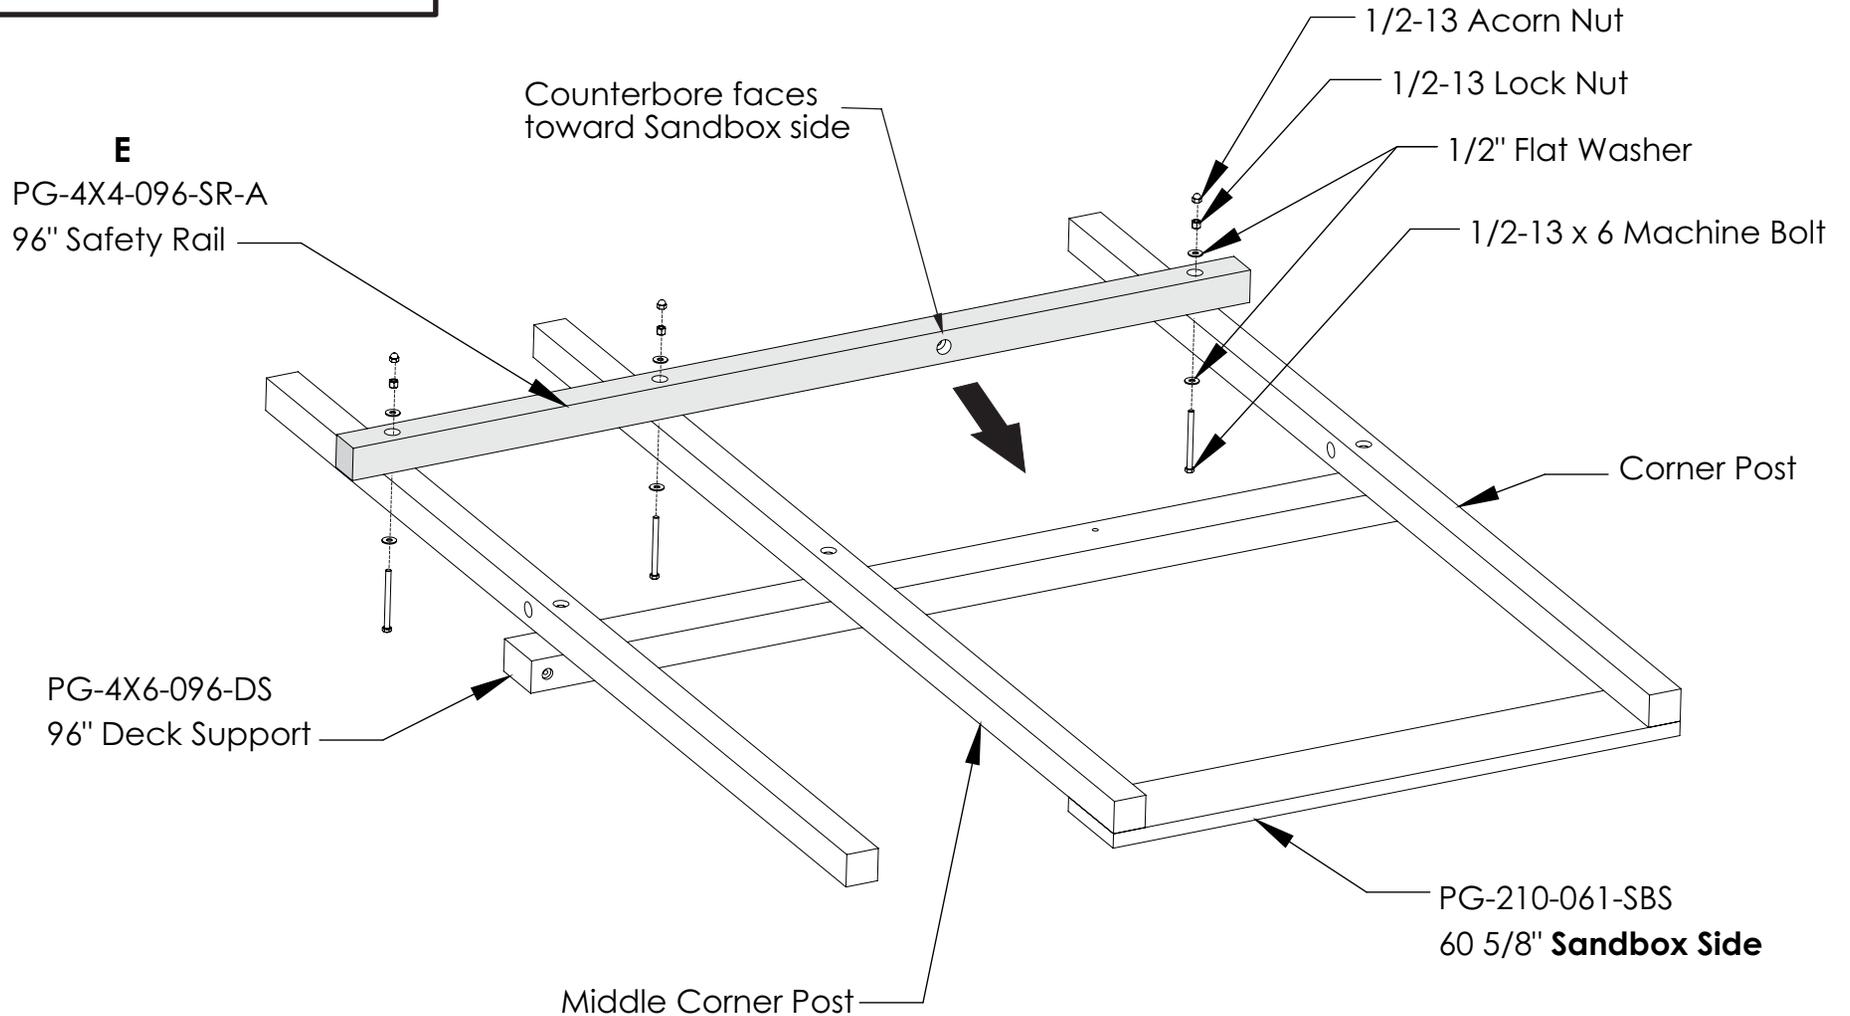

5. Stand Assembly 1 & Assembly 2 (**sandbox sides must be on the inside**) and attach the Safety Rails and Sandbox sides as shown.

NOTE: Determine if your playset comes with a part **R** Accessory Arm Kit. If it **DOES NOT**, continue with assembly as shown on this page and then skip to **page 14** after this step is complete.

IF IT DOES come with part **R** accessory arm kit install all parts as shown on this page **except** the top Safety Rail shaded in Darker gray and then continue to **page 13**.

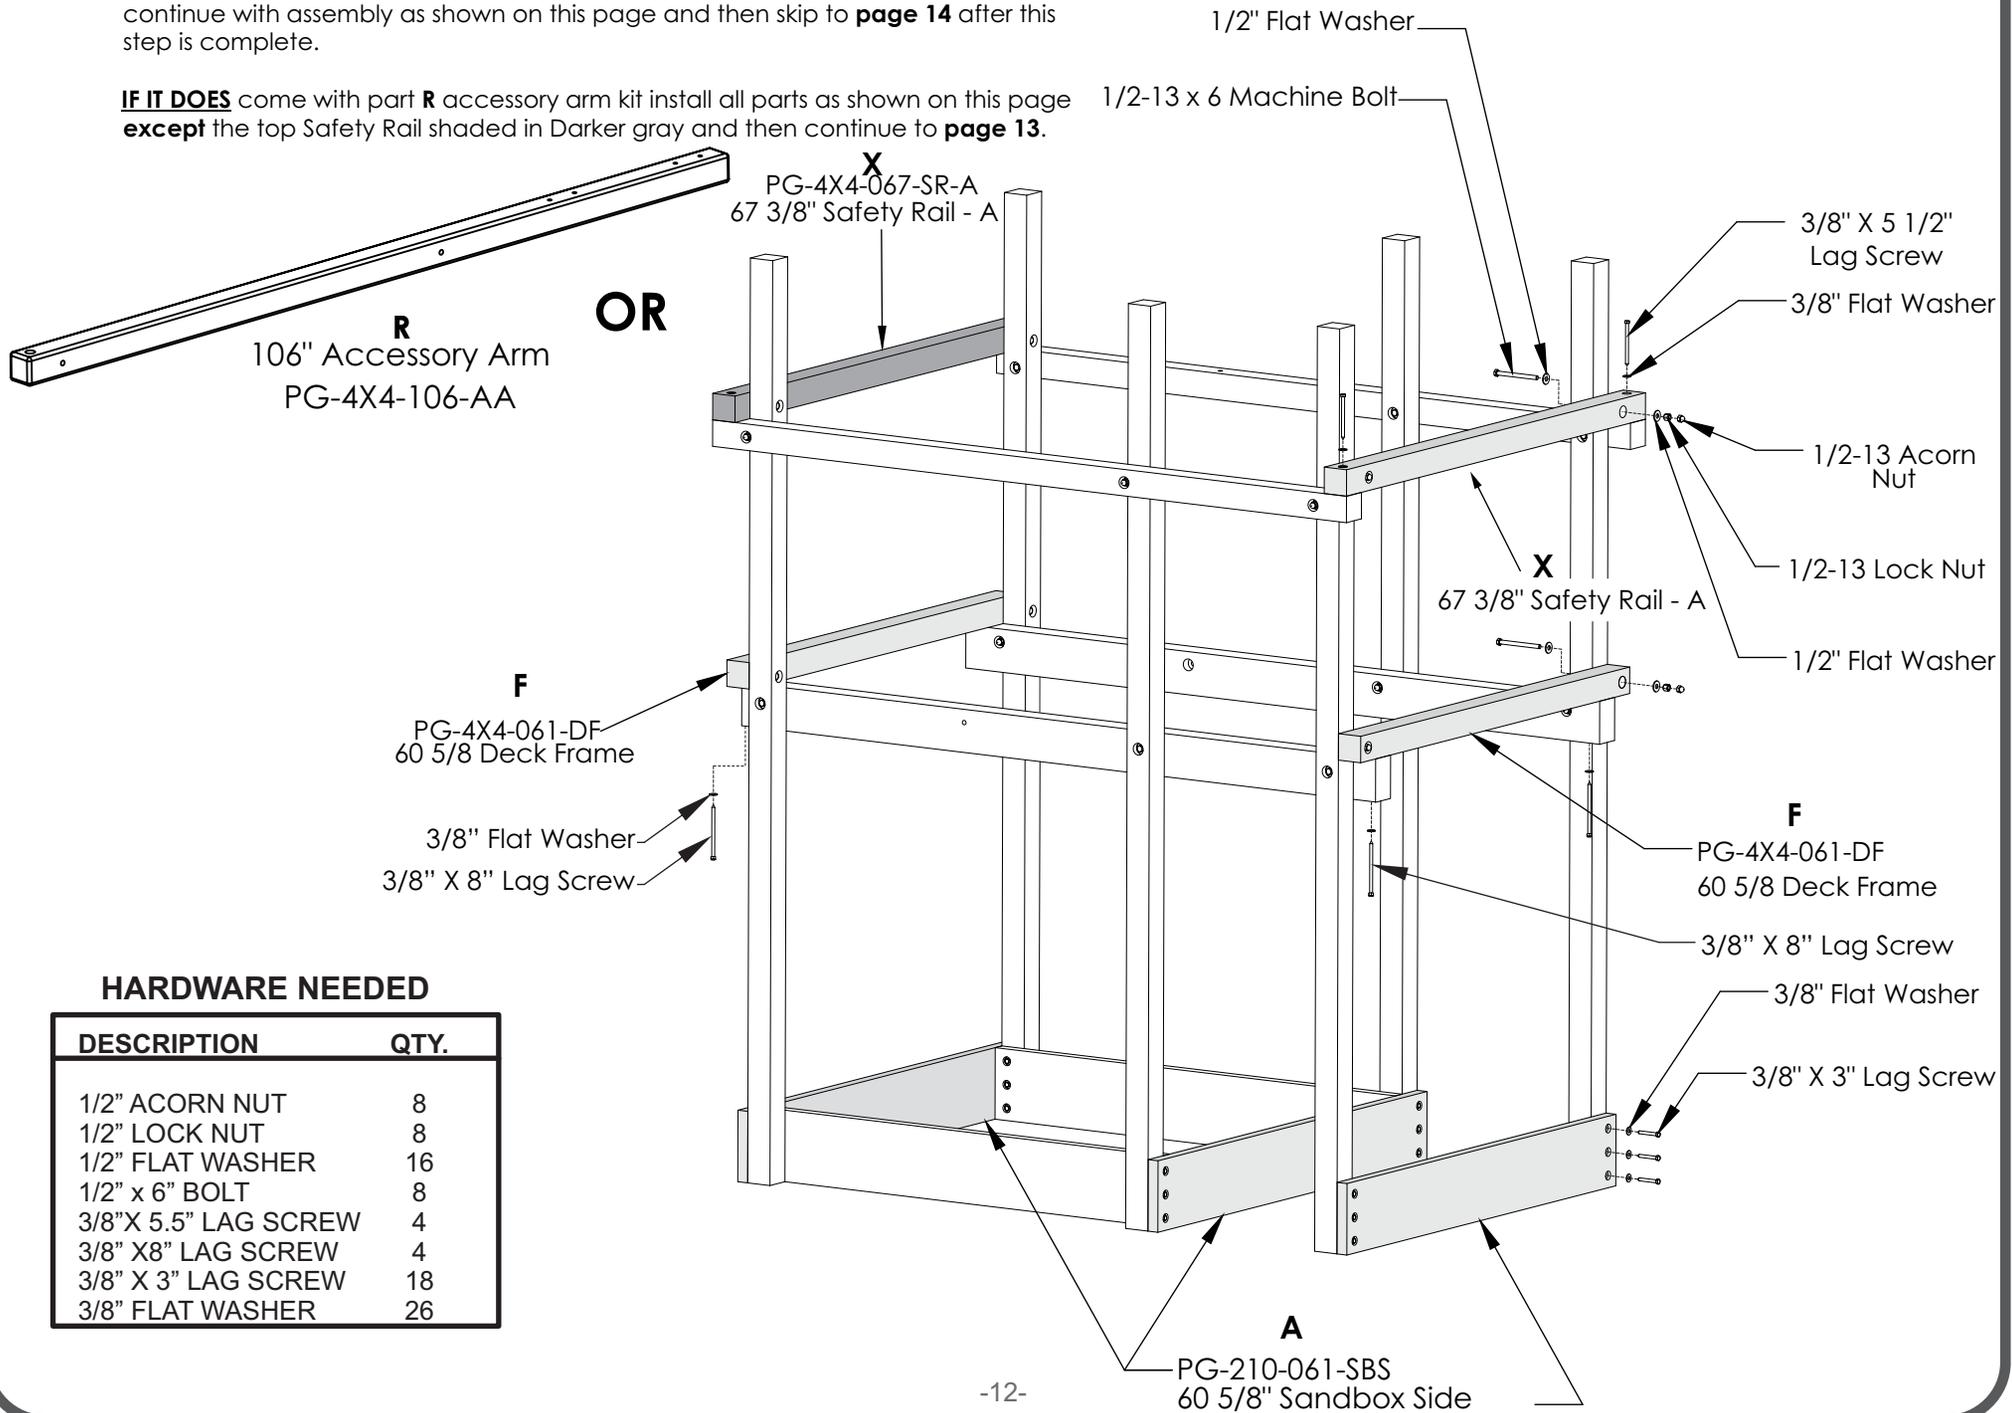



HARDWARE NEEDED

DESCRIPTION	QTY.
1/2" ACORN NUT	8
1/2" LOCK NUT	8
1/2" FLAT WASHER	16
1/2" x 6" BOLT	8
3/8" X 5.5" LAG SCREW	4
3/8" X 8" LAG SCREW	4
3/8" X 3" LAG SCREW	18
3/8" FLAT WASHER	26

NOTE: IF YOUR PLAYSET **DID NOT** COME WITH 106" ACCESSORY KIT (OPTIONAL) IGNORE THIS PAGE AND **CONTINUE TO THE NEXT PAGE.**

6. Attach Accessory Arm **R** with hardware shown.

7. Attach **26 1/2" Brace P** as shown in **Detail A.**

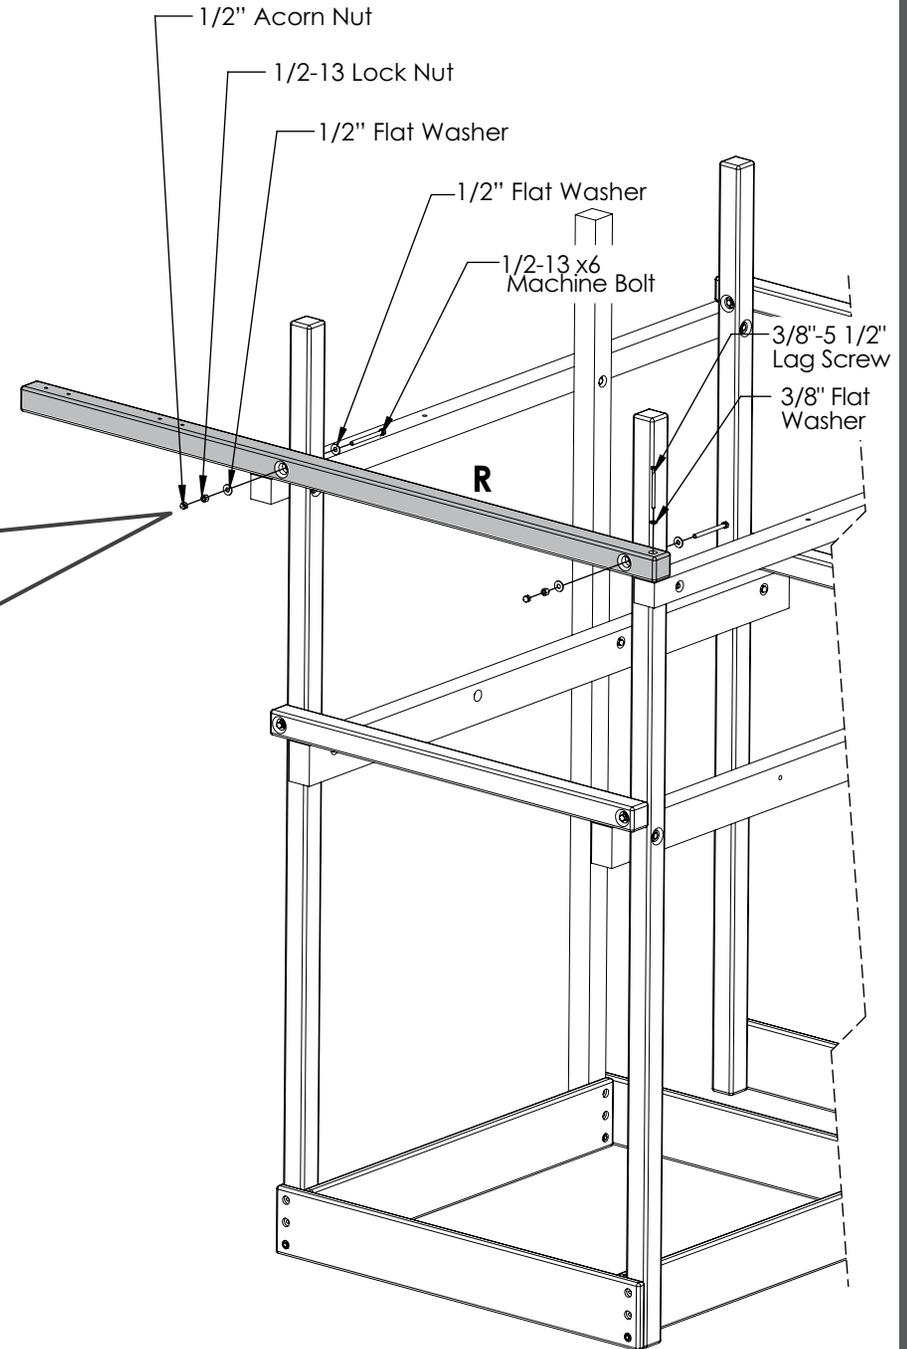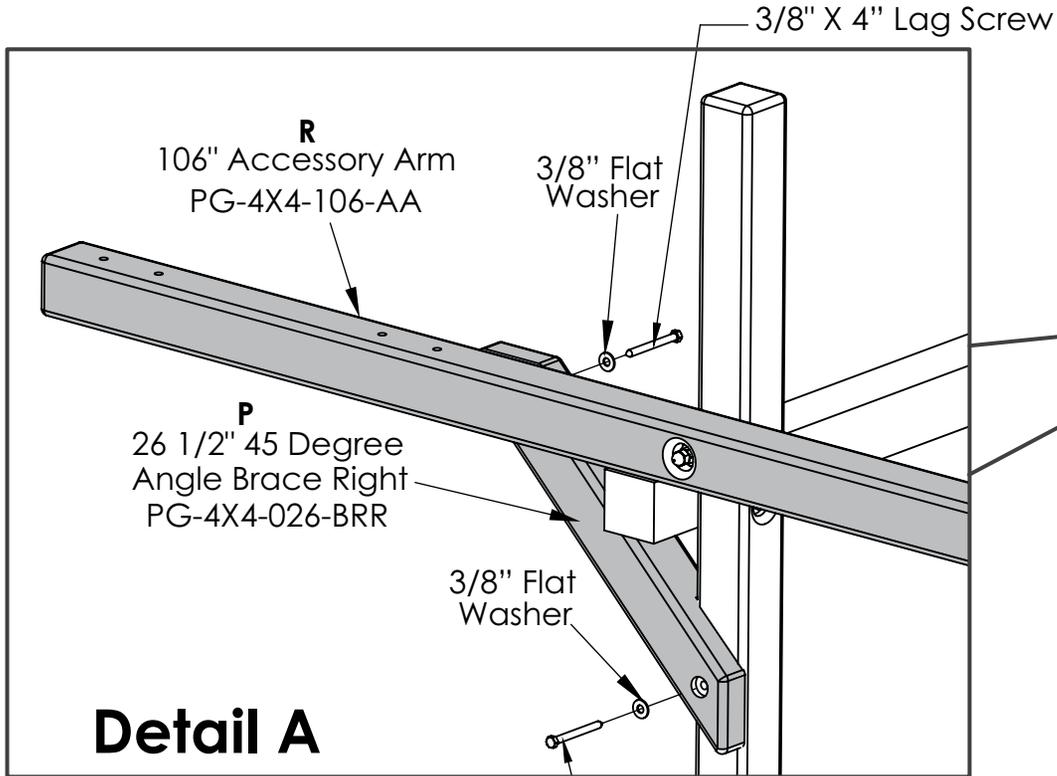

HARDWARE NEEDED



DESCRIPTION	QTY.
1/2" ACORN NUT	2
1/2" LOCK NUT	2
1/2" FLAT WASHER	4
1/2" x 6" BOLT	2
3/8" X 5.5" LAG SCREW	1
3/8" X 4" LAG SCREW	2
3/8" FLAT WASHER	3

8. Attach **six** 45 degree angled braces (**three Right & three Left**) shown. See **Detail B**.



HARDWARE NEEDED

DESCRIPTION	QTY.
3/8" X 3" LAG SCREW	12
3/8" FLAT WASHER	12

Detail B

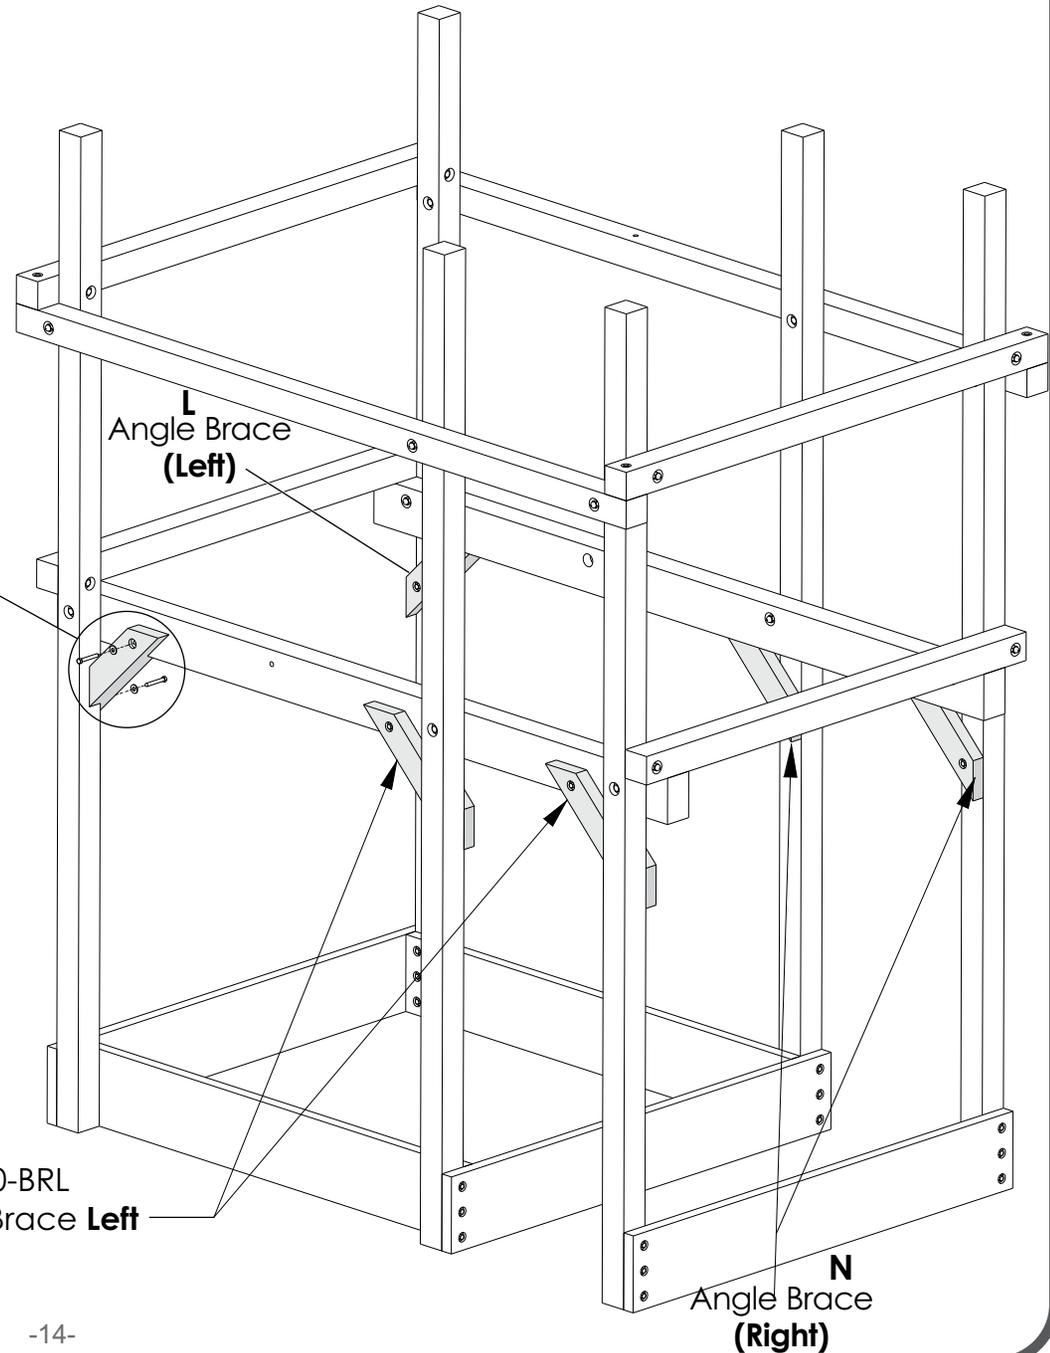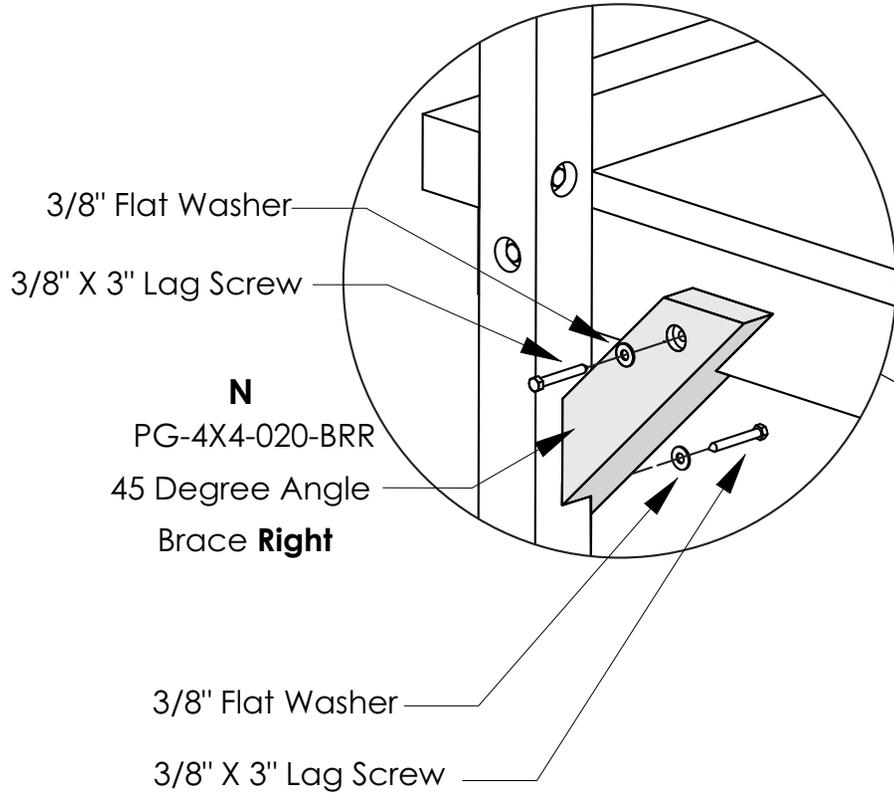


NOTE: If your Model **did not** come with assembled Decks follow these instructions. If your model has pre-assembled Decks continue to the next page.

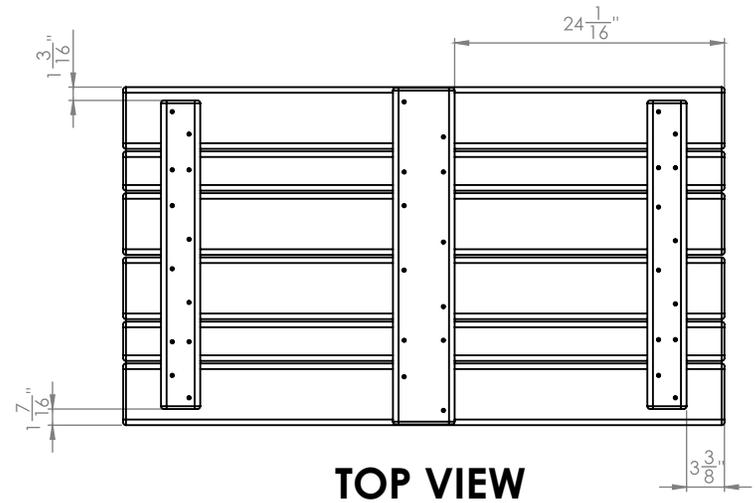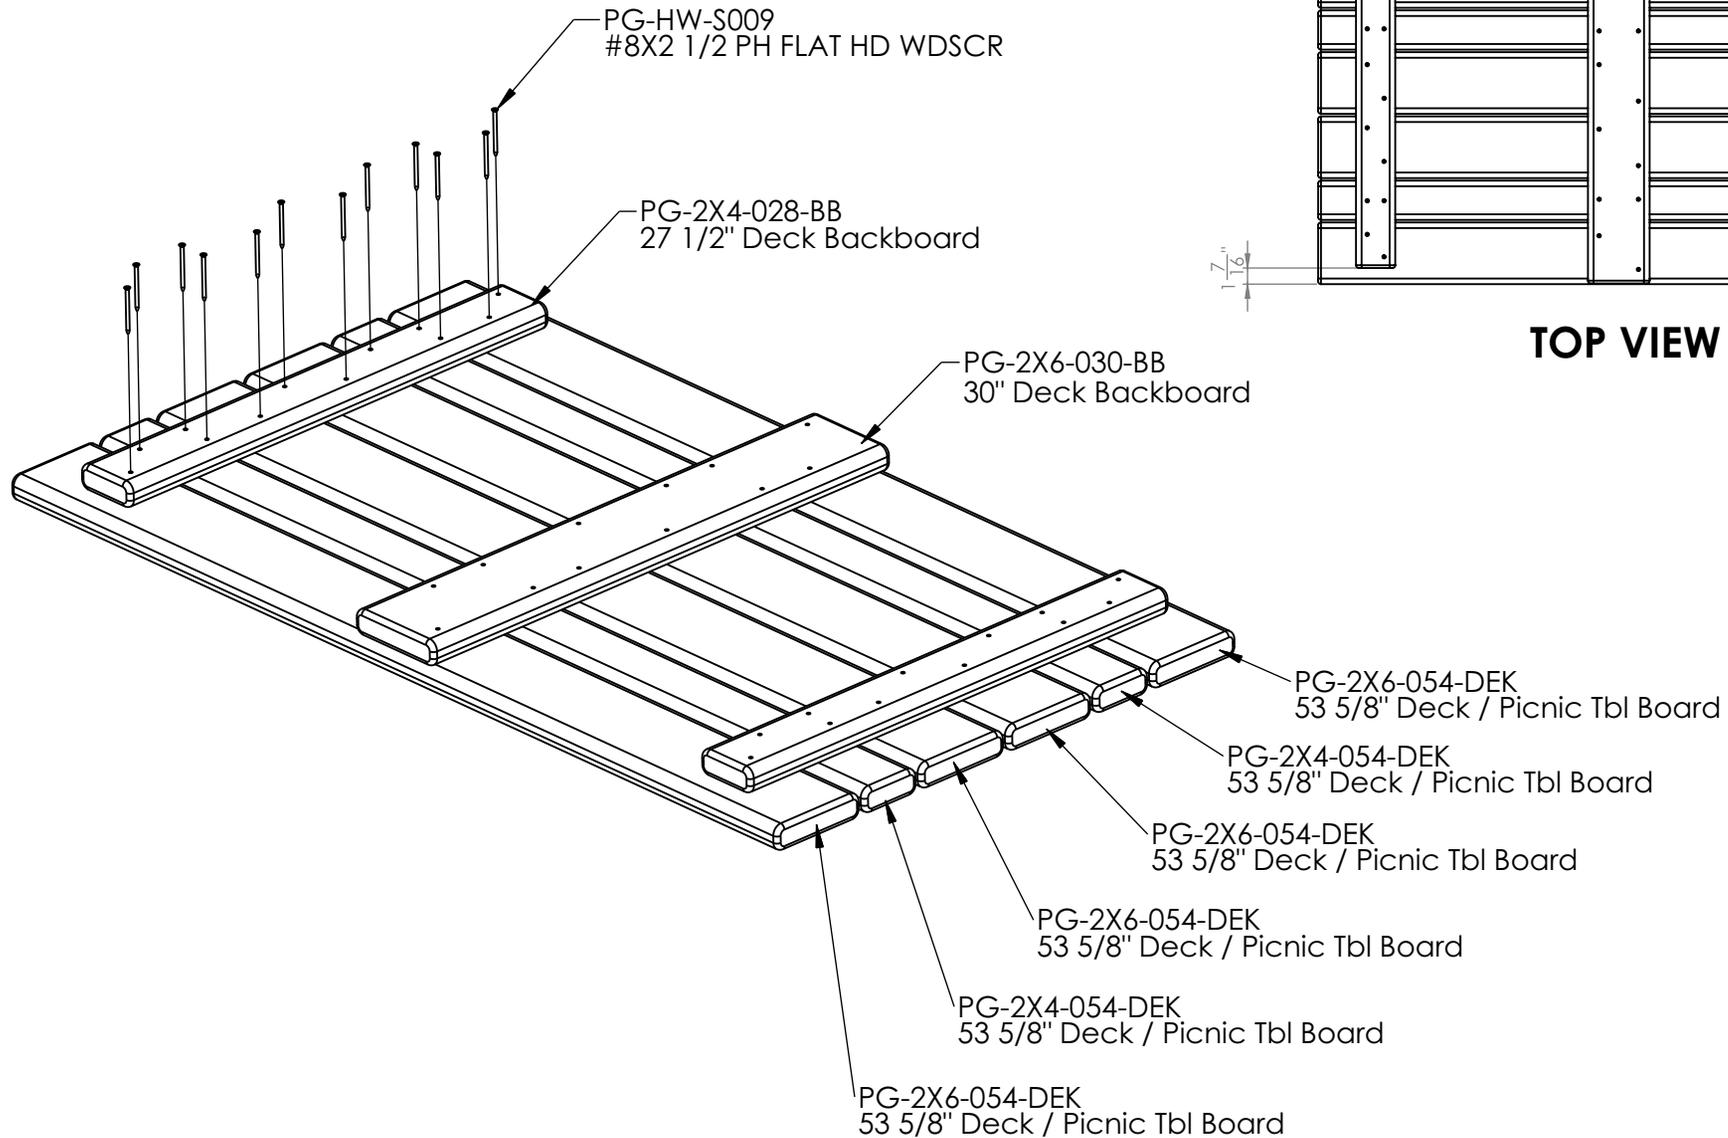


9. Set Decks inside the main assembly and **attach from underneath**.

NOTE: If 30" Deck is not assembled see previous page for assembly instructions.

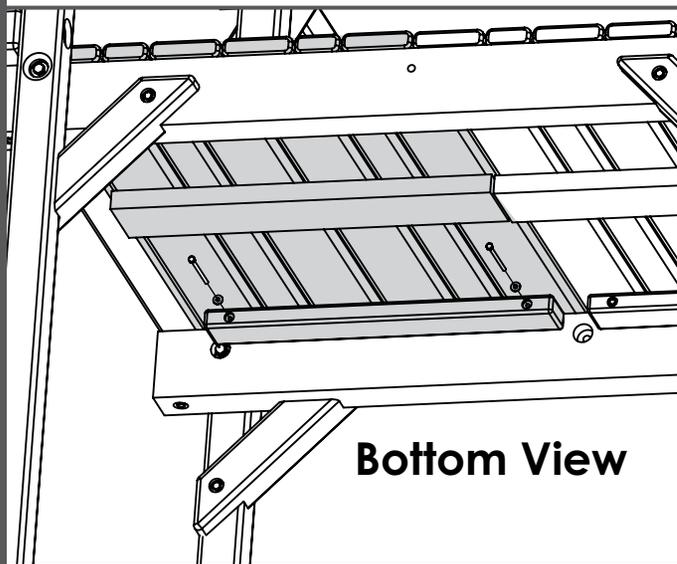

HARDWARE NEEDED

DESCRIPTION	QTY.
1/4" X 4 1/2" LAG SCREW	12
1/4" FLAT WASHER	12

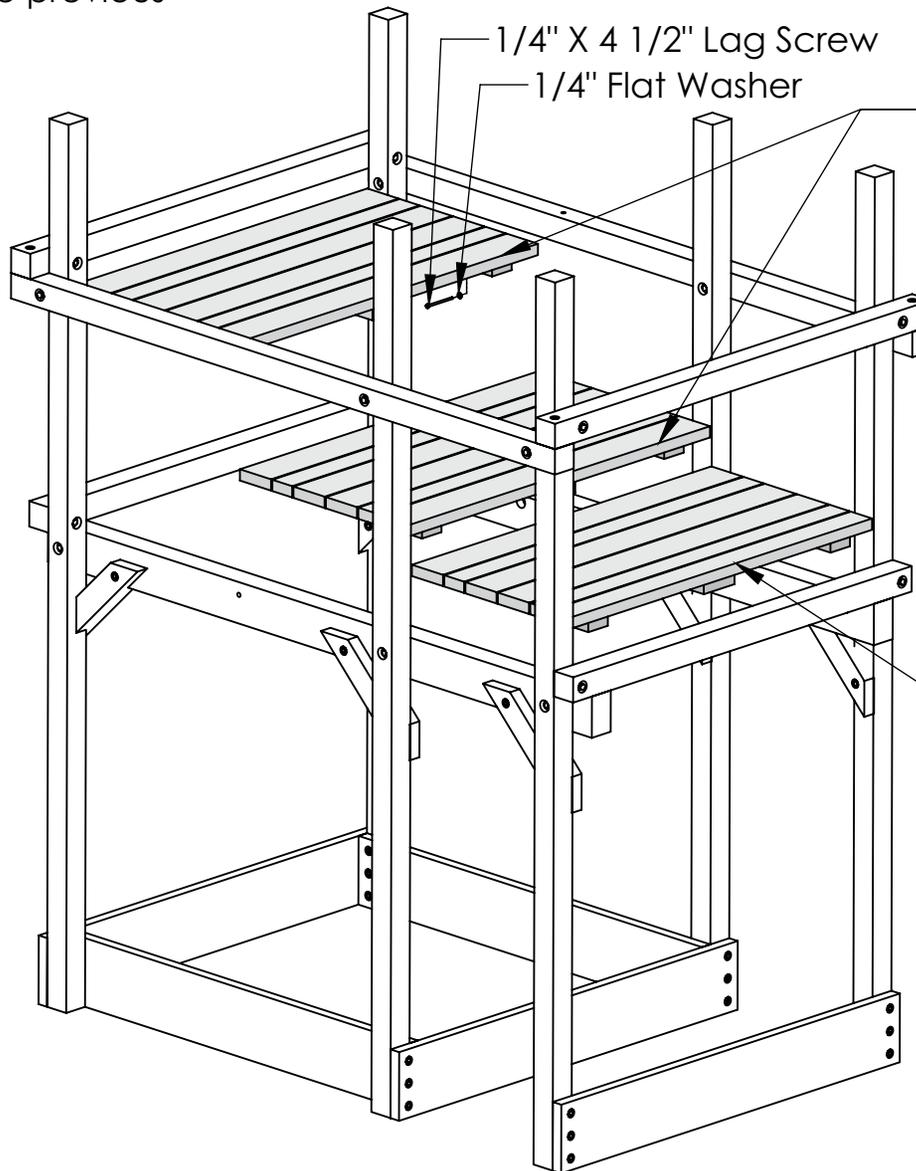

D
RW-DEK-054-030
DECK-53 5/8 X **30 1/8**


NOTE: If 30" Deck is not assembled see previous page for assembly instructions.

I
RW-DEK-054-029
DECK-53 5/8 X **28 3/8**



If installing wood roof. Stop here and go to wood roof instructions.


10. Attach two **Vertical Roof Supports G** and two **Vertical Panel Dividers J** as shown. There should be an equal amount of space between the corner posts and the Roof Supports/Panel Dividers.

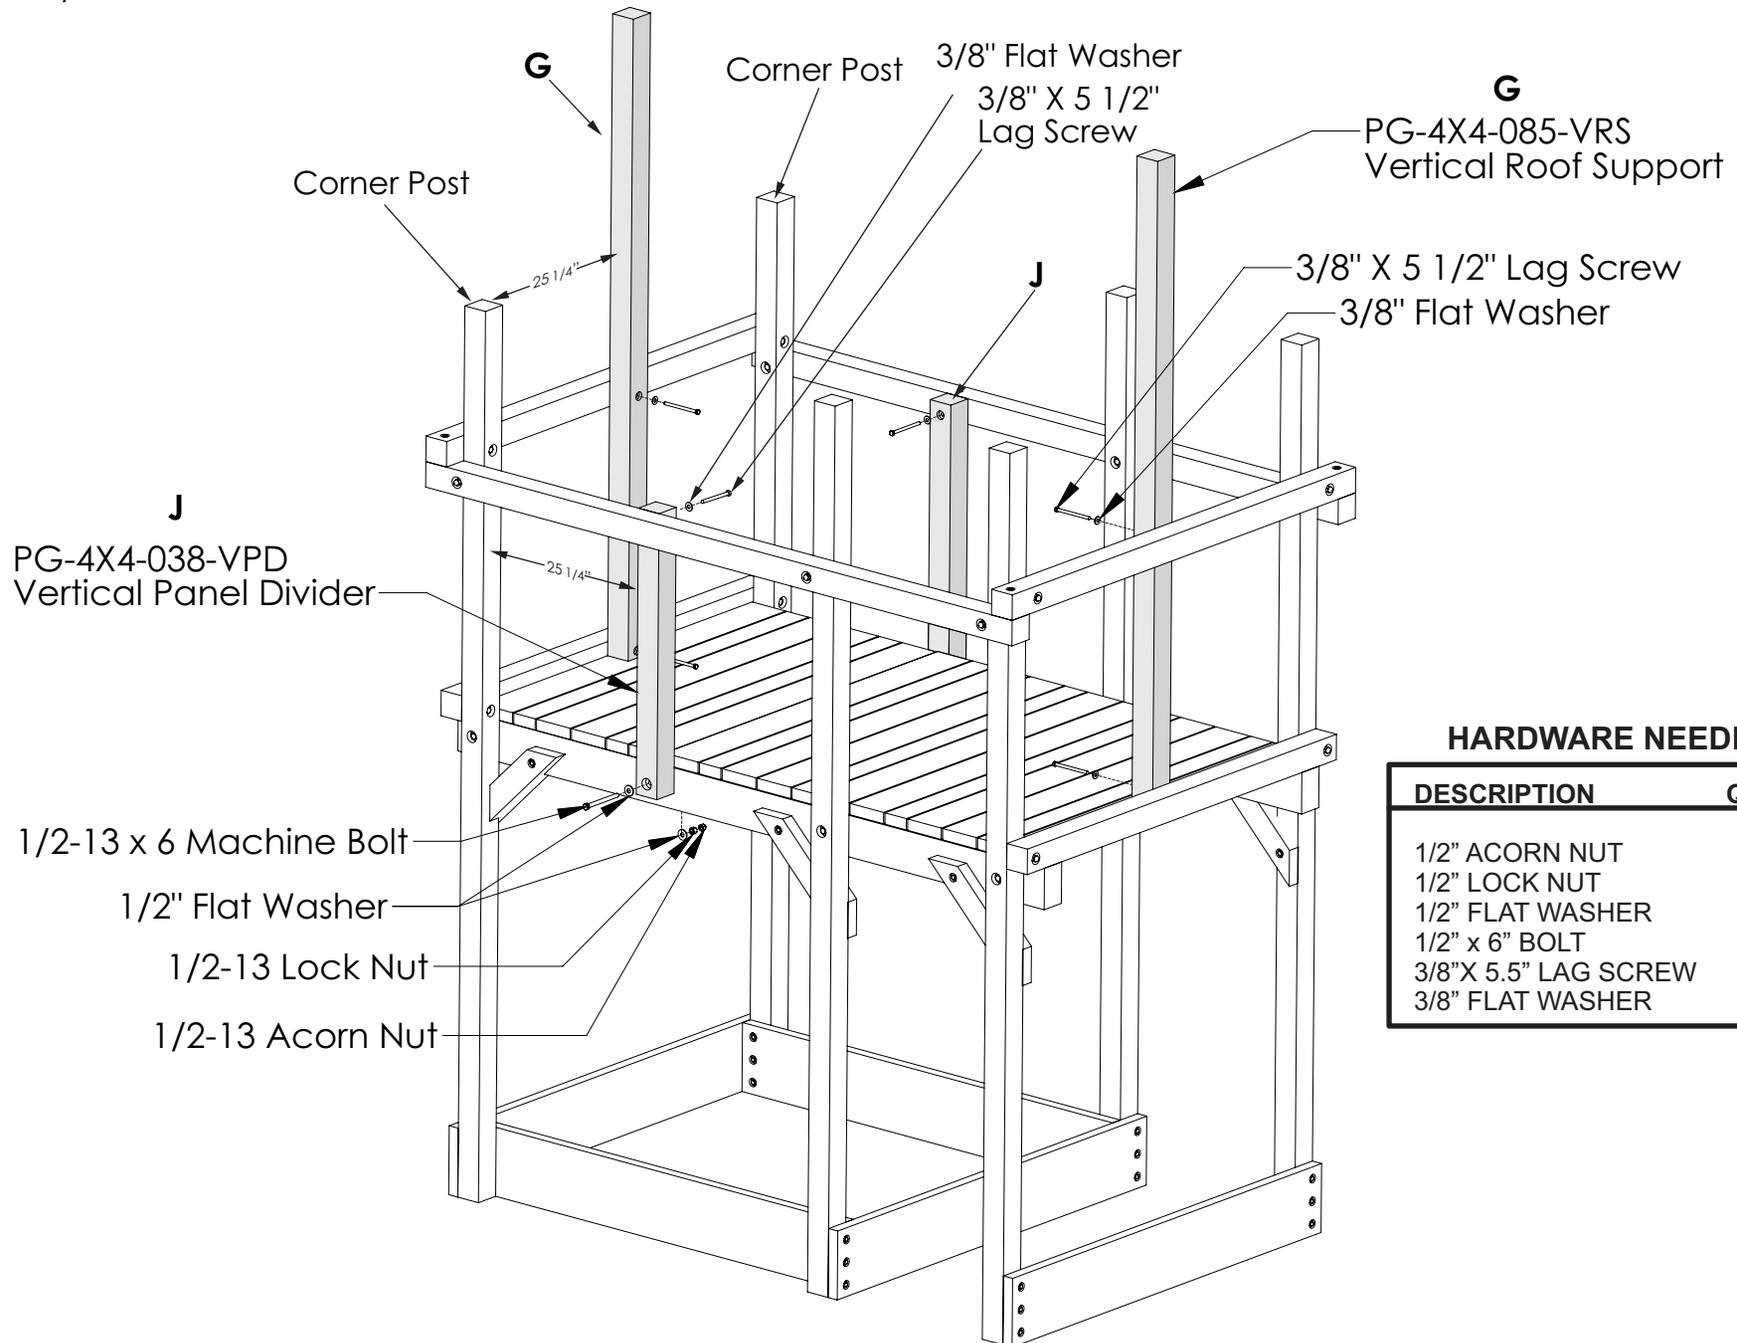

HARDWARE NEEDED

DESCRIPTION	QTY.
1/2" ACORN NUT	2
1/2" LOCK NUT	2
1/2" FLAT WASHER	4
1/2" x 6" BOLT	2
3/8" X 5.5" LAG SCREW	6
3/8" FLAT WASHER	6

11. Attach three **Horizontal Roof Supports H** as shown.

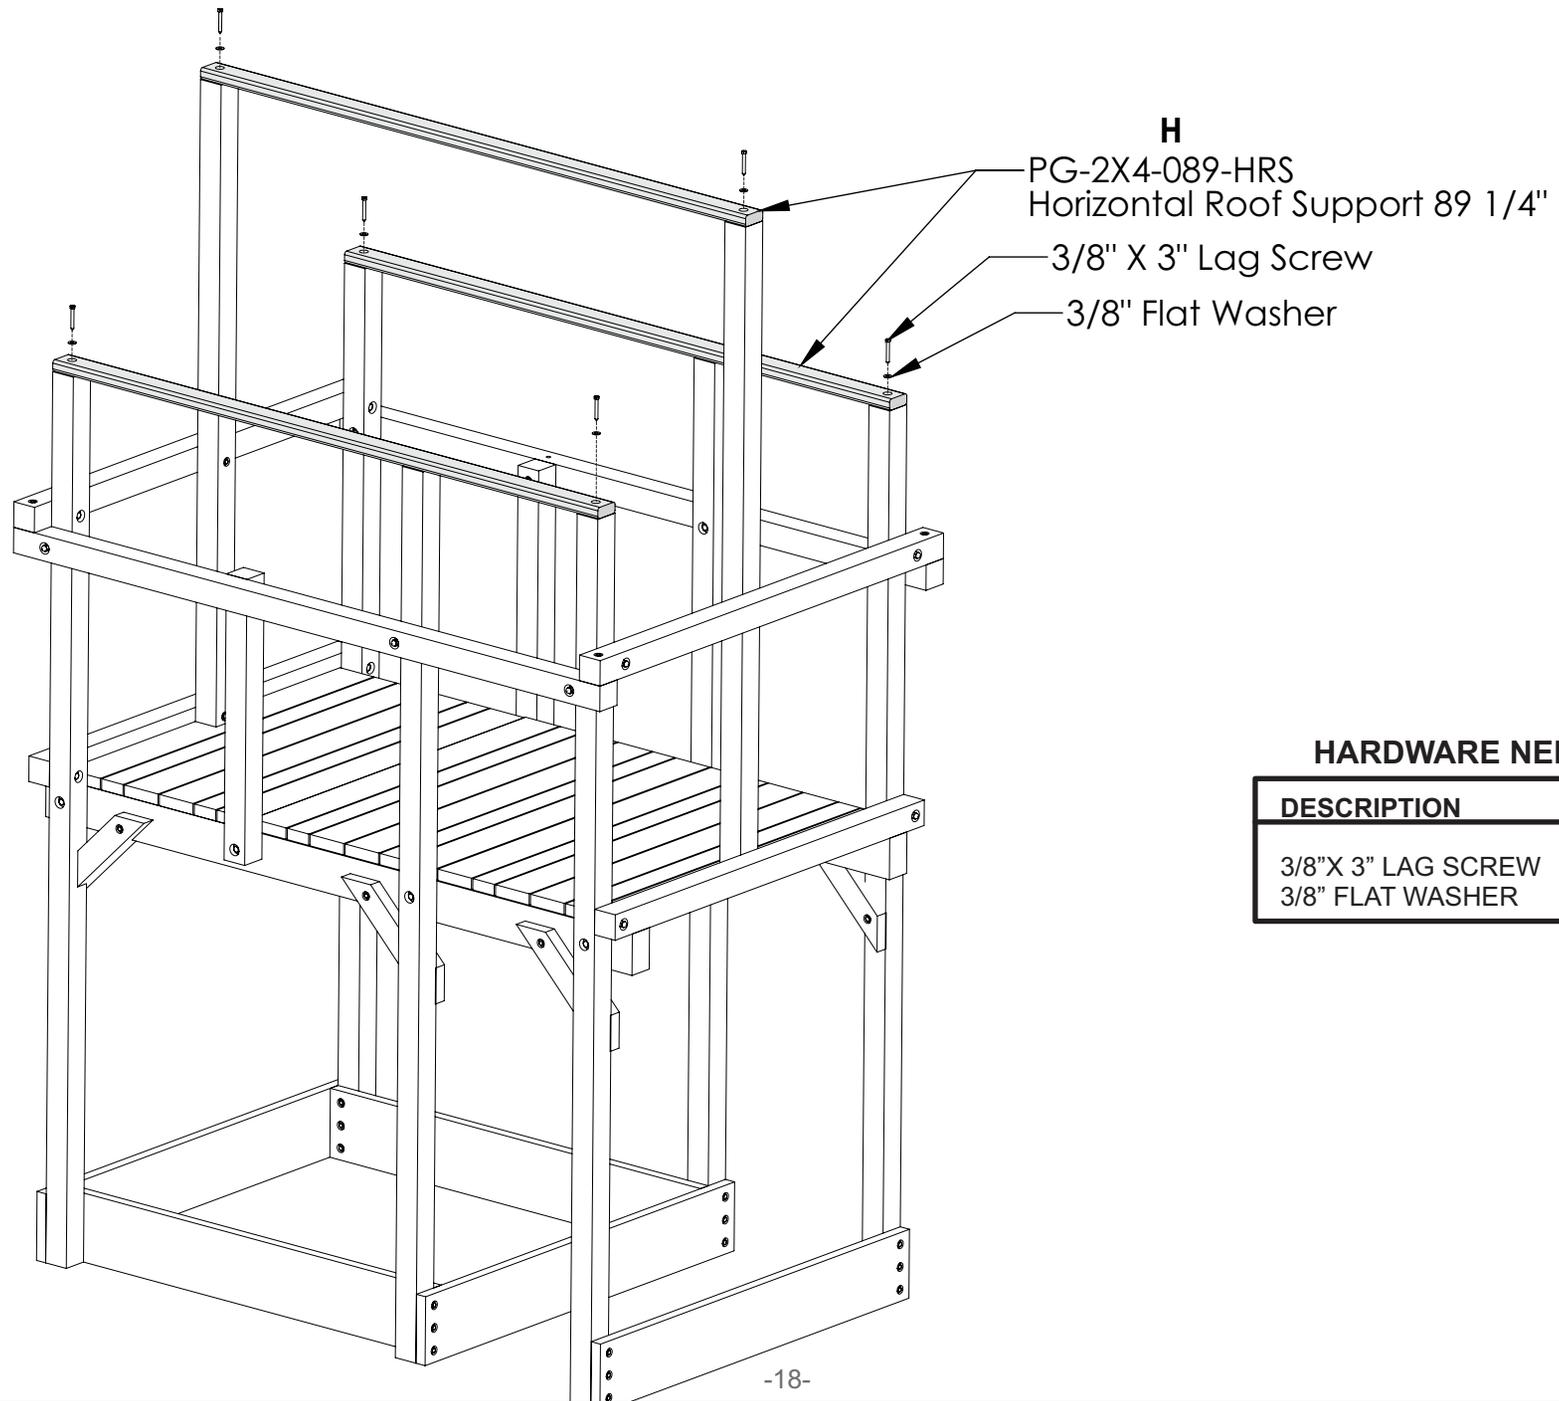


HARDWARE NEEDED

DESCRIPTION	QTY.
3/8" X 3" LAG SCREW	6
3/8" FLAT WASHER	6

12. Attach **Vinyl Roof S** as shown.

- a. Wrap one end of the Vinyl Roof around to the inside of the End Tarp Board and center it on the Support.
- b. Tap the snaps **gently** with a hammer to leave an indentation in the End Tarp Board (as shown in detail C).
- c. Install a Roof Snap Screw in the center of each of the indentations.
- d. Snap this end of the Vinyl Roof to the inside of the End Tarp Board.
- e. Stretch the opposite end of the Vinyl Roof over the **Center Tarp Board** to the opposite End Tarp Board and repeat steps **a** through **e**.

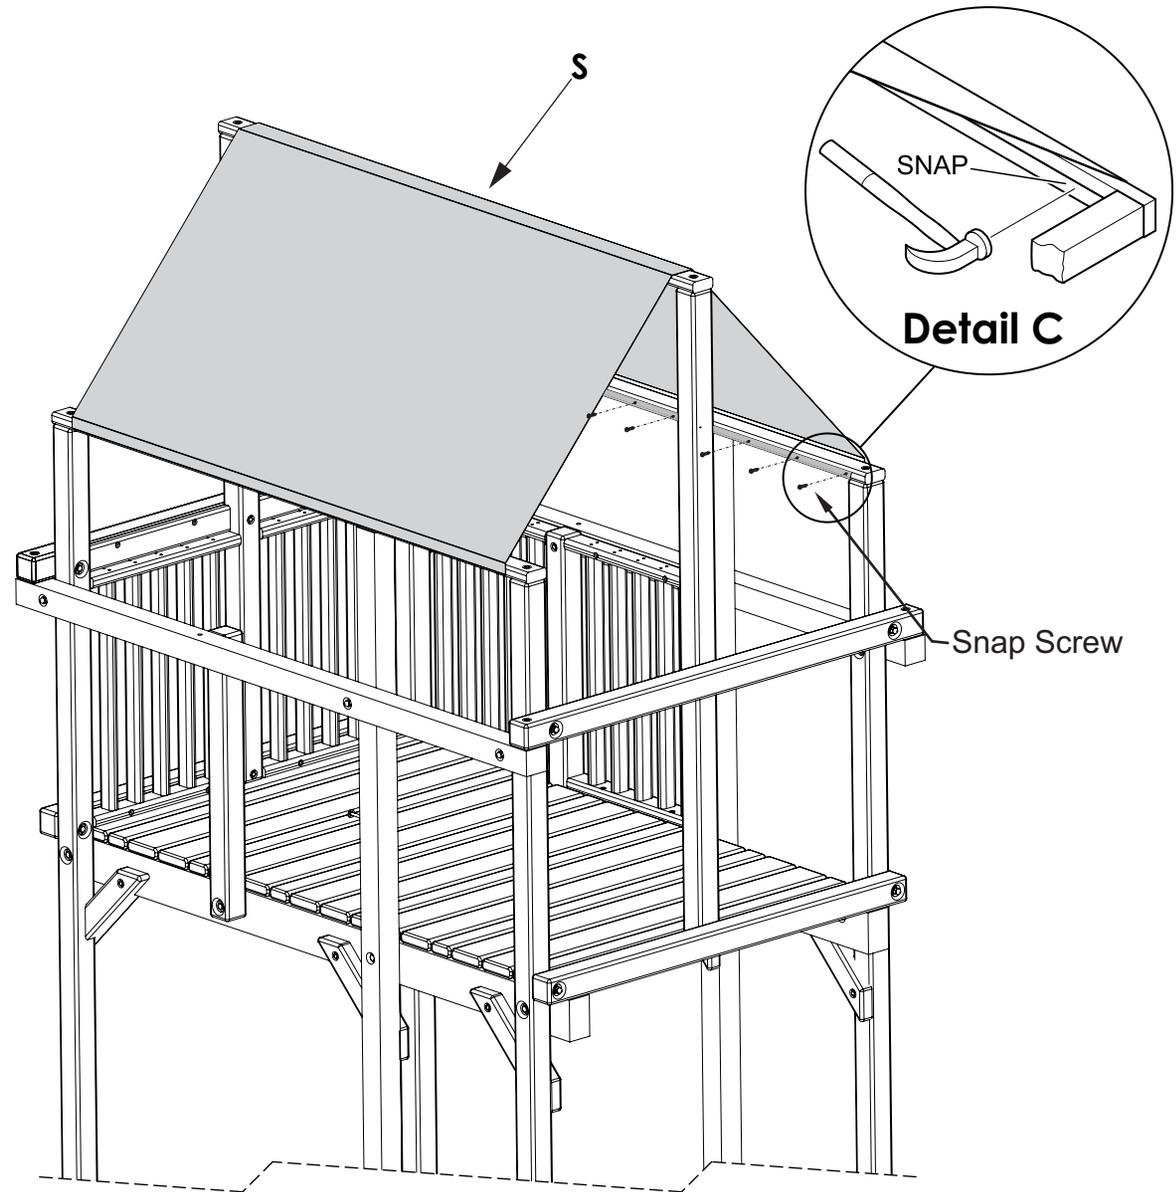

IF YOU HAVE A 5' DECK FOLLOW THESE DIRECTIONS FOR OPTIONAL ACCESSORY LADDER OR ROCK WALL ASSEMBLE 90" STEP LADDER & ROCK WALL (FOR 5' DECK ONLY)

1A

PARTS NEEDED:

- (1) T 89 7/8" Step Ladder Rail Left
- (1) U 89 7/8" Step Ladder Rail Right
- (6) V 21" Ladder Step

HARDWARE NEEDED:

- (24) FW1 (1/4" Flat Washer)
- (24) HLS2 (1/4 X 4.5" Hex Lag Screw)

1B

PARTS NEEDED:

- (2) CW-R 89 7/8" Climbing Wall Rail
- (12) Climbing Wall Boards
- (16) CW-O Rock


HARDWARE NEEDED

- (48) FHS2 (#10x2-1/2 Ph Flat Hd Wdscr)
- (16) FW1 (1/4" Flat Washer)
- (16) RHS1 (#14 X 1.5" Round Phil Head Screw)
- (16) TN1 (3/8"-16 X 1/2" T-nut)
- (16) SH1 (3/8"-16 X 1.5" Socket Head Screw)
- (16) FW3 (3/8" Narrow Flat Washer)




IF YOU HAVE A 6' DECK GO TO THE NEXT PAGE.


1. Assemble 90" Ladder as shown.

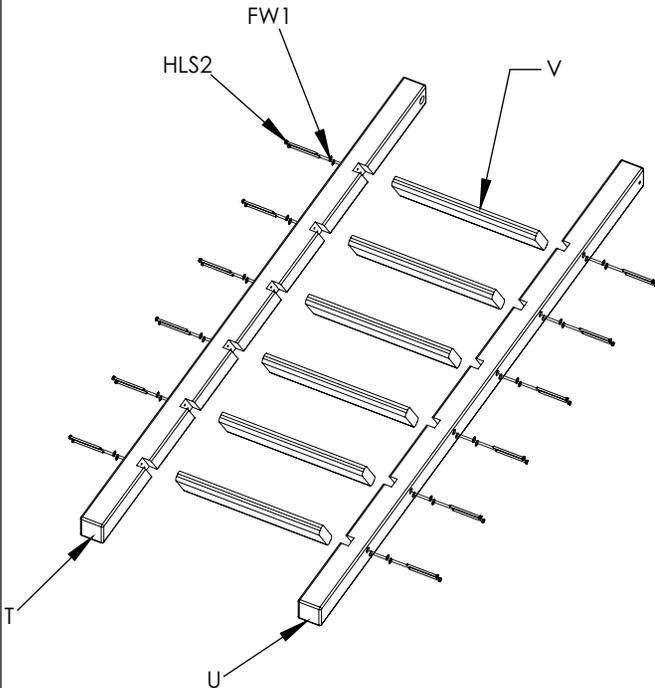

1. Assemble 5' Rock Wall as shown below. Note Hole locations.

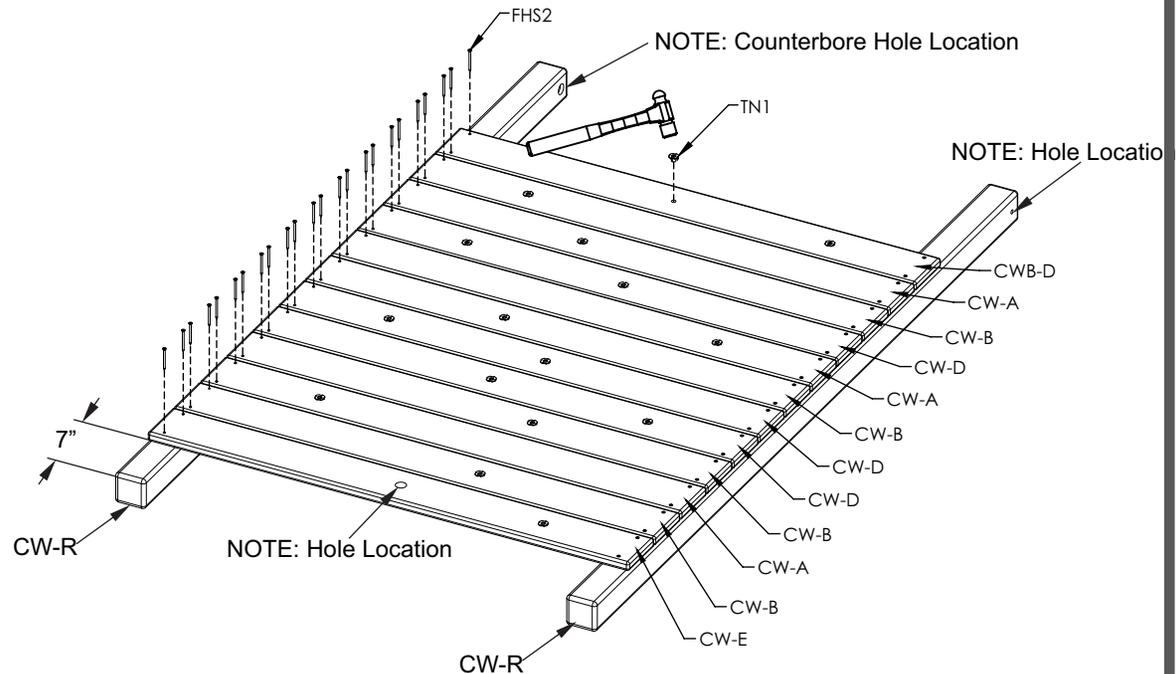

2. Flip over and install the Rocks as shown in Detail D.

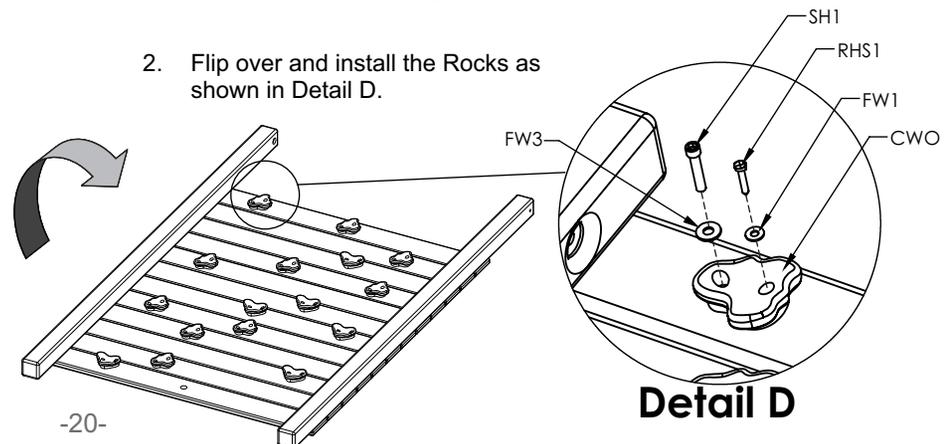

IF YOU HAVE A 6' DECK FOLLOW THESE DIRECTIONS FOR OPTIONAL ACCESSORY LADDER OR ROCK WALL ASSEMBLY 102" STEP LADDER & ROCK WALL (FOR 6' DECK ONLY)

1A

PARTS NEEDED:

- (1) T 102" Step Ladder Rail Left
- (1) U 102" Step Ladder Rail Right
- (7) V 21" Ladder Step

HARDWARE NEEDED:

- (28) FW1 (1/4" Flat Washer)
- (28) HLS2 (1/4 X 4.5" Hex Lag Screw)

1B

PARTS NEEDED:

- (2) CW-R 102" Climbing Wall Rail
- (14) Climbing Wall Boards
- (16) CW-O Rock


HARDWARE NEEDED

- (56) FHS2 (#10x2-1/2 Ph Flat Hd Wdscr)
- (16) FW1 (1/4" Flat Washer)
- (16) RHS1 (#14 X 1.5" Round Phil Head Screw)
- (16) TN1 (3/8"-16 X 1/2" T-nut)
- (16) SH1 (3/8"-16 X 1.5" Socket Head Screw)
- (16) FW3 (3/8" Narrow Flat Washer)




IF YOU HAVE A 5' DECK GO TO THE PREVIOUS PAGE.


1. Assemble 102" Ladder as shown.

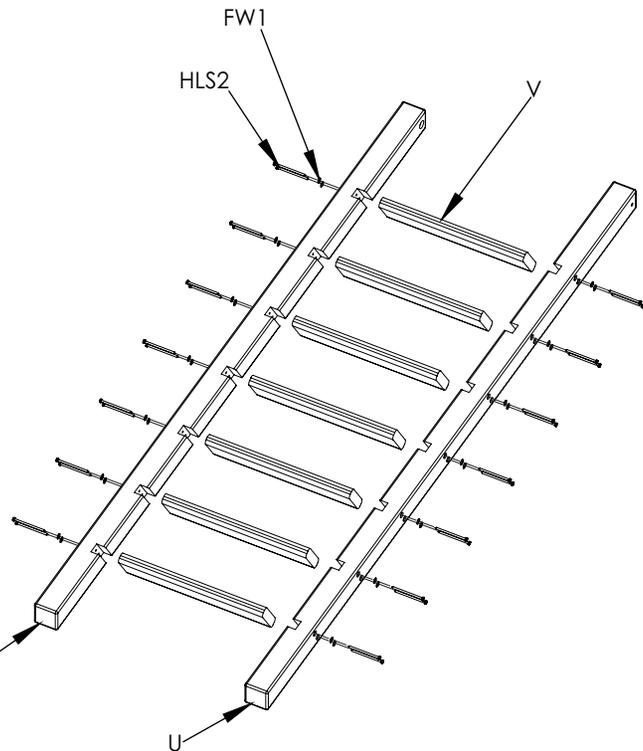

1. Assemble 6' Rock Wall as shown below. Note Hole locations.

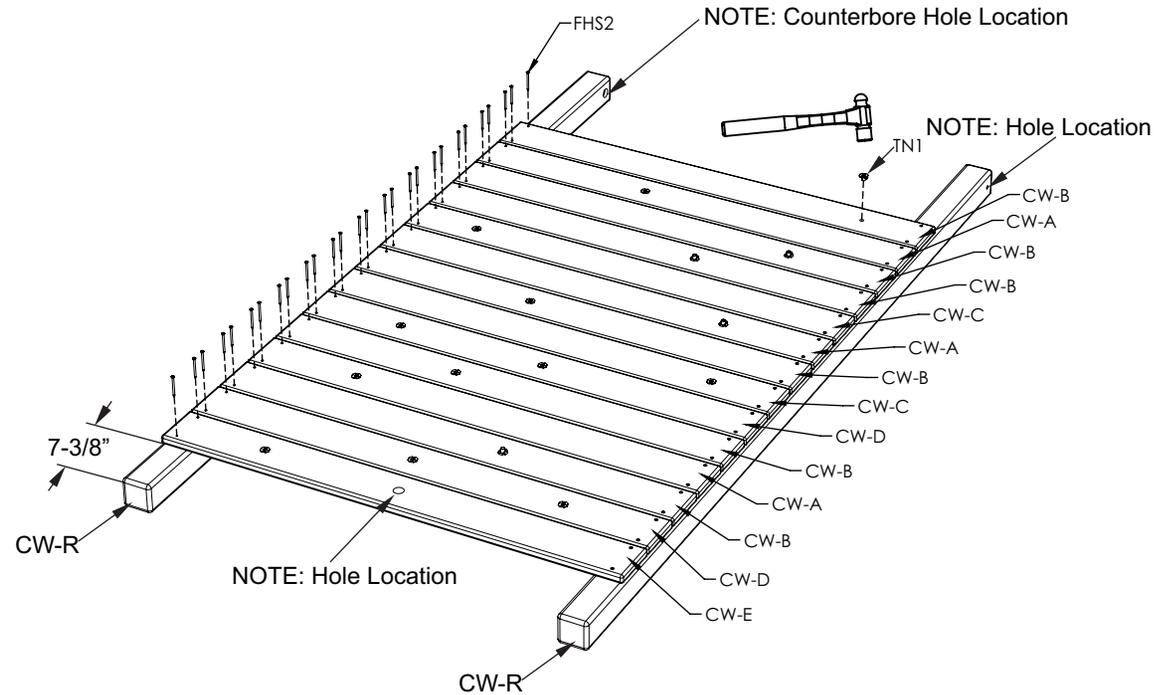

2. Flip over and install the Rocks as shown in Detail E.

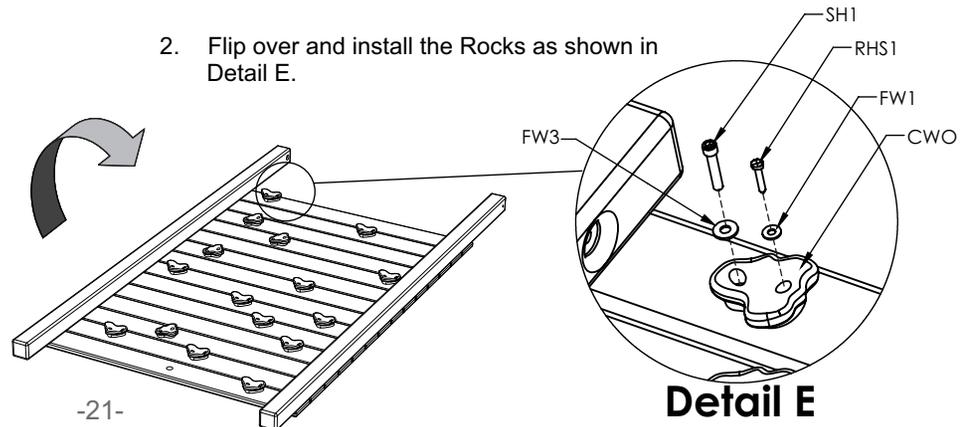



NOTE: If installing the Rock wall on the sides where the **Deck Supports** are, you will need to install **two** filler boards before installing the Rock Wall this will prevent any gaps between the Rock Wall and Play set.

NOTE: If installing the Rock wall on the sides that have the **Deck Frame** you will **not** need filler boards.

13. Install two Filler Boards as shown in **Detail F**.

HARDWARE NEEDED


DESCRIPTION	QTY.
3/8" X 5 1/2" LAG SCREW	4
3/8" FLAT WASHER	4

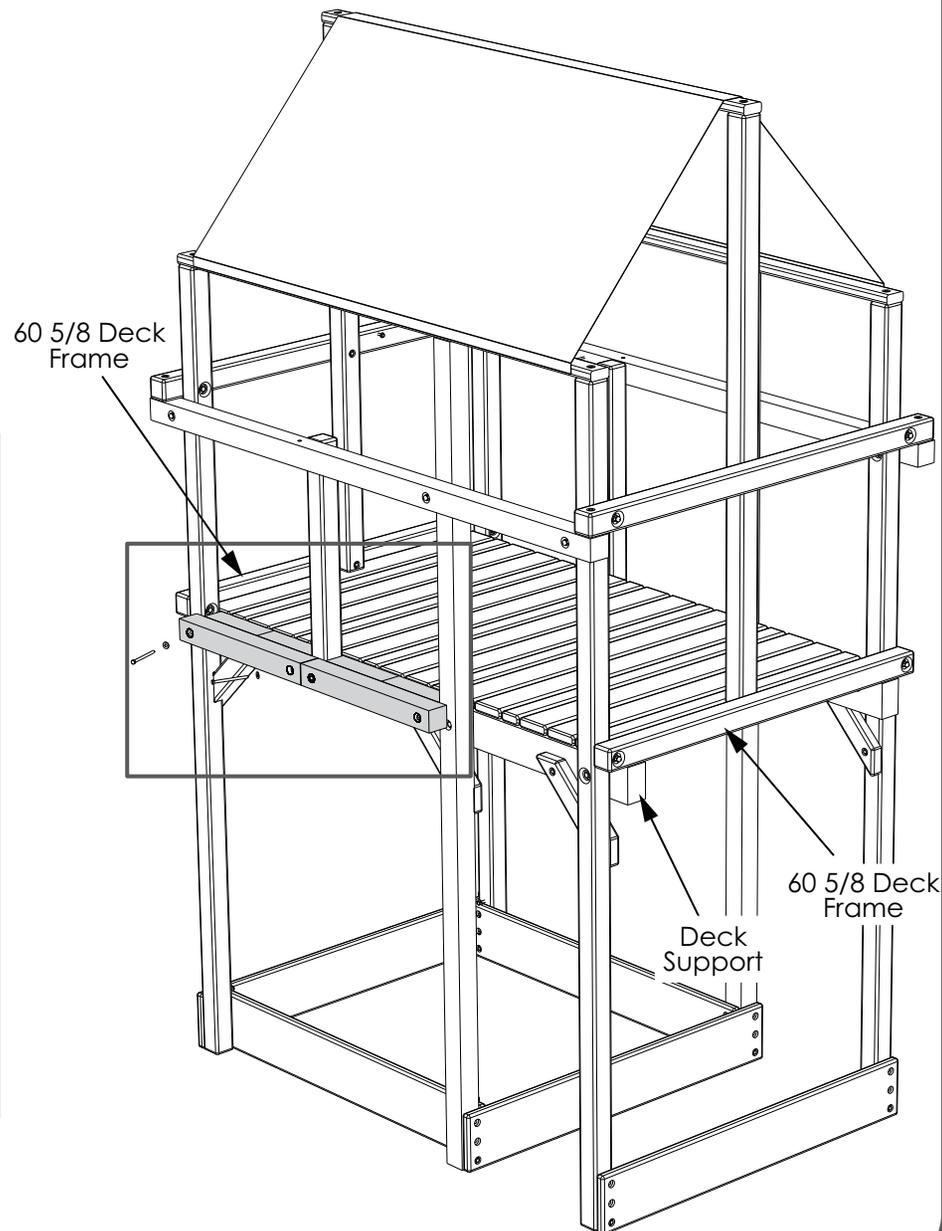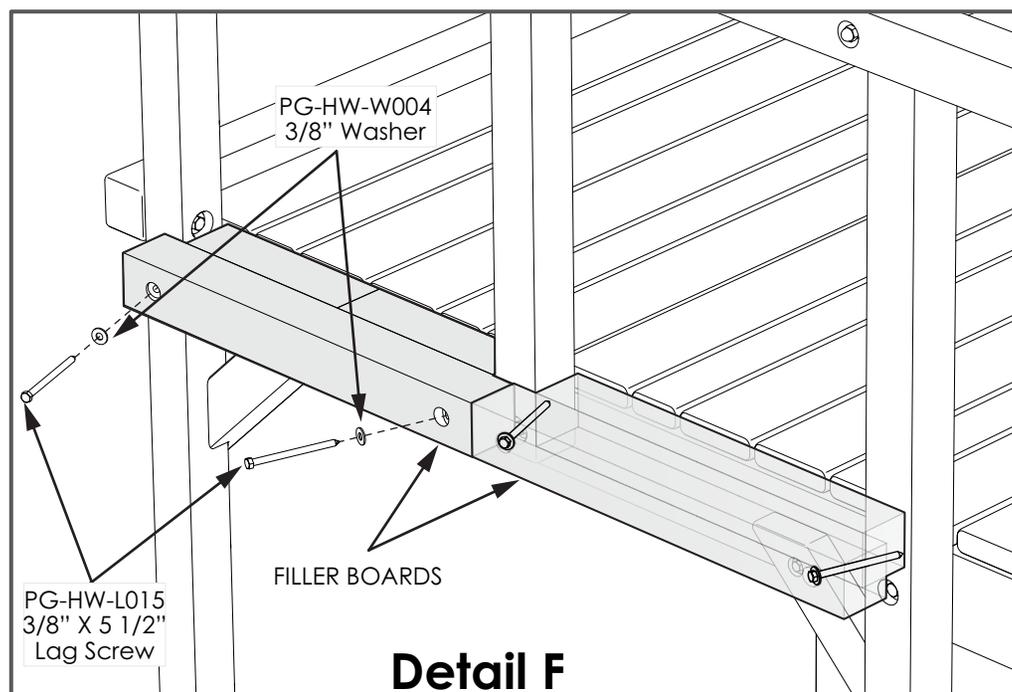


14. Once the Filler Boards are installed (as shown in **page 22**) attach the Rock Wall as shown in **Detail G**.

HARDWARE NEEDED

DESCRIPTION	QTY.
3/8" X 5 1/2" LAG SCREW	2
3/8" FLAT WASHER	2

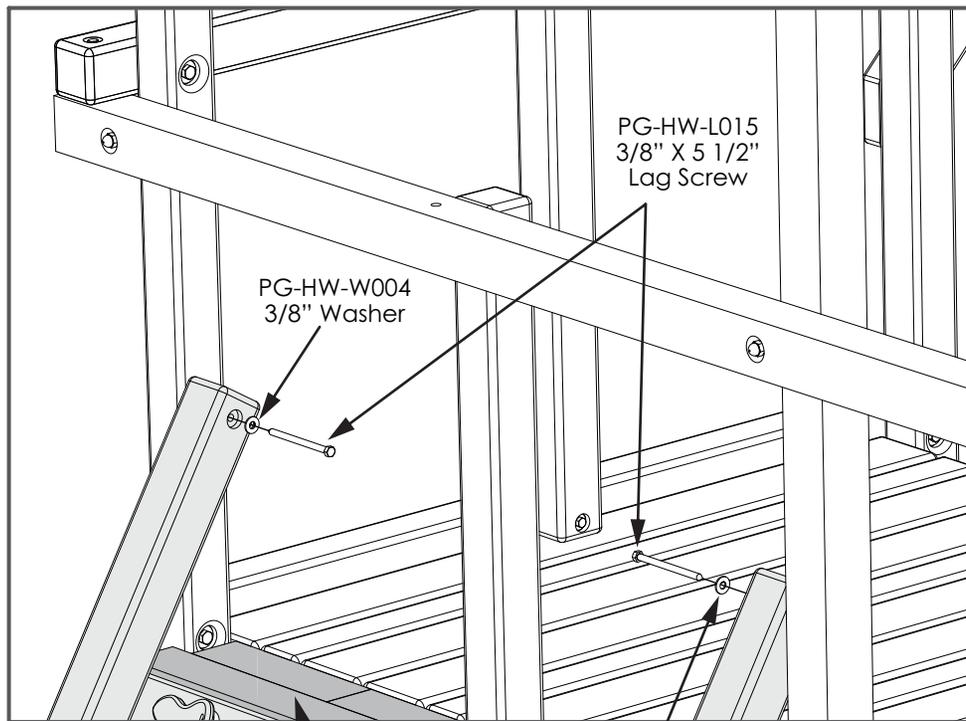

Detail G

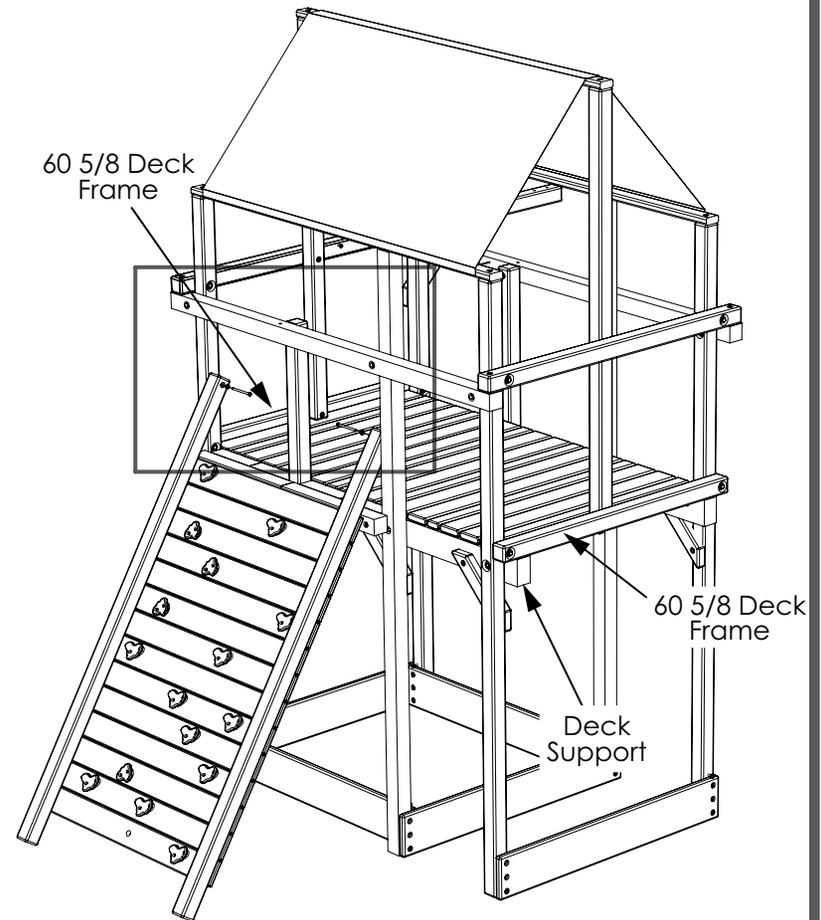


HARDWARE NEEDED

DESCRIPTION	QTY.
3/8" X 5 1/2" LAG SCREW	4
3/8" FLAT WASHER	4

NOTE: If installing the Ladder on the sides where the **Deck Supports** are, you will need to install **one** filler board before installing the Ladder this will prevent any gaps between the Ladder and the Play set.


NOTE: If installing the Ladder on the sides that have the **Deck Frame** you will **not** need a filler board.

15. First install a filler board (as shown in **page 22**) and then the ladder as shown in **Detail H**.

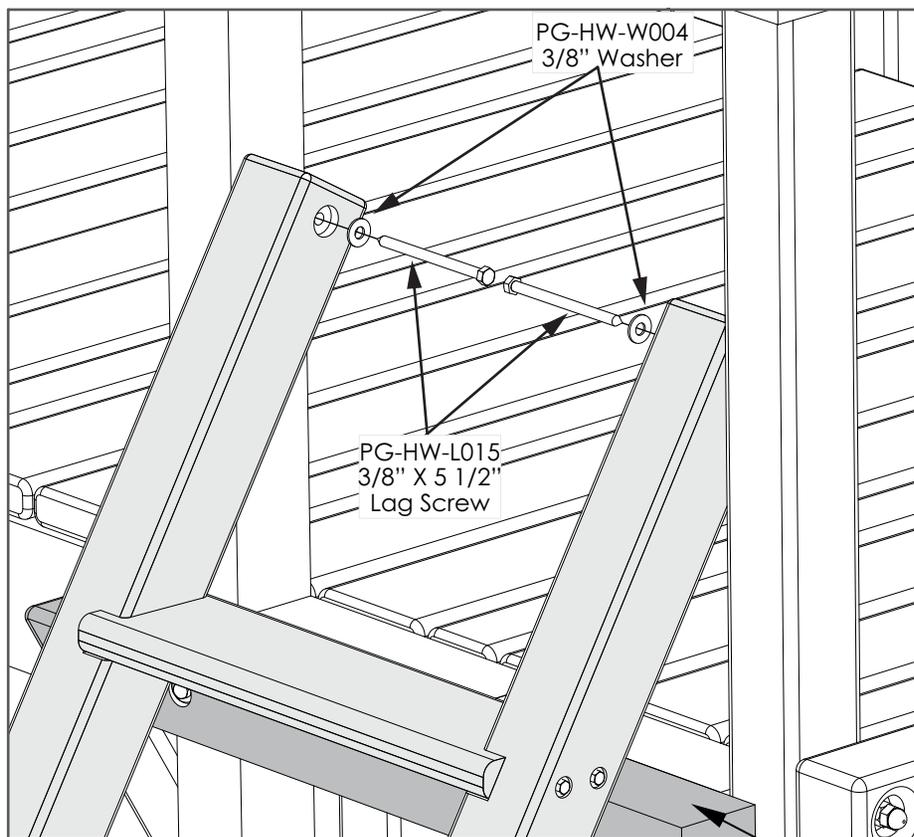


Detail H

Filler Board

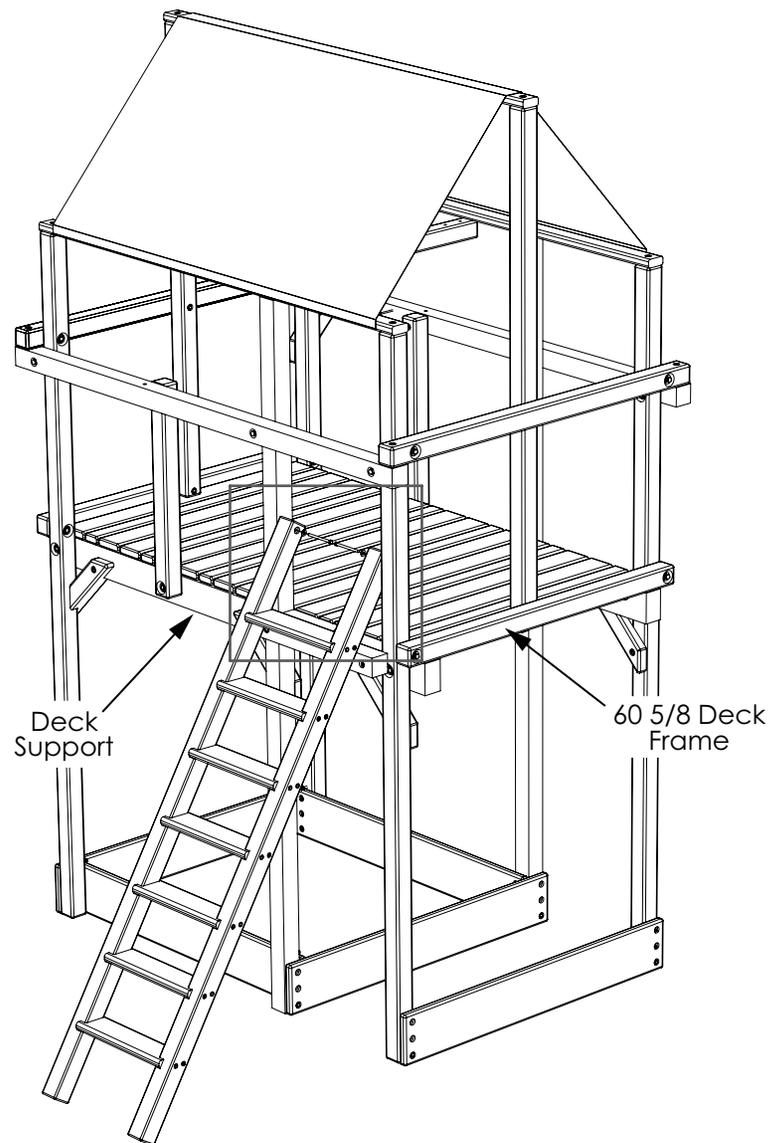



16. Assemble Side Panels as shown. Quantity of panels depends on Accessory options.

**NOTE: As required repeat
for all panels.**

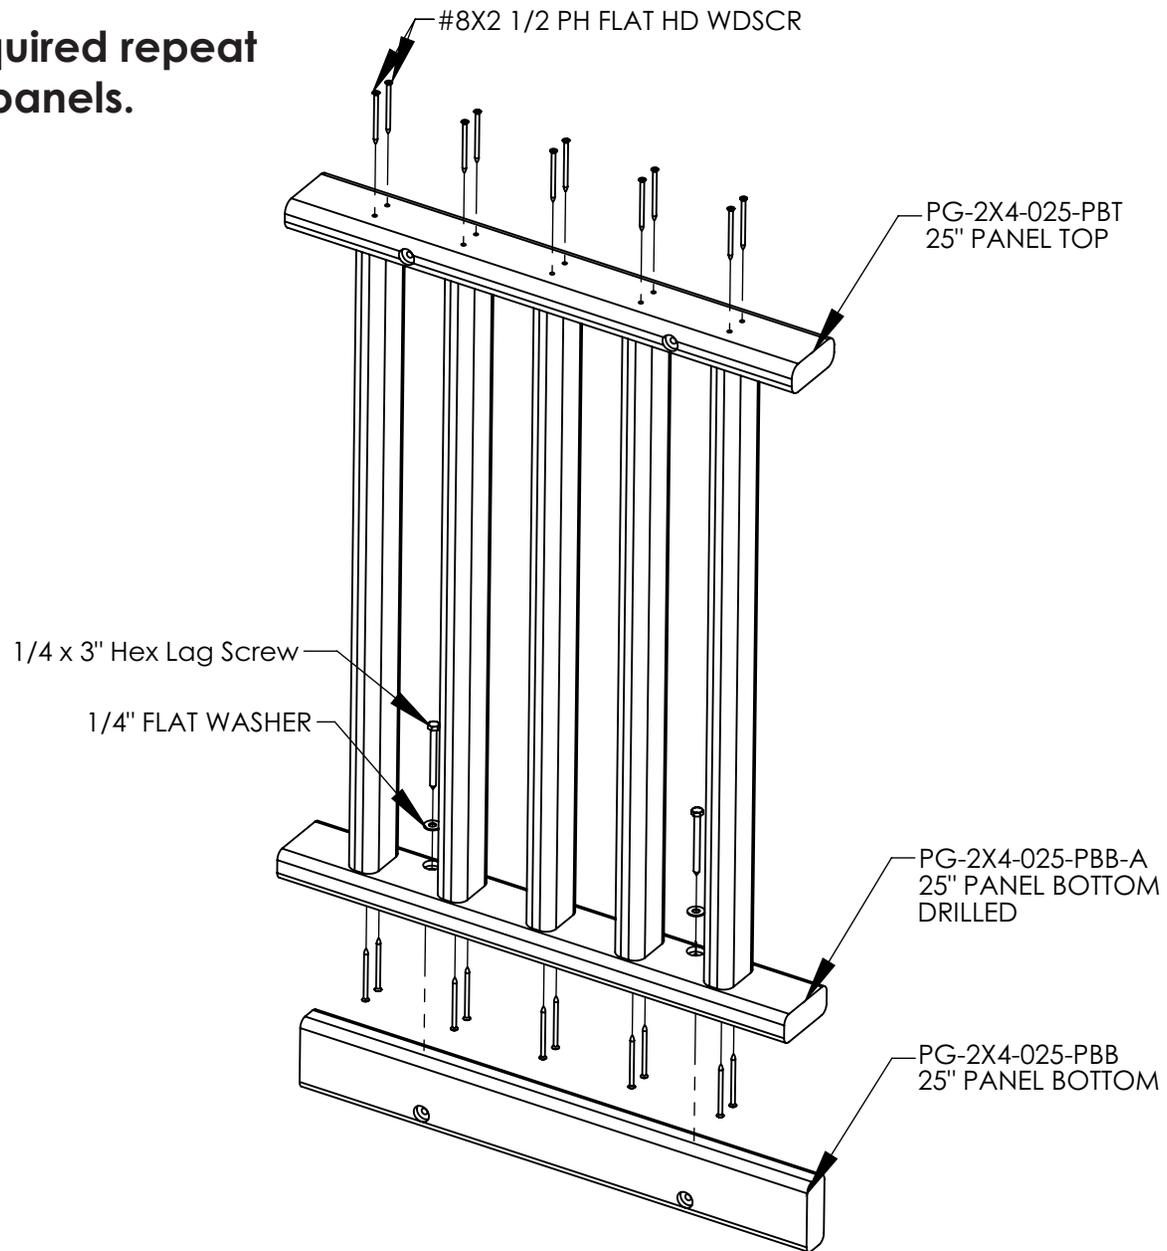

17. Attach Side panels as shown, with 1/4" washers and 1/4" Lag screws.

NOTE: On the sides that have the **Deck Frame** the Side panel will be installed **upside down**, with the **"Side panel top" facing down**.

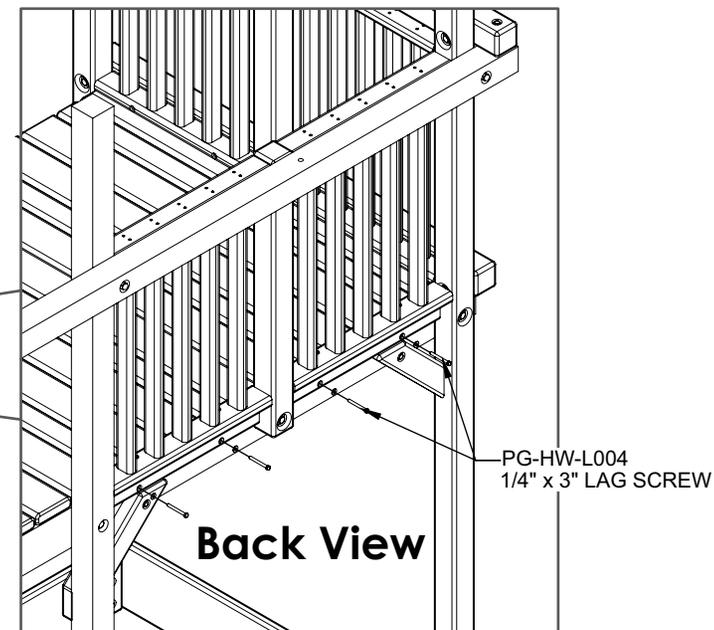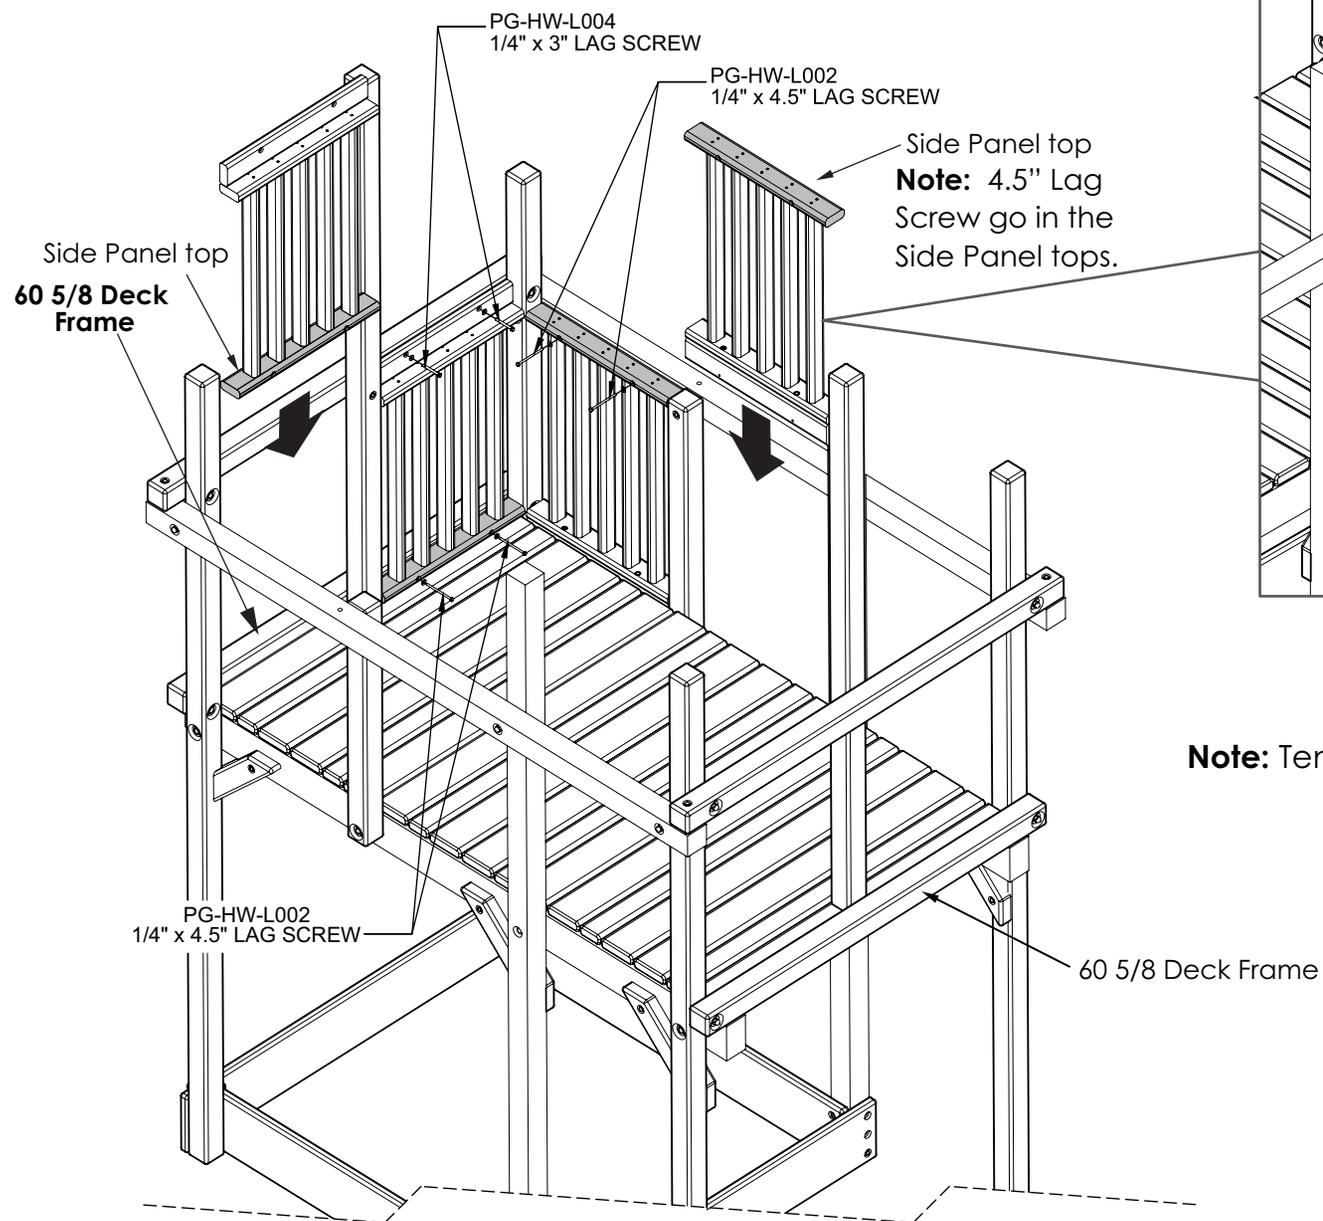

Note: Tent and Accessories not shown for clarity.

HARDWARE NEEDED

DESCRIPTION	QTY.
1/4" X 4 1/2" LAG SCREW	8
1/4" x 3" LAG SCREW	8
1/4" FLAT WASHER	16

Consumer Information Sheet for Playground Surfacing Materials¹

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment-related injuries resulting from falls to the ground surface are treated annually in the U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head.

The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self evident that a fall onto a shock absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable it may quickly turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

The following table lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto four different loose-fill surfacing materials if they are installed and

maintained at depths of 6", 9", and 12". However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used.

It is recommended that a shock absorbing material should extend a minimum of 6' in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot point supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area, and its cost.

FALL HEIGHT IN FEET FROM WHICH A LIFE THREATENING HEAD INJURY WOULD NOT BE EXPECTED

TYPE OF MATERIAL	6" DEPTH	9" DEPTH	12" DEPTH
Double Shredded Bark Mulch	6'	10'	11'
Wood Chips	6'	7'	12'
Fine Sand	5'	5'	9'
Fine Gravel	6'	7'	10'

¹This information has been extracted from the CPSC publications "Playground Surfacing—Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C. 20207. Or call the toll-free hotline: 1-800-638-2772.

ChildLife® Playsets

ChildLife Limited Lifetime
& TwoYear Warranties

Subject to proper installation and normal residential use, Escalade Sports warrants, subject to the limitations stated below, to the original retail purchaser, all chain, seats, swing hangers, hardware, metal braces, ropes and accessories to be free from defects in material and workmanship for a period of two years from date of purchase. Cracks in non-functional plastic components are not considered defects in materials and workmanship if they do not affect the functionality of the playset. Merchandise covered under this limited two-year warranty will, at our option, be repaired or replaced, excluding **any freight or labor fees that may be required.**

In addition, for the lifetime of the playset, Escalade Sports warrants, to the original retail purchaser, all wooden components against structural failure due to corrosion, wood rot, or insect infestation. **Seasonal checks and surface cracks, knotholes and knots, natural characteristics of all wooden play equipment, not resulting in structural failure, are not covered under this warranty.**

Timber is a natural material which can absorb and release moisture. Although this product is designed to minimize this effect, in certain circumstances some movement or distortion is unavoidable. During dry hot weather timber may shrink and check - this is a normal process of weathering. After the first year of service it is advisable to apply a non-toxic stain / sealant safe for children's use.

Components covered under this limited lifetime warranty will be replaced free of charge excluding freight and labor fees.

Non-residential use of the playset is prohibited and voids the warranty as the playsets are designed for residential use only.

Escalade Sports reserves the right to examine photographs and/or physical evidence of merchandise claimed to be defective, and to recover said merchandise, prior to disposition of warranty claims. Merchandise returned to our factory for examination or recovery must be shipped freight prepaid, unless a Return Authorization Number is issued.

No warranty is offered on equipment subjected to abuse, negligence, improper installation, vandalism, acts of God, unauthorized alteration or attachment to equipment other than our own, or improper use, service or repair by customer or any third party. Escalade Sports assumes no responsibility for incidental or consequential damages which may arise from the purchase or use of our equipment. Please supervise your children's play activity and maintain your play equipment periodically.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR USE. CHIDLIFE PLAYSETS DOES NOT ASSUME, OR AUTHORIZE ANY PERSON TO ASSUME FOR US, ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF OUR PRODUCTS.

For warranty service, contact:

Childlife Playsets
Escalade Sports
P.O. Box 889
Evansville, IN 47706
1-800-GO-SWING

Or E-Mail us at: playgroundcs@escaladesports.com

Revised 2014