

1-Port VGA Rackmount LCD Console | 17 in. | 1080p | 1U



Actual product may vary from photos

User Manual

SKU#: RKCONS17HD

Compliance Statements

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada.

CAN ICES-3 (B)/NMB-3(B)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Safety Statements

Safety Measures

- Wiring terminations should not be made with the product and/or electric lines under power.
- Product installation and/or mounting should be completed by a certified professional as per the local safety and building code guidelines.
- Cables (including power and charging cables) should be placed and routed to avoid creating electric, tripping or safety hazards.

Mesures de sécurité

- Les terminaisons de câblage ne doivent pas être effectuées lorsque le produit et/ou les câbles électriques sont sous tension.
- L'installation et/ou le montage du produit doit être réalisé par un professionnel certifié et dans le respect des normes locales et du code de construction local.
- Les câbles (y compris les câbles d'alimentation et de chargement) doivent être placés et acheminés de façon à éviter tout risque électrique, de chute ou de sécurité

安全対策

- 電源が入っている状態の製品または電線の終端処理を行わないでください。
- 製品の設置やマウントは、使用地域の安全ガイドラインおよび建築基準に従い、有資格の専門業者が行うようにしてください。
- ケーブル(電源ケーブルと充電ケーブルを含む)は、適切な配置と引き回しを行い、電気障害やつまづきの危険性など、安全上のリスクを回避するようにしてください。

Misure di sicurezza

- I terminali dei fili elettrici non devono essere realizzate con il prodotto e/o le linee elettriche sotto tensione.
- L'installazione e/o il montaggio dei prodotti devono essere eseguiti da un tecnico professionale certificato che conosca le linee guida locali sulle norme edilizie e sulla sicurezza.
- I cavi (inclusi i cavi di alimentazione e di ricarica) devono essere posizionati e stesi in modo da evitare pericoli di inciampo, rischi di scosse elettriche o pericoli per la sicurezza.

Säkerhetsåtgärder

- Montering av kabelavslutningar får inte göras när produkten och/eller elledningarna är strömförda.
- Installation och/eller montering får endast göras av behöriga yrkespersoner och enligt gällande lokala förordningar för säkerhet och byggnormer.
- Kablar (inklusive elkablar och laddningskablar) ska dras och placeras på så sätt att risk för snubblingsolyckor och andra olyckor kan undvikas.

Warning Statements

- Make sure to assemble this product according to the instructions. Failure to do so might result in personal injury or property damage.
- Never use this product if parts are missing or damaged.

Table of Contents

| | |
|--|----|
| Compliance Statements | 1 |
| Safety Statements | 3 |
| Warning Statements | 4 |
| Product Diagram (RKCONS17HD) | 7 |
| Front..... | 7 |
| Rear | 8 |
| Product Information | 9 |
| Packaging Contents | 9 |
| Hardware Kit Contents | 9 |
| Requirements | 9 |
| Installation | 10 |
| Mounting the Rack Console Drawer | 10 |
| Grounding the LCD Console | 11 |
| Connecting the LCD Console..... | 11 |
| Opening the LCD Console..... | 12 |
| Closing the LCD Console | 12 |
| Panel Controls and On-Screen Display (OSD) Functions | 13 |
| Console Panel Menu | 13 |
| Auto Tuning the Display | 13 |
| Adjusting the Display's Brightness | 14 |
| Adjusting the Display's Contrast..... | 15 |
| Adjusting the Display's Color Settings | 15 |


| | |
|--|-----------|
| Adjusting the Image or OSD Position | 16 |
| Adjusting the Language | 16 |
| Resetting the LCD Console to Factory Settings..... | 17 |
| Exiting the OSD..... | 17 |
| LED Indicator | 18 |
| Configuration..... | 18 |
| Testing the LCD Console..... | 18 |
| Configuring Display Settings | 19 |
| Important Considerations | 19 |

Product Diagram (RKCONS17HD)

Front



Rear

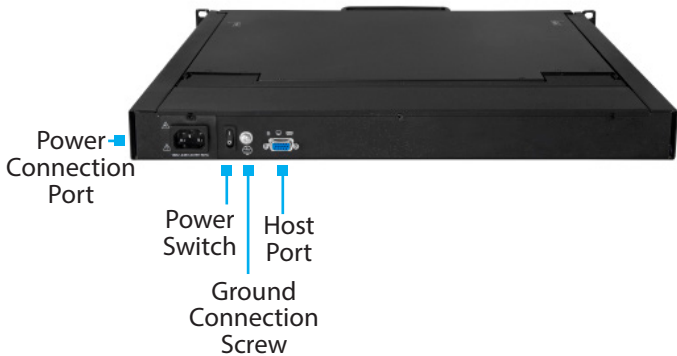

Product Information

Packaging Contents

- 1U LCD Rack Console Drawer x 1
- Console Cable Kit x 1
- Mounting Rails - Set x 1
- Power Adapter x 1

Hardware Kit Contents

- Side Rails with Brackets x 2
- Keys x 2
- Screw Kit x 1

Requirements

Requirements are subject to change. For the latest requirements, please visit www.startech.com/RKCONS17HD.

- 1U of Rack Space
- Grounding Wire
- Power Source
- Computer, Server, or KVM
- Phillips Head Screwdriver

Installation

Mounting the Rack Console Drawer

Note: *It's easier to install the **Rack Console Drawer** if another person helps you with the installation.*

Warning: *Use caution and proper lifting techniques when installing the **Rack Console Drawer**.*

1. Based on the mounting depth of the server rack that you are using, select the appropriate length of **Mounting Rails**.
2. Decide where in the **Rack** you want to install the **Rack Console Drawer**.
3. Insert the **M5 Cage Nuts** (two per mounting post) into the square mounting holes on the **Rack's** mounting posts.
4. Align the **Rear Mounting Brackets (rails)** with the **M5 Cage Nuts** on the corresponding **Rack** mounting post.
5. Insert an **M5 Screw** (two per mounting post) through the **Rear Mounting Bracket (rail)** and into the **M5 Cage Nut**. Do not tighten the **M5 Screws**.
6. With assistance, slide the **Rack Console Drawer** into the **Rack**, guiding the **Rear Mounting Brackets (rails)** into the rail assembly.
7. Insert an **M5 Screw** (two per mounting post) through the **Front Mounting Bracket (rail)** into the **M5 Cage Nut**.
8. Use a **Phillips Head Screwdriver** to tighten the **M5 Screws**.

Grounding the LCD Console

Note: *Grounding is recommended in environments with high levels of electromagnetic interference (EMI), or frequent electrical surges.*

1. Using a **Phillips Head Screwdriver**, loosen the **Grounding Connection Screw**.
2. Attach the **Grounding Wire** to the shaft of the **Grounding Connection Screw**.
3. Tighten the **Grounding Connection Screw**, making sure not to over-tighten.
4. Attach the other end of the **Grounding Wire** (not connected to the **LCD Console**) to a proper earth-ground connection.


Connecting the LCD Console

To connect the **LCD Console** to a **Computer** or **KVM**, perform the following steps:

1. Turn off the **Computer** or **KVM Switch**.
2. Connect the **15-pin Host/KVM Connector** on the **KVM Cable** to the **Host Port** on the **LCD Console** and to a VGA port and USB port on the rear panel of the **Computer** or **KVM Switch**.
3. Connect the **Power Cable** to the **Power Connection Port** on the **LCD Console** and to an **AC Electrical Outlet**.
4. Power on the **LCD Console**.
5. Power the **Computer** or **KVM** back on.

Opening the LCD Console

1. Move the **Release Switch** to the unlocked position.

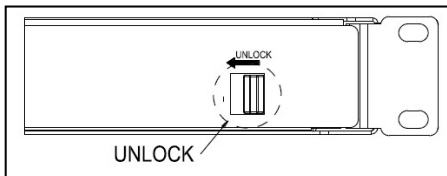

Unlocking the LCD Console

2. Use the **Handle** to pull the **LCD Console** out of the **Rack** until you hear the **LCD Console** click into place. The **LCD Console** will power On.
3. The **LED Indicator** on the left of the monitor panel changes from orange to green.
4. Adjust the **Display** into the desired position.

Closing the LCD Console

1. Lower the **Display** until it's flush against the **Keyboard**.
2. Slide and hold the two **Switches** located on the sides of the **LCD Console** forward and push the **LCD Console** in towards the rear of the rack.
3. Release the two **Switches** and continue pushing the **LCD Console** the rest of the way into the **Rack**, until you hear an audible click.

Panel Controls and On-Screen Display (OSD) Functions

Console Panel Menu

The **Console Panel** buttons are for display adjustments and OSD navigation:

| Button | Function |
|-----------------|--|
| Auto/Exit | Auto-synchronizes and scales down the display to any valid factory preset timings. Exits the OSD. |
| SL- | Press to scroll to the function you want to adjust. |
| SL+ | Press to scroll to the function you want to adjust. |
| Menu/ Select | Opens the OSD menu. Used to select an option on the OSD. |

Auto Tuning the Display

The **Auto** button automatically adjusts the display size and tunes the **Display** to its optimal state.

1. On the **Console Panel**, press the **Auto/Exit** button.
- or -
2. On the **Console Panel**, press the **Menu/Select** button.

3. On the **OSD**, use the **SL- down** and **SL+ up** (on the **Console Panel**) buttons to select **Auto**.
4. Press the **Menu/Select** button.

Adjusting the Display's Brightness

1. On the **Console Panel**, press the **Menu/Select** button.
2. On the **OSD**, use the **SL- down** and **SL+ up** (on the **Console Panel**) buttons to highlight **Menu**, then press the **Menu/Select** button.
3. On the **Menu** list select **Brightness** and press the **Menu/Select** button.
4. Use the **SL- down** and **SL+ up** (on the **Console Panel**) buttons to adjust the brightness on the display.
5. Press the **Menu/Select** button to save your selection.

Adjusting the Display's Contrast

1. On the **Console Panel**, press the **Menu/Select** button.
2. On the **OSD**, use the **SL- down** and **SL+ up** (on the **Console Panel**) buttons to highlight **Menu**, then press the **Menu/Select** button.
3. On the **Menu** list select **Contrast**, then press the **Menu/Select** button.
4. Use the **SL- down** and **SL+ up** (on the **Console Panel**) buttons to adjust the contrast on the display.
5. Press the **Menu/Select** button to save your selection.

Adjusting the Display's Color Settings

1. On the **Console Panel**, press the **Menu/Select** button.
2. On the **OSD**, use the **SL- down** and **SL+ up** (on the **Console Panel**) buttons to highlight **Menu**, then press the **Menu/Select** button.
3. On the **Menu** list select **Color**, then press the **Menu/Select** button.
4. Select one of the following Color options:
 - **9300°K**: Sets CIE coordinates at 9300°K color.
 - **7500°K**: Sets CIE coordinates at 7500°K color.
 - **6500°K**: Sets CIE coordinates at 6500°K color.
 - **User**: Sets user defined CIE.
 - **Auto Color**: Auto adjusts color.

- **Return:** Returns to the OSD Menu without making any changes.
5. Press the **Menu/Select** button to save your selection.

Adjusting the Image or OSD Position

1. On the **Console Panel**, press the **Menu/Select** button.
2. On the **OSD**, use the **SL- down** and **SL+ up** on the **Console Panel** to highlight **Menu**, then press the **Menu/Select** button.
3. On the **Menu** list select **Position**, then press the **Menu/Select** button on the **Console Panel**.
4. Select one of the following **Color** options:
 - **Image Pos:** Adjusts the position of the image.
 - **OSD Pos:** Adjusts the position of the OSD.
 - **Return:** Returns to the OSD Menu without making any changes.
5. Press the **Menu/Select** button on the **Console Panel** to save your selection.

Adjusting the Language

1. On the **LCD Console Panel**, press the **Menu/Select** button.
2. On the **OSD**, use the **SL- down** and **SL+ up** on the **Control Panel** to highlight **Menu**, then press the **Menu/Select** button.
3. On the **Menu** list select **Language**, then press the **Menu/Select** button on the **Console Panel**.

4. Use the **SL- down** and **SL+ up** (on the **Console Panel**) buttons to select a language.
5. Press the **Menu/Select** button on the **Console Panel** to save your selection.

Resetting the LCD Console to Factory Settings

1. On the **Console Panel**, press the **Menu/Select** button.
2. On the **OSD**, use the **SL- down** and **SL+ up** on the **Console Panel** to highlight **Menu**, then press the **Menu/Select** button.
3. On the **Menu** list select **Misc** and press the **Menu/Select** button on the **Console Panel**.
4. Select one of the following recall options:
 - **Yes:** Reset.
 - **No:** Returns to the OSD Menu without resetting.

Exiting the OSD

- To exit the menu, scroll to **Exit**, then press the **Menu/Select** button.

LED Indicator

| LED Indicator | Status |
|---------------|--------------------------------------|
| Power LED | Green: On |
| | Red: Standby, Suspend, or Off |

Configuration

Testing the LCD Console

To test that the **LCD Console** is working properly, perform the following steps:

1. Power up the **Rack Console**, and then turn on the **Computer**.
2. Make sure that the video image is centered on the screen. If the image is not centered, use the OSD controls to adjust the image (see **Panel Controls and OSD Functions**) or press the **Auto** button on the **Console Panel**.

Note: *If the unit does not power up when the **Display** is pulled up, try pushing the **Power** button on the **Console Panel**.*

Configuring Display Settings

When the **LCD Console** is first connected you may need to configure one or more display settings. Use the **Computer's** operating system to configure the following display settings:

- **Display mode:** also called desktop area or video resolution
- **Refresh rate:** also called vertical scan rate or vertical sync
- **Color depth:** also called color palette or number of colors

Important Considerations

- If you're installing the device in a closed or multi-unit rack assembly, ensure that the environmental conditions are within the **LCD Console's** maximum and minimum specifications.
- Installing the **LCD Console** in a rack or cabinet may reduce airflow. Consider your airflow requirement when selecting a location for installation.
- It's recommended that the **LCD Console** be connected to a power source with over-current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- The **LCD Console** should be grounded appropriately during installation.

Warranty Information

This product is backed by a two-year warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product.

Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Hard-to-find made easy. At StarTech.com, that isn't a slogan. It's a promise.

StarTech.com is your one-stop source for every connectivity part you need. From the latest technology to legacy products — and all the parts that bridge the old and new — we can help you find the parts that connect your solutions.

We make it easy to locate the parts, and we quickly deliver them wherever they need to go. Just talk to one of our tech advisors or visit our website. You'll be connected to the products you need in no time.

Visit www.startech.com for complete information on all StarTech.com products and to access exclusive resources and time-saving tools.

StarTech.com is an ISO 9001 Registered manufacturer of connectivity and technology parts. StarTech.com was founded in 1985 and has operations in the United States, Canada, the United Kingdom and Taiwan servicing a worldwide market.

Reviews

Share your experiences using StarTech.com products, including product applications and setup, what you love about the products, and areas for improvement.

StarTech.com Ltd.

45 Artisans Cres.
London, Ontario
N5V 5E9
Canada

StarTech.com LLP

2500 Creekside Pkwy.
Lockbourne, Ohio
43137
U.S.A.

StarTech.com Ltd.

Unit B, Pinnacle
15 Gowerton Rd.,
Brackmills
Northampton
NN4 7BW
United Kingdom

FR: fr.startech.com

DE: de.startech.com

ES: es.startech.com

NL: nl.startech.com

IT: it.startech.com

JP: jp.startech.com