

WARNINGS AND CAUTIONS

Released Date: 2025-02-12

READ AND SAVE THESE INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, install or operate the product. This installation is to be in accordance with the National Electrical Code, ANSI/NFPA 70 and local codes.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.


WARNING - TO REDUCE THE RISK OF FIRE, THE RISK OF ELECTRIC SHOCK, OR PERSONAL INJURY:

- The means for disconnection must be incorporated in fixed wiring in accordance with the wiring rules.
- Disconnect the electrical supply before installation.
- Disconnect the electrical supply circuit to the fan before installing light kit.
- Use bulbs specified by the markings and/or labels on the fixture.
- DO NOT bend the blades when installing the fan, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
- Check that the outlet box is securely installed in place such that it is able to support at least the fan weight.
- Mount to outlet box marked (acceptable for fan support of 22.7kg(50lbs) or less) and use mounting screws provided with the outlet box.
- All set screws must be checked, and re-tightened where necessary, before installation.
- After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
- DO NOT use this fan with any solid-state speed control device.
- DO NOT use replacement parts that have not been recommended by the manufacturer (e.g. Parts made at home using 3D printer).
- The replacement of parts of the safety suspension system device shall be performed by the manufacturer, its service agent or suitably qualified persons.
- The mounting of the suspension system shall be performed by the manufacturer, its service agent or suitably qualified persons.
- Use only with light kits marked suitable for use in damp locations.
- If unusual oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons.
- This unit weighs 13.61 kg (29.94 lbs).

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.
- Disconnect fixture from the power source before replacing bulbs or cleaning. Make sure the bulbs are given sufficient time to cool before removing.

TOOLS REQUIRED

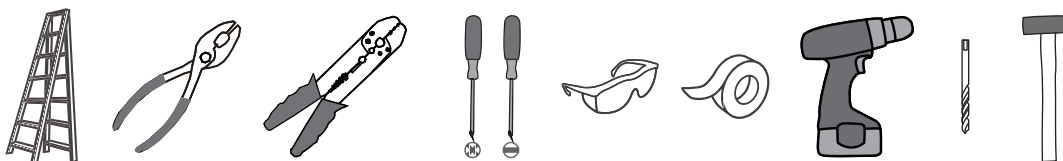


CARE AND MAINTENANCE


- Clean this fan once a year.
- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

If you need further assistance call Quoizel Customer Care at 1-800-645-3184 (9:00am - 5:00pm EST), or visit us on-line at www.quoizel.com.


PACKAGE CONTENTS

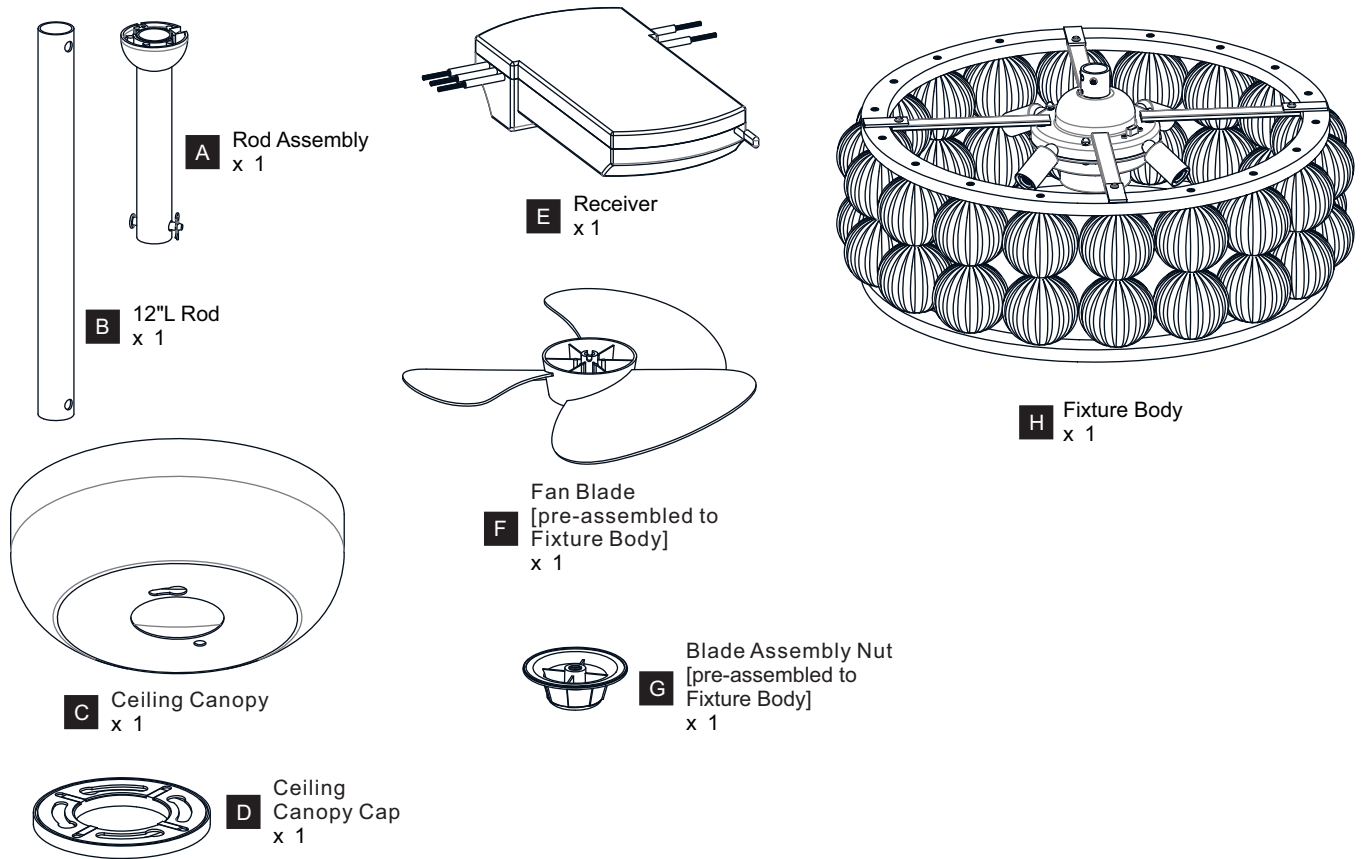


PACKAGE CONTENTS (PARTS BAG 1)

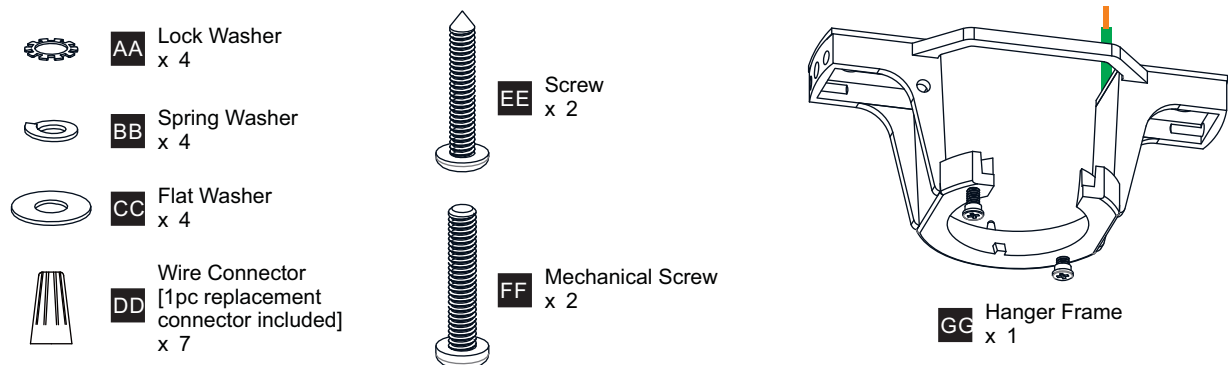

PACKAGE CONTENTS (PARTS BAG 2)

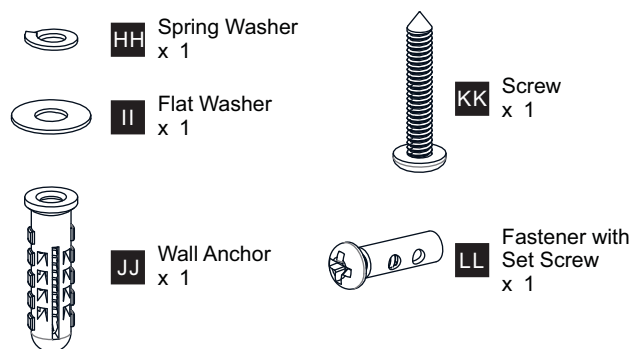


PACKAGE CONTENTS (PARTS BAG 3)

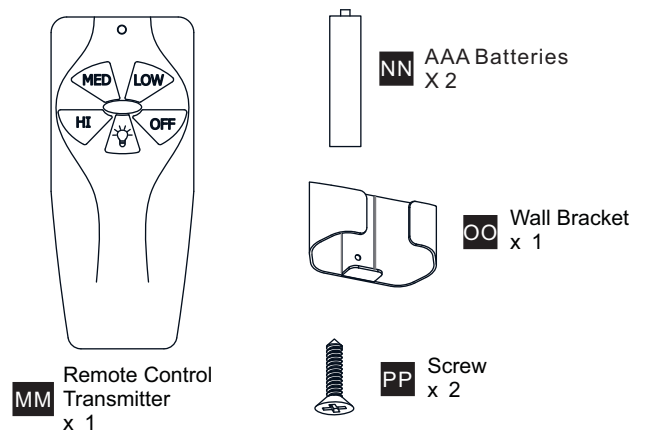


1

Install Hanger Frame

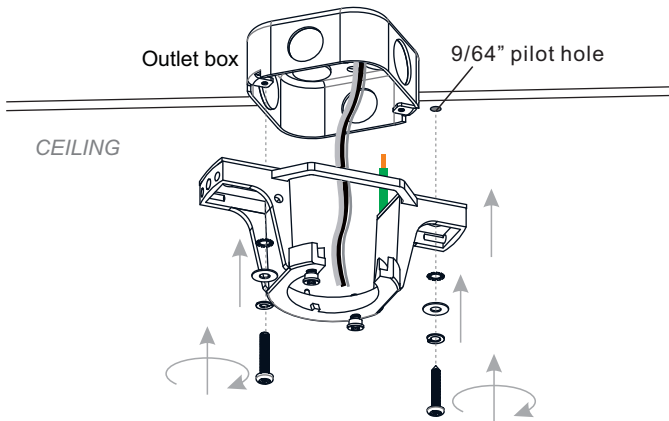

Use machine screws
when securing to existing
ceiling fan-rated outlet box.
that supports of 50 lbs
(22.72 kg) or less.

Use wood screws
When securing to support
structure with approved
electrical outlet box. Drill
9/64" pilot holes.

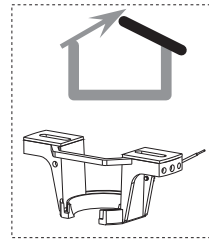


**This fan cannot be used for the
ceiling which angle is greater
than 19 degree.**

For angled ceilings, point
opening toward peak.

2

Choose Rod



OPTION 1

Standard Downrod
(Included -
Pre-assembled)
for ceilings 11 Feet high



OPTION 2

Longer Downrod
(Included)
for angled ceilings or
ceilings 12 Feet or higher

SKIP TO NEXT STEP

1

2

3

Steps 1-3 to remove standard downrod



4



Steps 4-6 to assemble longer downrod


6

5

3 Install Rod to Fixture Body


1

Steps 1-2 to remove pin

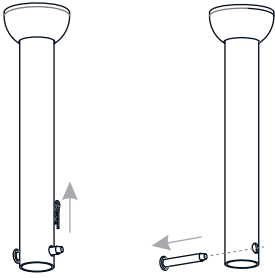


2

Install ceiling canopy & ceiling canopy cap

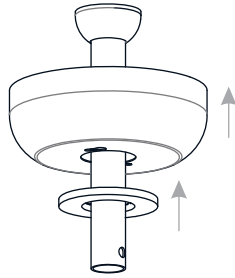


3

Remove set screws on fixture body

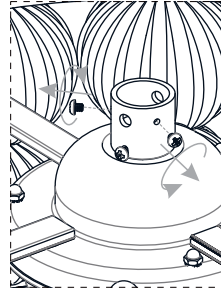


4

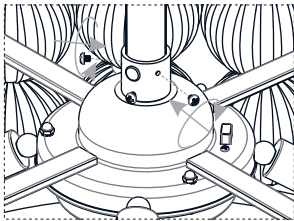


Install set screws

7

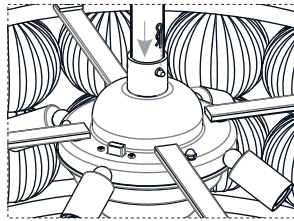

Install pin

6

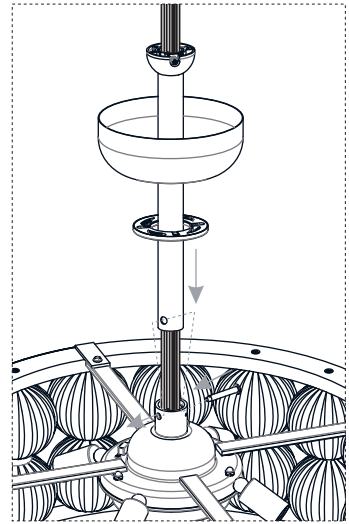


Install rod


5

4 Loosen Shoulder Screws

Remove one shoulder screw from hanger frame. Loosen the other shoulder screw approximate 1/4" and retain it on the hanger frame.

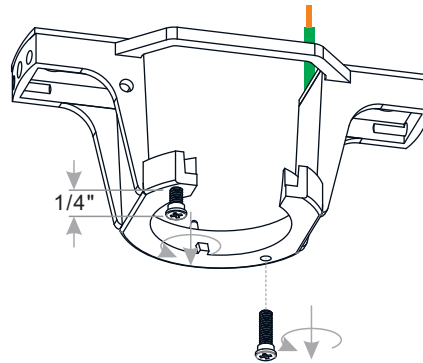


5 Install Rod to Hanger Frame

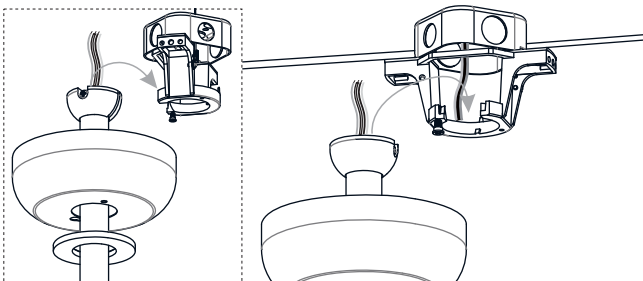


Pick the fan up by the down rod only. Place the downrod ball into the slot in the ceiling bracket.

6 Install Safety Cable

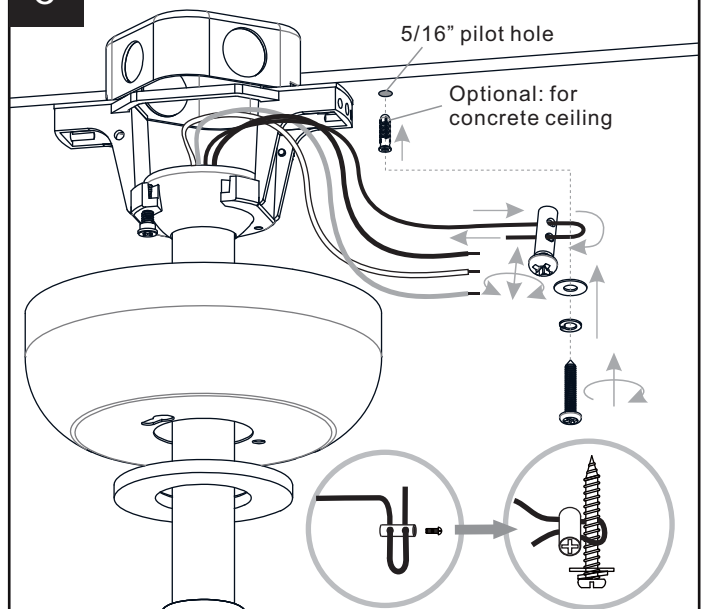


7 Wiring

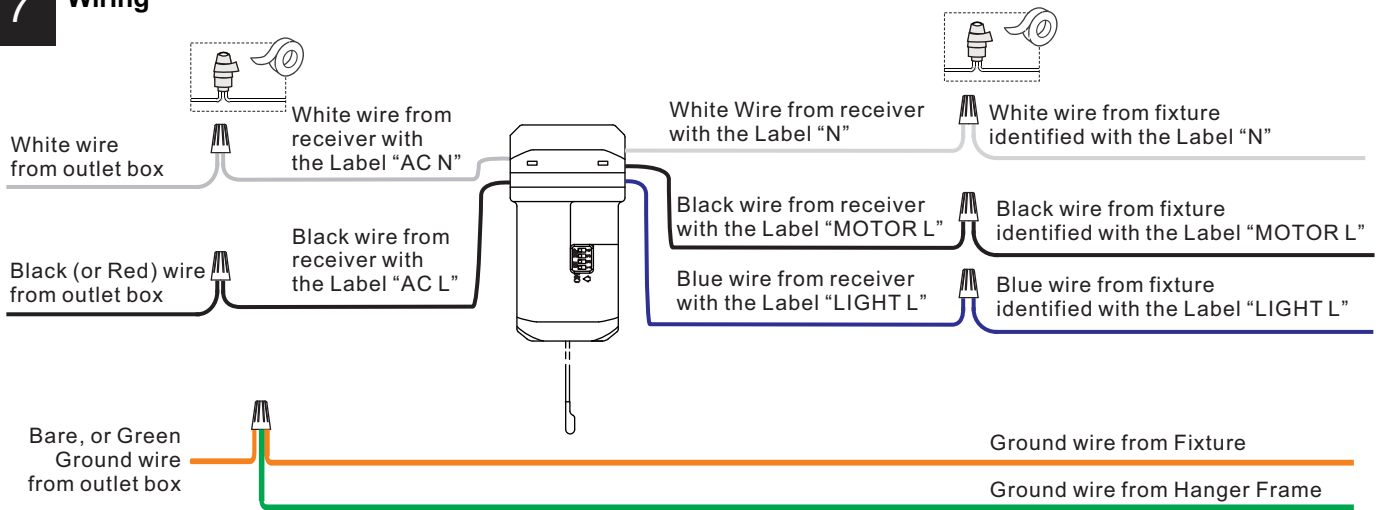


NOTE: Wrap each connections with the tape. Turn upward the connections and push them carefully into the outlet box.

8 Place Controller to Hanger Frame

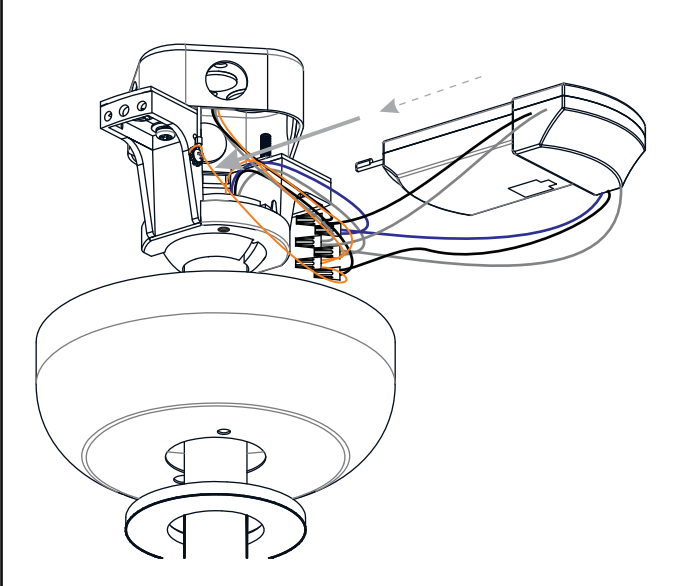


9 Install Ceiling Canopy


Carefully tuck all wires inside of the ceiling canopy during installation.

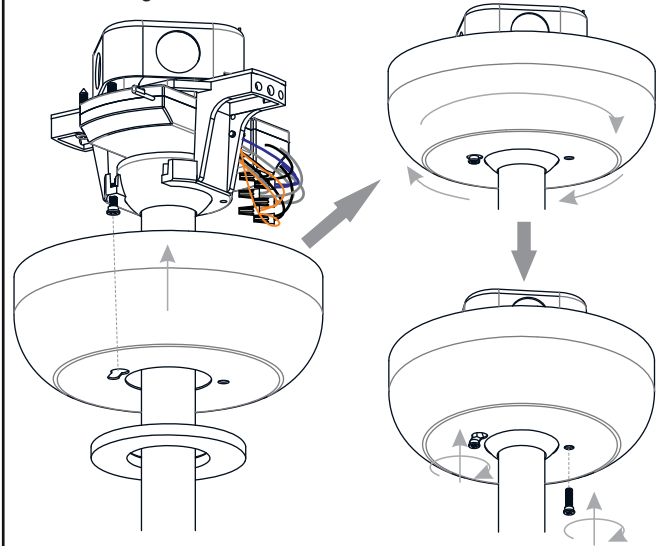

10 Install Ceiling Canopy Cap

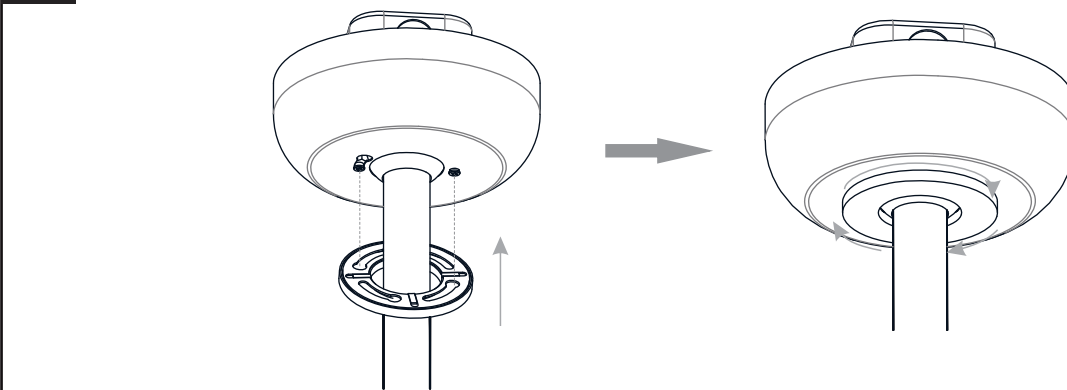

11 Install Bulbs

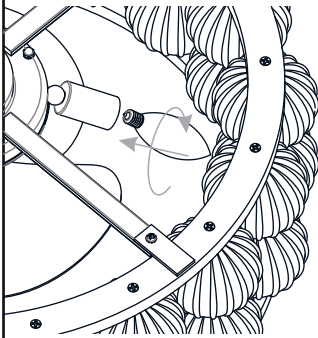

Install four correct bulbs referring to fixture markings and/or labels for maximum wattage.

Recommended Bulb Type (not included):





BULB BASE TYPE
Candelabra (E12)



BULB SHAPE
TYPE B LED

12 Install Wall Bracket



WALL

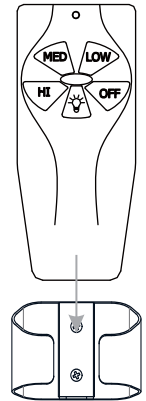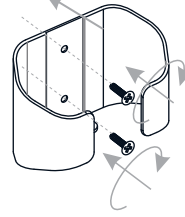

13 Install AAA Batteries to Remote Control Transmitter


1

Remove back cover

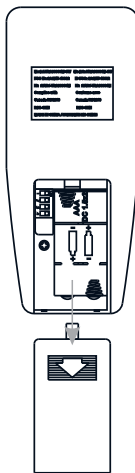
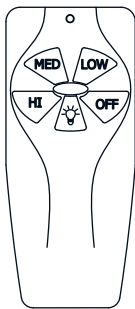


2

Match the codes on receiver and remote

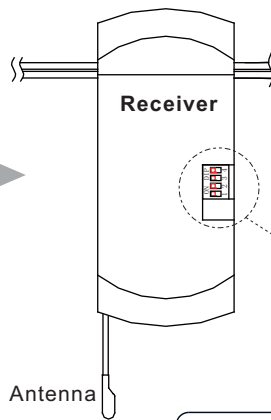

Remove the rubber stopper from the receiver. Then the code must be the same for both receiver and remote. Place the previously removed rubber stopper back in the receiver.

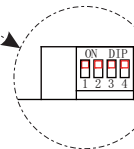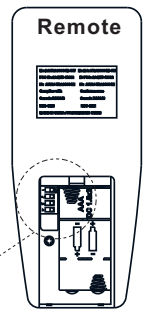

OPERATION:

1. Light button :
Press it to turn on the lights. Press it again to turn off the lights. Long press it, the bulbs will be dimmable.

2. HI, MED, LOW, OFF buttons: To adjust fan speed.

Install back cover


4

Insert AAA batteries

3



14 Reverse Fan Blade (Optional)

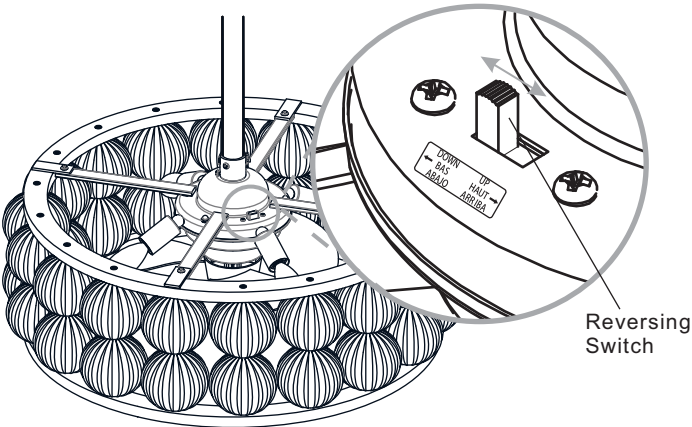


Reverse Switch Information		
Season	Rotation Direction	Switch Position
Summer	Clockwise	Left
Winter	Counterclockwise	Right

- Note:**
- 1. If airflow is desired in the opposite direction, turn the fan off and wait for the blades to stop turning.
 - 2. Push the reverse switch to Left or Right completely.

Your installation is now complete! Restore electricity and save this sheet for future reference.

FAN BLADE MAINTAINING

Refer to the following steps to remove the fan blade for maintaining or cleaning purpose.

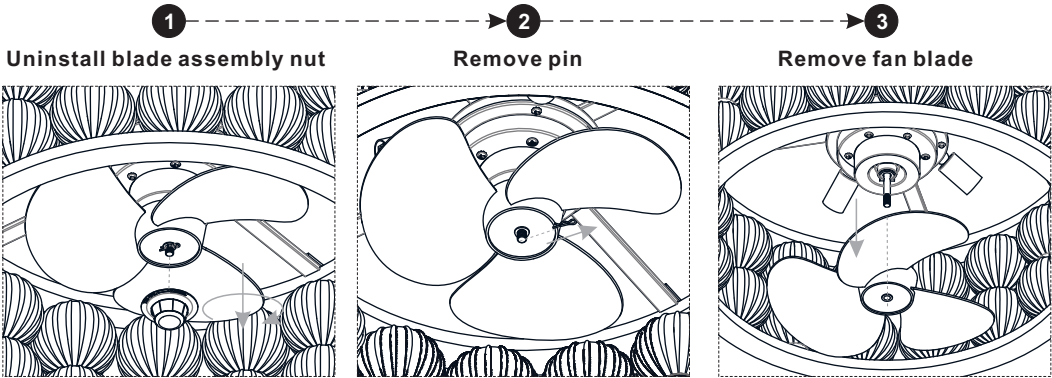

Reverse the above steps to reinstall the fan blade back after cleaning or maintaining.