



SHOWERLINE

PLANNING STEPS: Customer/Job _____ Date _____

Please sketch Dimensions and Drain Location.

Ordering Steps for ShowerLine

Email to: orders@oatey.com or info@lrbrands.com

ShowerLine drain bodies are composed of PVC and can be used with All Waterproofing methods Topical Sheet, Topical Liquid and Hot Mop.

- 1) Pick your ShowerLine Body: Rough Opening:
measurements are in **Bold Print (backer board to backer board)**.
Drain Body Size: Qty:
- 2) Select your Cover and Finish. The required cover length is included in the ShowerLine body description in **Bold Print**. Model number consist of Pattern and length example: (Cosmo40) Cosmo Pattern 40" in length.
Cover Length & Pattern
Finish: P=Polished Stainless Steel or
no following letter =Brushed Stainless Steel
- 3) The QuickSlope pan pieces or kit's are determined by the drain body size. QuickSlope kit's are composed of PET foam (Recycled water and soda bottles) ShowerLine pan kits are listed in the ShowerLine section and have the Drain body model number that it works with.
SLPAN# SLPAN pans are designed for a curbed installation or tub to shower conversion
SLPANADA# SLPANADA pans will be used for a Curbless or Zero barrier entry
- 4) Pick Waterproofing kit:
Topical Liquid
(80% of the projects use this method)
Topical Sheet
- 5) Select your cover channel finish and size for ShowerLine.
Cover Length and Finish

Please feel free to contact us at info@lrbrands.com if you require any assistance. The following information will be required in order to prepare your Bill of Materials sheet.


- 1) Will this be a Curbed or Curb-less installation
- 2) Dimensions of shower pan Backer to Backer Board, Frame to Frame or Finished or Finished tile wall.
- 3) Drain location

Flow rates are as follows:

Drains installed at the entry can handle 5gpm if a higher flow rate is required. Drains can be connected to one another.
Drains installed at the Back-Wall or Curbed method can handle 10gpm

SHOWERLINE

Step 3: Choose Shower Pan Kit

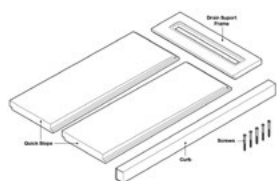

ShowerLine Pre-sloped Pan Kits

- Accommodate Standard, ADA and Curbless Shower Systems.
- QuickSlope pre-sloped shower pans, panels and curbs are tileable shower receptors for our Linear Drain systems. QuickSlope panels and curbs are composed of extruded rigid PET (Polyethylene terephthalate). It is strong yet lightweight, non-reactive, economical, and shatterproof.

Item Code	Description	Includes	Dimensions
SLPAN32	Shower pan assembly kit for use with PVC2430D20, PVC2430D15	(2) QuickSlope Panels 16" x 52", (1) SLDSF32 Drain Support Frame, (1) 3" Formed Curb, (5) Curb Lag Screws	32" x 64"
SLPAN32-SWO	Shower pan assembly kit for use with PVC2430D20-SWO, PVC2430D15-SWO	(2) QuickSlope Panels 16" x 52", (2) Flat Panels, (1) SLDSF32 Drain Support Frame, (1) 3" Formed Curb, (5) Curb Lag Screws	32" x 64"
SLPAN40	Shower pan assembly kit for use with PVC3240D20	(2) QuickSlope Panels 16" x 52", (1) QuickSlope Panels 8" x 52", (1) SLDSF 40" Drain Support Frame, (1) 3" Formed Curb, (5) Curb Lag Screws	40" x 64"
SLPAN40-SWO	Shower pan assembly kit for use with PVC3240D20-SWO	(2) QuickSlope Panels 16" x 52", (2.5) Flat Panels, (1) SLDSF40 Drain Support Frame, (1) 3" Formed Curb, (5) Curb Lag Screws	40" x 64"
SLPAN48	Shower pan assembly kit for use with PVC4048D20	(3) QuickSlope Panels 16" x 52", (1) SLDSF 48" Drain Support Frame, (1) 3" Formed Curb, (5) Curb Lag Screws	48" x 64"
SLPAN56	Shower pan assembly kit for use with PVC4856D20	(3) QuickSlope Panels 16" x 52", (1) QuickSlope Panels 8" x 52", (1) SLDSF 56" Drain Support Frame, (1) 3" Formed Curb, (5) Curb Lag Screws	56" x 64"
SLPAN64	Shower pan assembly kit for use with PVC5664D20	(4) QuickSlope Panels 16" x 52", (1) SLDSF 68" Drain Support Frame, (1) 3" Formed Curb, (7) Curb Lag Screws	64" x 64"
SLPAN72	Shower pan assembly kit for use with PVC6472D20	(4) QuickSlope Panels 16" x 52", (1) QuickSlope Panels 8" x 52", (1) SLDSF 72" Drain Support Frame, (1) 3" Formed Curb, (5) Curb Lag Screws	72" x 64"
SLPANADA48	Shower pan assembly kit for use with ADA and curbless showers up to 48" wide x 48" deep.	(3) Quick Slope Panels. 16" x 48"	48" x 48"
SLPANADA4874	Shower pan assembly kit for use with ADA and curbless showers up to 74" deep	(3) SLQSADA, (3) SLQSADAEX1626	48" x 74"
SLPANADA48100	Shower pan assembly kit for use with ADA and curbless showers up to 100" deep	(3) SLQSADA, (3) SLQSADAEX1652	48" x 100"
SLPANADA64	Shower pan assembly kit for use with ADA and curbless showers up to 64" wide	(4) SLQSADA	64" x 48"
SLPANADA6474	Shower pan assembly kit for use with ADA and curbless showers up to 64" wide and 74" deep	(4) SLQSADA, (4) SLQSADAEX1626	64" x 74"
SLPANADA64100	Shower pan assembly kit for use with ADA and curbless showers up to 64" wide and 100" deep	(4) SLQSADA, (4) SLQSADAEX1652	64" x 100"
SLPANADA80	Shower pan assembly kit for use with ADA and curbless showers up to 80" wide and 48" deep	(5) SLQSADA 16" x 48"	80" x 48"
SLPANADA8074	Shower pan assembly kit for use with ADA and curbless showers up to 80" wide and 74" deep	(5) SLQSADA, (5) SLQSADAEX1626	80" x 74"
SLPANADA80100	Shower pan assembly kit for use with ADA and curbless showers up to 80" wide and 100" deep	(5) SLQSADA, (5) SLQSADAEX1652	80" x 100"