
Model 161-WV24C/ WF24C Wood and Swivel Counter Stool

Parts Listing

A Chair Back 1 Unit B Metal Plate 1 Unit





Solid Wood Leg 4 Units D Turnplate 1 Unit





E Foot Ring 1 Unit

F M6x18mm Screw 4 Units





M6x20mm Screw 8 Units M6x25mm Screw
4 Units





I Solid Wood Leg nail 4 Units J Cap 4 Units





M6 Allen Wrench 1 Unit





Assembly Instructions





Tools Needed: Allen Wrench - Provided Please read all instructions before assembly.


- **Step 1:** Attach metal plate(B) to four Solid Wood Legs(C) , using four M6x20mm Screw(G) first as shown. Tighten with M6 Allen Wrench (K). Do not fully tighten screws.
- **Step 2:** Attach Foot Ring(E) to four Solid Wood Legs(C), using four M6x25mm Screws(H) as shown. Tighten with M6 Allen Wrench (K). Do not fully tighten screws.
- Step 3: Install the nail(I) at the bottom of the Solid Wood Legs(C) . Tighten the screws fully.
- **Step 4:** Attach Turnplate(D) to fourSolid Wood Legs (C), using four M6x20mm Screws(G) as shown.Tighten with M6 Allen Wrench (K).
- **Step 5:** Attach Turnplate(D) to Chair Back(A),using four M6*18mm Screws (F) as shown. Tighten with M6 Allen Wrench (K).And then put the four Caps(J) on the Solid Wood Legs(C) as shown.

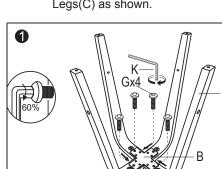

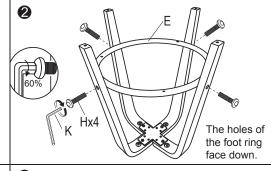

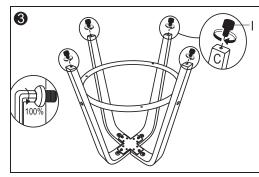

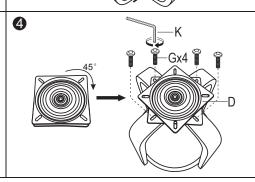

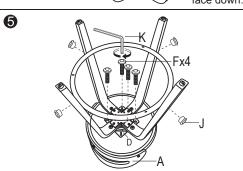

WEIGHT CAPACITY: 275 lbs.

Assembly Notes:

During assembly, hand tighten screw only when all screws are in place, you may then tighten all screws completely.

CAUTION:

- 1. Do not use this chair as a step ladder.
- 2. Check for loose screws and tighten them every 6 months.



161 Tradition Trail Holly Springs, NC, 27540 800-520-7471 (voice) 919-362-4765 (fax) 919-303-6389 (voice) www.ofminc.com support@ofminc.com



CONTROL INSTRUCTIONS

INSTRUCCIONES DEL CONTROL

INSTRUCTIONS DE RÉGLAGE

161-WV24C/WF24C

