



### USE INSTRUCTIONS

1. Use the table to identify the appropriate strip for desired use dilution.
2. Dip strip in the test solution for one second, ensuring pad is fully wet.
3. Shake off excess fluid.


AHP 1750 – Compare after exactly 40 seconds for Disinfection Compare after exactly 120 seconds (2 min) for Sanitizing



Use the table below to identify the correct AHP dilution: 1:40 disinfectant, 1:128 sanitize

### Disinfection

OXIVIR® PLUS CONCENTRATE 1:40		Time
For disinfection, compare at exactly 40 seconds		00:40
PASS	FAIL	

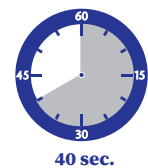

### Sanitizing

OXIVIR® PLUS CONCENTRATE 1:128		Time
For sanitizing, compare at exactly 2 minutes		02:00
PASS	FAIL	



Please contact Diversey Customer Service with questions. 1-800-668-7171