

ASSEMBLY INSTRUCTIONS




PARTS AND FITTING PACKAGING DETAIL

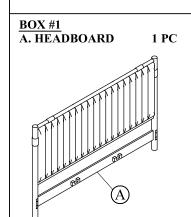


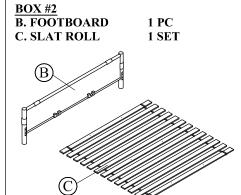

BOX #3 D. SIDE RAILS 2 PCS E. CENTER SUPPORT 2 PCS F. SUPPORT LEG **10 PCS** G. LEFT MATTRESS SPACER 1 PC H. RIGHT MATTRESS SPACER 1 PC

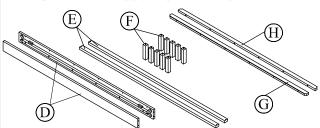


FULLY ASSEMBLED

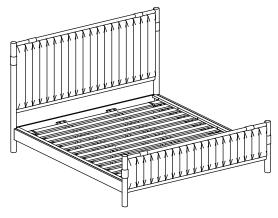







HARDWARE KIT PACKED IN BOX #2			
NO.	DESCRIPTION	IMAGE	QTY
1	THREADED BOLT (8x60mm)		8 PCS
2	ARC WASHER (2x14x26mm)	0	8 PCS
3	LOCK WASHER (M10)	0	8 PCS
4	HEX NUT (M8)	©	8 PCS
5	WRENCH	5	1 PC
6	WOOD SCREW (4x35mm)	3	4 PCS
7	WOOD SCREW (4x25mm)	8	12 PCS
8	ALLEN BOLT (6x60mm)	9	12 PCS
9	LOCK WASHER (M9)	O	12 PCS
10	FLAT WASHER (M6x13)	0	12 PCS
11	ALLEN KEY		1 PC

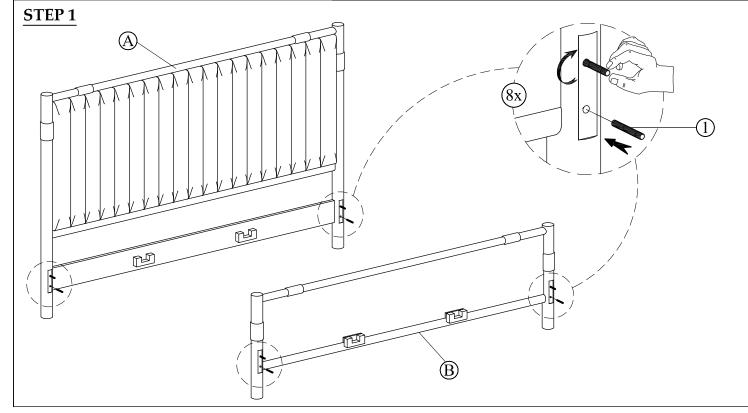


ASSEMBLY INSTRUCTIONS



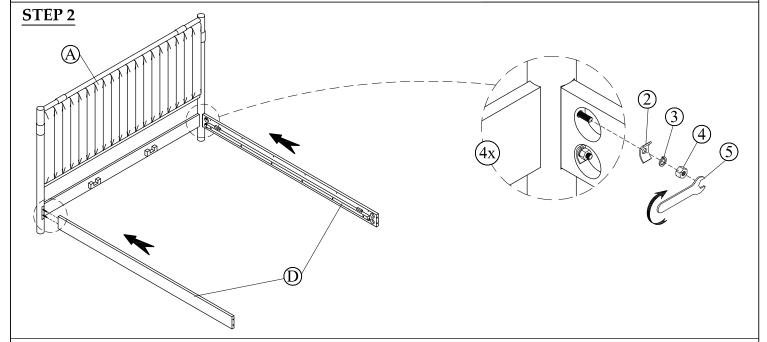

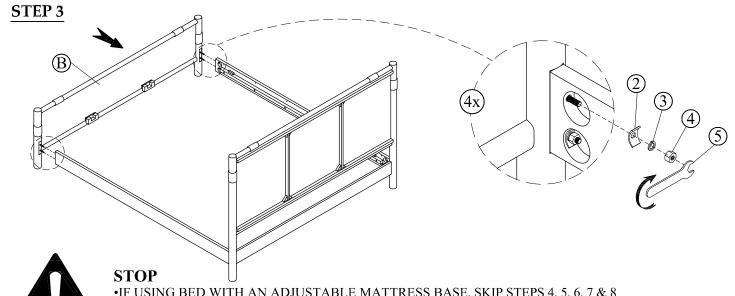


- •IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6, 7 & 8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT. •IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

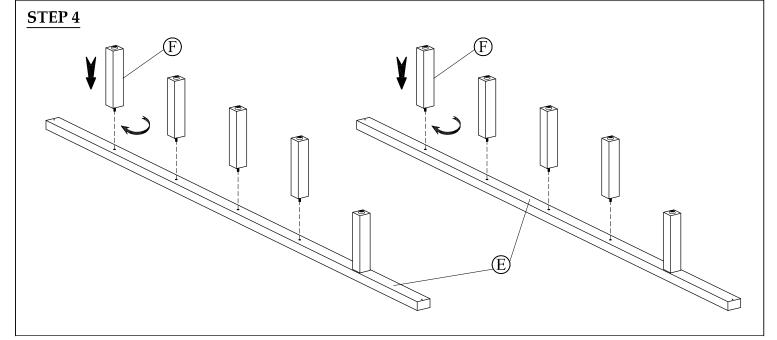


ASSEMBLY INSTRUCTIONS



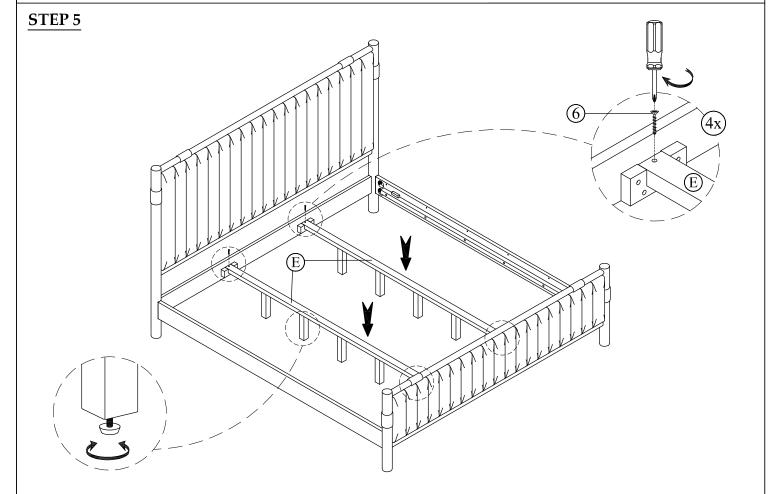




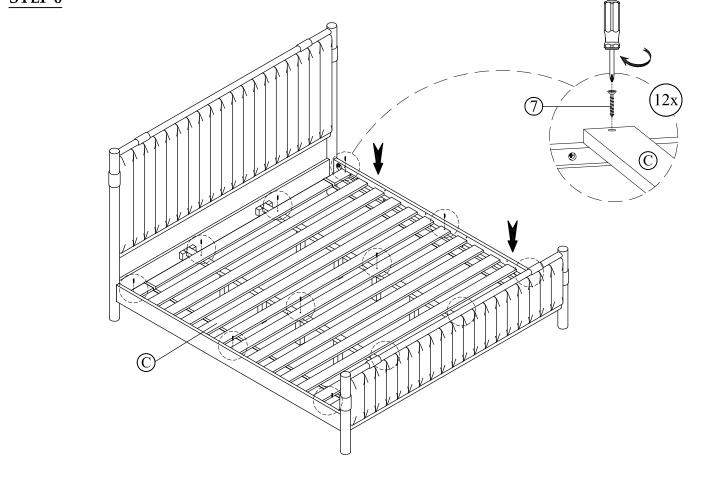


ASSEMBLY INSTRUCTIONS



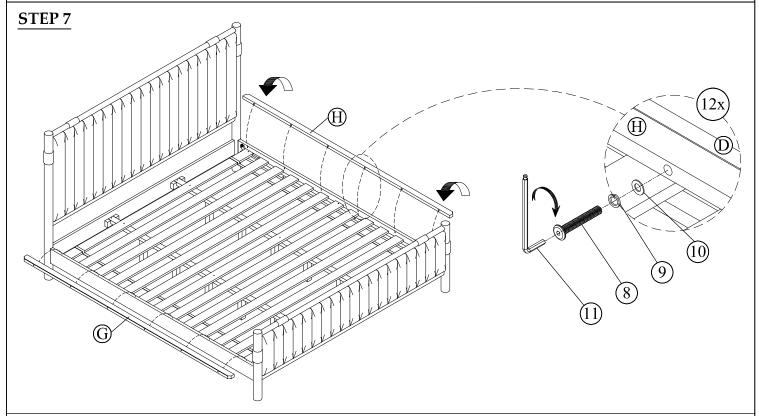



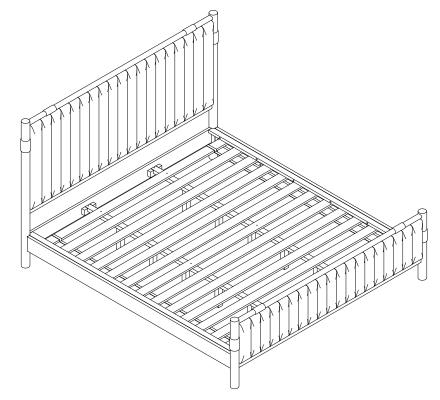


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support (F).

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ASSEMBLY INSTRUCTIONS





AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

: 1 SET C. SLAT ROLL *WOOD SCREW (4x35mm) :4 PCS : 2 PCS *WOOD SCREW (4x25mm) E. CENTER SUPPORT :12 PCS *ALLEN BOLT (6x60mm) :12 PCS F. SUPPORT LEG : 10 PCS *LOCK WASHER (M9) :12 PCS G. LEFT MATTRESS SPACER : 1 PC *FLAT WASHER (M6) :12 PCS H. RIGHT MATTRESS SPACER : 1 PC

STEP #1:

USE ALLEN KEY (11) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

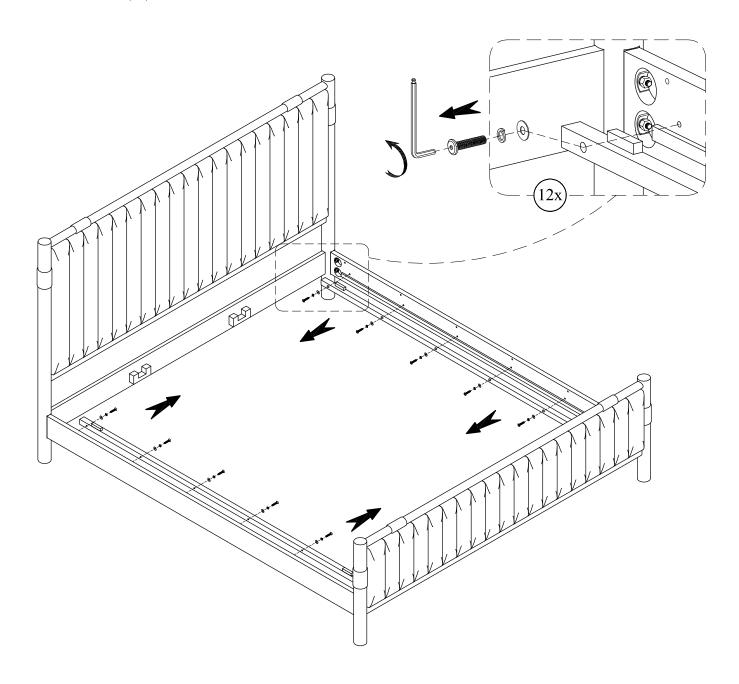

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.