


INSTALLATION

1. Insert each hinge into the toilet seat hinge holes.
2. Slide the rubber washers onto the threaded ends of the hinge bolts.
3. Position the seat on the toilet so the hinge bolts fit through the toilet seat-mount holes.
4. On the underside of the toilet, slide the metal washers and lock washers on to the hinge bolts.
5. Thread the hex nuts onto the bolts, centering the seat as needed.
6. Secure seat by tightening the hex nuts.

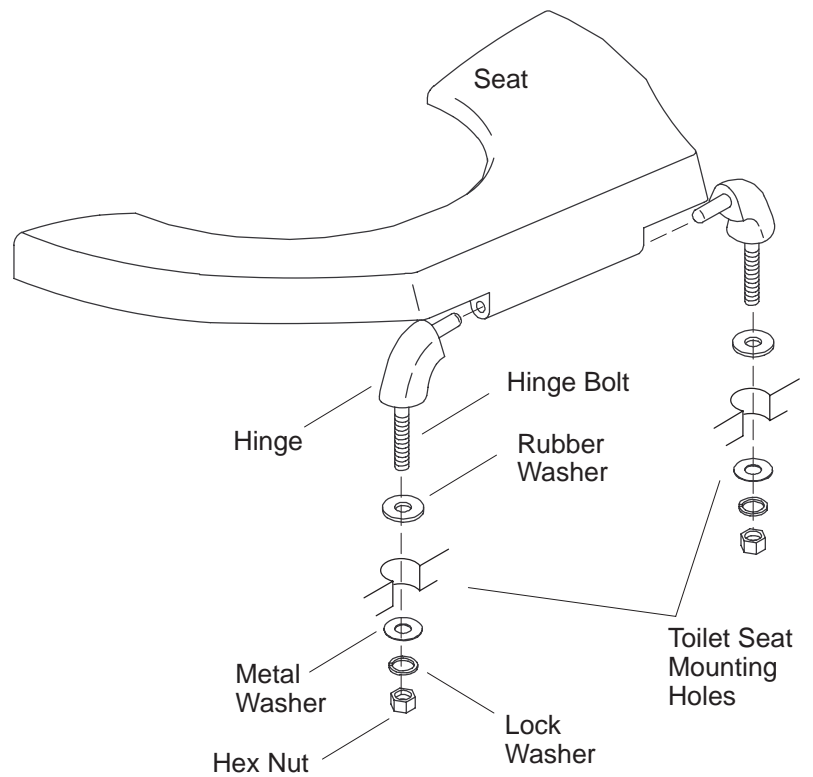


1007301-2-A

©2001 Kohler Co.

INSTALACIÓN

1. Inserte cada bisagra en los orificios correspondientes en el asiento.
2. Deslice las arandelas de goma sobre los extremos roscados de los pernos de la bisagra.
3. Coloque el asiento en el inodoro, de manera que los pernos de la bisagra encajen en los orificios de fijación del inodoro.
4. En la parte inferior del inodoro, deslice arandelas de metal y asegure con los pernos de las bisagras.
5. Enrosque las tuercas hexagonales a los pernos, centrando el asiento de ser necesario.
6. Asegure el asiento, fijando las tuercas hexagonales.

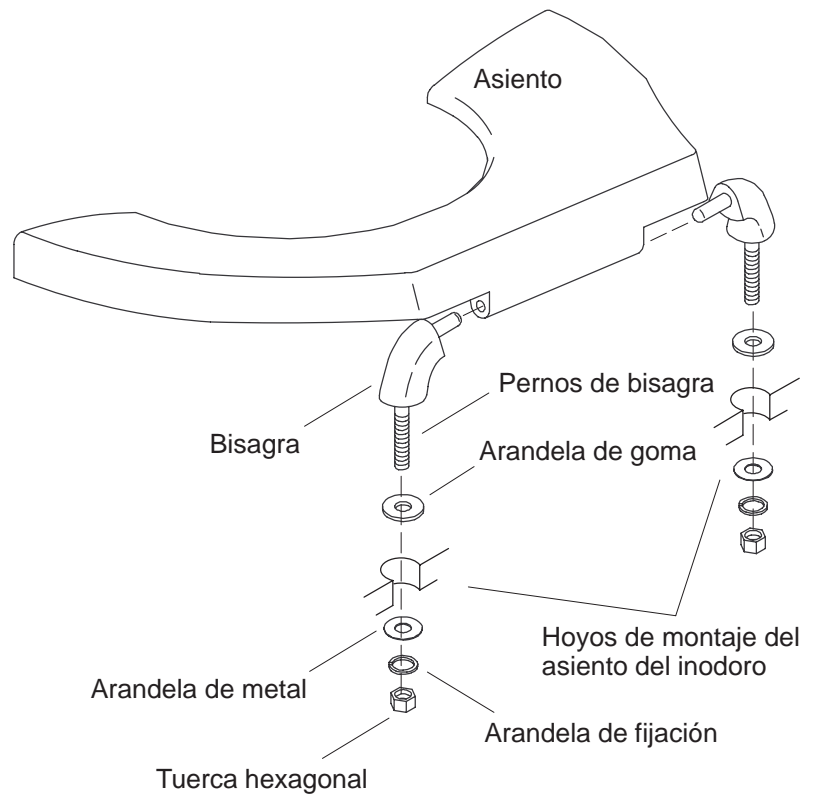

1007301-2-A

©2001 Kohler Co.