



INSTALLATION INSTRUCTIONS

SA-4602 Slide Bar with Adjustable Hand Shower Bracket

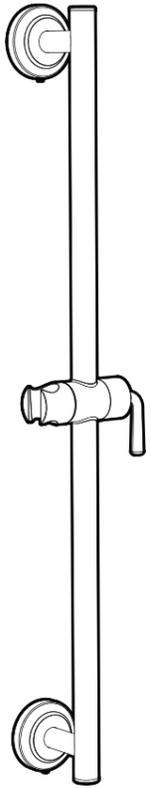

92-SA-4602-01

TOOLS & SUPPLIES NEEDED

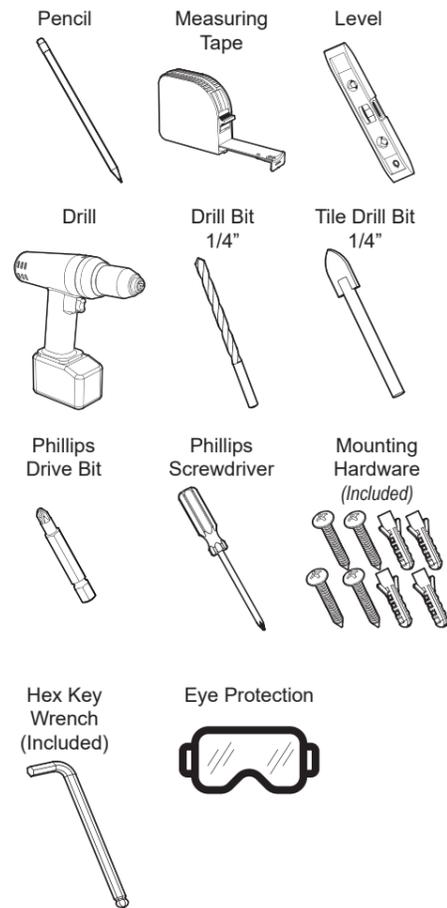

IMPORTANT

SAFETY TIPS:

Be sure to read and understand all instructions before beginning installation.

Inspect all connections after installation.

Cover the drain to avoid loss of parts.

Be sure to wear proper eye protection.

Do NOT over tighten any connections or damage may occur.

Observe all local plumbing and building code

IMPORTANT:

This item is NOT designed for use as a grab bar. Do not mount in locations where product is likely to be used as a grab bar.

FINISH MAINTENANCE:

Your new product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

WARRANTY:

Warranty information can be found at: www.speakman.com


CALIFORNIA PROPOSITION 65



CALIFORNIA PROPOSITION 65:
WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

PREPARE FOR MOUNTING

- Using the included Hex Key Wrench, loosen, but do not remove the Set Screws and remove the Mounting Brackets from the Slide Bar Assembly.

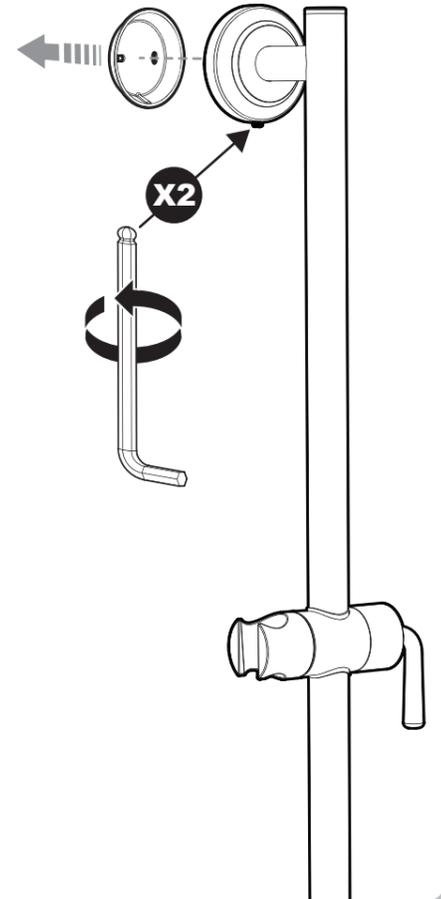

NEED HELP?
For additional assistance or service please contact:




800-537-2107



www.speakman.com


POSITION IN PLACE

- Place Slide Bar Assembly into the desired mounting position. Take care that the Slide Bar is oriented in a vertical position. Using a pencil, lightly trace outline of End Brackets on to wall.

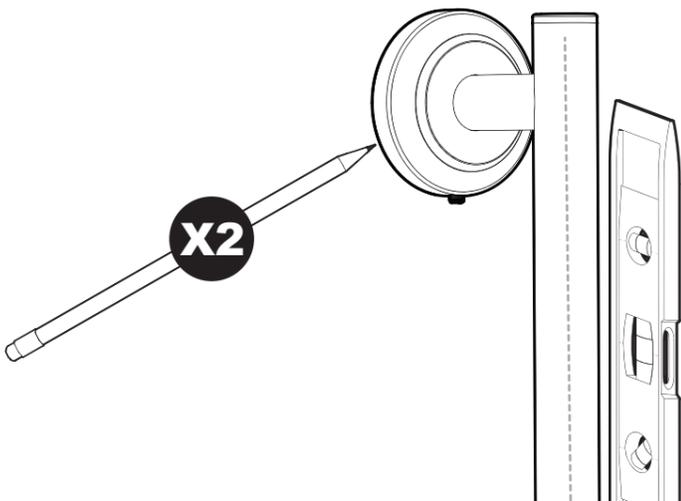


MARK MOUNTING LOCATIONS

- Center Mounting Bracket within traced outline. Mark the 2 locations with a pencil.

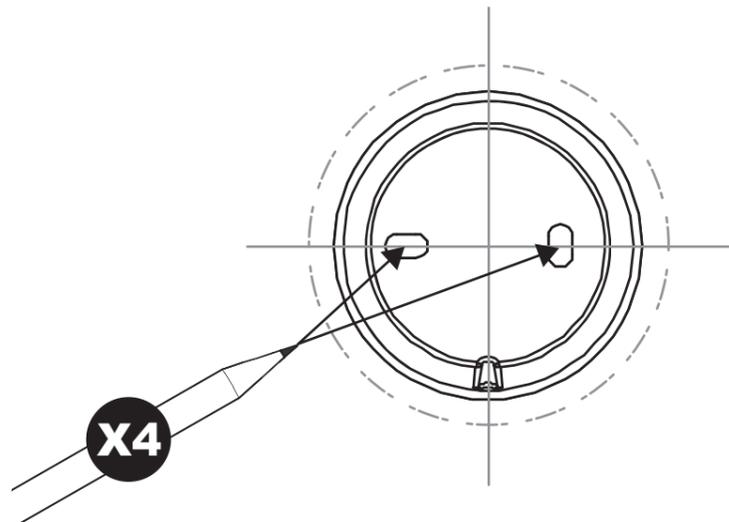


DRILL MOUNTING HOLES

- Drill 1/4" holes in marked locations. If drilling into tile, be sure to use a drill bit designated for tile. If mounting directly into stud or wood wall, drilling mounting holes is not required.

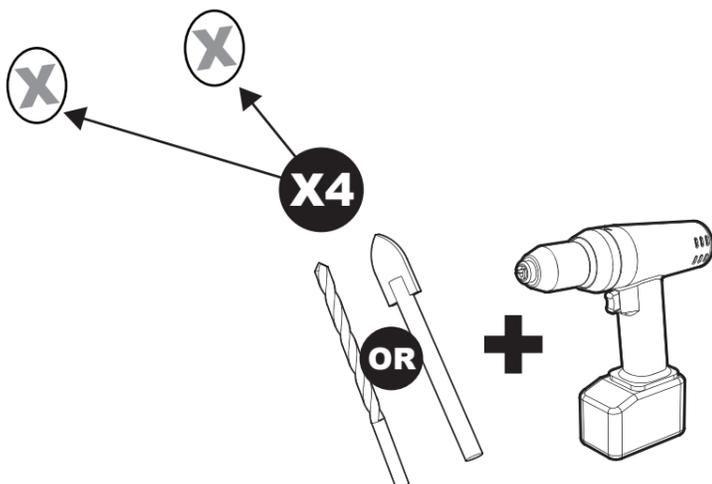


INSERT PLASTIC ANCHORS

- Push the Plastic Anchors (x4) into the drilled holes. Ensure the plastic anchors are flush with the wall. (Note: Plastic Anchors provided may not be suitable for all types of wall construction, seek professional help if in doubt).

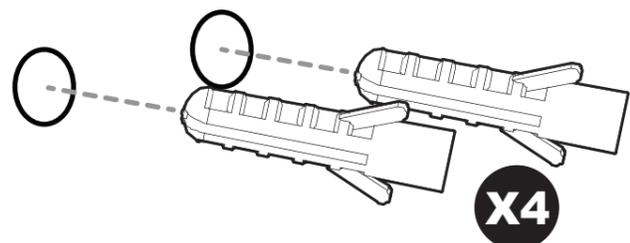


SECURE ANCHOR PLATES

- 6 Secure Anchor Plates with the included Mounting Screws. Ensure recessed area of Anchor Plate is aligned vertically as shown below to accept the Set Screw.

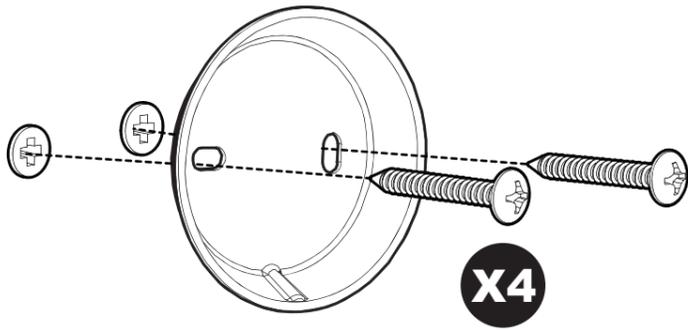


MOUNT SLIDE BAR

- 7 Install Slide Bar Assembly over Anchor Plates, and secure with Set Screws using supplied Allen Wrench.

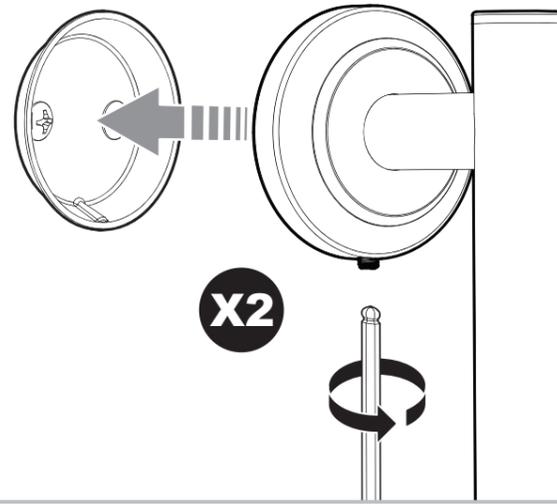


ADJUST HAND SHOWER BRACKET

- 8 Orient the Hand Held Shower Bracket to your desired position. Adjustments are made by rotating the Handle counter-clockwise to release the position, and clockwise to lock into the desired position.

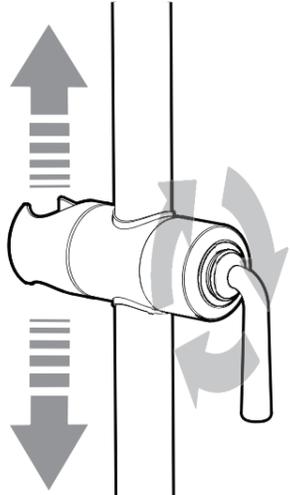


FUTURE MAINTENANCE

- 9 If the Hand Shower Bracket no longer holds position, Loosen the Set Screw (A) from underneath the Bracket using the supplied Hex Key Wrench. Tighten the Screw (B) in the Shower Holder using a Philips Head Screwdriver. Then, re-tighten the Set Screw (A) from below.

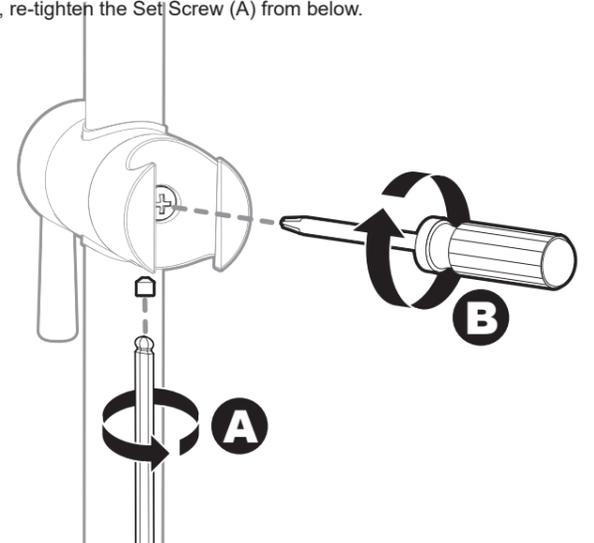


REPAIR PARTS


RPG05-0886
MOUNTING HARDWARE

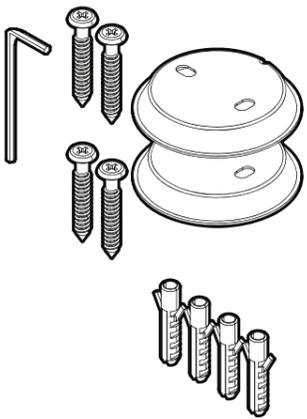

RPG56-122312-XX
HAND SHOWER BRACKET
(XX = FINISH)

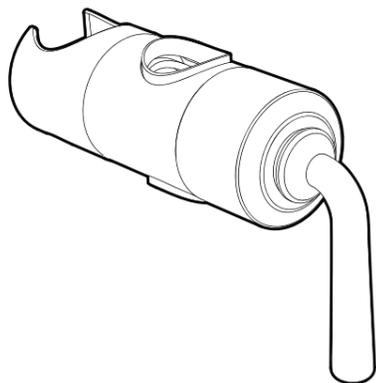

ROUGH-IN DIAGRAM

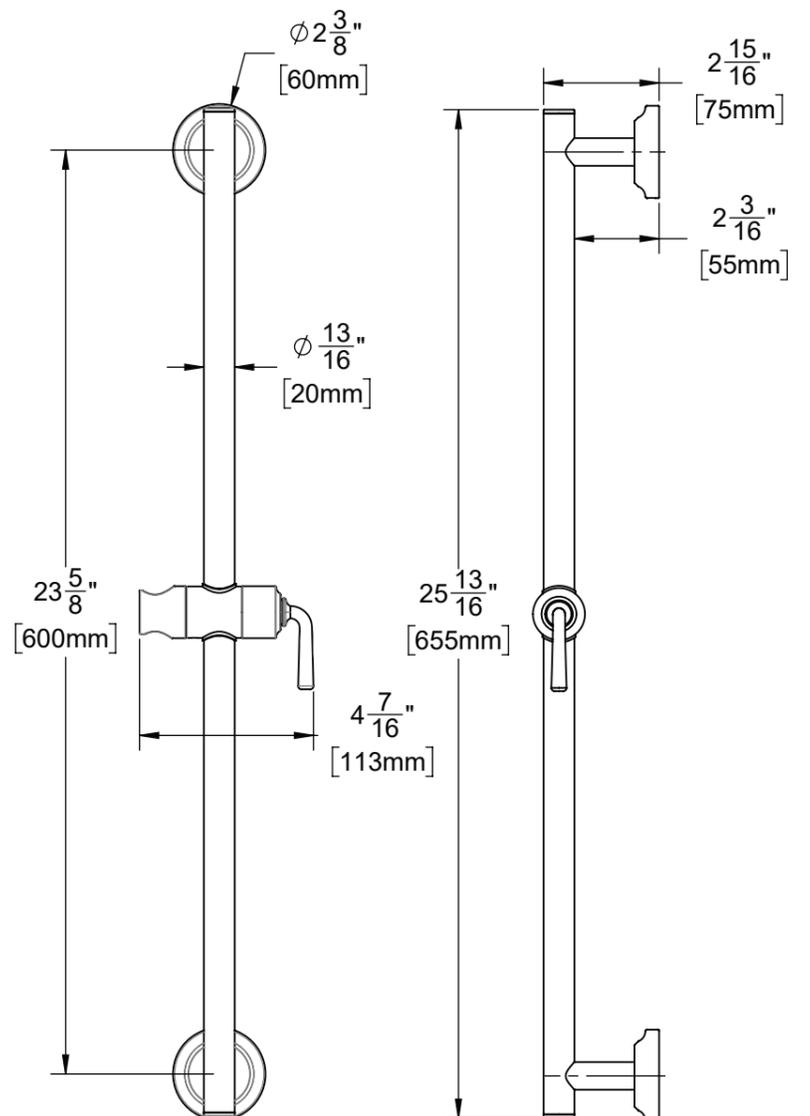

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. FOR ADA MOUNTING LOCATIONS, CONSULT ADAAG, ANSI A117.1, AND LOCAL/STATE REGULATIONS.