


HIKVISION

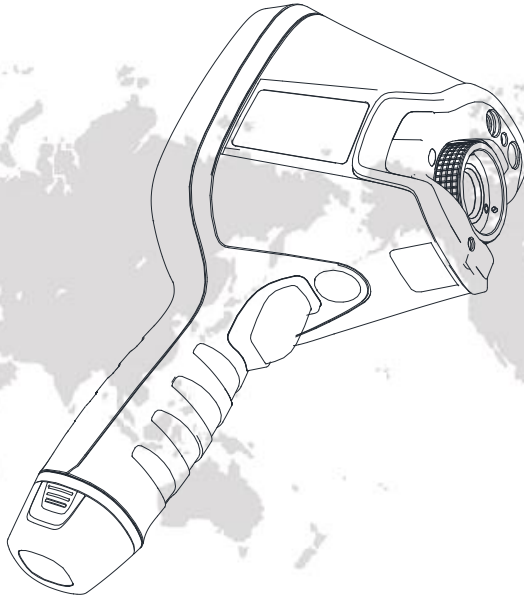

Handheld Thermography Camera

User Manual

UD05641B

0100001070612

COPYRIGHT © 2017 Hikvision. ALL RIGHTS RESERVED

User Manual

COPYRIGHT ©2017 Hangzhou Hikvision Digital Technology Co., Ltd.

ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to **Handheld Thermography Camera**.

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (<http://overseas.hikvision.com/en/>).

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive

2014/30/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at

designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information.

The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling,

return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into **Warnings** and **Cautions**:

Warnings: Neglecting any of the warnings may cause serious injury or death.

Cautions: Neglecting any of the cautions may cause injury or equipment damage.

Warnings Follow these safeguards to prevent serious injury or death.	Cautions Follow these precautions to prevent potential injury or material damage.



Warnings

- The device should be used in compliance with local laws and electrical safety regulations. Refer to the appropriate documentation for detailed information.
- The input voltage should conform to IEC60950-1 standard: SELV (Safety Extra Low Voltage) and the Limited Power Source (12 VDC). Refer to the appropriate documentation for detailed information.
- Make sure the plug is properly connected to the power socket.
- If smoke, odor, or noise arises from the device, immediately turn off the power, unplug the power cable, and contact the service center.
- The installer and user are responsible for password and security configuration and its settings.



Cautions

- Do not drop the device or subject it to physical shock.

- Wipe the device gently with a clean cloth and a small quantity of ethanol, if necessary.
- Do not aim the lens at the sun or any other bright light.
- When any laser equipment is in use, make sure that the device lens is not exposed to the laser beam, or it may burn out.
- Do not expose the device to high electromagnetic radiation or extremely hot, cold, dusty, or damp environments.
- Place the device in a dry and well-ventilated environment.
- Keep non-waterproof devices away from liquids.
- Keep the device in original or similar packaging while transporting it.
- A few device components (e.g., electrolytic capacitor) require regular replacement. The average lifespan varies, so periodic checking is recommended. Contact your dealer for details.
- Improper use or replacement of the battery may result in explosion hazard. Replace with the same or equivalent type only. Dispose of used batteries in conformance with the instructions provided by the battery manufacturer.
- Never attempt to disassemble the device.

Safety Instruction



CAUTION: THE PRODUCT IS BUILT IN A REPLACEABLE BATTERY. RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



Laser Light Supplement Warning

Warning: The laser radiation emitted from the device can cause eye injuries, burning of skin or inflammable substances. Before enabling the Light Supplement function, make sure no human or inflammable substances are in front of the laser lens.

Table of Contents

About This Manual	1
Overview of Contents	1
1 Overview	2
1.1 Box Content	2
1.1.1 Standard Box Contents	2
1.1.2 Optional Accessories	3
1.2 Product Introduction	3
1.3 Functions	3
2 Appearance	5
2.1 Dimensions	5
2.2 Components	5
3 Basic Functions	7
3.1 Charging the Device	7
3.2 Power On and Off	9
3.3 Interface Description	10
3.4 Focus Lens	11
3.5 File Exporting	12
3.6 (Optional) Assembling Lens	12
3.7 Operation	13
4 Main Configurations	14
4.1 Temperature Measurement	14
4.1.1 Thermometry Settings	14
4.1.2 Thermometry Rule Configuration	16
4.2 Network Configuration	19
4.2.1 Wi-Fi Settings	19
4.2.2 WLAN Hot Spot Settings	20
4.3 Storage Settings	20
4.3.1 Recording Settings	21
4.3.2 Capturing Settings	21
4.4 Image Configuration	22
4.4.1 Temperature Difference/Range	22
4.4.2 Palettes Settings	24
4.4.3 Thermal/Optical Configuration	25
4.5 Alarm Configuration	25
4.6 Other Configurations	27
4.6.1 Digital Zoom	27
4.6.2 LED Light Supplement	27
4.6.3 Laser Settings	27
4.6.4 Client Software	27

5	System Settings	29
5.1	Unit Settings.....	29
5.2	Display Settings	29
5.3	Device Initialization.....	29
5.4	Device Information.....	30
6	Appendix	31
6.1	Common Material Emissivity Reference.....	31
6.2	Frequently Asked Questions (FAQ).....	32

About This Manual

This document introduces the way to perform and maintain the **Handheld Thermography Camera**.

It covers what is Handheld Thermography Camera, how to set up alarm and rules for Handheld Thermography Camera, concrete functions and descriptions of the camera. It shows you how to record and capture with the camera, and export the files. It also advises basic handling methods of frequently happened errors.

Overview of Contents

This document contains the following chapters, and appendixes:

Chapter 1 Overview introduces the handheld Thermography camera, including the box content, product introduction, and major functions.

Chapter 2 Appearance shows the dimensions of the camera and explains the functions of all components.

Chapter 3 Basic Functions describes how to charge, power on and off the camera, focus the thermal lens, and export file. It also tells the lens assembling procedure and how to operate it with touch-screen and by buttons.

Chapter 4 Main Configurations shows you the way to measure temperature and set temperature alarms. Besides, it describes how to record videos and capture snapshots. You can do Wi-Fi settings, palettes selection, temperature section settings, digital zoom, LED light control, and remote control via client software according to this chapter.

Chapter 5 System Settings indicates the unit settings, display settings, and device initialization, etc.


Chapter 6 Appendix lists the emissivity value of common materials for reference and the frequently asked questions.

1 Overview

1.1 Box Content

See the table below for the box content.


1.1.1 Standard Box Contents

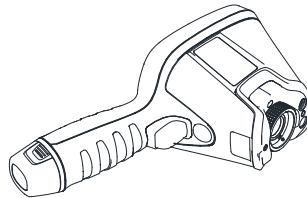


Handheld Thermography Camera (×1)




Charging Base (×1)

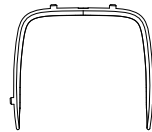

Sun Shield (×1)

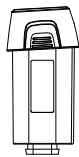


Battery (×1)

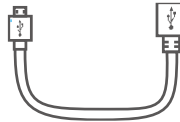


USB Cable (×1)



Tripod Adapter (×1)



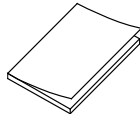


User Manual (×1)

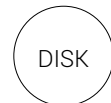


Disk (×1)

1.1.2 Optional Accessories

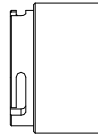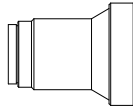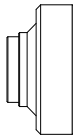

Lens (x1)

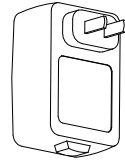

Power Adapter (x1)

1.2 Product Introduction

The handheld Thermography camera is a camera with both optical images and thermal images. It can do thermometry, video recording, snapshot capturing, alarm, and it can connect to Wi-Fi. The built-in high-sensitivity IR detector and high-performance sensor detects the variation of temperature and measure the real-time temperature.

The Picture-in-picture technique of the Thermography camera and the fusion of optical view and thermal view, enhances the details of the images display. It supports multiple palettes and alarm types. When the detected temperature in the scene does not match with the alarm rules, the device alarms by color of the palette mode automatically. It helps the users to find the risky part and lower your property loss. The device supports Wi-Fi connection, live viewing, recording, and capturing, etc.

The handheld Thermography camera is easy to use, and adopts ergonomic design. It is widely applied to substations, electricity prevention detection of companies, and reconnaissance survey of construction field.

1.3 Functions

Thermometry

Device detects the real-time temperature, and display it on the screen.

Storage

Device is equipped with built-in memory module to store recorded videos, captured snapshots, and important data.

Fusion

Device can display fusion of thermal view and optical view.

Palette and Alarm

Device supports multiple palettes, and you can set the palette mode according to the alarm function

Wi-Fi Function

Device can be connected to Wi-Fi. You can connect the device via Wi-Fi hot spot, and you can view live view, capture, and recording, etc.

Digital Zoom

Device supports 2× and 4× digital zoom.

LED Light:


LED light supplement makes the device a torch in required scenarios.

Laser Light Supplement:


Long-distance laser light supplement.


2 Appearance

2.1 Dimensions

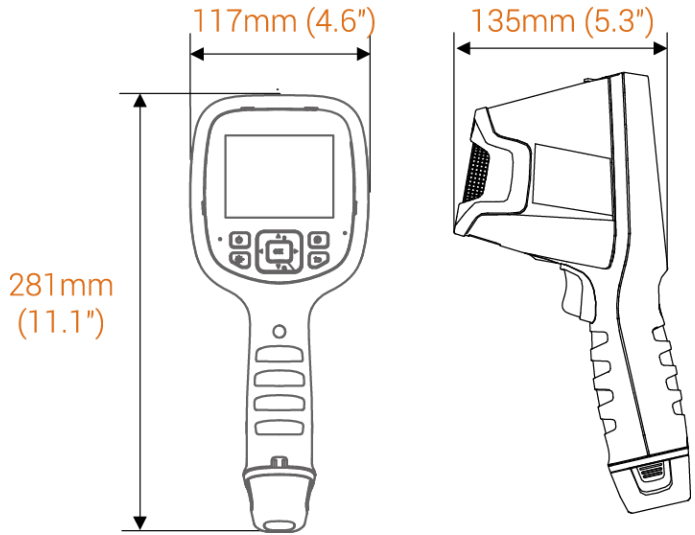

2.2 Components

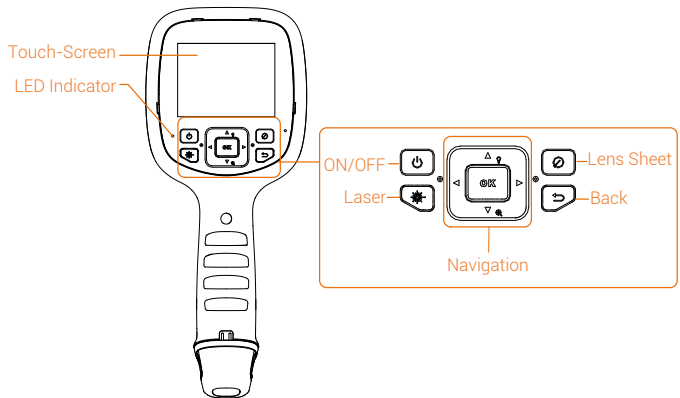

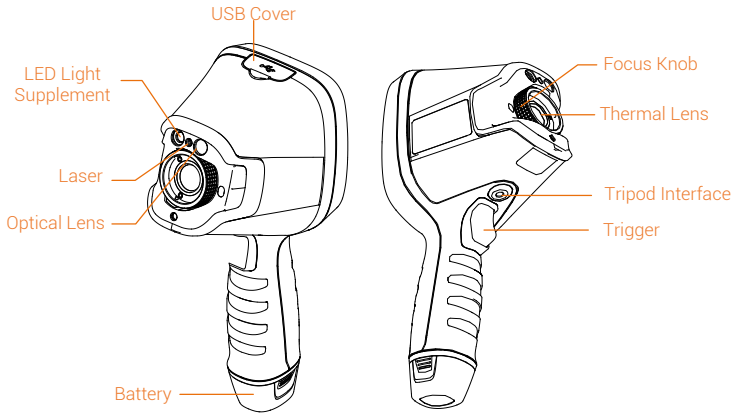

Laser Button	Hold the Laser button to turn on laser, and release the button to turn off laser.
Navigation Button	Menu Button: <ul style="list-style-type: none"> - Press the ∇, Δ, \triangleright, and \triangleleft button to select parameters. - Press the OK button to confirm. Non-Menu Button: <ul style="list-style-type: none"> - Press the Δ button to turn on/off the LED light supplement. - Hold the ∇ button to digital zoom.
Lens Sheet Button	Cover the lens to perform the correction.
Back Button	Exit the menu or return to previous menu.
Focus Knob	Adjust lens focal length, refer to 3.4 Focus Lens .
Trigger	Pull the trigger to record videos or capture snapshots.
USB Cover	Connect the camera to your PC via USB cable to export files.



Warning:

The laser radiation emitted from the device can cause eye injuries, burning of skin or inflammable substances. Before enabling the Light Supplement function, make sure no human or inflammable substances are in front of the laser lens.

3 Basic Functions


3.1 Charging the Device

Note: Please charge the camera with the USB cable and power adapter supplied by the manufacturer (or according to the input voltage from the specifications).




Steps:


1. Hold the camera, and press both battery lock catches of the Thermography camera, see figure below.

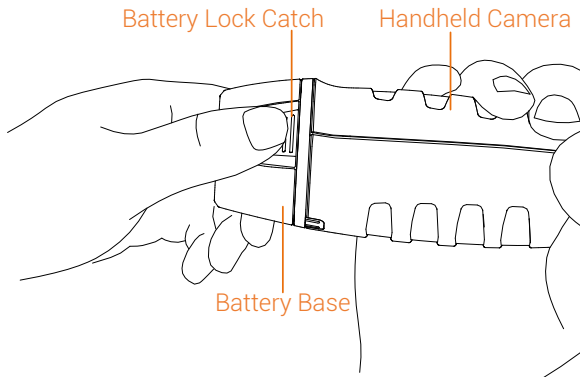


2. Hold the lock catches, and draw the battery base to take out the battery, see figure below.

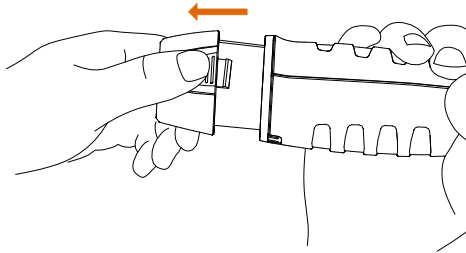

3. Insert the battery into the charging base, see figure below.

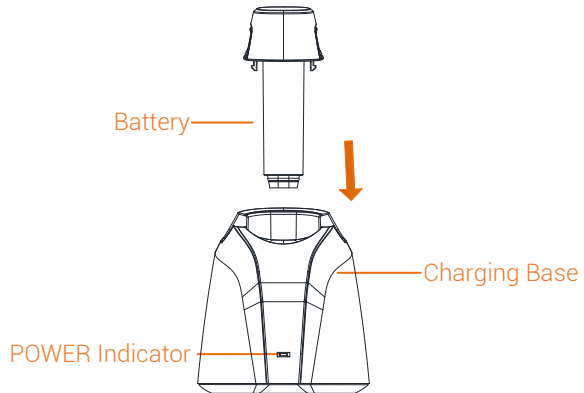

4. When the battery is fully charged, draw the battery from the charging base.
5. Align the ribbed piece on battery with the notch of the camera, and insert the battery into the camera, see figure below.

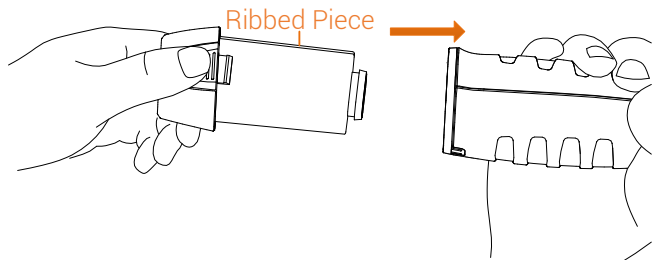


Note: When the camera is turned on, the OSD (on-screen display) shows the battery status. When you see the low battery status, charge the camera and ensure it's working properly.


POWER Indicator Status

- | | |
|---------------|------------------------------|
| ● Solid Red | Battery is properly charged. |
| ● Flash Red | Error occurred. |
| ● Solid Green | Battery is fully charged. |
| ● Off | Battery is not charged. |


3.2 Power On and Off

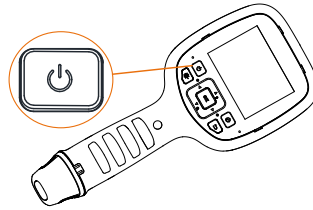

Power On


Remove the lens cover, and hold the  button for over three seconds to turn on the device.

Power Off







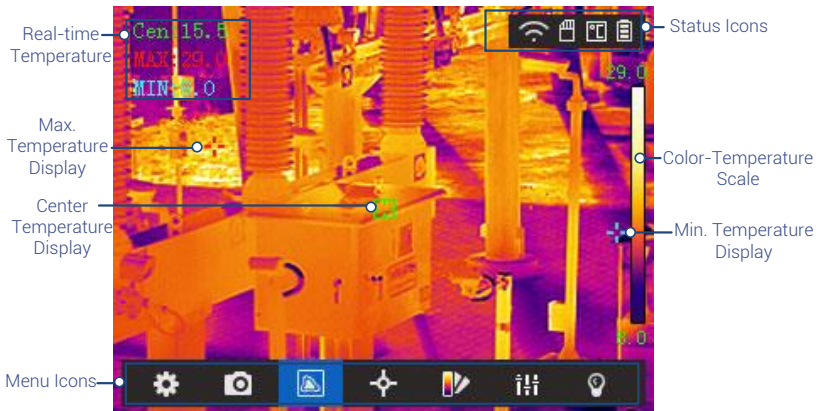




When the monocular is turned on, hold the  button for three seconds to power off the device.

3.3 Interface Description







In the observation interface, tap the screen or press OK button to show the menu bar, see figure below.



For the descriptions of the menu buttons, see the table below.

	Settings	In the Local Settings () interface, you can set basic parameters, including thermometry units and range, fuse settings, and select the lens.
	Capture/Record	You can set the device to capture/record mode.
	Thermal/Optical	In the Thermal/Optical Settings () interface, you can set the display to thermal/optical/PIP/combined (fuse) modes.
	Thermometry	In the Thermometry Rule Configuration () mode, you can measure the real-time temperature by rules.
	Palettes	You can set the palettes of the display and the device displays accordingly.
	Image	In the Temperature Difference/Range Settings () interface,
	LED Light	LED light supplement makes the device a torch in required scenarios.

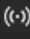For the descriptions of the status icons, see the table below.

	USB	This icon shows whether the device is connected to PC via USB interface.
	Wi-Fi	This icon shows whether the device is connected to Wi-Fi or not.
	Hot Spot	This icon show whether the device hot spot is enabled or not.
	SD Card	This icons shows that the device memory card has short free space.
	Battery	This icon shows the battery status of the device.
	Unit	This icon shows which unit the device is using now: °C, °F, or Kelvin.


3.4 Focus Lens

Before you start:

Adjust the lens focal length properly before you set any other configurations, or it may affect the image display and temperature accuracy.

Steps:

1. Power on the handheld Thermography camera.
2. Aim the camera lens to the appropriate scene.
3. Adjust the focus knob clockwise or anticlockwise, see figure below.

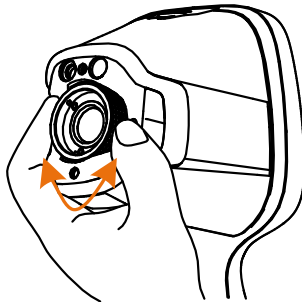



Do NOT touch the lens to avoid affecting the display effect.

3.5 File Exporting

Purpose:

Connect the handheld Thermography camera to your PC with USB cable, you can export the recorded videos and captured snapshots.

Steps:

1. Open the USB cover.
2. Connect the camera to your PC with USB cable and open the detected disk.
3. Enter USB > picture and USB > record to view the videos and snapshots.
 - Select and copy the videos to PC and play the file with the player.
 - Select and copy the snapshots to PC and view the files.
4. Disconnect the device from your PC.

Note: For the first time connection, the driver will be installed automatically.

3.6 (Optional) Assembling Lens

Before you start:

Three thermal lens (not supplied) are optional for the Thermography camera. For different scene, purchase the lens accordingly.

Steps:

1. Select the proper lens.
2. Install the lens onto the camera.
3. Turn on the camera and go to Local Settings > Lens Selection.
4. Set the lens parameters. For 2× lens, set it to 2×, and for 1/2× lens, set it to 1/2×, etc.

3.7 Operation

The camera supports both touch-screen control and button control.


Touch-screen control

Tap on the screen to set parameters and configurations.



Button control

Press the navigation buttons to set parameters and configurations.

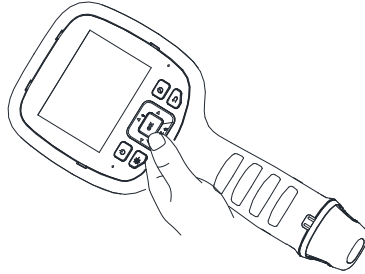

- Press the Δ , ∇ , \triangleright , and \triangleleft button to move the cursor up/down/left/right.
- Press the **OK** button to confirm.

4 Main Configurations

4.1 Temperature Measurement

Before you start:

Go to **Local Settings > Device Settings > Unit Settings** to set the temperature unit as K/°C/°F. Refer to *5.1 Unit Settings* for details.

Purpose:

The thermometry (temperature measurement) function provides the real-time temperature of the scene and display it on the left of your screen. The thermometry function is turned on by default.

4.1.1 Thermometry Settings


Purpose:

The thermometry parameters affect the accuracy of temperature measurement.


Steps:

1. Select the **Local Settings** (⚙️) from the main menu.

- In the **Local Settings** interface, select **Thermometry Parameters**.

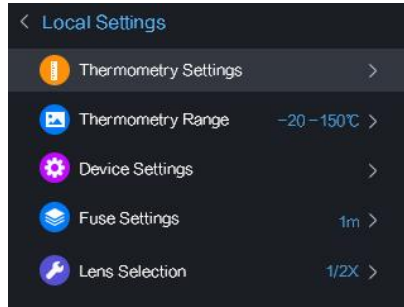

- Set the **Emissivity**, **Distance**, **Environment Temperature**, **Reflection Temperature**, **Relative Humidity**, and **Temperature Bias**.

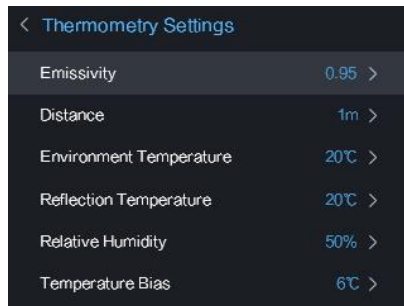

- **Emissivity:**

Set the emissivity of your target as the effectiveness in emitting energy as thermal radiation.

Note: Refer to the *6.1 Common Material Emissivity Reference* for Emissivity values.

- **Distance (m/inch):**

The straight-line distance between the target and the device.

- **Environment Temperature:**

The average temperature of the environment.

- **Reflection Temperature:**

If any object (not the target) of high temperature is in the scene, and the target emissivity is low, set the reflection temperature as the high temperature to correct the thermometry effect.

● **Relative Humidity:**

Set the relative humidity of current environment.

● **Temperature Bias:**

The device may have slight deviation of temperature measuring, you can set the **Temperature Bias** to correct it.

- 2) Return to previous menu.
3. Set the **Thermometry Range**.



4. Return to previous menu to save the settings.


4.1.2 Thermometry Rule Configuration

Purpose:

The thermometry parameters affect the accuracy of temperature measurement.

Steps:

1. Select the **Thermometry Rule Configuration** (🔧) from the main menu.
2. Set the point/line/frame rules, see figure below.

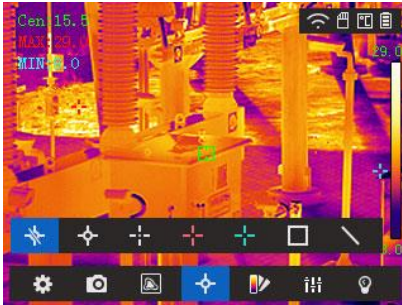


For Point Rule:

You can set Center Point Thermometry, High-Temperature Point, Low-Temperature Point, and Custom Point Thermometry.

- **Center Point Thermometry**

System detects the temperature of the center.


Step:

Tap  and the temperature (center of view) displays **Cen: XX**.

- **High-Temperature Point** 

System locates the point of the highest temperature.


Step:

Tap  and the temperature (Highest temperature of view) displays **Max: XX**.

- **Low-Temperature Point**

System locates the point of the lowest temperature.


Step:

Tap  and the temperature (Lowest temperature of view) displays **Min: XX**.

- **Custom Point Thermometry** 

System detects the temperature of a custom point.

Steps:




1) Tap  on the interface.

- 2) Tap on the touch-screen to select a point, or move the point with the navigation buttons.
- 3) Press **OK** button to confirm. The temperature of custom point (e.g. P1) displays **P1 Max: XX**.
- 4) Repeat step 1 to 3 to set other custom points.

Note: At most ten custom points supported.

For Frame Rule:


Steps:



- 1) Tap  on the interface.
- 2) Tap on the touch-screen to generate a default frame.
- 3) Press the Δ , ∇ , \triangleright , and \triangleleft button to move the frame up/down/left/right.
- 4) Press  to enlarge the frame, and press  to contract the frame.
- 5) Press **OK** button to confirm. The Max. Temperature, Low Temperature, and Average Temperature of frame (e.g. S1) displays **S1 Max: XX Min: XX Avg: XX**.
- 6) Repeat step 1) to 5) to set other frames.

Note: At most ten frames supported.

For Line Rule:

Steps:


- 1) Tap  on the interface.
- 2) Tap on the touch-screen to generate a default line.
- 3) Tap a point as one end of line, and tap another point as the other end of line.

- 4) Press  to extend the line, and press  to shorten the line.
- 5) Press **OK** button to confirm. The Max. Temperature, Low Temperature, and Average Temperature of line (e.g. L1) displays **L1 Max: XX**
Min: XX Avg: XX. The real-time temperature trend chart will display.

Note: Only one line supported.

Clear Rules:

Step:

Tap  and press **OK** to clear all temperature rules.

4.2 Network Configuration



The handheld Thermography camera supports both Wi-Fi connection and WLAN hot spot.

4.2.1 Wi-Fi Settings

Purpose:

Connect the camera to Wi-Fi network, and you can control the camera via mobile client, etc.

Steps:

1. Select the **Local Settings**  from the main menu.
2. Go to **Local Settings > Device Settings > Wi-Fi Settings**.
3. Tap on  **Connect Wi-Fi** to enable Wi-Fi, and the searched Wi-Fi will be listed below.
4. Select your Wi-Fi and enter password to show the keypad interface.

Note: Do NOT tap **return** or **space**, or the password may be incorrect.
5. Tap **Close** to hide the keypad.
6. Tap **OK** to confirm.



4.2.2 WLAN Hot Spot Settings

Purpose:

Set the handheld Thermography camera as a Wi-Fi AP, and connect your phone to the Wi-Fi. You can set the parameters of the camera via client software.

Steps:

1. Select the **Local Settings** (⚙️) from the main menu.
2. Go to **Local Settings > Device Settings > Wi-Fi Settings**.
3. Tap on **WLAN Hot Spot** to enable the WLAN hot spot function.
4. Tap **Set WLAN Hot Spot** to set the WLAN hot spot. The hot spot SSID displays automatically.
5. Edit the password and show the keypad interface.
Note: Do NOT tap **return** or **space**, or the password may be incorrect.
6. Tap **Close** to hide the keypad.

Result:

Connect your phone to the Wi-Fi. Refer to 4.6.4 *Client Software*.

4.3 Storage Settings

Insert memory card into the camera, and you can record videos, capture snapshots, and mark and save important data.


Notes:

- Thermography camera does not support capturing or recording when the menu is shown.
- When the Thermography camera is connected to your PC, it does not support capturing or recording.

4.3.1 Recording Settings

Steps:

1. Select the **Recording Settings** (📹) from the main menu, see figure below.

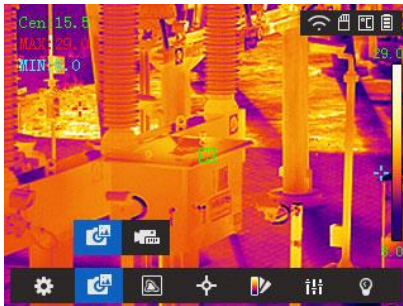

2. Press **OK** to confirm.
3. Press **ESC** to exit the setting interface.
4. In the live view interface, pull the trigger to start recording. The recording icon and count down number display in the interface.
5. When you finish, pull the trigger again to stop recording. The recording video will be saved automatically and exit.





Note: You can also press **OK** or **ESC** to stop recording.


6. Refer to *3.5 File Exporting* to export the videos.

4.3.2 Capturing Settings

Steps:

1. Select the **Capturing Settings** (📷) from the main menu.
2. Press **OK** to confirm.
3. Press **ESC** to exit the setting interface.

4. In the live view interface, pull the trigger to capture snapshot. The live view freezes and device displays the snapshot editing interface.
 - 1) Set text remark or voice remark.
 - Tap  to add text remarks. Tap the screen to show the keypad interface, enter the comment and confirm.
 - Tap  to add voice remarks. Hold the **OK** button to start recording and release the button to stop recording.
 - 2) Add thermometry data.
 - Tap  to add thermometry rules, refer to 4.1.2 *Thermometry Rule Configuration* for details.
 - 3) Tap  to save the snapshot.

Note: You can also press  to quit the saving.
5. Refer to 3.5 *File Exporting* to export the snapshots.

4.4 Image Configuration


Set the image temperature difference and temperature range of the scene.


4.4.1 Temperature Difference/Range

Purpose:

Set a temperature section and the palette only works for targets within the temperature section. You can adjust the temperature range and set the temperature difference).

Steps:

1. Select the **Temperature Difference/Range Settings**  from the main menu.

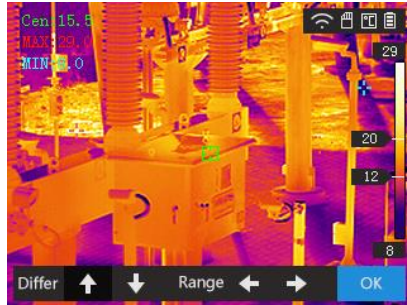

2. Select **Auto** (📊) adjustment or **Manual** (👤).

For Auto Adjustment:

- 1) Select **Auto** (📊).
- 2) Press **OK** to confirm. The device adjusts temperature difference and temperature range parameters automatically.

For Manual Adjustment:

- 1) Select **Manual** (👤).
 - 2) Press **OK** to confirm. The color-temperature bar displays.
 - 3) Press \triangleright to enlarge the temperature section range (e.g. temperature range changes from **20° C - 40° C** to **19° C - 41° C**), or press \triangleleft to narrow the temperature range.
 - 4) Press \triangle to move the temperature section higher (e.g. temperature range changes from **20° C - 40° C** to **30° C - 50° C**), or press ∇ to lower the temperature section.
3. Press (👉) to exit the setting interface.


4.4.2 Palettes Settings

Purpose:

The palettes allow you to select the desired colors. white hot, black hot, fusion, rainbow, ironbow, red hot, and dark blue are selectable.

Steps:

1. Select the **Palettes Settings** (🎨) from the main menu.

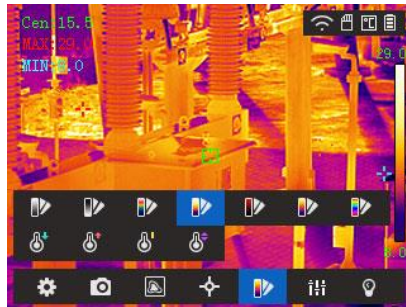

2. Tap on the icons to select a palette type.

	White Hot: The hot part is light-colored in view.
	Black Hot: The hot part is black-colored in view.
	Rainbow The target displays multiple colors, it's suitable for scene without obvious temperature difference.
	Ironbow, The target is colored as heated iron.
	Red Hot: The hot part is red-colored in view.
	Fusion The hot part is yellow-colored and the cold part is purple-colored in view.
	Rain The hot part in the image are colored, and the else is blue.

3. Press to exit the setting interface.


4.4.3 Thermal/Optical Configuration

Purpose:





You can set the thermal/optical view of the device. The palettes allow you to select the desired colors. white hot, black hot, fusion, rainbow, ironbow, red hot, and dark blue are selectable.

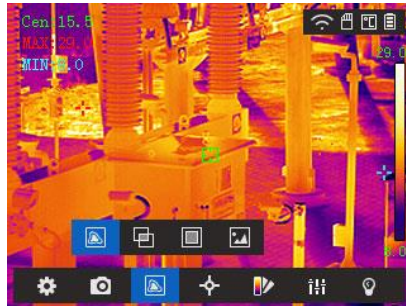Steps:

1. Select the **Thermal/Optical Settings** (🔧) from the main menu.



2. Tap on the icons to select a view mode.

	Thermal	In thermal mode, the device displays the thermal view.
	Combined	In combined mode, the device displays the combined view of thermal channel and optical channel.
	PIP Mode	In PIP (Picture in Picture) mode, the device displays thermal view inside the optical view.
	Optical	In optical mode, the device displays the optical view.

3. Press  to exit the setting interface.

4.5 Alarm Configuration

Before you start:


Go to **Palettes Settings** (🎨) to set the palette.

Purpose:

Set the alarm rules and the device will alarm when the temperature triggers the rule.

Steps:

1. Go to **Palettes Settings** (🎨) from the main menu.

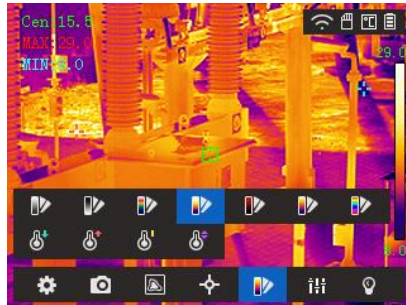

2. Tap on the icons to select an alarm rule type.
3. (Optional) Press the Δ and ∇ to select between upper limit and lower limit.
4. Press the \triangleleft and \triangleright to adjust the rule temperature.

	Above Alarm	Set the alarm temperature, and the device alarms when target temperature is higher than rule temperature.
	Below Alarm	Set the alarm temperature, and the device alarms when target temperature is lower than rule temperature.
	Interval Alarm	Set the alarm temperature section (e.g., 90°C - 150°C), when target temperature is within the section (e.g., 100°C), the device alarms.
	Insulation Alarm	Set the alarm temperature section (e.g., 90°C - 120°C), when target temperature is without the section (e.g., 70 °C or 125°C), the device alarms.

5. Press (👉) to exit the setting interface.

4.6 Other Configurations

You can set the digital zoom, control the LED indicator and laser, and control the device via client software.

4.6.1 Digital Zoom

Purpose:

Digital zoom in the view, and you can view the target or scene in larger size.

Step:

In the live view interface, press the ▾ button to adjust the digital zoom to 1×, 2×, or 4×.

4.6.2 LED Light Supplement

In the live view interface, select the **LED Light Supplement** (📷) from the main menu, or press the ▲ button to enable/disable the LED light.

4.6.3 Laser Settings

In the live view interface, hold the 📷 button to enable/disable the laser light.



Warning:

The laser radiation emitted from the device can cause eye injuries, burning of skin or inflammable substances. Before enabling the Light Supplement function, make sure no human or inflammable substances are in front of the laser lens.

4.6.4 Client Software

- Task 1. Connect the Camera to Wi-Fi

Purpose:

Connect the camera to Wi-Fi network, and you can control the camera via mobile client, etc.

Steps:

1. Connect your device to Wi-Fi network, refer to 4.2.1 *Wi-Fi Settings*.
2. Download and install the iVMS-4500 client software to your phone.
3. Launch the app.
4. Follow the startup wizard to create, and register an account.
5. Add the handheld Thermography camera to online devices.

Result:

View the live view, capture snapshots, and record videos via the client.

● **Task 2. Set the Camera as Wi-Fi AP**

Purpose:

Set the camera as a Wi-Fi AP, and connect your phone to the Wi-Fi. You can set the parameters of the camera via client software.

Steps:

1. Set your device as Wi-Fi hot spot, refer to 4.2.2 *WLAN Hot Spot Settings*.
2. Download and install the iVMS-4500 client software to your phone.
3. Launch the app.
4. Follow the startup wizard to create, and register an account.
5. Connect your phone to the WLAN Hot Spot of the camera.
6. Select Wi-Fi configuration in the software, enter the serial number of camera to add the device. Refer to the manual of client software for details

Result:

View the live view, capture snapshots, and record videos via the client.

5 System Settings

In the system settings interface, you can set the screen brightness, CVBS output, device initialization parameters, and view the device information.

5.1 Unit Settings

Go to **Local Settings** (🔧) > **Device Settings** > **Unit Settings**

For Temperature Unit:

Set the temperature unit as Degree Celsius (°C)/Degree Fahrenheit (°F)/Degree Kelvin (K).

For Distance Unit:

Set the distance unit as Meter (m)/Inch (").

5.2 Display Settings

Go to **Local Settings** (🔧) > **Device Settings** > **Display Settings**

For Screen Brightness:

Set the screen brightness as Low/Medium/High.

For CVBS Output:

Enable/disable the CVBS output.


Note: Connect the camera to external CVBS display unit before you enable the **CVBS Output** function.

5.3 Device Initialization

Go to **Local Settings** (🔧) > **Device Settings** > **Device Initialize** to initialize the device and restore default settings of Measurement

Tool, Device Storage, and Restore Default Settings (Restore all parameters).

5.4 Device Information

Go to **Local Settings** () > **Device Settings** > **Device Information** to view the device information: Model, Version No., FPGA Version No., Serial No., Memory Space (Total), and Free Space.

6 Appendix

6.1 Common Material Emissivity Reference

Material	Temperature (°C/°F)	Emissivity
Water	0 to 100/32 to 212	0.95~0.98
Soil (Dry)	20/68	0.92
Soil (Moist)	20/68	0.95
Wood	17/62.6	0.962
Sand	20/68	0.9
Sandstone	19/66.2	0.909~0.935
PVC (Polyvinyl Chloride)	70/158	0.93
Pitch	20/68	0.967
Paint	70/158	0.92~0.94
Wallpaper	20/68	0.85~0.90
Cloth	20/68	0.98
Concrete	20/68	0.92
Pavement	5/41	0.974
Smooth Porcelain	20/68	0.92
Ceramic	17/62.6	0.94
Plaster	17/62.6	0.86
Brick	35/95	0.94
Ebonite	0 to 100/32 to 212	0.89
Carbon	20 to 400/68 to 752	0.95~0.97
Granite (Rough)	20/68	0.879
CRS (Cold Rolled Steel)	70/158	0.09
Cupric Oxide	50/122	0.88
Copper	20/68	0.07
Copper Oxide	50/122	0.6~0.7

6.2 Frequently Asked Questions (FAQ)

Q: The charge indicator flashes red.

A: Examine the items below.

1. Examine whether the device is charged with the standard power adapter.
2. Plug and unplug the battery once.
3. Make sure the charging temperature is above 0°C (32°F).

Q: Device image is fuzzy.

A: Refer to *3.4 Focus Lens* to adjust the focus knob clockwise or anticlockwise.

Q: Wi-Fi is not found.

A: Examine whether the Wi-Fi function is turned on. If not, refer to *4.2.1 Wi-Fi* to turn on Wi-Fi.

Q: Capturing or recording fails.

A: Examine the items below:

1. Whether the device is connected to your PC and disabled the capturing and recording.
2. Whether the storage space is full.
3. Whether the device is low-battery.

Q: The PC cannot identify the camera.

A: Examine whether the device is connected to your PC with standard USB cable.



First Choice for Security Professionals