

SE-237, SE-238

Installation, Maintenance, Operation Instructions

SAFE-T-ZONE® EMERGENCY RECESSED WALL SHOWER

DESCRIPTION

Emergency deluge shower unit with wall recessed activator. Shower is supplied with a 1" NPTF stay-open full flow ball valve that is activated by pull handle that is recessed inside wall cabinet.

SE-237 SPECIFICATIONS


SHOWER HEAD: 10" DIAMETER STAINLESS STEEL FLANGED. SHOWER HEAD DESIGNED TO MOUNT FLUSH WITH CEILING.
CABINET: 18 GAUGE (.048 THK.) STAINLESS STEEL.
VALVE: 1" NPT FEMALE BRASS, CHROME-PLATED. FULL FLOW STAY-OPEN BALL VALVE.
ACTIVATOR: STAINLESS STEEL LEVER WITH BLACK PLASTIC ROTATING HANDLE.
PIPING: 1" IPS STEEL PIPING & UNIONS.
INLET: 1" NPTF.
SHIPPING WEIGHT: 15 LB.
EMERGENCY SIGN: 7-7/8" X 12" PLASTIC WALL SIGN.

SE-238 SPECIFICATIONS

SHOWER HEAD: 8" DIA. STAINLESS STEEL. SHOWER HEAD DESIGNED TO DROP DOWN THROUGH CEILING.
CABINET: 18 GAUGE (.048 THK.) STAINLESS STEEL.
VALVE: 1" NPT FEMALE BRASS, CHROME-PLATED. FULL FLOW STAY-OPEN BALL VALVE.
ACTIVATOR: STAINLESS STEEL LEVER WITH BLACK PLASTIC ROTATING HANDLE.
PIPING: 1" IPS STEEL PIPING & UNIONS.
INLET: 1" NPTF.
FLOW CONTROL: 20 GPM.
SHIPPING WEIGHT: 15 LB.
EMERGENCY SIGN: 7-7/8" X 12" PLASTIC WALL SIGN.


INSTALLATION

1. At desired location of shower. Cut 9-1/4" X 17-1/16" rough in opening in wall as shown in fig. 1. Please make note of piping & valve orientation as seen in fig. 2 before moving forward with any piping installation.

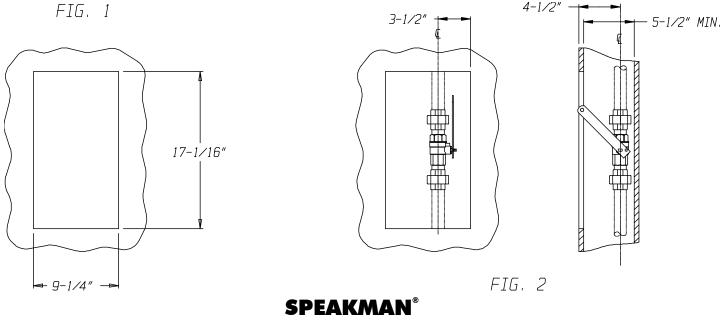

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747 05/03/16 speakman.com 92-SE-237-238-01

- 2. Be sure that all water supplies are shut off before beginning any piping installation.
- 3. Install supply piping (supplied by others) and valve & union assembly (supplied) as shown in fig. 2. Make sure that before unions are tightened for the last time, that the stainless steel lever handle is as close to perpendicular to the finished wall as possible. Use pipe sealant on all pipe joint connections (not union connections).
- 4. Once piping is complete, and it is oriented correctly per the rough in dimensions specified. Position the stainless steel cabinets in wall as shown in fig. 3, making sure the lever handle is in the half-open (horizontal) position. This will allow the handle to fit through the slot on the cover of the cabinet.

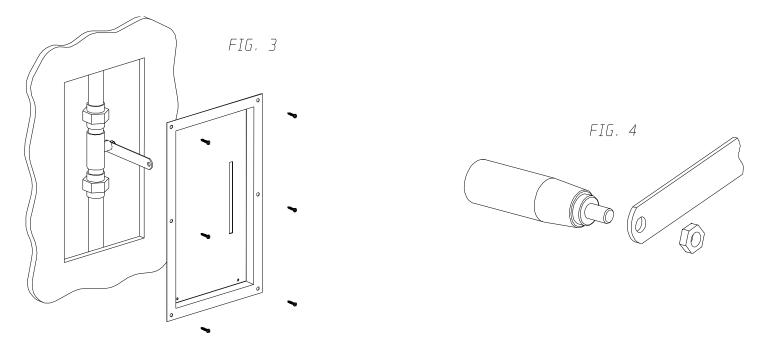


- 5. At this point be sure to move the lever handle to the on & off positions to make sure it travels uninterrupted.
 - If handle moves freely inside slot in cover. Secure cabinet to wall using supplied wall anchors.
 - If handle hits or drags in slot. Loosen union connections and adjust location of valve until it is correct.
- 6. Assemble black plastic rotating handle to stainless steel lever handle as shown in fig. 4.

SPEAKMAN[®]

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747 05/03/16 speakman.com 92-SE-237-238-01

7. Assemble showerhead to 1" pipe as shown in fig. 5. *Make note that ANSI specifies that showerhead must be 82"-96" from the surface on which the user stands.*

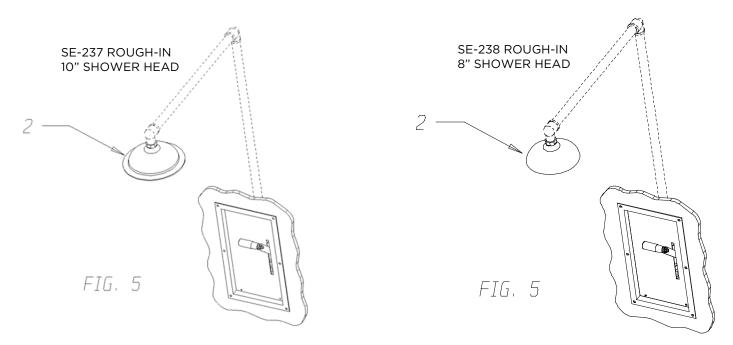

- 8. Install sign.
- 9. Turn water supply on.
- 10. Test unit to verify performance.

OPERATION

The *shower* is activated by pulling/pushing the recessed handle in the downward direction to the full open position. Once the valve is activated the head will continue to discharge water until the valve is manually closed. The unit is shut off by pulling/pushing the recessed handle in the upward direction to the complete off position.

TESTING PROGRAM

The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspector's initials should be noted.

MAINTENANCE

Should you need to repair components behind the wall (valve, lever handle, etc.), the access panel is removed by following these instructions.

- 1. Shut off water supply before doing any repair to this unit.
- 2. Position lever handle in the half-open (horizontal) position, and remove black plastic rotating handle from lever handle.
- 3. Remove the (4) screws that attach the cover panel to the cabinet, and slide the cover panel off. This will give you full access to valve and lever handle inside the wall.
- 4. Once repair is made follow above instructions in reverse to reassemble handle and panel cover. *Be sure to turn water supply back on once repairs are final.* Reference additional technical sheets (supplied) for information on the SE-810 shower head, SE-820 shower head and SE-830 shower head.

SPEAKMAN[®]

WARNING: Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

REPLACEMENT/REPAIR PARTS

| ITEM | PART/GROUP # | DESCRIPTION | |
|------|--------------|---------------------------------|--|
| 1 | RPG20-1985 | 1" Ball Valve (Shown in Fig. 2) | |
| 2A | SE-830 | 10" Brass Shower head | |
| 2B | SE-820 | 8" Stainless Steel Shower Head | |

FLOW DATA

SHOWER:

| FLOW PRESSURE PSI (BAR) | 20 (1.38) | 60 (4.14) |
|-------------------------|-----------|-----------|
| FLOW RATE GPM (LPM) | 20 (75) | 25 (94) |

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 20 PSI and a maximum static pressure of 80 PSI. Note: All units meet existing ANSI Z358.1 Standards and OSHA Rules. Product improvements may cause specification and dimensional changes without notice.

SPEAKMAN[®]

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747 05/03/16 speakman.com 92-SE-237-238-01