




NP5880

PREMIUM COVER LIFT

Assembly, Installation, and Use Instructions

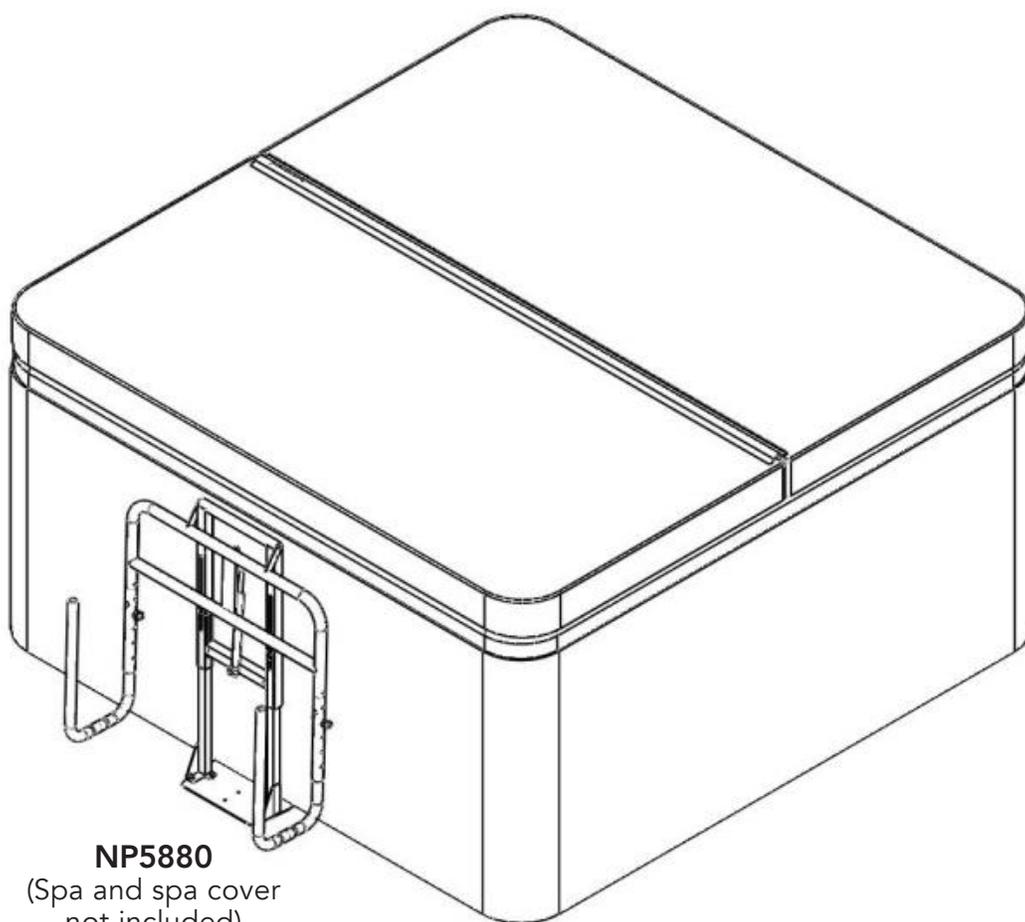

NP5880
(Spa and spa cover
not included)



Questions, problems, missing parts?

Before returning to your retailer, call our Consumer Hotline at 1-800-759-0977, Monday – Friday, 8 a.m. – 5 p.m. (CST).

THANK YOU!

Thank you for purchasing this product! We work around the clock and around the globe to ensure that our products maintain the highest possible quality. However, in the rare case of issues during assembly or use of this product, please contact our **Consumer Hotline** at **1-800-759-0977** for immediate assistance before contacting your retailer. Please read the warranty information at the end of this User Manual for further details.

SAFETY INFORMATION


Please read and understand this entire manual before attempting to assemble, install, or operate the product.



ASSEMBLY TIPS


- Layout all the parts and verify that they are all present according to the Parts and Hardware list.
- Some figures or drawings may not look exactly like the product.
- Hand-tighten all bolts in place and then tighten with a wrench once fully assembled.

PARTS AND HARDWARE

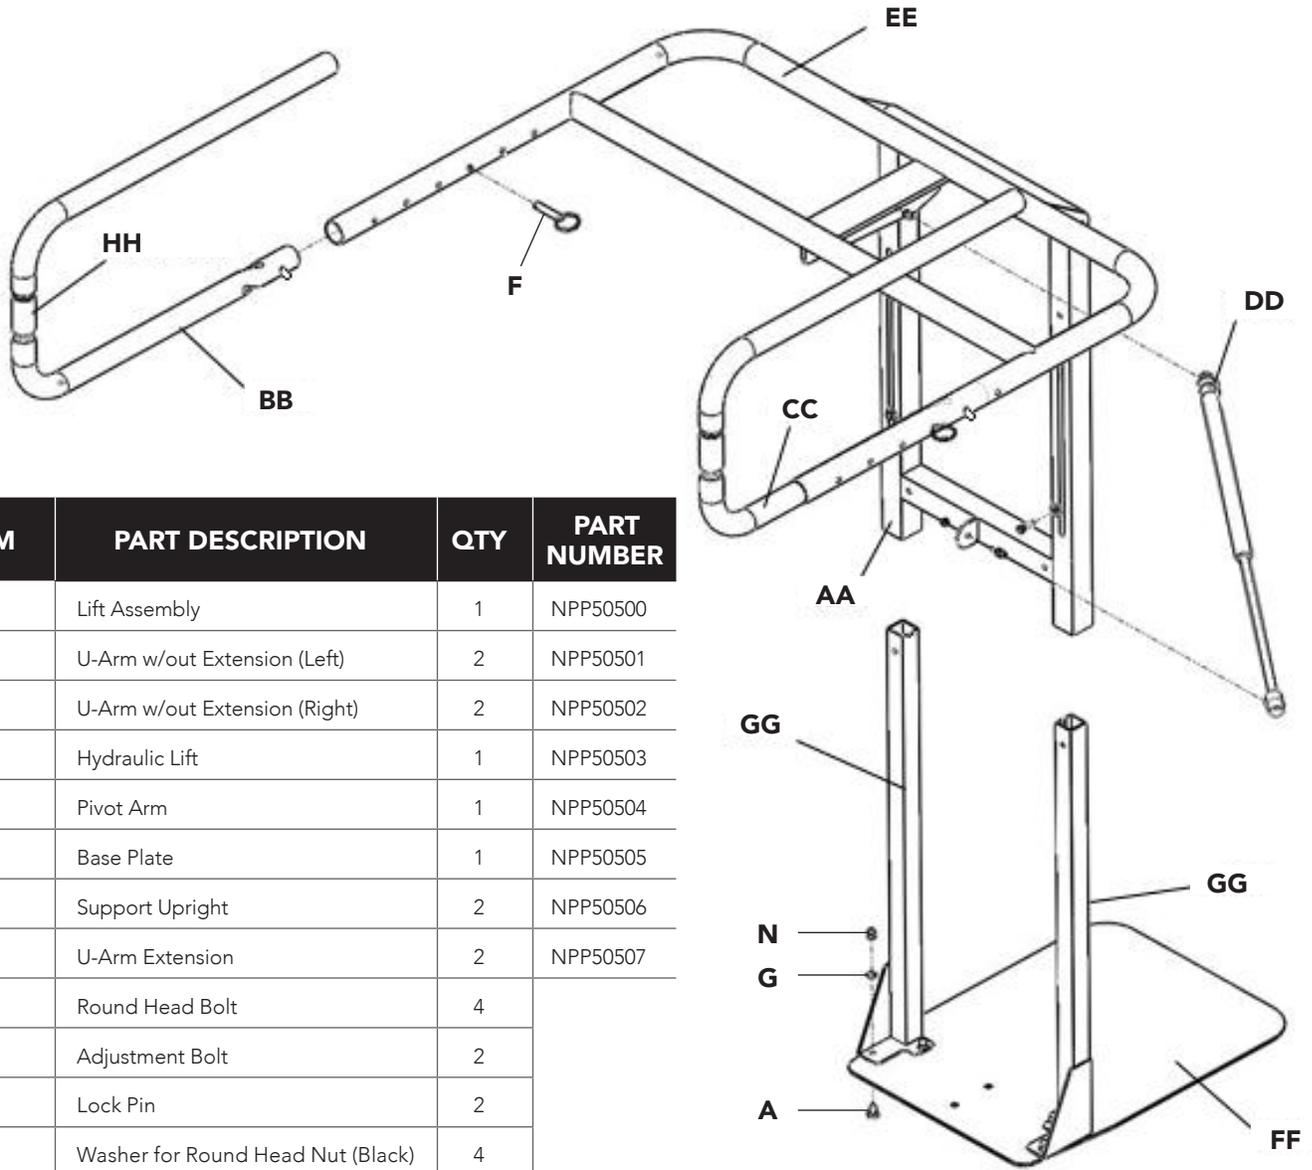

ITEM	PART DESCRIPTION	QTY	PART NUMBER
AA	Lift Assembly	1	NPP50500
BB	U-Arm w/out Extension (Left)	2	NPP50501
CC	U-Arm w/out Extension (Right)	2	NPP50502
DD	Hydraulic Lift	1	NPP50503
EE	Pivot Arm	1	NPP50504
FF	Base Plate	1	NPP50505
GG	Support Upright	2	NPP50506
HH	U-Arm Extension	2	NPP50507
A*	Round Head Bolt	4	NPP50508
E*	Adjustment Bolt	2	
F*	Lock Pin	2	
G*	Washer for Round Head Nut (Black)	4	
H*	Washer for Adjustment Bolt (Silver)	2	
K*	Lock Nut	2	
L*	Ball Stud	2	
N*	Round Head Nut	4	
Z*	Lag Screw	4	

Illustrations are not to scale.

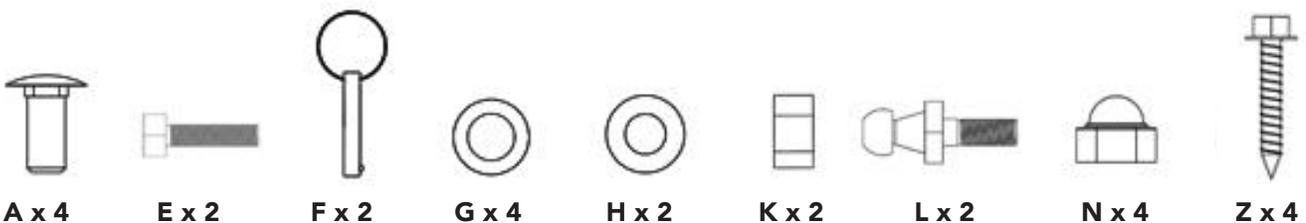


*Items included in Hardware Pack (NPP50508)

ASSEMBLY INSTRUCTIONS

NOTE: IF USING A SIDE MOUNT SETUP, SKIP TO STEP 5.


STEP 1

Attach the Support Uprights (GG) to the Base Plate (FF) using the Round Head Bolts (A), Washers (G), and the Round Head Nuts (N).

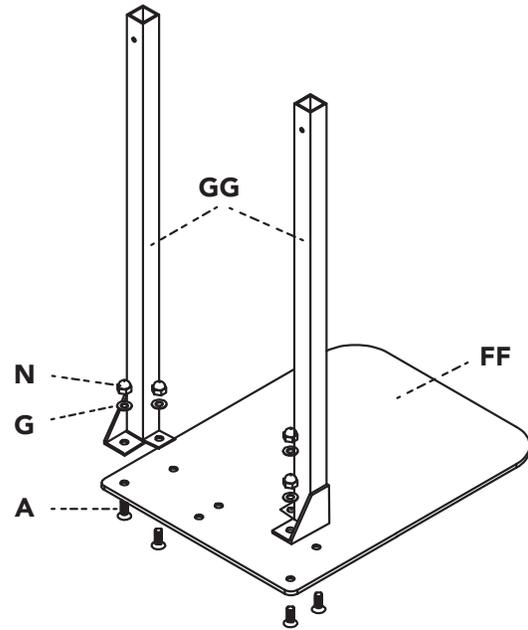

STEP 2


Make sure the spa is empty and slide the Base Plate/Support Upright assembly under the center of the back of the spa cabinet. This will be the side the spa cover will be stored behind. Make sure the Base Plate (FF) sits flat on the ground, with no overhang off the slab or deck.

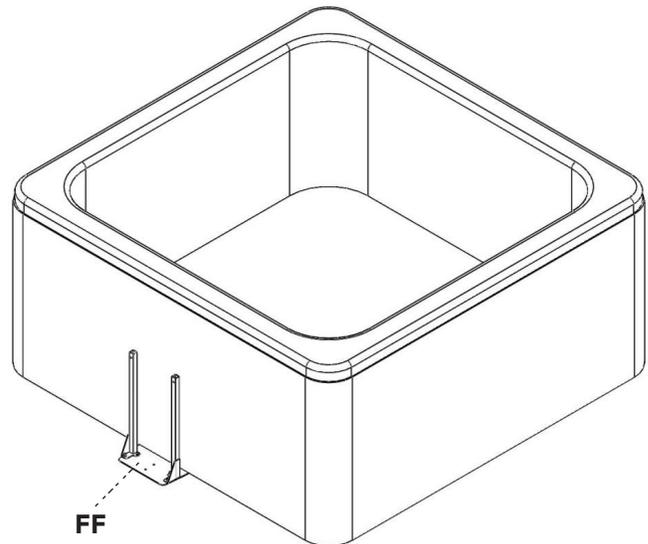

ASSEMBLY INSTRUCTIONS

STEP 3


Slide the legs of the Lift Assembly (AA), with Pivot Arm (EE) attached, over the Support Uprights (GG).

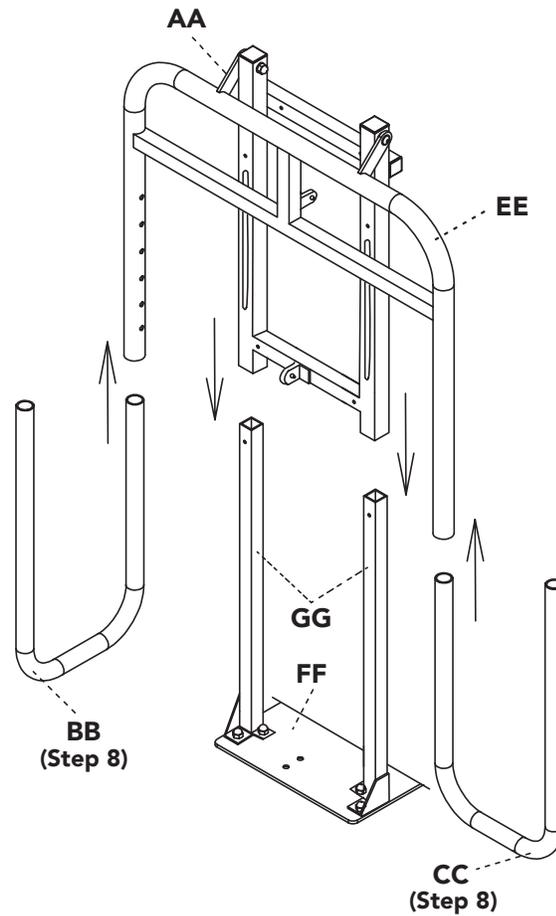

STEP 4

Loosely thread the (2) Adjustment Bolts (E) through the (2) Adjustment Bolt Washers (H) and into the threaded holes in the Support Legs. **DO NOT** tighten the adjustment screws yet.

TO CONTINUE WITH BASE MOUNT SETUP, SKIP TO STEP 7.

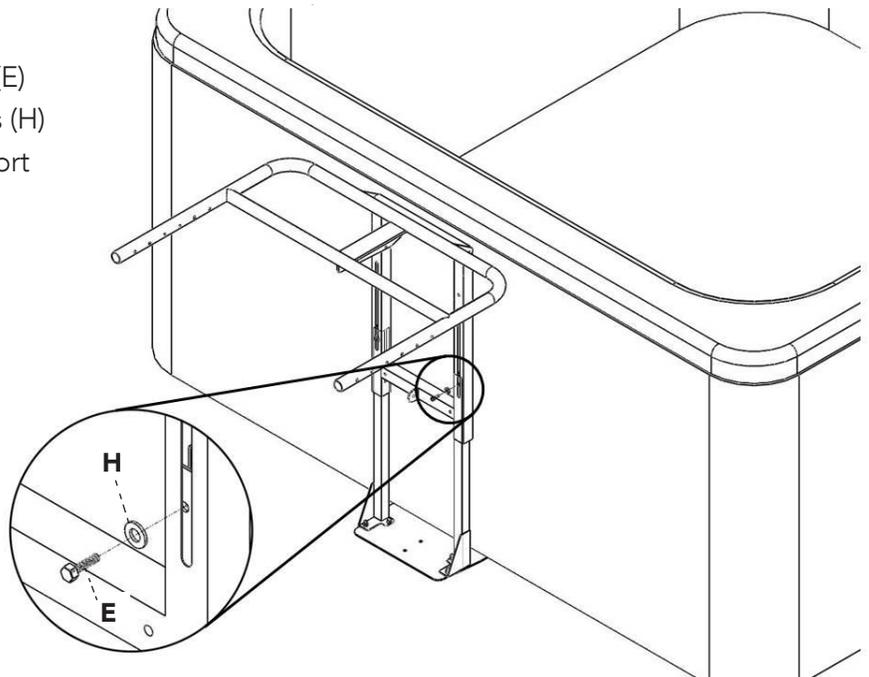


ASSEMBLY INSTRUCTIONS

NOTE: Steps 5 and 6 are used only if using a side mount setup and NOT using the Base Plate (FF).


STEP 5

Align the Lift Assembly (AA) in the center of the spa with Pivot Arm (EE) lined up with top of spa. Mark the (4) screw hole positions (see below) and pre-drill pilot holes.

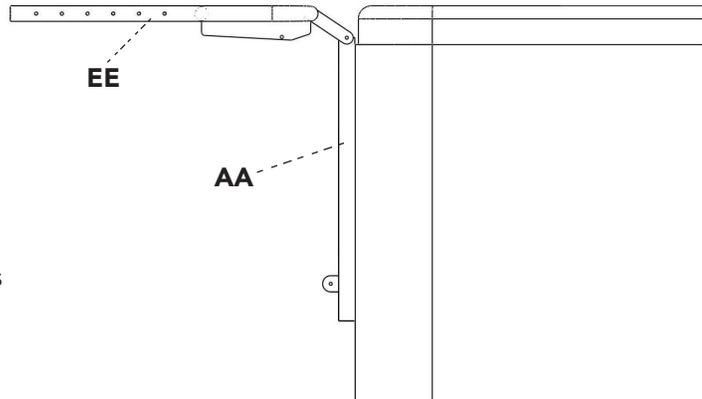


STEP 6

Mount the Lift Assembly (AA) to the side of the spa using the (4) Lag Screws (Z).

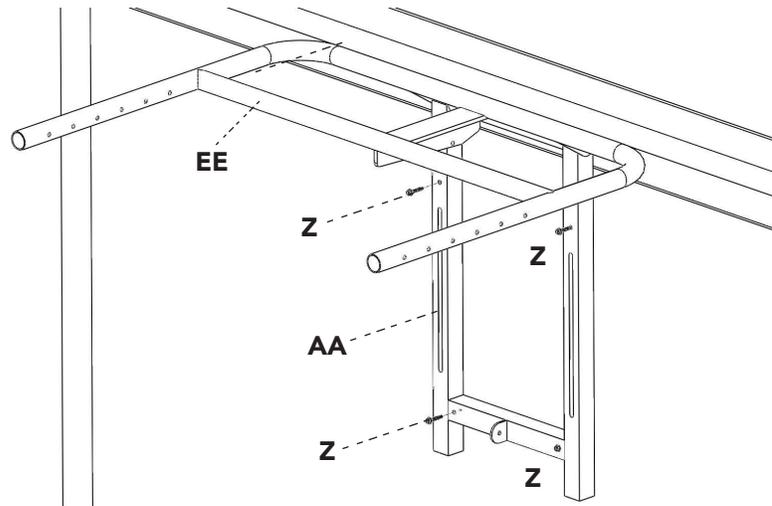

STEP 7


Slide the Lift Assembly (AA) up the Support Uprights (GG) until the Pivot Arm (EE) lines up with the top of the spa. Tighten the (2) Adjustment Bolts (E) that were threaded into the Support Leg hole in Step 4.

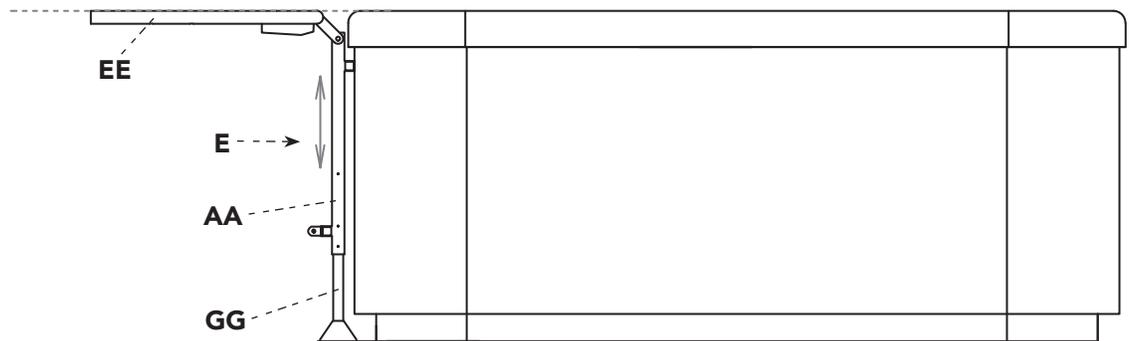

ASSEMBLY INSTRUCTIONS

STEP 8


Attach the left and right U-Arm assemblies (BB, CC) to the open tubes of the Pivot Arm (EE) using the spring buttons. Use the hole that will allow the U-Arms to swing as low as possible, without hitting the ground. Mount the Lift Assembly (AA) to the side of the spa using the (4) Lag Screws (Z).

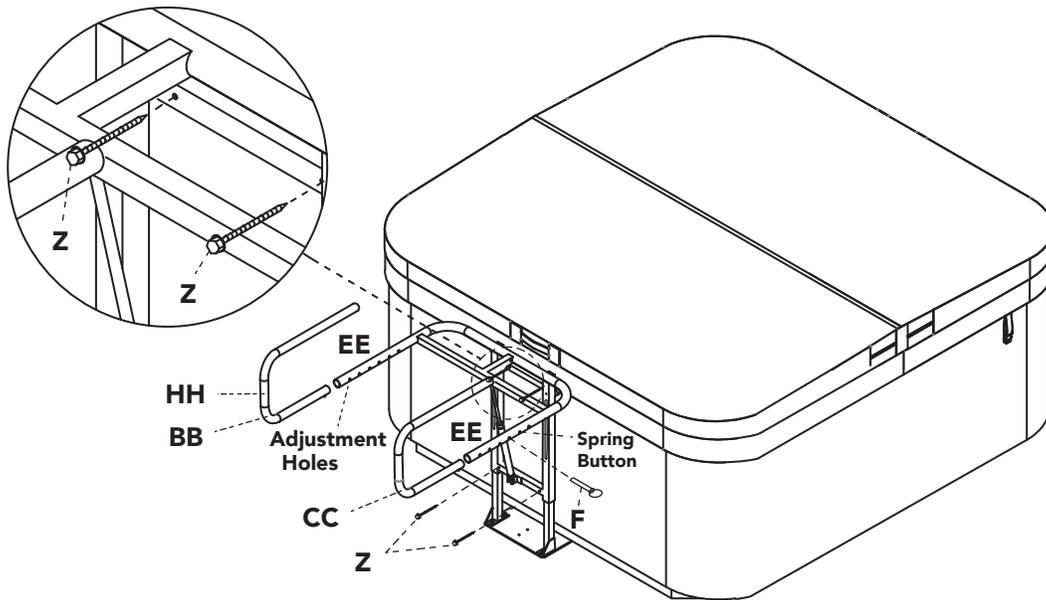

STEP 9

Swing the U-Arms up so that they are parallel to the ground. Raise the Pivot Arm (EE) so that the bottom tube is level with the top of the spa without the cover.


NOTE: If the folded spa cover is too thick to fit within the U-Arms, use the U-Arm Extension (HH) to widen the arms.

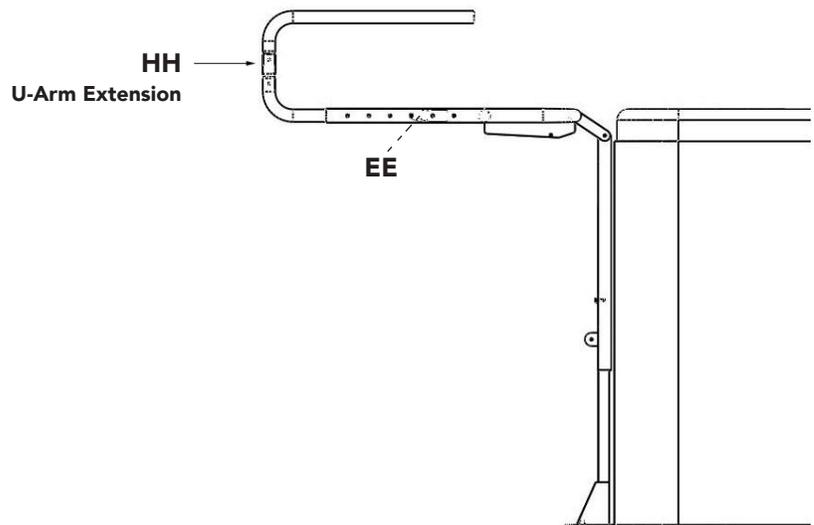

ASSEMBLY INSTRUCTIONS


STEP 10

Attach the (2) Ball Studs (L) and (2) Lock Nuts (K) to the tab and fin. Then snap the Hydraulic Lift (DD) over the round ends of the Ball Studs to lock in place.

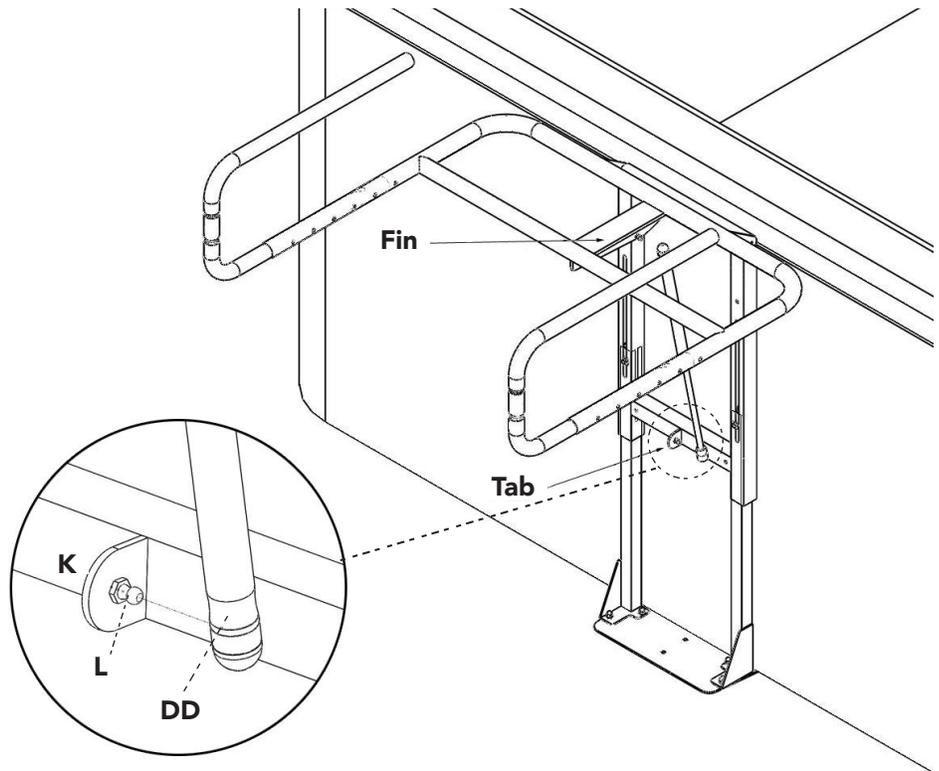


STEP 11

Push the (2) Lock Pins (F), one on each U-Arm, through the hole directly behind the spring button. Make sure the pin passes through the diagonal channel (not shown) on the U-Arm and comes out the other side to lock the arm in place.

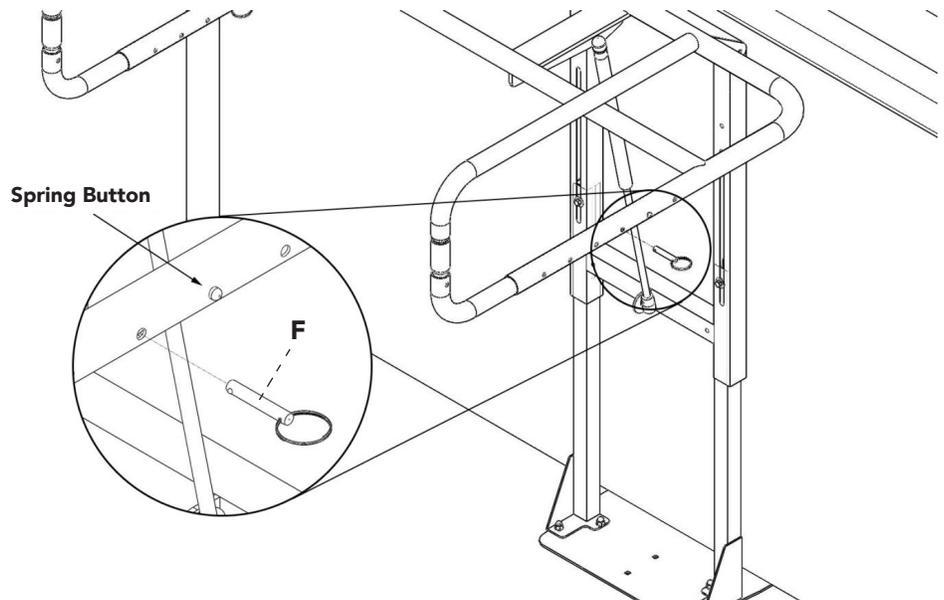


DIMENSION RANGE

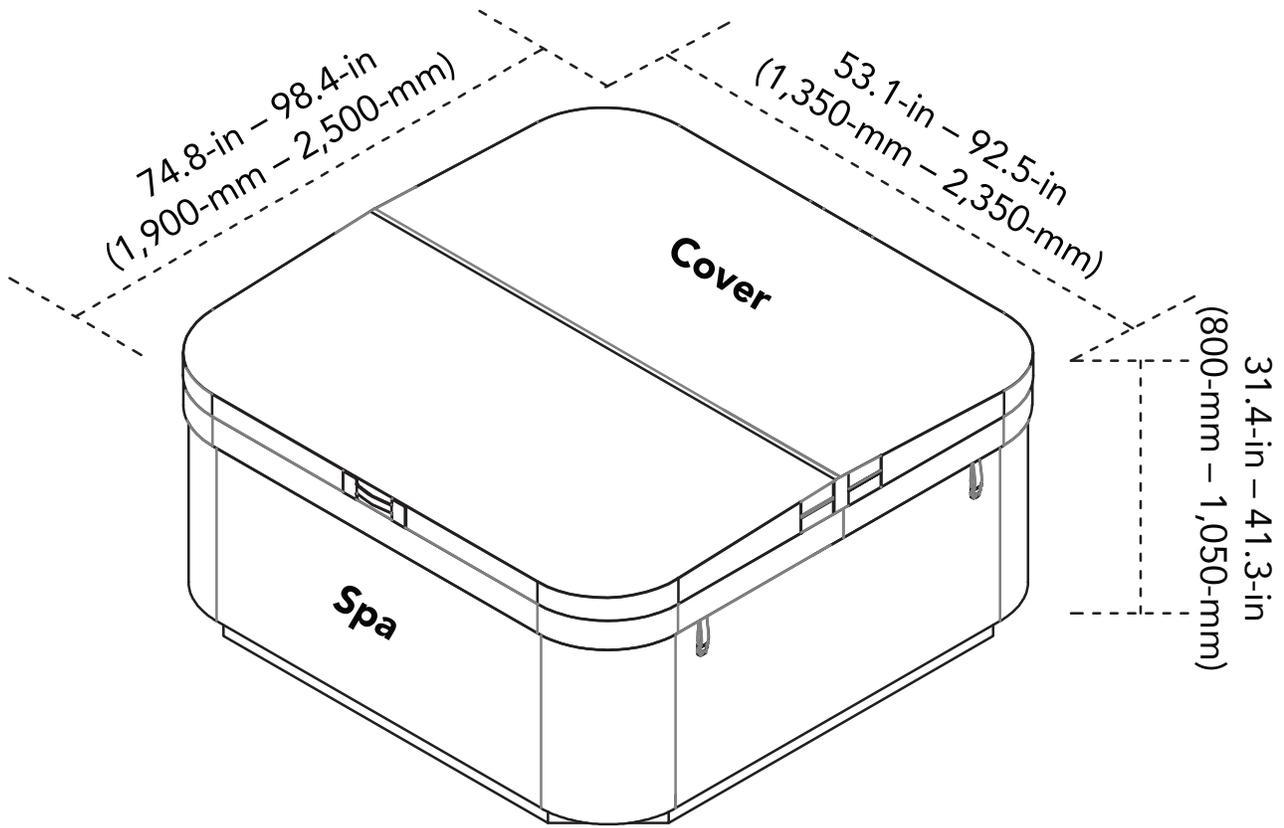


OPERATION INSTRUCTIONS


To use the Premium Cover Lift, follow the steps below.

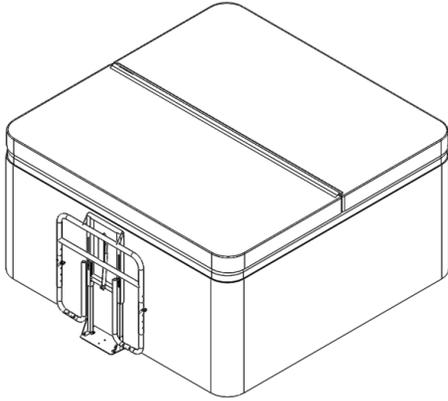


A) Start with the cover on the spa and the Premium Cover Lift in stowed position.

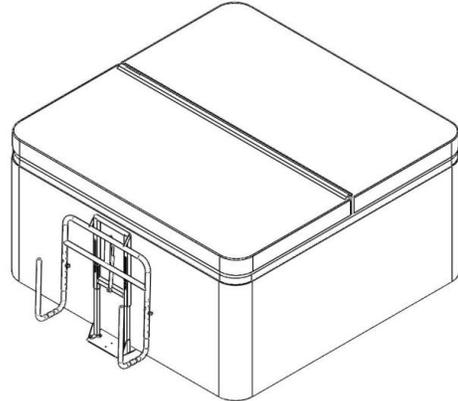


B) Rotate the arms outward and make sure the spring pins lock.

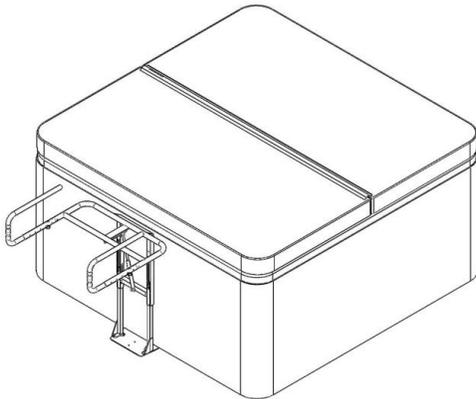


C) Ensure that the Premium Cover Lift is deployed, as shown.

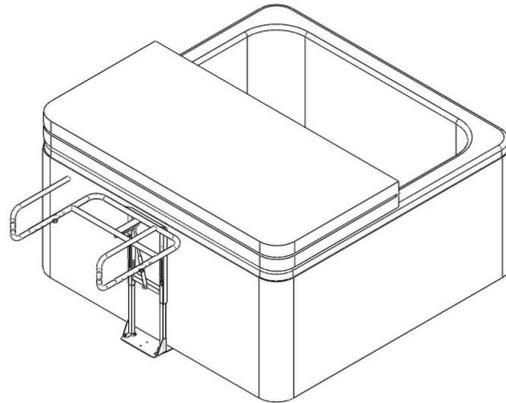

D) Fold the cover in half.

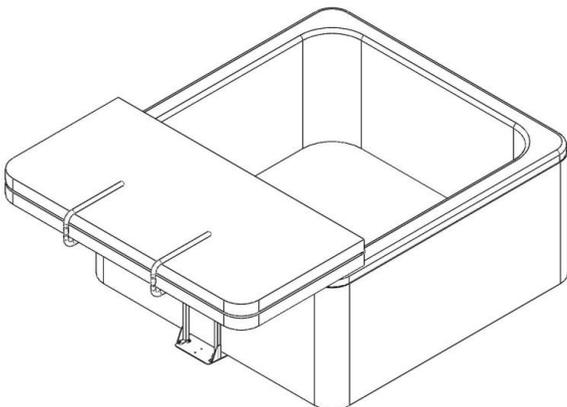

E) Slide the cover in between the U-Arms.

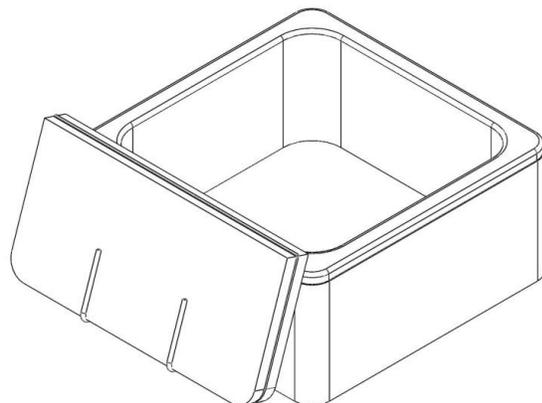

F) Push the cover downward.

PRODUCT WARRANTY

5-YEAR LIMITED WARRANTY

This product (model NP5880) is warranted to the original purchaser to be free from defects in material or workmanship for a period of five (5) years from the date of the original retail purchase.

This warranty does not cover defects or damage due to improper installation, alteration, accident, or any other event beyond the control of the manufacturer. Defects or damage resulting from misuse, abuse, or negligence will void this warranty. This warranty does not cover scratching or damage that may result from normal usage.

This product is not intended for institutional or commercial use; the manufacturer does not assume any liability for such use. Institutional or commercial use will void this warranty.

This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, the manufacturer shall repair or replace defective parts at no cost to the purchaser. Shipping charges and insurance are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation, or replacement of the product or components are not covered under this warranty.

The manufacturer reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.

The manufacturer shall not be liable for loss of use of the product or other consequential or incidental costs, expenses, or damages incurred by the consumer for any other use. The user assumes all risk of injury resulting from the use of this product.

This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by federal or state law. Neither the manufacturer nor any of its representatives assume any other liability in connection with this product.

All warranty claims must be made through the retailer where the product was originally purchased. A purchase receipt or other proof of date of purchase will be required to process all warranty claims. The model number and part numbers found within the assembly instructions will be required when submitting any part requests or warranty claims.

**For further warranty information or inquiries, please call 1-800-759-0977
or email warranty@splashnetxpress.com**



Blue Wave Products, Inc.
1745 Wallace Avenue, Suite B
Saint Charles, IL 60174