

COMET

USER MANUAL

OOZELIFE.COM



@OOZELIFE #OOZELIFE




The Ooze COMET is a small, portable eNail device for on the go. This vaporizer features a high-powered battery that can reach 710F in just a few seconds. Store your concentrates out of sight in the built-in silicone jar located on the bottom of the battery. Enjoy cooler, smoother hits with the hand-blown water bubbler glass attachment.



KIT INCLUDES:

- OOZE 1200 mAh Battery
- 5 Second Warm-Up For 20 Seconds Before Auto Shut-Off
- 1 QUARTZ Nail
- 1 CERAMIC Nail
- 1 TITANIUM Nail
- Water Bubbler Glass Attachment
- Stainless Steel Carb Cap
- Magnetic Ceramic Dab Tool
- Built-In Silicone Jar
- Magnetic Stand
- Micro USB Charger
- User Manual

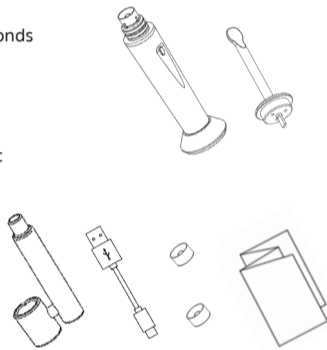

PRODUCT PARAMETERS:

Material of atomization pot: GR2 pure titanium
 Material of body: aluminum alloy + rubber coating
 Dimensions: length 106mm * Dia. 22mm
 Net weight: 100g
 Resistance of heater: 0.25~0.4Ω
 Battery capacity: 1200mAh
 Charging voltage: DC 5V
 Output voltage: 3.3-4.2V
 Output power: 30~60W (power = square of voltage/resistance)
 Output current: 10-15 A (current = voltage/resistance)
 Quiescent current: <5uA
 Charging duration : about 60 min

HOW TO USE INSTRUCTIONS

1. Insert water through tip of water glass bubbler attachment and fill 1/4"-1/2"
2. Screw heating base onto the battery
3. Attach coil to the heating base
4. Insert the water bubbler glass attachment
5. Press power button 3 times quickly to turn on. Red light will flash to indicate the COMET is ON. After 5 seconds the red light will turn green, and you can place concentrates inside the coil. Wait 20 seconds to heat up completely and use.
6. To turn OFF, press power button 3 times quickly.

Note: You can use device during charging, but if battery voltage falls below 3.1V the device will shut down.

SHORT-CIRCUIT AND OVERCURRENT PROTECTION:

COMET will automatically shut down in the event of short-circuiting before or during operation. The light will continuously flash 5 times, and short-circuit for 3 minutes.

LOW VOLTAGE PROTECTION:

COMET will shut down immediately when battery voltage falls below 3.1V during use.

OVERCHARGE PROTECTION:

When COMET battery is fully charged, SMART technology will stop the battery from overcharging. Once the battery hits this point, a blue light will appear.

HOW TO CHARGE

Only use provided charger connected to DC 5V voltage to charge the COMET. Using a different charger can damage the battery and will result in void of warranty.

If battery power is too low, the green light will not flash.

While charging, the red light will be on. Once charge is complete it will change to green light.

HOW TO CLEAN

Clean parts after each use to keep your Comet in working condition. Keep away from water AND extremely hot or cold temperatures.

Make sure your Comet is cool enough to touch. Remove the glass bubbler and unscrew the nail from the base. Put both pieces in a small Ziploc bag and add rubbing alcohol to soak. Use a q-tip dipped slightly in alcohol to remove any residue from the base, and use it to remove any residue left on the nail or glass.

WARRANTY RULES:

- COMET battery includes 12 month warranty.
- Defective Battery within 60 days of purchase is free of charge.
- Defective Battery within more than 60 days of purchase includes \$5.95 shipping and handling fee.
- The warranty does NOT apply to a COMET battery at fault from the use of a NON-COMET charger or atomizer, or if the device shows any physical damage.
- If your battery stops working please contact us directly at support@oozeflife.com to open a claim with your order number, receipt, shipping address, full name and description of issue. All requests will receive a response within two business days.

WARNING ⚠

Please use charger properly to avoid damaging or destroying the COMET or its parts. Charger input voltage: DC 5V, max charging current: 1A

The COMET's self-contained protection function could fail if it is not operated as required by the manufacturer.

DISCLAIMER:

This device is suited for adults 18 years of age and older. Age requirement for use may vary depending on laws in your geographical location. Our products do not treat, diagnose, or cure any disease, physical ailment, or condition. Keep out of the reach of children and pets as ingestion of certain pieces can present a choking hazard. This device contains a lithium ion battery and is an electronic device and should be treated accordingly.