

INSTALLATION INSTRUCTIONS

FOR CTA2/120 or CTA2/150 ADAPTERS

These adapters are designed for applications where the finished ceiling thickness is greater than 3/4". They can be attached to the Aculux recessed fixture before or after installing the fixture, ceiling, and/or flangeless adapter.

Using the chart below, confirm the adapter is compatible with the given ceiling thickness and application type. For adjustable fixtures when ceilings are thicker than 1", the maximum aiming angle will be limited to less than 40°. At the maximum ceiling thickness, aiming angle will be limited to 25°.

CEILING THICKNESS COMPATIBILITY						
Application	Standard Fixture		CTA2/120 Installed		CTA2/150 Installed	
	Min.	Max.	Min.	Max.	Min.	Max.
- Self Flange trims						
- Flangeless trims in solid ceilings (wood, stone, tile, etc.)	0.47	0.88	0.88	1.28	1.28	1.60
- Flangeless trims in drywall ceilings (using FMA2)	0.45	0.78	0.78	1.19	1.19	1.51

To install CTA2/120 or CTA2/150 adapter:

Step 1. If fixture is adjustable and has been aimed, return aiming angle to the 0° position.


Step 2. Remove adjustment or downlight module from fixture by loosening the (3) adjustment screws using the 5/64" hex wrench that ships with the fixture. Screws must be gradually loosened in an alternating pattern to prevent binding of the module. (see figure 1)


Step 3. Disconnect power plug from module by depressing latch and pulling away from module. Set module aside.


Step 4. Using the 5/64" hex wrench, fasten adapter to fixture with the three 1/4" screws that ship with the adapter. (see figure 2)

Step 5. Reconnect power plug to module, and secure module to adapter/fixture with the (3) adjustment screws removed in step 2. (note: CTA2/120 is shipped with shorter screws that should be used when ceilings are less than one inch thick.) (see figure 3)

Step 6. Level module and install trim per INSTALLING FINISHING TRIMS section of the instructions that ship with the fixture.

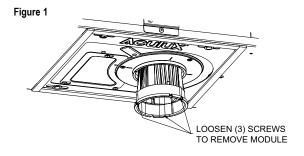

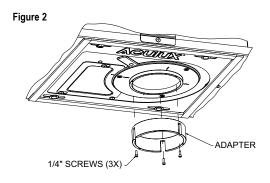

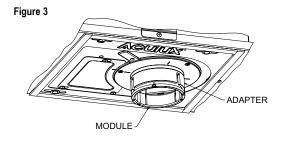

Product Services Phone (888) 387-2212