

QWIK **JON** **PREMIER**

GRINDER UPFLUSH SYSTEM

Add a Bathroom
Anywhere! No Gravity
Drain Required.
Making Bathroom
Installations Easy!



Patent No: US 11,905,695 B2



Trusted. Tested. Tough.®



© Copyright Zoeller® Co. All rights reserved.



» FEATURES AND BENEFITS

- A quiet, preassembled grinder pump system requiring minimal space for installation
- Install a complete bathroom without breaking concrete
- Easily connects to a tub, shower, sink, or other fixtures with 2" NPT or 1-1/2" (DN25) slip side inlets
- Install as a freestanding unit or behind a wall with the extension kit
- Recessed side handles for carrying
- Tri-Slice® Cutter Technology - three independent cutting channels
50 Hz - provide over 200,000 cuts per minute
60 Hz - provide over 250,000 cuts per minute
- Automatic reset thermal overload protects the pump
- Carbon/Ceramic mechanical shaft seal for long life
- Upper and lower ball bearings for efficient and quiet operation
- Non-clogging vortex impeller for reliable operation
- Withstands total immersion (IP68)
- 1" Discharge elbow with built-in check valve
- Standard 6' (1.8 m) cord with right angle plug
- Premium investment-cast 440C stainless steel cutter and cutter plate

» PERFORMANCE

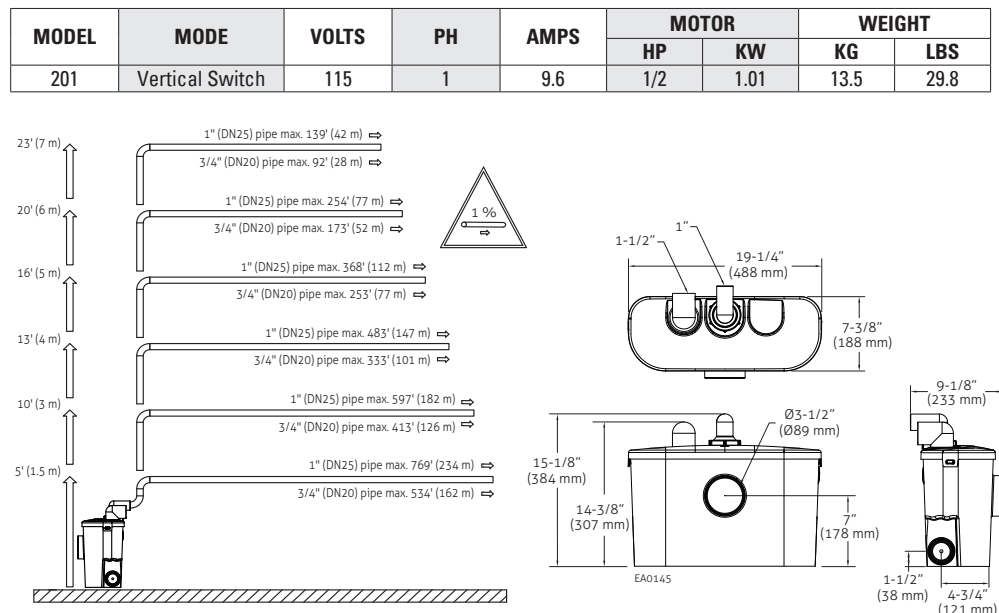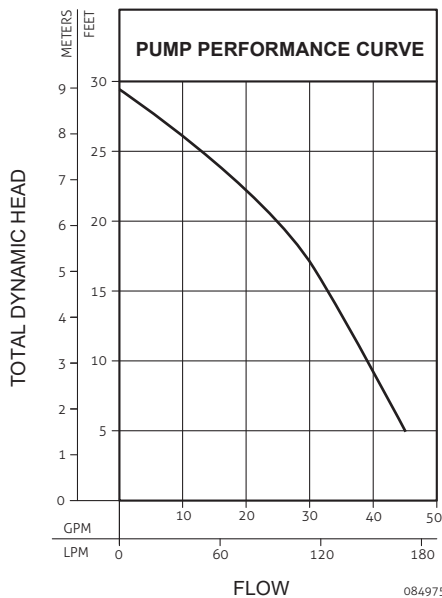

» ACCESSORIES

MODEL	PRODUCT
201-0006	Qwik Jon® Premier grinder pump and tank
201-0021	Qwik Jon® Premier All-In-One System. QJP & Toilet, 1 box, Ships on a skid.
201-4000	Qwik Jon® Premier Ship-To-Home System. QJP & Toilet, 3 boxes
202-2000	Qwik Jon® elongated toilet bowl
202-3002	Qwik Jon® toilet tank and lid
023260	Optional extension kit (available for recessed or behind-the-wall installations)
10-5090	Optional high water Qwik Alarm™ for Qwik Jon® Premier (201-0006).



When used with 1.28 gallon tank and fill valve.



Model 202 meets the Americans with Disabilities Act guidelines and ANSI 117.1 requirements for accessible and usable facilities - check local codes

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.

FM3290
0226
Supersedes
0424