

I PORT CONNECT MOUNT

TILT MOUNT



72493 - CONNECT MOUNT Tilt

TILT MOUNT

I PORT CONNECT Mount Tilt Install Manual

Thank you for purchasing the all new IPORT CONNECT MOUNT Tilt. We hope you enjoy this revolutionary new system and if at any time you need more assistance please contact IPORT Tech Support via Online chat or through our help desk.

- IPORT Team


Whats in box:

- 1 - IPORT CONNECT MOUNT Tilt
- 1 - Torx Security tool
- 1 - Philips screws and drywall anchors kit
- 1- USB-C to Molex cable
- 1- CONNECT Mount module and screws
- 1 - Info Card


I PORT CONNECT MOUNT

TILT MOUNT

- 1. Remove all contents the packaging and place on table.**


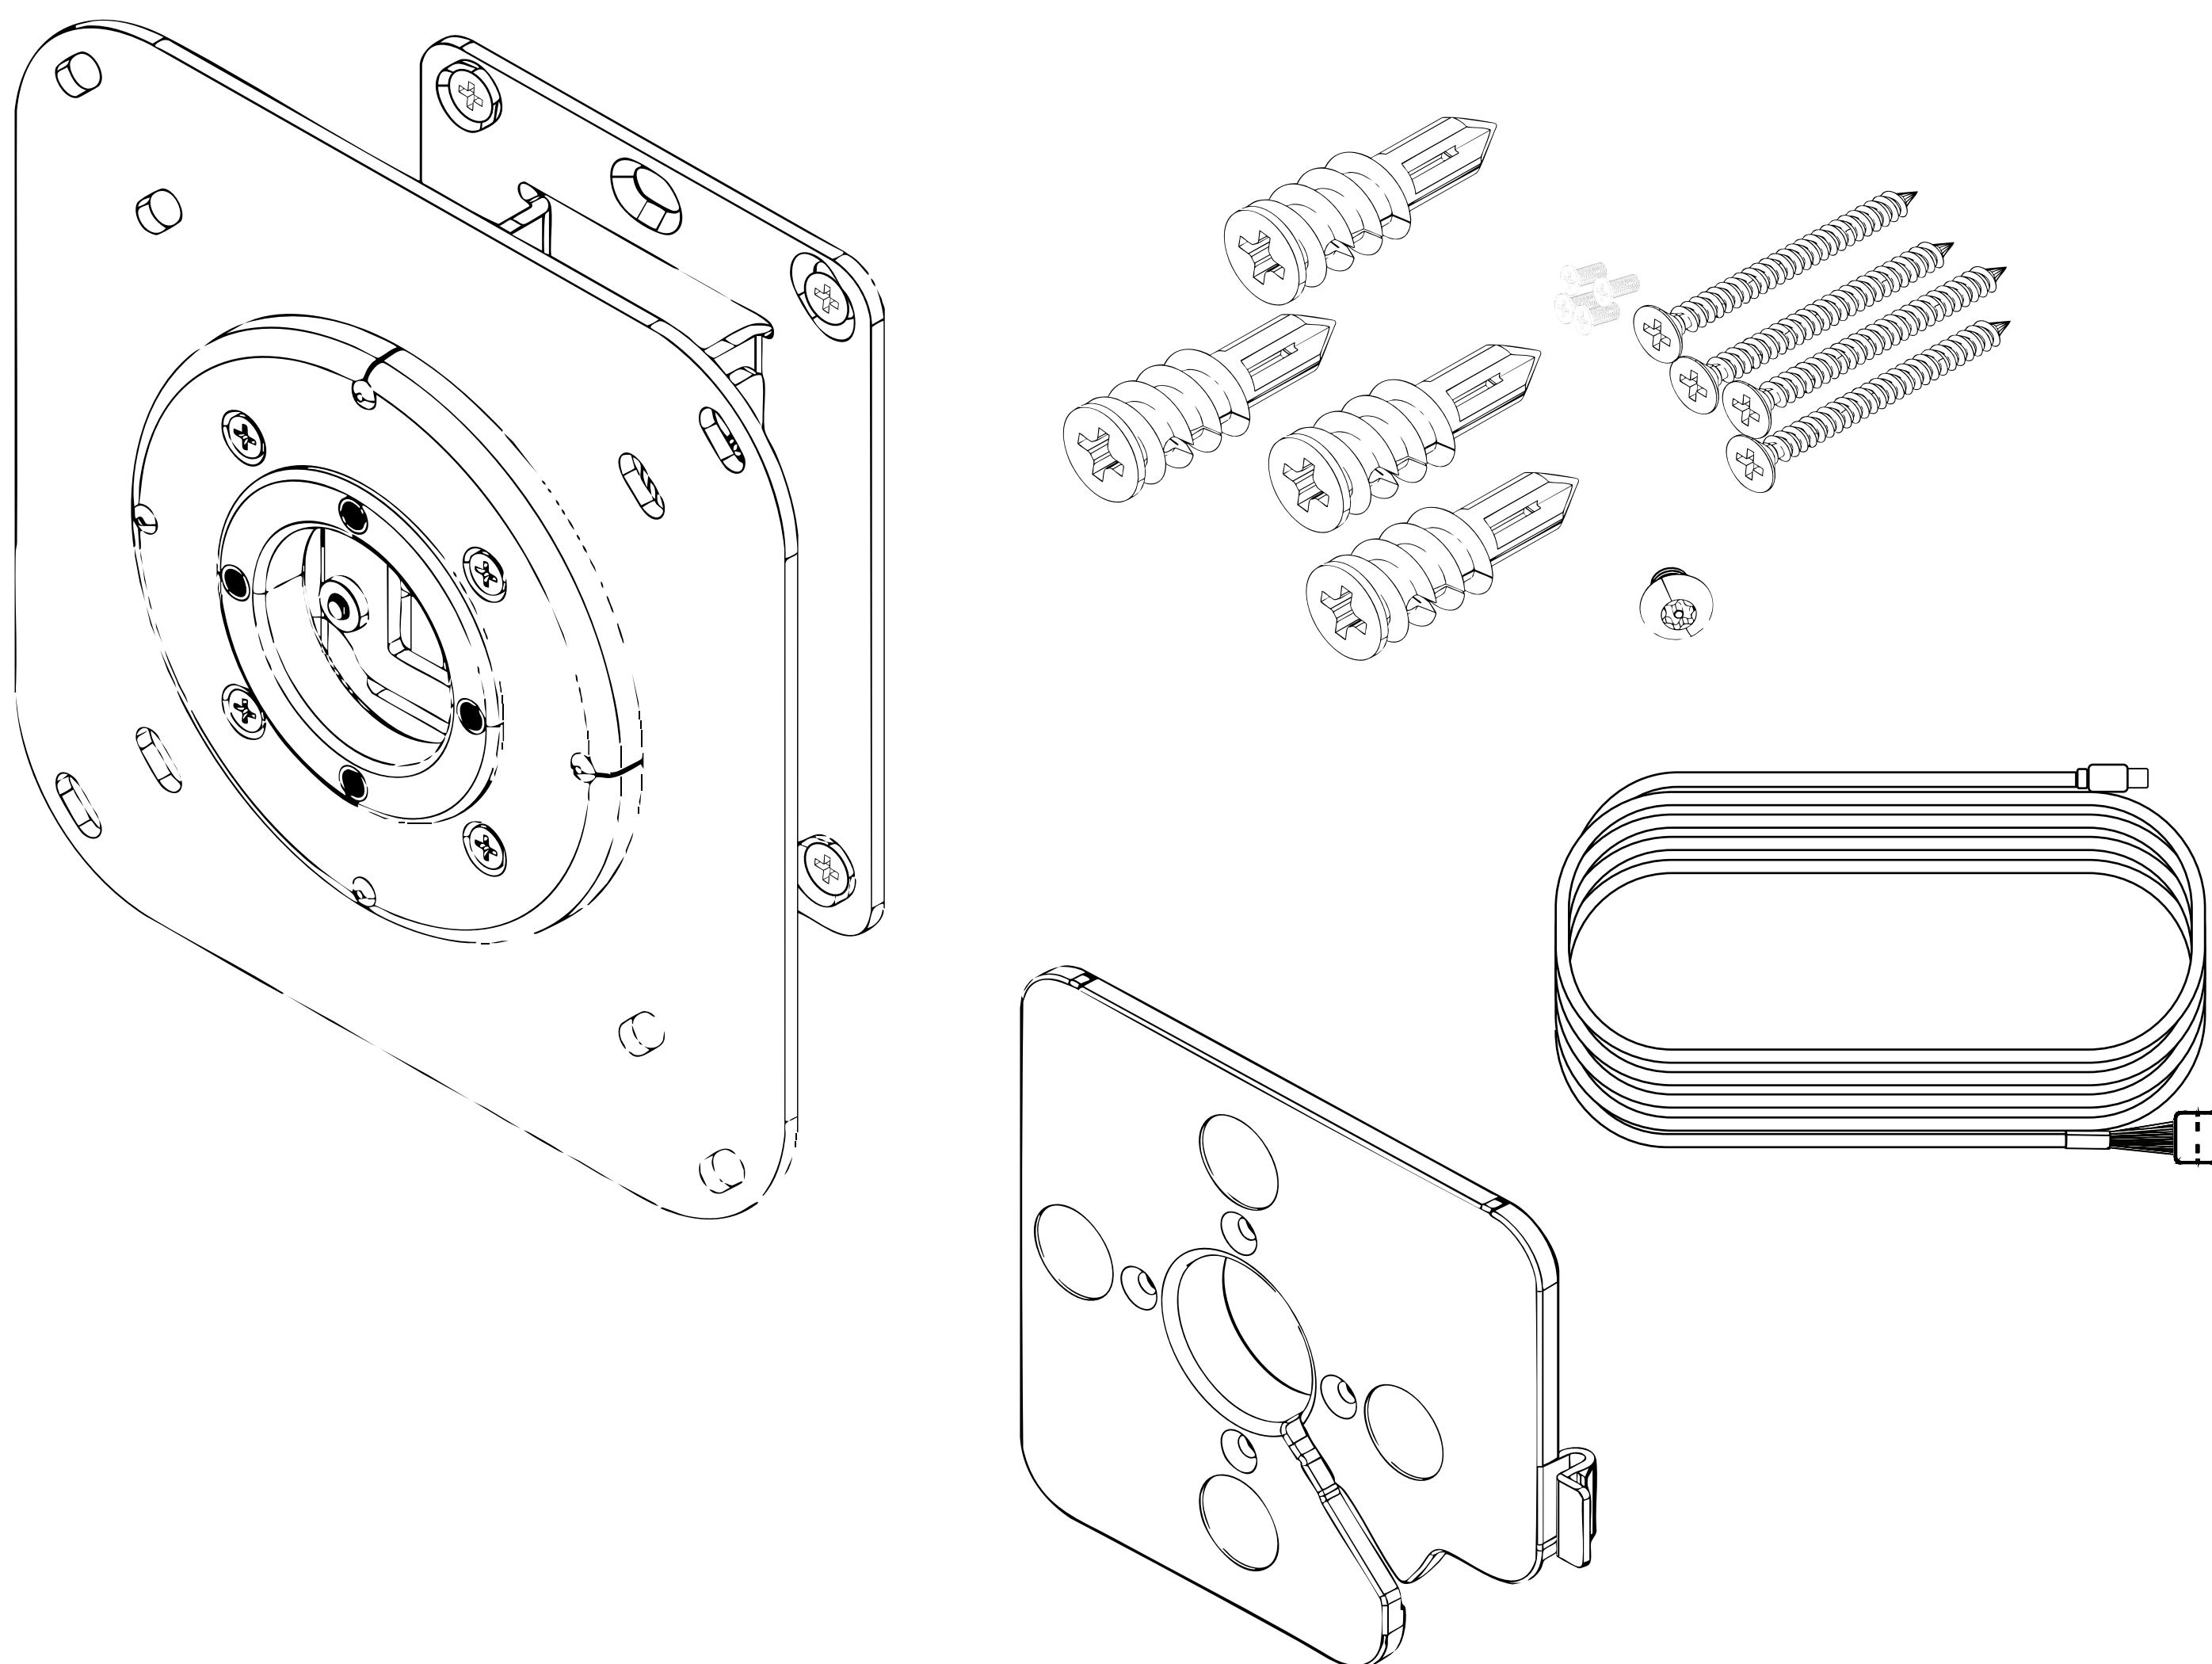


- 2. Separate the two parts of the tilt mount from each other.**

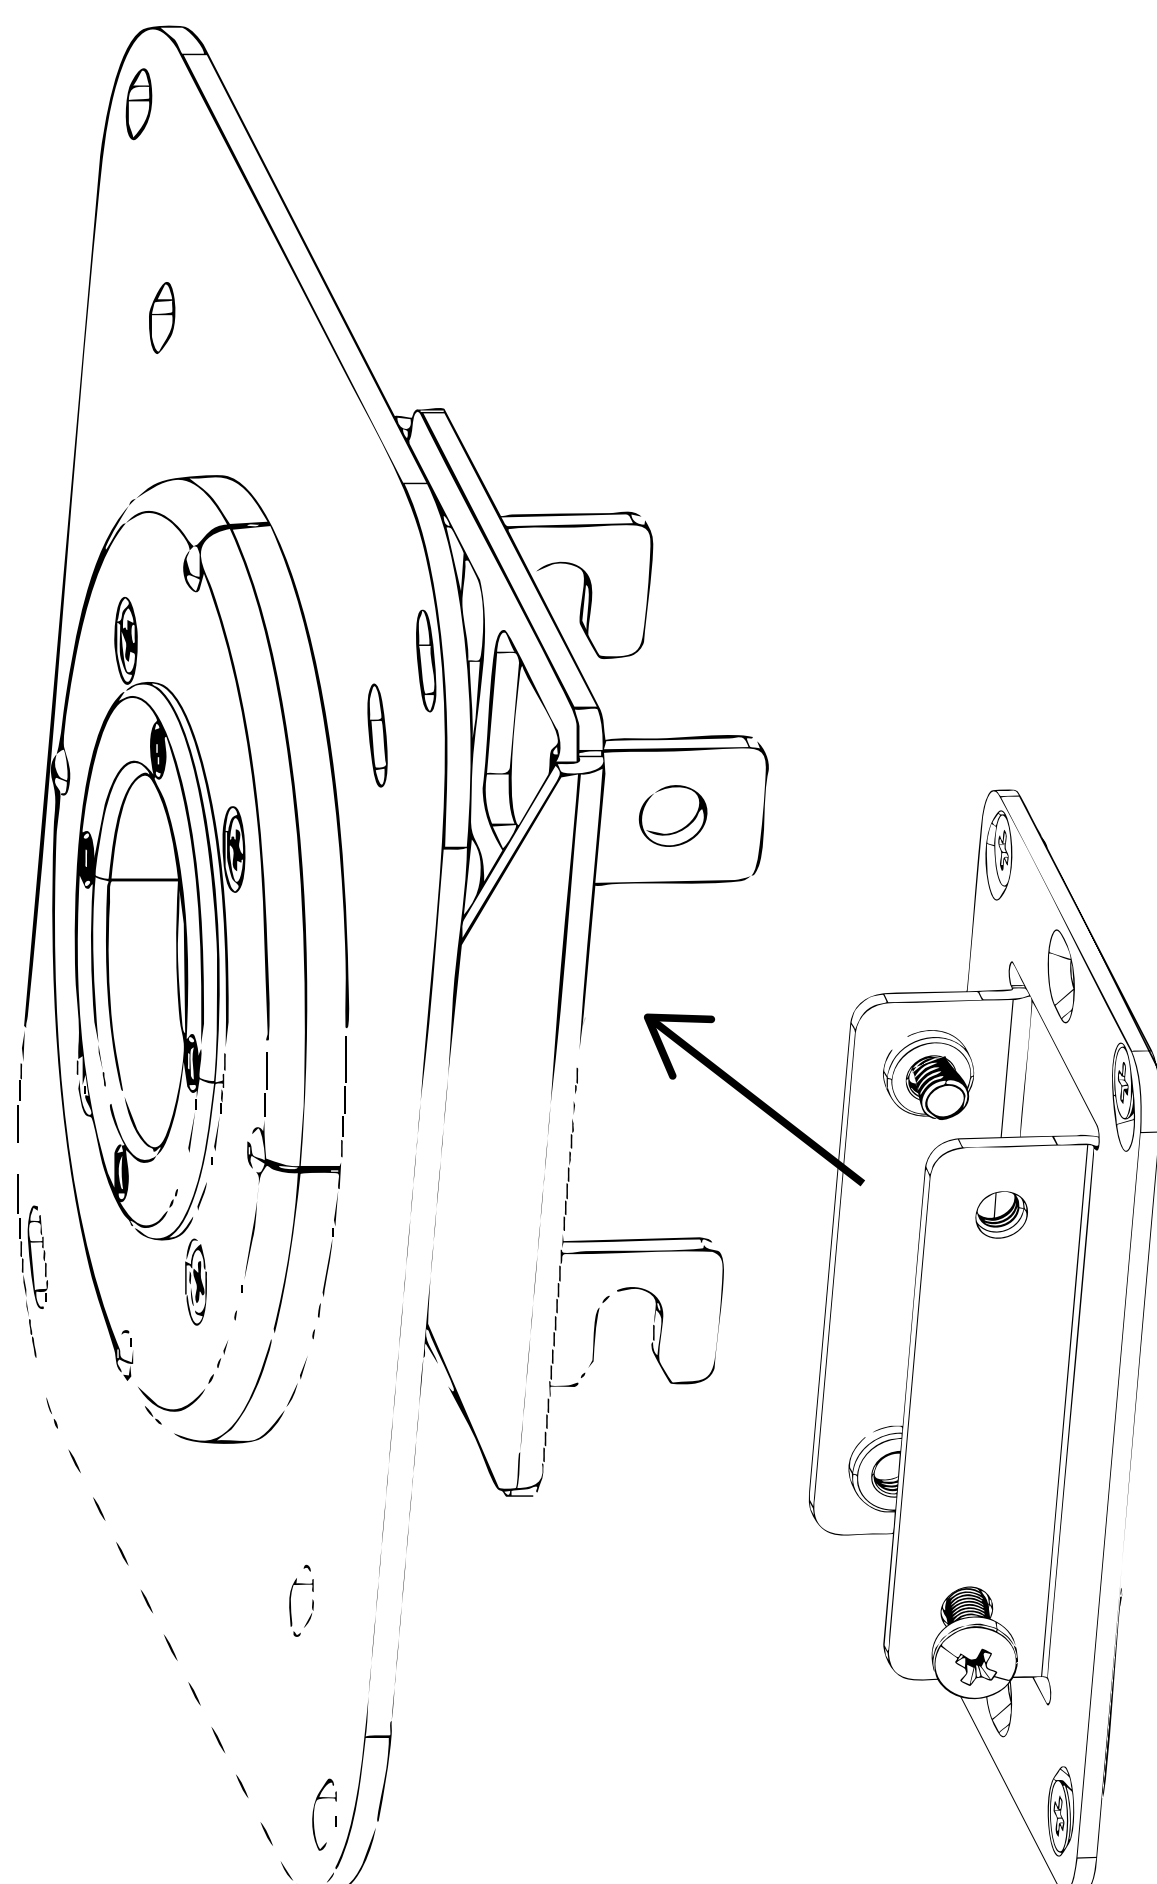





TILT MOUNT

- 3. Place the plate of the Tilt Mount bracket onto the wall and mark the 4 desired mounting locations with a pencil then set the mount aside.**

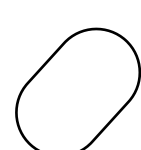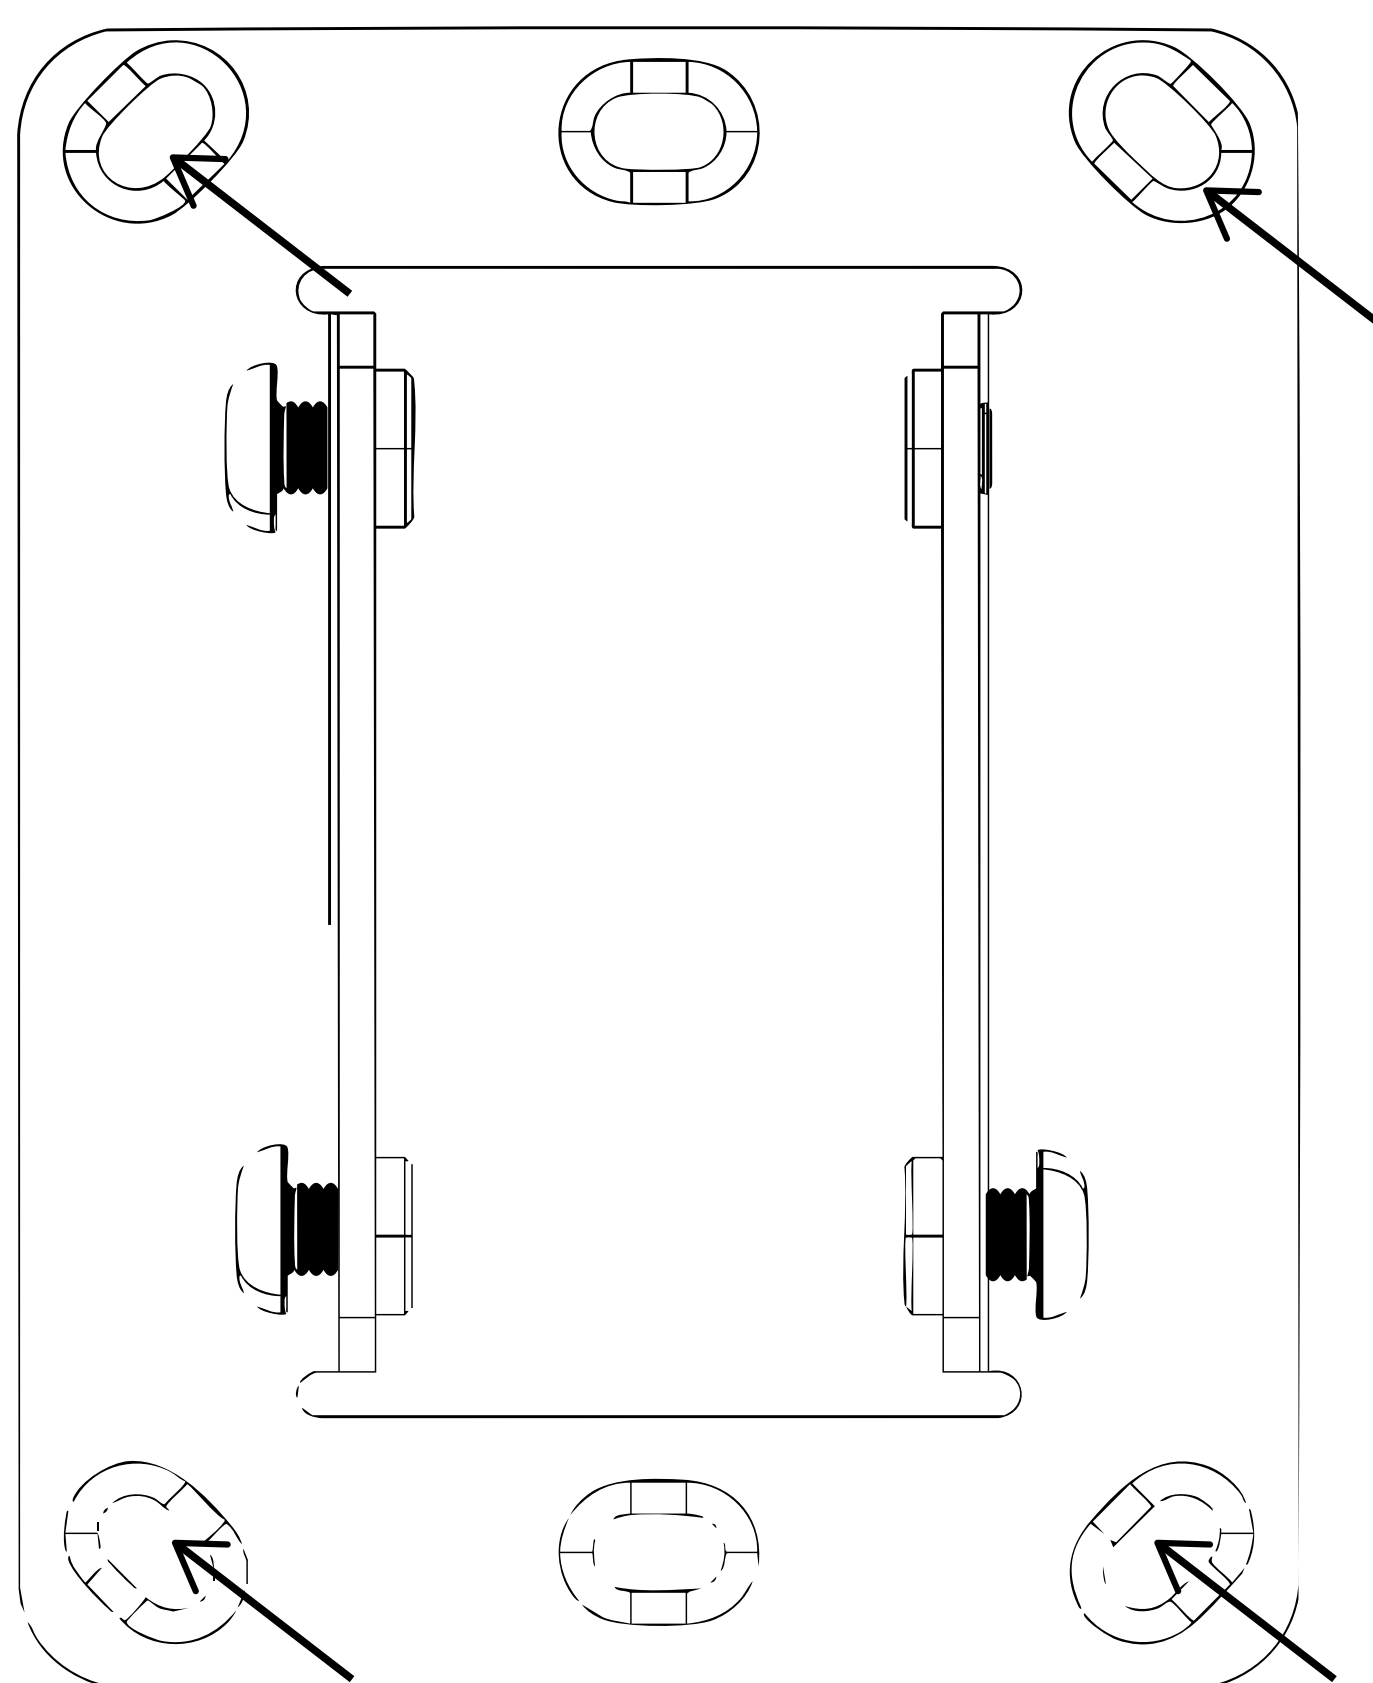

TILT MOUNT



4. Install the 4 provided drywall anchors in the marked locations.

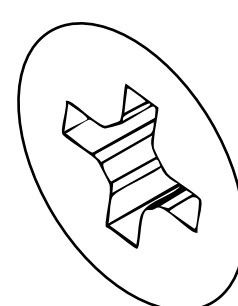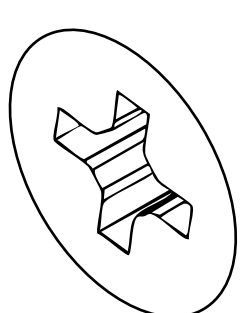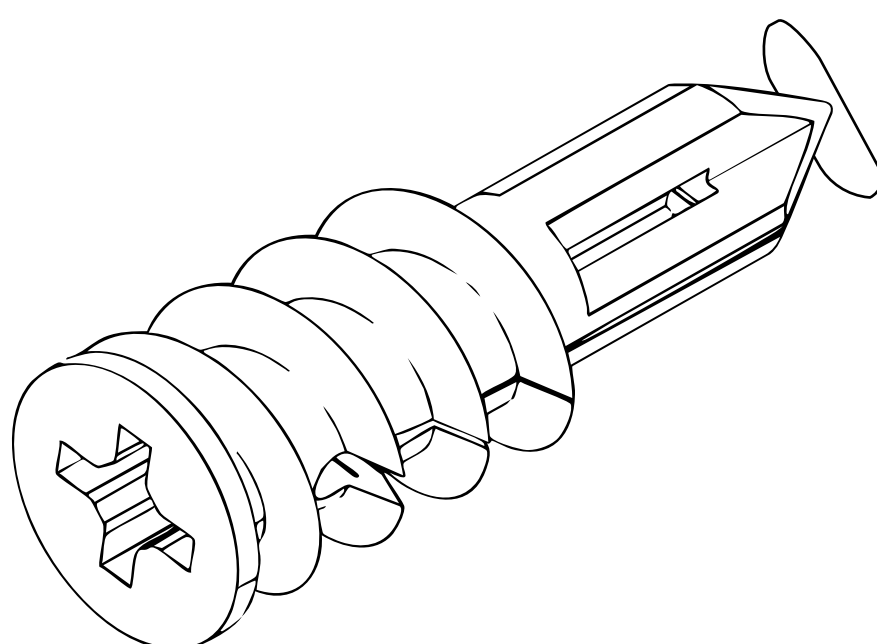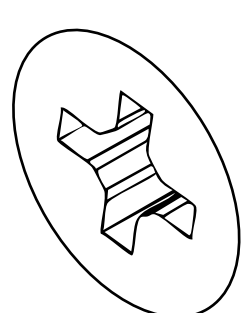

I PORT CONNECT MOUNT

TILT MOUNT



5. Screw the Tilt Mount bracket onto the installed drywall anchors.

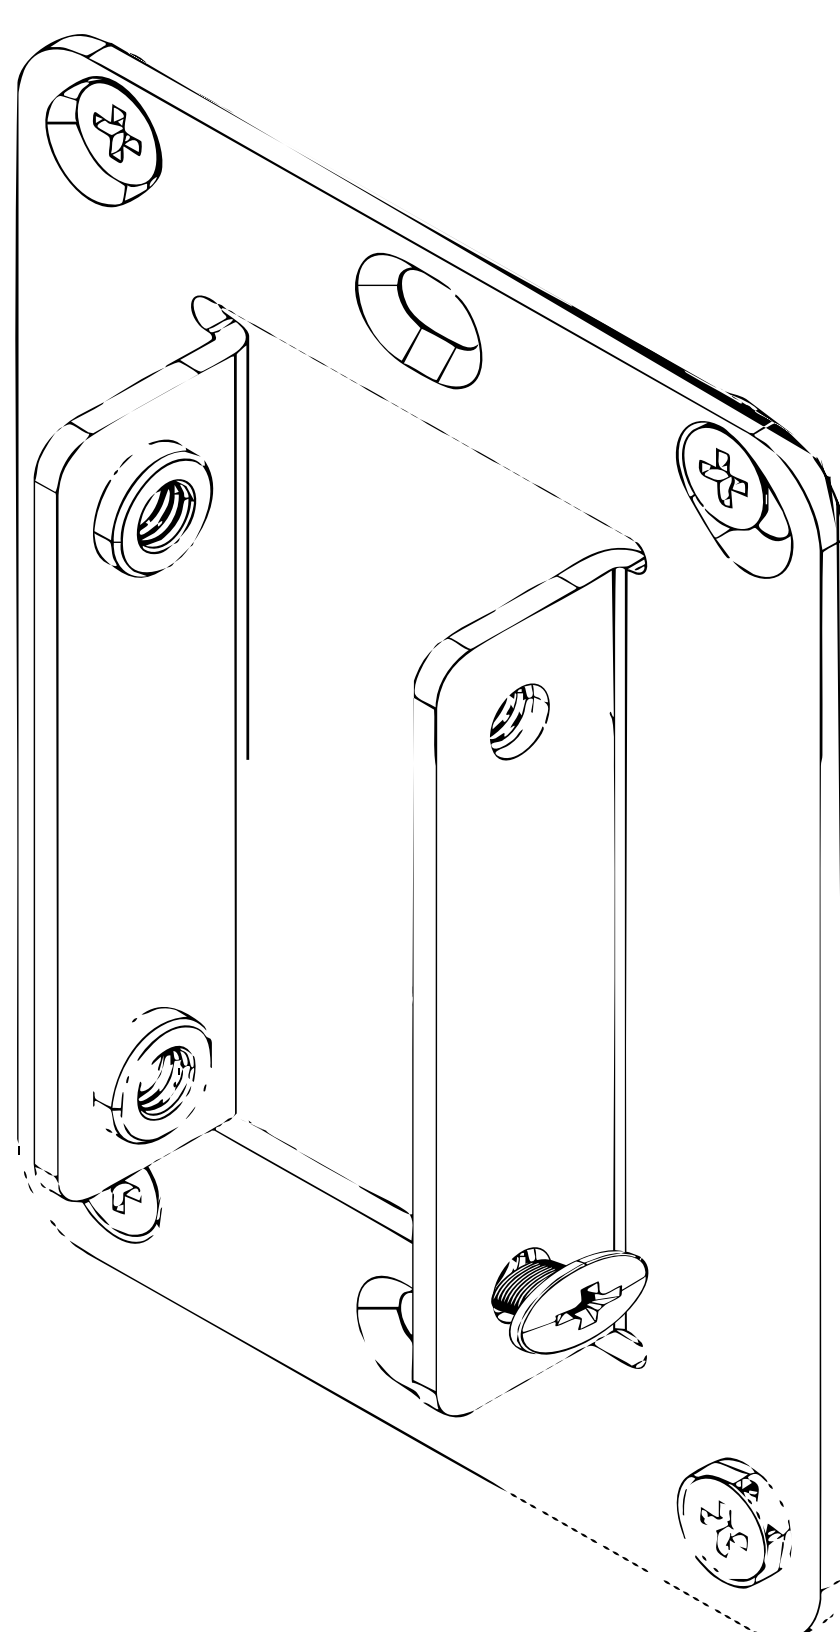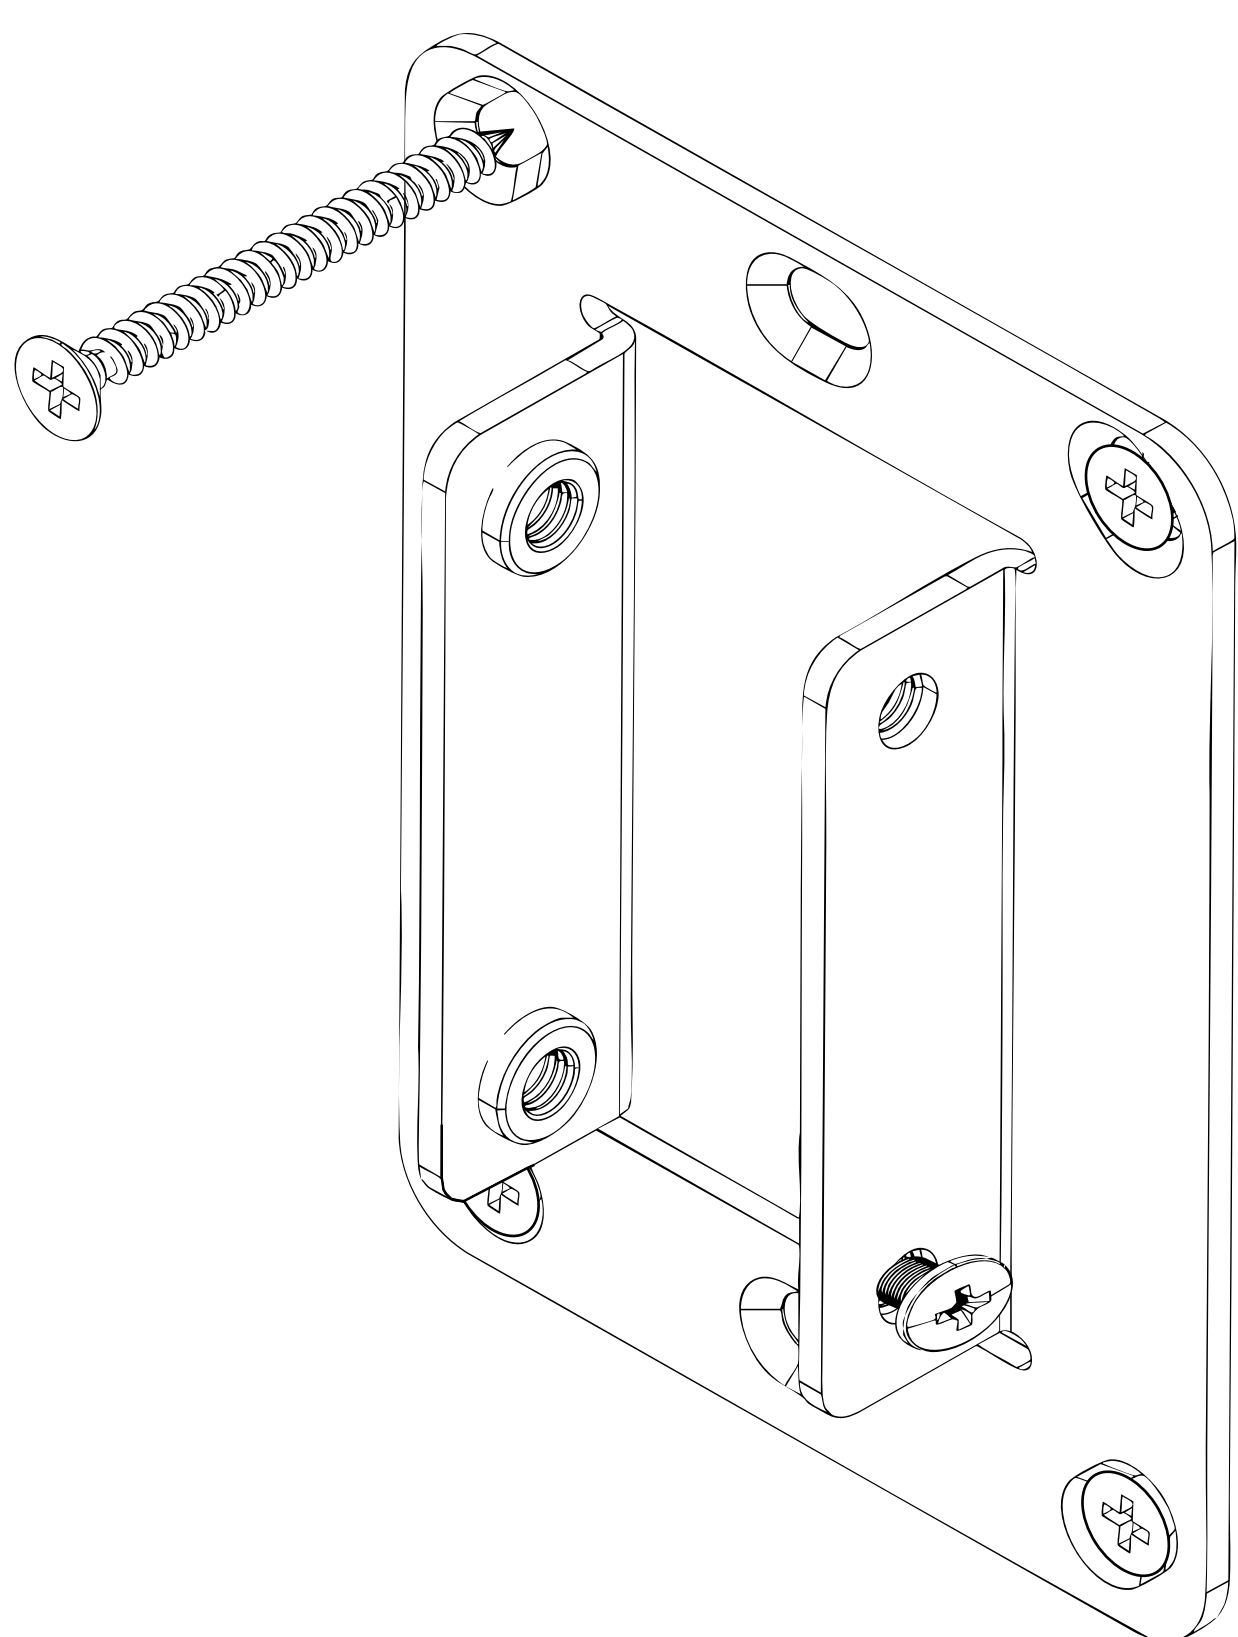

I PORT CONNECT MOUNT


TILT MOUNT

- 6. Place the Tilt Mount Adapter onto the Tilt Mount Bracket and install the torx security screw in the top right corner of the Tilt Mount.**

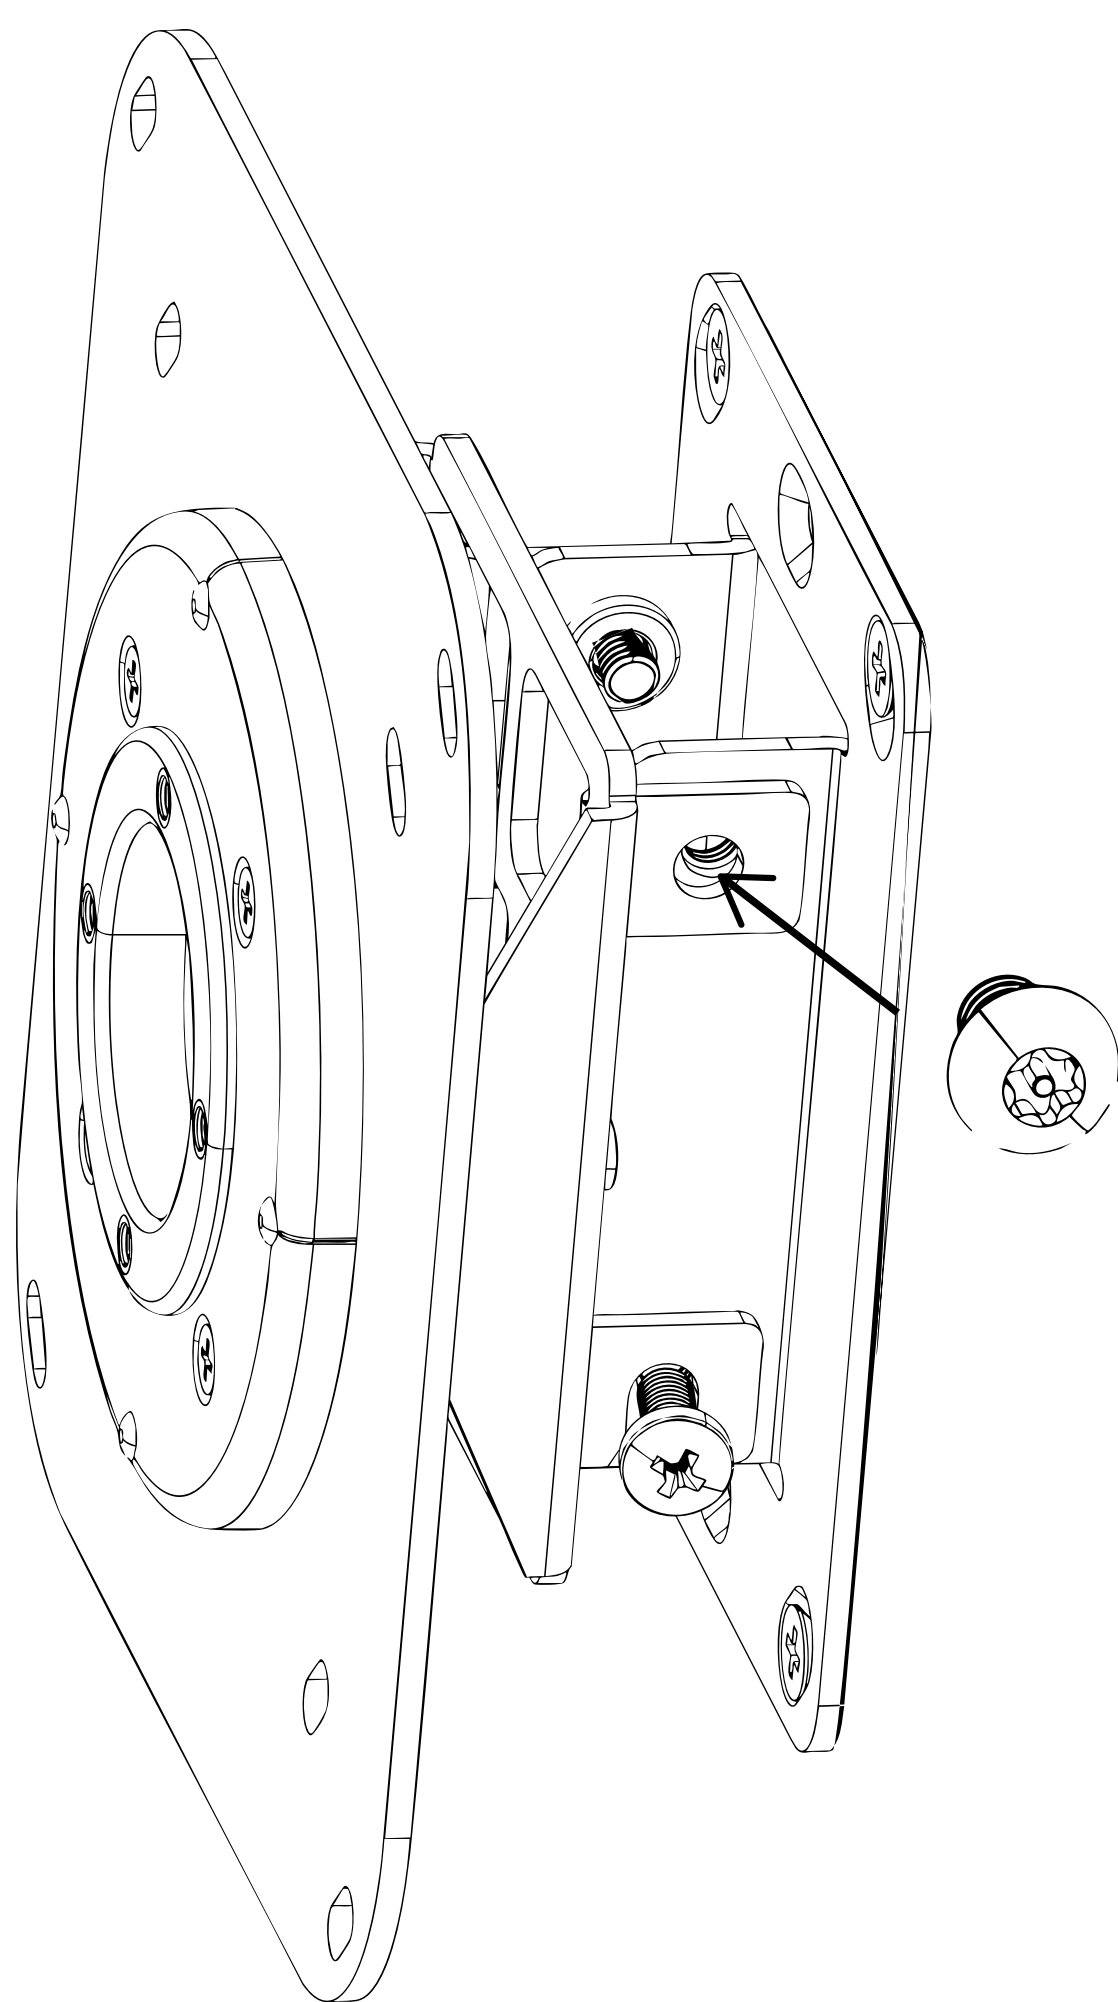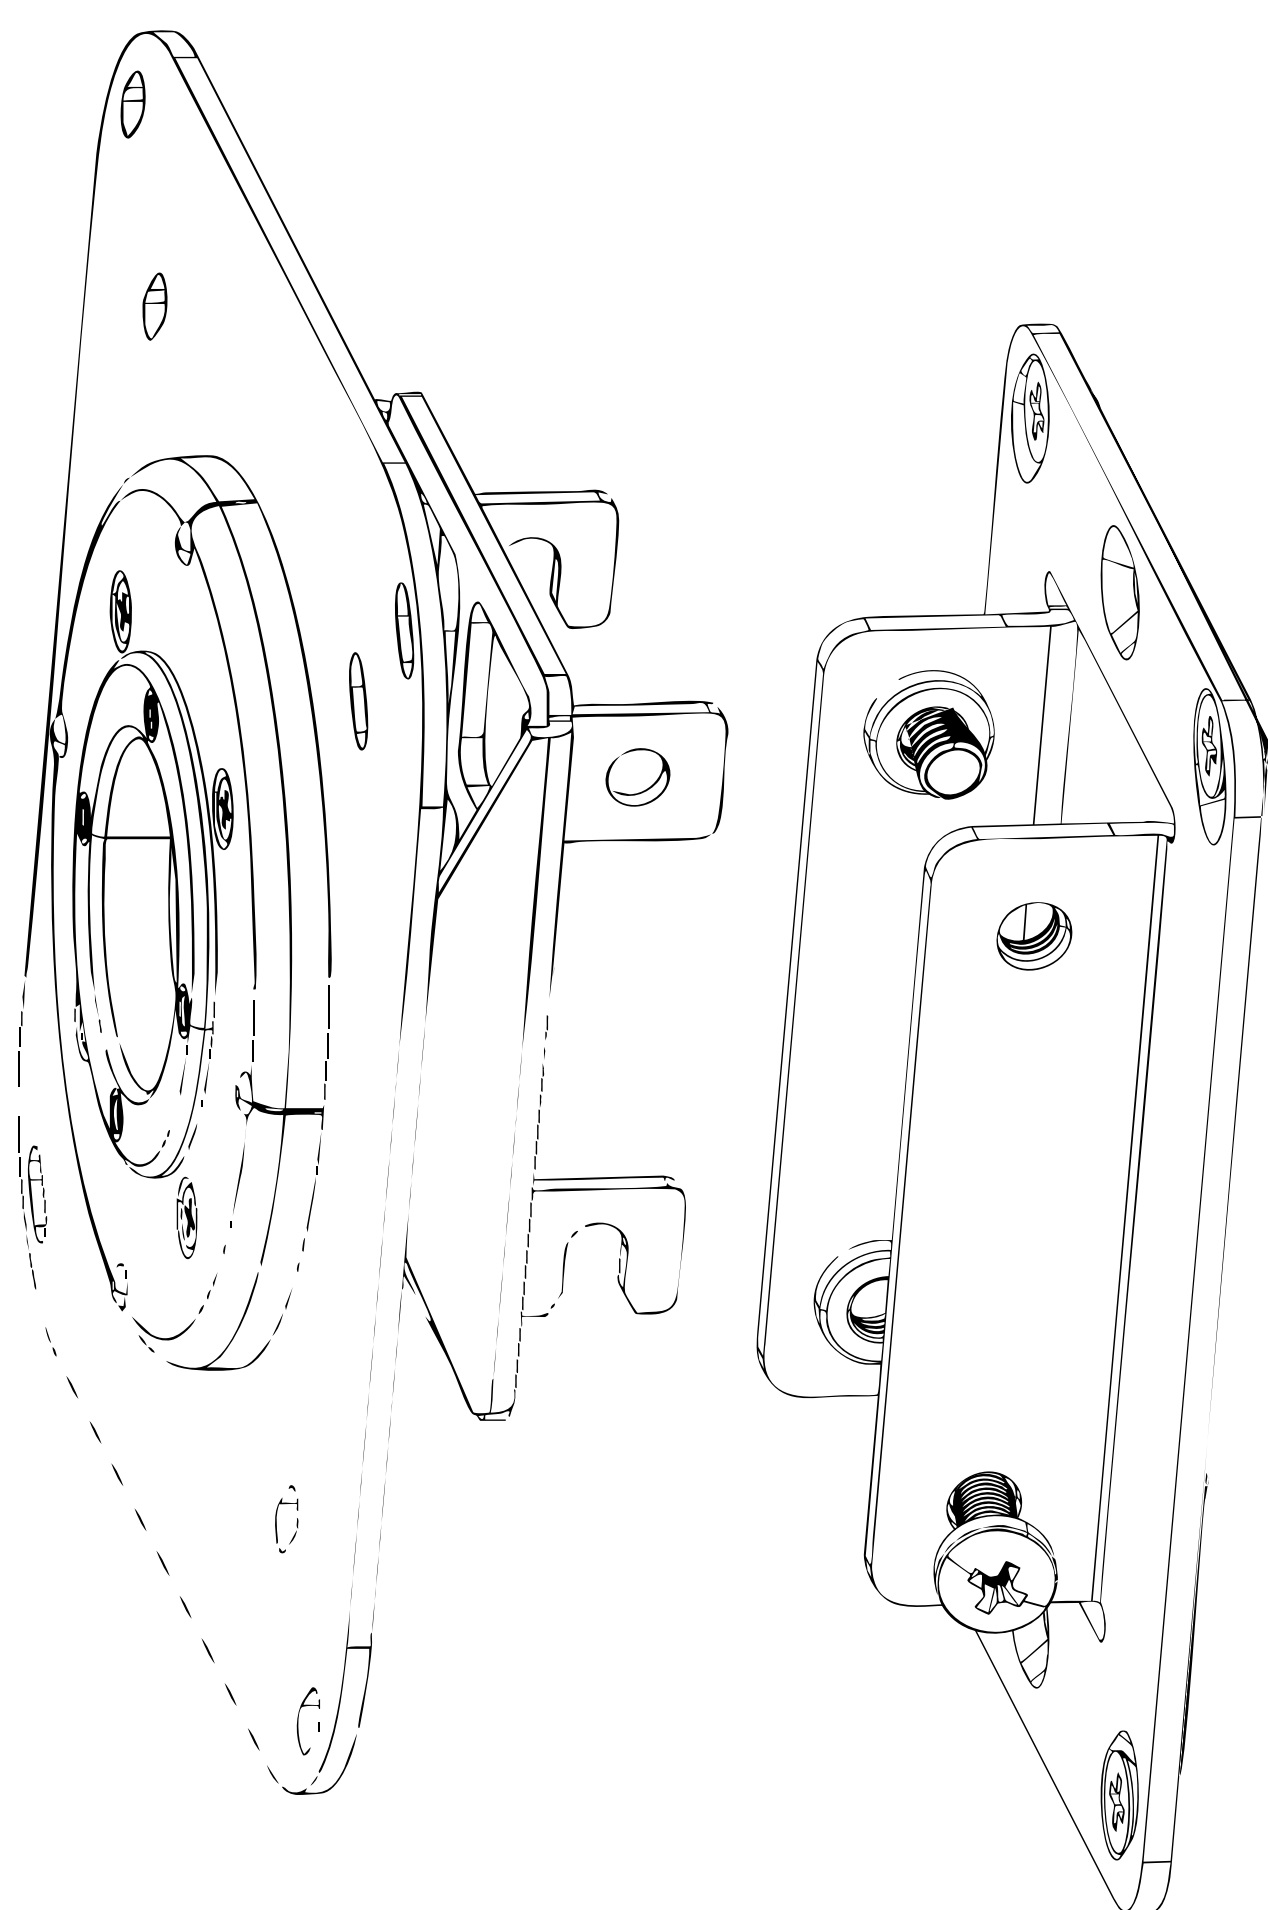


TILT MOUNT

- 7. Tighten the three Philips screws and the the one Security Torx head screw.**

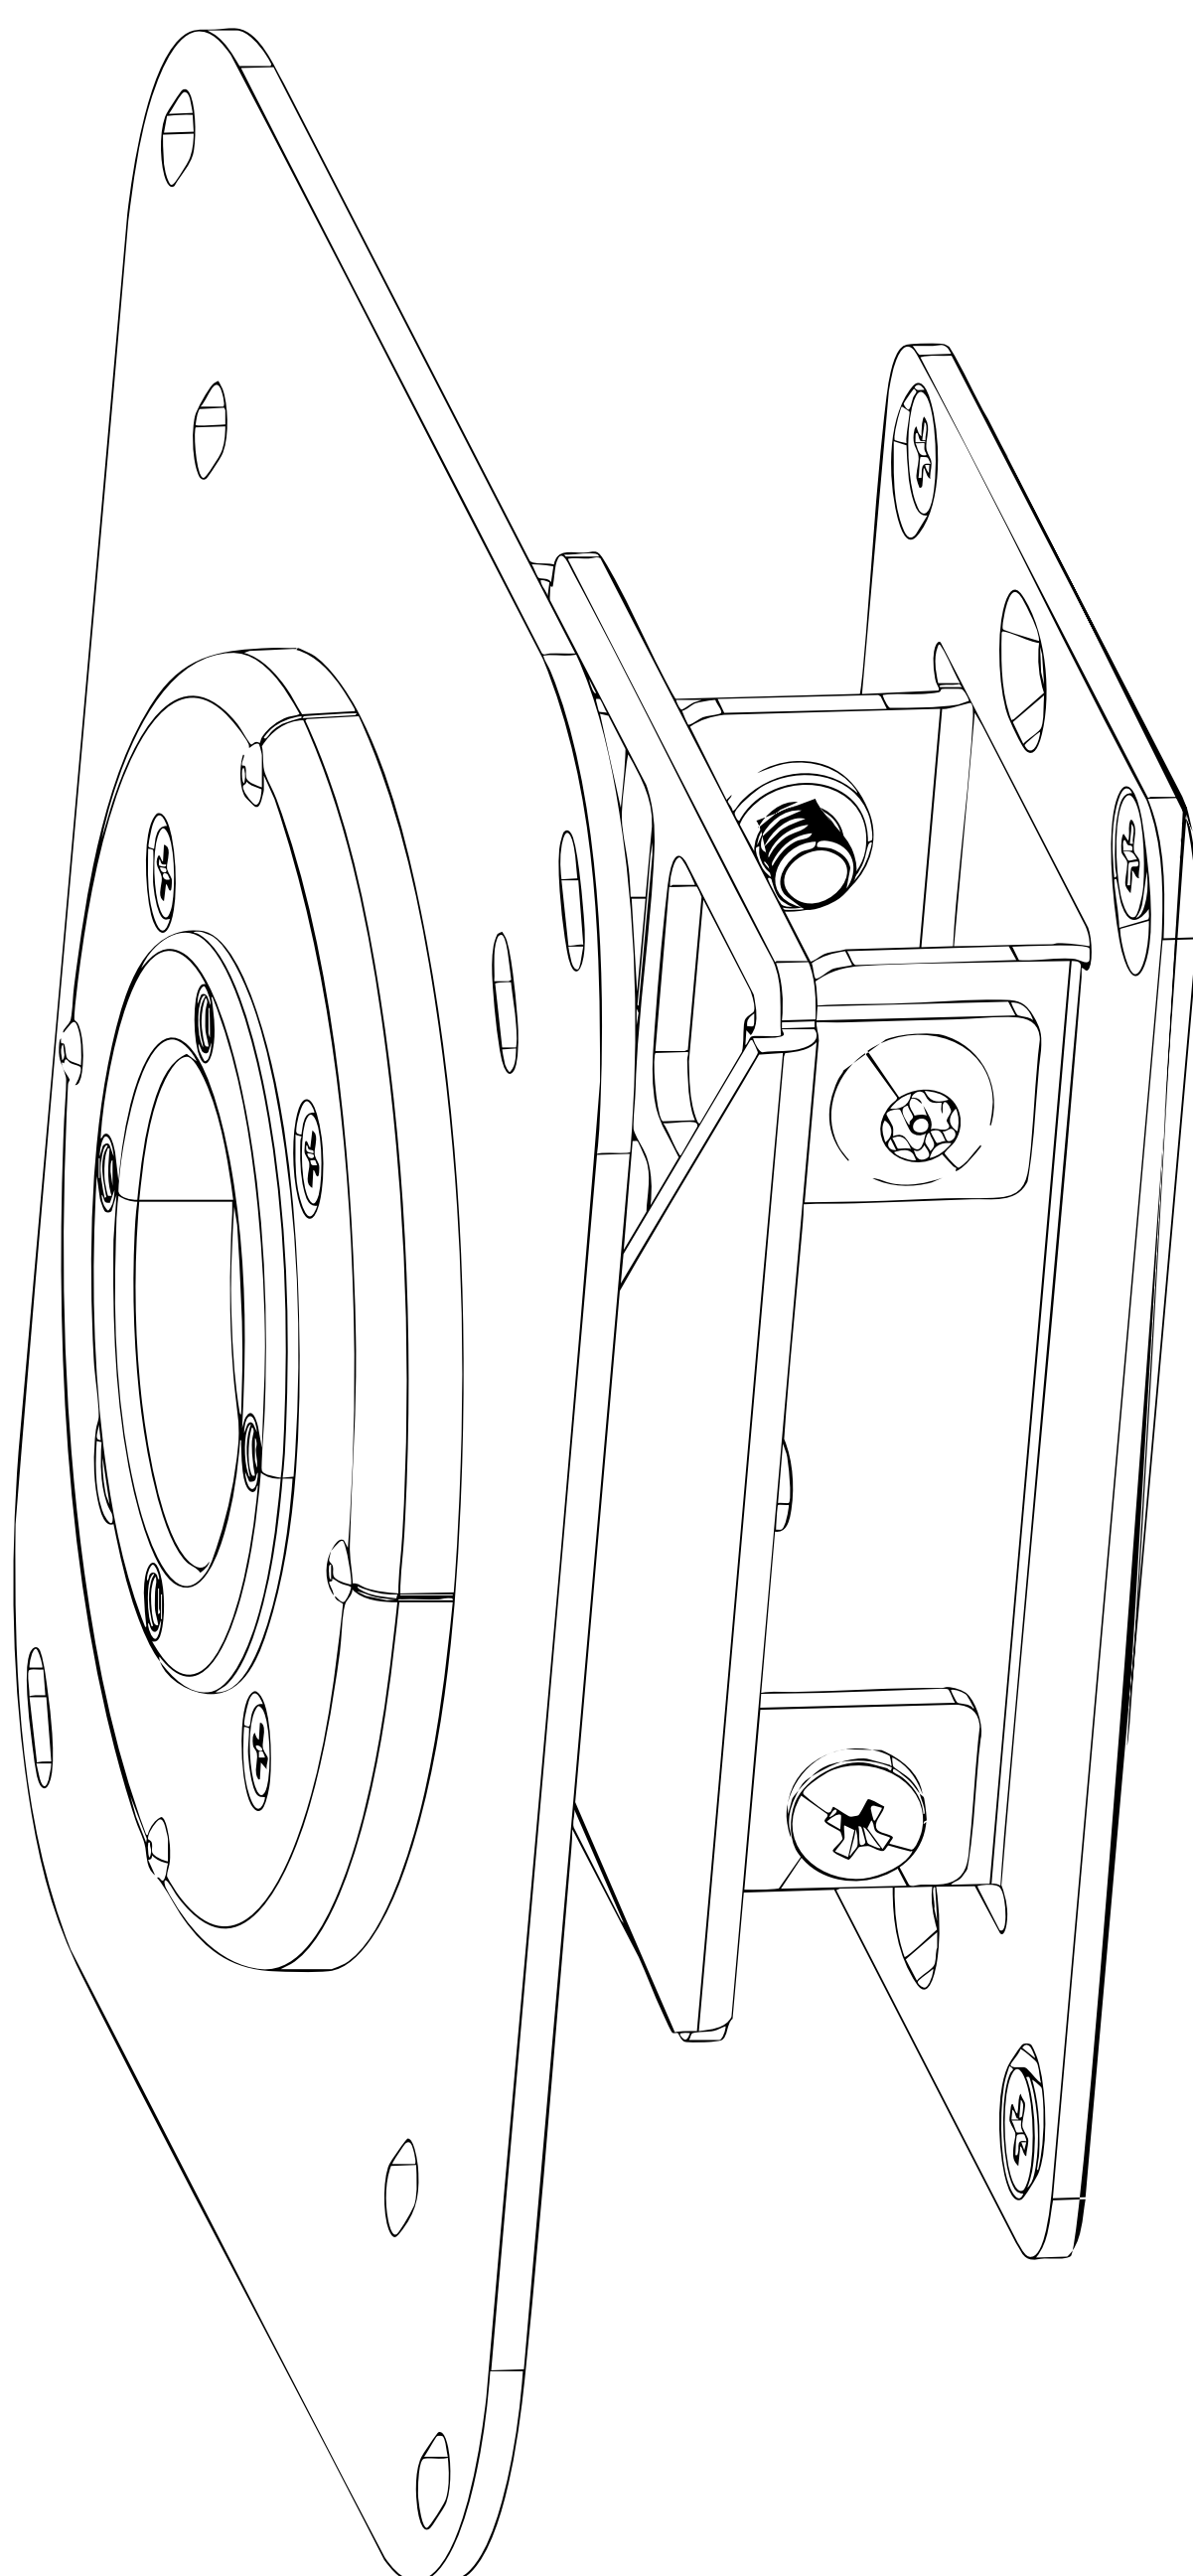

TILT MOUNT



- 8. Run the USB-C cable through the center of the mount and down towards the bottom then plug in the USB-C cable into the Apple iPad Charger.**

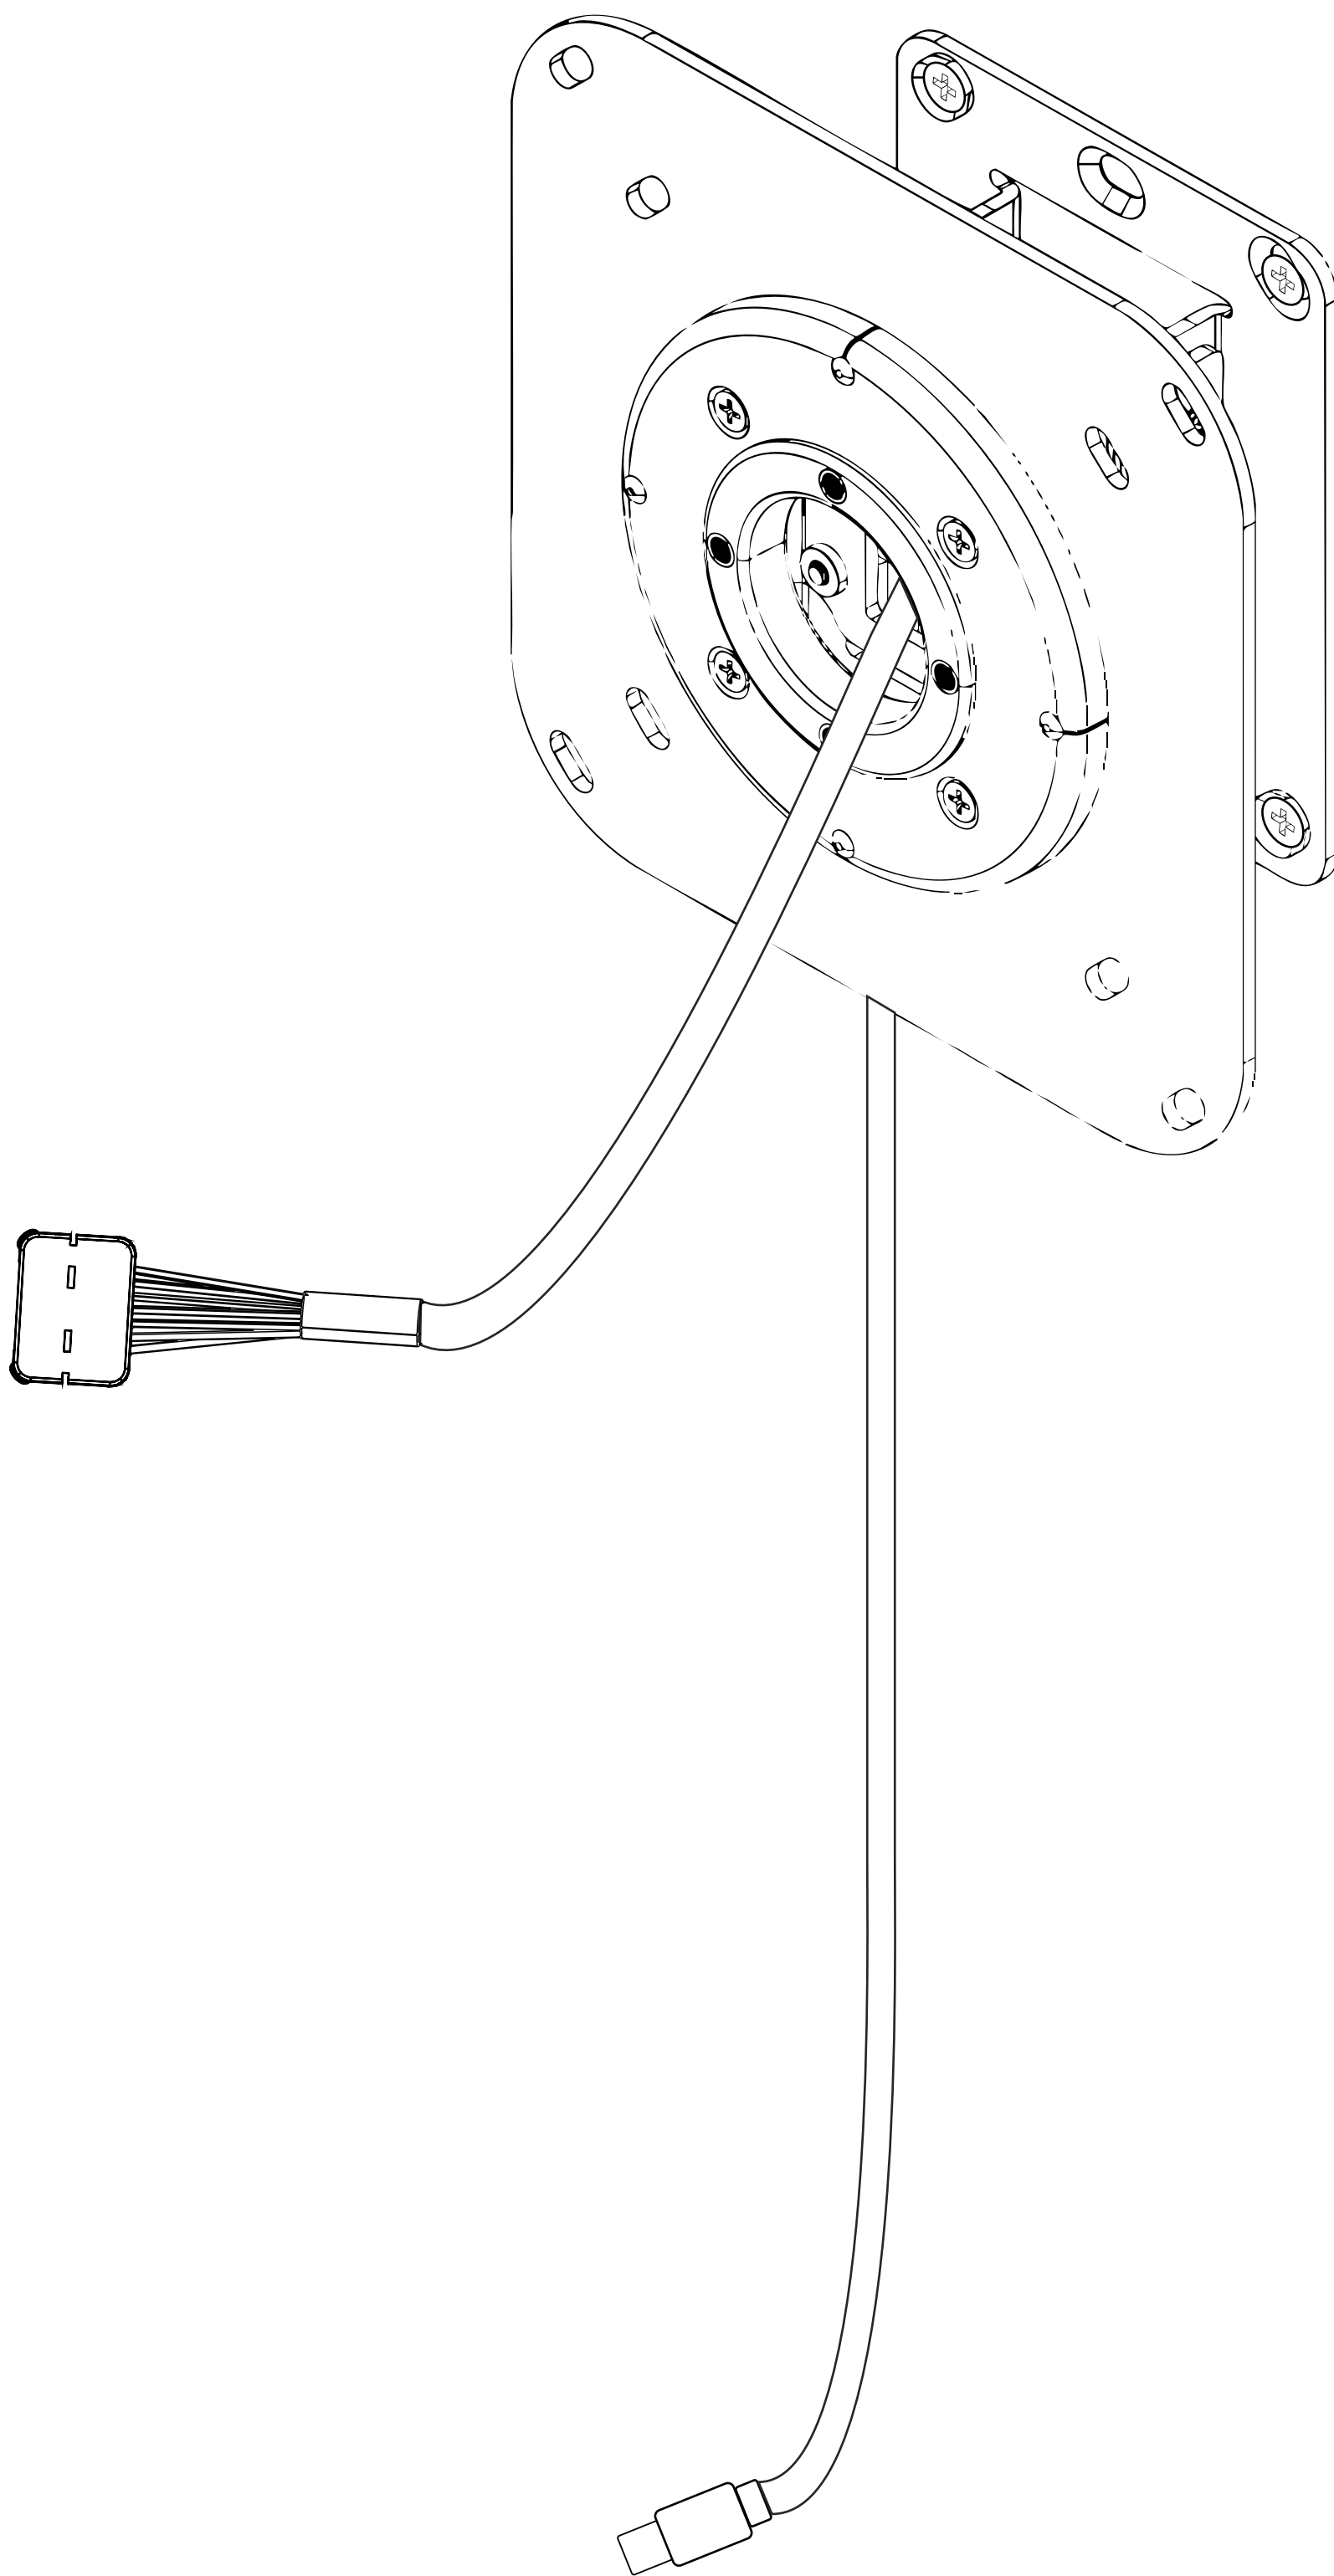

I PORT CONNECT MOUNT

TILT MOUNT



- 9. Remove the Case from the packaging. Disconnect the two molex cables and remove the CONNECT Case Module.**

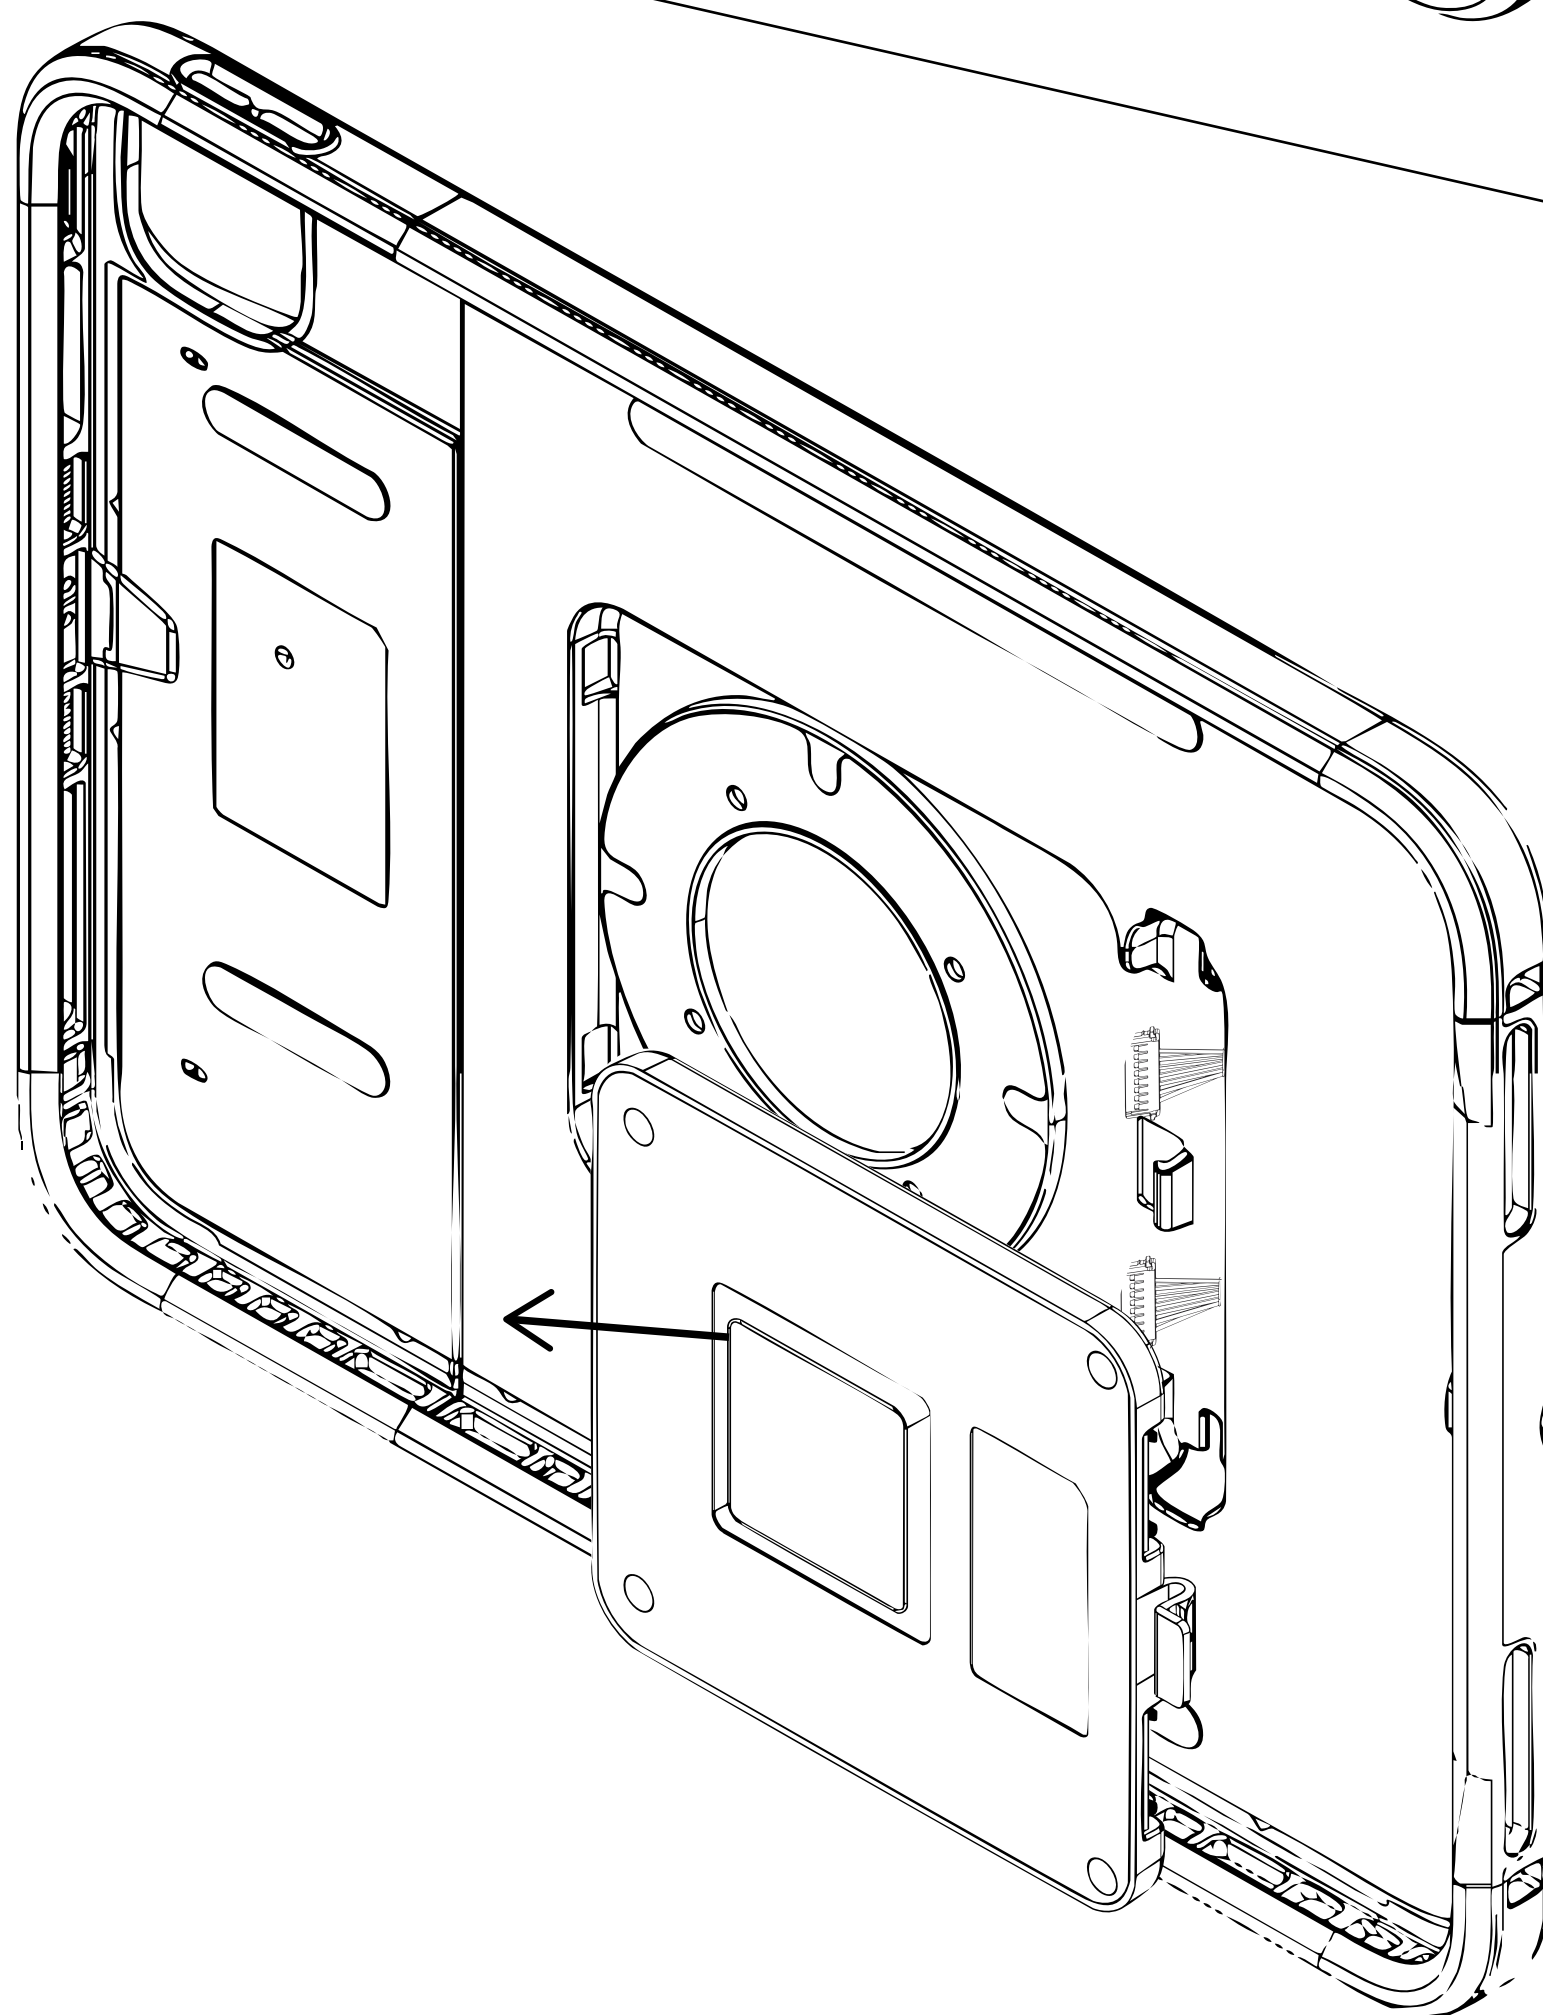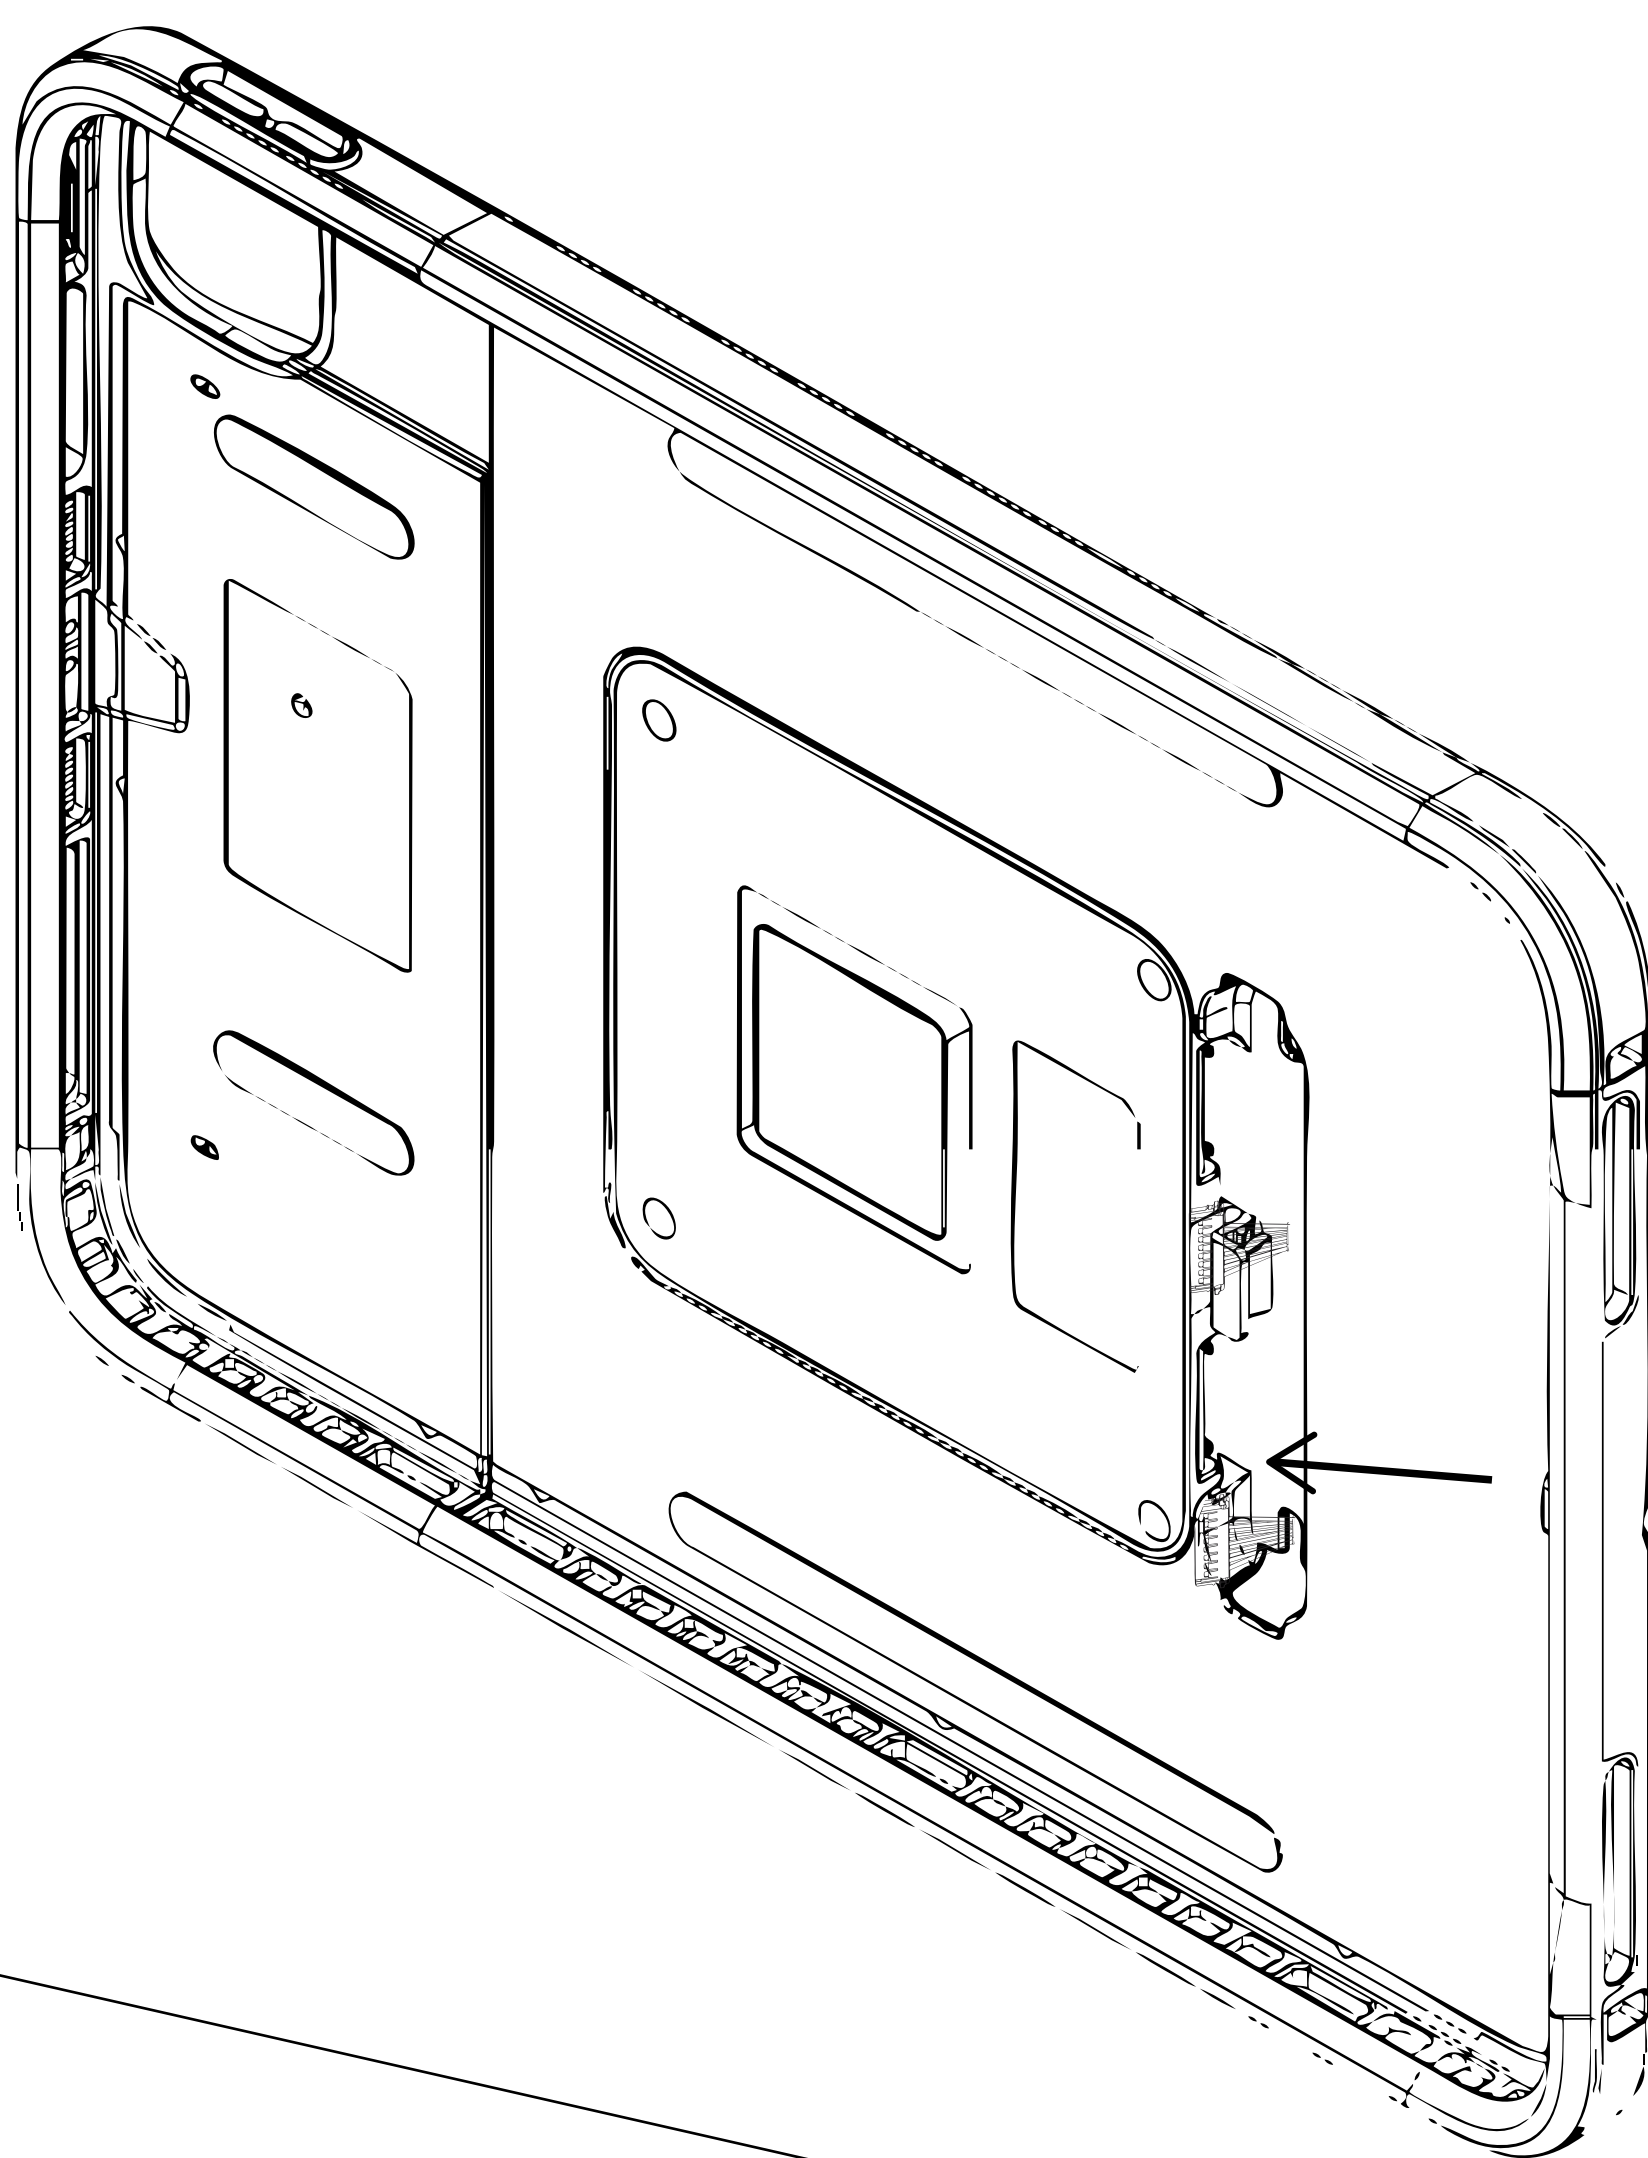

I PORT CONNECT MOUNT

TILT MOUNT



10. Insert the **CONNECT** mounting bracket into the **CONNECT CASE** making sure the bracket snaps into place securely.

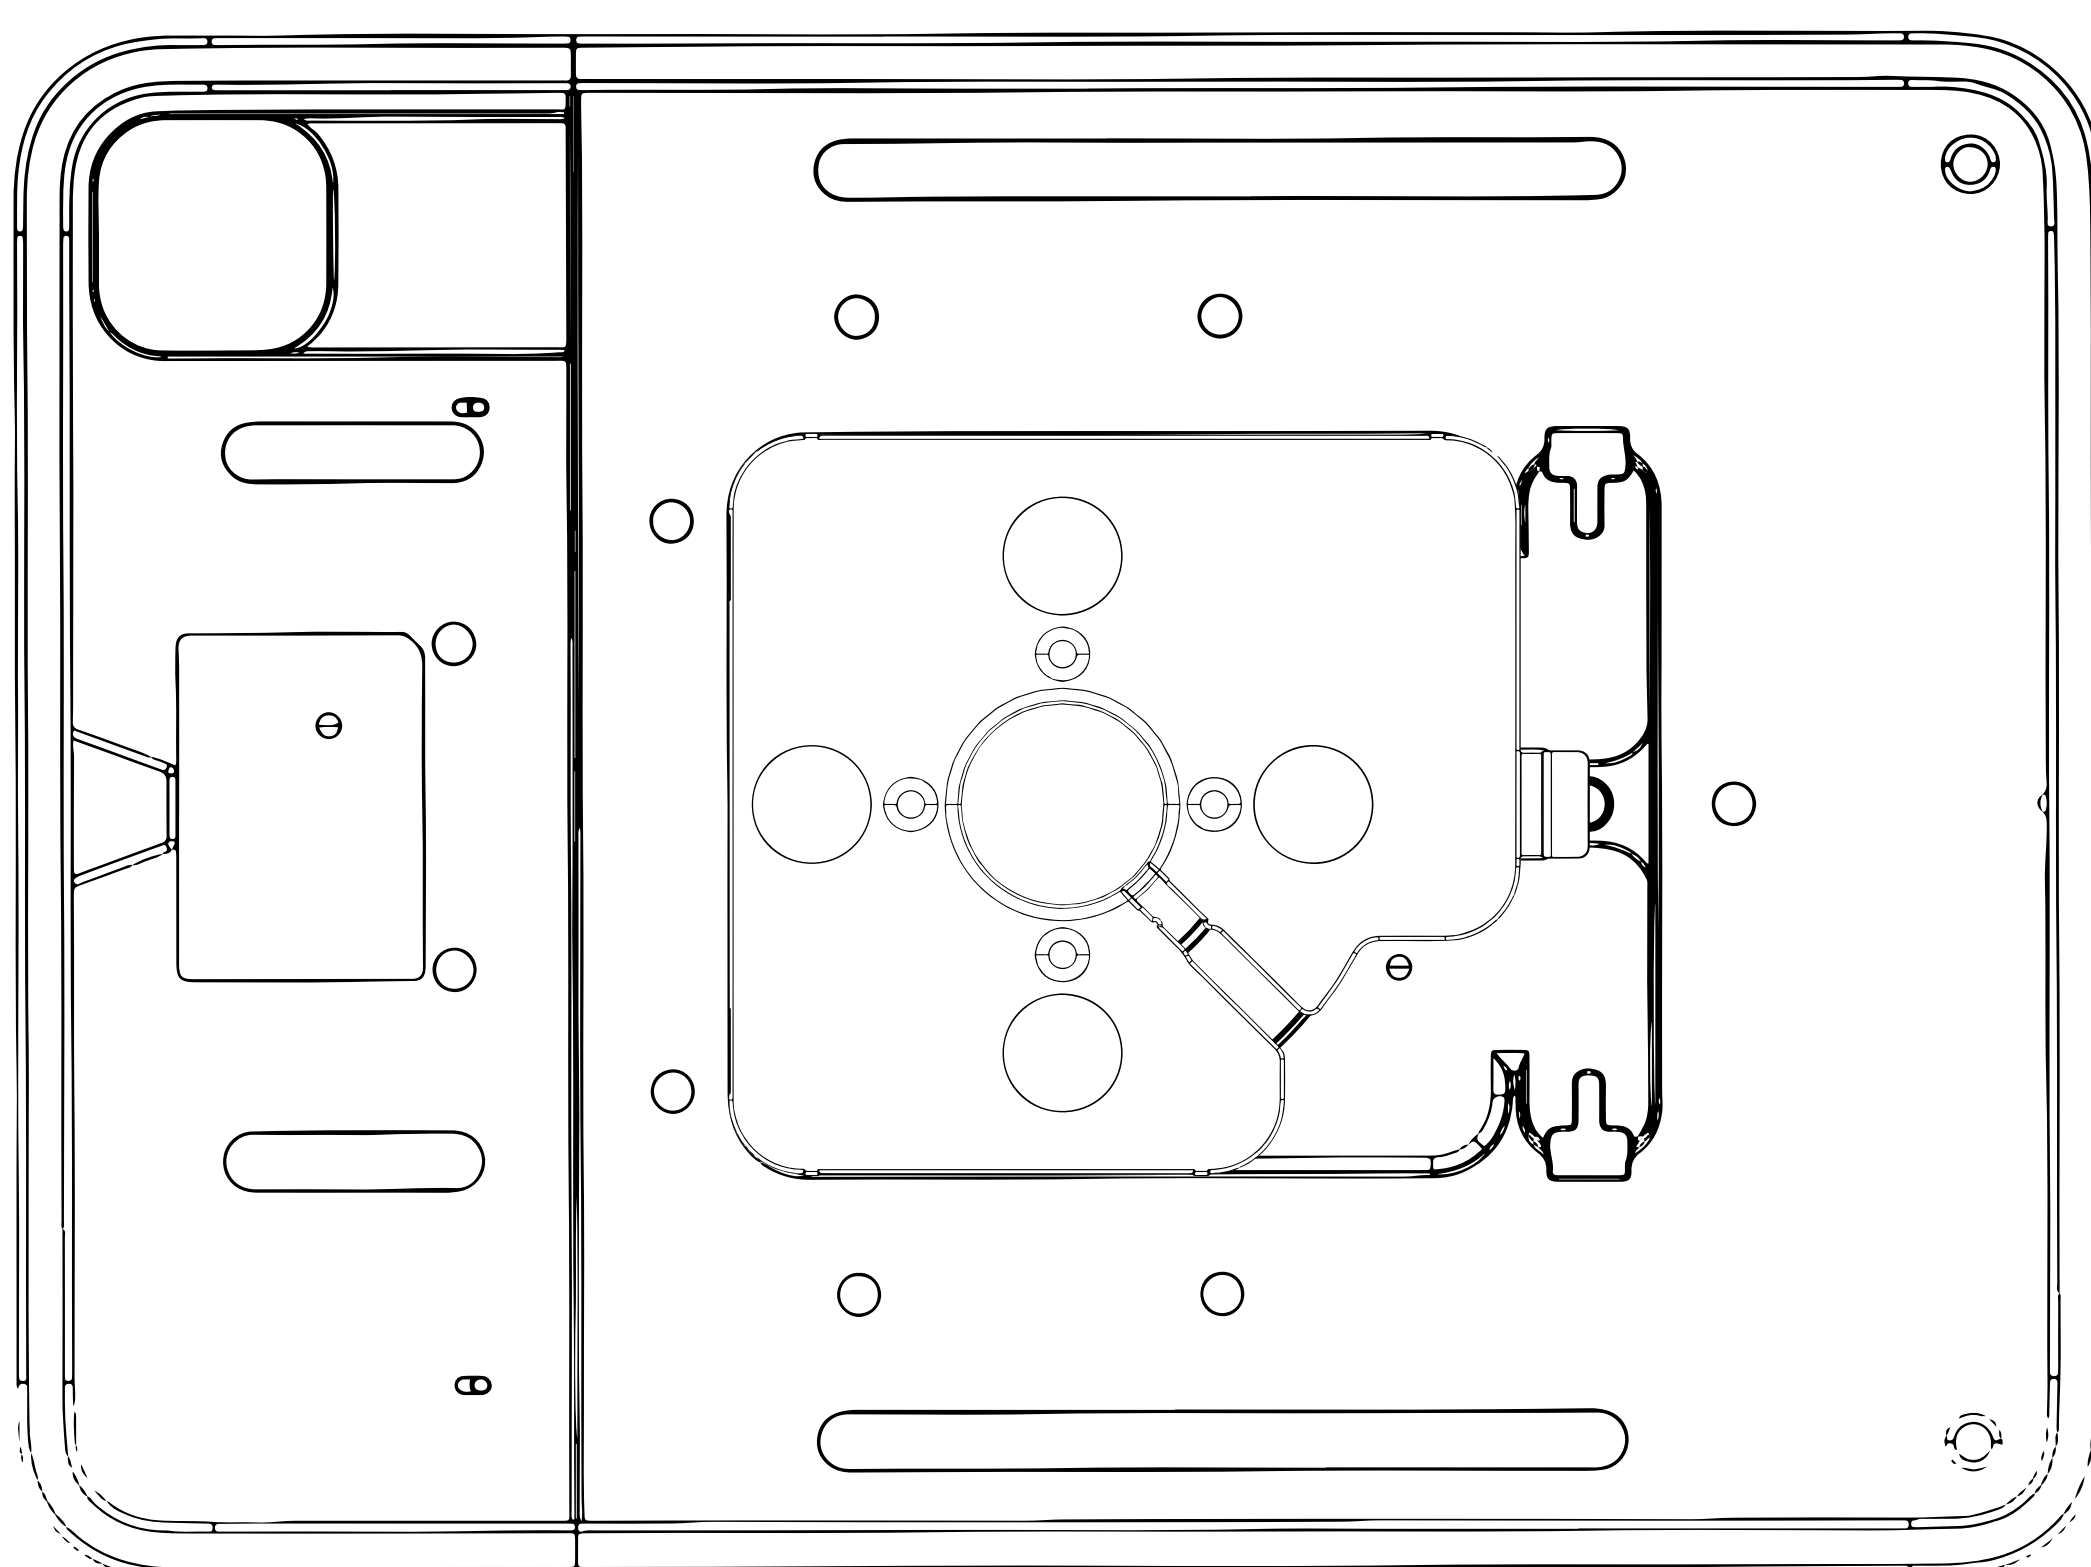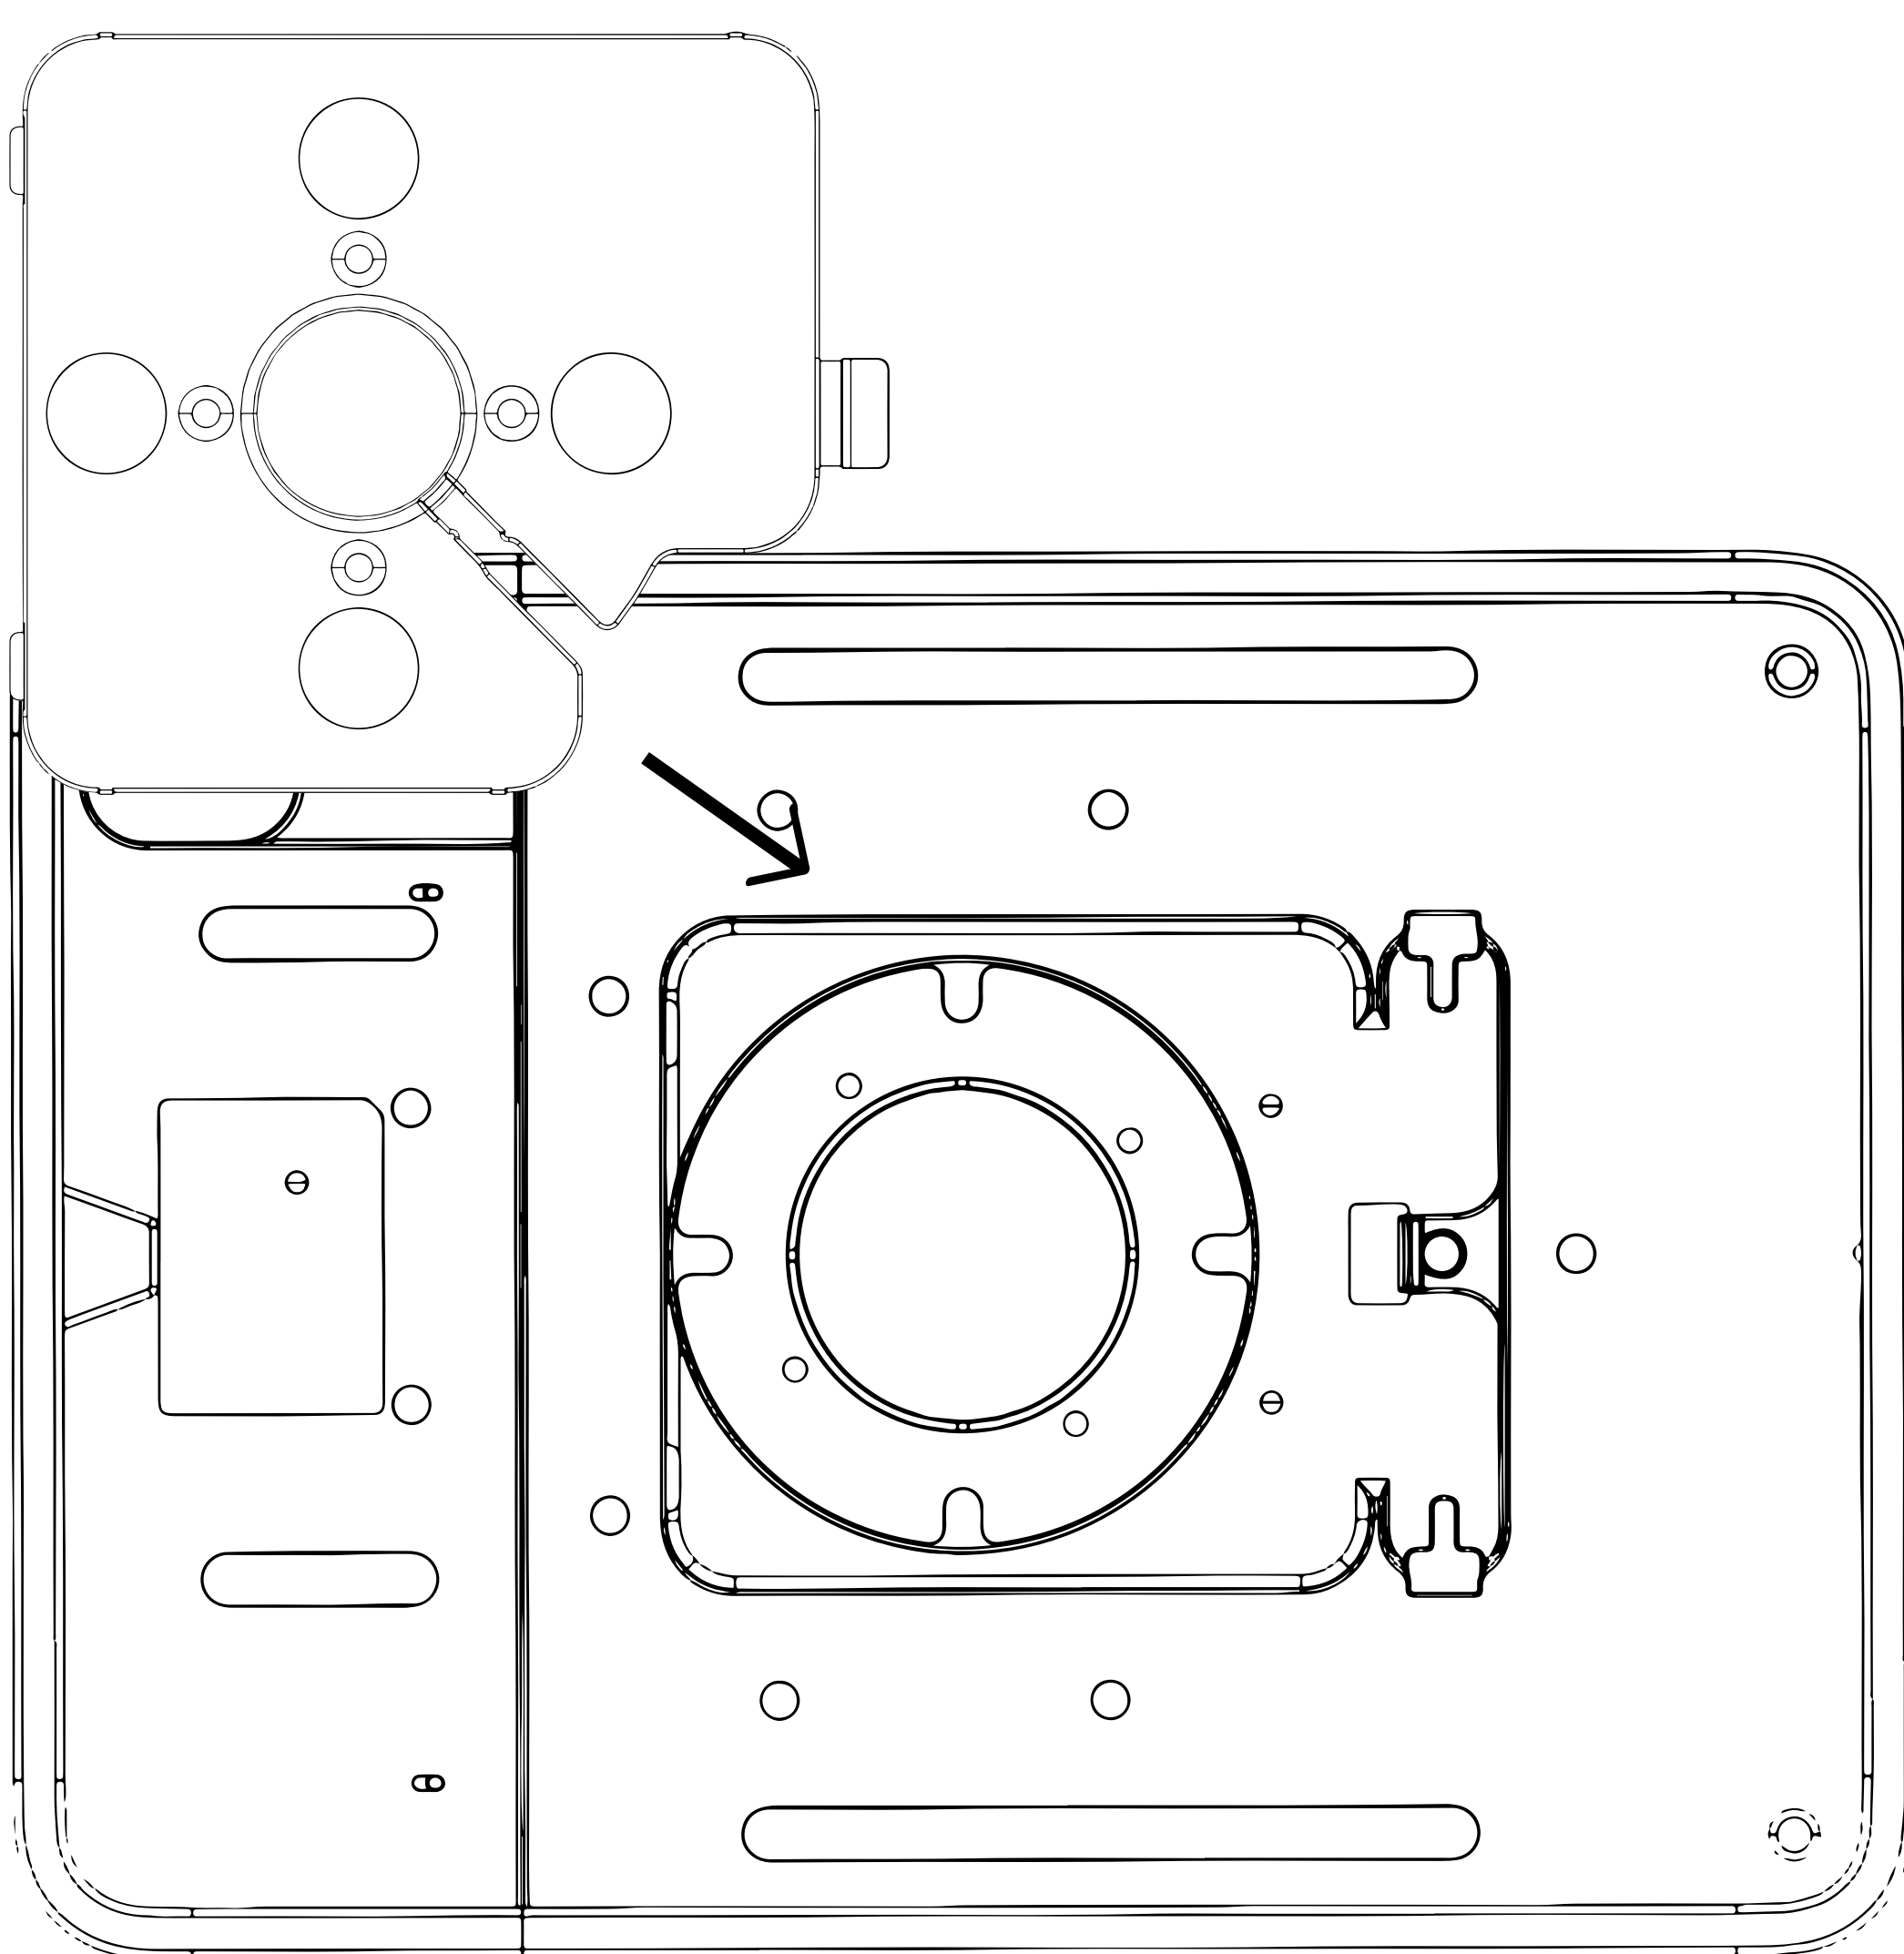

I PORT CONNECT MOUNT

TILT MOUNT


- 11. Place the Case onto the MOUNT in the desired portrait or landscape orientation. Feed the IPORT Molex cable through the center of the mounting bracket.**

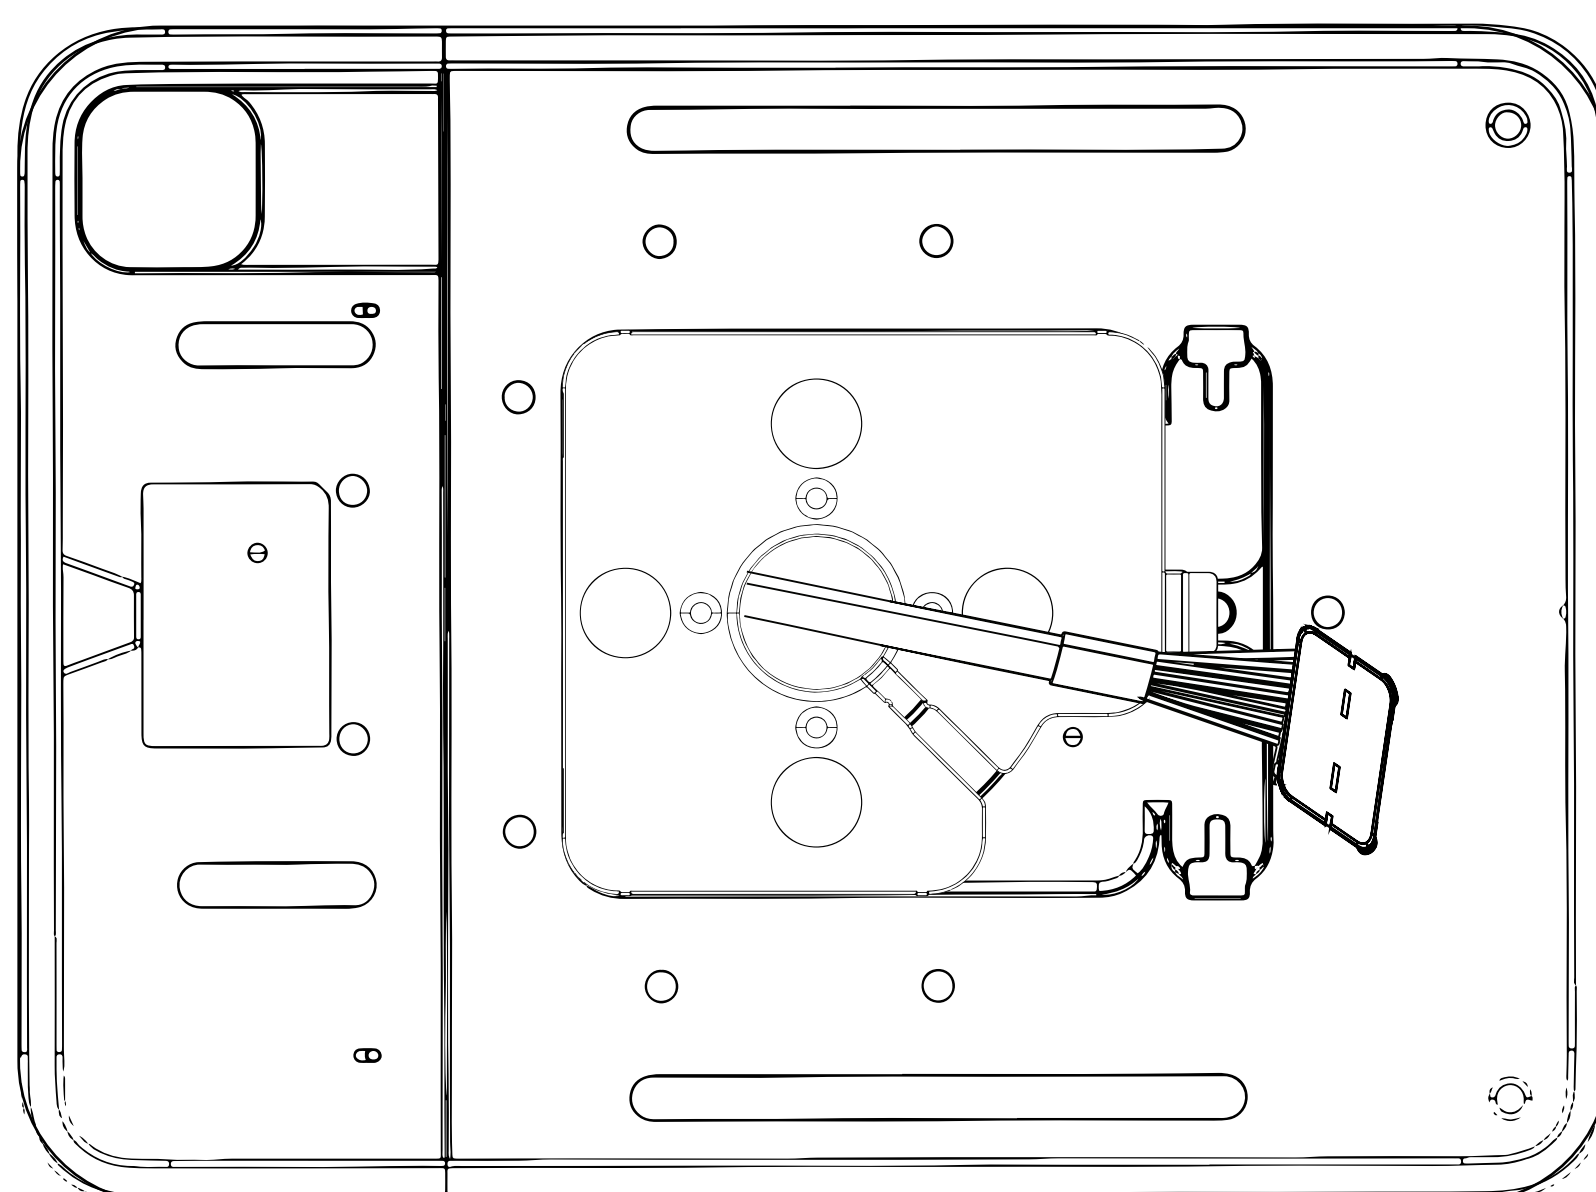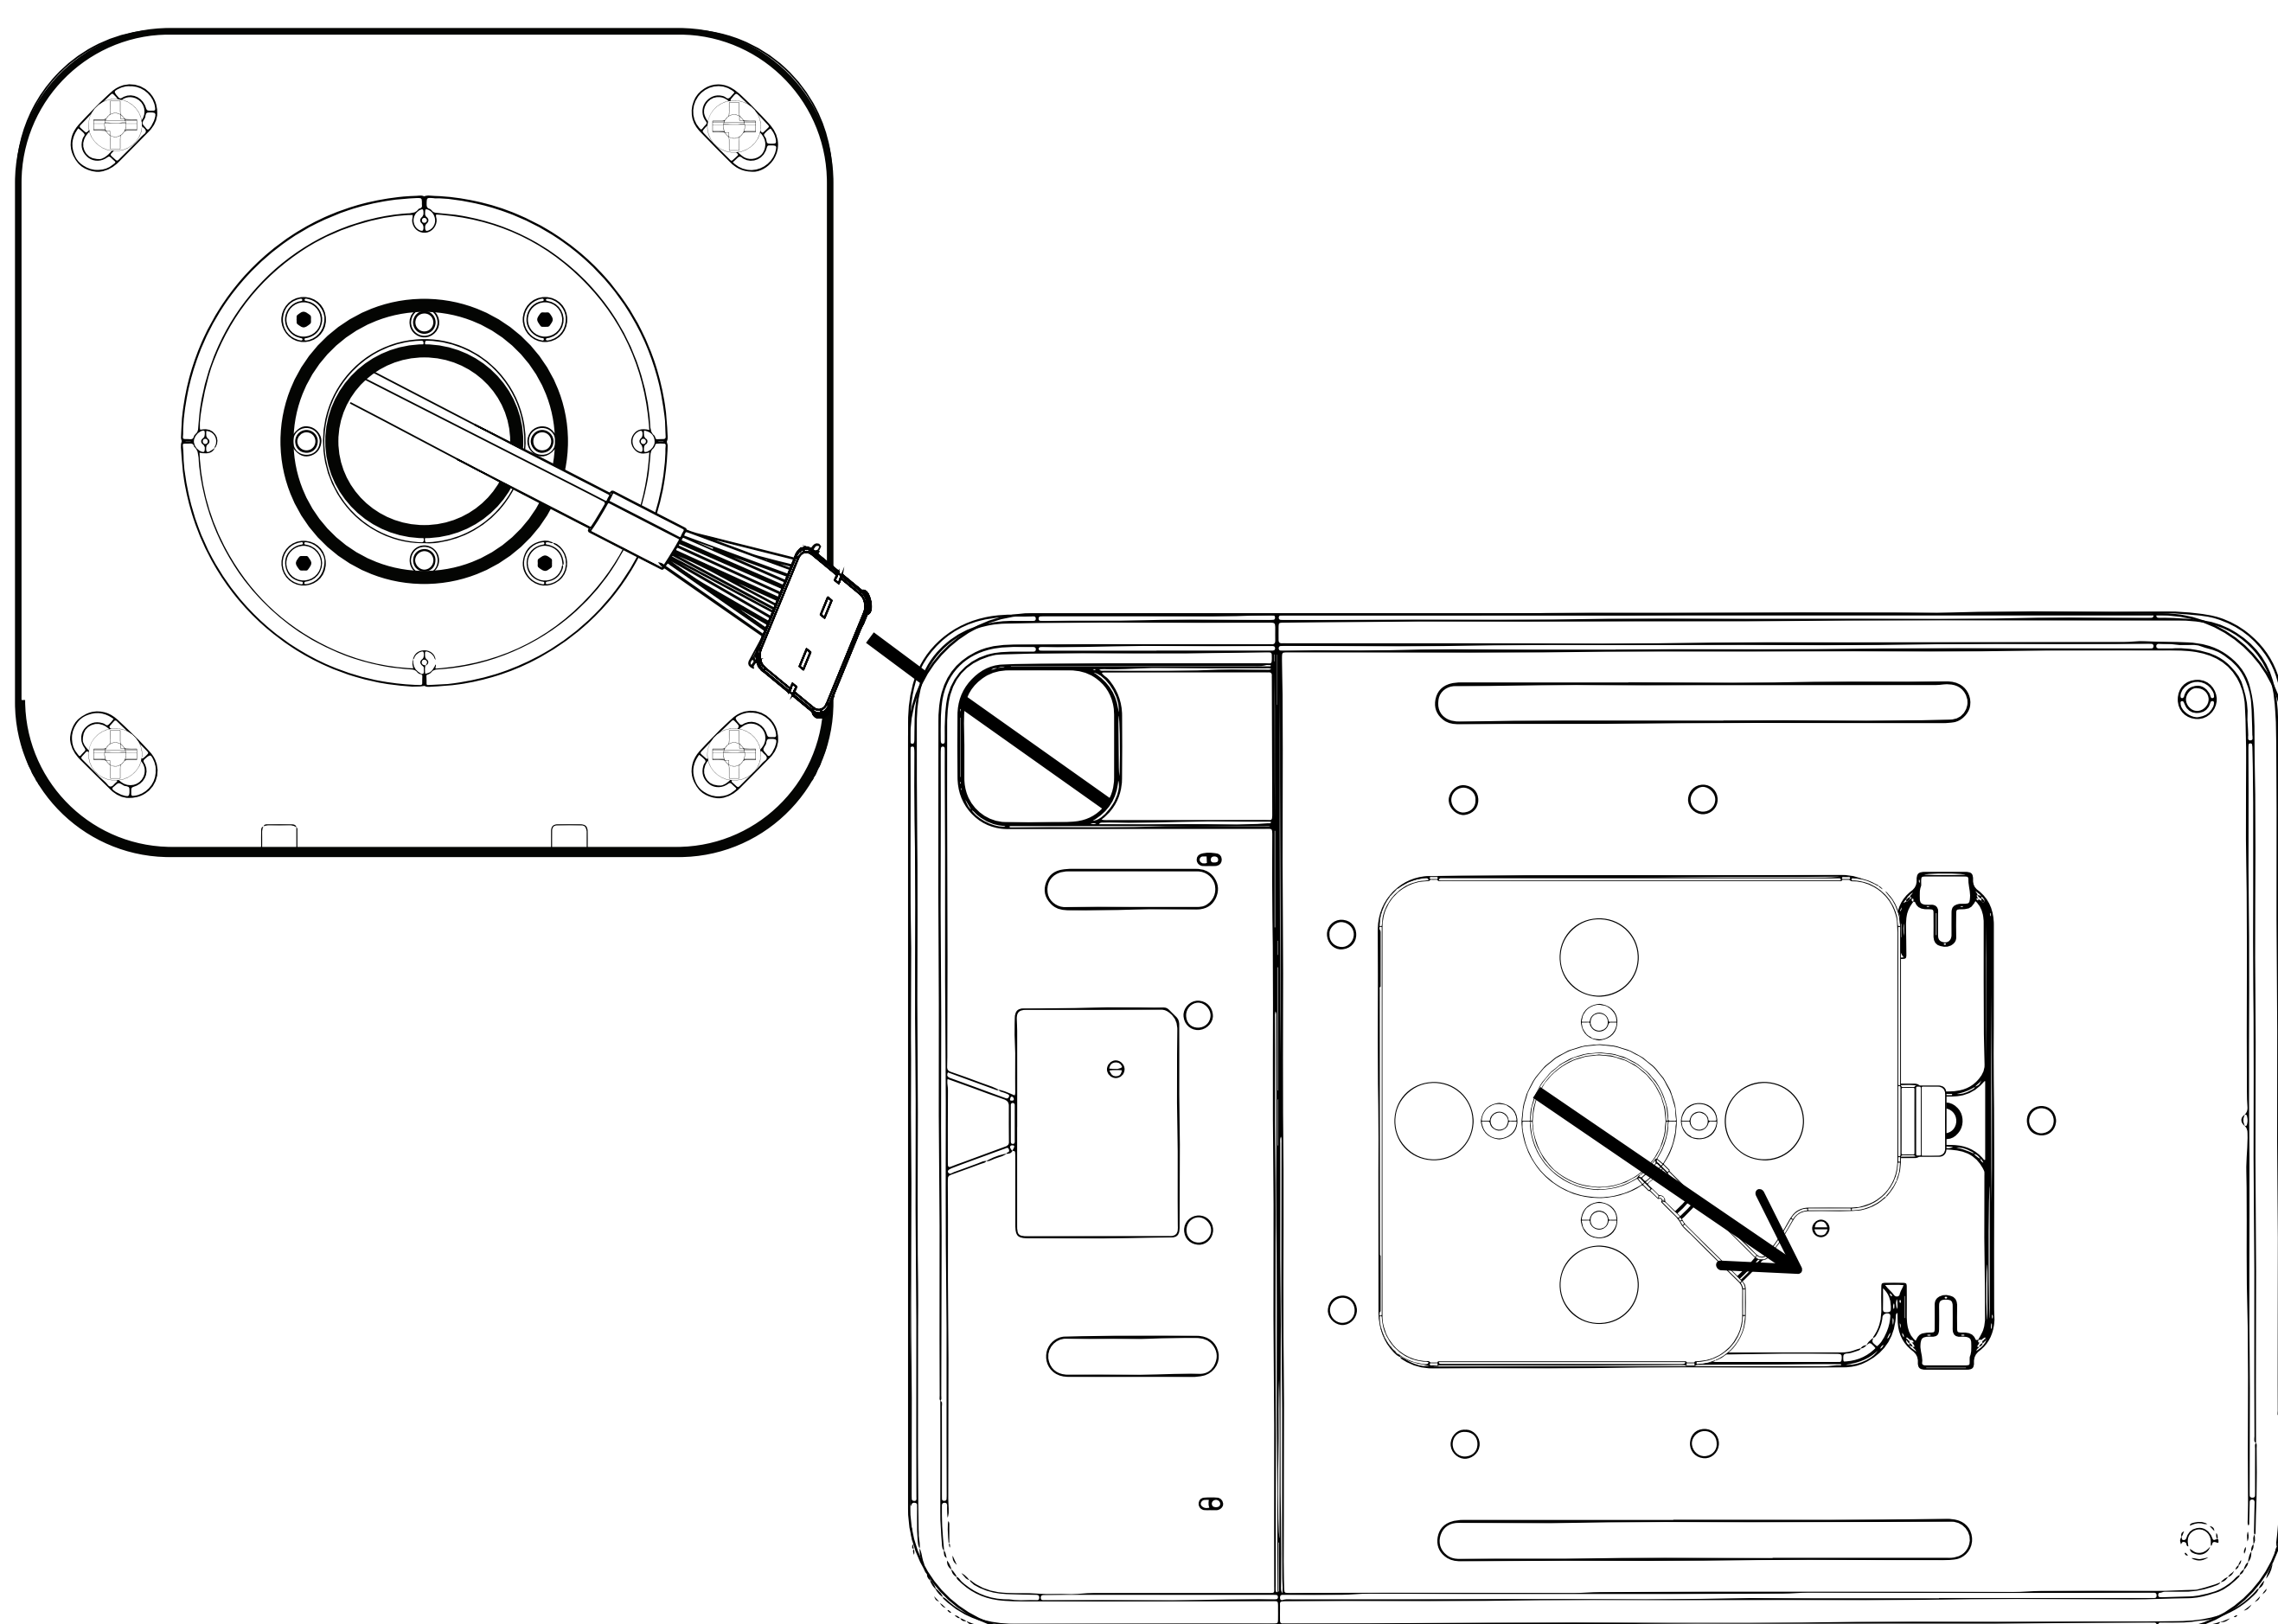


I PORT CONNECT MOUNT

TILT MOUNT

12. Use the provided 4 machine screws to attach the Mounting Bracket to the CONNECT Mount Bracket.


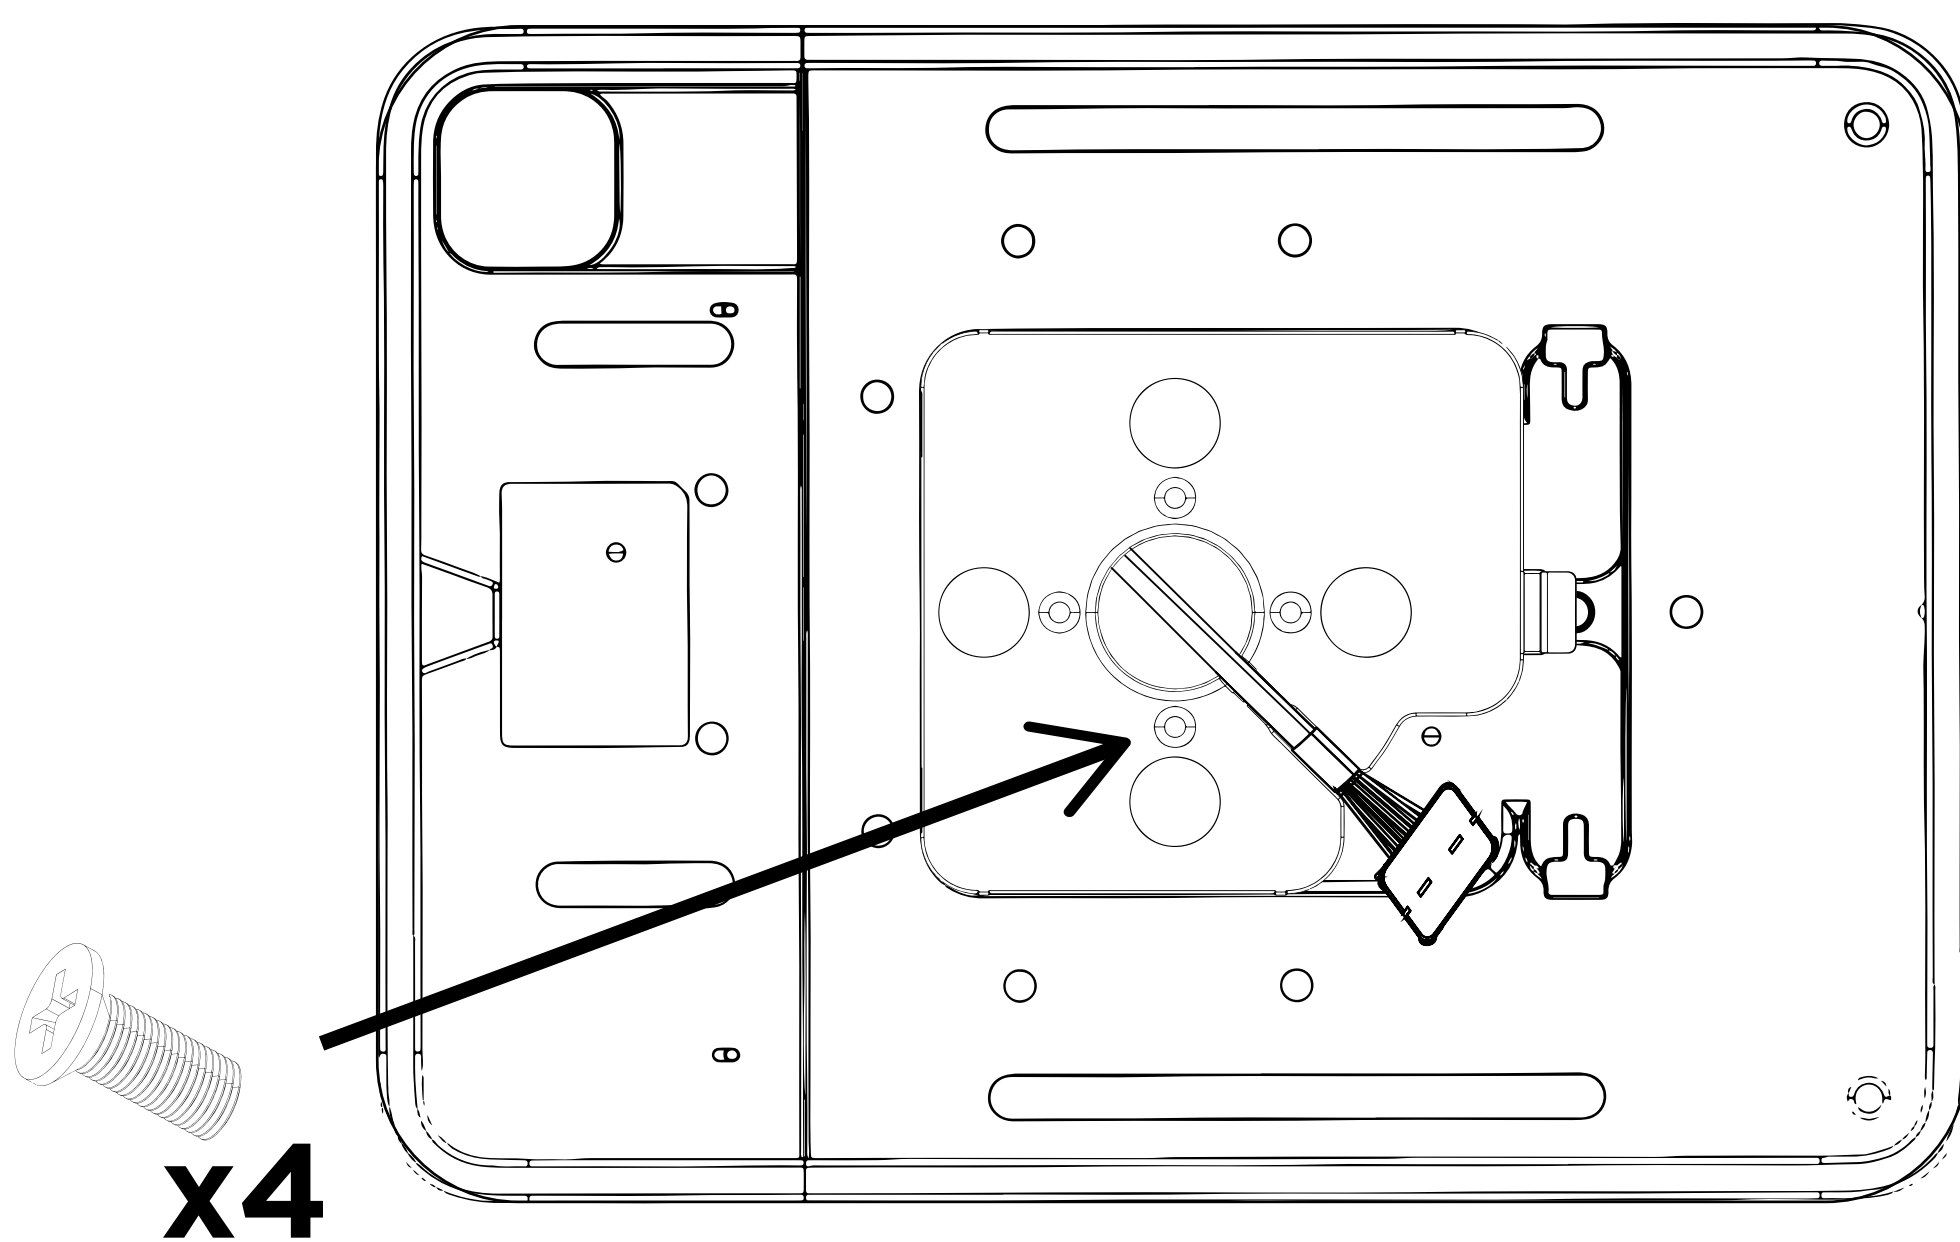


13. Plug the molex connector from the Mount into the cable on the CONNECT CASE. Note the gold pins are facing outward when connecting into the Mount cable. Press the Mount cable into the channel to hold and secure the cable out of the way of the iPad.

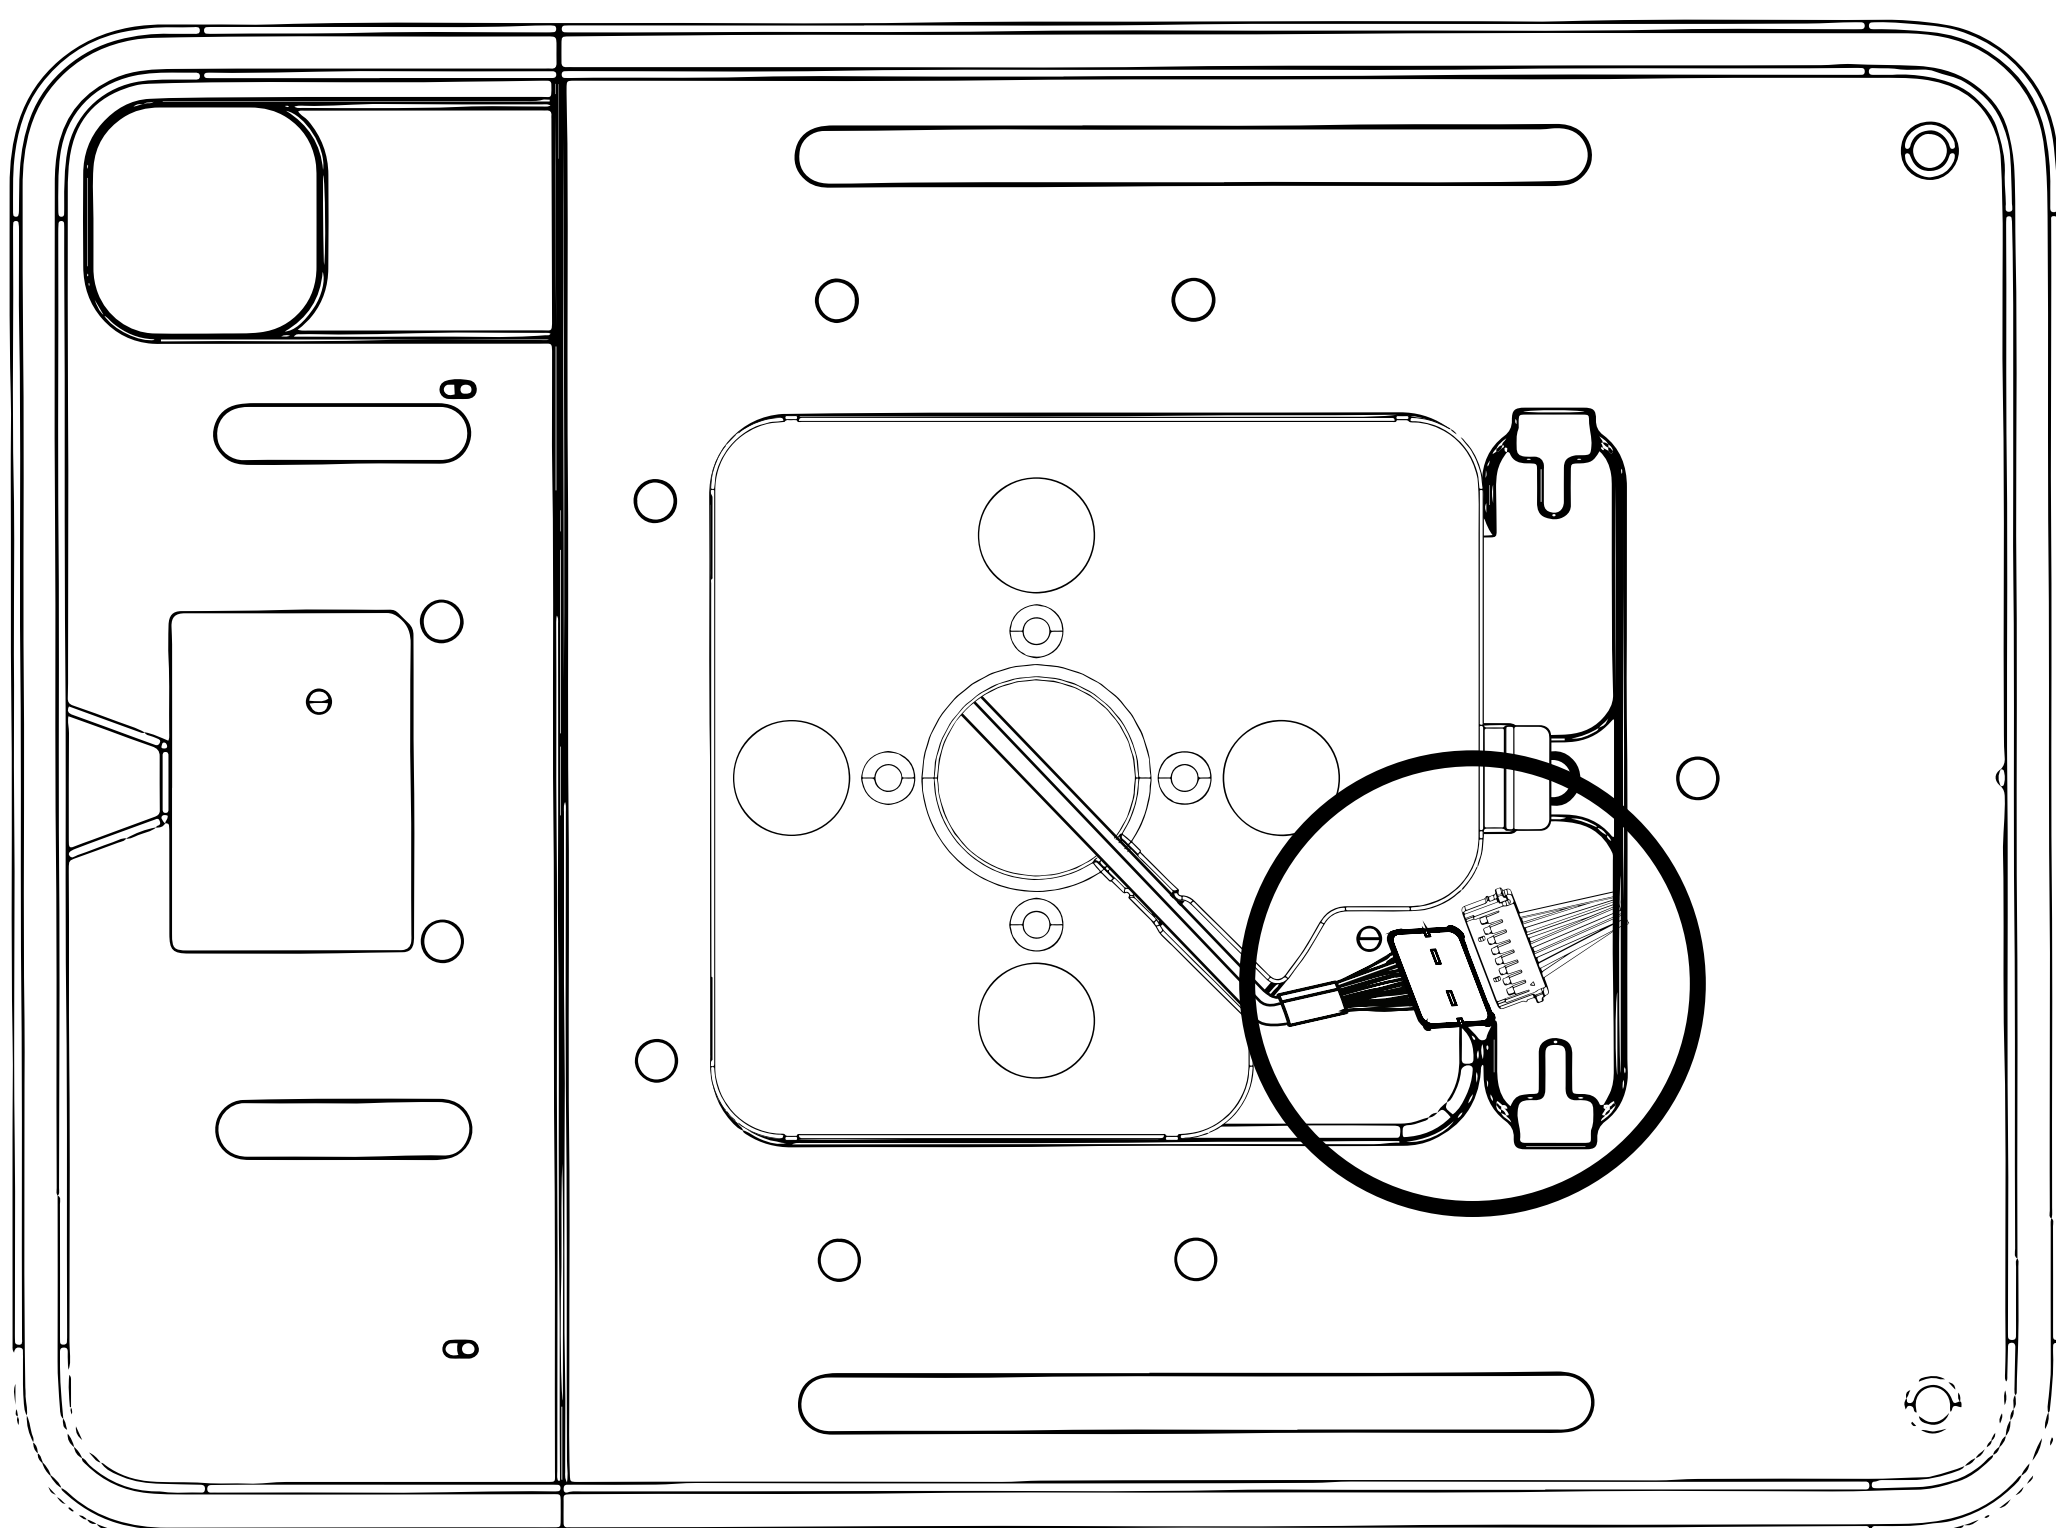

TILT MOUNT



- 14. Insert the iPad into the attached Case and install the top onto the Case.**

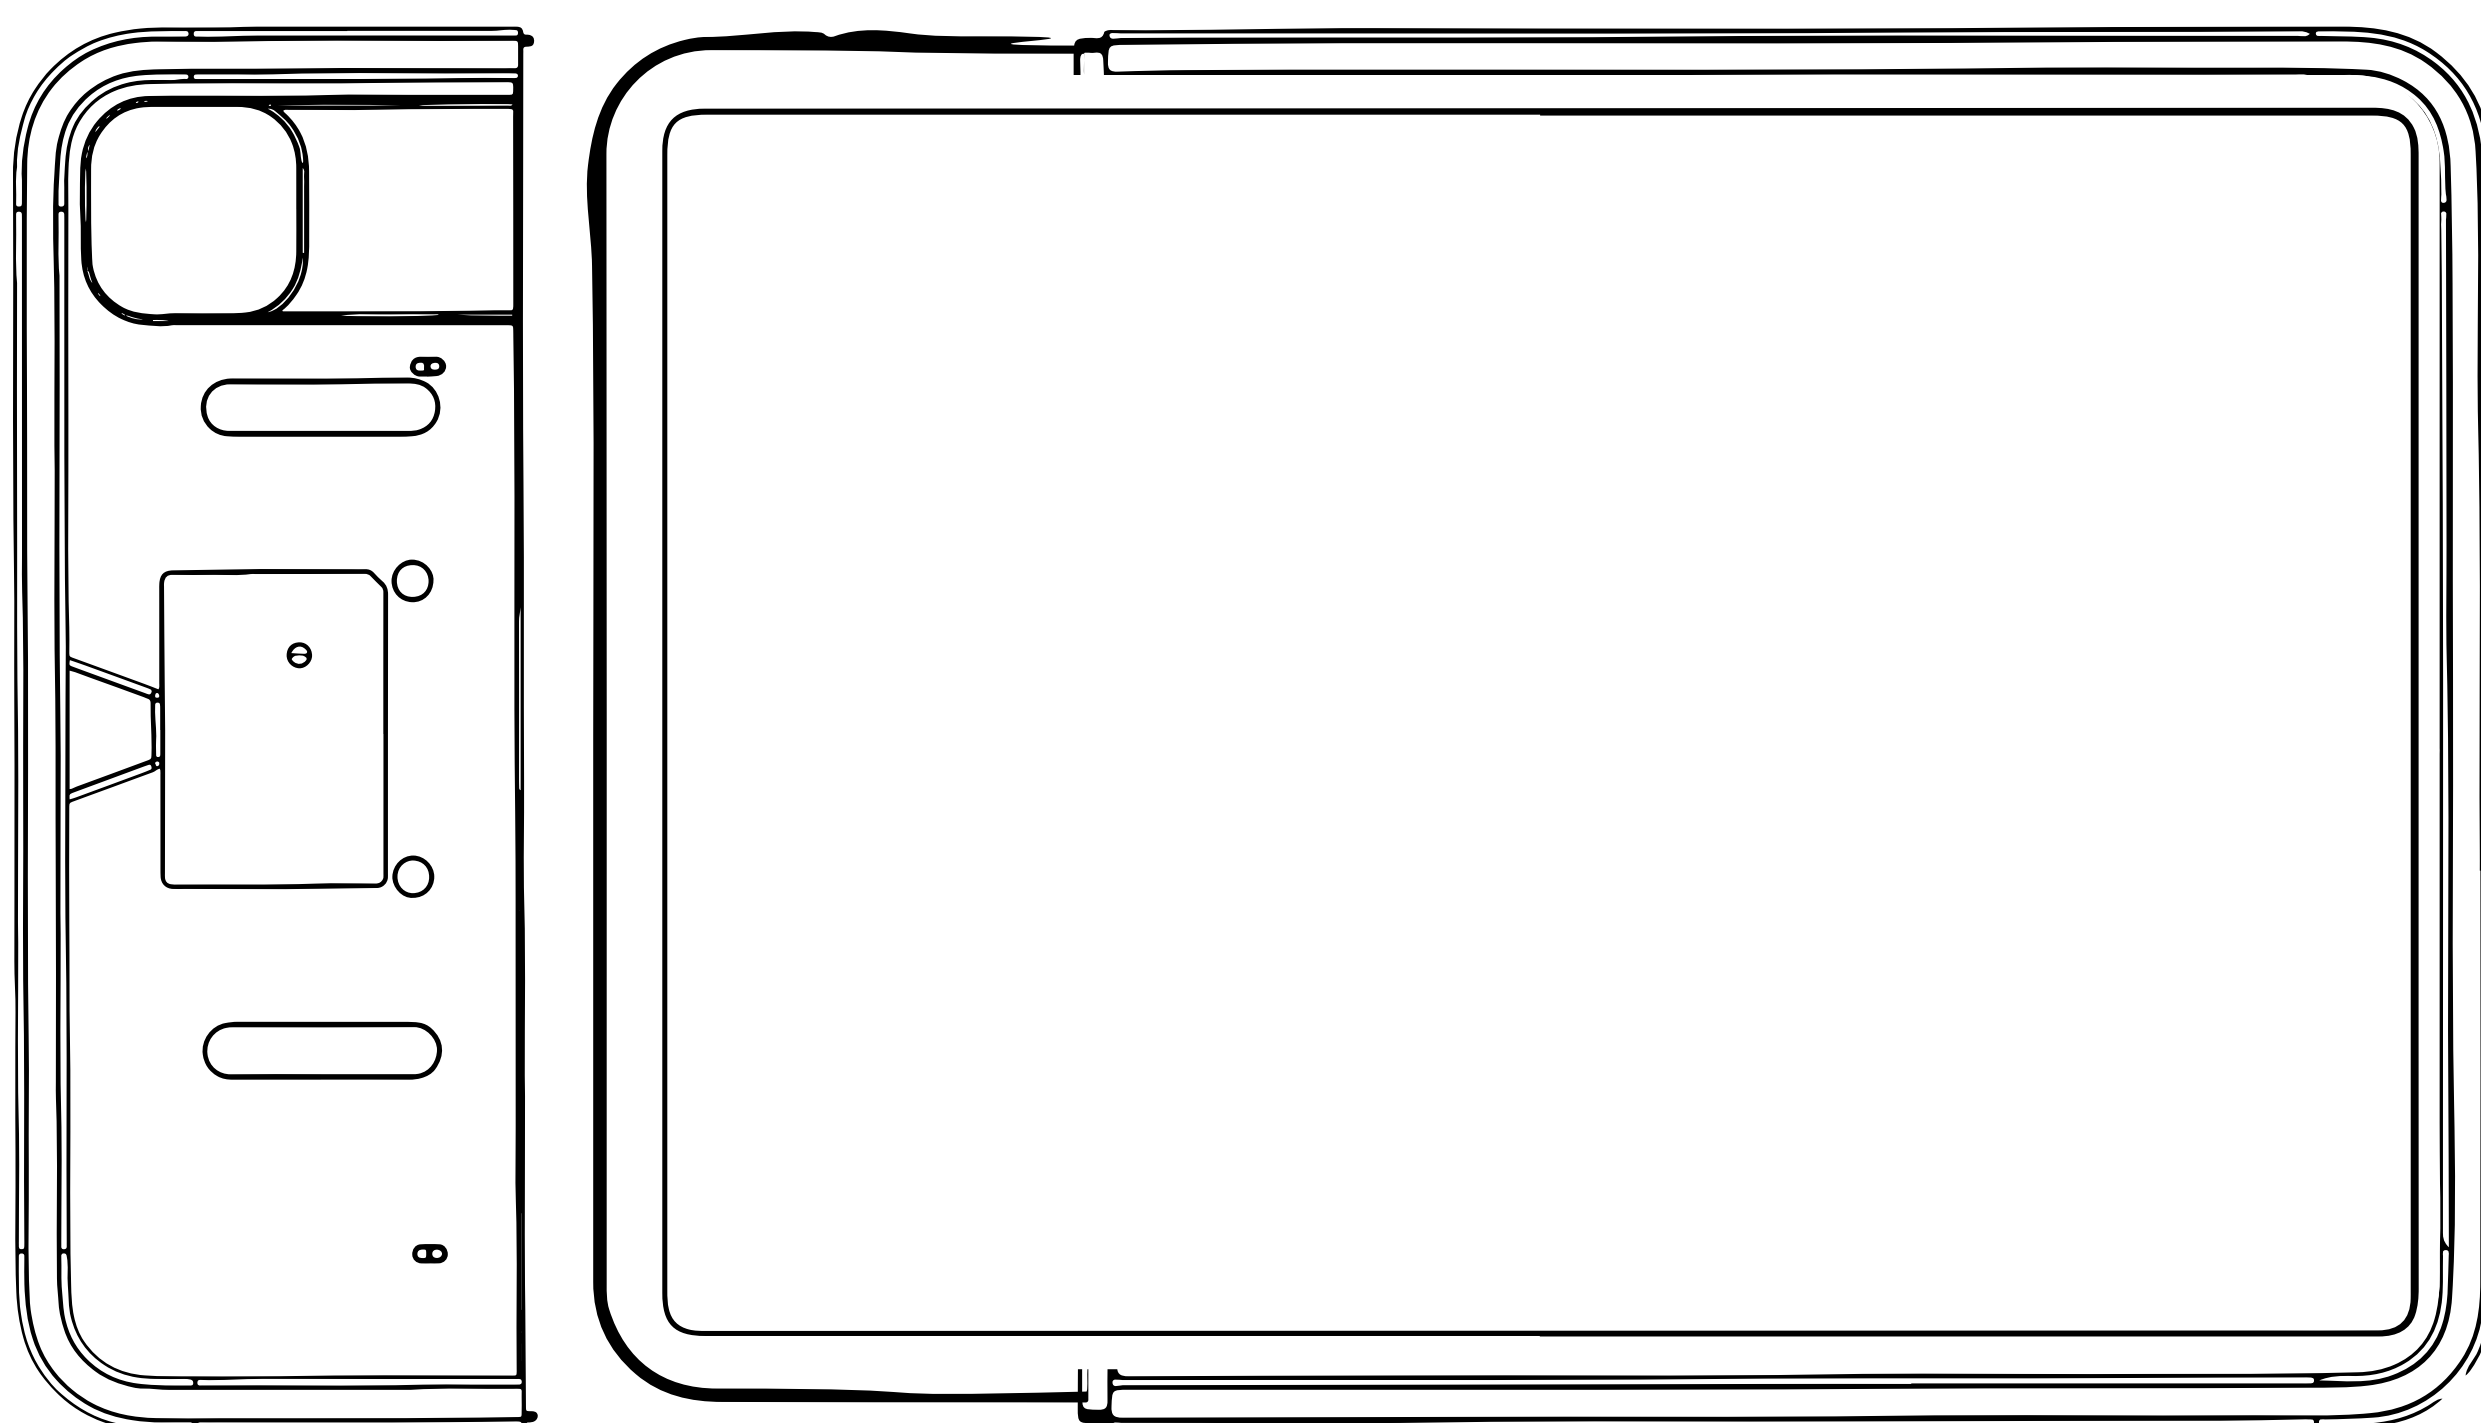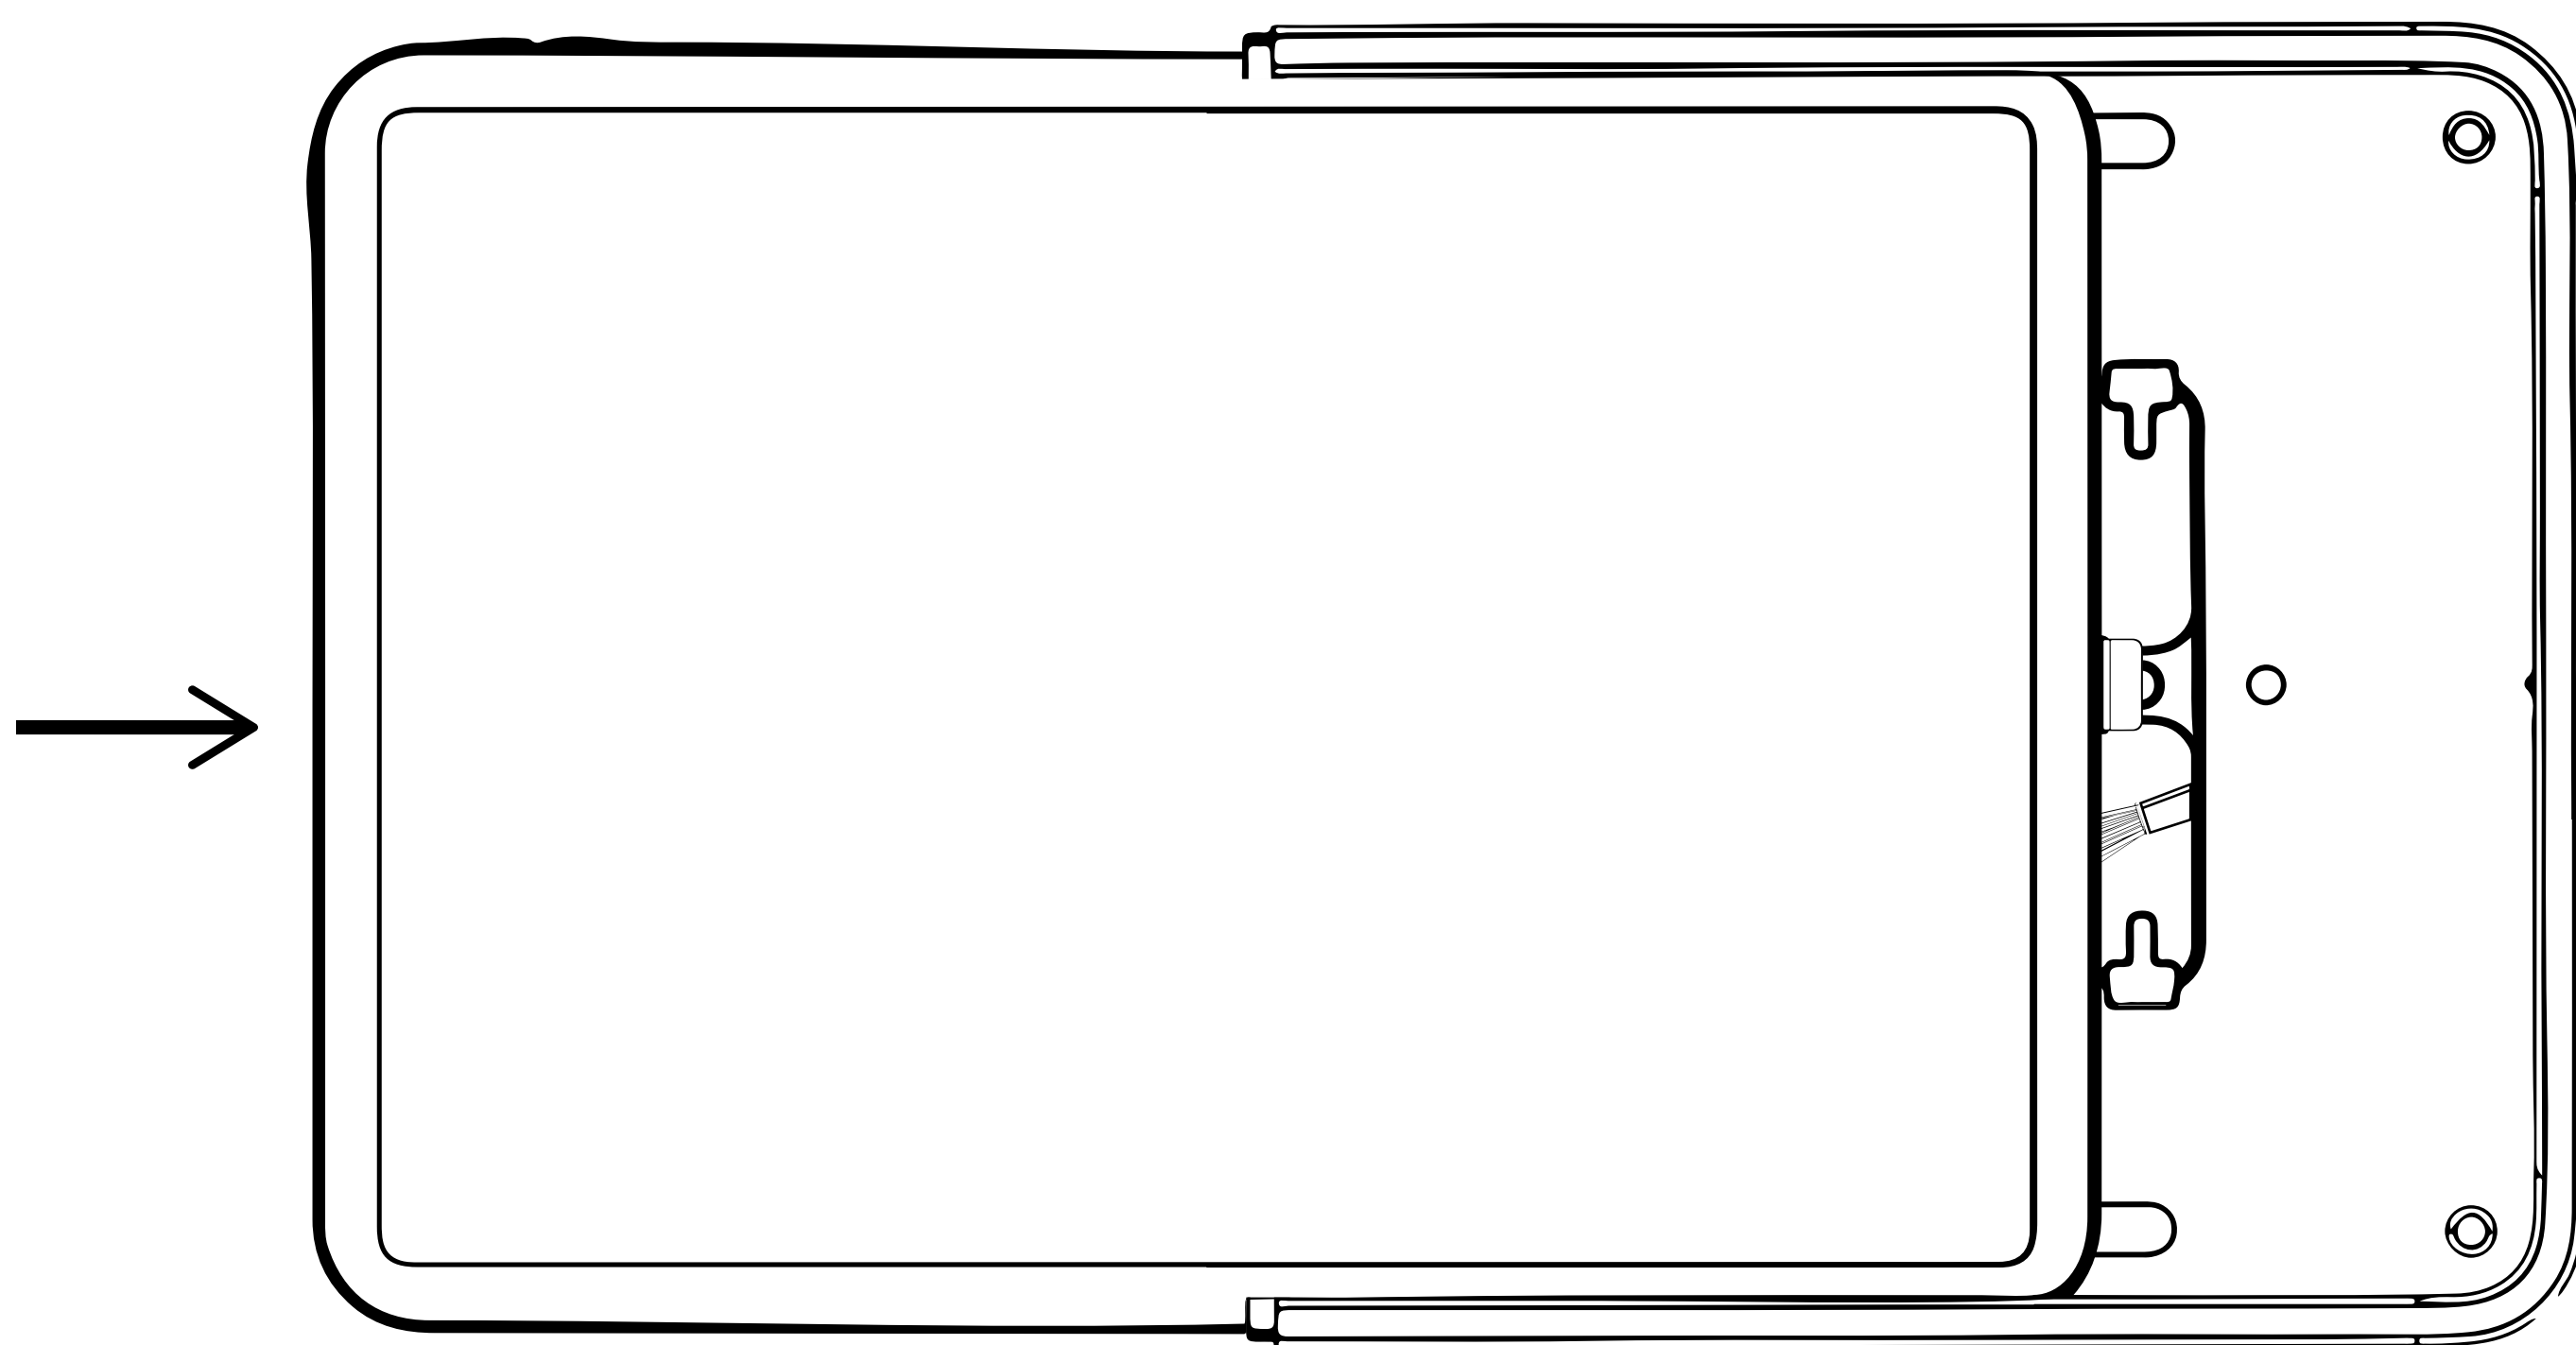

I PORT CONNECT MOUNT

TILT MOUNT

- 15. Use the provided IPORT Security tool to lock the Case top onto the Case securing the iPad.**

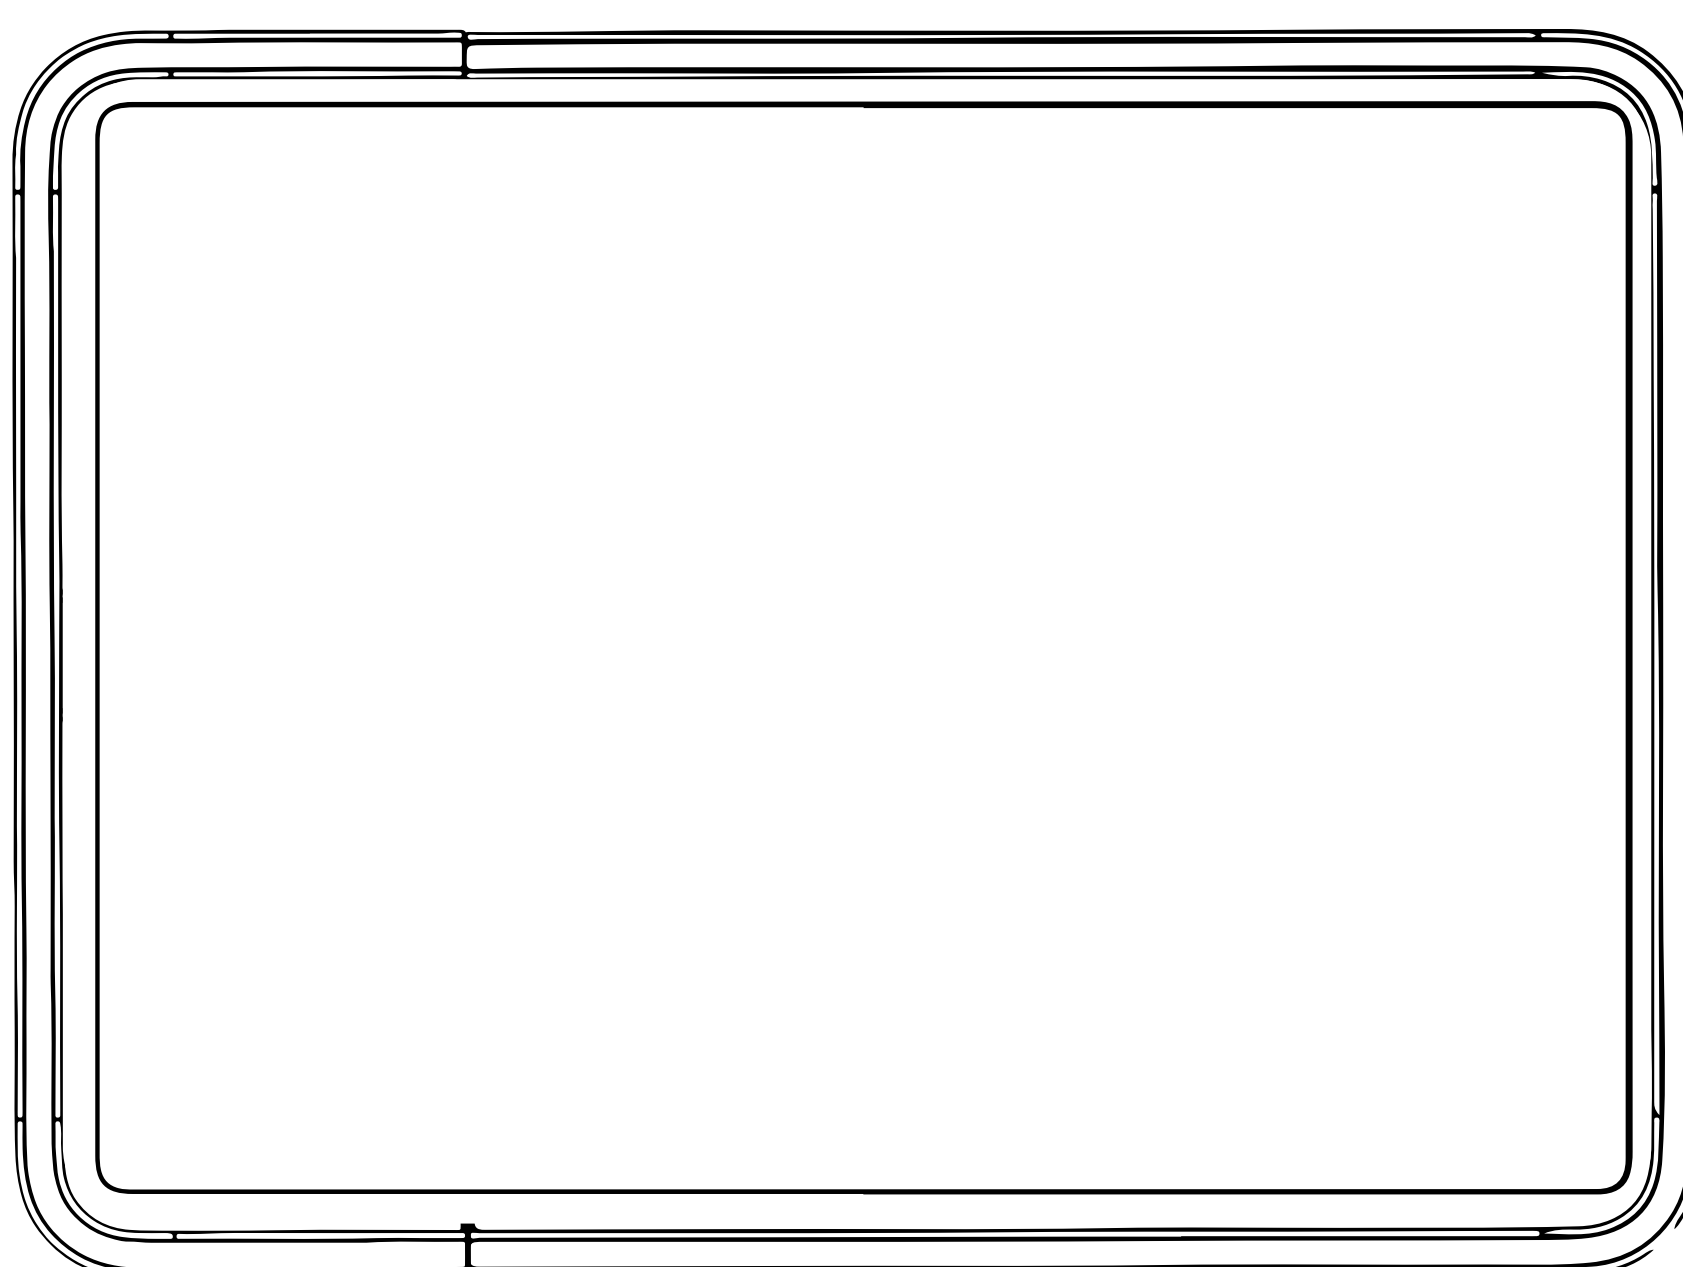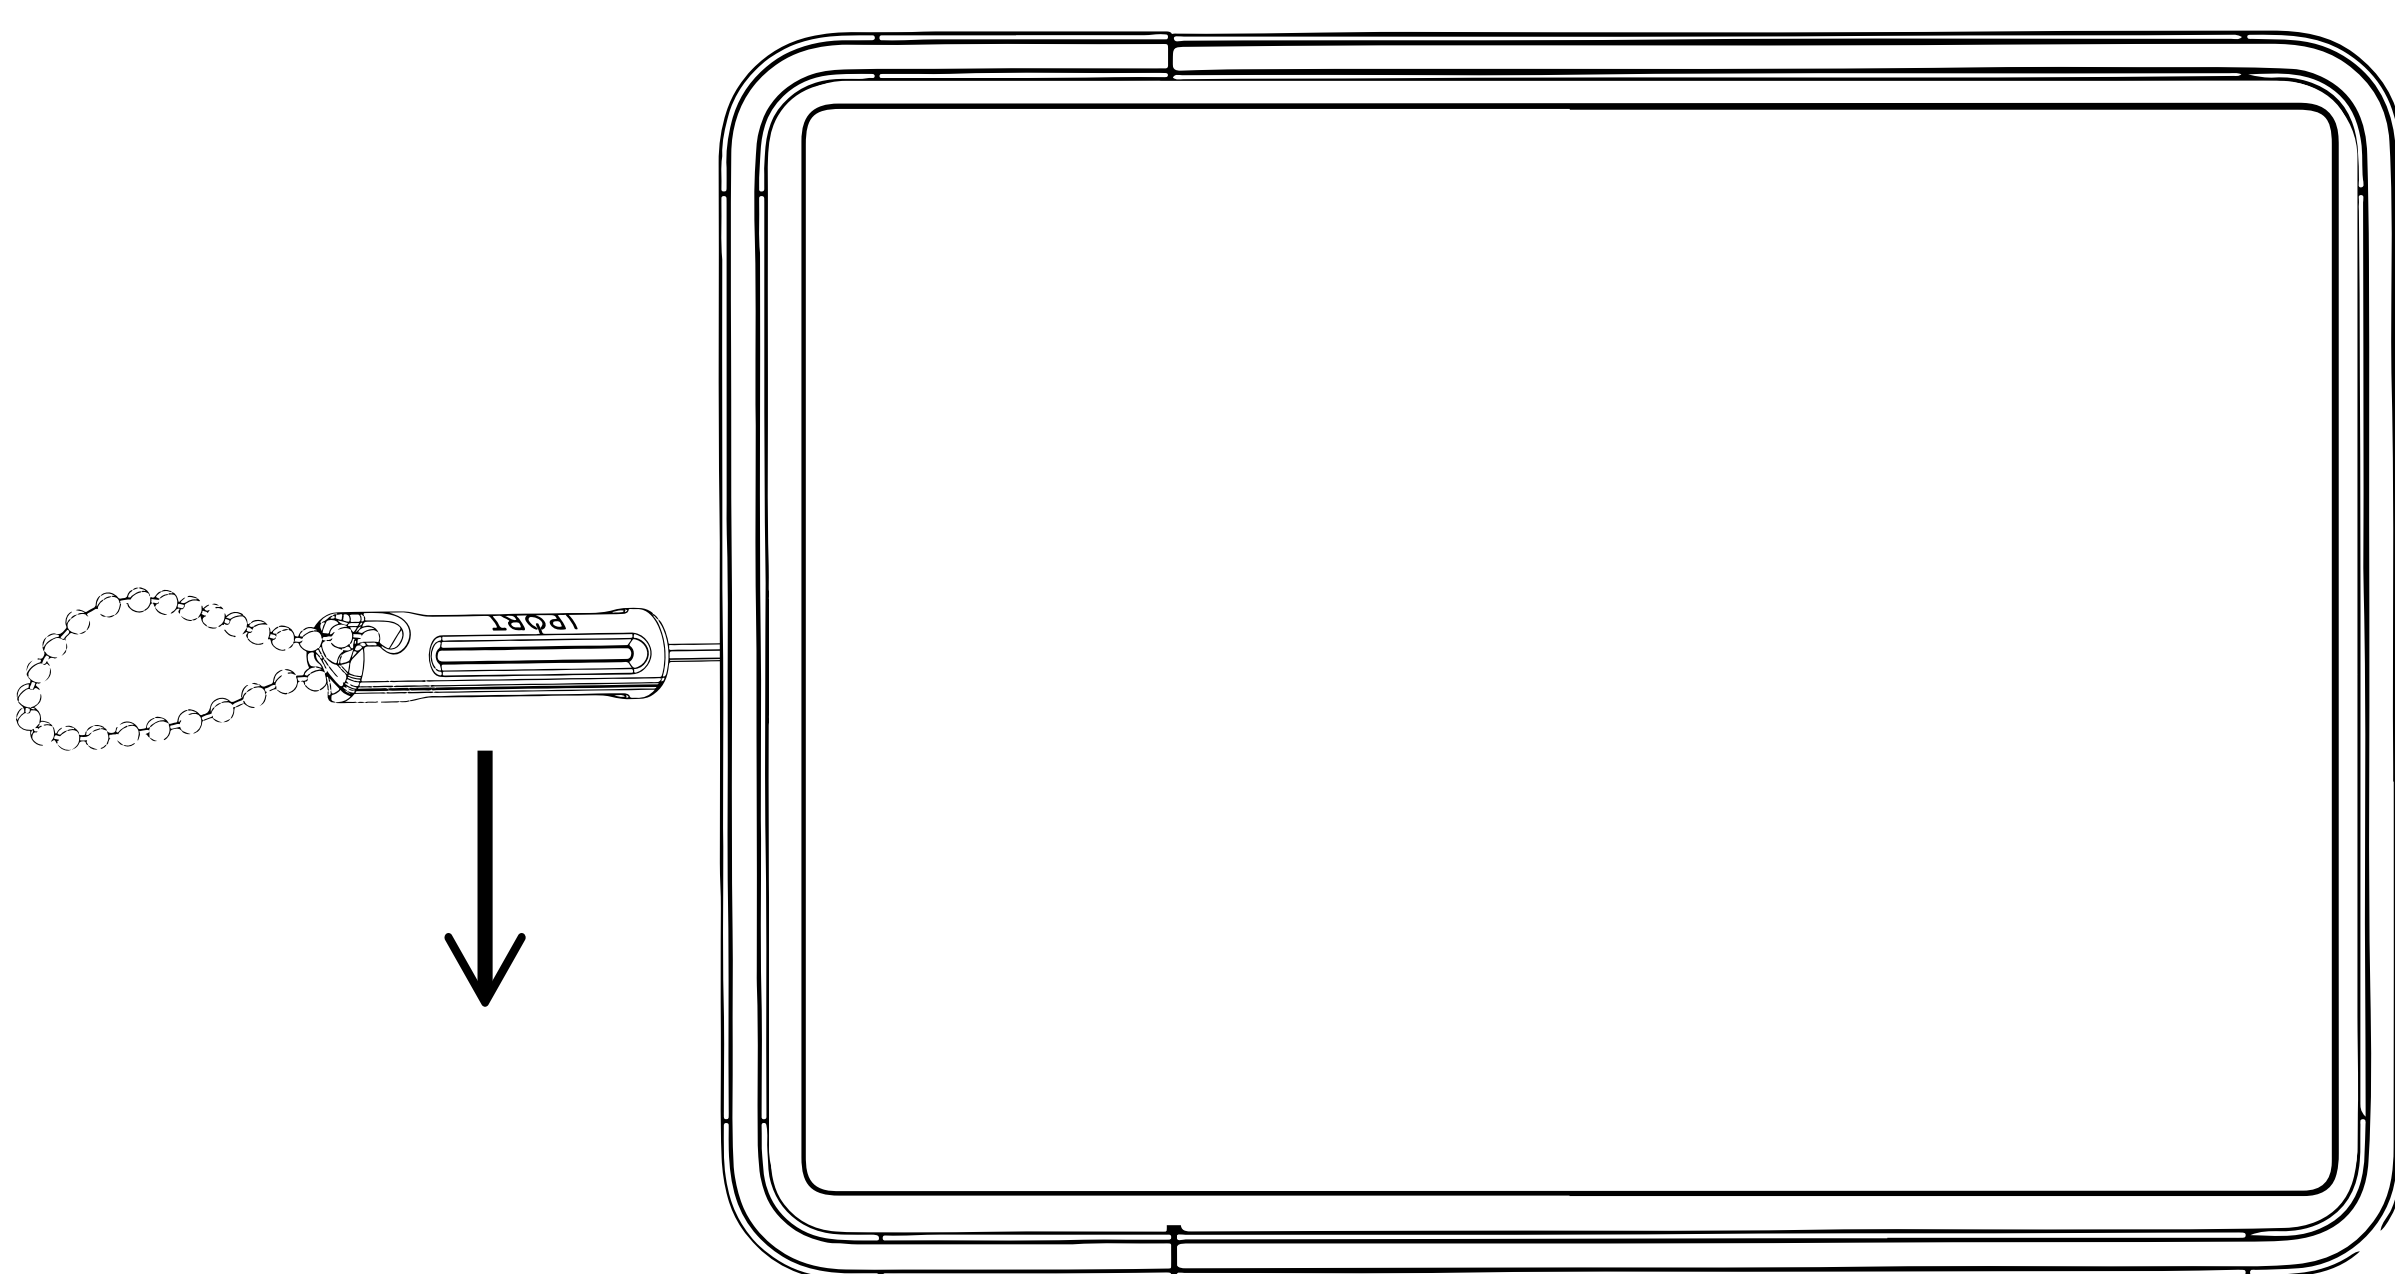

COMPLETE