




novus® **Attenzia**



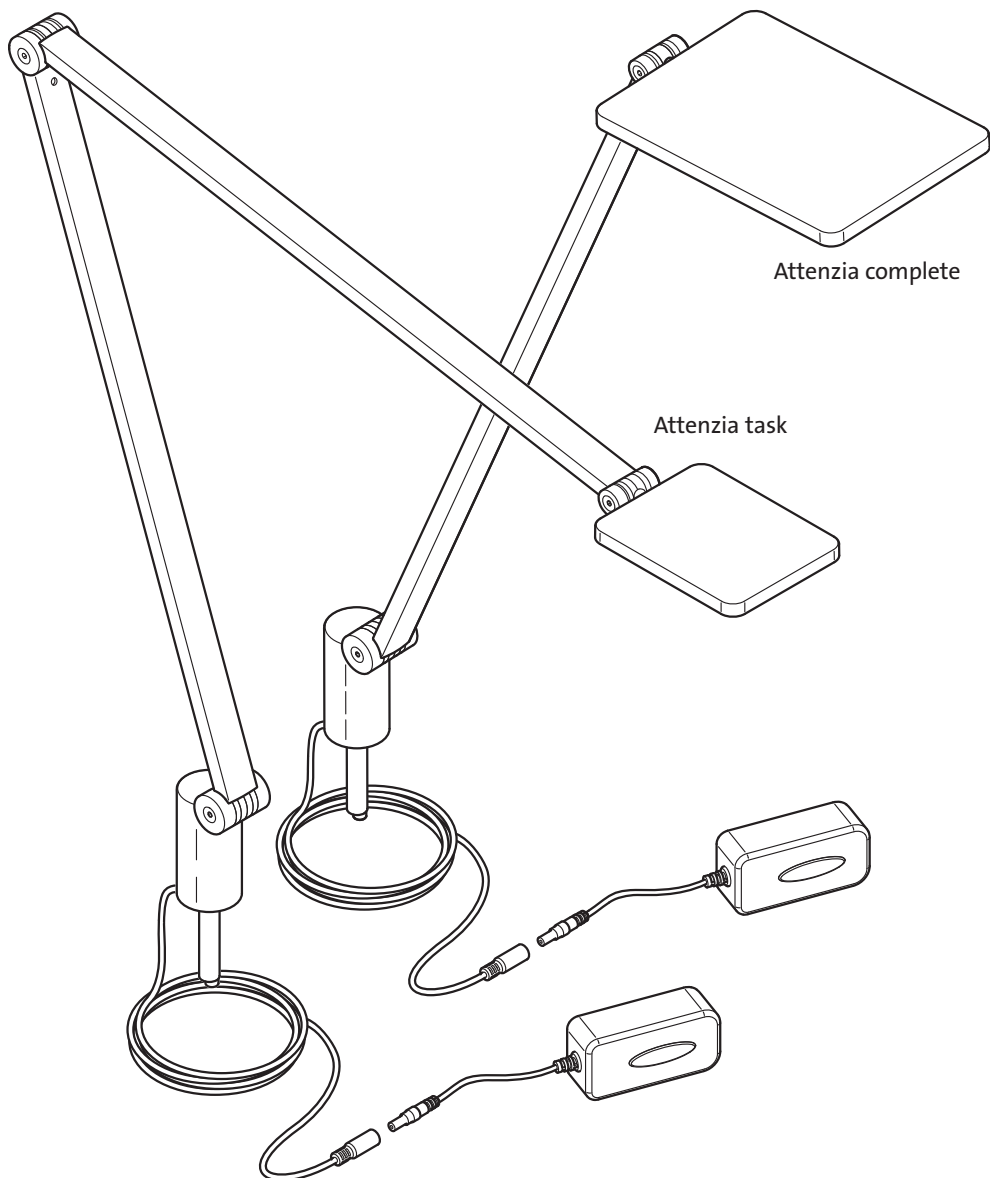

DE

1.1.

Konformitätserklärung: Wir erklären in alleiniger Verantwortlichkeit, dass diese NOVUS Büroleuchte den einschlägigen Sicherheits- und Gesundheitsanforderungen der EG-Produktsicherheitsrichtlinie * entspricht. Das Gerät stimmt überein mit den folgenden Normen: ** gemäß den Bestimmungen der Richtlinien ***. Ausgabe ****.

EN

1.1.

Declaration of Conformity: We declare under our sole responsibility that this NOVUS office desk light the pertinent health and safety requirements of the EC Directive on General Product Safety *. The device complies with the following standards: ** according to the requirements of directives ***. Issued at ****.

FR

1.1.

Déclaration de conformité : Nous déclarons sous notre propre responsabilité que lampe de bureau NOVUS répond aux exigences essentielles de sécurité et de santé prescrites par la directive CE relative à la sécurité générale des produits *. L'appareil est conforme aux normes suivantes : ** selon les dispositions des directives ***. Mise à jour ****.

NL

1.1.

Conformiteitsverklaring: Wij verklaren in onze hoedanigheid als alleen verantwoordelijke dat deze bureaulamp van NOVUS aan de betreffende veiligheids- en gezondheidseisen van de EG-productveiligheidsrichtlijn * voldoet. Het apparaat komt overeen met de volgende normen: ** volgens de bepalingen van de richtlijnen ***. Uitgave ****.

IT

1.1.

Dichiarazione di conformità: dichiariamo sotto propria esclusiva responsabilità, che questa lampada per ufficio NOVUS corrisponde alle disposizioni relative alle norme sanitarie e alle norme di sicurezza indicate nelle direttive dell'UE sulla sicurezza dei prodotti *. L'apparecchio corrisponde alle seguenti norme: ** in osservanza delle disposizioni delle direttive ***. Edizione ****.

ES

1.1.

Declaración de conformidad: Declaramos por propia cuenta que esta lámpara de oficina NOVUS está fabricada conforme a las correspondientes normas de seguridad y sanidad de la Directiva CE sobre la Seguridad General de productos *. El aparato se corresponde con las siguientes normas: **, conforme a las disposiciones de las directivas ***. Edición ****.

PT

1.1.

Declaração de conformidade: Declaramos, sob exclusiva responsabilidade, que o presente candeeiro de secretária da NOVUS satisfaz todas as exigências em matéria de segurança e de saúde previstas na diretiva do Parlamento Europeu relativa à segurança geral dos produtos *. O produto está em conformidade com as normas ou documentos normativos seguintes: ** de acordo com o disposto nas diretivas ***. Emissão ****.



- * 2001/95/EG
- ** EN 60598-1; EN 60598-2-4; EN 62471; EN 61347-1; EN 61347-2-13; EN 61347-2-11; EN 62031; EN 55015; EN 61547; EN 61000-3-2; EN 61000-3-3
- *** 2014/35/EU; 2014/30/EU; 2011/65/EU; 2009/125/EG

Typ/Type: Novus Attenzia complete

Novus Attenzia task

Baujahr/Year of manufacture: 16 →

Herstellergarantie/Guarantee: 5 Jahre/5 Years

Technische Unterlagen bei:

Novus Dahle GmbH & Co. KG, Breslauer Str. 34-38,

Technical file at:

D-49808 Lingen

Dokumentationsbevollmächtigter/

Authorises person for Dokuments

**** Lingen, 2016-12-09

Armin Rutenberg,
Geschäftsführer/ Managing Direktor

Frank Indenkämpen,
Geschäftsführer/ Managing Direktor

Novus Dahle GmbH & Co. KG • Breslauer Str. 34-38 • D-49808 Lingen

EN Translation of the original operating instructions**IMPORTANT!**

Read the operating and safety instructions carefully BEFORE putting the light into operation. You must follow the instructions. Keep the operating instructions in a safe place ready for later use.

Table of contents**1. General information**

1.1. Conformity declaration	2
1.2. Intended use, warranty	9
1.3. Safety instructions	9-10
1.4. Special functions	10
1.5. Cleaning and disposal	10
1.6. Technical specifications	10
1.7. Positioning	11
1.8. Key to pictograms	11
1.9. Dimensions/pivoting range	48
2. Installation	49
2.1. Scope of supply	49
2.2. Connecting the power supply	50
2.3. Switch functions	50
2.4. Mounting options	51

1.2. Intended use, warranty

This light is designed for private use and for use in normal office environments.

Wear, damage due to improper use or unauthorised modifications and repairs are not covered by the warranty or the guarantee.

1.3. Safety instructions

- Risk of eye damage! Never look directly into the light source!
- The voltage and mains frequency of your power supply must match the specifications on the rating plate of the plug-in adapter. Ensure that the light can be disconnected from the power supply at any time.
- Only use the light with the supplied Novus plug-in adapter!
- Only use the light provided that it is in faultless condition, while observing the operating instructions and the usual regulations, guidelines and applicable safety and accident prevention requirements. Take the light out of service immediately if any faults occur!
- Only use the light in enclosed spaces at temperatures of 15° to 32° (59°F to 90°F) and with non-condensing humidity of 15% to 95%!
- Do not use the light in rooms where there is a risk of explosion!
- The light is not intended for use by persons (including children) with restricted physical, sensory or mental capabilities or a lack of experience and knowledge, unless they are working under supervision or receive detailed instruction about how to use the device from a person who is responsible for safety.
- Protect the light from shocks, impact, moisture and excessive heat!
Prevent trapped heat!
- The light and packaging material are not toys.
- Only operate the light on undimmed sockets!
- Do not touch the LEDs!
- Ensure the light is standing securely!
If the light tips over it can cause injury or damage.
- Ensure that the connection cable does not pose any danger. Trip hazard! Do not wind the connection cable around the light.



- The light source of this light may only be replaced by the manufacturer or a service technician authorised by the manufacturer.

1.4. Special functions

- If the multifunction switch is not used for more than 10 hours, the desk light switches off automatically.
- If the operating temperature becomes excessively high while the desk light is switched on, the luminosity will be automatically reduced.

1.5. Cleaning and disposal

Risk of injury!

- Disconnect the light from the power supply.
- Do not clean the light with water. Risk of damage!
- To prevent damage to the light, check the compatibility of the cleaning agent.



Dispose of the light properly in an environmentally friendly way at an authorised collection point. Do not dispose of any parts of the light in domestic waste. (For the European market.)

1.6. Technical specifications


Light	Attenzia task	Attenzia complete
Rated voltage	24 V DC	24 V DC
Power consumption + current	Approx. 9 W / 0.4A	Approx. 20 W / 0.84A
Protection class	III	III
Protection rating	IP 20 / only use for dry locations	IP 20 / only use for dry locations
Luminous flux	749 lm	1.708 lm
Colour temperature	4000K	4000K
Colour rendering index	85.3 $R_a > 80$	84.4 $R_a > 80$

Power supply unit	Attenzia task and complete	Attenzia task and complete (US only!)
Model	Sunny SYL1460-2424	Sunny SYS1541-2424
Item number	870-0885	870-0893
Rated voltage	100-240 V, 50-60Hz	100-240 V, 50-60 Hz
Input current	max. 1A	max. 1 A
Output	max. 24 V DC, 24 W, 1 A	max. 24 V DC, 24 W, 1 A
Protection rating	IP 20 / only use for dry locations	IP 20 / only use for dry locations
Protection class	II (double insulation)	II (double insulation)

1.7. Positioning

When positioning the light, ensure that other people are not dazzled by it, and that the light is not reflected in a mirror.

The pivots of the light must **not** be moved beyond the intended swivelling angle. This can cause damage to the light.

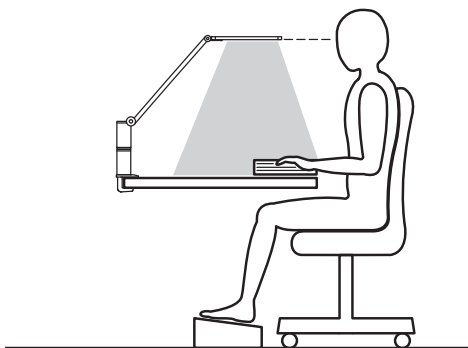**1.8. Key to pictograms**

User information/safety instructions



Important information



WARNING



Caution, risk of electric shock.



Disconnect device from the power supply. The power plug is used to disconnect the power supply.



Connect device to the power supply. The mains connection must conform to the light's specifications!



Action area



Attenzia Clamp



Compliance with the relevant EU safety directives (For the European market)

The certification attests that the product complies with the device and product safety legislation



For the European market.



For the US market and Canada.



Protection class II (double insulation, no earthed plug required)



Protection class III
for EU = SELV - safety extra low voltage
for US = LVLE - low voltage limited energy



Maximum luminosity
Press multifunction switch briefly twice



ON/OFF
Press multifunction switch briefly once






Dim - Press and hold down multifunction switch



The product must only be installed and used in dry, enclosed interior spaces.


Attenzia task

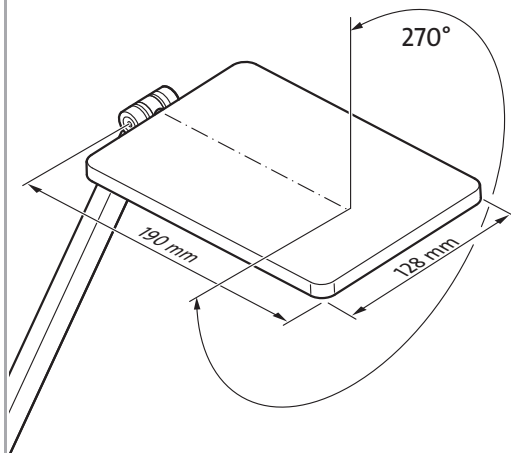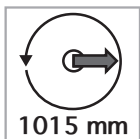


2.

novus® **Attenzia**



2.1.

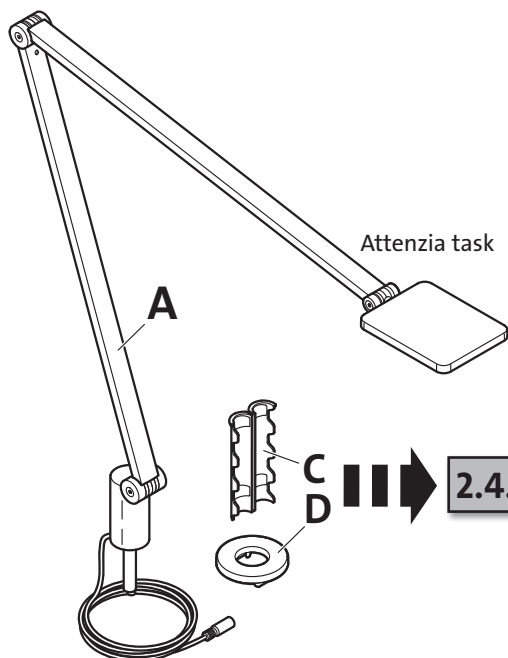


EU

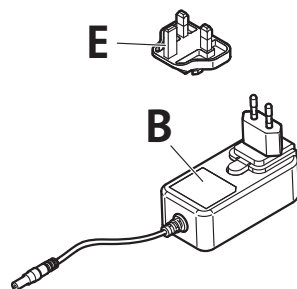


USA

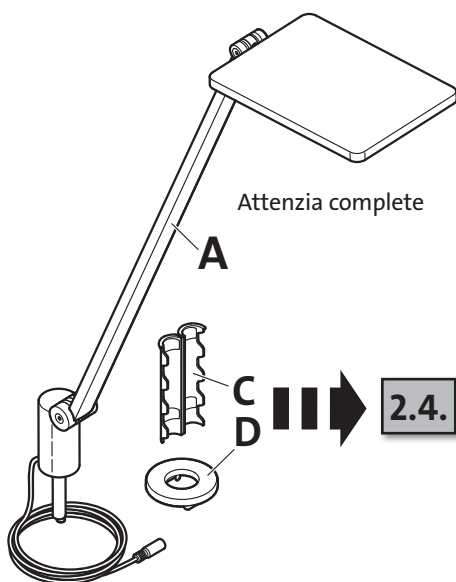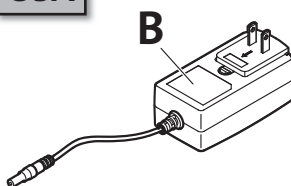

EU

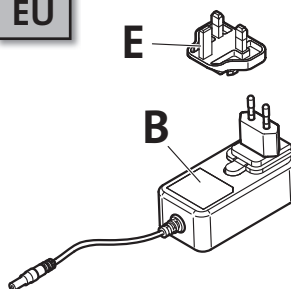

USA

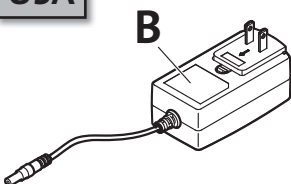


2.




2.2.



EU

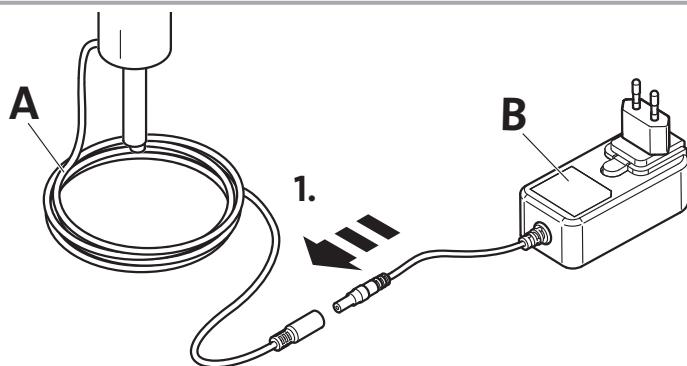

UK

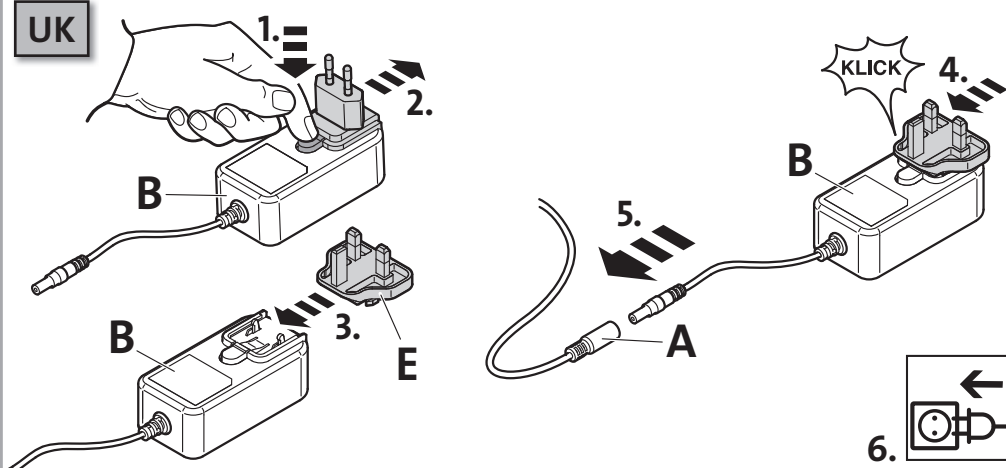


USA

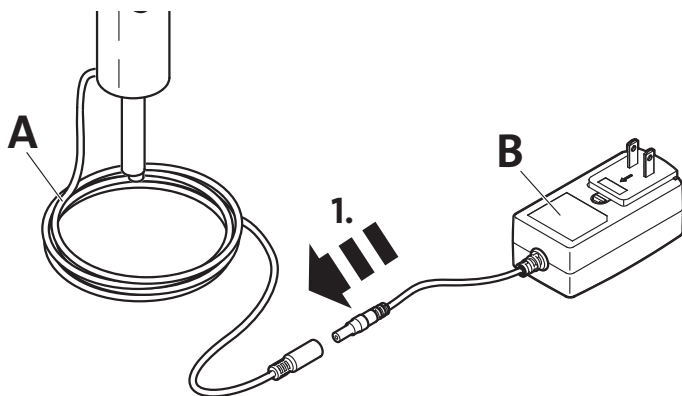





2.3.

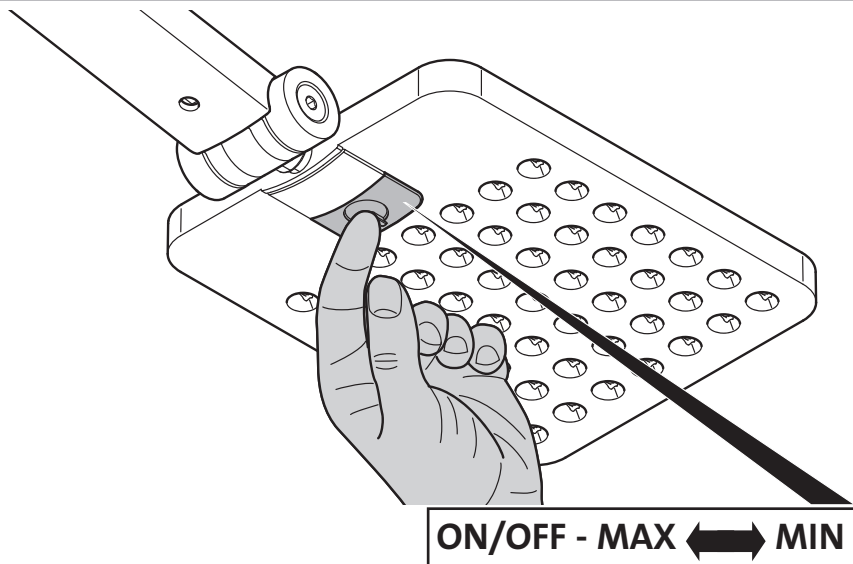



ON/OFF



2.4.

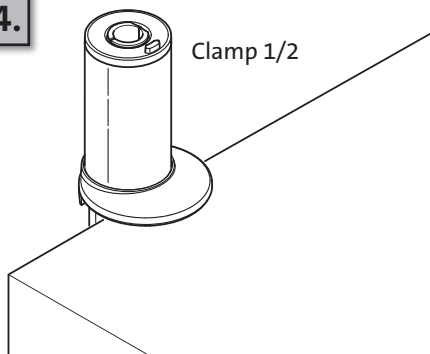

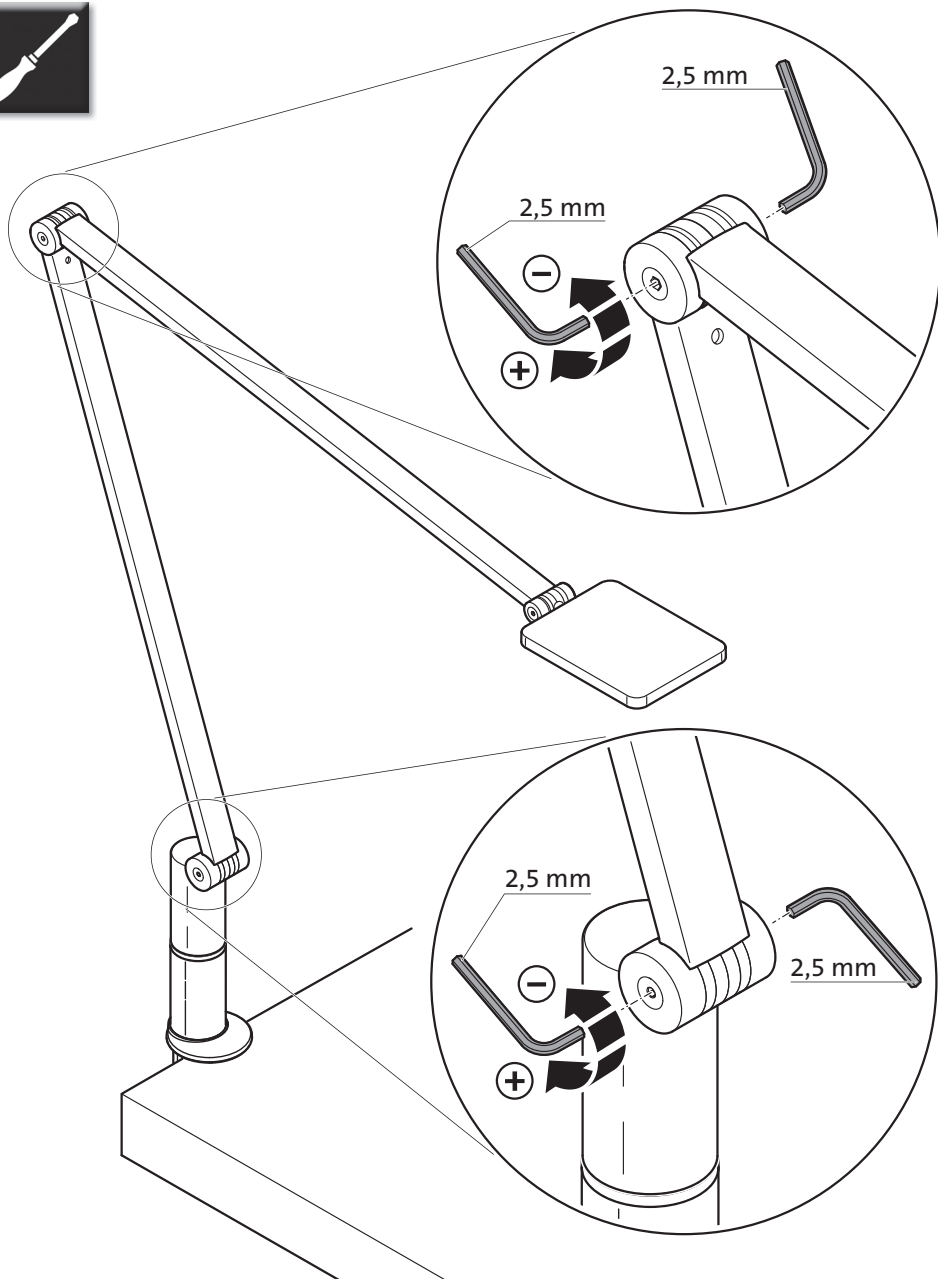

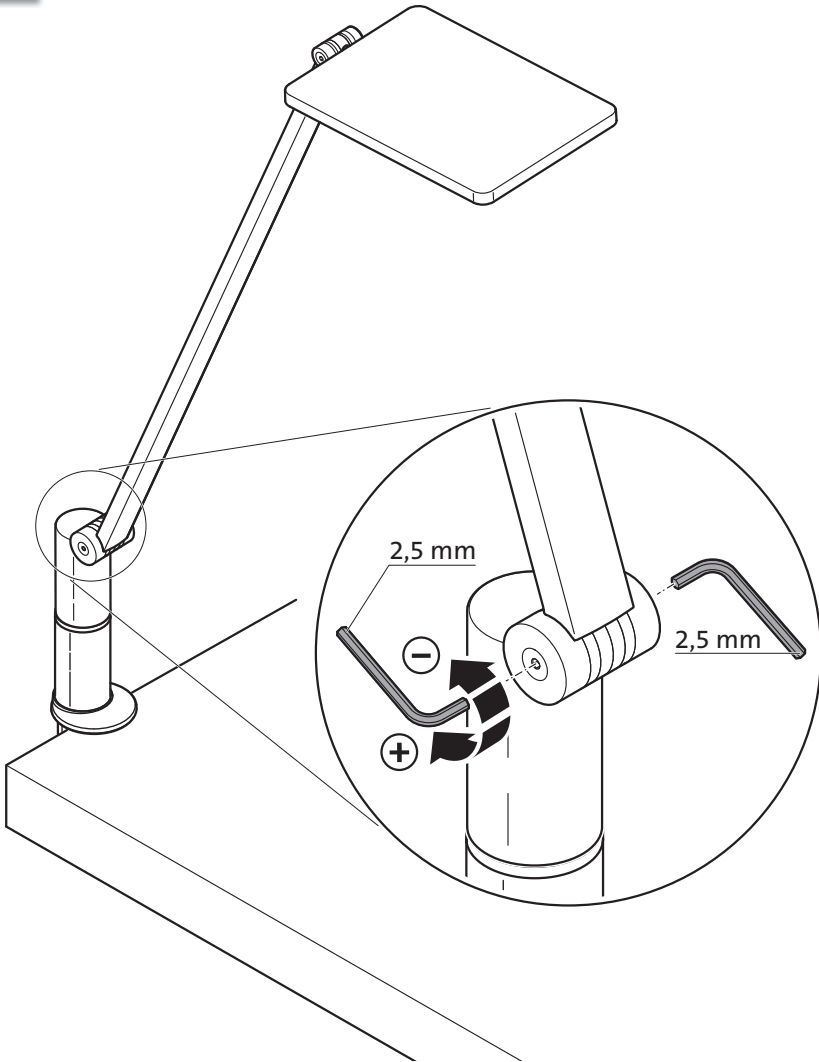



Dahle North America, Inc.
49 Vose Farm Road
Peterborough, NH 03458
Tel. (800) 995-1379
info@novusmorespace.com



www.novusmorespace.com