

TRUFIG

BY SONANCE

TRUFIG for VX | VXQ Round and Square Speakers

INSTALLATION MANUAL

INTRODUCTION

This installation guide will provide instructions to install a VX or VXQ speaker into a TRUFIG Gypsum Mounting Platform for drywall, plaster, or wallpaper applications. This document will cover steps for wiring and installing the speaker into the platform.

BOX CONTENTS

5/8" Gypsum Mounting Platform for Sonance Visual Experience Series VX and VXQ Speakers

REQUIRED HARDWARE

TRUFIG Gypsum or Solid Surface Mounting Platform for Sonance VX | VXQ speakers

Sonance VX or James VXQ Round or Square Speaker

Sonance VX or James VXQ Trimless Round or Square Grille

INSTALLING THE MOUNTING PLATFORM


To install and finish the VX | VXQ Mounting Platform, follow the standard TRUFIG procedure for Gypsum (available at trufig.com).

WIRING FOR THE SPEAKER

The Mounting Platform has a tie wrap installed on one of the pierce bridges on the back. (fig. 1)

Use this to attach the speaker wire for retrieval after installation.

NOTE: It is important to wire from the amp to the speaker/mounting platform location and reserve the wiring at the mounting platform BEFORE completing the mud, sand, and paint for the surface.

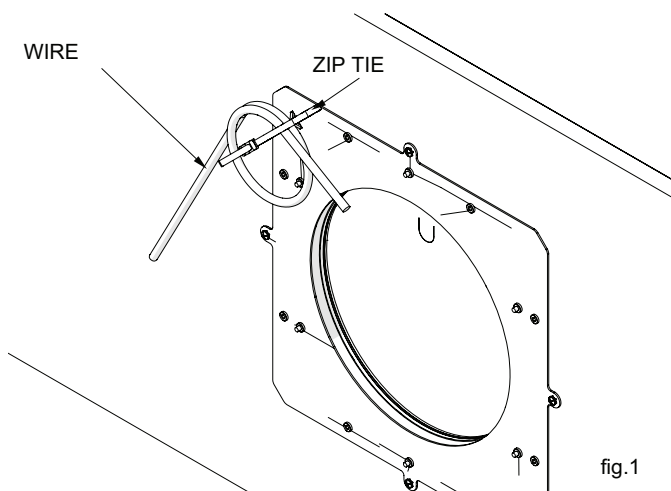

INSTALLING THE SPEAKER

Proceed to these steps after the TRUFIG mounting platform has been installed and the wall or ceiling surface has been mudded, sanded.

1. Locate the screws on the metal sanding shield and remove them. Use the keyhole to remove the metal sanding shield, being careful not to remove the plastic paint shield. (fig. 2)

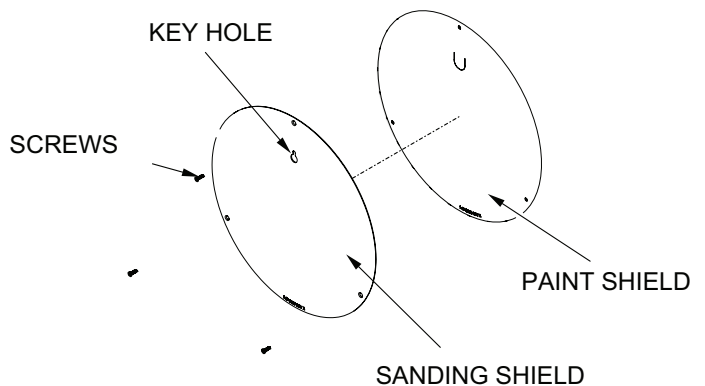


fig.3

- After painting is complete, remove the paint shield from the mounting platform opening. The paint shield is a thin, plastic material that is secured around the perimeter with adhesive, so it should pull away from the opening easily. The paint shield includes a pre-cut hole to allow for easy removal using a finger or pointed object like a screwdriver. Poke through and pull the paint shield away from the surface. (fig. 3)

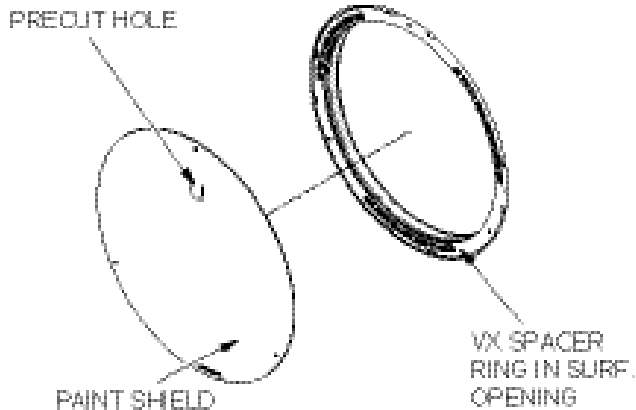


fig. 3

NOTE: The mounting platform opening includes a small VX spacer ring that is secured around the rim with adhesive. Removing the paint shield will reveal the VX spacer ring. The spacer is labeled “VX SPACER REMOVE FOR VXQ.”

RESERVE OR REMOVE THE VX SPACER RING

- When installing Sonance VX speaker models, leave the spacer ring in place.
- When installing James VXQ speaker models, this spacer ring must be removed. (fig. 4)
- Feel within the surface opening to locate the reserved speaker wire. Free it from the back of the mounting platform and pull it through to hang outside of the opening.

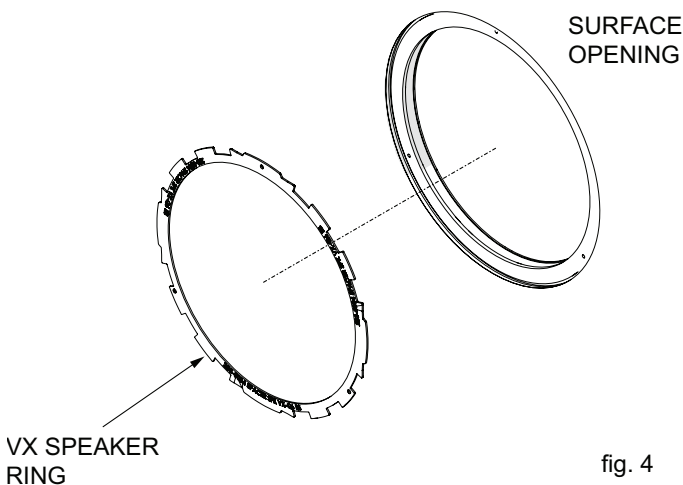


fig. 4

FOR SQUARE SPEAKER INSTALLATIONS ONLY:

- Insert the VX or VXQ round speaker into the VX Square Adapter
- Align the square adapter alignment tabs with the slots on the speaker and press the adapter to the speaker until they are firmly together (fig. 5). This will allow the grille to fit to the surface properly and ensure a level placement.

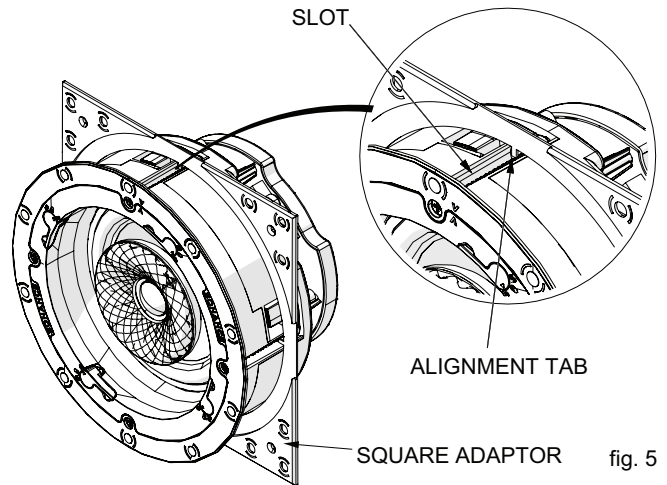


fig. 5

CONNECTING THE SPEAKER

- Connect the loose end of the speaker wire to the speaker before inserting the speaker into the surface opening. (fig. 6)

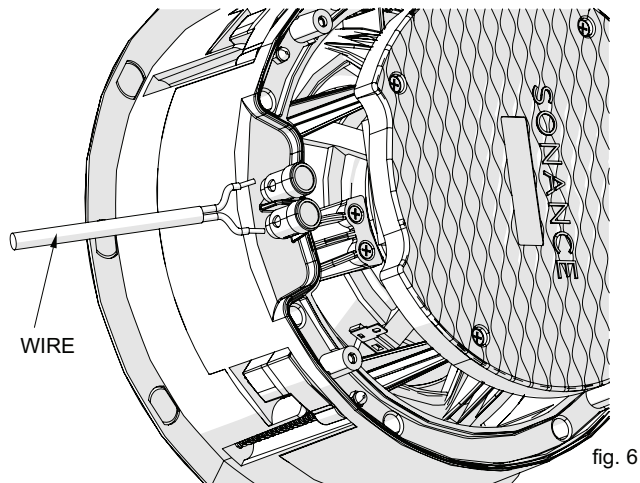


fig. 6

- Insert and center the VX or VXQ speaker into the prepared surface opening. Once centered gently secure the toggle feet using a screwdriver or power drill with torque set to the lowest setting (see VX or VXQ installation manual for detailed steps).

NOTE: Ensure that there is an even gap around the speaker.

- Place the grille onto the speaker and verify proper fit. (fig. 9)

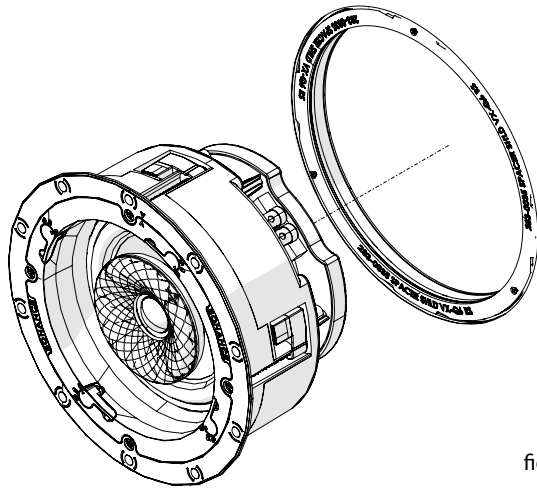


fig. 7

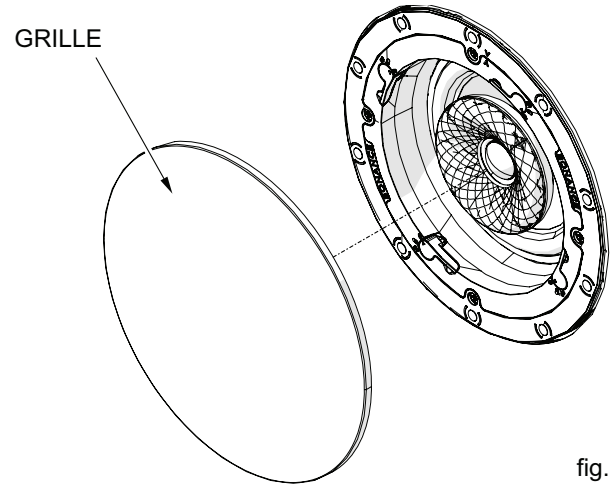


fig. 9

4. If there is a need to re-center the speaker, remove the grille and lightly loosen the toggle feet screws, re-center, and tighten the toggle feet screws again.

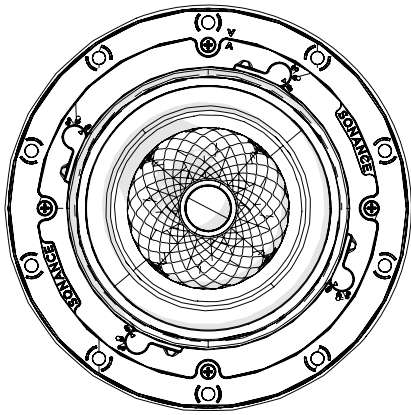


fig. 8



Scan QR code for additional information and resources. For technical support call (949) 492-7777 or visit sonance.com/visual-experience



® 2024 SONANCE All rights reserved. TRUFIG is a registered trademark of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest SONANCE and TRUFIG product specification information visit our website at www.sonance.com.
991 Calle Amanecer - San Clemente, CA 92673 USA • Phone: 949.492.7777 • Fax: 949.361.5151 • Technical Support: 949.492.7777 • www.sonance.com