
Acadian / Normandy / Brunswick

Entryway Shoe Storage Cabinet

Model # AXCACA79-BRU



brooklyn + max

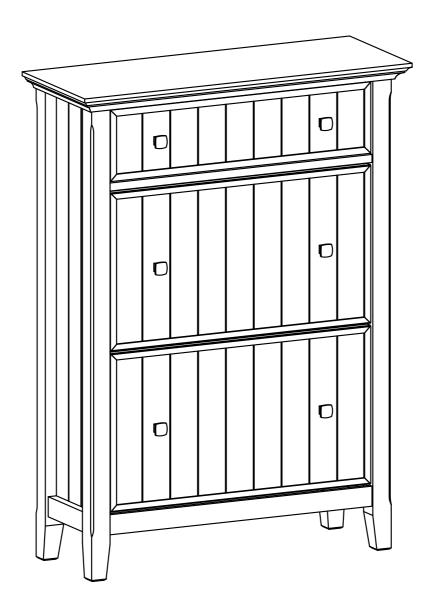



It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your **1-year** warranty
- ✓ Automatic entry to win a \$500 gift certificate
- ✓ Earn instant rewards and save



simpli-home.com/product-registration

Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!







simpli-home.com/product-review



Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!







simpli-home.com/share-images

For Fastest Customer Service:



- 1. Open your phone's camera.
- 2. Point your phone's camera at the QR code to scan.
- 3. Click on the pop up.
- 4. You'll be taken to our customer service page.
- 5. Fill the form with your order information and issue.
- 6. Submit form.
- 7. A customer service associate will contact you.

Other ways to contact us...



Email Us

customer service@simpli-home.com



Visit Us

Visit our site directly at www.simpli-home.com



Call Us

1-866-518-0120 Monday to Friday 9am to 5pm EST

*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

Care & Maintenance

This furniture is designed for indoor use.

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.


Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:


- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can't, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners

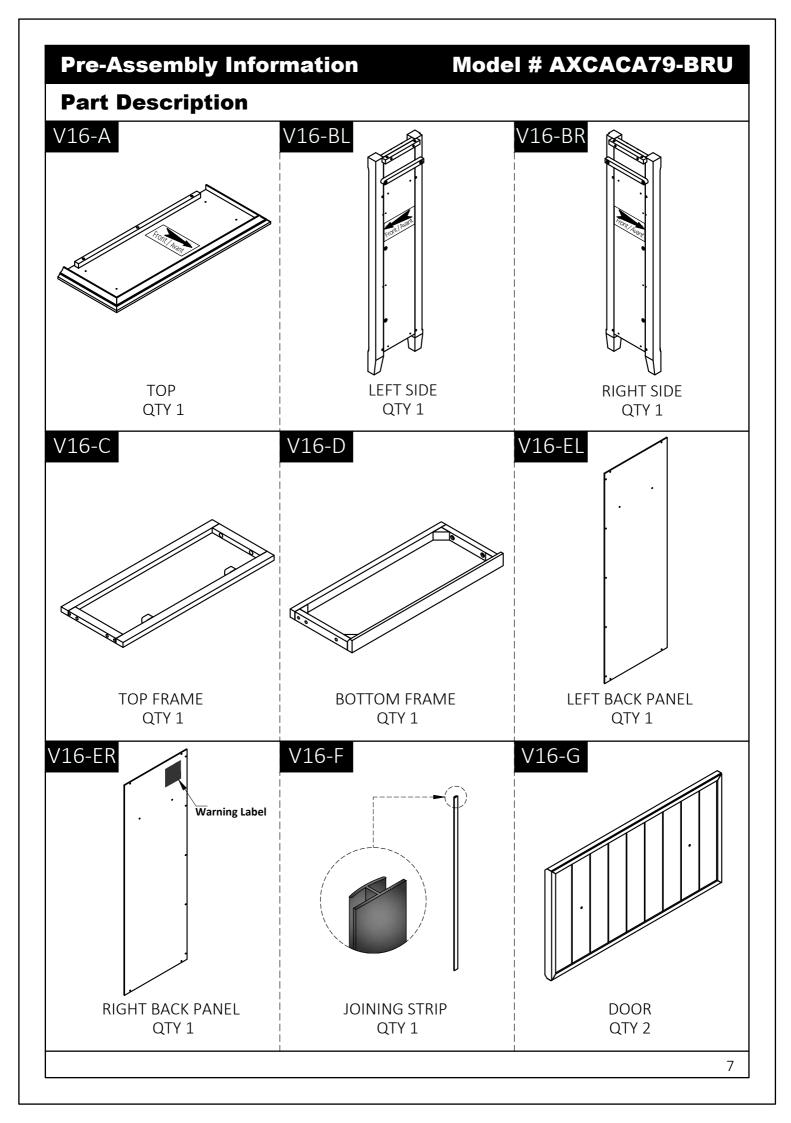

Pre-Assembly Information

Model # AXCACA79-BRU

Part Description

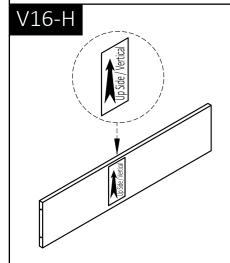


BACK DIVIDER QTY 2

DRAWER FRONT


QTY 1

V16-I

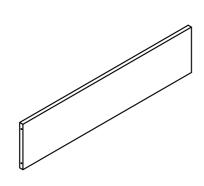

MIDDLE DIVIDER QTY 2

V16-J

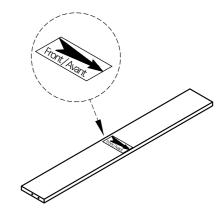

BOTTOM PANEL QTY 2

V16-K





LEFT DRAWER SIDE QTY 1

V16-LR


V16-0




RIGHT DRAWER SIDE QTY 1

V16-M

V16-N

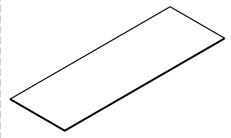

DRAWER BOTTOM QTY 1

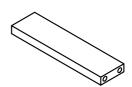


SUPPORT DRAWER BOTTOM QTY 1

DRAWER BACK QTY 1


Pre-Assembly Information Model # AXCACA79-BRU **Hardware Description** 1 WOOD DOWEL **CAM LOCK PIN ALLEN KEY SCREW HANDLE** M4 X 15mm CAM LOCK M6 X 30mm Ø8 X 30mm QTY 4 SETS QTY 6 SETS **QTY 16 QTY 12** 5 6 8 PHILLIPS SCREW PHILLIPS SCREW PHILLIPS SCREW ROUND HEAD M4 X 15mm QTY 22 **ROUND HEAD ROUND HEAD** M3 X 15mm QTY 32 ALLEN KEY M3 X 20mm QTY 1 QTY8 9 10 11 12 **WASHERS WASHERS** ALLEN KEY BOLT Ø19/Ø6 x 2mm Ø13/Ø6 x 2mm M6 X 20mm **END STOP** QTY 4 QTY 4 QTY 4 QTY 4 13 14 M4 X 25mm - QTY 2 (1 is extra) b. **M**4 X 15mm - QTY 1 c. **M**4 X 25mm - QTY 1 SHOE CABINET HINGE (Left & Right) FURNITURE TIP OVER RESTRAINT QTY 2 SETS QTY 1 SET Required -Flathead screwdriver Phillips screwdriver Rubber mallet

Not Included

Components - Key Diagram

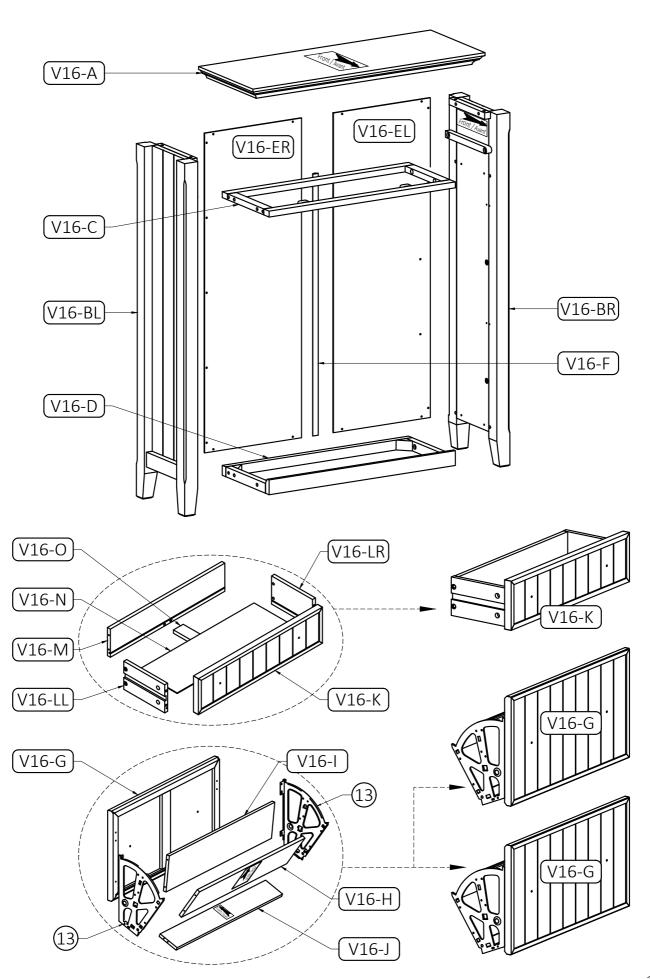


Model # AXCACA79-BRU

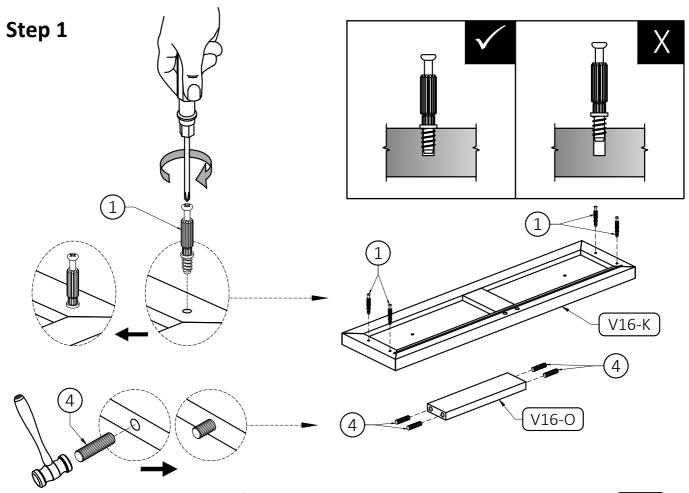


- 1. Attach four Cam Lock Pins ① into pre-drilled holes on back of Drawer Front V16-K).
- 2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.
- 3. Insert four Wood Dowels (4) into guide holes on Support Drawer Bottom (V16-O).

4. Use rubber mallet to tap Dowels (4) into bottom of holes securely. 1/3 length of Dowels should be exposed.

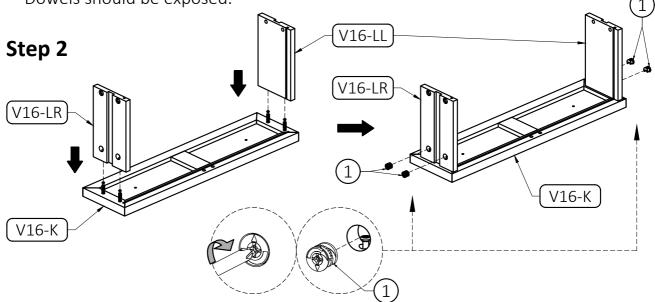


- 1. Align Cam Lock Pins with guide holes and attach Drawer Sides V16-LL, V16-LR.
- 2. Insert two Cam Locks 1 into guided holes on each Drawer Side V16-LL, V16-LR.
- 3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

Step 3

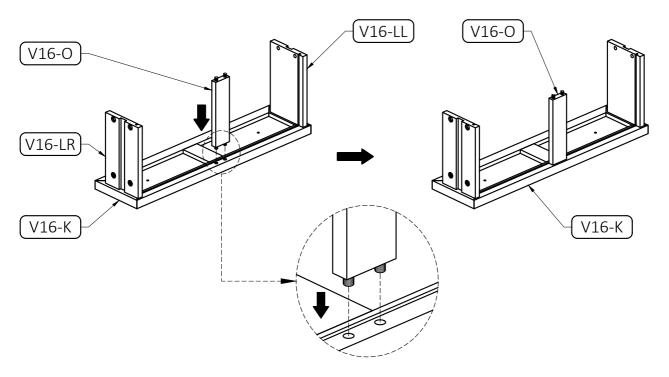


1. Align Wood Dowels with guide holes and attach Support Drawer Bottom (V16-0) to Drawer Front (V16-K).

Step 4

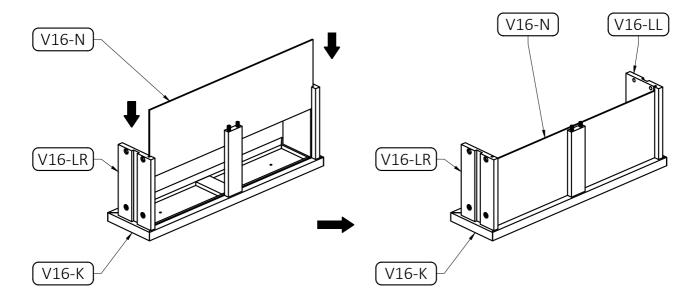


1. Slide Drawer Bottom V16-N firmly into slots on Drawer Sides V16-LL, V16-LR and Drawer Front V16-K.

Model # AXCACA79-BRU

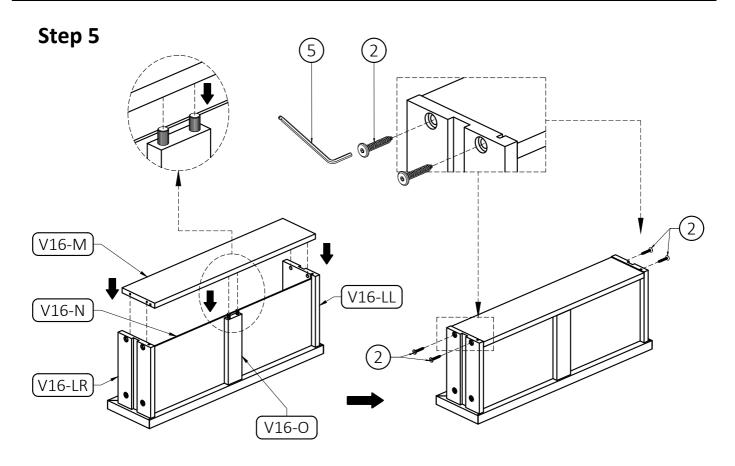


- 1. Align Drawer Back (V16-M) with Drawer Bottom (V16-N), Wood Dowels with guide holes and press firmly into slot.
- 2. Attach Drawer Back using two Allen Key Screws 2 through guide holes on each Drawer Side V16-LL, V16-LR.
- 3. Use Allen Key (5) to tighten Screws. Do not over-tighten.

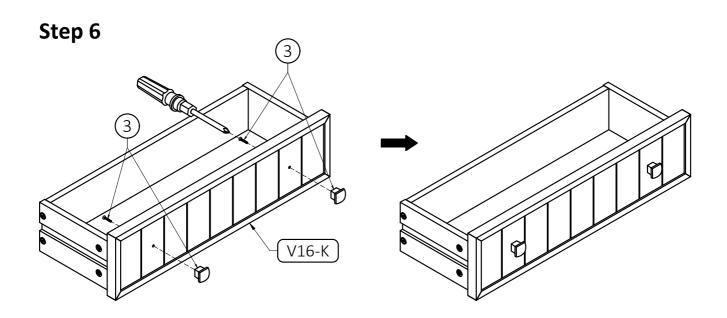

1. Use Phillips screwdriver to attach Handle (3) to Drawer Front (V16-K).


Step 7

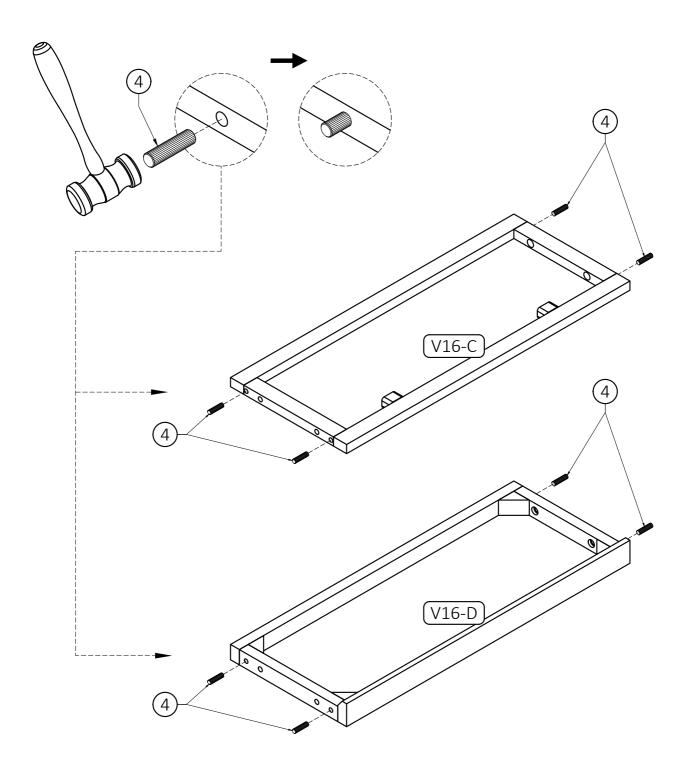


- 1. Insert four Wood Dowels 4 into guide holes on each Top Frame V16-C, Bottom Frame V16-D.
- 2. Use rubber mallet to tap Dowels 4 into bottom of holes securely. 1/3 length of Dowels should be exposed.

Model # AXCACA79-BRU


Step 8

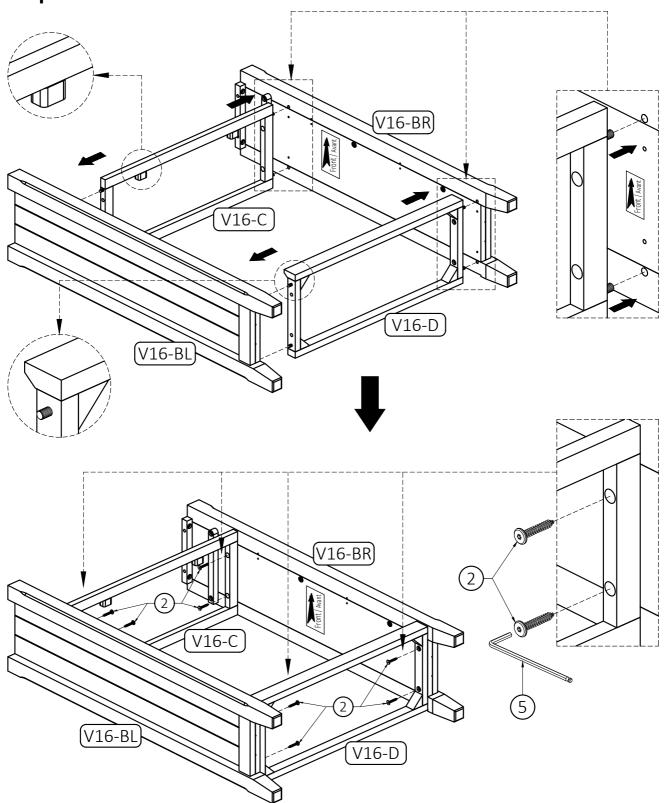

- 1. Align Wood Dowels with guide holes and attach Top Frame (V16-C) and Bottom Frame (V16-D) to Sides (V16-BL), (V16-BR).
- 2. Use two Allen Key Screws (2) to attach Top Frame (V16-C) and Bottom Frame (V16-D) through guide holes.
- 3. Use Allen Key (5) to tighten Screws. Do not over-tighten.

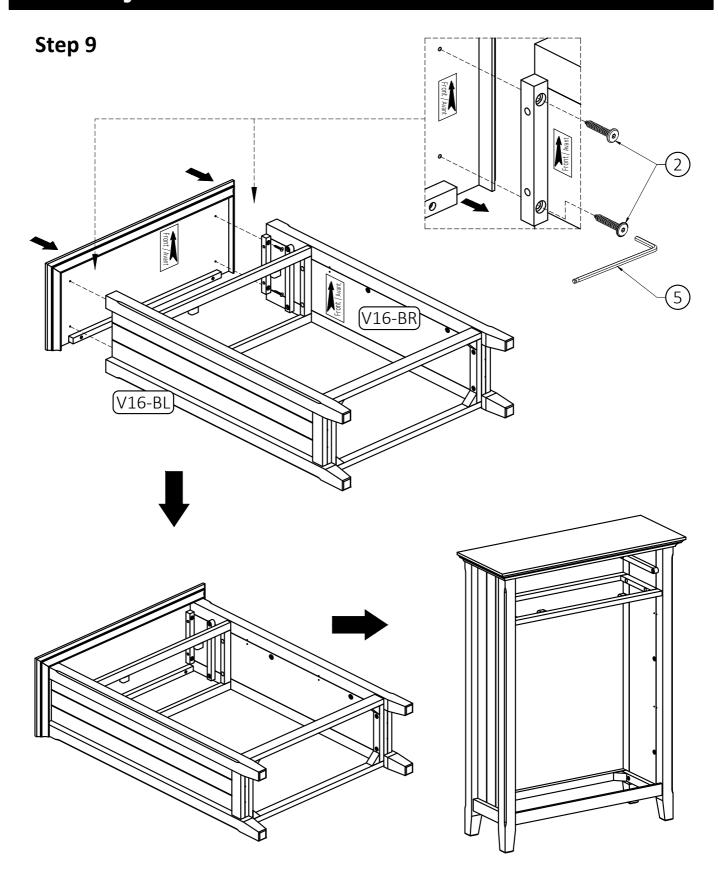


- 1. Use four Allen Key Screws ② to attach Sides V16-BL, V16-BR through guide holes from Sides V16-BL, V16-BR to pre-drilled holes of Top V16-A.
- 2. Use Allen Key (5) to tighten Screws. Do not over-tighten.

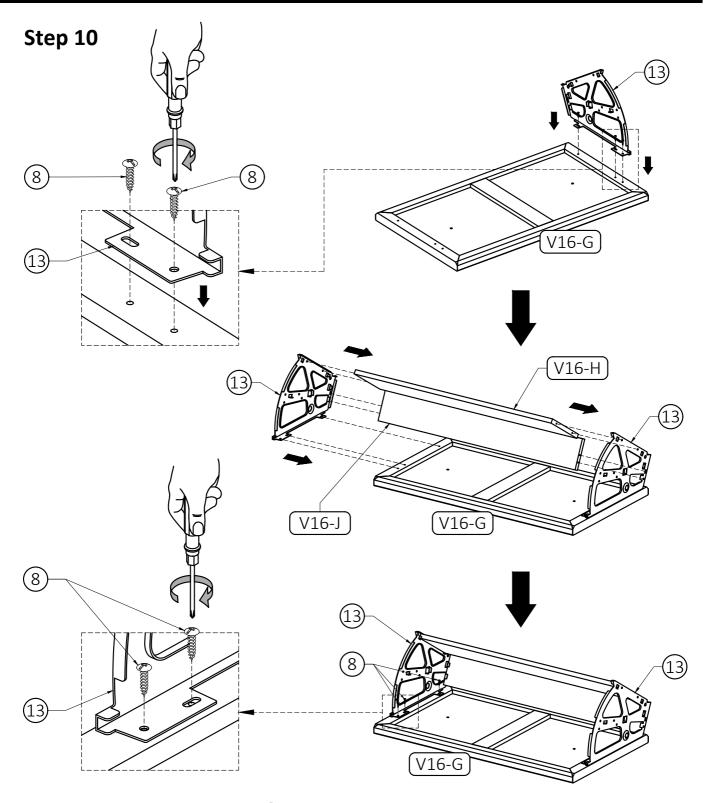


- 1. Attach Shoe Cabinet Hinge 13 (Right) align with pre-drilled holes at back of Door V16-G.
- 2. Use Phillips screwdriver to snugly tighten three Phillips Screws 8.
- 3. Slide Bottom Panel (V16-J) and Back Divider (V16-H) firmly into slots on Shoe Cabinet Hinge (13) (Left & Right).
- 4. Use Phillips Screw Round Head (8) to attach Shoe Cabinet Hinge (13) (Left) through guide holes to pre-drilled holes of Door (V16-G).
- 5. Use Phillips screwdriver to secure Screw. Do not over-tighten.

Model # AXCACA79-BRU

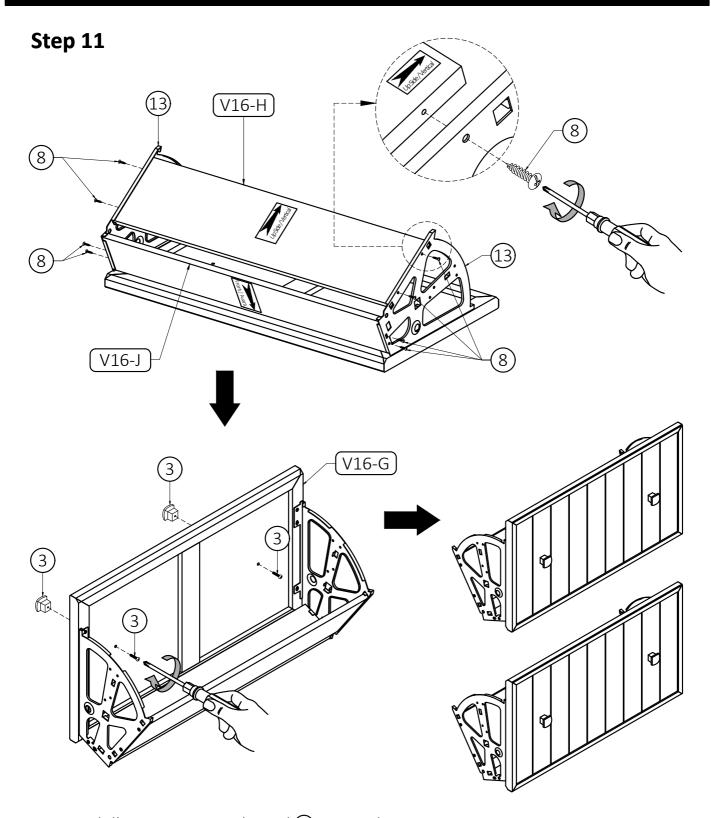


- 1. Use Phillips Screw Round Head (8) to attach Shoe Cabinet Hinge (13) (Left & Right) through guide holes to pre-drilled holes of Bottom Panel (V16-J) and Back Divider (V16-H).
- 2. Use Phillips screwdriver to secure Screw. Do not over-tighten.
- 3. Use Phillips screwdriver to attach Handle 3 to Door V16-G.

Repeat Step 10-11 for the second Door $\overline{\text{V16-G}}$, Bottom Panel $\overline{\text{V16-J}}$ and Back Divider $\overline{\text{V16-H}}$.

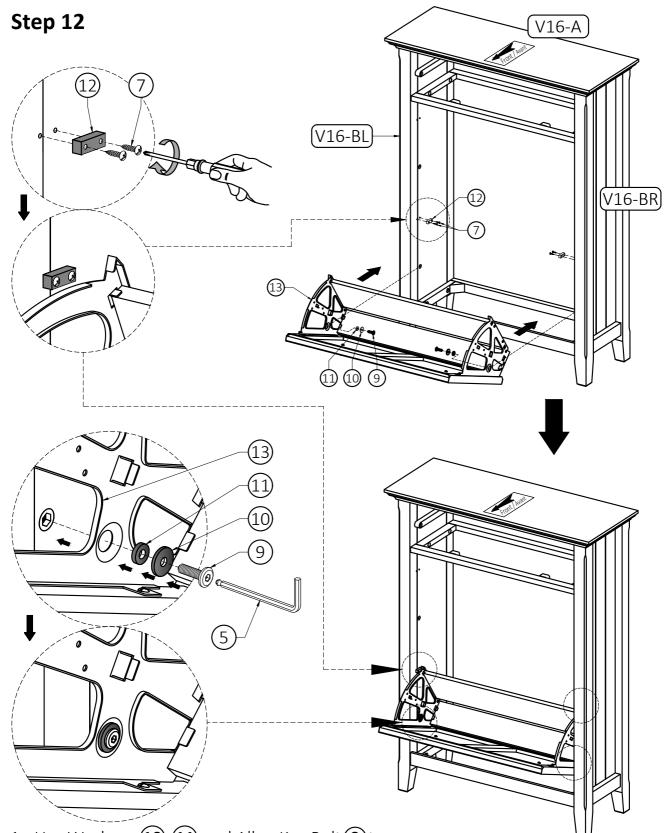


- 1. Use Washers (10), (11) and Allen Key Bolt (9) to attach Shoe Cabinet Hinge (13) to Sides (V16-BL), (V16-BR) through guide holes.
- 2. Use Allen Key 5 to tighten Screws. Do not over-tighten.
- 3. Attach End Stop **12** using Screw Round Head 7 into pre-drilled holes on Sides (V16-BL), (V16-BR).
- 4. Use Phillips screwdriver to secure Screws. Do not over-tighten.


Step 13

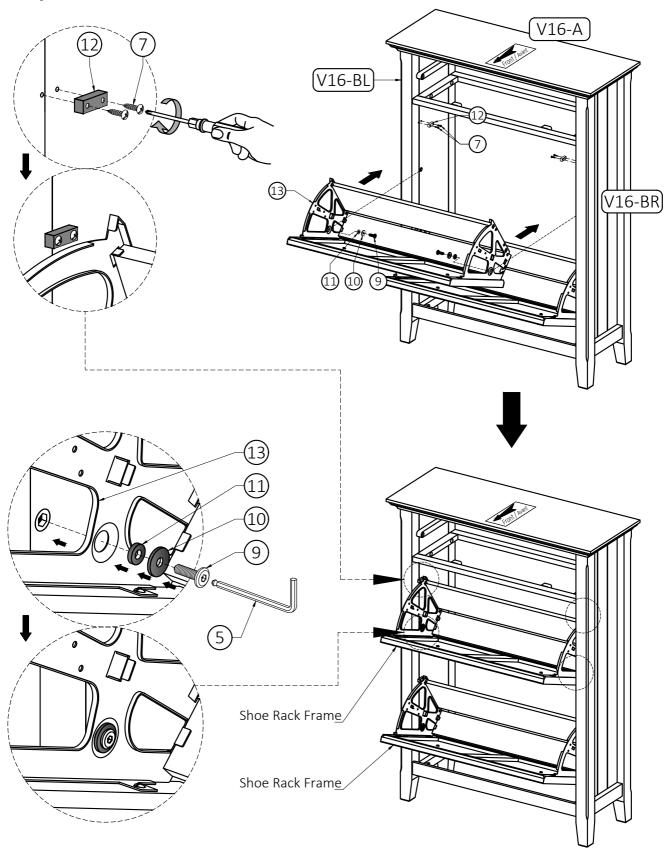


Repeat Step 12 for the second Shoe Rack Frame assembled.

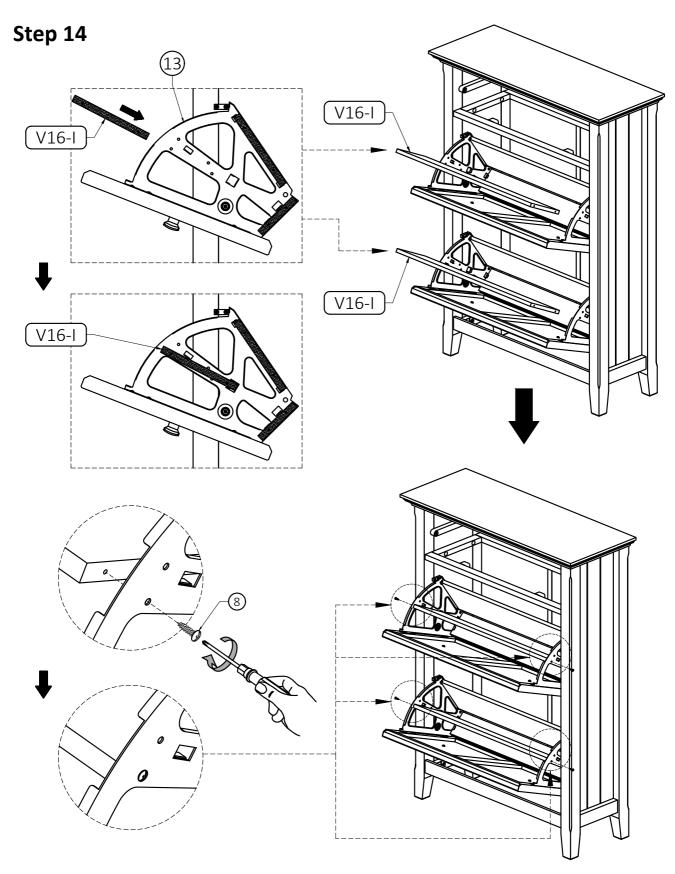

- 1. Slide Middle Dividers V16-I) firmly into slots on Shoe Cabinet Hinge (13).
- 2. Use Phillips Screw Round Head (8) to attach Shoe Cabinet Hinge (13) through guide holes to pre-drilled holes of Middle Divider (V16-1).
- 3. Use Phillips screwdriver to secure Screw. Do not over-tighten.

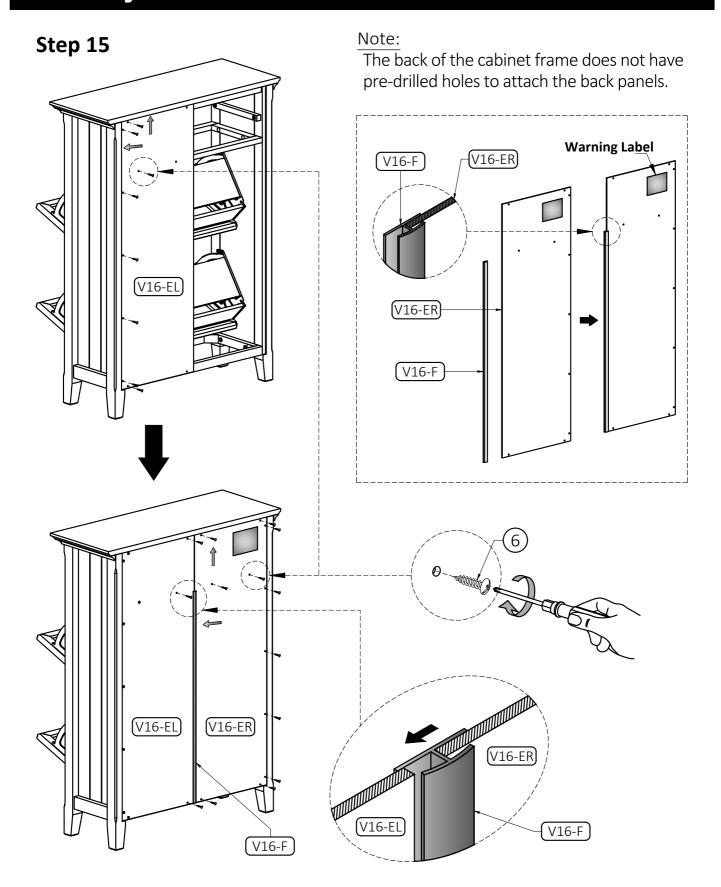

- 1. Attach Left Back Panal V16-EL to back frame by using eight Phillips Screws 6.
- 2. Insert Right Back Panel V16-ER into the slot of Joining Strip V16-F).
- 3. Insert the entire set of step 2 into side edge of Left Back Panel V16-EL and attach both panels V16-EL), V16-ER) with screws 6.

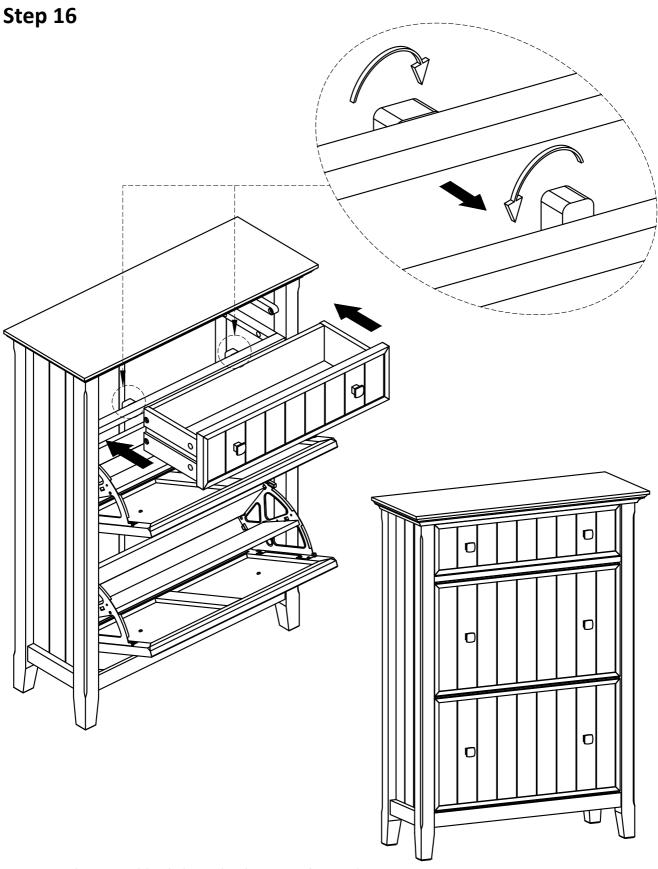


Turn the wood lock (on the bottom frame)
to be perpendicular to the frame for safety stop
(intended to keep the drawers from pulling all the way out).

Furniture Tip Over Restraint Assembly




WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

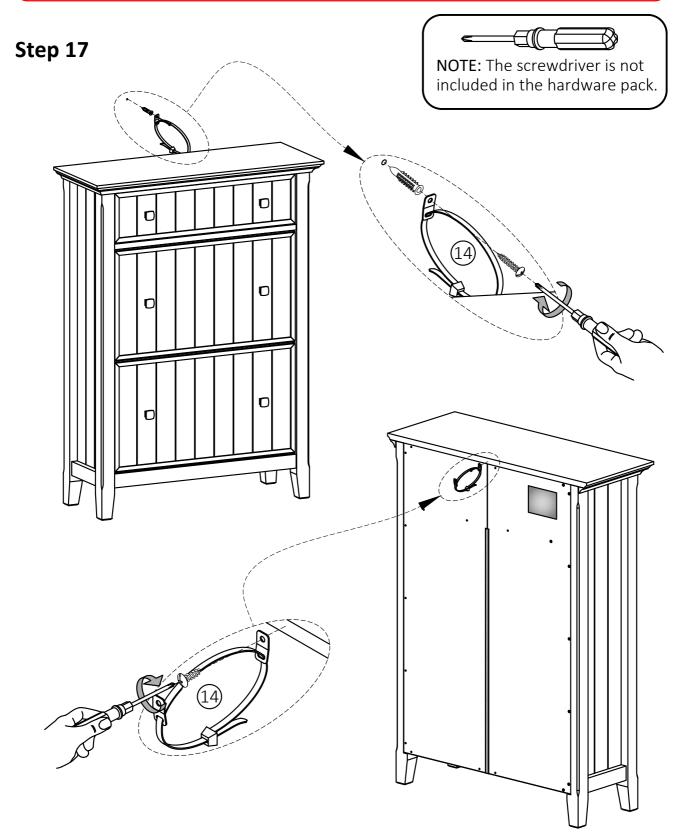


Furniture Anti-Tipping Restraint Instructions


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

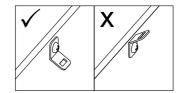

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.

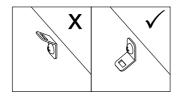

- 3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
- 4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
- 5. Place the furniture so the back edge is in line with the bracket on the wall.
- 6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
- 7. Check to make sure the strap is securely laced and locked to the brackets.

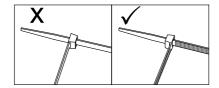

- DO NOT put a TV or other heavy objects on top of furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves