



COLD PLUNGE CHILLER USER GUIDE

MODELS

CP-CHILL1HP

CP-CHILL08HP



DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure your product is recognized as an official purchase and is eligible for warranty coverage.

register online at www.saunaspa.com/register or scan the QR code at Page 2.

PRODUCT REGISTRATION*


IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at www.saunaspa.com/register . or Scan the QR code below.

Registering online is fast, secure, and ensures we receive your information.


1

USE YOUR PHONE CAMERA
TO SCAN THE QR CODE

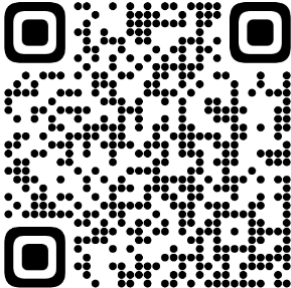

2

FILL IN A QUICK
REGISTRATION FORM

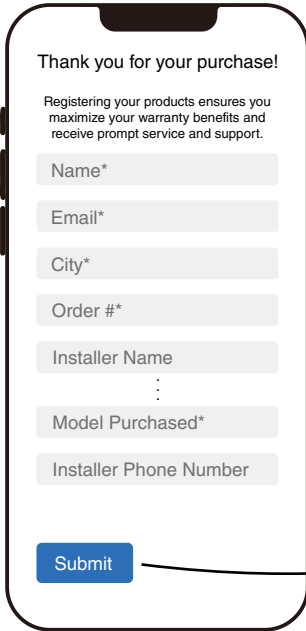

The smartphone screen displays a registration form with the following fields: Name*, Email*, City*, Order #*, Installer Name, Model Purchased*, and Installer Phone Number. A blue 'Submit' button is at the bottom. A dashed oval highlights the 'Submit' button on the right side of the page, with an arrow pointing from the 'Submit' button on the phone to it.

3

CLICK SUBMIT AND
ENJOY PEACE OF MIND

TABLE OF CONTENTS

USER INSTRUCTIONS	5
SPECIFICATONS	6
PRODUCT DIAGRAM	6
ACCESSORIES	6
WIRING DIAGRAM	7
CONNECTION DIAGRAM.....	7
QUICK START GUIDE.....	8
USAGE.....	9
MAINTENANCE & CLEANING.....	12
TROUBLE SHOOTING	14

IMPORTANT!

- Malfunctions, damages, part replacements and labor resulting from improper installation, negligence, or lack of care and maintenance will NOT be covered under the SaunaSpa Warranty.
- PRIOR TO INSTALLATION,ENSURE THAT THE PRODUCT IS POWERED OFF.

WARRANTY AND REPAIR GUIDELINES

KPLUNGE warrants that this cold plunge chiller is free from manufacturer defects and malfunctions.

Please be advised failure to comply with any of the following will VOID the warranty.

1. Chiller must registered within 90 days of delivery.

Warranty Period:

This product is covered under warranty for a period of 12 months for cold plunge, commencing from the date of purchase.

USER INSTRUCTIONS

It is recommended to carefully read the following instructions before use.

CAUTION

- Operators must be 18 years or older.
- Do not operate the chiller with wet hands.
- Keep the power cord away from heavy objects and do not run it under carpets or rugs.
- Do not insert objects into the chiller's vents or openings.
- Use caution around children, the elderly, and individuals with mobility issues.
- Always keep the chiller upright on a stable, level surface; do not invert.
- Install the chiller in a well-ventilated area, ensuring at least 100 cm (39 in.) of clearance around vents. Avoid placing it in closets or cabinets, or other small places.
- Do not disassemble or modify the chiller.
- Avoid using the chiller in very humid or dusty conditions.
- For electrical issues, contact authorized service personnel.
- Keep pets and children away while the chiller is operating.
- Report any signs of damage, leaks, unusual noises, smells, or performance issues immediately.
- Disconnect power before maintenance or cleaning.
- Avoid placing the chiller in direct sunlight or near heat sources.
- Ensure the filter is installed when the chiller is running.
- Regularly clean the water filter and dust net for optimal performance.
- If the ambient temperature drops to 0°C (32°F), disconnect the pipes and fully drain the chiller by opening the drain valve to prevent freezing damage.
- Before turning on the chiller, ensure there is enough water in the bathtub and all pipes are properly connected.
- Running the water pump without water can cause noise and reduce its lifespan.
- Never cover the intake or exhaust openings with clothes, towels, or other objects.
- Use extreme caution when operating near children, the elderly, or individuals with limited mobility.
- Never insert fingers or foreign objects into the ventilation grilles or other parts of the chiller.
- Do not climb, sit, or stand on the chiller, or place objects on top of it.


In order to prevent accidents or death, please pay attention to safety.

- During and after transportation, always keep the chiller upright on a stable surface.
- After transportation, allow the chiller to sit for 24 hours before use to let the refrigeration gas settle.
- Ensure the chiller is plugged into a properly rated AC socket or extension cable.
- Keep the chiller dry at all times. Do not immerse, splash, or spray water on the unit. If it gets wet, unplug it immediately and do not use it.
- Do not install in direct sunlight. Chiller should always be protected from outside elements.
- Never leave the chiller powered on while in the water. Always turn off the unit during cold water therapy sessions.
- If the chiller stops working or fails to start, unplug it immediately and do not use it.
- We are not responsible for any misuse or failure to follow the safety instructions provided.
- Do not block the fan outlet of the unit, as this will reduce heating and cooling efficiency and waste power.
- Do not operate the equipment when it is dirty. Regularly check and clean both the equipment and the filtering device.
- Do not touch the fan during operation to avoid injury.
- Ensure that the rated voltage of the product matches the power supply voltage in your home.
- During operation, do not touch the switch with wet hands, and avoid contact with electrical components.
- Do not turn the chiller upside down.
- Do not use without the filter element installed.
- Ensure there is at least 10cm of free space around the chiller for proper ventilation.
- When the following situations occur — first use of the chiller, after maintenance, after changing the water in the tub, or after replacing the old filter — make sure the filter device on top of the chiller is completely filled with water to expel as much air from the water circulation system as possible.

SPECIFICATIONS

SPECS	CP-CHILL1HP	CP-CHILL08HP
Voltage	120V AC 60Hz	
Input Power	1150W	725W
Cooling Capacity	3050W	1790W
Net Weight	43KGS	35KGS
Product Dimension	21.6"×15.7"×21.6"(550×400×550mm)	20"×14.2"×20.9"(510×360×530mm)
Cooling Time 73°F to 41°F (53 gal/Ambient temp 82°F)	2.8h or less	3.9h or more
Refrigerant	R32	
Adjustable Water Temperature Range	37°F-104.0°F	
Working Temperature Range	34°F-104.0°F	
Store Temperature & Relative Humidity	-4°F-131°F / 20%-85%	
Input Water Temperature Range	40°F-92°F	
Product Feature	Ozone disinfection, App control, TFT Touch panel	

PRODUCT DIAGRAM

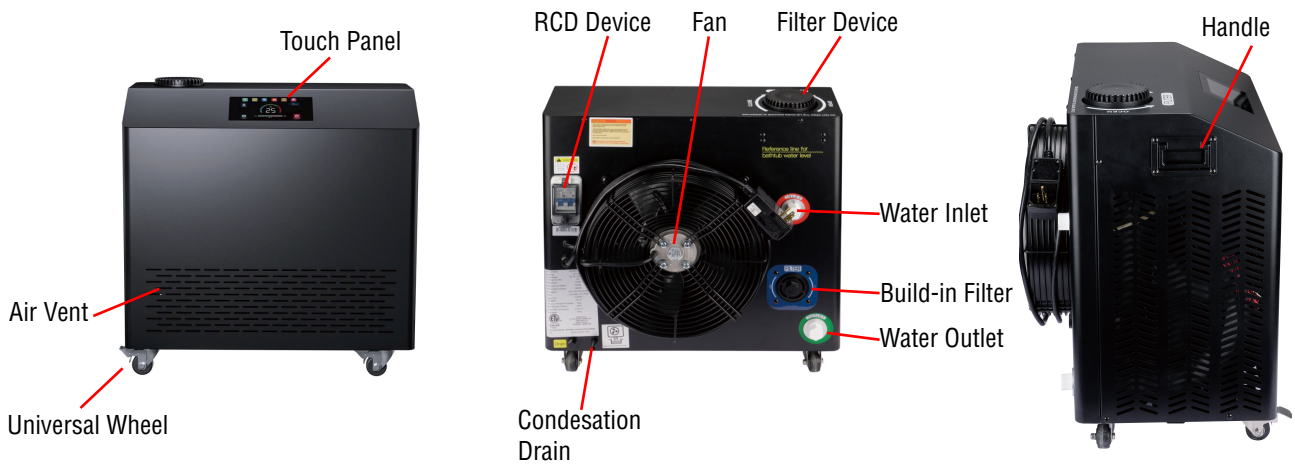

ACCESSORIES



Filter & Built-in filter Wrench



Filter Elements



98'(2.5meters) Water Pipe



(Inner Teeth 3/4")
(Outer Teeth 1/2")

Quick conversion connectors



Valves



Screwdriver




Sealing tape




O-rings

INSTALLATION & USER GUIDE

WIRING DIAGRAM

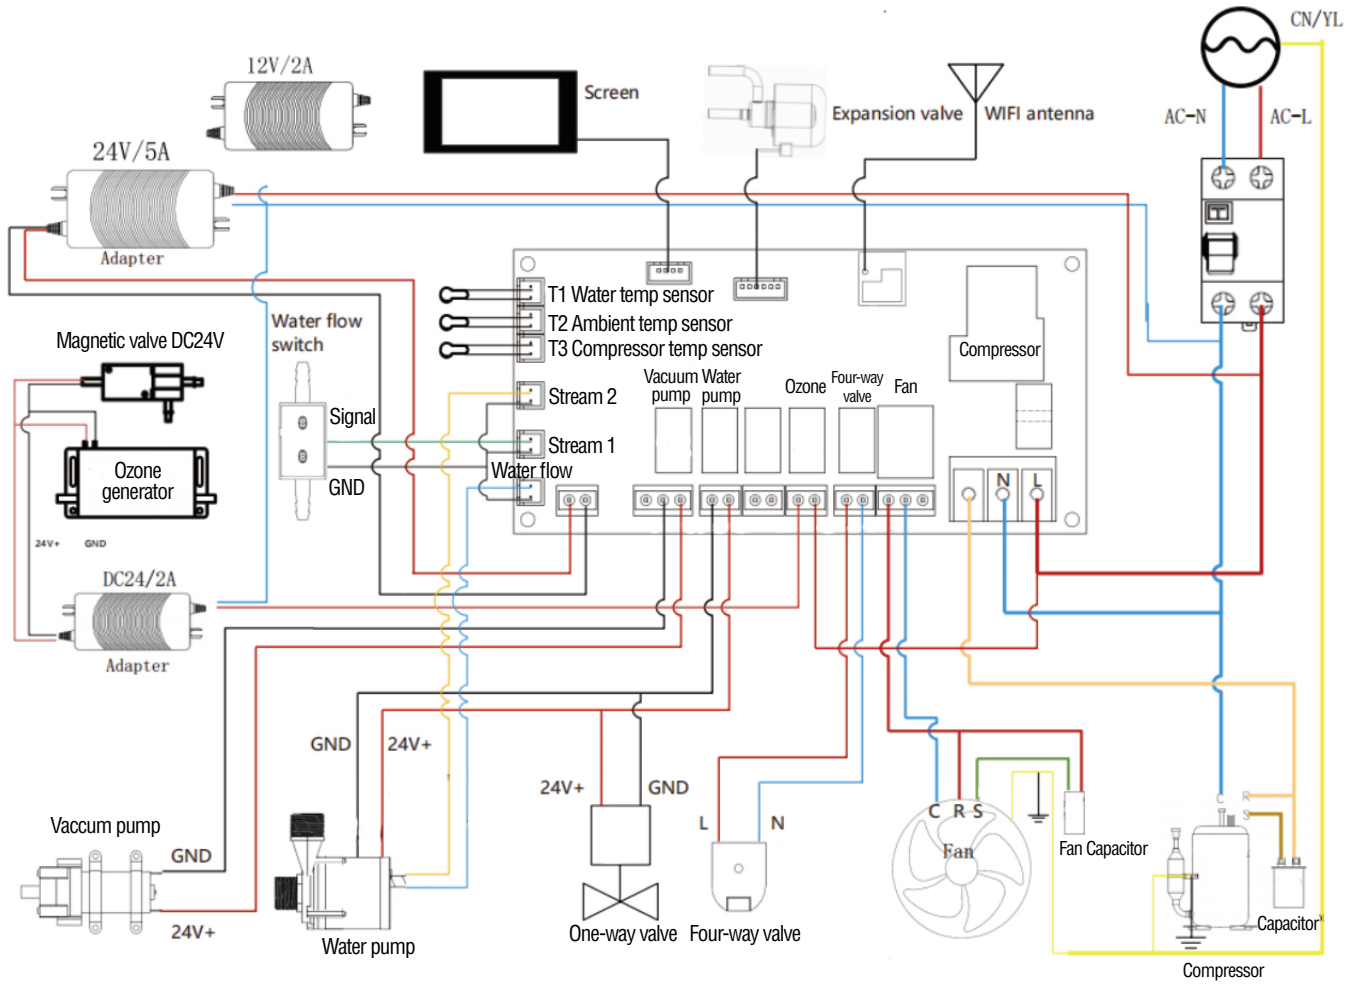

CONNECTION DIAGRAM

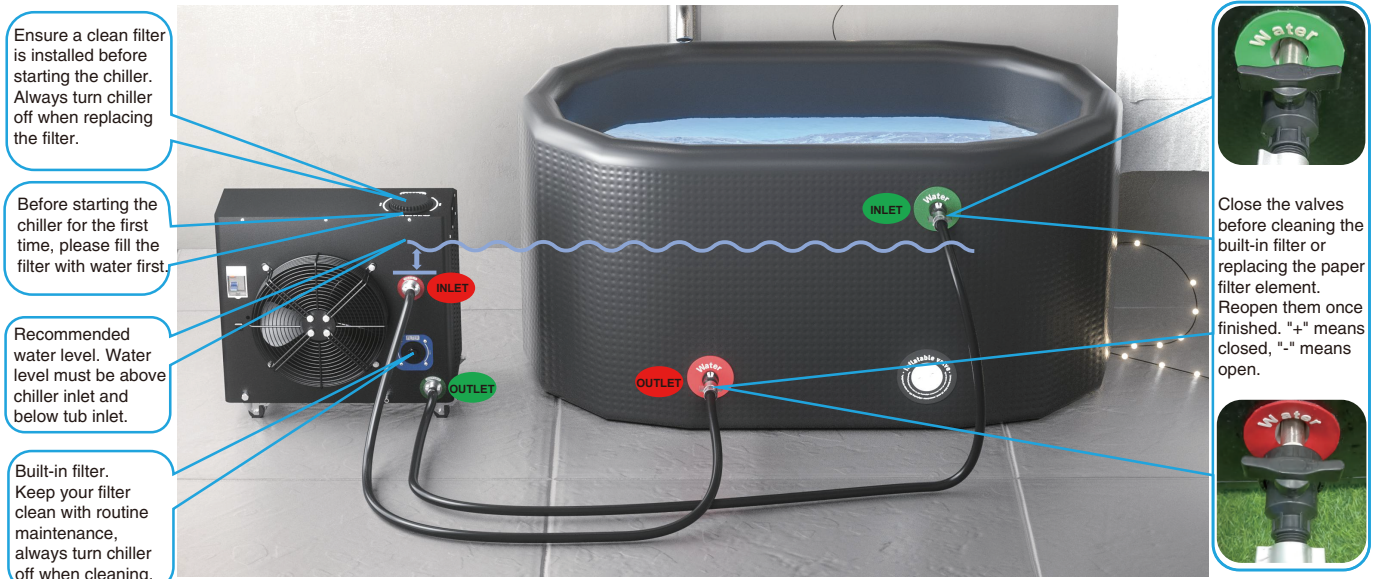

NOTES: Before turning on the chiller, ensure the bathtub has enough water and all water pipes are properly connected. Otherwise, the water pump may idle, causing noise and reducing its lifespan. When the following situations occur — first use of the chiller, after maintenance, after changing the water in the tub, or after replacing the old filter — make sure the filter device on top of the chiller is completely filled with water to expel as much air from the water circulation system as possible.

QUICK START GUIDE

1. Place the chiller on a stable surface near your bathtub, ensuring it is at the same level as the bathtub.
2. Install the filter lid on top and ensure it is hand-tightened. (The installation method refer to MAINTAINANCE section, Figure A)



Figure A



Figure B

3. Make sure the built-in filter is properly installed. (The installation method refer to MAINTAINANCE section, Figure B)

4. Install the valves on the tub's inlet and outlet, ensuring they are hand-tightened. (Figure C)



Chiller



Tub

Figure C

5. Connect both the inlet and outlet water pipes, making sure the valves are hand-tightened. Then, fill the bathtub with enough water. The water level should be higher than the chiller inlet but lower than the tub inlet. (Figure D)

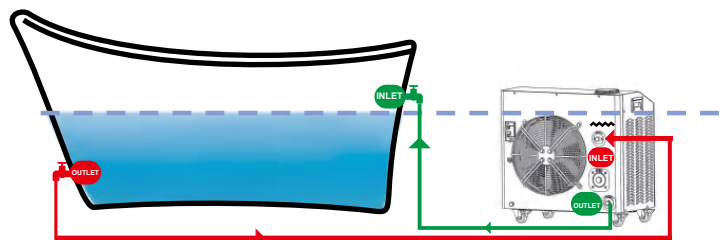


Figure D

6. Plug in and turn on the chiller. Once powered on, the chiller will begin operating. (Figure E)
Add clean water to the filter device on top of the chiller. Make sure the filter device is completely filled with water to remove as much air as possible. (Figure E&F)

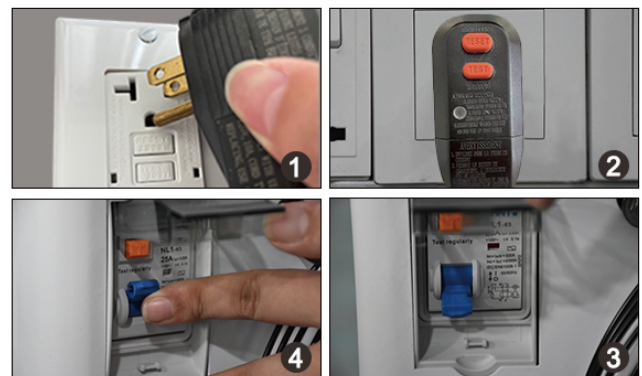


Figure E

7. Please check the 'Water Flow' reading on the control panel when the chiller starts operating. **The water flow should be higher than 15L/min.** If the value drops **below** this level, **stop the unit** immediately and check if the water pipes are connected well. Check if the chiller filter device on the top is fully filled with water.

8. IMPORTANT: If both the bathtub inlet and outlet are below the water level, air may remain in the chiller, affecting the water flow. To resolve this, open the drain slightly to release some water. (Figure G)

8. The built-in ozone sterilization system automatically activates periodically to disinfect the water.

9. Once the desired temperature is reached, power off the chiller before starting your cold water therapy session.

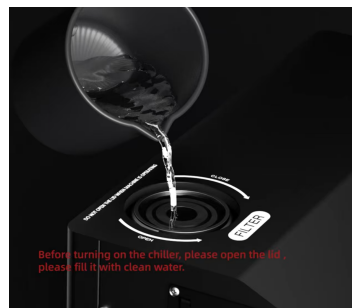


Figure F

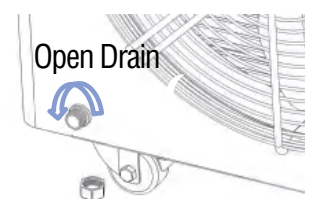


Figure G



USAGE

TOUCH PANEL

Main Interface


The corresponding icon will only light up when the current function is turned on.







- ① Turn on/off 
- ② Press  to enter the setting screen
- ③ Press  3-5s to lock or unlock
- ④ Press + or - to set the temp 
- ⑤  It will be displayed when there is a failure
- ⑥ Displays the current water flow

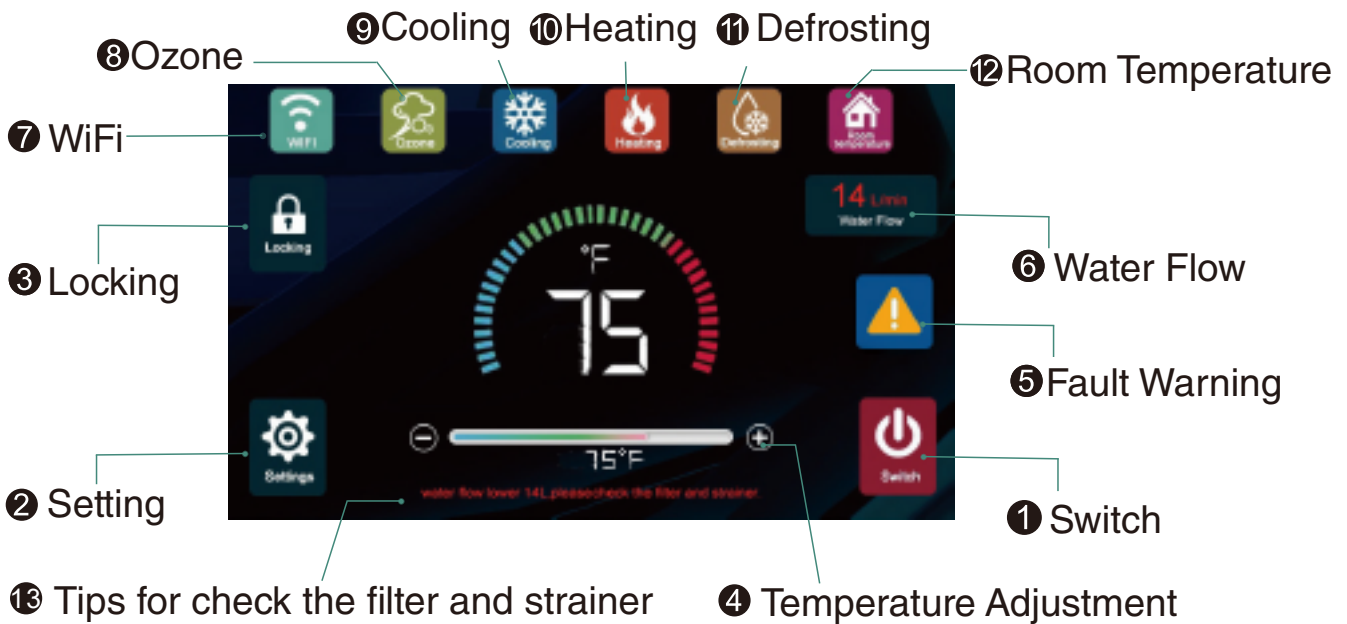
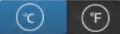


Remarks: ⑩ ⑪ lights up only for chillers with a heating function when in heating mode.


- ⑬ When the water flow is lower than 14L/min, a prompt to remind the user to check the filter and built-in filter will appear.



SETTING SCREEN

1. Adjust the Ozone working time interval: 0 min (close) and max to 5 min 
2. Adjust the screen brightness: min 10%, max 100% 
3. Adjust the screen sleep time: 0 min (close), max 5 min 
4. Adjust the screen lock time: 0 min(close), max 5 min
5. Click return button to enter the first interface 


6. Long press to enter the WiFi function (connect Smart Life) 
7. Temperature unit switching(°C/°F) 
8. Adjust the button sound: ON/OFF 
9. Power-on automatic operation: When this switch is turned on, the device will automatically restart once power is restored after a power outage. 

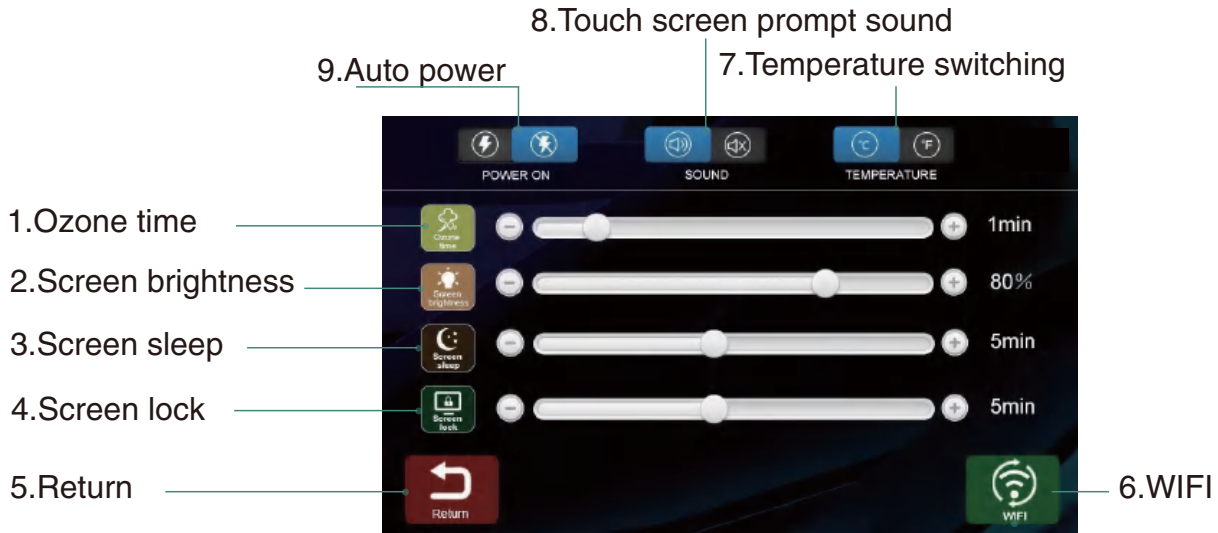

WIFI CONNECTION


1. APP installation

Search for “Smart Life” in App Store(iPhone) or Google Play Store(Android), or scan the QR code below to install the APP.

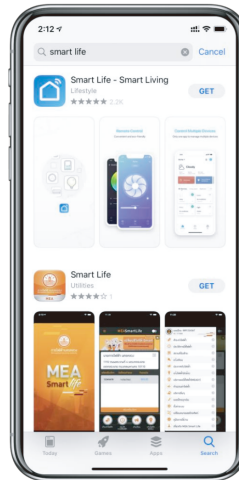

2. Set the control panel to pairing mode


Turn ON the chiller, click the setting key, then press WIFI key for 3~5 seconds until the WIFI icon blinks.

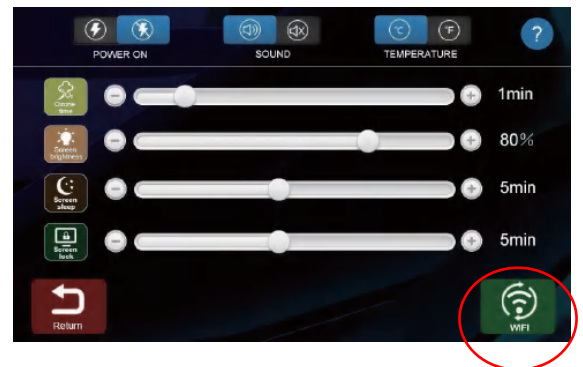

3. Add device in APP

Use your smartphone to connect to a Wi-Fi hotspot (2.4G only), then open the “Smart Life” app.

Click “+” or “Add Device” on homepage.

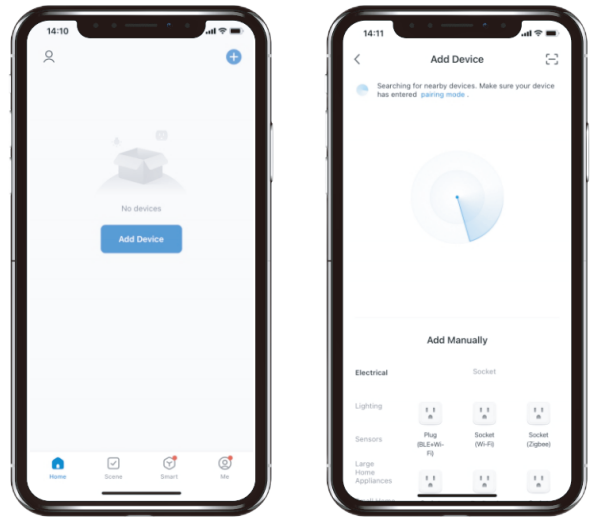

4. Find the device

The device named “KPLUNGE ICE BATH CHILLER” will appear on the Add Device page. (Figure A)
Click on it to begin pairing. (Figure B)
Enter the hotspot password and click “Next”. (Figure C)

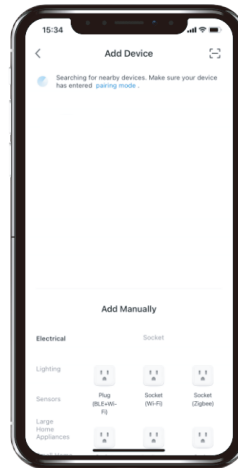


Figure A

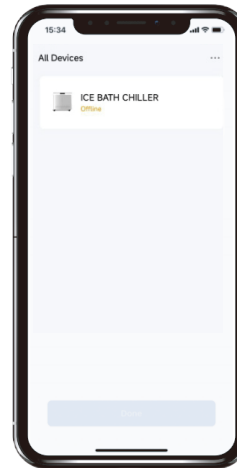


Figure B


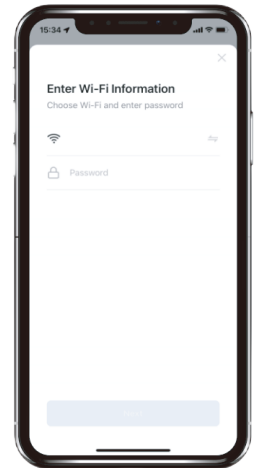


Figure C


5. Finish Pairing

When the Add Device page displays “Added successfully”, click “Done”.

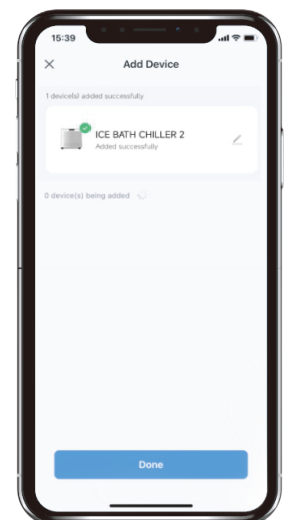

After pairing, the icon named “KPLUNGE ICE BATH CHILLER” will appear on the homepage of the “Smart Life” APP. Click “KPLUNGE ICE BATH CHILLER” icon to access the operation page.


1. Turn on/off (Turn ON/OFF the chiller)
2. Locking (Touch panel lock/unlock)
3. Temperature unit switching (°C/°F)
4. Water Flow Status.
5. Set Time
6. Touch screen prompt sound (ON/OFF)
7. When this switch is turned on, the device will automatically restart once power is restored after a power outage.
8. Displays the operating status of internal components; no attention is required.
9. Adjust the Ozone working time interval: 0 min (close) and max to 5 min
10. Temperature adjustment (3-40°C/38-104°F)
11. Current Temperature

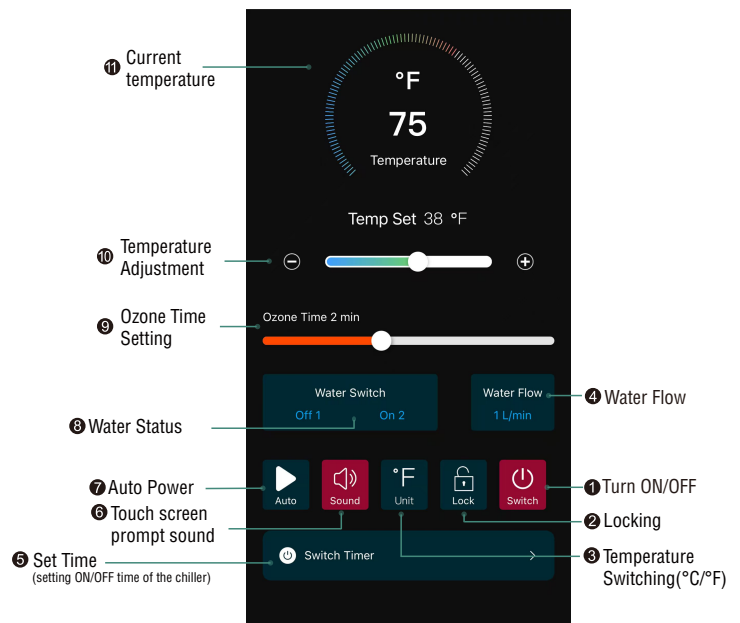

MAINTENANCE & CLEANING


1. Never clean the chiller with strong bleach-based detergents.
2. Do not add corrosive disinfectants, such as chlorine tablets, to the water.
3. Always turn off chiller and disconnect from the power supply before performing and maintenance or cleaning.
4. Never leave the chiller outside in temperatures below 34°F if there is water inside.
5. The drain outlet must be opened to empty the water inside the chiller in the following situations:
 - Long-term inactivity: Prevents water from deteriorating.
 - Ambient temperature below 34°F: Prevents freezing and potential damage to internal pipelines.
6. Replace the filter when it becomes dirty. If a water flow warning appears on the screen, check the filter to maintain a normal water flow rate and ensure optimal performance.

NOTICE: After maintenance, check whether the filter device on top of the chiller is completely filled with water before starting the chiller. If not, please add clean water to the filter device.

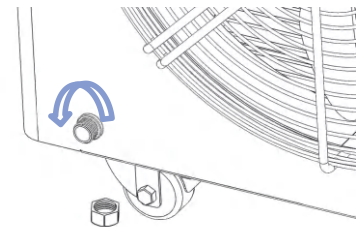





1 Close the valves of the inlet and outlet of the tub

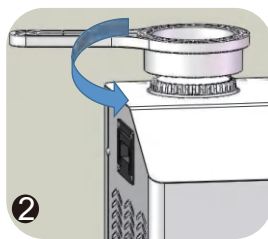


2 Open the lid with the wrench

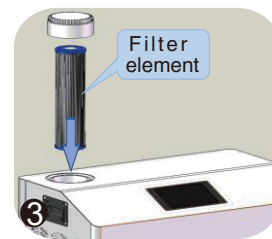

3 Take out the old filter element

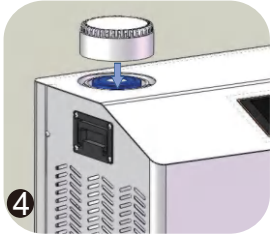

4 Put in a new filter element

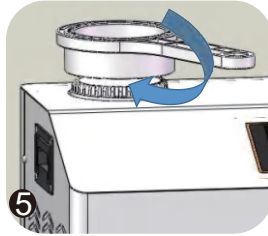

5 Close the lid and tighten with the wrench




6 Open the valves of the inlet and outlet of the bathtub


7. Check and clean the built-in filter if the water flow rate decreases. We recommend cleaning the filter every four weeks to ensure the water pump operates efficiently.



Open the lid with the wrench small side.

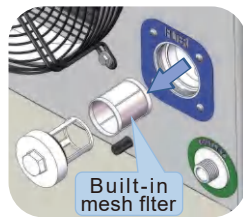

Take out the mesh filter and rinse it with water.

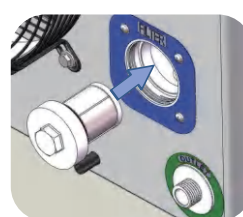


Put in a clean mesh filter.




Close the lid and tighten with the wrench small side.

8. Check and clean the dust net if the cooling/heating efficiency decreases. We recommend cleaning it every three months to ensure the condenser functions optimally.

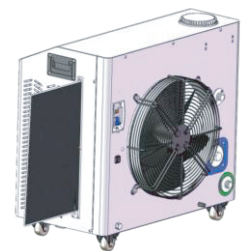

9. Do not place the device directly under the sun, rain, or snow. Ensure the machine is placed under a shelter to protect it.

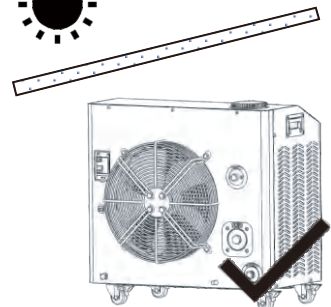

TROUBLESHOOTING

When the chiller encounters a malfunction, the fault reason will be displayed on the control panel. You can refer to this table to troubleshoot the issue based on the fault code. If an issue arises that is not listed in the table, please immediately disconnect the power and contact KPLUNGE promptly.

WARNING! Be sure to disconnect the power before opening for maintenance!

Error Reason/Problem	Possible Causes	Recommend Action
T1 temperature sensor failure	The T1 temperature sensor is damaged, or it is not installed properly.	Check if the temperature sensor is properly connected or damaged. Please contact KPLUNGE.
The water temperature is out of the range of use	The inlet water temperature exceeds 113°F (45°C) and is outside the usable range.	Please wait until the water temperature drops below 107°F (42°C) before use.
	The inlet water temperature is below 33.8°F(1°C), which is outside the usable range.	Please set the water temperature to above 41°F(5°C).
T2 temperature sensor failure	The T2 temperature sensor is damaged, or it is not installed properly.	Check if the temperature sensor is properly connected or damaged. Please contact KPLUNGE.
T3 temperature sensor failure	The T3 temperature sensor is damaged, or it is not installed properly.	Check if the temperature sensor is properly connected or damaged. Please contact KPLUNGE.
The cooling or heating speed has slowed down or cannot reach the set temperature.	<ol style="list-style-type: none"> 1. The dust net is clogged with dirt. 2. The filter element is clogged, causing the water flow to slow down. 3. The ambient temperature is too high(cooling) or too low(heating). 4. Refrigerant system pressure is abnormal. 	<ol style="list-style-type: none"> 1. Clean the dust net. 2. Clean or replace the filter. 3. Operate the chiller within the appropriate ambient temperature range. 4. Please contact KPLUNGE.
The control panel is not displaying anything or responding to touch.	<ol style="list-style-type: none"> 1. Poor contact of the wiring. 2. The control panel is damaged. 	<ol style="list-style-type: none"> 1. Check the connection cable. 2. Please contact KPLUNGE.
The water flow speed becomes slow.	<ol style="list-style-type: none"> 1. The filter on top has become dirty. 2. The built-in filter contains dirt. 3. There is air in the water circulation system, causing the circulation pump inside the chiller to run idle. 	<ol style="list-style-type: none"> 1. Replace the filter with a new one. 2. Clean the built-in filter. 3. Stop the chiller immediately and add clean water to the filter device on top of the chiller until it is full, then restart the chiller.

INSTALLATION & USER GUIDE

