

Intelligent PDU/ATS User Guide

PDU31xxx

PDU41xxx

PDU71xxx

PDU81xxx

PDU34xxx

PDU44xxx

PDU74xxx

PDU84xxx

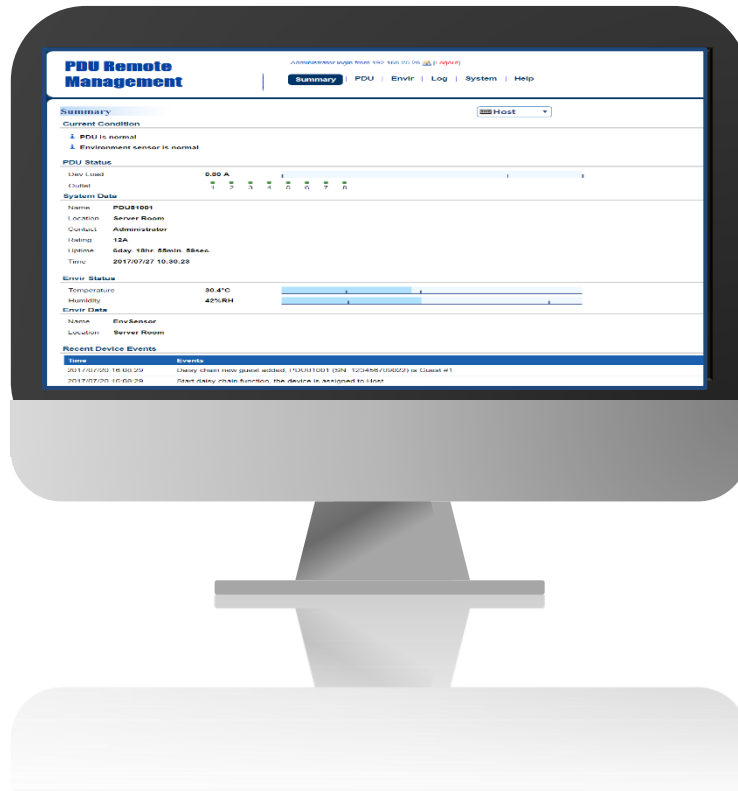


Table of Contents

Web Interface	1
Introduction	1
Advanced Power Management.....	10
Outlet Management	41
Security	59
Network Service.....	69
PDU/ATS Information.....	82
Command Line Interface	84
Introduction	84
Command Lists	86
Save and Restore Configuration Settings.....	116
PDU/ATS Network Daisy Chain	120
Firmware Upgrade.....	125

Web Interface

Introduction

CyberPower's Intelligent Power Distribution Unit (PDU) and Automatic Transfer Switch (ATS) Web Interface gives users all the features they need to configure, manage, and monitor the Intelligent PDU/ATS Series via a Web browser. With this easy-to-navigate interface, users can perform real-time monitoring of each outlet, control individual outlet, set power alerts, and complete many other tasks in an intuitive manner.

How to Log in

© 2010-2016, CyberPower Systems, Inc. All rights reserved.

1. Open a Web browser.
2. Enter the IP address of the CyberPower PDU/ATS in the Browser Address Bar, and then press ENTER.

Note: To look up the IP address, please refer to the LCD screen of the PDU/ATS.

3. Enter the information for the User Name and Password fields.
There are two types of user accounts.

Account Type	Default User Name	Default Password	Authorization
Administrator	cyber	cyber	View, access, and control all settings.
Viewer	device	cyber	View all settings.

4. Click **LOGIN** to open the [Summary Tab](#).

General Settings

These are the basic settings for the PDU/ATS.

1. Date and Time Settings

The date and time can be set manually or synchronized with a Network Time Protocol (NTP) server. All time-related configurations are based on this setting. See [System Tab > General > Time](#).

System Tab > General > Time

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General

Time
Identification
Daylight Saving Time
Security
Network Service
Notification
Reset/Reboot
About

Time

Current Settings

Time: 2017/07/25 Tuesday & 16:15:28
Status: Update from manual input.
Next NTP Update:

System Time Configuration

Time Zone: GMT+08:00
Date Format: yyyy/mm/dd

☐ Using NTP Server

Primary NTP Server: 0.0.0.0
Secondary NTP Server: 0.0.0.0
Update Interval: 8759 [1-8760 Hour(s)]
☒ Update right now

☒ Manual Setup

Date: 2017 / 7 / 25 yyyy/mm/dd
Time: 16:15:28 hh:mm:ss

Apply Reset

Item	Definition
Current Settings	
Time	The current date and time.
Status	Show whether the date and time setting is updated by manual setup or by the NTP (Network Time Protocol) server.
Next NTP Update	Synchronize with <i>Update Interval</i> .

Item	Definition
System Time Configuration	
Time Zone	The options for time zone selection.
Date Format	The options for date format selection.
Using NTP Server	<p>*Primary NTP Server: Users enter the IP address/domain name of the NTP server and choose local time zone based on their location.</p> <p>*Secondary NTP Server: Users enter the IP address/domain name of the NTP server and choose local time zone based on their location.</p> <p>*Update Interval: The frequency for updating the date and time from the NTP server.</p> <p>Select the Update right now option to update immediately.</p>
Manual Setup	<p>*Date: Enter the date in the designated format.</p> <p>*Time: Enter the time in the designated format.</p>

2. Daylight Saving Time

Users adjust the daylight saving time according to their location. See [System Tab > General > Daylight Saving Time](#).

System Tab > General > Daylight Saving Time

The screenshot shows the PDU Remote Management web interface. The top navigation bar includes the title "PDU Remote Management", a user login status "Administrator login from 192.168.25.28 [Logout]", and a menu with "Summary", "PDU", "Envir", "Log", "System" (highlighted), and "Help". The left sidebar contains a menu with "General" (highlighted), "Time", "Identification", "Security", "Network Service", "Notification", "Reset/Reboot", and "About". The main content area is titled "Daylight Saving Time" and contains a "DST Configuration" section. This section has three radio button options: "Disable" (selected), "Traditional US DST time (Second Sunday in March to First Sunday in November)", and "Manual DST Date Time". Below the "Manual DST Date Time" option, there are two rows of dropdown menus for "Start" and "End" times. The "Start" row shows "02:00", "the", "Second", "Sunday", "of", and "March". The "End" row shows "02:00", "the", "First", "Sunday", "of", and "November". At the bottom of the configuration section are "Apply" and "Reset" buttons.

Item	Definition
DST Configuration	
Disable	Disable the DST function.
Traditional US DST Time	Start from the second Sunday in March to the first Sunday in November.
Manual DST Date Time	Select the start/end time using the dropdown menu.

3. Device Identification

Users assign the device's name, location, and the person to contact about issues. See [System Tab > General > Identification](#).


System Tab > General > Identification

The screenshot shows the 'PDU Remote Management' web interface. At the top, there's a header with the title 'PDU Remote Management' and a navigation bar with links: Summary, PDU, Log, System (highlighted), and Help. A user login status is shown as 'Administrator login from 192.168.210.219' with a [Logout] button and a US flag. On the left, a sidebar menu lists various settings: General (highlighted), Time, Identification (highlighted), Daylight Saving Time, Security, Network Service, Notification, Reset/Reboot, and About. The main content area is titled 'Identification' and features a dropdown menu set to 'Host'. Below this, there are three input fields: 'Name' (containing 'PDU81001'), 'Location' (containing 'Server Room'), and 'Contact' (containing 'Administrator'). A checkbox for 'Synchronization with Host Name' is present and unchecked. At the bottom of the form are 'Apply' and 'Reset' buttons.

Item	Definition
HOST/GUEST#	Select the role of the PDU/ATS (HOST or GUEST#) if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATSs can connect to 1 HOST PDU/ATS.
Synchronization with Host Name	Allow the host name to be synchronized with the identification name so both fields automatically contain the same value. Note: When enabling this feature, the identification name can only contain numbers(0-9), letters(a-z, A-Z), hyphen and decimal point. Besides, the identification name should not start with hyphen or decimal point.
Name	The name entered by the user to identify the PDU/ATS.
Location	The PDU/ATS location entered by the user.
Contact	The person to be contacted about issues. Entered by the user.

4. Device Reset/Reboot

Users can reboot the PDU/ATS or reset all the settings to defaults. See [System Tab > Reset/Reboot](#).

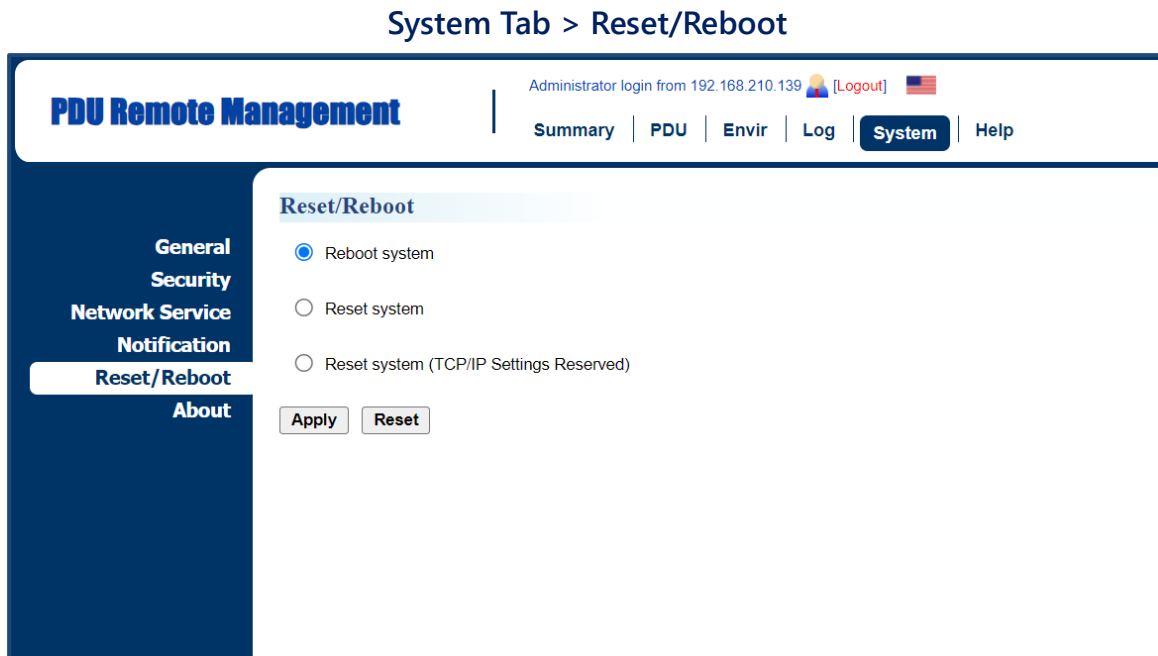

Item	Definition
Reboot System	Restart the System without turning off and restarting the PDU/ATS outlets.
Reset System	Reset the System to default setting and restart it. This action do not turn off or restart the PDU/ATS outlets.
Reset System (TCP/IP Settings Reserved)	Reset the System to default setting but reserving TCP/IP settings, and restart it. This action do not turn off or restart the PDU/ATS outlets.

5. Environmental Monitoring

PDU/ATS with CyberPower ENVIROSENSOR can provide remote monitoring of temperature and humidity in a server closet and/or datacenter. You can set temperature and humidity threshold for event action warning. See [Envir Tab > Status](#) & [Envir Tab > Configuration](#). Note that Envir Tab **only** appears when an ENVIROSENSOR is connected to the PDU/ATS.

Envir Tab > Status

PDU Remote Management

Administrator login from 192.168.27.126 [Logout]

Summary | PDU | **Envir** | Log | System | Help

Status

Configuration

Status

Information

Name	EnvSensor
Location	Server Room

Temperature

Current Value	23.1 °C
Maximum	24.1 °C (at 02/15/2017 11:10:55)
Minimum	20.5 °C (at 02/16/2017 07:45:25)

Humidity

Current Value	51 %RH
Maximum	56 %RH (at 02/16/2017 09:32:10)
Minimum	42 %RH (at 02/15/2017 13:12:40)

Contact

Contact#1	Normal
Contact#2	Normal
Contact#3	Normal
Contact#4	Normal

Item	Definition
Information	Display the name and location of the ENVIROSENSOR.
Temperature	
Current Value	The real-time reading of temperature.
Maximum	The highest temperature recorded and the time of occurrence.
Minimum	The lowest temperature recorded and the time of occurrence. Click Reset to reset the highest and lowest value to zero.
Humidity	
Current Value	The real-time reading of humidity.

Item	Definition
Maximum	The highest humidity recorded and the time of occurrence.
Minimum	The lowest humidity recorded and the time of occurrence. Click Reset to reset the highest and lowest value to zero.
Contact	Display the current status of each input dry contact relay.

Envir Tab > Configuration

PDU Remote Management Administrator login from 192.168.25.32 [Logout]

Summary | PDU | **Envir** | Log | System | Help

Configuration

Information

Name: EnvSensor
Location: Server Room

Temperature

High Threshold: 32 °C [1-70]
Low Threshold: 15 °C [1-70]
Hysteresis: 2 °C [1-10]
Rate of Change: 10 °C per 5 minutes [1-70]
Unit: °C ▼

Humidity

High Threshold: 80 %RH [10-90]
Low Threshold: 20 %RH [10-90]
Hysteresis: 5 %RH [1-20]
Rate of Change: 20 %RH per 5 minutes [1-80]

Contact

#1 Name & State: Contact#1, Normally Open ▼
#2 Name & State: Contact#2, Normally Open ▼
#3 Name & State: Contact#3, Normally Open ▼
#4 Name & State: Contact#4, Normally Open ▼

Apply Reset

Item	Definition
Information	
Name	The name entered by user to identify the ENVIROSENSOR.
Location	The location of the ENVIROSENSOR, entered by the user.
Temperature	
High Threshold	Set the highest temperature value for a high temperature warning.
Low Threshold	Set the lowest temperature value for a low temperature warning.


Item	Definition
Hysteresis	<p>The point where the environmental state changes from abnormal to normal and users receive a clearing event notification. The function of Hysteresis is to avoid receiving multiple event notifications.</p> <p>*For high threshold, the point is the threshold minus the Hysteresis value; for low threshold, the point is the threshold plus the Hysteresis value.</p> <p>For example: The high threshold is 32°C, and hysteresis is 2°C. The temperature rises to 33°C, you will get a warning. Then it goes down to 31°C and up to 33°C repeatedly. No clearing events and warnings will occur while the temperature readings are within the Hysteresis. You will not get a clearing event until it drops to 30°C.</p>
Rate of Change	<p>Define the abnormal change of temperature per 5 minutes.</p> <p>For example: The current temperature is 23°C, and rate of change is 10°C. If it goes up to 33°C or down to 13°C within 5 minutes, you will get a warning.</p>
Unit	Select the unit of temperature.
Humidity	
High Threshold	Set the highest humidity value for a high humidity warning.
Low Threshold	Set the lowest humidity value for a low humidity warning.
Hysteresis	Same as <i>Hysteresis</i> under temperature.
Rate of Change	Same as <i>Hysteresis</i> under temperature.
Contact	Enter the name of each input dry contact relay and use the dropdown menu to define the normal status of each one.

Advanced Power Management

Remote Monitoring

Users can see real-time readings of PDU/ATS vitals such as device load, power consumption, and outlet status for an overview of current PDU/ATS status. See [Summary Tab](#), [PDU/ATS Tab > Status](#), and [PDU/ATS Tab > Status > Outlet](#).

Summary Tab

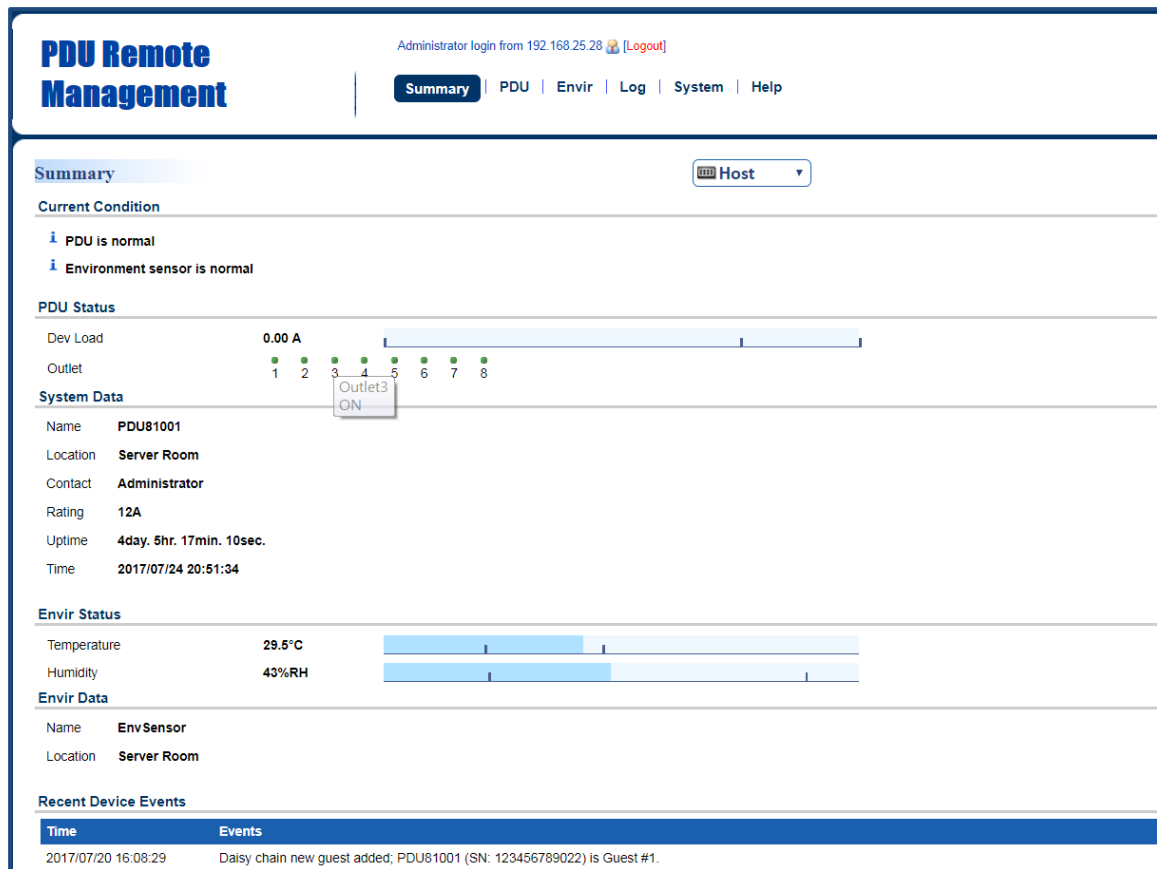

ATS Remote Management
Administrator login from 192.168.210.139 [Logout]

Summary | [ATS](#) | [Log](#) | [System](#) | [Help](#)

Summary

Current Condition

ATS is normal.

ATS Status

selected

Source A

Dev Load

0.00 A

Outlet

System Data

Name	PDU44002
Location	Server Room
Contact	Administrator
Uptime	10hr. 25min. 59sec.
Time	2024-03-05 18:28:22
Rating Current	16A
Rating Voltage	100-120 V

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDU/ATSS are daisy chained. Up to 3 GUEST PDU/ATSS can connect to 1 HOST PDU/ATS.
Current Condition	Operating condition of the PDU/ATS and ENVIROSENSOR.
PDU/ATS Status	
Dev Load	Total load current of all connected devices, measured in Amps.
Outlet	<p>The on/off status of each outlet. The green light icon indicates that the outlet is on and providing power. This light will go off when the outlet turns off.</p> <p>Outlet Tooltip Function: move the cursor to an individual outlet, Outlet name and its ON/OFF status will be shown.</p>
System Data	
Name	The name of the PDU/ATS. For configuration, see System Tab > General > Identification .
Location	The location of the PDU/ATS. For configuration, see System Tab > General > Identification .
Contact	The person accountable for the maintenance of the PDU/ATS. For configuration, see System Tab > General > Identification .
Rating	UL current rating of the PDU/ATS, measured in Amps.
Uptime	The amount of time the system has been working for since it was last restarted.

Item	Definition
Time	System time of the PDU/ATS. For configuration, see System Tab > General > Time .
Envir Status	
Temperature	Display temperature reading when the ENVIROSENSOR is connected to the PDU/ATS.
Humidity	Display humidity reading when the ENVIROSENSOR is connected to the PDU/ATS.
Envir Data	
Name	The name of the ENVIROSENSOR. For configuration, see Envir Tab > Configuration .
Location	The location of the ENVIROSENSOR. For configuration, see Envir Tab > Configuration .
Recent Device Events	A list of the five most recent device events. All events are related to configuration changes.

PDU Tab > Status > Device

PDU Remote Management

Administrator login from 192.168.210.219 [Logout]
[Summary](#) | **[PDU](#)** | [Log](#) | [System](#) | [Help](#)

Status
Device
Outlet
Manager
Outlet Action
Wake on Lan
EnergyWise
PowerPanel® List

Device Status Host

Load

Device Load	0.25 A/ 15 W/ 29 VA	
Power Factor	0.52	
Bank1 Load	0.25 A/ 15 W	
Bank2 Load	0.00 A/ 0 W	
Peak Load	1.56 A	(at 04/11/2024 20:31:07)
Energy	20.9 kWh	(from 11/15/2023 18:40:06)

Utility

Voltage	116.6 V
Frequency	60.0 Hz

ATS Tab > Status > Device

ATS Remote Management

Administrator login from 192.168.210.139 [Logout]
[Summary](#) | **[ATS](#)** | [Log](#) | [System](#) | [Help](#)

Status
Device
Outlet
Manager
Outlet Action
Event Counts
Wake on Lan
PowerPanel® List

Device Status

Source

Selected Source	Source A
Preferred Source	Source A
Source Voltage (A/B)	120.7 / 120.8 V
Source Frequency (A/B)	60.0 / 60.0 Hz
Source Status (A/B)	OK / OK
Phase Synchronization	Yes

Load

Device Load	0.00 A/ 0 W/ 0 VA	
Power Factor	----	
Peak Load	0.25 A	(at 2023-11-23 14:23:14)
Energy	0.0 kWh	(from 2023-08-07 15:35:15)

Device

Power Supply Status	OK
---------------------	----

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATS s can connect to 1 HOST PDU/ATS.
Source Status (For ATS Series Only)	
Selected Source	Source currently supplying power to load.
Preferred Source	Source the ATS will switch over to when both sources are acceptable.
Source Voltage	Input voltage of the source.
Source Frequency	Frequency of the source.
Source Status	Status that indicates if the source is OK.
Phase Synchronization	Status that indicates if source A and B are in phase.
Load	
Device Load	Load current of the connected device(s), measured in Amps. Load power of the connected device(s), measured in Kilowatts and Kilovolt-Amps.
Bank Load*	Load current of the bank, measured in Amps.
Power Factor	Power factor of the connected device(s).
Peak Load	Maximum load current recorded and the time of occurrence. Users can reset the value to zero at Power Restore in PDU/ATS Tab > Manager > Device .
Energy	Total energy consumed by the connected device(s) from the reset date, measured in kWh. Users can reset the value to zero at Power Restore in PDU/ATS Tab > Manager > Device .
Utility	
Voltage	Voltage of the utility power.
Frequency	Frequency of the utility power.

*Only available in select models.

PDU/ATS Tab > Status > Outlet*

PDU Remote Management
Administrator login from 192.168.25.28 [\[Logout\]](#)

[Summary](#) | [PDU](#) | [Envir](#) | [Log](#) | [System](#) | [Help](#)

Status
Device
Outlet
Manager
Outlet Action
Daisy Chain
Wake on Lan
EnergyWise
PowerPanel® List

Outlet Status

Host

#	Name	Status	Load (A)	Load (W)	Peak Load(W)	Energy(kWh)
1	Outlet1	ON	0.90	0	10 (at 2017/06/27 04:07:56)	0.0 (from 2017/06/26 16:30:43)
2	Outlet2	ON	1.68	30	60 (at 2017/06/27 03:23:15)	16.5 (from 2017/06/26 16:30:43)
3	Outlet3	ON	2.84	0	0 (at 2017/06/26 16:30:43)	0.0 (from 2017/06/26 16:30:43)
4	Outlet4	ON	3.17	0	0 (at 2017/06/26 16:30:43)	0.0 (from 2017/06/26 16:30:43)
5	Outlet5	ON	0.83	0	10 (at 2017/06/26 22:48:32)	0.0 (from 2017/06/26 16:30:43)
6	Outlet6	ON	1.96	30	70 (at 2017/06/27 01:31:11)	18.0 (from 2017/06/26 16:30:43)
7	Outlet7	ON	2.94	0	0 (at 2017/06/26 16:30:43)	0.0 (from 2017/06/26 16:30:43)
8	Outlet8	ON	3.22	0	0 (at 2017/06/26 16:30:43)	0.0 (from 2017/06/26 16:30:43)

*The above **Outlet Status Page** is available for Switched Metered by Outlet Series, Metered by Outlet Series and Switched Series only.

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDU/ATS s are daisy chained. Up to 3 GUEST PDU/ATS s can connect to 1 HOST PDU/ATS.
Status	The on/off status of each outlet.
Load (A)	Load current of each outlet, measured in Amps.
Load (kW)	Load power of each outlet, measured in Kilowatts.
Peak Load (kW)	The maximum load current recorded and the time of occurrence. Users can reset the value to zero at Power Restore in PDU/ATS Tab > Manager > Outlet .
Energy (kWh)	Total energy consumed by connected equipment of each outlet since the last reset. The reset can be set in PDU/ATS Tab > Manager > Outlet .

Visible Power Consumption

With comprehensive energy measurement data, users can gain more visibility to the total power usage of a PDU/ATS or the status of source A and B of an ATS, as well as estimate the energy cost and CO2 emissions. The energy-trend report also helps users analyze their power utilization and to review the history of power conditions. See [Log Tab > Status Records](#), [Log Tab > Graphing](#), [Log Tab > Energy Records](#), and [Log Tab > Maintenance](#).

Log Tab > Status Records

PDU Remote Management		Administrator login from 192.168.25.28 [Logout]						
		Summary PDU Envir Log System Help						
Event Logs	Status Records	Status Records Host						
	Energy Records	Time	Device max (A)	Device (A)	Voltage (V)	Temp. (°C)	Hum. (%RH)	Outlet 1 max (W)
	Graphing	2017/07/25 13:34:28	0.00	0.00	107.8	30.0	38	0
	Syslog	2017/07/25 12:34:29	0.00	0.00	107.8	30.0	40	0
	Maintenance	2017/07/25 11:34:29	0.00	0.00	107.8	29.8	38	0
		2017/07/25 10:34:29	0.00	0.00	107.8	29.9	39	0
		2017/07/25 09:34:29	0.00	0.00	107.8	29.6	41	0
		2017/07/25 08:34:29	0.00	0.00	107.8	30.7	40	0
		2017/07/25 07:34:29	0.00	0.00	107.8	30.8	45	0
		2017/07/25 06:34:29	0.00	0.00	107.8	30.6	45	0
		2017/07/21 00:34:37	0.00	0.00	107.8	29.8	44	0
		2017/07/20 23:34:37	0.00	0.00	107.8	29.5	45	0
		2017/07/20 22:34:37	0.00	0.00	107.8	29.0	46	0

ATS Remote Management		Administrator login from 192.168.210.139 [Logout]						
		Summary ATS Log System Help						
Event Logs	Status Records	Status Records						
	Energy Records	Time	SourceA Max(V)	SourceA Min(V)	SourceB Max(V)	SourceB Min(V)	SourceA (Hz)	SourceB (Hz)
	Graphing	2024-03-01 14:07:24	121.5	120.4	121.6	120.5	60.0	60.0
	Syslog	2024-03-01 14:06:24	121.5	120.4	121.5	120.5	60.0	60.0
	Maintenance	2024-03-01 14:05:24	121.4	120.4	121.5	120.5	60.0	60.0
		2024-03-01 14:04:24	121.3	120.4	121.5	120.6	60.0	60.0
		2024-03-01 14:03:24	121.3	120.3	121.4	120.4	60.0	60.0
		2024-03-01 14:02:24	121.5	120.4	121.5	120.4	60.0	60.0
		2024-03-01 14:01:24	121.4	120.4	121.4	120.4	60.0	60.0
		2024-03-01 14:00:24	121.3	120.4	121.4	120.4	60.0	60.0

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDUs/ATS are daisy chained. Up to 3 GUEST PDU/ATSs can connect to 1 HOST PDU/ATS.
Source A/B Max (V)*	The maximum voltage of the Source A/B during a specific time interval, measured in Volts. This interval can be set in Log Tab > Maintenance .
Source A/B Min (V)*	The minimum voltage of the Source A/B during a specific time interval, measured in Volts. This interval can be set in Log Tab > Maintenance .
Source A/B (Hz)*	Frequency of the Source A/B.
Device Max (A)	The maximum load current of the connected device(s) or bank during a specific time interval, measured in Amps. This interval can be set in Log Tab > Maintenance .
Device (A)	Load current of the connected device(s) or bank, measured in Amps.
Dev. (W)	Watt of the connected devices(s) or bank, measured in Watts.
Voltage (V)	Voltage of the utility power.
ENV# Temp. (°C)	Temperature reading when the SNEV001# is connected to the PDU/ATS.
ENV# Hum. (%RH)	Humidity reading when the SNEV001# is connected to the PDU/ATS.
Temp. (°C)	Temperature reading when the ENVIROSENSOR is connected to the PDU/ATS.
Hum. (%RH)	Humidity reading when the ENVIROSENSOR is connected to the PDU/ATS.
Outlet # Max (kW)**	The maximum load power of a specific outlet during a specific time interval, measured in Kilowatts. This interval can be set in Log Tab > Maintenance .
Outlet # (kW)**	Load power of a specific outlet, measured in Kilowatts.

*For ATS Series only

**For Switched Metered by Outlet Series and Metered by Outlet Series only.

Log Tab > Graphing

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | **Log** | System | Help

Data Log Graphing Host

Graph Period

☒ Last 1 day

☐ From 2017/07/24 14:04 to 2017/07/25 14:04

Graph Data

Device Current
Device Current Max
Voltage
Temperature
Humidity
Outlet_1 Power
Outlet_2 Power

Add Remove

Graph Node

☐ Display All Nodes in Detail

Draw Reset Launch Graph in New Window

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATSs can connect to 1 HOST PDU/ATS.
Graph Period	The time period is used to create a retroactive graph of the status records. A large time period will require more time to render the graph.
Graph Data	The data used to create a graph of the status records. Up to five data points can be selected. A large number of data selected will require more time to render the graph.
Graph Node	Select the Display All Nodes in Detail option to display the selected data points along the graph. When the cursor is moved to an individual data point, information about that point will be shown. If this option is not selected, the graph will show only the line (without the points), so less time is needed to render.
Draw	A graph of the status records will be created.
Reset	Reset the <i>Graph Period</i> to default (1 day).
Launch Graph in New Window	A detailed view of the graph opens in a new browser window.

Log Tab > Energy Records

PDU Remote Management		Administrator login from 192.168.25.28 Logout					
		Summary PDU Envir Log System Help					
Energy Records		Host					
Time		Interval Energy(kWh)	Interval Cost(units)	Interval CO2(kg)	Energy (kWh)	Cost (units)	CO2 (kg)
2017/07/25 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/07/24 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/07/23 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/07/22 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/07/21 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/07/20 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/07/19 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/07/18 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/07/01 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000
2017/06/30 00:00:00		0.0	0.00	0.000	0.0	0.00	0.000

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDU/ATS s are daisy chained. Up to 3 GUEST PDU/ATS s can connect to 1 HOST PDU/ATS.
Interval Energy (kWh)	Energy consumed by connected device(s) during a specific time interval, measured in kWh. This interval can be set in Log Tab > Maintenance .
Interval Cost (units)	Cost of the energy consumed by the connected device(s) during a specific time interval, equal to <i>Electricity Rate</i> multiplied by <i>Interval Energy</i> . The interval and electricity rate can be set in Log Tab > Maintenance .
Interval CO2 (kg)	Equivalent CO2 emission of the connected device(s) during a specific time interval, equal to <i>CO2 Emissions</i> multiplied by <i>Interval Energy</i> . The interval and CO2 emissions can be set in Log Tab > Maintenance .
Energy (kWh)	Accumulated <i>Interval Energy</i> since the last reset. The reset can be set in Log Tab > Maintenance .
Cost (units)	Accumulated <i>Interval Cost</i> since the last reset. The reset can be set in Log Tab > Maintenance .
CO2 (kg)	Accumulated <i>Interval CO2</i> since the last reset. The reset can be set in Log Tab > Maintenance .
Outlet # (kWh)*	Accumulated <i>Interval Energy</i> of a specific outlet since the last reset. The reset can be set in Log Tab > Maintenance .

*For Switched Metered by Outlet Series and Metered by Outlet Series only.

Log Tab > Maintenance

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | **Log** | System | Help

Event Logs
Status Records
Energy Records
Graphing
Syslog
Maintenance

Maintenance

Event Logs

Clear All Logs
☒ No
☐ Yes, right now.

The Number of Events
111 / 1024

Save Event Logs

Status Records

Recording Interval
1 hour ▼

Clear All Records
☒ No
☐ Yes, right now.

Remaining Time
56day 11hour / 85day 8hour

Save Status Records
Host ▼

Energy Records

Recording Interval
one day ▼

Clear All Records
☒ No
☐ Yes, right now.

Electricity Rate
3.00 units / kWh [0.00-600]

CO2 Emissions
0.60 kg / kWh [0.00-600]

Save Energy Records
Host ▼

Item	Definition
Event Logs	
Clear All Logs	Clear the existing event logs.
The Number of Events	The number of the existing event logs and the maximum number of the event logs that can be recorded. Once the maximum number is reached, new events overwrite oldest events in memory.
Save Event Logs	Save the existing event logs as a text file.
Status Records	
Recording Interval	The frequency to record the status data. A smaller interval will provide more recordings, but the recordings are overwritten in a shorter period of time. A larger interval will provide fewer recordings, but the recordings are overwritten in a longer period of time.
Clear All Records	Clear the existing status records.

Item	Definition
Remaining Time	The time that records have been kept. A smaller recording interval leads to less remaining time while a larger recording interval leads to more remaining time. Once the maximum number is reached, new status records overwrite oldest status records in memory.
Save Status Records	Save the status records as a text file.
Energy Records	
Recording Interval	The frequency to record the energy data.
Clear All Records	Clear the existing energy records.
Electricity Rate	The cost (units) of energy per unit of energy consumed (kWh). Unit is a monetary value.
CO2 Emissions	The equivalent CO2 emission (kg) per unit of energy consumed (kWh).
Save Energy Records	Save the existing energy records as a text file.

Event Logging

Users can view all the events, including log in/out records and configuration changes. The timestamp is recorded in a 24-hour format. See [Log Tab > Syslog](#) and [Log Tab > Event Logs](#). For event logs, Users can clear the existing event logs in [Log Tab > Maintenance](#)

Log Tab > Syslog

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | **Log** | System | Help

Event Logs

Status Records

Energy Records

Graphing

Syslog

Maintenance

Syslog

Syslog☐ Enabled

Facility Code

User

Apply

Reset

IP Address

Port

Send test

Add Server

Item	Definition
Syslog	Check this box to enable Syslog function.
Facility Code	Classify syslog message

Click Add Server to enter [Syslog Server Page](#).

Syslog Server Page

PDU Remote Management
Administrator login from 192.168.25.28 [\[Logout\]](#)

[Summary](#) | [PDU](#) | [Envir](#) | **[Log](#)** | [System](#) | [Help](#)

Event Logs
Status Records
Energy Records
Graphing
Syslog
Maintenance

Syslog Server

Server IP
Server Port

Item	Definition
Server IP	The IP address of Syslog server.
Server Port	The port number that Syslog server uses to communicate.

Logs Tab > Event Logs

PDU Remote Management
Administrator login from 192.168.25.28 [\[Logout\]](#)

[Summary](#) | [PDU](#) | [Envir](#) | **[Log](#)** | [System](#) | [Help](#)

Event Logs
Status Records
Energy Records
Graphing
Syslog
Maintenance

Event Logs

Time	Events
2017/07/25 16:12:48	Admin user login from 192.168.25.28.
2017/07/25 14:49:49	Admin user logout from 192.168.25.28.
2017/07/25 14:37:51	Admin user login from 192.168.25.28.
2017/07/25 14:31:57	Admin user logout from 192.168.25.28.
2017/07/25 14:21:53	Admin user login from 192.168.25.28.
2017/07/25 14:14:13	Admin user logout from 192.168.25.28.
2017/07/25 13:53:25	Admin user login from 192.168.25.28.
2017/07/25 13:53:14	Login authorization failure via HTTP from 192.168.25.28.
2017/07/25 13:30:36	Admin user logout from 192.168.25.28.
2017/07/25 13:20:33	Admin user login from 192.168.25.28.
2017/07/25 11:12:15	Admin user logout from 192.168.25.28.
2017/07/25 10:59:48	Admin user login from 192.168.25.28.
2017/07/24 22:03:10	Admin user logout from 192.168.25.28.
2017/07/24 21:44:02	Admin user login from 192.168.25.28.
2017/07/24 21:29:47	Admin user logout from 192.168.25.28.

Power Protection

The configurable load threshold can be set to prevent an overload condition. ColdStart and system configurations are also offered for different user needs. See [PDU/ATS Tab > Device Manager](#).

PDU/ATS Tab > Manager > Device

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | **PDU** | Envir | Log | System | Help

Device Manager Host

Load Configuration

Overload Threshold A

Near Overload Threshold A

Low Load Threshold A

Outlet Restriction None

Power Restore

Peak Load ☐ Reset (last reset at 2017/06/26 16:30:43)

Energy ☐ Reset (from 2017/06/26 16:30:43)

ColdStart Configuration

ColdStart State ☐ Previous State ☒ All On

ColdStart Delay ☒ Instant ☐ Wait Sec(s) ☐ Never

System Configuration

Idle Time 10 Minutes

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATS s can connect to 1 HOST PDU/ATS.
Load Configuration	
Overload Threshold	Set the value for the total current on the PDU/ATS that will signal an overload warning. Must be higher than <i>Near Overload Threshold</i> and equal to or lower than the PDU/ATS <i>Rating</i> in the Summary Tab .

Item	Definition
Near Overload Threshold	Set the value for the total current on the PDU/ATS that will signal a near overload warning. Must be between <i>Overload Threshold</i> and <i>Low Load Threshold</i> .
Low Load Threshold	Set the value for the total current on the PDU/ATS that will signal a low load warning. Must be lower than <i>Near Overload Threshold</i> .
Outlet Restriction***	<p>When load current exceeds the corresponding threshold, no outlets will be allowed to turn on.</p> <p>*None: Users can turn on an outlet even if the device is in Near Overload or Overload state.</p> <p>*On Near Overload: Users cannot turn on an outlet when the device is in Near Overload or Overload state.</p> <p>*On Overload: Users cannot turn on an outlet when the device is in Overload state.</p>
Power Restore	
Peak Load	Reset the peak load to zero.
Energy	Reset the energy to zero.
ColdStart Configuration	
ColdStart State	<p>*Previous State: Outlets will return to the same state (on or off) they were in prior to the PDU/ATS turning off. The <i>ColdStart Delay</i> setting will apply when the PDU/ATS resumes power.</p> <p>*All On: All outlets will turn on when power is restored to the PDU/ATS.</p>
ColdStart Delay	<p>*Instant: Outlets will be turned on immediately when power is restored to the PDU/ATS.</p> <p>*Wait: Outlets will be turned on according to each outlet(s) Power On Delay after ColdStart Delay Wait when power is restored to the PDU/ATS.</p> <p>*Never: Outlets will never turned on when power is restored to the PDU/ATS.</p>
System Configuration	
Idle Time	The PDU/ATS LCD screen will turn off automatically after it remains idle for the selected period of time.

***For some models, the Outlet Restriction only shows in the [Bank Manager Page](#).

Source Configuration

Users can select the preferred source as the primary input. When the primary input fails, the ATS will switch to the secondary one to ensure continuous operation. Frequency Parameters and Voltage Parameters configurations are also offered for user needs. See [ATS Tab > Source Manager](#). (For ATS Series only.)

ATS Tab > Manager > Source

The screenshot displays the 'Source Manager' configuration page within the 'ATS Remote Management' web interface. The page is titled 'Source Manager' and includes a 'Source Setting' section with radio buttons for 'Preferred Source' (Source A, Source B, or None). Below this is the 'Frequency Parameters Configuration' section, showing 'Nominal Frequency' as 60 Hz and 'Frequency Deviation' as ±1 Hz. The 'Voltage Parameters Configuration' section includes 'Sensitivity' set to High, 'Nominal Voltage' set to 110 V, and 'Voltage Transfer Range' with three options: Wide ±20 V [6-20] (selected), Medium ±12 V [6-20], and Narrow ±8 V [6-20]. 'Apply' and 'Reset' buttons are at the bottom.

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATS s can connect to 1 HOST PDU/ATS.
Source	
Preferred Source	Source the ATS will switch over to when both sources are acceptable.
Frequency	
Frequency Deviation	The range of acceptable frequency fluctuation.
Voltage	

Item	Definition
Sensitivity	<p>*High sensitivity means the ATS will switch over to the alternate source in response to small voltage changes.</p> <p>*Medium sensitivity means the ATS will switch over to the alternate source in response to medium voltage changes.</p> <p>*Low sensitivity means the ATS will switch over to the alternate source in response to Large voltage changes.</p>
Nominal Voltage	Nominal source voltage setting for the device.
Voltage Transfer Range	<p>The acceptable voltage range of source. When the source voltage is out of the voltage transfer range, the ATS will switch over to the alternate source.</p> <p>Options include Wide, Medium, and Narrow. The Wide value must be greater than the Medium value, and The Medium value must be greater than the Narrow value.</p>

Event Action Notification

Users decide the event actions for which they receive notifications. When a certain event happens, an automatic notification will be sent to users so that they can make timely decisions to prevent potential problems. See [System Tab > Notification](#).

System Tab > Notification > Event Action

PDU Remote Management Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

CyberPower

General
Security
Network Service
Notification
 Event Action
 SMTP Server
 E-mail Recipients
 Trap Receivers
 SMS Service
 SMS Recipients
Reset/Reboot
About

Event Action

Device Events

- PDU Status**
- Power Status
- Configuration
- Communication

System Events

- Security
- System Information
- PowerPanel

Event	Log	E-mail	Trap	Syslog	SMS
Device current draw has crossed the low load threshold	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
The low load condition on a PDU has been cleared	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Device current draw has cross the near overload threshold	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
The near overload condition on a PDU has been cleared	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Device current draw has crossed the overload condition	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
The overload condition on a PDU has been cleared	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Click the Event field to enter the [Event Action Page](#).

Event Action Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General
Security
Network Service
Notification
 Event Action
 SMTP Server
 E-mail Recipients
 Trap Receivers
 SMS Service
 SMS Recipients
Reset/Reboot
About

Event Action

Event Name: **Device current draw has crossed the low load threshold**

Logs Event: ☒ Enabled

Send E-mail: ☒ Enabled

Post Trap: ☒ Enabled

Syslog: ☒ Enabled

Send SMS: ☐ Enabled

Apply **Reset**

The **Event Action Page** enables users to modify the notification method.

Item	Definition
Logs Event	Record the device event in the <i>Event Logs</i> .
Send E-mail	Send an email to a specific user. An available SMTP server is necessary.
Post Trap	Send a SNMP trap to a specific IP address.
Syslog	Record the device event in Syslog server.
Send SMS	Send a short message to a specific mobile phone number. An available Short Message Service (SMS) provider is needed.

Event Action Recipient Settings

1. E-mail Notification

Set the proper SMTP server settings so that users can receive an email when a specific event occurs. See [System Tab > Notification > SMTP Server](#).

System Tab > Notification > SMTP Server

PDU Remote Management

Administrator login from 192.168.210.139 [Logout] [Flag]

Summary | PDU | Envir | Log | **System** | Help

SMTP Server

SMTP server address: 0.0.0.0

Sender E-mail address:

Sender name:

Authentication: ☐ Required

Account: [1-63 characters]

Password: [1-63 characters]

Secure connection: ☒ None ☐ TLS ☐ SSL

Service port: 25 [default: 25]

Apply Reset

Item	Definition
SMTP server address	The IP or host Name of SMTP server used to notify users by e-mail.
Sender E-mail Address	The From field shown in the e-mail message.
Sender Name	The name of the sender.
Authentication	Select this option if the SMTP server requires Authentication.
User Name	Account used for Authentication.
Password	Password used for Authentication.
Secure connection	Enable/Disable TLS or SSL to encrypt the SMTP connection.
Service Port	The port number that the PDU uses to communicate with SMTP server.

Users can set up to five e-mail recipients in designated email address format.
See [System > Notification > E-mail Recipients](#).

System > Notification > E-mail Recipients

Item	Definition
E-mail	Click the e-mail address of the recipient to enter the Configure E-mail Recipient Page . Users can modify the e-mail address, change its status, check test result, and delete an existing recipient.
TEST	Click this button to check if the SMTP setting and the email recipients are set correctly.
New Recipient	Click this button to enter the Add New E-mail Recipient Page . Users can add a new recipient.

Configure E-mail Recipient Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General
Security
Network Service
Notification
Event Action
SMTP Server
E-mail Recipients
Trap Receivers
SMS Service
SMS Recipients
Reset/Reboot
About

Configure E-mail Recipient

Activate ☒ Enabled

E-mail

Add New E-mail Recipient Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General
Security
Network Service
Notification
Event Action
SMTP Server
E-mail Recipients
Trap Receivers
SMS Service
SMS Recipients
Reset/Reboot
About

Add New E-mail Recipient

Activate ☒ Enabled

E-mail

2. SNMP Trap Notification

Set up to 10 SNMP trap receivers to be notified when an event occurs. See [System > Notification > Trap Receivers](#).

System > Notification > Trap Receivers

The screenshot shows the 'Trap Receivers' page in the PDU Remote Management web interface. The header includes the logo, login information, and navigation tabs. The left sidebar has a menu with categories like General, Security, Network Service, Notification, and Reset/Reboot. The main content area is titled 'Trap Receivers' and contains a table with one row of configuration data and a 'New Receiver' button.

Name	Status	Type	IP Address	Community/ User Name	Send test
Trap Name	Enabled	SNMPv1	0.0.0.0	public	TEST

Buttons: New Receiver, TEST

Item	Definition
Name	Click on the trap name to enter the Configure Trap Receiver Page . Users can modify or delete an existing receiver.
TEST	Click this button to check if the trap can be sent.
New Receiver	Click this button to enter the Add New Trap Receiver Page . Users can add a new recipient.

Configure Trap Receiver Page

PDU Remote Management
Administrator login from 192.168.25.28 [\[Logout\]](#)

[Summary](#) | [PDU](#) | [Envir](#) | [Log](#) | **[System](#)** | [Help](#)

General
Security
Network Service
Notification
Event Action
SMTP Server
E-mail Recipients
Trap Receivers
SMS Service
SMS Recipients
Reset/Reboot
About

Configure Trap Receiver

Active ☒ Enabled

Name

IP Address

☒ SNMPv1

Community

☐ SNMPv3

User Name

Add New Trap Receiver Page

PDU Remote Management
Administrator login from 192.168.25.28 [\[Logout\]](#)

[Summary](#) | [PDU](#) | [Envir](#) | [Log](#) | **[System](#)** | [Help](#)

General
Security
Network Service
Notification
Event Action
SMTP Server
E-mail Recipients
Trap Receivers
SMS Service
SMS Recipients
Reset/Reboot
About

Add New Trap Receiver

Active ☒ Enabled

Name

IP Address

☒ SNMPv1

Community

☐ SNMPv3

User Name

Item	Definition
Name	The name of trap receiver.
IP Address	The IP address of the trap receiver.
SNMPv1	If choosing the SNMPv1 option as the trap type for a trap receiver, select the corresponding community. See System Tab > Network Service > SNMPv1 Service .
SNMPv3	If choosing the SNMPv3 option as the trap type for a trap receiver, select the corresponding user name. See System Tab > Network Service > SNMPv3 Service .

3. SMS Notification

Short Message Service (SMS) is used by mobile communication systems to send a short message to a specific mobile phone number. Standardized communication protocols allow the exchange of short text messages between mobile devices.

The system provides four methods for users to choose how they want to send a message. See [System > Notification > SMS Service](#).

System > Notification > SMS Service

Clickatell method:

Clickatell is one of the supported SMS service providers. Go to the Clickatell website to sign up and get an API ID.

Item	Definition
User name	The account username created on Clickatell website.
User password	The user password created on Clickatell website.
HTTP API ID	The API ID acquired on Clickatell website.

System > Notification > SMS Service

Using HTTP GET:

Use the example where Clickatell is the SMS provider.

The basic form of URL using the HTTP GET method is:

`http://api.clickatell.com/http/sendmsg?user=tedmosby&password=himym&api_id=2014331&to=E_PHONE_NUMBER&text=E_PHONE_MESSAGE`

Query String in the URL	Definition
user=tedmosby	Replace “tedmosby” with the user name created at the Clickatell website.
password=himym	Replace “himym” with the password created at the Clickatell website.
api_id=2014331	Replace “2014331” with the API ID acquired at the Clickatell website.
to=E_PHONE_NUMBER	Do not replace this information. It refers to the receiver phone number entered in System Tab > Notification > SMS Recipients .
text=E _MESSAGE	Do not replace this information. It refers to the event action sent by the SMS service provider. For configurations, see System Tab > Notification > Event Action .

System > Notification > SMS Service

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

SMS Service

Service Provider: **Using HTTP P ▼**

URL: `http://api.clickatell.com/http/sendmsg`

Content: `user=tedmosby&password=himym&api_id=2014331&to=E_PHONE_NUMBER&text=E_MESSAGE`

Apply Reset

Using HTTP POST:

Use the example where Clickatell is the SMS provider.

The basic form of URL is: `http://api.clickatell.com/http/sendmsg`

The basic form of body is:

`user=tedmosby&password=himym&api_id=2014331&to=E_PHONE_NUMBER&text=E_MESSAGE`

Query String in Body	Definition
<code>user=tedmosby</code>	Replace “tedmosby” with the user name created at the Clickatell website.
<code>password=himym</code>	Replace “himym” with the password created at the Clickatell website.
<code>api_id=2014331</code>	Replace “2014331” with the API ID acquired at the Clickatell website.
<code>to=E_PHONE_NUMBER</code>	Do not replace this information. It refers to the receiver phone number entered in System Tab > Notification > SMS Recipients .
<code>text=E_MESSAGE</code>	Do not replace this information. It refers to the event action sent by SMS service provider. For configurations, see System Tab > Notification > Event Action .

System > Notification > SMS Service

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

SMS Service

Service Provider: Using E-mail ▼

Address:

Subject:

Content:

Using Mail:

Users set the SMTP server in [System Tab > Notification > SMTP Server](#) first, and then enter the following information.

Item	Definition
Address	Enter the e-mail of the recipient.
Subject	The Subject field shown in the e-mail message, entered by user.
Content	
E_ MESSAGE	Do not replace this information. It refers to the event action sent by SMS service provider. For configurations, see System Tab > Notification > Event Action .
E_PHONE_NUMBER	Do not replace this information. It refers to the receiver phone number entered in System Tab > Notification > SMS Recipients .

Users can set up to 10 mobile phone numbers as SMS recipients who will receive a short message notification when a specific event occurs. See [System Tab > Notification > SMS Recipients](#).

System Tab > Notification > SMS Recipients

The screenshot shows the 'PDU Remote Management' web interface. The top navigation bar includes 'Summary', 'PDU', 'Envir', 'Log', 'System' (selected), and 'Help'. The left sidebar lists various settings: General, Security, Network Service, Notification (selected), Event Action, SMTP Server, E-mail Recipients, Trap Receivers, SMS Service, and SMS Recipients (highlighted). The main content area is titled 'SMS Recipients' and contains a table with the following data:

Status	Recipient Name	Mobile Number	Send test
Enabled	Ted	0910000111	TEST

Below the table is a 'New Recipient' button.

Item	Definition
Recipient Name	Click the name of the recipient to open the Configure SMS Receiver Page . Users can modify or delete an existing receiver.
TEST	Click this button to check whether the test message is correctly sent.
New Recipient	Click this button to open the Add New SMS Receiver Page . Users can add a new recipient.

Configure SMS Receiver Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General
Security
Network Service
Notification
Event Action
SMTP Server
E-mail Recipients
Trap Receivers
SMS Service
SMS Recipients
Reset/Reboot
About

Configure SMS Recipient

Active☒ Enabled

Recipient Name

Mobile Number

Apply

Reset

Delete

Add New SMS Receiver Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General
Security
Network Service
Notification
Event Action
SMTP Server
E-mail Recipients
Trap Receivers
SMS Service
SMS Recipients
Reset/Reboot
About

Add New SMS Recipient

Active☒ Enabled

Recipient Name

Mobile Number

Apply

Reset

Intelligent PDU/ATS User Guide

40

Outlet Management

The following provides the outlet configurations to meet different application scenarios.

Remote Outlet On/Off/Reboot

Users can turn on, turn off, or reboot individual outlet. See [PDU/ATS Tab > Outlet Action > Control](#). (For Switched Metered by Outlet Series and Switched Series only.)

PDU/ATS Tab > Outlet Action > Control

The screenshot shows the 'PDU Remote Management' web interface. The top navigation bar includes 'Summary', 'PDU' (selected), 'Envir', 'Log', 'System', and 'Help'. The left sidebar has 'Status Manager', 'Outlet Action' (selected), 'Control' (selected), 'Schedule', 'Daisy Chain', 'Wake on Lan', 'EnergyWise', and 'PowerPanel® List'. The main content area is titled 'Control' and features a 'Host' dropdown menu. Below this, there are controls for 'Control Action' (set to 'Turn On'), 'Delay' (checkbox 'Yes'), and 'Outlet Selection' (checkbox 'All'). A table lists 8 outlets, all with status 'ON'. At the bottom are 'Next »' and 'Reset' buttons.

Status	#	Name
<input type="checkbox"/> ON	1	Outlet1
<input type="checkbox"/> ON	2	Outlet2
<input type="checkbox"/> ON	3	Outlet3
<input type="checkbox"/> ON	4	Outlet4
<input type="checkbox"/> ON	5	Outlet5
<input type="checkbox"/> ON	6	Outlet6
<input type="checkbox"/> ON	7	Outlet7
<input type="checkbox"/> ON	8	Outlet8

Item	Definition
HOST/GUEST#	Select the role of PDU/ATS (HOST or GUEST#) if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATSs can connect to 1 HOST PDU/ATS.
Control Action	
Turn On	Selected outlets will be immediately turned on.
Turn On + Delay	Selected outlets will be turned on according to each outlet's <i>Power On Delay</i> in PDU/ATS Tab > Manager > Outlet .
Turn Off	Selected outlets will be immediately turned off.

Item	Definition
Turn Off + Delay	<p>Selected outlets will be turned off according to each outlet's <i>Power Off Delay</i> in PDU/ATS Tab > Manager > Outlet.</p> <p>This action could signal a computer to shut down, if PowerPanel® Business Remote software is installed on it.</p>
Reboot	<p>Selected outlets will be immediately turned off and then be turned on again according to each outlet's <i>Reboot Duration</i> in PDU/ATS Tab > Manager > Outlet.</p>
Reboot + Delay	<p>Selected outlets will be turned off according to each outlet's <i>Power Off Delay</i>. They will be synchronized with the longest <i>Power Off Delay</i> and the longest <i>Reboot Duration</i> of the selected outlets. Then they will be turned on according to each outlet's <i>Power On Delay</i> in PDU/ATS Tab > Manager > Outlet.</p>
Cancel Pending Command	<p>Any pending commands of the selected outlet(s) will be cancelled. Any outlet in a pending command state will be notated with an asterisk (*).</p>
Outlet Selection	<p>Outlets selected for action.</p>

Scheduled Outlet On/Off/Reboot

Outlet(s) can be set to automatically turn on, turn off, or reboot at scheduled times. See [PDU/ATS Tab > Outlet Action > Schedule](#). (For Switched Metered by Outlet Series and Switched Series only.)

PDU/ATS Tab > Outlet Action > Schedule

The screenshot shows the 'PDU Remote Management' web interface. At the top, there's a header with the title and a user login status: 'Administrator login from 192.168.25.28 [Logout]'. Below the header is a navigation bar with links: Summary, PDU (active), Envir, Log, System, and Help. On the left is a sidebar with various management options: Status Manager, Outlet Action, Control, Schedule (highlighted), Daisy Chain, Wake on Lan, EnergyWise, and PowerPanel® List. The main content area is titled 'Schedule' and includes a dropdown menu set to 'Host'. Below this is a table labeled 'Scheduled Action' with columns: Status, Name, Action, Action Time, Frequency, and Outlet. Underneath the table is a section titled 'Add New Action Schedule' which contains a 'Frequency' label and three radio button options: 'Once' (selected), 'Daily', and 'Weekly'. At the bottom of this section is a 'Next »' button.

Select the role of PDU/ATS (HOST or GUEST#) first if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATS s can connect to 1 HOST PDU/ATS. Select the **Once**, **Daily** or **Weekly** option, and then click the **Next** button to enter the [Add New Action Schedule Page](#).

Item	Definition
Frequency	
Once	Scheduled action takes place once at the configured date and time.
Daily	Scheduled action takes place daily at the configured time.
Weekly	Scheduled action takes place once a week for the configured day and time.

Add New Action Schedule Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | **PDU** | Envir | Log | System | Help

Status Manager
Outlet Action
Control
Schedule
Daisy Chain
Wake on Lan
EnergyWise
PowerPanel® List

Add New Action Schedule - Once

Host

Enable ☒

Name

Control Action

Turn On

Delay ☐ Yes

Action Time

7

 /

26

 at

11

 :

17

Outlet Selection ☐ All

#	Name
<input type="checkbox"/> 1	Outlet1
<input type="checkbox"/> 2	Outlet2
<input type="checkbox"/> 3	Outlet3
<input type="checkbox"/> 4	Outlet4
<input type="checkbox"/> 5	Outlet5
<input type="checkbox"/> 6	Outlet6
<input type="checkbox"/> 7	Outlet7
<input type="checkbox"/> 8	Outlet8

Apply

Reset

Up to 10 scheduled settings are allowed.

Item	Definition
Enable	Check this box to activate the scheduled action function.
Name	The name entered by the user to identify the specific scheduled event.
Control Action	The action will be performed when the scheduled event takes place. For reboot action, selected outlets will be immediately turned off and then be turned on again according to outlet's <i>Reboot Duration</i> in PDU/ATS Tab > Manager > Outlet . The duration is within 5 to 60 seconds.
Delay	Click this box to activate outlet delay function. For configurations, see PDU/ATS Tab > Manager > Outlet
Action Time	The time at which the scheduled event takes place.
Outlet Selection	Outlets selected for the scheduled event.

Sequencing Power On/Off/ Load Configuration

Enable users to turn on, turn off, or reboot the outlets in sequence. When powering on the connected devices, the sequential power-on method is recommended to avoid high inrush current. (For Switched Metered by Outlet Series and Switched Series only.)

The configurable load threshold can be set to prevent an overload condition. Users can set the value for amount of current placed on the selected outlet(s) that will signal an Overload threshold, Near Overload threshold, and Low Overload threshold warning. (For Switched Metered by Outlet Series and Metered by Outlet Series only.)

See [PDU/ATS Tab > Manager > Outlet](#).

PDU/ATS Tab > Manager > Outlet

The screenshot displays the 'PDU Remote Management' web interface. At the top, it shows the administrator login from 192.168.25.28 with a [Logout] link. The navigation bar includes 'Summary', 'PDU', 'Envir', 'Log', 'System', and 'Help'. The left sidebar contains 'Status Manager', 'Device', 'Outlet', 'Outlet Action', 'Daisy Chain', 'Wake on Lan', 'EnergyWise', and 'PowerPanel® List'. The main content area is titled 'Outlet Manager' and features a dropdown menu set to 'Host'. Below this is an 'Outlet Selection' section with a radio button for 'All'. A table lists 8 outlets with columns for #, Outlet Name, On Delay, Off Delay, Reboot Duration, Overload Threshold, Near Overload Threshold, and Low Load Threshold. All outlets have a 3-second On Delay, 3-second Off Delay, 5-second Reboot Duration, 1440 (W) Overload Threshold, 1080 (W) Near Overload Threshold, and 0 (W) Low Load Threshold. A 'Next »' button is located at the bottom left of the table.

#	Outlet Name	On Delay	Off Delay	Reboot Duration	Overload Threshold	Near Overload Threshold	Low Load Threshold
1	Outlet1	3 sec.	3 sec.	5 sec.	1440 (W)	1080 (W)	0 (W)
2	Outlet2	3 sec.	3 sec.	5 sec.	1440 (W)	1080 (W)	0 (W)
3	Outlet3	3 sec.	3 sec.	5 sec.	1440 (W)	1080 (W)	0 (W)
4	Outlet4	3 sec.	3 sec.	5 sec.	1440 (W)	1080 (W)	0 (W)
5	Outlet5	3 sec.	3 sec.	5 sec.	1440 (W)	1080 (W)	0 (W)
6	Outlet6	3 sec.	3 sec.	5 sec.	1440 (W)	1080 (W)	0 (W)
7	Outlet7	3 sec.	3 sec.	5 sec.	1440 (W)	1080 (W)	0 (W)
8	Outlet8	3 sec.	3 sec.	5 sec.	1440 (W)	1080 (W)	0 (W)

Select the role of PDU/ATS (HOST or GUEST#) first if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATSs can connect to 1 HOST PDU/ATS. Click the box to select one outlet or multiple outlets for power sequencing and then click **Next** to open the [Outlet Configuration Page](#) for configuration.

Outlet Configuration Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout](#)

[Summary](#) | [PDU](#) | [Envir](#) | [Log](#) | [System](#) | [Help](#)

Status Manager

Device

Outlet

Outlet Action

Daisy Chain

Wake on Lan

EnergyWise

PowerPanel® List

Configuration

Host ▼

Name

Action Configuration

Power On Delay

☐ Instant
☐ Delay Sec(s) [1-7200]
☐ Never

Power Off Delay

☐ Instant
☐ Delay Sec(s) [1-7200]
☐ Never

Reboot Duration

Sec(s) [5-60]

Load Configuration

Overload Threshold

W

Near Overload Threshold

W

Low Load Threshold

W

Power Restore

Peak Load

☐ Reset

Energy

☐ Reset

Item	Definition
Name	The name entered by the user to identify the selected outlet or multiple outlet configuration.
Action Configuration*	
Power On/Off Delay	<p>*Instant: Turn on/off the outlet immediately.</p> <p>*Delay: Delay time before turning on/off the outlet. Valid values are within the range of 1 to 7,200 seconds.</p> <p>*Never: Never turn on/off the outlet.</p>
Reboot Duration	The length of time the outlet will remain off during a Reboot action. Valid values are within the range of 5 to 60 seconds.
Load Configuration**	
Overload Threshold	Set the value for individual outlet that will signal an overload warning in Watts. Must be higher than <i>Near Overload Threshold</i> .
Near Overload Threshold	Set the value for individual outlet that will signal a near overload warning in Watts. Must be between <i>Overload Threshold</i> and <i>Low Load Threshold</i> .

Item	Definition
Low Overload Threshold	Set the value for individual outlet that will signal a low overload warning in Watts. Must be lower than <i>Near Overload Threshold</i> .
Power Restore	
Peak Load	Restore the peak load of each outlet to zero.
Energy	Restore the energy of each outlet to zero.


* For Switched Metered by Outlet Series and Switch Series only.

** For Switched Metered by Outlet and Metered by Outlet Series only.

AutoPing

The AutoPing feature allows the PDU/ATS to detect if a target device becomes unresponsive to IP pings and automatically reboot the device. If the device gets back to normal operation after reboot, network connection could be restored at the same time.

To utilize the function, See **PDU/ATS Tab > Outlet Action > AutoPing**. (For Switched Metered by Outlet Series and Switched Series only.)

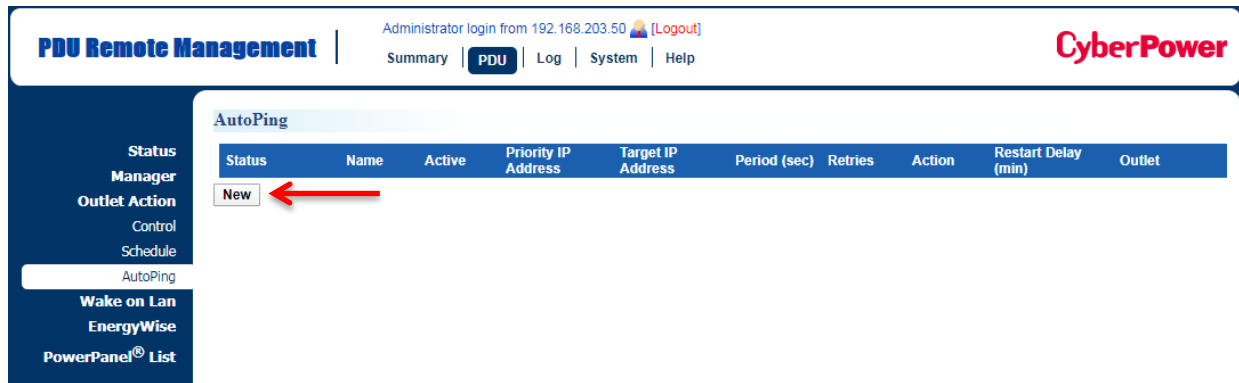

AutoPing configuration is shown as below. For example, the AutoPing function is enabled on Outlet 1 with 192.168.203.64 as “Target IP address”. The PDU/ATS sends IP pings to the target device every 30 seconds. Outlet1 reboots once only if ping tests fail 3 times in a row, which takes 90 seconds for the PDU/ATS to detect the failure and trigger the action. After Outlet1 reboots, no pings are sent to the target device until 1 minute of “Restart Delay” is reached.

The screenshot shows the 'Add New AutoPing Action' configuration page. The top navigation bar includes 'Summary', 'PDU', 'Log', 'System', and 'Help'. The left sidebar contains 'Status Manager', 'Outlet Action', 'Control', 'Schedule', 'AutoPing', 'Wake on Lan', 'EnergyWise', and 'PowerPanel® List'. The main content area is titled 'Add New AutoPing Action' and contains the following fields:

- Name: AutoPing Name
- Active: Enabled
- Priority IP Address: No
- Target IP Address: 192.168.203.64
- Period: 30 sec(s) [30-999]
- Retries: 3 [2-200]
- Action: Reboot 1 times [1-50]
- Restart Delay: 1 min(s) [0-10]
- Outlet Selection: All Bank 1 Bank 2

Below the fields are two tables for selecting outlets:

Bank 1			Bank 2		
#	Name		#	Name	
<input checked="" type="checkbox"/>	1	Outlet1	<input type="checkbox"/>	9	Outlet9
<input type="checkbox"/>	2	Outlet2	<input type="checkbox"/>	10	Outlet10
<input type="checkbox"/>	3	Outlet3	<input type="checkbox"/>	11	Outlet11
<input type="checkbox"/>	4	Outlet4	<input type="checkbox"/>	12	Outlet12
<input type="checkbox"/>	5	Outlet5	<input type="checkbox"/>	13	Outlet13
<input type="checkbox"/>	6	Outlet6	<input type="checkbox"/>	14	Outlet14
<input type="checkbox"/>	7	Outlet7	<input type="checkbox"/>	15	Outlet15
<input type="checkbox"/>	8	Outlet8	<input type="checkbox"/>	16	Outlet16

At the bottom are 'Apply' and 'Reset' buttons.

Up to 10 AutoPing settings are allowed.

Item	Definition
Active	Enable/Disable the AutoPing function.
Priority IP Address	When “Yes” is selected, sets the IP address of the priority to utilize the function. Pings will only be sent to the target device when receiving a successful ping response from the priority. For example, the target device is connected to a router, which is set to be the priority. The PDU/ATS sends IP pings to the target device only if the router is responsive to IP pings. In this way, the PDU/ATS can verify network connection by sending IP pings to the priority first and determine if target IP ping test is performed accordingly.
Target IP Address	The IP address of the target device.
Period	The time interval between successive pings to the target device, in second.
Retries	The number of failed ping tests that must be consecutively detected before the action is triggered.
Action	The action on specific outlet if the PDU/ATS continuously receives no response from the target device. When “Reboot” is selected, sets the maximum number of times to be triggered.
Restart Delay	Length of time after an action is triggered before beginning to restart ping tests. This allows a proper time for the device to get back to normal operation. During this time interval, no pings are sent to the target device.

After confirming the AutoPing configuration and pressing “Apply” button, find your preferred configuration and AutoPing status on AutoPing Webpage.

PDU Remote Management | Administrator login from 192.168.203.50 [Logout] | Summary | **PDU** | Log | System | Help | **CyberPower**

AutoPing

Status	Name	Active	Priority IP Address	Target IP Address	Period (sec)	Retries	Action	Restart Delay (min)	Outlet
Success	AutoPing Name	Enabled	-	192.168.203.64	30	3	Reboot (1)	1	[1]

[New](#)

Besides, set the IP address of the priority when “Yes” is selected. For example, the target device is connected to a router, which is set to be the priority. The PDU/ATS sends IP pings to the target device only if the router is responsive to IP pings. In this way, the PDU/ATS can verify network connection by sending IP pings to the priority first and determine if target IP ping test is performed accordingly.

Add New AutoPing Action

Name:

Active:

Priority IP Address: ☐ No ☒ Yes

Target IP Address:

Period: sec(s) [30-999]

Retries: [2-200]

Action: times [1-50]

Restart Delay: min(s) [0-10]

Wake on LAN (WoL)


When turning on an outlet, a Wake on LAN packet can be sent to the connected computer to awaken it. It is necessary for the computer to support this function and is configured as "Enabled" in its BIOS settings. See [PDU/ATS Tab > Wake on LAN > Features](#) and [PDU/ATS Tab > Wake on LAN > Lists](#). (For Switched Metered by Outlet Series and Switched Series only.)

PDU/ATS Tab > Wake on LAN > Features

The screenshot shows the 'PDU Remote Management' web interface. The top navigation bar includes 'Summary', 'PDU' (selected), 'Envir', 'Log', 'System', and 'Help'. The left sidebar lists various management functions: 'Status Manager', 'Outlet Action', 'Daisy Chain', 'Wake on Lan' (selected), 'Features' (highlighted), 'Lists', 'EnergyWise', and 'PowerPanel® List'. The main content area is titled 'WoL Features' and contains two sections: 'PowerPanel Client' with a toggle for 'Load/Sync with PowerPanel Client List' (currently off), and 'Wake Conditions' with a toggle for 'Outlet Turned On' (currently on). At the bottom of the 'Wake Conditions' section are 'Apply' and 'Reset' buttons.

Item	Definition
PowerPanel Remote	Load/Sync with PowerPanel List. To achieve synchronization, make sure the PDU/ATS has established communication with PowerPanel® Business Remote software. See System Tab > Security > Authentication .
Wake Conditions	Enable or disable the Wake on LAN function.

PDU/ATS Tab > Wake on LAN > Lists

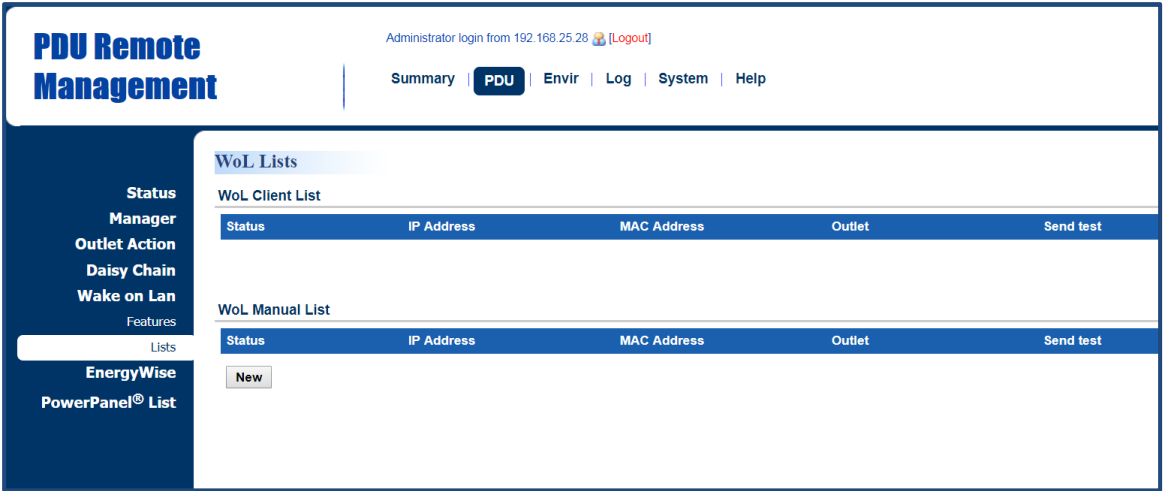

Item	Definition
WoL Remote List	If the PowerPanel Remote option in PDU/ATS Tab > Wake on LAN > Features is selected, the PowerPanel® List will be automatically added to the WoL Remote list.
WoL Manual List	Click New to enter the Add Wake on LAN Receiver Page . Users can manually add WoL receivers.

Add Wake on LAN Receiver Window

PDU Remote Management
Administrator login from 192.168.25.28 [\[Logout\]](#)

[Summary](#) | **[PDU](#)** | [Envir](#) | [Log](#) | [System](#) | [Help](#)

Status Manager
Outlet Action
Daisy Chain
Wake on Lan
Features
Lists
EnergyWise
PowerPanel® List

Add Wake on Lan Receiver

Active ☒ Enabled

IP Address

Outlet

#	Name
<input checked="" type="radio"/> 1	Outlet1
<input type="radio"/> 2	Outlet2
<input type="radio"/> 3	Outlet3
<input type="radio"/> 4	Outlet4
<input type="radio"/> 5	Outlet5
<input type="radio"/> 6	Outlet6
<input type="radio"/> 7	Outlet7
<input type="radio"/> 8	Outlet8

Item	Definition
Active	Enable/Disable the Wake on LAN function.
IP Address	The IP address of the computer. This IP must be within the same subnet as the PDU/ATS. Up to 50 IP addresses are supported.
Outlet	Select the outlet that provides power to the computer.

Graceful Computer Shutdown

After the connected computer is installed with PowerPanel Business Remote or Management and establishes communication with the PDU/ATS, its IP address will be automatically displayed in the PowerPanel® List shown below. This computer can perform a safe shutdown before the outlet powering the computer turns off, thus avoiding data loss. To achieve communication between the computer and PDU/ATS, see [System > General > Security](#).

Up to 50 computers having PPBE Remote or Management installed can be listed. A Remote or Management computer will be removed when it has been disconnected from the PDU/ATS for an hour. See **PDU/ATS Tab > PowerPanel® List**. (For Switched Metered by Outlet Series and Switched Series only.)

PDU/ATS Tab > PowerPanel® List

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary |
PDU
| Envir
| Log
| System
| Help

Status Manager

Outlet Action

Daisy Chain

Wake on Lan

EnergyWise

PowerPanel® List

PowerPanel® List

IP Address	Type	Outlet	Name	Location	Contact
192.168.26.107	Client	1	Lab03	Lab03	admin

Click the IP address of a client to access configuration settings.

Cisco EnergyWise

Users can manage and control all Cisco EnergyWise entities and configure settings. See [PDU /ATS Tab > EnergyWise > Configuration](#) and [PDU/ATS Tab > EnergyWise > Children List](#).

PDU/ATS Tab > EnergyWise > Configuration

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | **PDU** | Envir | Log | System | Help

EnergyWise Configuration

Version: 1.2.0

EnergyWise: ☐ Enable

Service port: 43440

Domain Name:

☐ Off-State Cache

☐ Secure Mode

Shared Secret:

Item	Definition
Version	The version of EnergyWise supported.
EnergyWise	Enable/Disable EnergyWise support.
Service Port	The port number is used to communicate with EnergyWise. This number must be the same as that of a Cisco switch that the PDU/ATS connects to.
Domain Name	The EnergyWise domain name. This must be the same as that of a Cisco switch that the PDU/ATS connects to.
Off-State Cache	Enable/Disable endpoint to cache EnergyWise list in the Cisco switch after the PDU/ATS has rebooted.
Secure Mode	Enable EnergyWise use of a shared secret.
Shared Secret	The secret for the EnergyWise domain.

PDU/ATS Tab > EnergyWise > Children List

PDU Remote Management

Administrator login from 192.168.25.28 [\[Logout\]](#)

Summary **PDU** | Envir | Log | System | Help

Status Manager
Outlet Action
Daisy Chain
Wake on Lan
EnergyWise
 Configuration
 Children List
PowerPanel® List

EnergyWise Children List

Parent

#	Name	Role	Keywords	importance
1	PDU_Base	base,role	endpoint,child,base	1

Children

#	Name	Role	Keywords	importance
1	Outlet1	outlet,role	endpoint,child,outlet	1
2	Outlet2	outlet,role	endpoint,child,outlet	1
3	Outlet3	outlet,role	endpoint,child,outlet	1
4	Outlet4	outlet,role	endpoint,child,outlet	1
5	Outlet5	outlet,role	endpoint,child,outlet	1
6	Outlet6	outlet,role	endpoint,child,outlet	1
7	Outlet7	outlet,role	endpoint,child,outlet	1
8	Outlet8	outlet,role	endpoint,child,outlet	1
9	Bank1	bank,role	endpoint,child,bank	1

Click the Name field in parent and/or children list to enter the [EnergyWise Parent Configuration Page](#) and [EnergyWise Child Configuration Page](#).

EnergyWise Parent Configuration Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | **PDU** | Envir | Log | System | Help

Status Manager

Outlet Action

Daisy Chain

Wake on Lan

EnergyWise

Configuration

Children List

PowerPanel® List

EnergyWise Parent Configuration

NamePDU_Base

Rolebase,role

Keywordsendpoint,child,base

importance1

Apply

Reset

EnergyWise Child Configuration Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | **PDU** | Envir | Log | System | Help

Status Manager

Outlet Action

Daisy Chain

Wake on Lan

EnergyWise

Configuration

Children List

PowerPanel® List

EnergyWise Child Configuration

NameOutlet1

Roleoutlet,role

Keywordsendpoint,child,outlet

importance1

Apply

Reset

Item	Definition
Name	The name entered by the user to identify an EnergyWise entity. The maximum length is 31 characters.
Role	This parameter is a string entered by the user to describe the function of

Item	Definition
	the entity. Maximum length is 31 characters.
Keywords	This parameter is a string entered by the user to describe the entity. Maximum length is 31 characters.
Importance	This parameter, entered by the user, shows the value of an entity's importance and must be between 1 and 100.

Security

The following provides account configurations to protect against unauthorized entry.

Login Authentication

There are five options for login authentication. Only one user can log in to the web interface at a time.

System Tab > Security > Management

PDU Remote Management

Administrator login from 192.168.210.210 [Logout] [Flag]

Summary | PDU | Log | **System** | Help

General
Security
 Management
 Local Configuration
 RADIUS Configuration
 LDAP Configuration
 Session Control
Network Service
 Notification
 Reset/Reboot
 About

Management

Login Authentication

☒ Local
☐ RADIUS , Local
☐ RADIUS Only
☐ LDAP , Local
☐ LDAP Only

Software Authentication

Secret Phrase

Admin Manager IP

☒ Enabled
☐ Enabled

Viewer Manager IP

☒ Enabled
☐ Enabled

Item	Definition
Login Authentication	
Local	Log in with user name and password configured in Local Account. See System Tab > Security > Local Configuration .

Item	Definition
RADIUS, Local	Log in with user name and password to authenticate with RADIUS server first. If the RADIUS server fails to respond, then the user name and password configured in Local Configuration can be used. See System Tab > Security > RADIUS Configuration .
RADIUS Only	Log in with user name and password to authenticate with RADIUS server only. See System Tab > Security > RADIUS Configuration .
LDAP, Local	Log in with user name and password to authenticate with LDAP server first. If the LDAP server fails to respond, then the user name and password configured in Local Configuration can be used. See System Tab > Security > LDAP configuration .
LDAP Only	Log in with user name and password to authenticate with LDAP server only. See System Tab > Security > LDAP configuration .
Software Authentication	
Secret Phrase	The authentication phrase is used to communicate with PowerPanel® Business software. This phrase should be the same Secret Phrase as the field on PowerPanel® Business software interface.
Manager IP	
Admin Manager IP (optional)	Set the Admin IP which is allowed to access. If you want access from any IP address, you can set one of them as 0.0.0.0 or 255.255.255.255. Note: You can also set a range of IP addresses to access, for example, 192.168.16.1/24.
Viewer Manager IP (optional)	Set the Viewer IP which is allowed to access. If you want access from any IP address, you can set one of them as 0.0.0.0 or 255.255.255.255. Note: You can also set a range of IP addresses to access, for example, 192.168.16.1/24.

1. Using Local Configuration for Authentication

System Tab > Security > Local Configuration

PDU Remote Management Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

Local Configuration

Status	Identity	User Name	Manageable Outlets
Enabled	Administrator	cyber	All
Enabled	Viewer	device	None

New

General
Security
 Authentication
Local Configuration
 RADIUS Configuration
 LDAP Configuration
 Session Control
Network Service
Notification
Reset/Reboot
About

There are two types of account: administrator and viewer. Click **User Name** field to enter **Administrator Page** or **Viewer Page**. Users can also click **NEW** to enter **Add Outlet User Page** to create an outlet account.

Administrator Page

PDU Remote Management Administrator login from 192.168.210.139 [Logout]

Summary | PDU | Envir | Log | **System** | Help

Administrator

User Name [1-63 characters]
 Current Password
 New Password [1-63 characters]
 Confirm Password [1-63 characters]

Apply **Reset**

General
Security
 Management
Local Configuration
 RADIUS Configuration
 LDAP Configuration
 Session Control
Network Service
Notification
Reset/Reboot
About

Viewer Page

PDU Remote Management

Administrator login from 192.168.210.139 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General
Security
Management
Local Configuration
RADIUS Configuration
LDAP Configuration
Session Control
Network Service
Notification
Reset/Reboot
About

Viewer

Allow Access ☒ Enabled

User Name [1-31 characters]

New Password [1-31 characters]

Confirm Password [1-31 characters]

Item	Definition
Administrator	The administrator can access all functions, including Enable/Disable the Viewer account. For login configuration, users can only create one administrator account.
User Name	Enter the new user name.
Current Password	Enter the current password for authentication.
New Password	Enter the new password.
Confirm Password	Enter the new password again to confirm it.
Viewer	The viewer can view the settings but cannot control or change any settings.
Allow Access	Check this box to enable view account.

Add Outlet User Page*

PDU Remote Management

Administrator login from 192.168.210.139 [Logout] [System] Help

Outlet User

Active ☒ Enable

User Name [1-31 characters]

Password [1-31 characters]

Role **Host** Guest 1

Outlet Selection ☐ All ☐ Bank 1 ☐ Bank 2

Bank 1

#	Name
<input type="checkbox"/> 1	Outlet1
<input type="checkbox"/> 2	Outlet2
<input type="checkbox"/> 3	Outlet3
<input type="checkbox"/> 4	Outlet4
<input type="checkbox"/> 5	Outlet5
<input type="checkbox"/> 6	Outlet6
<input type="checkbox"/> 7	Outlet7
<input type="checkbox"/> 8	Outlet8

Users can create an outlet account that is allowed to control assigned outlet(s).

Item	Definition
Active	Enable or disable the user account.
User Name	Set a name for the user account.
Password	Set the user password.
Role	Select the role of the PDU/ATS (HOST or GUEST#) if PDU/ATSs are daisy chained. Up to 3 GUEST PDU/ATSs can connect to 1 HOST PDU/ATS.
Outlets Selection	Outlets that the user can control.

2. Using RADIUS Configuration for Authentication

System Tab > Security > RADIUS Configuration

The screenshot displays the PDU Remote Management web interface. At the top, the breadcrumb path is "System Tab > Security > RADIUS Configuration". The header includes the "PDU Remote Management" logo, a user login status "Administrator login from 192.168.25.28" with a "Logout" link, and a navigation menu with "Summary", "PDU", "Envir", "Log", "System" (selected), and "Help". A left sidebar contains a tree view with categories: "General", "Security" (expanded), "Network Service", "Notification", "Reset/Reboot", and "About". Under "Security", the options are "Authentication", "Local Configuration", "RADIUS Configuration" (selected), "LDAP Configuration", and "Session Control". The main content area is titled "RADIUS Configuration" and features a table with two columns: "RADIUS Server" and "Port". Below the table is an "Add Server" button.

Click **Add Server** to enter **Radius Server Configuration Page** to create a server.

Radius Server Configuration Page

PDU Remote Management

Administrator login from 192.168.210.219 [Logout]
[Summary](#) | [PDU](#) | [Log](#) | [System](#) | [Help](#)

General

Security

Management

Local Configuration

RADIUS Configuration

LDAP Configuration

Session Control

Network Service

Notification

Reset/Reboot

About

RADIUS Server Configuration

Server IP

Shared Secret

Server Port

 [default:1812]

Authentication Type

PAP ▼

Timeout

sec(s) [1-60]

☒ Test Setting

☐ Skip Test

Item	Definition
Server IP	The IP address of RADIUS server.
Shared Secret	The shared secret of RADIUS server.
Server Port	The UDP port used by the RADIUS server.
Authentication Type	The authentication protocol type for RADIUS Server. Password authentication protocol (PAP) Challenge-Handshake Authentication Protocol (CHAP)
Timeout	The time of waiting to login Radius server.
Test Setting	Use user name and password to authenticate with RADIUS server, and save information of RADIUS server if authentication succeeds.
Skip Test	Save information of the RADIUS server without test.

3. Using LDAP Configuration for Authentication

System Tab > Security > LDAP configuration

The screenshot shows the PDU Remote Management web interface. The top header includes the logo, a user login status (Administrator login from 192.168.25.28), and a navigation bar with links: Summary, PDU, Envir, Log, System (highlighted), and Help. A left sidebar contains a menu with categories: General, Security (highlighted), Network Service, Notification, Reset/Reboot, and About. Under the Security category, the following options are listed: Authentication, Local Configuration, RADIUS Configuration, LDAP Configuration (highlighted), Session Control, and Network Service. The main content area is titled 'LDAP Configuration' and features a table with columns: LDAP Server, Type, and LDAP SSL. Below the table is an 'Add Server' button.

Click Add Server to enter LDAP Server Configuration Page to create a server.

LDAP Server Configuration Page

The screenshot shows the PDU Remote Management web interface with the 'LDAP Server Configuration' page. The top header and navigation bar are identical to the previous screenshot. The left sidebar is also identical. The main content area is titled 'LDAP Server Configuration' and contains the following fields and options:

- LDAP Server:
- LDAP SSL: ☐ Enable
- Port: [default:389]
- Base DN:
- Login Attribute:
- Radio buttons for server type:
 - ☒ Generic LDAP Server
 - ☐ Active Directory
 - AD Domain:
- Radio buttons for testing:
 - ☒ Test Setting
 - User Name:
 - Password:
 - ☐ Skip Test
- Buttons:

Item	Definition
LDAP Server	
LDAP Server	The IP address of LDAP server.
LDAP SSL	To communicate with LDAP server by LDAPS.
Port	The TCP port used by the LDAP(S) server.
Base DN	The base DN of LDAP server.
Login Attribute	The login attribute of LDAP user entry. (ex: cn or uid)
LDAP Authentication	
Authentication Mode	<p>Identifies the method to use for authentication.</p> <ul style="list-style-type: none"> Anonymous: Bind Request using Simple Authentication with a zero-length bind DN and a zero-length password. Accredited User: Bind Request using Simple Authentication with a Bind DN and Bind Password. <p>By Logon User: Bind Request using Simple Authentication with a User Base DN and login Password.</p>
LDAP Authorization	
Authorization Mode	<p>Identifies the method to use for authorization.</p> <ul style="list-style-type: none"> By User Attribute: Determine access level by User Attribute and User Attribute Value. <p>By Group: Determine access level by group witch search DN information such as the following Group Base DN, Group Attribute and Group Attribute Value.</p>
LDAP Server Type	
Generic LDAP Server	The type of LDAP server.
Active Directory	Select LDAP server type as Windows AD
AD Domain	The AD Domain of the Active Directory server.
LDAP Test	
Test Setting	Use user name and password to authenticate with LDAP server, and save information of LDAP server if authentication succeeds.
Skip Test	Save LDAP(S) server settings without testing.

Timeout Setting

Configure the idle login sessions. See [System > Security > Session Control](#).

System > Security > Session Control



Item	Definition
Login Session	
Timeout	The time in minutes that the system waits before automatically logging off.

Network Service

The following provides the network configurations.

TCP/IPv4 Setting

Display the current TCP/IPv4 settings and allow users to select the option to obtain TCP/IP settings by DHCP. See [System > Network Service > TCP/IPv4](#).

System > Network Service > TCP/IPv4

Item	Definition
Current Configuration	Display the current TCP/IP settings: IP Address, Subnet Mask, Gateway, and DNS server.
DHCP	<p>*Enable DHCP: Select this option to get IP address, Subnet Mask, and Gateway from DHCP.</p> <p>*Obtain DNS Address from DHCP: Select this option to get DNS by DHCP if DHCP is enabled.</p>
Manual	<p>Unselect Enable DHCP first.</p> <p>Enter the TCP/IP settings manually and click Apply.</p>

Item	Definition
Host Name	<p>Configure a host name.</p> <p>*Synchronization with Identification Name - Allow the identification name to be synchronized with the host name so both fields automatically contain the same value.</p> <p>Note: When enabling this feature, the identification name can only contain numbers (0-9), letters (a-z, A-Z), hyphen and decimal point. Besides, the identification name should not start with hyphen or decimal point.</p>

TCP/IPv6 Setting

Display the current TCP/IPv6 settings and allow users to assign the IPv6 address either by router control or manually. See [System > Network Service > TCP/IPv6](#).

System > Network Service > TCP/IPv6

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General
Security
Network Service
TCP/IPv4
TCP/IPv6
SNMPv1 Service
SNMPv3 Service
Web Service
Console Service
FTP Service
Notification
Reset/Reboot
About

TCP/IPv6

IPv6 Interfaces

Type	IPv6 Address

IPv6 Gateway

N/A

IPv6 Configuration

Access ☐ Enabled

Address Mode ☐ Router Control

☐ Manual

Manual IPv6 Address


System IP Address

Item	Definition
IPv6 Interface	Displays the current IPv6 address.
IPv6 Gateway	Displays the current IPv6 gateway.
IPv6 Configuration	
Allow Access	Enable/Disable IPv6 service.
Address Mode: Router Control	The IPv6 address is assigned through the method (Stateless Address Auto configuration, Stateless DHCPv6, or Stateful DHCPv6) determined by the router's configuration.
Address Mode: Manual	The IPv6 address is assigned manually.
Manual IPv6 Address	Enter the IPv6 address manually and click Apply when the Address Mode: Manual option is selected.

SNMPv1 Service Setting

Allow users to perform SNMPv1 configurations. See [System Tab > Network Service > SNMPv1 Service](#).

System Tab > Network Service > SNMPv1 Service

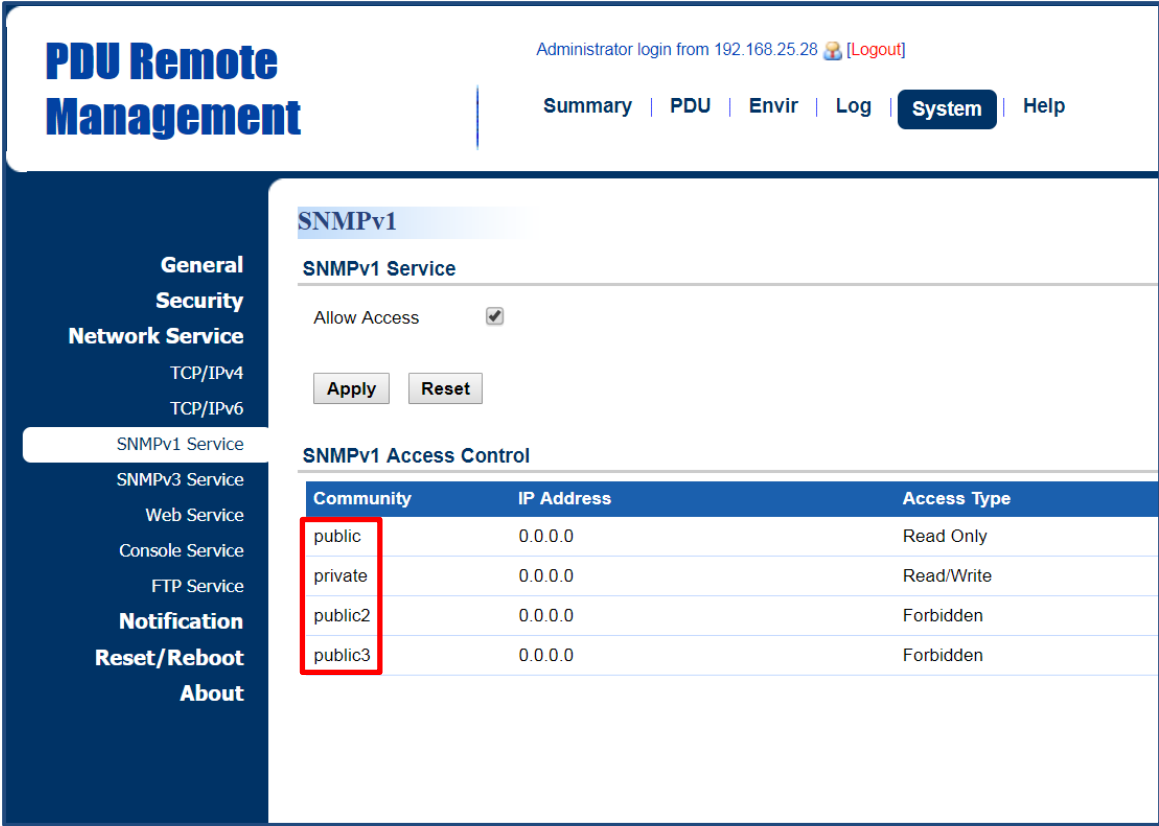

Item	Definition
SNMPv1 Service	
Allow Access	Enable or disable the SNMPv1 service.

Click the **SNMP Trap Community** field to enter the **SNMPv1 Page**. Users can configure the SNMPv1 settings.

SNMPv1 Page

PDU Remote Management

Administrator login from 192.168.25.28 [Logout]

Summary | PDU | Envir | Log | **System** | Help

General
Security
Network Service
TCP/IPv4
TCP/IPv6
SNMPv1 Service
SNMPv3 Service
Web Service
Console Service
FTP Service
Notification
Reset/Reboot
About

SNMPv1

Community

IP Address

Access Type


Apply Reset

Item	Definition
Community	The name used to access the SNMP community from a Network Management System (NMS). Its maximum length is 15 characters.
IP Address (IPv6 Support)	<p>The IP address or IP address mask can be accessed by the NMS. A specific IP address allows access only by the NMS with the specified IP Address. The “255” is regarded as the subnet mask and the rules are as follows:</p> <ul style="list-style-type: none"> *192.168.20.255: Access only by an NMS on the 192.168.20.0 segment. *192.255.255.255: Access only by an NMS on the 192.0.0.0 segment. *0.0.0.0 (the default setting) or 255.255.255.255: Access by any NMS on any segments.
Access Type	<p>The allowable action for the NMS through the community and IP address.</p> <ul style="list-style-type: none"> *Read Only: GET at any time but cannot SET. *Write/Read: GET at any time. SET at any time unless someone logs in to the Web interface. *Forbidden: No GET or SET.

SNMPv3 Service Setting

Users can perform SNMPv3 configurations. Authentication type or privacy type are provided to strengthen security. See [System Tab > Network Service > SNMPv3 Service](#).

System Tab > Network Service > SNMPv3 Service

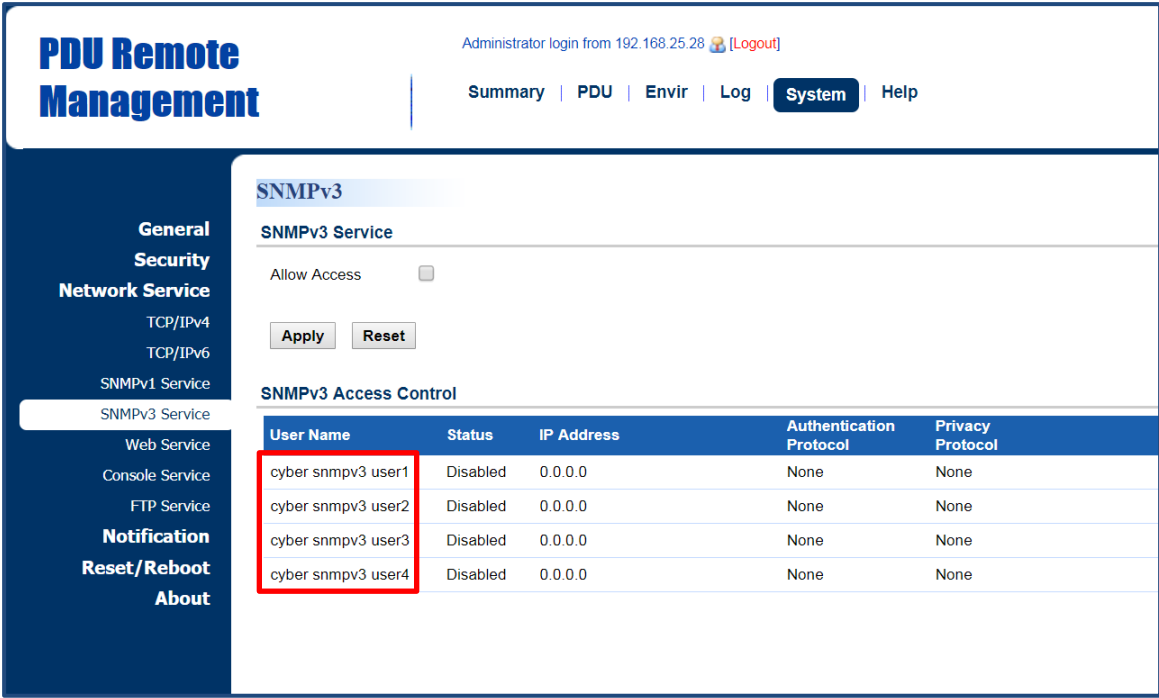

Item	Definition
SNMPv3 Service	
Allow Access	Enable or disable the SNMPv3 service.

Click the **User Name** field to enter the [SNMPv3 Page](#). Users can configure SNMPv3 settings.

SNMPv3 Page

Item	Definition
Access	Enable or disable the SNMPv3 service.
User Name	The name that identifies the SNMPv3 user. It must be 1 to 31 characters long.
Authentication Protocol	The hash type for authentication.
Authentication Password	The password used to generate the key for authentication. It must be 16 to 31 characters long.
Privacy Protocol	The type for encrypting and decrypting data. Note: The privacy protocol can not be selected if no authentication protocol is selected
Privacy Password	The password used to generate the key for encryption. It must be 16 to 31 characters long.
IP Address (IPv6 Support)	The IP address or IP address mask that can be accessed by the NMS. A specific IP address allows access only by the NMS with the specified IP Address. The “255” is regarded as the subnet mask and the rules are as follows: *192.168.20.255: Access only by an NMS on the 192.168.20.0 segment. *192.255.255.255: Access only by an NMS on the 192.0.0.0 segment. *0.0.0.0 (the default setting) or 255.255.255.255: Access by any NMS on any segments.

Web Service

Select the Enable HTTP/HTTPS option to access the HTTP/HTTPS Service and configure HTTP/HTTPS port settings. See [System Tab > Network Service > Web Service](#).

System Tab > Network Service > Web Service

PDU Remote Management | Administrator login from 192.168.210.219 [Logout] [Flag]

Summary | PDU | Log | **System** | Help

Web Service

Access

Allow Access ☐ Enabled HTTP ☒ Enabled HTTPS ☐ Disabled

Http Settings

Http Port [80 or 5000-65535]

Https Settings

Https Port [443 or 5000-65535]

Certificate Status [Valid Certificate](#) [Upload Certificate](#)

Cipher suites

- ☒ TLS_DHE_RSA_WITH_AES_256_CBC_SHA
- ☒ TLS_DHE_RSA_WITH_CAMELLIA_256_CBC_SHA
- ☒ TLS_RSA_WITH_AES_256_CBC_SHA
- ☒ TLS_RSA_WITH_CAMELLIA_256_CBC_SHA
- ☒ TLS_RSA_WITH_AES_128_CBC_SHA
- ☒ TLS_RSA_WITH_CAMELLIA_128_CBC_SHA
- ☒ TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256
- ☒ TLS_DHE_RSA_WITH_AES_128_CBC_SHA
- ☒ TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384
- ☒ TLS_DHE_RSA_WITH_CAMELLIA_128_CBC_SHA
- ☒ TLS_DHE_RSA_WITH_AES_256_GCM_SHA384
- ☒ TLS_RSA_WITH_AES_256_CBC_SHA256
- ☐ TLS_RSA_WITH_AES_128_CBC_SHA256

Item	Definition
Access	
Allow Access	<p>Enable or disable HTTP/HTTPS service.</p> <p>HTTPS supports the following encryption algorithms:</p> <ul style="list-style-type: none"> ● AES (256/128 bits) ● Camellia (256/128 bits)

Item	Definition
Http Settings	
HTTP Port	<p>The TCP/IP port of the Hypertext Transfer Protocol (HTTP); 80 is the default value.</p> <p>Users can also change the port setting to any unused port from 5000 to 65535 to enhance security.</p>
Https Settings	
Https Port	<p>The TCP/IP port of the Hypertext Transfer Protocol Secure (HTTPS); 443 is the default value.</p> <p>Users can also change the port setting to any unused port from 5000 to 65535 to enhance security.</p>
Certificate Status	<p>*Valid Certificate: Display the detailed certificate information.</p> <p>*Upload Certificate: Upload a certificate and replace the current one. The certificate must be uploaded in standard PEM (Privacy Enhanced Mail) format.</p>
Cipher suites	Set the Cipher suite to either Enable or Disable.

Click the [Valid Certificate](#) link, and the **Installed Certificate Page** will appear.

Installed Certificate Page

PDU Remote Management

Administrator login from 192.168.25.28 [\[Logout\]](#)

[Summary](#) | [PDU](#) | [Envir](#) | [Log](#) | **[System](#)** | [Help](#)

General
Security
Network Service
TCP/IPv4
TCP/IPv6
SNMPv1 Service
SNMPv3 Service
Web Service
Console Service
FTP Service
Notification
Reset/Reboot
About

Installed Certificate

Issue to

Common Name(CN)	Power Distribution Unit
Organization(O)	CyberPower Systems, Inc.
Organization Unit(OU)	PDU
Locality(L)	Unknown
Country	Unknown
Serial Number	11:1C:76:14

Issue by

Common Name(CN)	Power Distribution Unit
Organization(O)	CyberPower Systems, Inc.
Organization Unit(OU)	PDU

Validity

Issued from	2013/05/28
Expires on	2023/05/26

Fingerprints

SHA	44 C0 C5 CF 64 41 A0 A5 98 DF 0A B9 B1 BA 2F 3E FD 2B 84 CF
MD5	DD 84 A4 A3 38 3C BE 3E D9 09 FF 73 6D 53 3E 5C

[« Back](#)

Click the [Upload Certificate](#) link, and the **Change Certificate Page** will appear.

Change Certificate Page

PDU Remote Management

Administrator login from 192.168.25.28 [\[Logout\]](#)

[Summary](#) | [PDU](#) | [Envir](#) | [Log](#) | **[System](#)** | [Help](#)

General
Security
Network Service
TCP/IPv4
TCP/IPv6
SNMPv1 Service
SNMPv3 Service
Web Service
Console Service
FTP Service
Notification
Reset/Reboot
About

Upload and Replace

Upload Certificate

[Select File](#)

[Submit](#)

[« Back](#)

Console Service

Select the **Enable** options to allow access using Telnet/SSH service and configure Telnet/SSH port settings. See **System Tab > Network Service > Console Service**.


System Tab > Network Service > Console Service

Item	Definition
Access	
Allow Access	Enable access using Telnet or SSH version 2, which transmits user names, passwords, and data in an encrypted format.
Telnet Settings	
Telnet Port	The TCP/IP port that Telnet uses to communicate; 23 is the default value. Users can change the port setting to any unused port from 5000 to 65535 to enhance security. Note: Telnet Client requires users to enter a space and the port number after the PDU/ATS IP address on the command line to access the control console.
SSH Settings	

Item	Definition
SSH Port	The TCP/IP port that SSH uses to communicate; 22 is the default value. Users can change port setting to any unused port from 5000 to 65535 to enhance security.
Hostkey Status	Display the status of hostkey fingerprint to show whether it is valid or invalid. Click Upload Hostkey to upload or change hostkey. Click Export Hostkey to export a current hostkey.
Hostkey Fingerprint	The hostkey fingerprint uploaded by users will be displayed in this field.

FTP Service

Allow users to enable/disable the FTP server service and configure the TCP/IP port of the FTP server. The FTP server is used for upgrading Firmware. See [System Tab > Network Service > FTP Service](#).

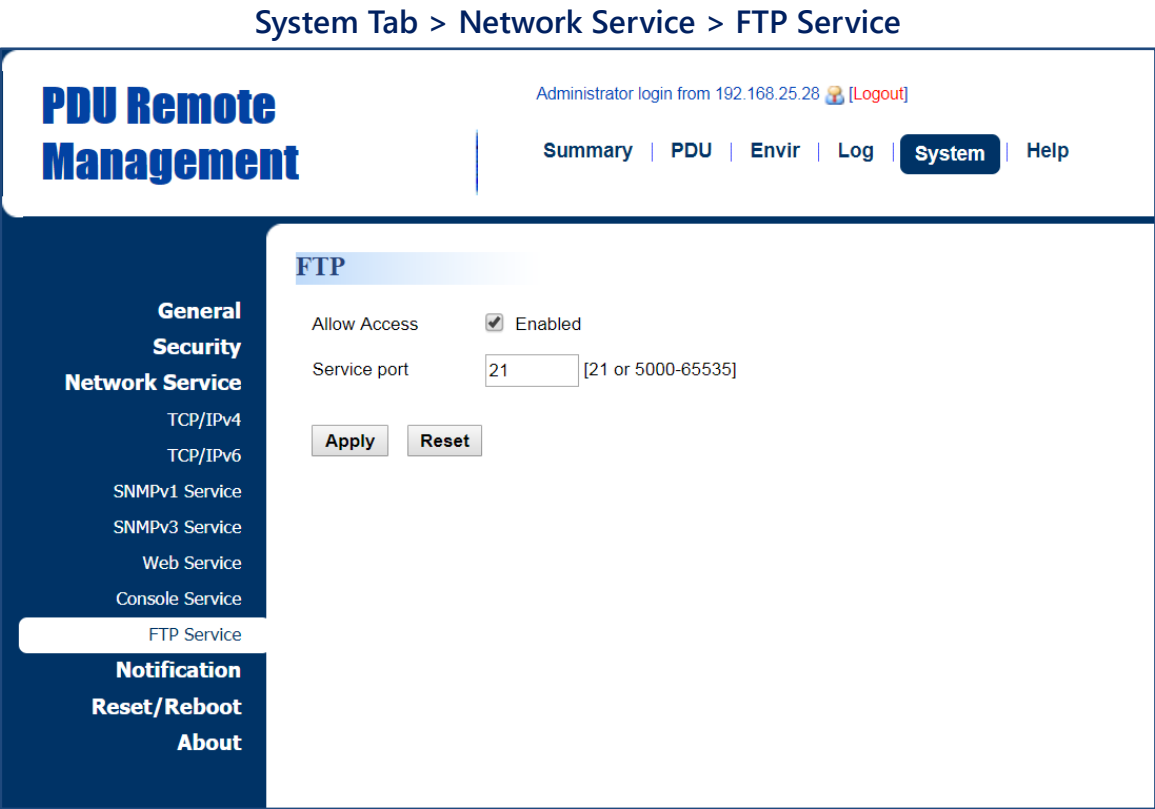

Item	Definition
Allow Access	Enable FTP server access.
Access Port	The TCP/IP port of the FTP server; 21 is the default value. Users can change port setting to any unused port from 5000 to 65535 to enhance security.

PDU/ATS Information

Display the system information of the PDU/ATS. See [System > About](#).

System > About

The screenshot shows the 'PDU Remote Management' web interface. The top navigation bar includes 'Summary', 'PDU', 'Envir', 'Log', 'System' (highlighted), and 'Help'. The left sidebar lists 'General', 'Security', 'Network Service', 'Notification', 'Reset/Reboot', and 'About' (highlighted). The main content area is titled 'About' and contains three sections: 'Information', 'Save/Restore Configuration', and 'Diagnostic Information'.

Information	
Model	PDU81001
Serial Number	123456789011
Hardware Version	1.1
Firmware Version	1.3.2
Firmware Update Date	2023-11-16
MAC Address	00-0C-15-40-50-72

Save/Restore Configuration	
Save Configuration	<input type="button" value="Save"/>
Restore Configuration	<input type="button" value="Select File"/>
<input type="button" value="Submit"/>	

Diagnostic Information	
Save Information	<input type="button" value="Save"/>

Item	Definition
Information	
Model Name	Model name of the PDU/ATS.
Serial Number	Serial Number of the PDU/ATS.
Hardware Version	The hardware version of the PDU/ATS.
Firmware Version	The current firmware version installed on the PDU/ATS.
Firmware Updated Date	The date the firmware was last updated.
MAC Address	MAC address of the PDU/ATS. Note: The MAC address is shown on the label on the back of

	the PDU/ATS and via the LCD screen on the PDU/ATS.
Save/Restore Settings	
Save Configuration	Click Save to save the PDU/ATS configuration file to local computer. The text file name will have a default format of YYYY_MM_DD_HHMM.txt.
Restore Configuration	To restore a configuration that has been saved earlier. Click Select File to import an existing configuration file and then click Submit .
Diagnostic Information	
Save Information	Click the " Save " button to save all diagnostic information to a file. The saved information includes Event Logs, Status Records and other device information. Its suggested to have this information saved when contacting CyberPower Technical Support for assistance.

Command Line Interface

Introduction

How to log on

Users can log on to the command line interface through either console network access (Telnet or SSH) or local access (Serial port).

1. Network access to the command line interface

When user logs in with the admin username and admin password through Telnet or SSH, there are two types of interfaces available. One is the command line interface (CLI) and the second is a menu interface. The default is CLI. If the user wants to change to the menu interface, type in the [menumode] command. To switch back to CLI, it is necessary to logout and login to the PDU/ATS.

2. Local access to the command line interface

To log on via serial connection, the PC/server must be connected directly to the Universal port of the PDU/ATS using the included RJ45/DB9 Serial Port Connection Cable, and perform the following steps.

Step 1: Open Hyper Terminal software (eg. PuTTY, HyperTerminal, or Tera Term) on your PC and select a name and icon for the connection.

Step 2: Setup the COM port settings using the following values

*Bits per second: 9600

*Data bits: 8

*Parity: None

*Stop bits: 1

*Flow control: None

Step 3: Press Enter to enter the Authentication menu.

Step 4: Enter the user name and password of the PDU/ATS at the Authentication menu.

Note: Serial connection can only access Command Line Mode and cannot support Menu Mode.

How to use telnet access command line interface

Step 1: Need to make sure the computer has access to the PDU/ATS installed network. At a command prompt, type telnet and the IP address for the PDU/ATS (for example, telnet 139.225.6.133, when the PDU/ATS uses the default Telnet port of 23), and press Enter.

Step 2: Enter the user name and password (by default, user name: cyber, password: cyber)

How to use SSH access command line interface

SSH is highly recommended for using to access the command line interface. SSH encrypts user

names, passwords, and transmitted data. To use SSH you must first configure SSH and install an SSH client program (eg. PuTTY, HyperTerminal, or Tera Term) on your computer.

Note: If using PuTTY to configure SSH access, please configure Line discipline of Terminal to “Force off”, as shown in Figure 5.

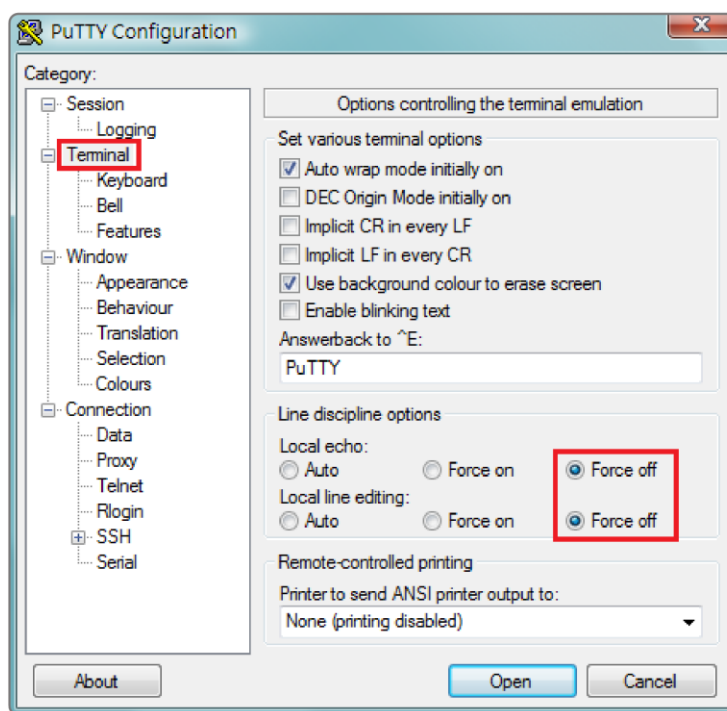


Figure 5. The PuTTY Configuration window.

How to use the Command Line Interface

While using the command line interface, you can also do the following:

1. To close the connection to the command line interface → Type “**exit**” and press Enter
2. To switch mode as Menu Mode → Type “**menumode**” and press Enter
3. To view a list of available commands or arguments → Type “?” (Eg. date ?).
4. To view the command that was typed most recently in the session → Press the UP/DOWN arrow key. (The session can remember up to ten previous commands.)
5. A command can support multiple options → To define the date as March 21, 2015 (Eg. date yyyy 2015 mm 3 dd 21)

Command Response Codes

When the command or arguments is not recognized or is incorrect, the console interface will display [^] underneath the wrong command or argument. The following error message will be displayed:

Command not found	PDU/ATS doesn't know this command. Console interface display the list of available commands.
Parameter Error	The parameter type or format is not allowed.

	Console interface display the list of available value or format.
--	--

Command Lists

devsta

Description: Show device status of load and utility.

Option	Argument	Description
show		Show information of system device load and utility status.
guest	1 2 3	Select daisy chain index.

Example 1:

To display device status

CyberPower > **devsta show**

devcfg

Description: Show and set device load threshold, reset power parameters in device level, set cold start status and delay.

Option	Argument	Description
show		Show information of device configuration.
guest	1 2 3	Select daisy chain index.
overload	<overload threshold value>	Set device overload threshold value.
nearover	<near overload threshold value>	Set device near overload threshold value.
lowload	<low load threshold value>	Set device low load threshold value.
restriction	<none onnear onover>	Set outlet restriction of device.
pwrrest	peakload energy	Reset the peak load or energy of device.
coldstasta	previous allon	Set the cold start state of device.
coldstadly	-1 0 1 2 ... 300	Set the cold start delay of device.
idletime	1 2 3 5 10 never	Set idle time of device.

Example 1:

To display load configuration of the device

CyberPower > **devcfg show**

Example 2:

To set overload threshold at 10A

CyberPower > **devcfg overload 10**

Example 3:

To set near overload threshold at 8A

CyberPower > **devcfg nearover 8**

Example 4:

To set cold start delay at 0

CyberPower > **devcfg coldstadly 0**

Example 5:

To set idle time of the device at 10 minutes

CyberPower > **devcfg idletime 10**

srccfg

Description: Show and set the source configuration. (For ATS Series only.)

Option	Argument	Description
show		Show information of source configuration.
guest	1 2 3	Select daisy chain index.
prefer	<a b none>	Set device preferred source.
freqdeviation	1 2 3	Set device frequency deviation..
sensitivity	high low	Set device voltage sensitivity.
nomivol	<208 220 230 240> or <100 110 120>	Set device nominal voltage.
volrangepolicy	wide medium narrow	Set device voltage transfer range policy.
widevol	<voltage range>	Set device wide voltage transfer range.
mediumvol	<voltage range>	Set device medium voltage transfer range.
narrowvol	<voltage range>	Set device narrow voltage transfer range.

Example 1:

To display source configuration of the device

CyberPower > **srccfg show**

Example 2:

To set preferred source of the device to be Source B

CyberPower > **srccfg prefer b**

Example 3:

To set frequency deviation to be +/- 2Hz

CyberPower > **srccfg freqdeviation 2**

Example 4:

To set device voltage sensitivity to be Low

CyberPower > **srccfg sensitivity low**

Example 5:

To set device nominal voltage at 100V

CyberPower > **srccfg nomivol 100**

bankcfg

Description: Show and set bank load configuration.

Option	Argument	Description
show		Show information of bank load threshold.
guest	1 2 3	Select daisy chain index.
index	b1 b2 all	Select bank index.
overload	<overload threshold value>	Set bank overload threshold value.
nearover	<near overload threshold value>	Set bank near overload threshold value.
lowload	<low load threshold value>	Set bank low load threshold value.
restriction	none onnear onover	Set outlet restriction of bank

Example 1:

To display bank load configuration

CyberPower > **bankcfg show**

Example 2:

To set overload threshold of bank 1 at 15A

CyberPower > **bankcfg index b1 overload 15**

Example 3:

To set near overload threshold of bank 2 at 10A

CyberPower > **bankcfg index b2 nearover 10**

oltsta

Description: Show information of outlet status.

Option	Argument	Description
show		Show information of outlet status.
guest	1 2 3	Select daisy chain index.
index	1 2 ... outlet number	Select outlet index.

Example 1:

To display all outlet status

CyberPower > **oltsta show**

Example 2:

To display status of outlet #5

CyberPower > **oltsta index 5 show**

oltcfg

Description: Show and set configuration of outlet action.

Option	Argument	Description
show		Show information of outlet delay time.
guest	1 2 3	Select daisy chain index.
index	1 2 ... outlet number all	Select outlet index.
name	<outlet name>	Set outlet name.
td_on	-1 0 1 2 ... 7200	Set outlet on delay time.
td_off	-1 0 1 2 ... 7200	Set outlet off delay time.
td_reboot	<reboot duration time>	Set outlet reboot duration time.
set	<1 2 ... outlet number all> <Outlet Name> <0 1 2 ... 7200> <0 1 2 ... 7200> <5 6 ... 60>	Set outlet configuration

Example 1:

To display all outlet configuration

CyberPower > **oltcfg index all show**

Example 2:

To name outlet #1 as test_1

CyberPower > **oltcfg index 1 name test_1**

Example 3:

To set turn on delay of outlet #2 as 3 seconds

CyberPower > **oltcfg index 2 td_on 3**

Example 4:

To set turn off delay of outlet #3 as 3 seconds

CyberPower > **oltcfg index 3 td_off 3**

Example 5:

To set reboot duration of outlet #4 as 5 seconds

CyberPower > **oltcfg index 4 td_reboot 5**

Example 6:

To name outlet #1 as test_1, set turn on delay as 3 seconds, set turn off delay as 4 seconds and

set reboot duration as 5 seconds with a single command

```
CyberPower > oltcfg set 1 test_1 3 4 5
```

oltloadcfg

Description: Show and set outlet load threshold, reset power parameters in outlet level.

Option	Argument	Description
show		Show information of outlet load threshold.
guest	1 2 3	Select daisy chain index.
index	1 2 ... outlet number all	Select outlet index.
name	<outlet name>	Set outlet name.
overload	<overload threshold value>	Set outlet overload threshold value.
nearover	<near overload threshold value>	Set outlet near overload threshold value.
lowload	<low load threshold value>	Set outlet low load threshold value.
pwrrest	peakload energy	Reset the peak load or energy of outlet.

Example 1:

To display outlet load configuration

```
CyberPower > oltloadcfg show
```

Example 2:

To set overload threshold of outlet #1 at 1800W

```
CyberPower > oltloadcfg index 1 overload 1800
```

Example 3:

To set near overload threshold of outlet #2 at 1000W

```
CyberPower > oltloadcfg index 2 nearover 1000
```

Example 4:

To set low load threshold of outlet #10 at 100W

```
CyberPower > oltloadcfg index 10 lowload 100
```

oltctrl

Description: Control the action of outlet.

Option	Argument	Description
Index	1 2 ... outlet number b1 b2 all	Select outlet index.
guest	1 2 3	Select daisy chain index.
act	on off reboot delayon delayoff delayreboot cancel	Control the action of outlet.

Example 1:

To turn on outlet #1 immediately

CyberPower > **oltctrl index 1 act on**

Example 2:

To turn on outlet #2 with turn on delay

CyberPower > **oltctrl index 2 act delayon**

schedule

Description: Show and configure the outlet schedule of device.

Option	Argument	Description
show		Show information of schedule.
guest	1 2 3	Select daisy chain index.
index	1 2 ... schedule number 10	Select schedule index.
add	once daily weekly	<p>Add outlet schedule with a schedule name and follow the settings step by step.</p> <p>The parameters of status enable disable</p> <p>The parameters of action on off reboot delayon delayoff delayreboot</p> <p>The parameters of outlet 1 2 ... outlet number</p> <p>The parameters of frequency once daily weekly</p> <p>The Parameters of hour 1 2 3 24</p> <p>The Parameters of minutes 1 2 3 59</p> <p>The Parameters of day of week Mon Tue Wed Thu Fri Sat Sun</p> <p>The parameters of month 1 2 12</p> <p>The Parameters of day 1 2 3 31</p>
name	<schedule name>	Set schedule name.
status	enable disable	Set schedule status

Option	Argument	Description
act	on off reboot delayon delayoff delayreboot	Control the action of outlet.
time	<hh:mm>	Set schedule time.
date	<mm/dd>	Set schedule date.
week	Mon Tue Wed Thu Fri Sat Sun	Set schedule week.
oltnum	1 2 ... outlet number b1 b2 all	Set the outlet number of schedule.
delete		Delete the schedule.

Example 1:

To display schedules of the device

CyberPower > **schedule show**

date

Description: Show and configure timezone, date format, date, time.

Option	Argument	Description
show		Show system date information
yyyy	<number of year>	Set year of system date by AD.
mm	<number of month>	Set month of system date.
dd	<number of date>	Set day of month.
format	mm/dd/yyyy yyyy/mm/dd dd.mm.yyyy mmm-dd-yy dd-mmm-yy yyyy-mm-dd	Set system date format
timezone	<time zone offset>	Choose the time zone in GMT (Greenwich Mean Time).
time	<hh:mm:ss>	Set system time.

Example 1:

To define timezone offset as +08:00

CyberPower > **date timezone +0800**

Example 2:

To define the date as March 21, 2015

CyberPower > **date yyyy 2015 mm 3 dd 21**

Example 3:

To define the time as 13:45:12

CyberPower > **date time 13:45:12**

ntp

Description: Show and configure NTP server IP, NTP update interval time.

Option	Argument	Description
show		Show all NTP information
access	enable disable	If enable was set, System will set date and time from NTP server.
priip	<primary ntp server ip>	Set the IP address/domain name of primary NTP servers
secip	<secondary ntp server ip>	Set the IP address/domain name of secondary NTP servers
update	now 1-8760	now – Choose <i>Update right now</i> to update immediately. 1-8760 – Set the frequency to update the date and time from NTP server.

Example 1:

To enable NTP server define date and time

CyberPower > **ntp access enable**

Example 2:

To setup primary NTP server IP as “192.168.26.22”

CyberPower > **ntp priip 192.168.26.22**

Example 3:

To update time by NTP immediately

CyberPower > **ntp update now**

sys

Description: Show and configure identification of the device.

Option	Argument	Description
show		Show all system information
name	<system name>	Set name of the equipment.
location	<system location>	Set the location of power equipment.
contact	<system contact>	Set the person to contact about this equipment.
reset	reboot notcpip all	Reboot – Reboot the device notcpip – Reset the System to default setting but reserving TCP/IP settings, and restart it. all – Set all to reset the System to default setting and restart it.

Example 1:

To view all information of system

CyberPower > **sys show**

Name: PDU81001

Location: Server Room

Contact: Administrator

Model: PDU81001

Hardware Version: 1.1

Firmware Version: 1.0.3

Firmware Update Date: 03/08/2015

Serial Number: TALGY2001975

MAC Address: 00-0C-15-00-B9-42

Example 2:

To reset the device to default parameter.

CyberPower > **sys reset all**

dst

Description: Show and configure type of Daylight Saving Time.

Option	Argument	Description
show		Show all DST information
mode	disable us manual	<p>disable – Disable DST.</p> <p>us – Tradition US DST</p> <p>manual – Manual DST date time rules.</p> <p>After finish this command, input start and end time step by step.</p> <p>The parameters of Week of month: first second third forth last</p> <p>The Parameters of day of week: Mon Tue Wed Thu Fri Sat Sun</p> <p>The parameters of month: Jan Feb Mar Apr May Jun Jul Aug Sep Oct Nov Dec</p>

Example 1:

Manual set Daylight Saving Time
 CyberPower > **dst mode manual**
 Start time (0~23): **2**
 Start week of month: **second**
 Start day of week: **Sun**
 Start month: **Mar**
 End time (0~23): **2**
 End week of month: **first**
 End day of week: **Sun**
 End month: **Nov**

Example 2:

To view DST setting
 CyberPower > **dst show**
 DST: Manual DST Date Time
 Start: 02:00, the second Sunday of Mar
 End: 02:00, the first Sunday of Nov

login

Description: Show and configure authentication for login.

Option	Argument	Description
show		Show all login information
type	local radiuslocal radiusonly ldaplocal ldaponly	<p>local – User to login Remote Management Card with user name and password that configured in Local Account.</p> <p>radiuslocal – User to login Remote Management Card with user name and password for authenticate with RADIUS server first. If the RADIUS server fails to respond, the user name and password that configured in Local Account will be used.</p> <p>radiusonly – User to login Remote Management Card with user name and password for authenticate with RADIUS server only.</p> <p>ldaplocal – User to login Remote Management Card with user name and password for authenticate with LDAP server first. If the LDAP server fails to respond, the user name and password that configured in Local Account will be used.</p> <p>ldaponly – User to login Remote Management Card with user name and password for authenticate with LDAP server only.</p>
secretphrase	<Authentication Phrase>	The Authentication Phrase used to communicate with PowerPanel Business Remote.
timeout	1~10	The period (in minutes) that the system waits before auto logging off. The range of argument is from 1 to 10 (in minutes).

Example 1:

To change authentication type to Radius, Local Account
 CyberPower > **login type radiuslocal**

admin

Description: Show and configure administrator account and manager IP.

Option	Argument	Description
show		Show all admin information
primip	<primary manager IP>	Set primary manager IP of admin
secmipac	enable disable	Enable or disable secondary manager IP of admin
secmip	<secondary manager IP>	Set secondary manager IP of admin
name	<administrator account>	Set user name of admin
passwd	<administrator password>	Set user password of admin

Example 1:

To change the primary administrator account information with a single command (need current password)

```
CyberPower > admin name pri_name passwd pri_pass
```

```
Input admin password : cyber
```

```
pass
```

device

Description: Show and configure viewer account and manager IP.

Option	Argument	Description
show		Show all viewer account information
access	enable disable	Enable or disable viewer account
primip	<primary manager IP>	Set primary manager IP of viewer account
secmipac	enable disable	Enable or disable secondary manager IP of viewer account
secmip	<secondary manager IP>	Set secondary manager IP of viewer account
name	<user name>	Set user name of viewer account
passwd	<user password>	Set user password of viewer account

Example 1:

To define primary viewer manager IP as 192.168.26.0/24

```
CyberPower > device primip 192.168.26.0/24
```

oltuser

Description: Show and configure the outlet user.

Option	Argument	Description
show		Show information of outlet user.
index	1 2 outlet user number	Select outlet user index.
add		Add outlet user then input user name/ password/ outlet number appear later on.
status	enable disable	Enable of disable the status of outlet user.
name	<outlet user name>	Set the name of outlet user.
passwd	<outlet user password>	Set the password of outlet user.
oltnum	1 2 ... outlet number b1 b2 all	Set the outlet number of outlet user.
	g#<1 2 daisy chain index >-<1 2 ... outlet number b1 b2 all>;	Set the daisy chain PDU/ATS's outlet number of outlet user. Note1 : Host PDU/ATS doesn't need to type "g#<daisy chain index>". Note2 : End of outlet number list need to type Semicolon";"
delete		Delete the outlet user.

Example 1:

To display configuration of outlet users

CyberPower > **oltuser show**

	Status	User Name	Manageable Outlets
1	Ena	outletuser1	1,2,3,4
2	Disa	outletuser2	g#1-5,6,7,8
3	Ena	outletuser3	1,3,5,7;g#1-2,4,6,8

Example 2:

To disable the outlet user #1

CyberPower > **oltuser index 1 status disable**

Example 3:

To set host outlet 1,3,5, guest #1 outlet 2,4,6, and guest #2 outlet 7,8,9 to the outlet user #1

CyberPower > **oltuser index 1 oltnum 1,3,5;g#1-2,4,6;g#2-7,8,9**

Example 4:

To delete the outlet user #1

CyberPower > **oltuser index 1 delete**

radius

Description: Show and configure information of RADIUS server.

Option	Argument	Description
show		Show all Radius server information
pri sec	show	Show primary/secondary Radius server information.
add		Add radius server then input radius server IP/Secret/Port appear later on.
add	<server IP> <server secret> <server port>	Add radius server information including server IP/Secret/Port at one time.
priip secip	<radius server IP>	Set the IP address of primary/secondary RADIUS server.
priport secport	<radius server port>	Set the UDP port which is used by the primary/secondary Radius server.
prisecret secsecret	<radius server secret>	Set the shared secret of primary/secondary Radius server.
pritype sectype	<radius server authentication type>	Set the authentication type of primary/secondary Radius server.
pridel secdel		Delete primary/secondary Radius server

Example 1:

To view primary radius server information

CyberPower > **radius pri show**

Server IP: 192.168.26.33

Server Secret: testsecret

Server Port: 1826

Example 2:

To view secondary radius server information

CyberPower > **radius sec show**

Server IP: 192.168.30.58

Server Secret: testsecret2

Server Port: 1508

Enter the following command to add Radius server information configuration with a single command:

```
radius add <Server IP> <Share Secret> <Server Port><Authentication Type>
```

For example:

```
CyberPower > radius add 192.168.203.55 testsecret 150 pap
```

Note: This single command could not be executed successfully if there are two Radius servers to be set already.

Ldap

Description: Show and configure information of LDAP server.

Option	Argument	Description
show		Show all LDAP server information
add		Add LDAP server then input information for requirements appear later on.
pritype sectype	openldap ad	Set the type of LDAP server.
priip secip	<LDAP server IP>	Set the IP address of primary/secondary LDAP server.
prissl secssl	enable disable	Enable or disable using LDAPS.
priport secport	<LDAP server port>	Set the TCP port which is used by the primary/secondary LDAP server.
priidn secidn	< LDAP server base DN>	Set the Base DN of primary/secondary LDAP server.
priaddomain secaddomain	< LDAP server AD domain>	Set the AD Domain of the primary/secondary Active Directory server.
priattr secattr	< LDAP server login attribute>	Set the Login Attribute of primary/secondary LDAP user entry.
pridel secdel		Delete primary/secondary LDAP server.

Example 1:

To add LDAP Server

```
CyberPower > ldap add
```

```
Input LDAP Server Type [openldap | ad]: ad
```

```
Input IP address: 192.168.26.33
```

```
Use SSL [enable | disable]: disable
```

```
Input LDAP port: 389
```

Input base DN: **dc=cyber,dc=com**
 Input login attribute: **cn**
 Input AD Domain: **cyber.com**

Example 2:

To view information about LDAP Server

CyberPower > **ldap show**

Primary LDAP Server

Type: **Windows AD**

LDAP Server: **192.168.26.33**

LDAP SSL: **Disable**

Port: **389**

Base DN: **dc=cyber,dc=com**

Login Attribute: **cn**

AD Domain: **cyber.com**

tcpip

Description: Show and configure IPv4 IP, netmask, gateway, DNS.

Option	Argument	Description
show		Show all IPv4 information
dhcp	enable disable	Enable or disable DHCP
dns	manual auto	Auto – Obtain DNS Address from DHCP when DHCP enable Manual – Obtain DNS Address by manual when DHCP enable.
ip	<system IP>	Set IP Address of system
netmask	<system netmask>	Set netmask of system
gateway	<system gateway>	Set gateway of system
dnsip	<system dns>	Set DNS of system

Example 1:

To disable DHCP and define IP address to 192.168.26.33

CyberPower > **tcpip dhcp disable ip 192.168.26.33**

tcpip6

Description: Show and configure status of IPv6 router control, IPv6 manual IP.

Option	Argument	Description
show		Show all IPv6 information
access	enable disable	Enable or disable IPv6 service.
routerctrl	enable disable	The IPv6 address is assigned through the method (Stateless Address Autoconfiguration, Stateless DHCPv6 or Stateful DHCPv6) which is decided by router setting.
manual	enable disable	Enable or disable IPv6 manual ip.
ip	<manual IPv6 IP>	Set manual IPv6 ip.

Example 1:

To define IPv6 manual IP address then show the information of IPv6

CyberPower > **tcpip6 ip 2001:cdba:0:0:0:0:3257:9652 show**

Access: Enable

Router Control: Enable

Manual: Enable

Manual IPv6 Address: [2001:cdba::3257:9652]

snmpv1

Description: Show and configure status of SNMPv1.

Option	Argument	Description
show		Show SNMPv1 status.
index	1 2 3 4	Select SNMPv1 community index.
set	<1 2 3 4> <Community> <IP Address> <readonly readwrite forbidden>	Set SNMPv1 community information.
access	enable disable	Enable or disable SNMPv1.
community	<Community>	Set SNMPv1 community name.
ip	<IP Address>	Set SNMPv1 community IP address.
type	readonly readwrite forbidden	Set SNMPv1 community type.

Example 1:

To view the second SNMPv1 community information

CyberPower > **snmpv1 index 2 show**

Community: private

IP Address: 192.169.203.20

Type: Read/Write

Example 2:

To change the community name of first SNMPv1 community to Public1

```
CyberPower > snmpv1 index 1 community Public1
```

Example 3:

To change the IP address of third SNMPv1 community to 192.168.203.88

```
CyberPower > snmpv1 index 3 ip 192.168.203.88
```

Example 4:

To change the community type of forth SNMPv1 community to read/write

```
CyberPower > snmpv1 index 4 type readwrite
```

Enter the following command to perform all parameters configuration with a single command:

```
snmpv1 set <1 | 2 | 3 | 4> <Community> <IP Address> <readonly | readwrite | forbidden>
```

For example:

```
CyberPower > snmpv1 set 3 CyberPower 192.168.203.91 readonly
```

snmpv3

Description: Show and configure status of SNMPv3.

Option	Argument	Description
Show		Show SNMPv3 status.
Index	1 2 3 4	Select SNMPv3 user index.
Set	<1 2 3 4> <Community> <IP Address> <readonly readwrite forbidden>	Set SNMPv3 user information.
Access	enable disable	Enable or disable SNMPv3.
Name	<User Name>	Set SNMPv3 user name.
Status	<enable disable>	Enable or disable SNMPv3 user.
Ip	<IP Address>	Set IP address of SNMPv3 user.
Auth	md5 sha none	Set authentication protocol of SNMPv3 user.
Authkey	<Auth Key>	Set authentication password of SNMPv3 user.
Priv	aes des none	Set privacy protocol of SNMPv3 user.
Privkey	<Priv Key>	Set privacy password of SNMPv3 user.

Example 1:

To view the first SNMPv3 user information

```
CyberPower > snmpv3 index 1 show
```

```

User Name: CyberPower
Status: Enable
IP Address: 192.169.30.58
Auth Protocol: MD5
Priv Protocol: aes

```

Example 2:

To change the user name of second SNMPv3 user to CyberPower

```
CyberPower > snmpv3 index 2 name CyberPower
```

Example 3:

To enable the-third SNMPv3 user

```
CyberPower > snmpv3 index 3 status enable
```

Example 4:

To change the IP address of forth SNMPv3 user to 192.168.203.66

```
CyberPower > snmpv3 index 4 ip 192.168.203.66
```

Example 5:

To change the authentication protocol of second SNMPv3 user to md5 and set its authentication password as **test_authkey_123456**

```
CyberPower > snmpv3 index 2 auth md5 authkey test_authkey_123456
```

Example 6:

To change the authentication password of first SNMPv3 user to **test_authkey_123456**

```
CyberPower > snmpv3 index 1 authkey test_authkey_123456
```

Example 7:

To change the authentication protocol of third SNMPv3 user to none

```
CyberPower > snmpv3 index 3 auth none
```

Example 8:

To change the privacy protocol of second SNMPv3 user to aes and set its privacy password as **test_privkey_123456**

```
CyberPower > snmpv3 index 2 priv aes privkey test_privkey_123456
```

Example 9:

To change the privacy password of first SNMPv3 user to **test_privkey_123456**

```
CyberPower > snmpv3 index 1 privkey test_privkey_123456
```

Example 10:

To change the privacy protocol of third SNMPv3 user to none

CyberPower > **snmpv3 index 3 priv none**

Enter the following command to perform all parameters configuration with a single command:

```
snmpv3 set <1 | 2 | 3 | 4> <User Name> <IP Address> <md5 | sha | none> <Auth Key> <aes | des | none> <Priv Key>
```

For example..

```
CyberPower > snmpv3 set 1 CyberPower 192.168.203.90 sha test_authkey_123456  
des test_privkey_123456
```

trap

Description: Show and configure information of SNMP trap receiver.

Option	Argument	Description
show		Show trap receiver information.
add		Add trap receiver.
index	1 2 ... 10	Select trap receiver index.
name	<Trap Receiver Name>	Set trap name of trap receiver.
ip	<Trap Receiver IP>	Set IP address of trap receiver.
ver	v1 v3	Set SNMP version of trap receiver.
status	enable disable	Enable or disable trap receiver.
community	<Trap Receiver Community>	Set SNMPv1 community name of trap receiver.
user	1 2 3 4	Select SNMPv3 user of trap receiver.
test		Trap receiver send test
delete		Delete trap receiver.

Example 1:

To view sixth trap receiver information

```
CyberPower > trap index 6 show
```

Trap Name: CyberPower

Status: Enable

IP Address: 192.168.203.68

Type: SNMPv1

Community: test_community

Example 2:

To change the trap name of second trap receiver to test

```
CyberPower > trap index 2 name test
```

Example 3:

To change the IP address of third trap receiver to 192.168.30.85

```
CyberPower > trap index 3 ip 192.168.30.85
```

Example 4:

To change the SNMP version of forth trap receiver to SNMPv3

```
CyberPower > trap index 4 ver v3
```

Example 5:

To change the fifth trap receiver

```
CyberPower > trap index 5 status enable.
```

Example 6:

To change the community name of second trap receiver to CyberPower with the condition that the SNMP version of trap receiver must be SNMPv1.

```
CyberPower > trap index 2 community CyberPower
```

Example 7:

To change the SNMPv3 user of tenth trap receiver to SNMPv3 user2 with the condition that the SNMP version of trap receiver must be SNMPv3

```
CyberPower > trap index 10 user 2
```

Example 8:

To delete the fifth trap receiver

```
CyberPower > trap index 5 delete
```

Enter the following command to add trap receiver configuration with a single command:

For SNMPv1: trap add <Trap Name> <Trap Receiver IP> v1 <Community>

For example:

```
CyberPower > trap add CyberPower 192.168.203.16 v1 test
```

For SNMPv3: trap add <Trap Name> <Trap Receiver IP> v3 <1 | 2 | 3 | 4>

For example:

```
CyberPower > trap add cyberpower 192.168.203.12 v3 3
```

web

Description: Show and configure web access type, http port and https port.

Option	Argument	Description
show		Show all web information
access	http https disable	http – Enable the access to http service. https – Enable the access to https service. disable – Disable web service
httpport	<http port>	The TCP/IP port of the Hypertext Transfer Protocol (HTTP) (80 by default)
httpsport	<https port>	The TCP/IP port of the Hypertext Transfer Protocol Secure (HTTPS) (443 by default)
index	1 2 ... 13	Select Cipher Suites list index
status	enable disable	Enable or disable Cipher Suite

Example 1:

To change the HTTP server port to 5000

CyberPower > **web httpport 5000**

console

Description: Show and configure console network access type, telnet port and SSH port.

Option	Argument	Description
show		Show all console information.
access	disable telnet ssh	disable – Disable console service. telnet – Enable the access to Telnet. ssh – Enable the access to SSH.
telnet	enable disable	enable – Enable Telnet. disable – Disable Telnet.
ssh	enable disable reset_hostkey	enable – Enable SSH. disable – Disable SSH. reset_hostkey – Reset SSH Hostkey to default.
telnetport	<telnet port>	The TCP/IP port (23 by default) that Telnet uses to communicate.
sshport	<ssh port>	The TCP/IP port (22 by default) that SSH uses to communicate.

Example 1:

To enable Telnet as console type

CyberPower > **console telnet enable**

Example 2:

To disable SSH as console type

CyberPower > **console ssh disable**

Note: The telnet and the ssh modes are options for switching between each other. For example, the telnet will be automatically disabled once ssh is enabled as console type and vice versa.

Example 3:

To reset SSH Hostkey to default

CyberPower > **console ssh reset_hostkey**

Note: The system will reboot after the SSH Hostkey is reset to default.

ftp

Description: Show and configure FTP access type and TCP/IP port of FTP.

Option	Argument	Description
show		Show all FTP information
access	enable disable	Enable or disable FTP server
port	<ftp port>	The TCP/IP port of the FTP server (21 by default).

Example 1:

To enable FTP service

CyberPower > **ftp access enable**

eventlog

Description: View and clear the eventlog of the device.

Option	Argument	Description
show		Show the list of events and a brief description of each event along with the date and time stamp.
clear		Clear the existing event logs.

Example 1:

```
CyberPower > eventlog show
```

```
12/11/2015 03:32:08 Admin login from 192.168.26.33.
```

```
.....
```

Then use the following keys to navigate the event log.

Key	Description
SPACE	View the next page of event log.
Q	Close the event log and return to command line interface.

Example 2:

To clear all event logs.

```
CyberPower > eventlog clear
```

```
Do you want to clear all eventlog [yes / no]: yes
```

syslog

Description: Show and configure information of SYSLOG server.

Option	Argument	Description
show		Show all syslog information.
s1 s2 s3 s4	show	Show syslog server information for 1 to 4 servers.
add		Add syslog server then input syslog server IP /Port appear later on.
add	<server IP> <server port>	Add syslog server information including server IP/Port at one time.
access	enable disable	Enable or disable syslog.
facility	kernel user mail system auth1 syslog link news uucp clock1 auth2 ftp ntp logaudit logalert clock2 local0 local1 local2 local3 local4 local5 local6 local7	Set Syslog facility.
s1test s2test s3test s4test		Send test message to Syslog server for 1 to 4 servers.
lp1 lp2 lp3 lp4	<SYSLOG server IP>	Set the IP address of Syslog server for 1 to 4 servers.
port1 port2 port3 port4	<SYSLOG server port>	Set the UDP port which is used by the Syslog server 1 to 4 servers.
s1del s2del s3del s4del		Delete Syslog server for 1 to 4 servers.

Example 1:

To view syslog information of server 1


```
CyberPower > syslog s1 show
```

```
IP: 192.168.26.33
```

```
Port: 514
```

Example 2:

To view syslog information of server 2

```
CyberPower > syslog s2 show
```

```
IP: 192.168.203.89
```

```
Port: 268
```

Example 3:

To view syslog information of server 3

```
CyberPower > syslog s3 show
```

```
IP: 192.168.30.15
```

```
Port: 101
```

Example 4:

To view syslog information of server 4

```
CyberPower > syslog s4 show
```

```
IP: 192.168.26.93
```

```
Port: 358
```

Enter the following command to perform all parameters configuration with a single command:

```
syslog add <Server IP address> <Server Port>
```

For example:

```
CyberPower > syslog add 192.168.203.65 180
```

Note: This single command could not be executed successfully if there are four Syslog servers to be set already.

menumode

Description: Switch mode as Menu Mode.

accy

Description: Show accessory information.

Option	Argument	Description
show		Show information of accessory.

Example 1:

To display general information of accessory

CyberPower > **accy show**

	Model	Serial number	HW version	FW version
--	-------	---------------	------------	------------

1	SENV001	TBLMV2000001	1.0	1.0.4
2	SENV001	TBLMV2000002	1.0	1.0.4

envsta

Description: Show environment sensor status.

Option	Argument	Description
show		Show status of environment sensor.
index	1 2 3 ... 8	Select environment sensor index.

Example 1:

To display general status of environment sensor

CyberPower > **envsta show**

	Name	Location	Temp	Humid
1	Name1	Location1	77.21 F	54.00 %RH
2	Name2	Location2	76.33 F	53.00 %RH

envcfg

Description: Show and set environment sensor configuration.

Option	Argument	Description
show		Show configuration of environment sensor.
index	1 2 3 ... 8	Select environment sensor index.
name	< environment sensor name>	Set environment sensor name.
location	< environment sensor location>	Set environment sensor location.
temphthres	<high threshold value>	Set high temperature threshold.
templthres	<low threshold value>	Set low temperature threshold.
temphyster	<hysteresis value>	Set temperature hysteresis.
tempchange	<rate of change value>	Set temperature rate of change.
humhthres	<high threshold value>	Set high humidity threshold.
humlthres	<low threshold value>	Set low humidity threshold.
humhyster	<hysteresis value>	Set humidity hysteresis.
humchange	<rate of change value>	Set humidity rate of change.
maxminreset	<temp humid>	Reset maximum and minimum record of temperature or humidity.
unit	<celcius fahrenheit>	Set temperature unit

Example 1:

To display general configuration of environment sensor

CyberPower > **envcfg show**

Name	Location	Temperature(F) [HTH LTH HYS CAG]	Humidity(%RH) [HTH LTH HYS CAG]
1 Name1	Location1	[158 33 3 18]	[80 50 5 20]
2 Name2	Location2	[158 33 3 18]	[80 50 5 20]

*HTH = High Threshold *LTH = Low Threshold

*HYS = Hysteresis *CAG = Change Rate(per 5min)

Example 2:

To set accessory#1's name as envirname1

CyberPower > **envcfg index 1 name envirname1**

Example 3:

To set high temperature threshold of the accessory#1 at 70

CyberPower > **envcfg index 1 temphthres 70**

Example 4:

To reset maximum and minimum record of accessory#1 temperature

CyberPower > **envcfg index 1 maxminreset temp**

Example 5

To set temperature unit as celcius

CyberPower > **envcfg unit celcius**

contactsta

Description: Show contact status.

Option	Argument	Description
show		Show status of contact.
index	1 2 3 ... 8	Select contact index.

Example 1:

To display general status of contact

CyberPower > **contactsta show**

	name	name	name	name	status
	contact1	contact2	contact3	contact4	[#1 #2 #3 #4]
-----	-----	-----	-----	-----	-----
1	contact1-1	contact1-2	contact1-3	contact1-4	[X X X X]
2	contact2-1	contact2-2	contact2-3	contact2-4	[X X X X]

*0 = Normal *X = Abnormal

contactcfg

Description: Show and set contact configuration.

Option	Argument	Description
show		Show configuration of contact.
index	1 2 3 ... 8	Select contact index.
contact1name	<contact name>	Set contact 1 name.
contact1state	<open closed>	Set contact 1 state
contact2name	<contact name>	Set contact 2 name.
contact2 state	<open closed>	Set contact 2 state
contact3name	<contact name>	Set contact 3 name.
contact3 state	<open closed>	Set contact 3 state
contact4name	<contact name>	Set contact 4 name.
contact4 state	<open closed>	Set contact 4 state

Example 1:

To display general configuration of contact
CyberPower > **contactcfg show**

Example 2:

To set envirsensor#1's contact 2 name as contact1-2
CyberPower > **contactcfg index 1 contact2name contact1-2**

clear

Description: Clear the console screen

exit

Description: Close the connection to the command line interface.

Save and Restore Configuration Settings

Option 1: via Web interface

You can easily save and restore the device configuration to your local PC on **System > About**.

The screenshot shows the PDU Remote Management web interface. The top navigation bar includes links for Summary, PDU, Envir, Log, System (highlighted), and Help. The left sidebar lists menu items: General, Security, Network Service, Notification, Reset/Reboot, and About (highlighted). The main content area is titled 'About' and contains a table of device information:

Information	
Model	PDU81001
Serial Number	123456789011
Hardware Version	1.1
Firmware Version	1.3.2
Firmware Update Date	2023-11-16
MAC Address	00-0C-15-40-50-72

Below the table is the 'Save/Restore Configuration' section, which is highlighted with a red box. It contains the following controls:

- Save Configuration button with a 'Save' button next to it.
- Restore Configuration button with a 'Select File' button next to it.
- A 'Submit' button at the bottom of the section.

Below this section is the 'Diagnostic Information' section, which includes a 'Save Information' button with a 'Save' button next to it.

To save the configuration file, click “Save” to save the configuration to your local PC. The text file will have a default format of YYYY_MM_DD_HHMM.txt. To restore configuration, click “Browse” to the location of the saved configuration file and click “Submit” to restore a configuration that has been saved earlier.

Option 2: via File Transfer Protocol (FTP)

Note: Only firmware version 1.2.6 and above supports the functionality to download configuration file via FTP.

Use the following steps to save configuration via FTP.

1. Open a command prompt window and navigate to “C:\”.

2. Login to the PDU/ATS with FTP command, type
 - C:\>ftp
 - ftp> open 192.168.22.126 21 (for example: 192.168.22.126 is the current IP of the PDU/ATS and 21 is the default ftp port for the PDU/ATS)
 - Connected to 192.168.22.126.
 - 220 CyberPower FTP Server Ready.
 - User (192.168.22.126:(none)):cyber
 - 331 User name okay, need password.
 - Password:
 - 230 User logged in, proceed.
 - ftp>
3. Download the configuration file, type
 - ftp> get <filename>
4. Download is complete, type
 - ftp> quit

Note: <filename> is the configuration file with format of .TXT. Maximum length of filename is 32 characters, excluding the file extension(.TXT).

For example:

```
-ftp> get YYYY_MM_DD_HHMM.txt
```

YYYY_MM_DD_HHMM.txt is the configuration file to be saved.

Use the following steps to restore configuration via FTP.

1. Open a command prompt window and navigate to "C:\".
2. Login to the PDU/ATS with FTP command, type
 - C:\>ftp
 - ftp> open 192.168.22.126 21 (for example: 192.168.22.126 is the current IP of the PDU/ATS and 21 is the default ftp port for the PDU/ATS)
 - Connected to 192.168.22.126.
 - 220 CyberPower FTP Server Ready.
 - User (192.168.22.126:(none)):cyber
 - 331 User name okay, need password.
 - Password:
 - 230 User logged in, proceed.
 - ftp>
3. Upload the configuration file, type

- ftp> put <filename>
- 4. Upload is complete, type
- ftp> quit
- 5. The system will reboot after you type "quit".

Option 3: Use Secure Copy (SCP) command

Use the following steps to restore configuration via SCP.

Note: Only firmware version 1.1.2 and above supports the functionality to restore configuration via SCP.

For Windows Users:

1. Download any PuTTY Secure Copy client (PSCP) utility.
2. Save the configuration file and the PSCP Utility in the same folder.
3. Open the Command Line Interface and change the path to where the configuration file and the PSCP Utility are saved.
4. Enter the following command to restore configuration:

```
pscp -scp <filename> <user>@<IP address of PDU/ATS>:
```

Note:

- (1) The SSH setting on the PDU/ATS must be Enabled.
- (2) <filename> is the filename of the configuration file with a default format of YYYY_MM_DD_HHMM.txt.
- (3) <user> is the username of the SSH account on the PDU/ATS.
- (4) Ensure to add ":" after the IP address.

For example:

```
pscp -scp YYYY_MM_DD_HHMM.txt cyber@192.168.1.100:
```

Note: YYYY_MM_DD_HHMM.txt is the configuration file to be restored.

5. After executing the command, a message may appear asking if you trust the host. To continue type "y" for yes within 10 seconds.
6. On the next screen enter the PDU/ATS password. Please wait until the progress indicator displays 100%. The system will automatically log out and reboot after the transfer is complete.

For Linux, MacOS and Unix Users:

1. Install the related distribution of an SSH or SCP client, for example OpenSSH client.
2. Open the Terminal and change the path to where the configuration files are saved.

3. Enter the following Command to restore configuration:

```
scp <filename> <user>@< IP address of PDU/ATS>:
```

Note:

- (1) The SSH setting on the PDU/ATS must be Enabled.
- (2) <filename> is the filename of the configuration file with a default format of YYYY_MM_DD_HHMM.txt.
- (3) <user> is the username of the SSH account on the PDU/ATS.
- (4) Ensure to add “:” after the IP address.

For example:


```
scp YYYY_MM_DD_HHMM.txt cyber@192.168.1.100:
```

Note: YYYY_MM_DD_HHMM.txt is the configuration file to be restored.

4. After executing the command, a message may appear asking if you trust the host. To continue type "y" for yes within 10 seconds.
5. On the next screen enter the PDU/ATS password. Please wait until the progress indicator displays 100%. The system will automatically log out and reboot after the transfer is complete.

PDU/ATS Network Daisy Chain

The daisy-chain function allows up to four PDU/ATSs to be connected together to be monitored and controlled from one IP address.

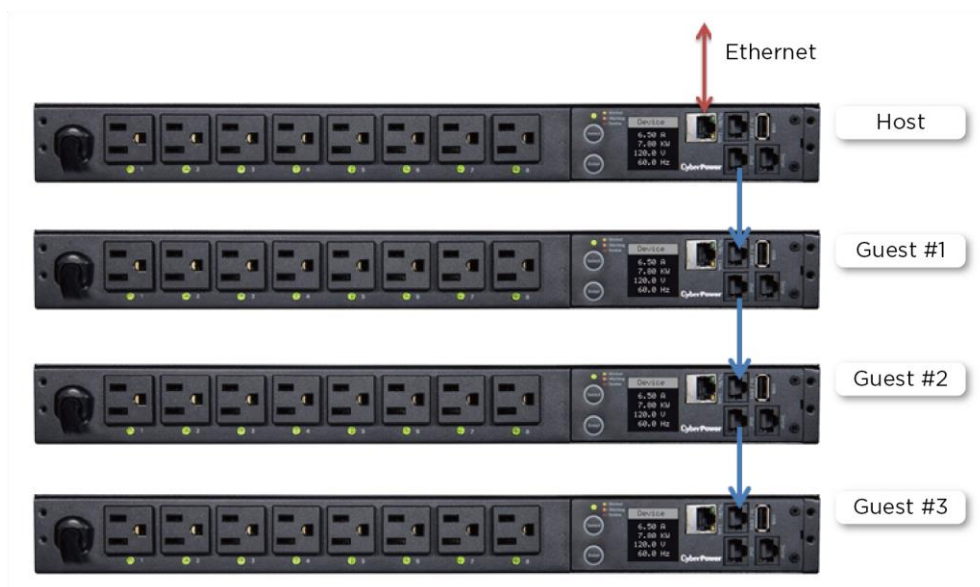


When PDU/ATSs are connected, two roles are defined: Host and Guest. Up to three Guest PDU/ATSs can be connected to one Host PDU/ATS. The Guest PDU/ATSs will be recognized by serial number and their order within the daisy-chain.

Note: To perform the daisy-chain function, the firmware version of the connected PDU/ATSUs needs to be the same (v1.08 or above).

How to connect the PDU/ATSs together?

Use one Ethernet cable and connect one end of it to the daisy-chain (Out) port on the Host PDU and the other end to the daisy-chain (In/ENV) port on the Guest 1 PDU/ATS to connect the PDU/ATSs (as shown below).

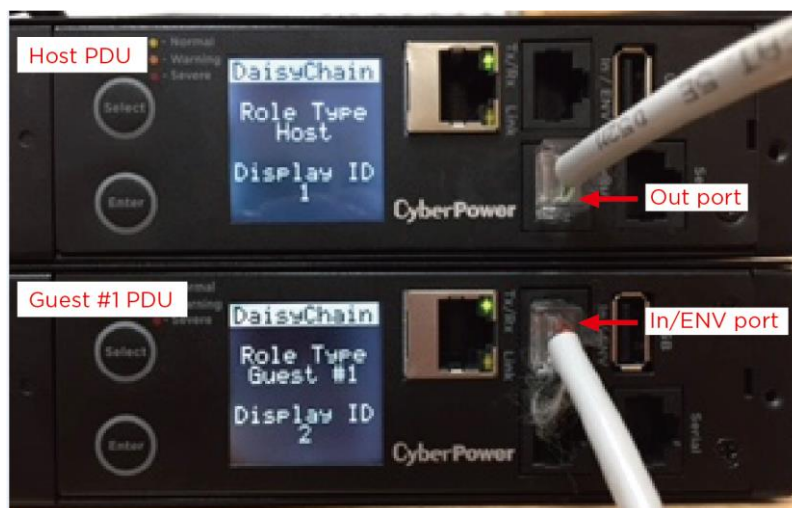

What remote management protocols are supported in PDU/ATSU daisy-chains?

Currently users can monitor and control daisy-chained PDU/ATSs through Web interface (HTTP/HTTPS) or SNMP protocols.

What functions on the Web pages does daisy-chain support?


Please find in below table:

Summary	
PDU/ATS	Device Status
	Outlet Status
	Source Manager*
	Device Manager
	Bank Manager
	Outlet Manager
	Outlet Control
	Outlet Schedule
Log	Status Records
	Energy Records
	Graphing
System	Identification

*For ATS Series Only

How to switch between Host and Guest PDU/ATSs on the Web interface?

Functionality supported by daisy-chained PDU/ATSs will have the Host/ Guest # drop down menu displayed on the Web interface (as shown below).

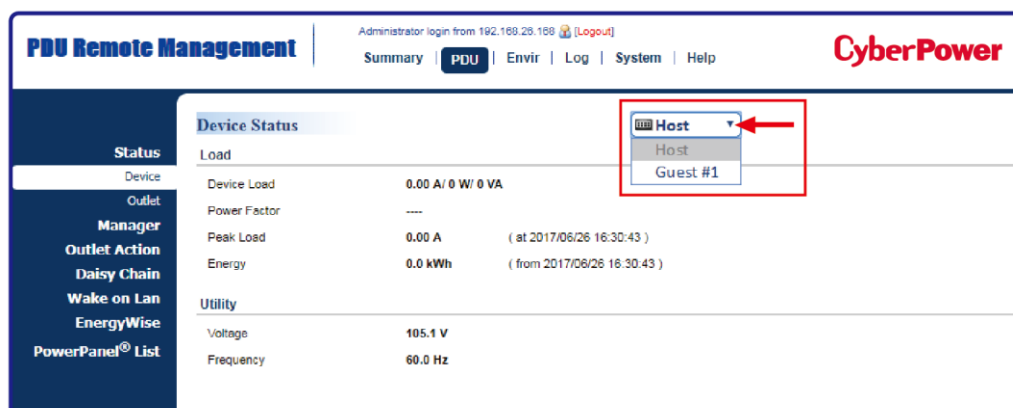


Can I upgrade the firmware version of the Guest PDU/ATSs through the Host PDU/ATS?

Yes, you can upgrade the firmware using the Power Device Network Utility 2, FTP (network connection required), or USB port. Once the Host completes the PDU/ATS firmware upgrade, it will trigger its Guest PDU/ATSs to upgrade the firmware automatically. It takes about 5 minutes for the Guest PDU/ATSs to upgrade, regardless of the number of PDU/ATSs in the series.

What will happen if an Ethernet cable is disconnected in the PDU/ATS daisy-chain?

For example, if four PDU/ATSs are connected and the cable connecting Guest 1 and 2 is disconnected, then Guest 2 and 3 will no longer be detected by the Host PDU/ATS.

An event showing that Guest 2 and 3 are removed will be recorded in the Host PDU/ATS. Meanwhile, Guest 2 and 3 will create a new daisy-chain where Guest 2 becomes a Host and Guest 3 becomes Guest 1 to the new Host.

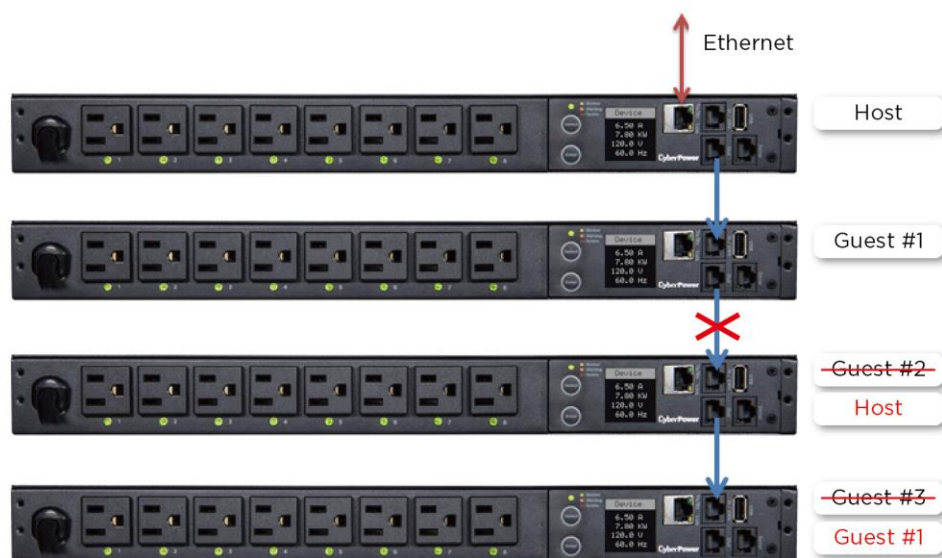

In the above example, if the disconnected Ethernet cable is re-connected, will the role of the PDU/ATSs stay the same?

Yes, when the disconnected cable between Guest 1 and 2 is re-connected, Guest 2 and 3 will revert to their previous roles.

What happens if one PDU/ATS in the daisy-chain is powered off?

For example, if four PDU/ATSs are connected and Guest 1 is powered off, an event showing that Guest 1, 2 and 3 are removed will be recorded in the Host PDU/ATS. Guest 2 and 3 will not create another daisy-chain.

Does the Host PDU/ATS record the logs of the Guest PDU/ATSs and itself?

Yes, the Host PDU/ATS records the logs from all Guest PDU/ATSs daisy-chained to it.

Will the Logs of the Guest PDU/ATSs recorded in the Host PDU/ATS be cleared if the Guest PDU/ATSs are removed from the Host PDU/ATS?

No, the Logs of the Guest PDU/ATSs will remain even after the Guest PDU/ATSs are removed.

Does the Host PDU/ATS record the Status Records of the Guest PDU/ATSs and itself?

Yes, the Host PDU/ATS records the Status Records for all the PDU/ATSs in the daisy-chain.

Will the Status Records of the Guest PDU/ATSs logged in the Host PDU/ATS be cleared if the Guest PDU/ATSs are disconnected from the Host PDU/ATS?

Yes, once the Guest PDU/ATSs are removed, the Status Records logged in the Host PDU/ATS will be cleared. As long as the Host PDU/ATS does not connect to other PDU/ATS s, the Status Records of the disconnected PDU/ATS can be displayed when it is re-connected to the Host PDU/ATS. If the Host PDU/ATS connects to different PDU/ATS s, the Status Records of the removed PDU/ATS will be entirely cleared.

Are the Guest PDU/ATS s able to connect to the network when they are daisy-chained?

Yes, even when the PDU/ATS s are daisy-chained, the Guest PDU/ATS s are able to connect to the network directly. Note that a Guest PDU/ATS will require having its own Ethernet cable connected to the network.

What will happen if a 5th PDU/ATS is added to a daisy-chain?

The maximum number of PDU/ATS s that can be connected in one daisy-chain is 4. The daisy-chain functionality will not work until the fifth PDU/ATS is removed.

What is the maximum recommended length of the Ethernet cable to daisy-chain the PDU/ATS s?

50 ft (15 m)

Troubleshooting

Problem	Possible Cause	Solution
The PDU/ATS s are connected but the daisy chain function is not working.	<ul style="list-style-type: none"> -The firmware version does not support daisy chain. -The PDU/ATS s have different firmware version. 	Check the firmware version of each PDU/ATS and upgrade to v1.08 or above.
I cannot set the EnergyWise configuration for Guest PDU/ATS s.	Only the Host PDU/ATS supports this function.	N/A
I cannot set the WoL for Guest PDU/ATS s.	Only the Host PDU/ATS supports this function.	N/A

Firmware Upgrade

By upgrading the Firmware, you can obtain new features and updates/improvements to existing functionality. To ensure the firmware is kept up to date, please regularly visit our website to see if there is any updated firmware version available. There are three methods for upgrading the PDU/ATS firmware. Please follow the instructions below for the method that is appropriate for your application.

There are two files to update in order to upgrade the firmware version:

- * cpsmpdumadata_XXX.bin
- * cpsmpdumafw_XXX.bin

Note that the XXX is not part of the file name but is where the version number in the filename is given.

Prior to performing a firmware update, please:

- Download the latest firmware from www.cyberpower.com
- Extract the downloaded firmware file to your local "C:\\" drive

Note:

1. The FTP service needs to be enabled before attempting to execute a firmware upgrade. Please refer to 5.7 FTP Service to make sure that FTP is enabled.
2. Please do not turn the PDU/ATS off when processing the Firmware upgrade. PDU/ATS outlets will remain powered on while the firmware update takes place. Only the PDU/ATS LCD screen will reboot.
3. The PDU/ATS LCD screen will reboot during the firmware update process. This DOES NOT cause the PDU/ATS outlets to reboot.

Option 1: Single Device Upgrade via FTP

Use the following steps to upgrade the firmware.

1. Open a command prompt window and navigate to "C:\\".
2. Login to the PDU/ATS with FTP command, type
 - C:\>ftp
 - ftp> open 192.168.22.126 21 (for example: 192.168.22.126 is the current IP of the PDU/ATS and 21 is the default ftp port for the PDU/ATS)
 - Connected to 192.168.22.126.
 - 220 CyberPower FTP Server Ready.
 - User (192.168.22.126:(none)):cyber
 - 331 User name okay, need password.
 - Password:
 - 230 User logged in, proceed.
 - ftp>

3. Upload the cpsmpdumadata_XXX.bin, type
 - ftp > bin
 - ftp > put cpsmpdumadata_XXX.bin
4. Upgrade complete, type
 - ftp > quit
5. The system will reboot after you type "quit". This reboot will take approx. 30 seconds.
6. Login to the PDU/ATS via FTP again, type
 - C:\>ftp
 - ftp> open 192.168.22.126 21 (for example: 192.168.22.126 is the current IP of the PDU/ATS and 21 is the default ftp port for the PDU/ATS)
 - Connected to 192.168.22.126.
 - 220 CyberPower FTP Server Ready.
 - User (192.168.22.126:(none)):cyber
 - 331 User name okay, need password.
 - Password:
 - 230 User logged in, proceed.
 - ftp>
7. Upload cpsmpdumafw_XXX.bin, type
 - ftp > bin
 - ftp > put cpsmpdumafw_XXX.bin
8. Upgrade complete, type
 - ftp > quit
9. The system will reboot after you type "quit".

Option 2: Single or Multiple Device Upgrade (recommended)

Use the following steps to upgrade the firmware.

1. Install the **Power Device Network Utility 2** available for download at www.cyberpower.com
2. After installation completes, run the **Power Device Network Utility 2**.
3. Wait for scanning to finish (shown in Figure 1).

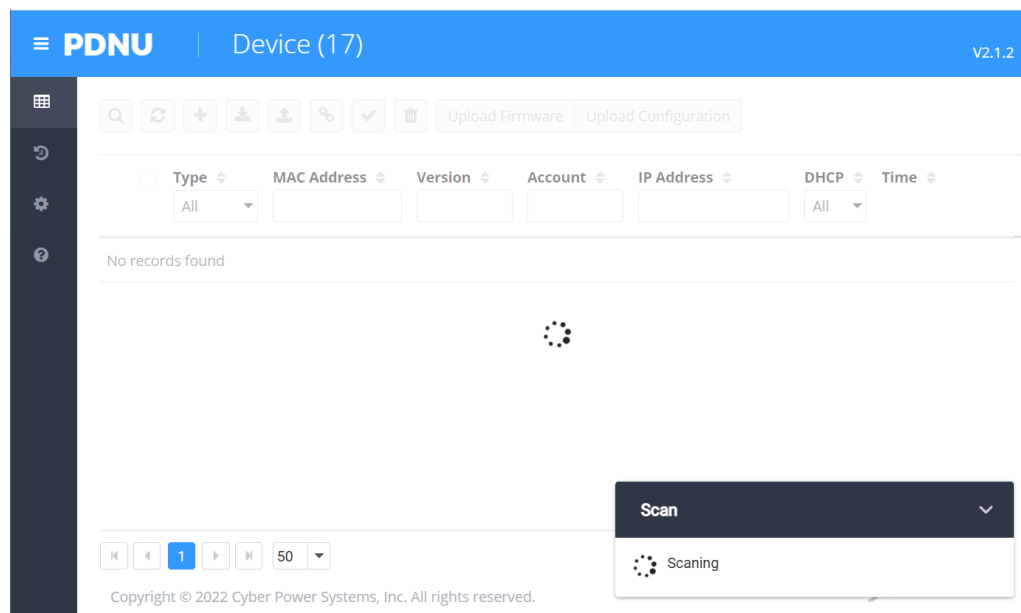


Figure 1.

4. Check the checkbox to select devices listed in the **Operation View** (Shown in Figure 2).

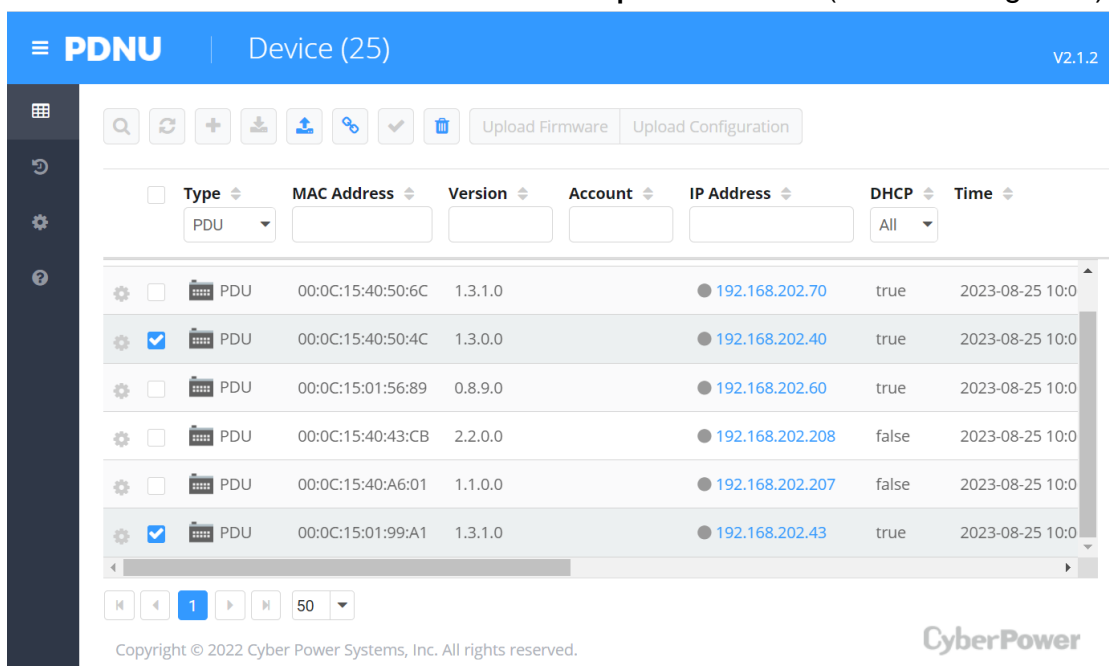


Figure 2

5. Make sure **Account** and **Password** are valid on selected devices (Shown in Figure 3).

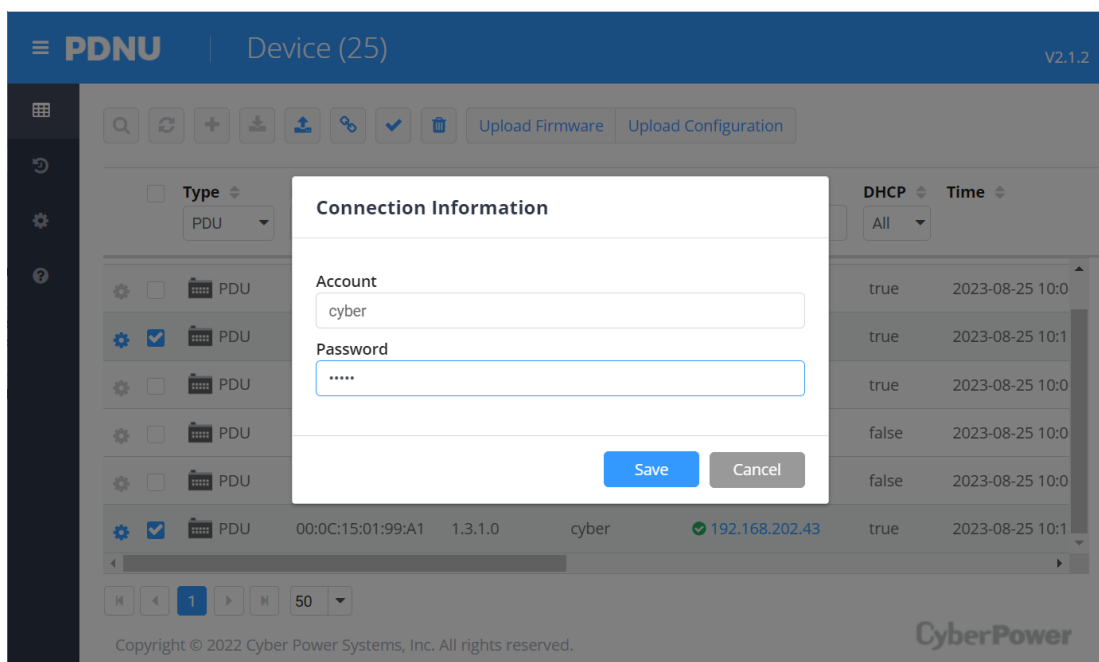


Figure 3.

6. Select **Upload Firmware**.

7. Click **Browse** to locate and select the firmware and data file to be updated and then click **OK** (Shown in Figure 4).

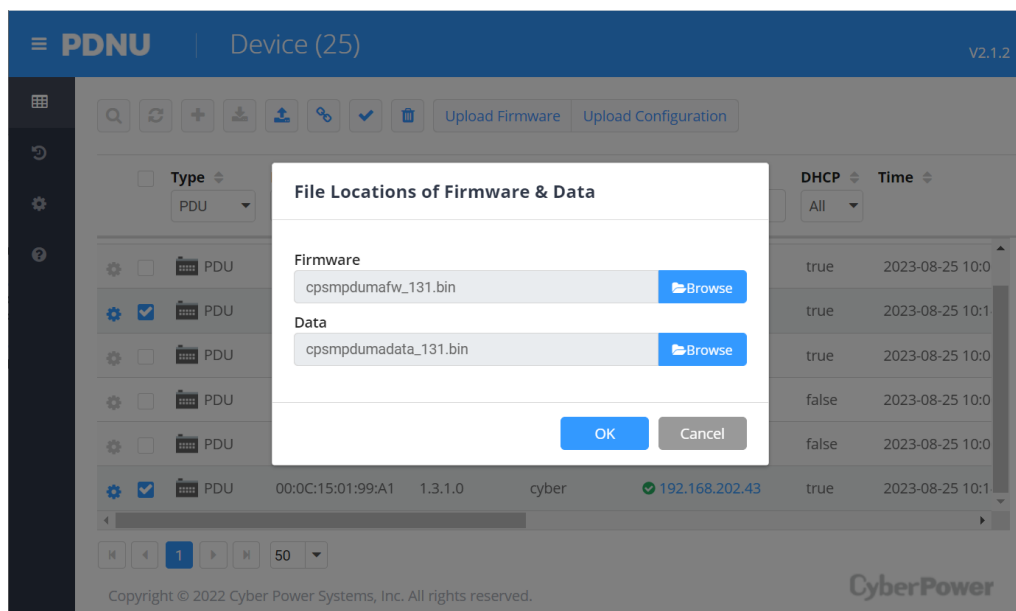


Figure 4.

8. The upgrade progress bar will show in the lower right **Upload Firmware** window (Shown in Figure 5).

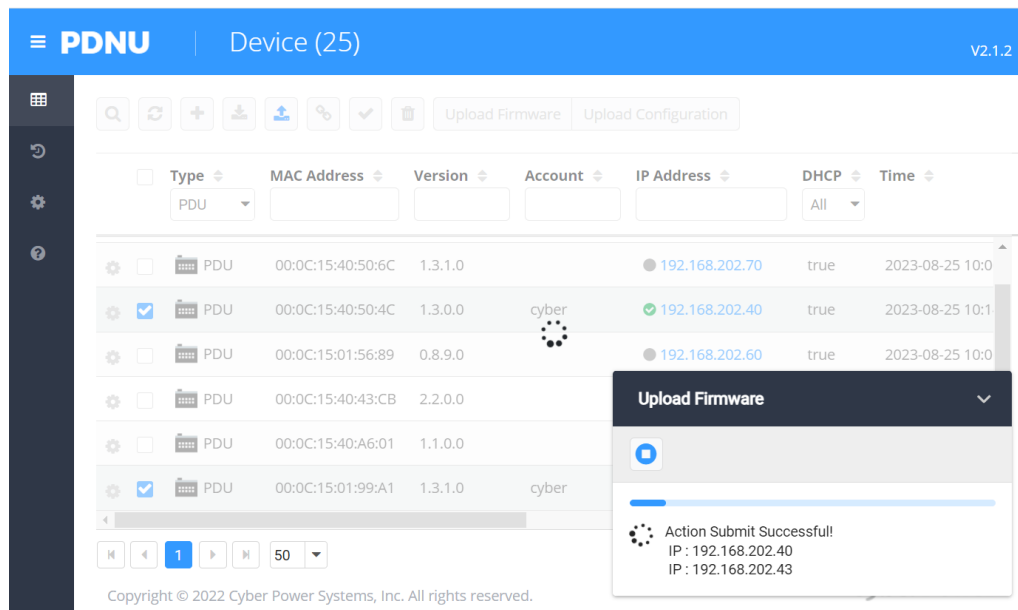


Figure 5.

9. The result of firmware upgrade will show in **Result** column (Shown in Figure 6).

The screenshot displays the PDNU Device (25) interface. At the top, there is a blue header with the PDNU logo and the text 'Device (25)' and 'v2.1.2'. Below the header, there is a sidebar with navigation icons. The main area contains a table of devices with columns: Type, MAC Address, Version, Account, IP Address, DHCP, Time, Result, and Up T. The table lists several PDU devices with their respective MAC addresses, versions, accounts, IP addresses, DHCP settings, times, and results. The results show 'power device search successful' and 'power device firmware upgrade successful'.

Type	MAC Address	Version	Account	IP Address	DHCP	Time	Result	Up T
PDU	00:0C:15:40:72:29	1.3.0.0		192.168.202.93	false	2023-08-25 10:06:14	power device search successful	6...
PDU	00:0C:15:40:50:6C	1.3.1.0		192.168.202.70	true	2023-08-25 10:06:14	power device search successful	0...
PDU	00:0C:15:40:50:4C	1.3.1.0	cyber	192.168.202.40	true	2023-08-25 10:14:23	power device firmware upgrade successful	0...
PDU	00:0C:15:01:56:89	0.8.9.0		192.168.202.60	true	2023-08-25 10:06:14	power device search successful	0...
PDU	00:0C:15:40:43:CB	2.2.0.0		192.168.202.208	false	2023-08-25 10:06:14	power device search successful	0...
PDU	00:0C:15:40:A6:01	1.1.0.0		192.168.202.207	false	2023-08-25 10:06:14	power device search successful	0...
PDU	00:0C:15:01:99:A1	1.3.1.0	cyber	192.168.202.43	true	2023-08-25 10:14:19	power device firmware upgrade successful	0...

At the bottom of the interface, there is a pagination bar showing '1' of 50 items. The footer includes the copyright notice 'Copyright © 2022 Cyber Power Systems, Inc. All rights reserved.' and the CyberPower logo.


Figure 6.

Note: If you don't want to wait for the firmware upgrade, you can stop the process by clicking **Cancel** in the lower right **Upload Firmware** window. However, this is not recommended because the **Cancel** action may cause the device to malfunction.



Option 3: Use a USB Flash Drive

Use the following steps to upgrade the firmware.

1. Download the latest firmware from www.cyberpower.com
2. Extract the file to the root directory of a USB flash drive with **FAT32 formatting**. Please note that the two files below should be available in order to complete the firmware upgrade process:
 *cpsmpdumadata_xxx.bin
 *cpsmpdumafw_xxx.bin
3. Plug the USB drive into the PDU/ATS USB port and press **Enter** on the PDU/ATS LCD screen to enter **Main Menu**. The USB option will be displayed.

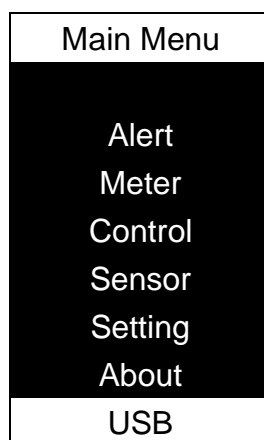

4. Select **USB** and press **Enter** button to enter **Firmware Upgrade** menu.
5. Select **Main** and **Yes** to start the upgrade process.

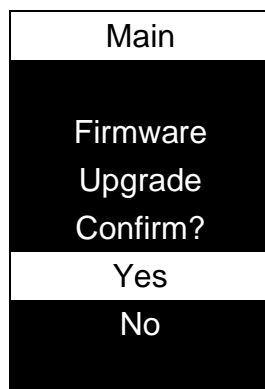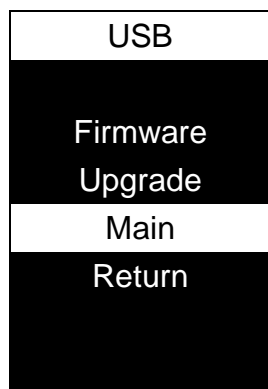

6. The PDU/ATS will reboot after the process is completed.

Note: You can check to see if the firmware upgrade is successful by checking the “Firmware version” on the [System->About] webpage. You can also check Firmware Version on LCD screen. Press **Enter** on the LCD screen to enter **Main Menu**. Select **About** and press **Enter** to see the PDU/ATS information. Select **Firmware Version** to check the PDU/ATS Firmware Version.

Option 4: Use Secure Copy (SCP) command

Use the following steps to update the firmware via SCP.

Note: Only firmware version 1.10 and above supports the functionality to update firmware via SCP.

For Windows Users:

1. Download any PuTTY Secure Copy client (PSCP) utility.
2. Save the firmware files and the PSCP Utility in the same folder.
3. Open the Command Line Interface and change the path to where the firmware files and the PSCP Utility are saved.
4. Enter the following command to perform the firmware update:

```
pscp -scp <filename> <user>@<IP address of PDU/ATS>:
```

Note:

- (5) The SSH setting on the PDU/ATS must be Enabled.
- (6) <filename> is the filename of the firmware file. There are two firmware files to upload: `cpsmpdumadata_XXX.bin` and `cpsmpdumafw_XXX.bin`. In order to upgrade the firmware version both files need to be uploaded. Only one firmware file can be uploaded at a time, it is recommended to upload the data file `cpsmpdumadata_XXX.bin` first followed by the firmware file `cpsmpdumafw_XXX.bin`.
- (7) <user> is the username of the SSH account on the PDU/ATS.
- (8) Ensure to add “:” after the IP address.

For example:

```
pscp -scp cpsmpdumafw_XXX.bin cyber@192.168.1.100:
```

Note: `cpsmpdumafw_XXX.bin` is the firmware file of the version being updated.

5. After executing the command, a message may appear asking if you trust the host. To continue type “y” for yes within 10 seconds.
6. On the next screen enter the PDU/ATS password. Please wait until the progress indicator displays 100%. The system will automatically log out and reboot after the transfer is complete.
7. Repeat steps 4 through step 6 to upload the firmware file `cpsmpdumafw_XXX.bin` to complete the firmware update process.
8. If the firmware file transfer is unsuccessful you will see an error message. Attempt to retype the command and execute it again.

For Linux, MacOS and Unix Users:

1. Install the related distribution of an SSH or SCP client, for example Openssh client.
2. Open the Terminal and change the path to where the firmware files are saved.
3. Enter the following Command to perform firmware update:

```
scp <filename> <user>@< IP address of PDU/ATS>:
```

Note:

- (1) The SSH setting on the PDU/ATS must be Enabled.
- (2) <filename> is the filename of the firmware file. There are two firmware files to upload: `cpsmpdumadata_XXX.bin` and `cpsmpdumafw_XXX.bin`. In order to upgrade the firmware version both files need to be uploaded. Only one firmware file can be uploaded at a time, it is recommended to upload the data file `cpsmpdumadata_XXX.bin` first followed by the firmware file `cpsmpdumafw_XXX.bin`.
- (3) <user> is the username of the SSH account on the PDU/ATS.
- (4) Ensure to add ":" after the IP address.

For example:

```
scp cpsmpdumafw_XXX.bin cyber@192.168.1.100:
```

Note: `cpsmpdumafw_XXX.bin` is the firmware file of the version being updated.

4. After executing the command, a message may appear asking if you trust the host. To continue type "y" for yes within 10 seconds.
5. On the next screen enter the PDU/ATS password. Please wait until the progress indicator displays 100%. The system will automatically log out and reboot after the transfer is complete.
6. Repeat steps 3 through step 5 to upload the firmware file `cpsmpdumafw_XXX.bin` to complete the firmware update process.
7. If the firmware file transfer is unsuccessful you will see an error message. Attempt to retype the command and execute it again.

Contact Information

Feel free to contact our Tech Support department with installation, troubleshooting, or general product questions.

Cyber Power Systems, Inc.

Web: www.cyberpower.com

For USA and Canada:

4241 12th Ave East, Suite 400 Shakopee, MN55379

Toll-free: (877) 297-6937

For all other regions:

Please visit our website for local contact information.