

# F29720

ADVENTURE BEND SWING SET




OBSTACLE FREE SAFETY ZONE - 35'-5 1/2" L x 24'-7" D x 16'-9" H (10.8 x 7.5 x/4.9 m) area requires Protective Surfacing. See page 4.


MAXIMUM VERTICAL FALL HEIGHT - 6' 6-3/4" (2 m).

CAPACITY - 10 Users Maximum, Ages 3 - 10; Weight Limit 110 lbs. (50 kg) per/child.

RESIDENTIAL HOME USE ONLY. Not intended for public areas such as multi/unit

residences, schools, churches, nurseries, day cares or parks.

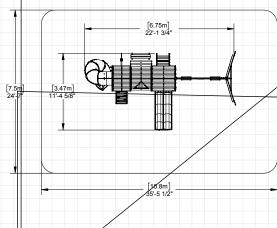

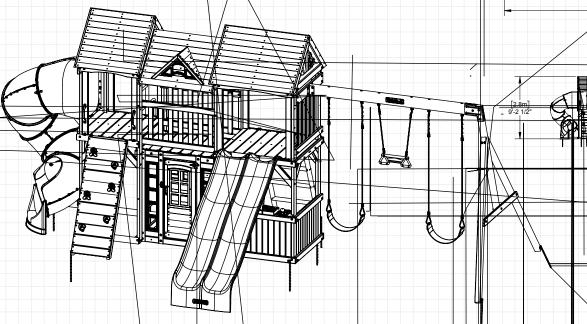

# INSTALLATION AND OPERATING INSTRUCTIONS

### FOR 24/7 ONLINE PARTS REPLACEMENT

### parts.kidkraft.com

KidKraft, Inc. 4630 Olin Road Dallas, Texas 75244 USA

customerservice@kidkraft.com

1.800.933.0771 972.385.0100

### parts.kidkraft.eu

KidKraft Netherlands BV Olympisch Stadion 8 1076 DE Amsterdam The Netherlands

europecustomerservice@kidkraft.com

+31 20 305 8620

M-F from 09:00 to 17:30 (GMT+1)

9409720

Rev 11/24/2023







### **AWARNING**

To reduce the risk of serious injury or death, please read and follow these instructions. Keep and refer to instructions as needed and pass along to any future owners of this item.

# Congratulations on purchasing a KidKraft product!

Our items are made of high-quality, durable Cunninghamia Lanceolata wood from the cypress family.

Lumber from these trees are known for their light weight and excellent strength. The porosity of this wood allows the moisture to absorb and evaporate in the fibers, resisting rot and bugs.

Engineered for great play, our products also go through extensive testing for safety.

Plus, our team has developed a series of proprietary methods for a simpler, more organized assembly. Less build time and more play time is our motto!

However, during assembly if you have any questions or concerns, please reach out. Our Customer Service can help with missing parts, instructions or maintenance.



### **Warnings and Safe Play Instructions**



**CONTINUOUS ADULT SUPERVISION REQUIRED.** Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.

# $\overline{m{\Lambda}}$

### **WARNING**

#### **SERIOUS HEAD INJURY HAZARD**

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 4 of these instructions.

#### **COLLISION HAZARD**

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

#### **CHOKING HAZARD/SHARP EDGES & POINTS**

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

#### WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

#### STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

#### TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).



## **WARNING** – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- ✓ Dress children with well fitting and full foot enclosing footwear.
- Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.

- Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- Do not allow children to walk, in front, between, behind or close to moving rides.
- Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- Do not let children get off rides while they are in motion.
- > Do not permit climbing on equipment when it is wet.
- Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- > Do not allow children to swing empty rides or seats.
- Do not allow children to go down slide head first or run up slide.



### AProtective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

#### Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2.45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1.5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1.22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

#### Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles


You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.


- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below of your play equipment.
- Check the protective surfacing frequently for wear.

#### Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 6 feet (1.8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1.8 m) in all directions.

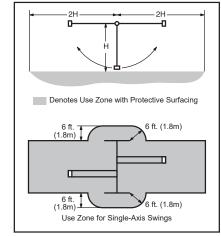

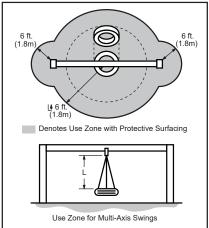

 $From the \ CPSC \ Outdoor \ Home \ Playground \ Safety \ Handbook. \ At \ http://www.playgroundregs.com/resources/CPSC\%20324.pdf$ 



### **Instructions for Proper Maintenance**

Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.


#### Check the following at the beginning of the play season:

#### HARDWARE:

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies DO NOT OVER-TIGHTEN as to cause crushing and splintering of wood.



✓ Check for sharp edges or protruding screw threads, add washers if required.



#### SHOCK ABSORBING SURFACING:

✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 4)

#### **GROUND STAKES (ANCHORS):**

✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary.

#### **SWING HANGERS:**

- ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®. SWINGS, ROPES AND RIDES:
- ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed.
- Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment.

#### WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.

#### Check twice a month during play season:

#### HARDWARE:

- ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. DO NOT OVER-TIGHTEN. This will cause splintering of wood.
- ✓ Check for sharp edges or protruding screw threads. Add washers if required.

#### SHOCK ABSORBING SURFACING:

✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 4)

#### Check once a month during play season:

#### SWING HANGERS:

- ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam.
- If squeaking occurs lubricate bushings with oil or WD-40®.

#### **SWINGS AND RIDES:**

✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage. Replace if structurally damaged or deteriorated.

#### Check at the end of the play season:

#### SWINGS AND RIDES:

✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.

#### SHOCK ABSORBING SURFACING:

✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 4)

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.



### **About Our Wood**

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

#### What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post  $4" \times 4"$  (101mm x 101mm) will experience more checking than a board  $1" \times 4"$  (25mm x 101mm) because the surface and interior moisture content will vary more widely than in

thinner wood.

- 2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
- 3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

#### How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.



### **KidKraft Limited Warranty**

#### MISSING OR DAMAGED PARTS:

KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig.1

Fig. 1 Product Age (All Parts) Consumer Pays

0-90 Days from date of purchase \$0 for Part + Free Shipping

#### **DEFECTS IN MATERIAL AND WORKMANSHIP:**

KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2 Product Age (All Parts) Consumer Pays

91 Days to 1 Year \$0 for Part + Free Shipping

#### WOOD ROT, DECAY, AND INSECT DAMAGE:

All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty.** See Fig. 3

Fig. 3 Product Age (Wood Parts) Consumer Pays

0 Days to 1 Year \$0 for Part + Free Shipping

After 1 Year to 5 Year \$0 for Part + Shipping & Handling

Over 5 Years 100% for Part (if available) + Shipping & Handling

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.

This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.



### **Battery Instruction and Warranty**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Please retain the information on this pack for future reference.

- Batteries should always be installed and changed under adult supervision.
- Non-Rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy and disposed of properly.
- The supply terminals are not to be short circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Be sure to insert new batteries with positive (+) side up.
- Rechargeable batteries are to be removed from the toy before being charged.
- EU Regulations require exhausted batteries to be separately collected so that they can be treated using the best available recovery and recycling techniques. This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space.
- Batteries or battery packs must be recycled or disposed of properly. When the batteries in this product have reached the end of their useful life, they should not be disposed of with other household waste.
- Please do your part by keeping waste batteries out of the municipal waste stream!

### **Supplier's Declaration of Conformity**

Unique Identifier: F29720

Party issuing Supplier's Declaration of Conformity Responsible Party - U.S. Contact Information KidKraft, Inc.

Aldkraft, Inc. 4630 Olin Road Dallas, Texas 75244 U.S.A. customerservice@kidkraft.com 1(800) 933-0771 / (972) 385-0100 FCC Compliance Statement (for products subject to Part 15)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.




### **Keys to Assembly Success**

#### **Tools Required**

- Tape Measure
- · Carpenters Level
- Carpenters Square
- Claw Hammer
- · Standard or Cordless Drill
- Rubber Mallet
- #1 Phillips, #2 Robertson and Screwdriver
- · Ratchet with extension 1/2" (13mm) & 7/16"(11 mm) sockets
- · Open End Wrench 1/2" (13mm) & 7/16"(11 mm)
- · Adjustable Wrench
- 1/8"(3mm) & 3/16"(5mm) Drill Bits
- 3/16"(5mm) Hex Key
- 8' (2.4m) Step Ladder
- Safety Glasses
- · Adult Helpers
- Pencil

#### Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.



#### **Symbols**

Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.



Use Where this is shown, 2 or 3 people Help

Help

Use

Measure

Distance



are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!

Check that assembly is square before tightening bolts.



Use a measuring tape to assure proper location.

Check that set or assembly is properly level

before proceeding.

Use Leve1

Pre-drill 1/8"(3mm) Bit



Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.





T-Nut

(Hammer into place) Do not crush wood!

This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.




### CAUTION – Protrusion Hazard


Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.


Proper Hardware Assembly Lag screws require drilling pilot holes to avoid splitting wood. Only a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.

For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" (8mm) is slightly larger than 1/4" (6.4mm).

Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.



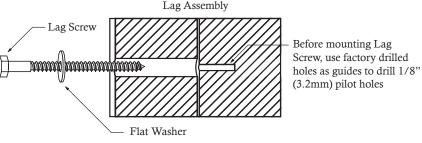


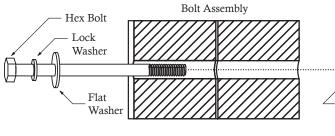




europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu

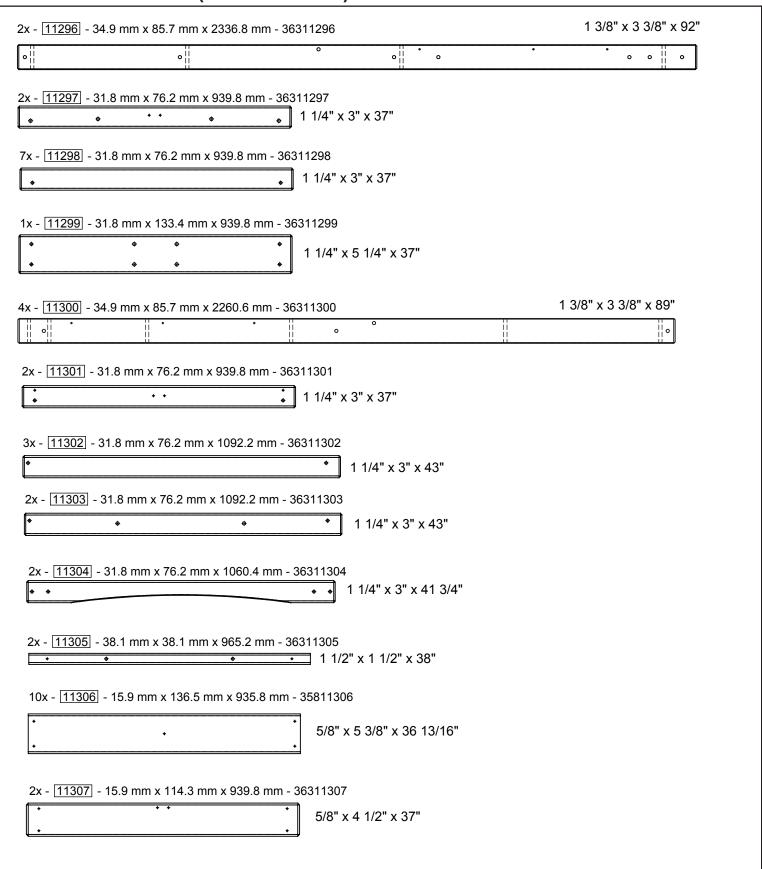



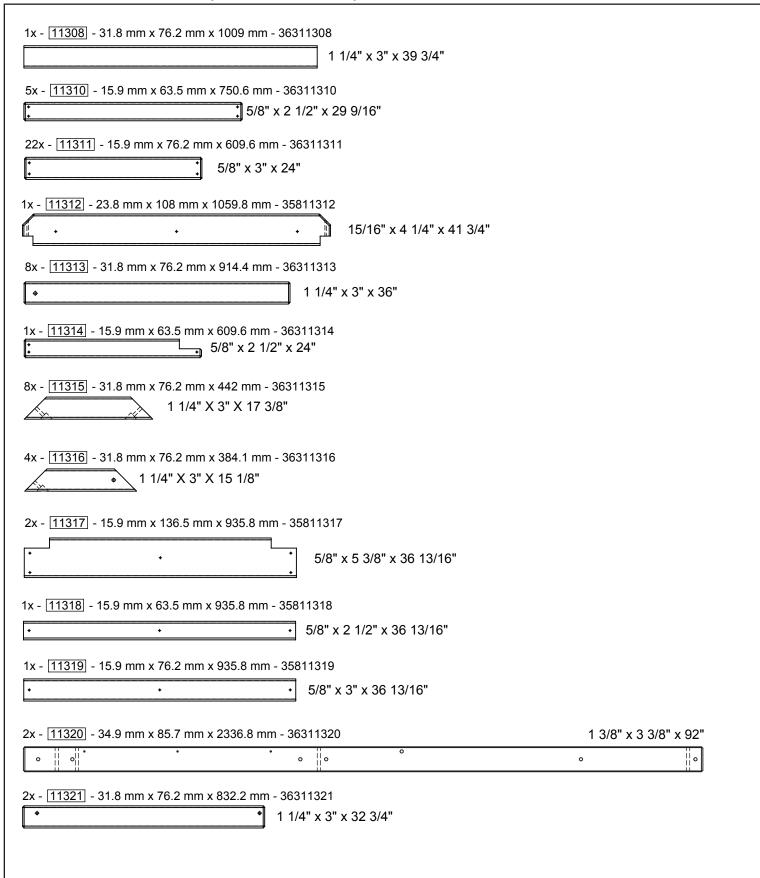




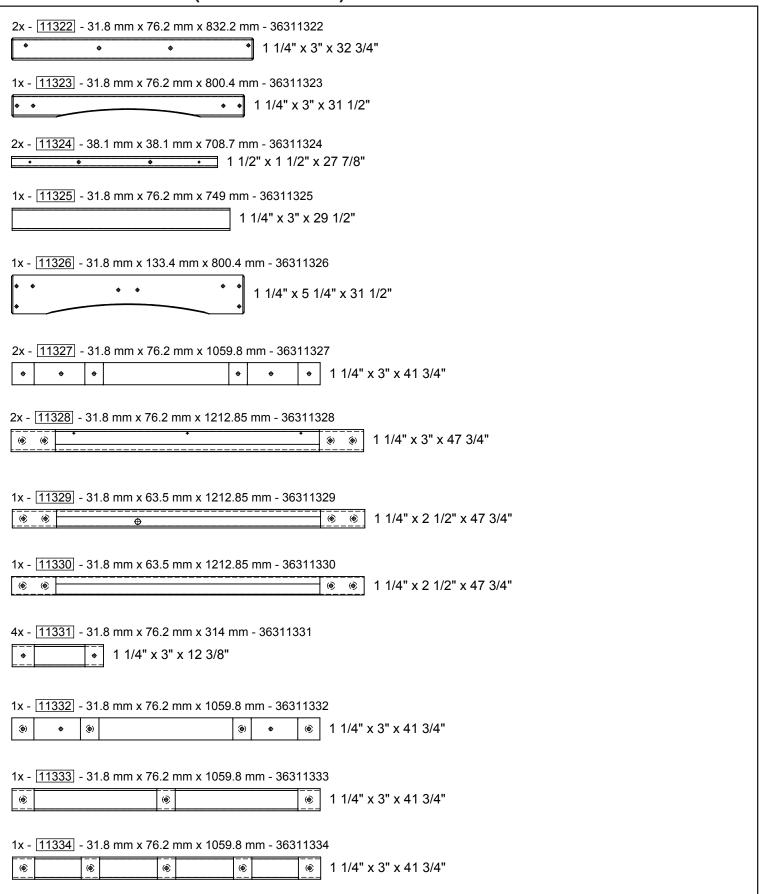




1x - 11335 - 15.9 mm x 63.5 mm x 609.6 mm - 36311335 ◆ 5/8" x 2 1/2" x 24" 5x - 11336 - 11.9 mm x 82.6 mm x 954 mm - 36311336 7/16" x 3 1/4 x 37 9/16" 2x - 11337 - 31.8 mm x 63.5 mm x 679 mm - 36311337 • 1 1/4" x 2 1/2" x 26 3/4" 4x - 11338 - 31.8 mm x 57.2 mm x 158 mm - 36311338 1 1/4" x 2 1/4" x 6 1/4" 1x - 11339 - 11.9 mm x 69.9 mm x 954 mm - 36311339 7/16" x 2 3/4" x 37 9/16" 1x - 11340 - 31.8 mm x 76.2 mm x 1059.8 mm - 36311340 1 1/4" x 3" x 41 3/4" 7x - 11341 - 15.9 mm x 136.5 mm x 700.8 mm - 35811341 5/8" x 5 3/8" x 27 9/16" 4x - 11342 - 31.8 mm x 76.2 mm x 1059.8 mm - 36311342 ● 1 1/4" x 3" x 41 3/4" 2x - 11343 - 38.1 mm x 38.1 mm x 1053.8 mm - 36311343 1 1/2" x 1 1/2" x 41 1/2" 14x - 11344 - 15.9 mm x 63.5 mm x 558.8 mm - 36311344 7 5/8" x 2 1/2" x 22" 2x - 11345 - 31.8 mm x 76.2 mm x 982 mm - 35811345 1 1/4" x 3" x 38 11/16" 8x - 11346 - 31.8 mm x 69.9 mm x 834.2 mm - 35811346 7 1 1/4" x 2 3/4" x 32 13/16" 2x - 11347 - 31.8 mm x 69.9 mm x 771.5 mm - 35811347 → 1 1/4" x 2 3/4" x 30 3/8"



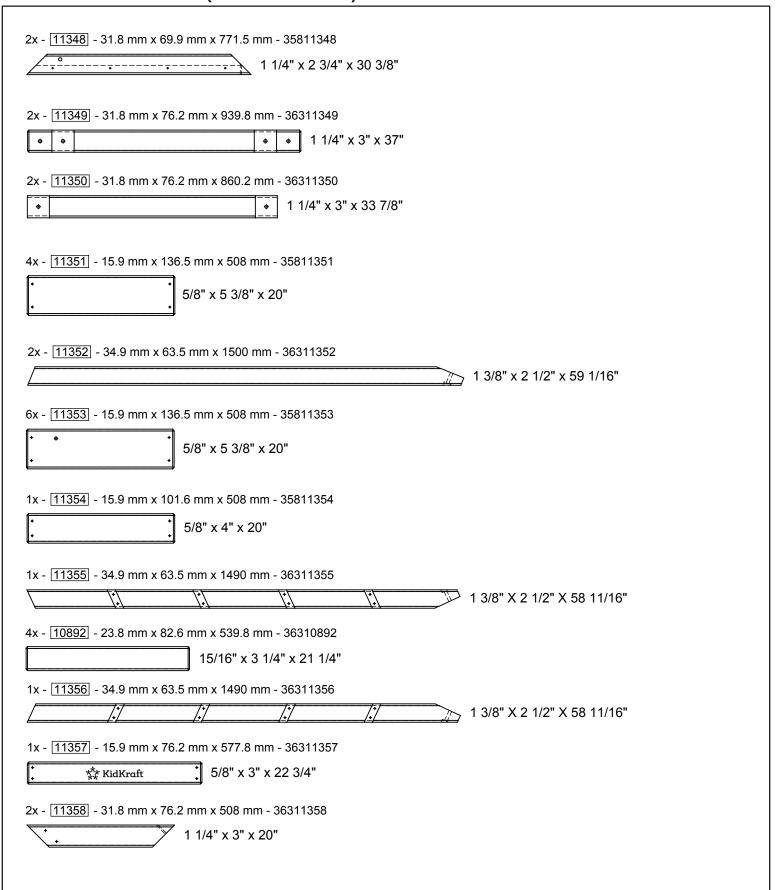




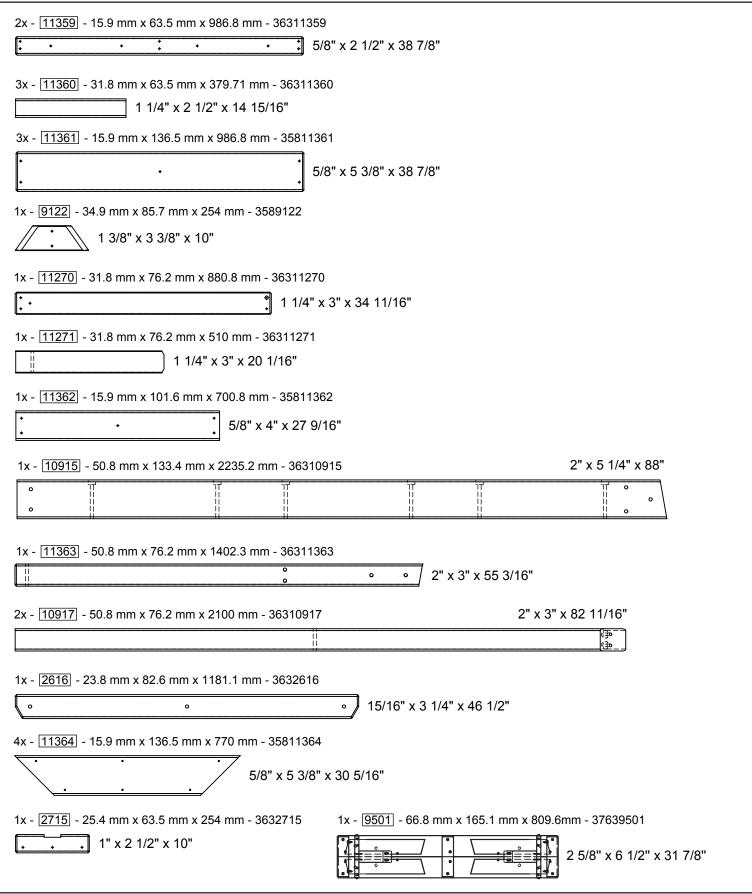

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu



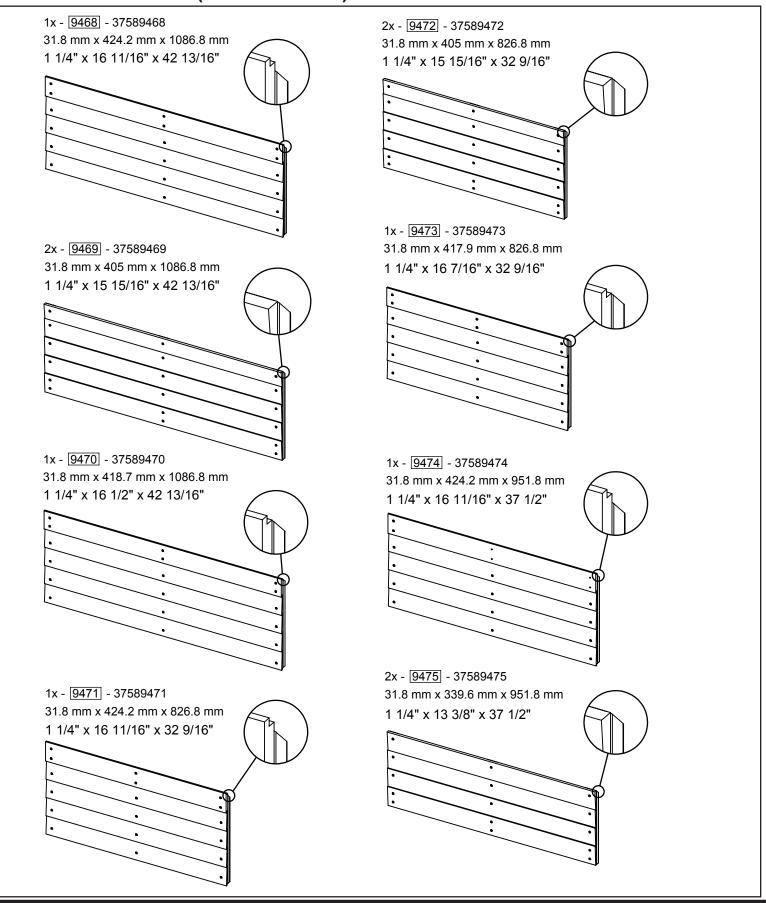





parts.kidkraft.com

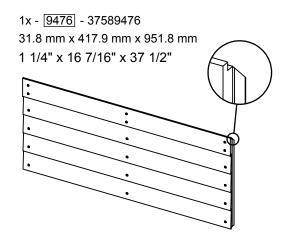


1x - 531 532 - 37588068 38.1 mm x 338.1 mm x 503.2 mm 1 1/2" x 13 5/16" x 19 13/16"

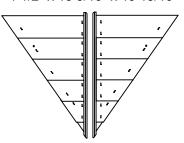


1x - 9477 - 37589477 31.8 mm x 400.1 mm x 1028.6 mm 1 1/4" x 15 3/4" x 40 1/2"




1x - 9478 - 37639478 31.8 mm x 76.2 mm x 1212.9 mm 1 1/4" x 3" x 47 3/4"



1x - 9479 - 37639479 31.8 mm x 76.2 mm x 1212.9 mm 1 1/4" x 3" x 47 3/4"



### **Hardware Identification (Actual Size)**

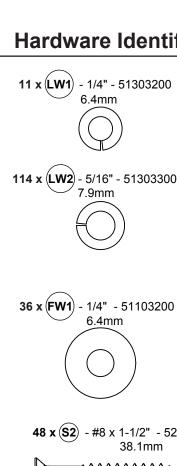









**6 x BN1** - 1/4" - 54803200 6.4mm



**114** x (**LW2**) - 5/16" - 51303300 **207** x (FW2) - 5/16" - 51103300 7.9mm 7.9mm



101 x TN2 - 5/16" - 54503300 7.9mm



66 x (LN1) - 1/4" - 54303200 6.4mm



6 x (FW0) - 3/16" - 51103100 4.8mm



**51** x (**LN2**) - 5/16" - 54303300 7.9mm



**48 x (S2)** - #8 x 1-1/2" - 52043512 38.1mm



**144 x (\$0)** - #8 x 7/8" - 52933505 **72 x (\$3)** - #8 x 2-1/2" - 52043522 22.2mm 63.5mm



**26** x (**S4**) - #8 x 3" - 52043530 76.2mm




- #8 x 2" - 52043520 50.8mm 

4 x (S18) - #6 x 1" - 52013910 25.4mm




**292** x (**S20**) - #8 x 1-3/8" - 52043516 34.9mm



**19** x (**S6**) - #12 x 1" - 52433610 25.4mm

8 x (S24) - #10 x 4" - 52043940




**58** x (**S7**) - #12 x 2" - 52433620 50.8mm




**23 x (S37)** - #7 x 5/8" - 52433009 15.9mm




101.6mm 






4 x (S38) - #7 x 1-1/8" - 52433014 28.6mm





parts.kidkraft.com

### **Hardware Identification (Actual Size)**

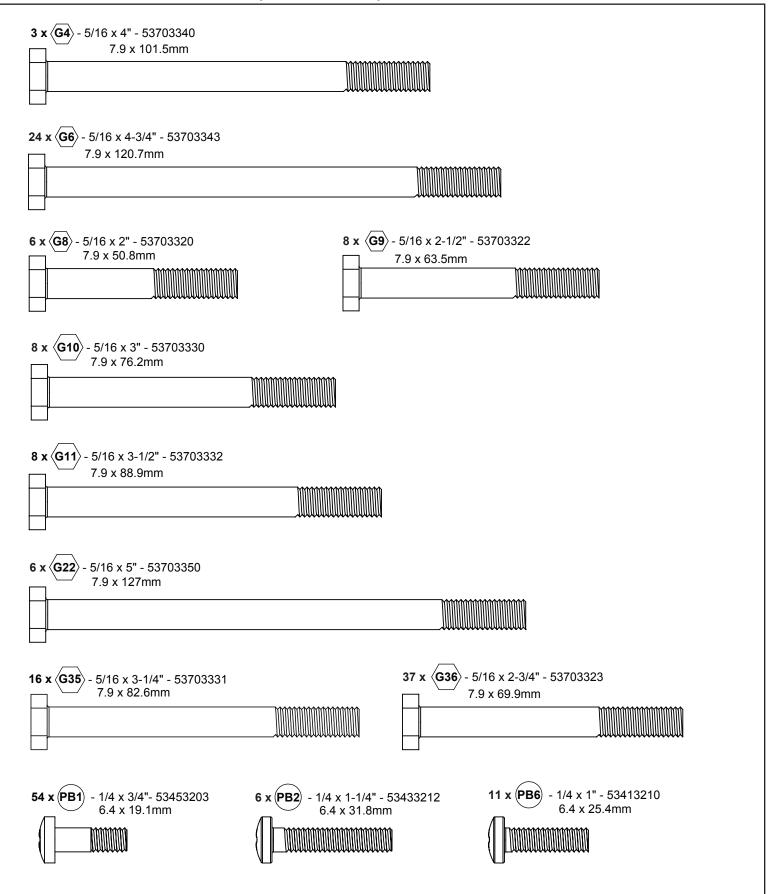



europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)


parts.kidkraft.eu




### **Hardware Identification (Actual Size)**

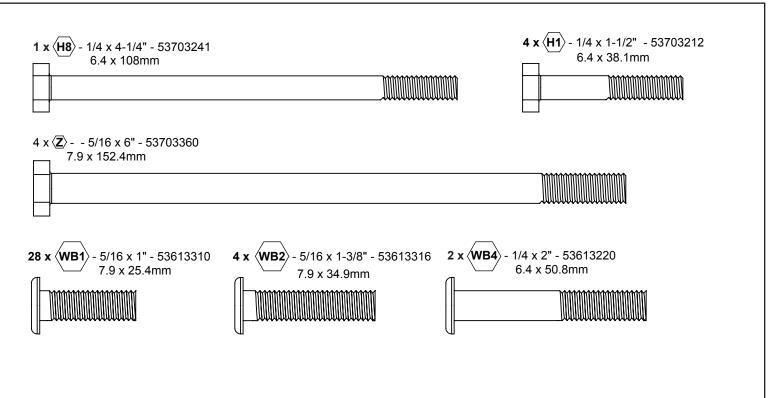










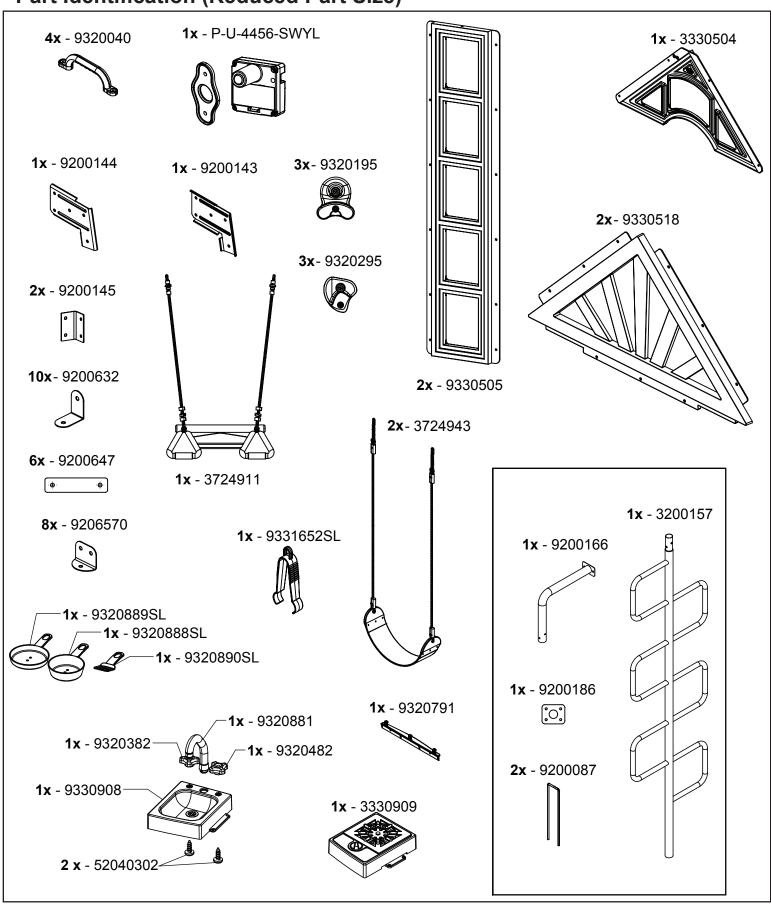

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu



**1x**- 9200158

**1x** - 9320374

20374








**8x** - 9290318

#### Included in hardware kit

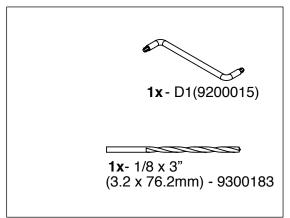


**1x**-(9200156)


**10x** - 9300130




9x - 3310121



1x - 3310131

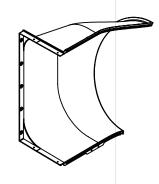

**1x** - 3310130

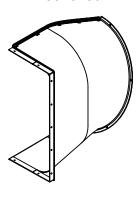


**2x**-(9200157)




**31x**- (54902200)



**1x** - 3310124

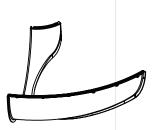

1x - 3310132

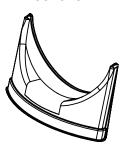


**30x**- (53453202)






parts.kidkraft.com

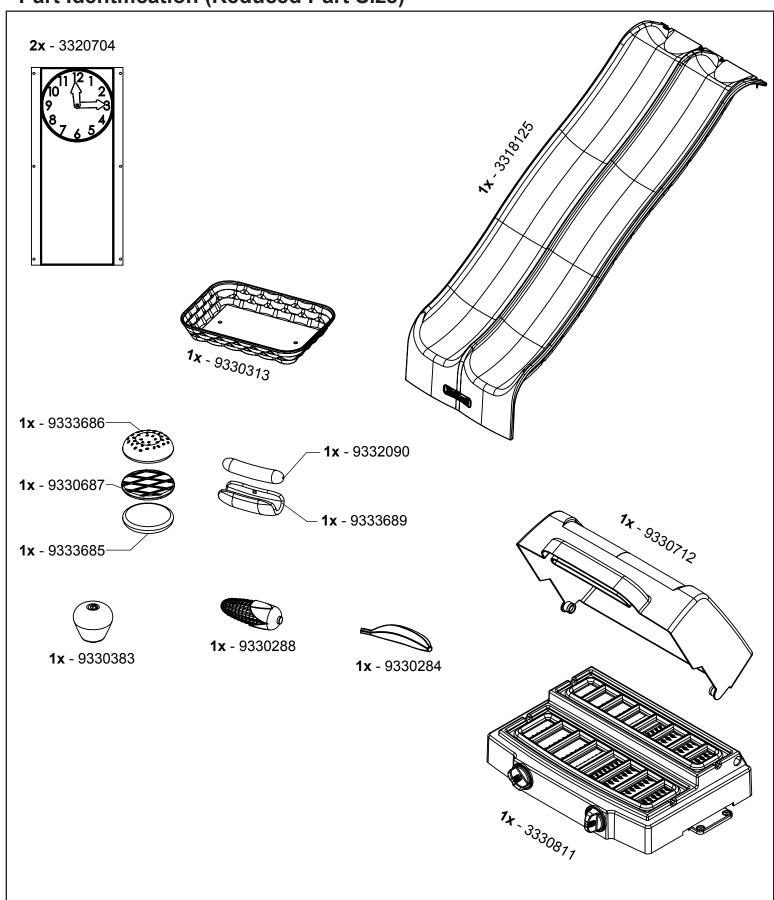






**Inventory Parts - Read This Before Starting Assembly** 

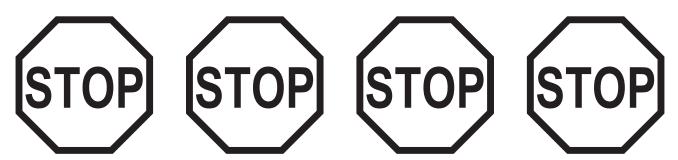

Inventory should be completed before starting installation. KidKraft will not cover costs of any additional installation trip due to missing or damaged pieces.

- **A.** This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.
  - The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.



**B.** Read the assembly manual completely, paying special attention to ANSI warnings; notes; and safety/maintenance information on pages 1 - 9.

If there are missing or damaged pieces, please contact the KidKraft Consumer Engagement team before going back to the retailer.

# Order Replacement Parts 24/7

You can order replacement parts for this product 24 hours a day / 7 days a week:

Outdoor Swingsets and Playhouse Parts Ordering https://parts.kidkraft.com/partsorderemail

If you have assembly or product questions, please refer to the front cover for direct contact information for our Consumer Engagement team OR you can also use this QR code with your smartphone for common questions and contact information.



KidKraft Help Center <a href="https://https://html.ncbi.nlm.ncbi.n

https://kidkraft.zendesk.com/hc/en-us/






### **Playhouse Walls**



Hammer T-Nuts into the hole.
Complete this step twice.

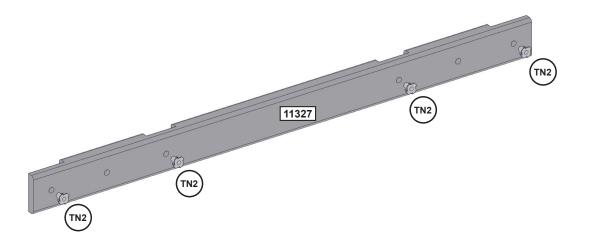

**Wood Parts** 

2 x 11327 31.8 mm x 76.2 mm x 1059.8 mm (1 1/4" x 3" x 41 3/4")

**Hardware** 


8 x (TN2)





Hammer T-Nuts into the hole. Complete this step four times.



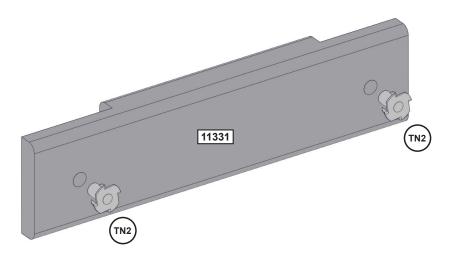


**Wood Parts** 

4 x 11331 31.8 mm x 76.2 mm x 314 mm (1 1/4" x 3" x 12 3/8")

**Hardware** 

8 x (TN2)



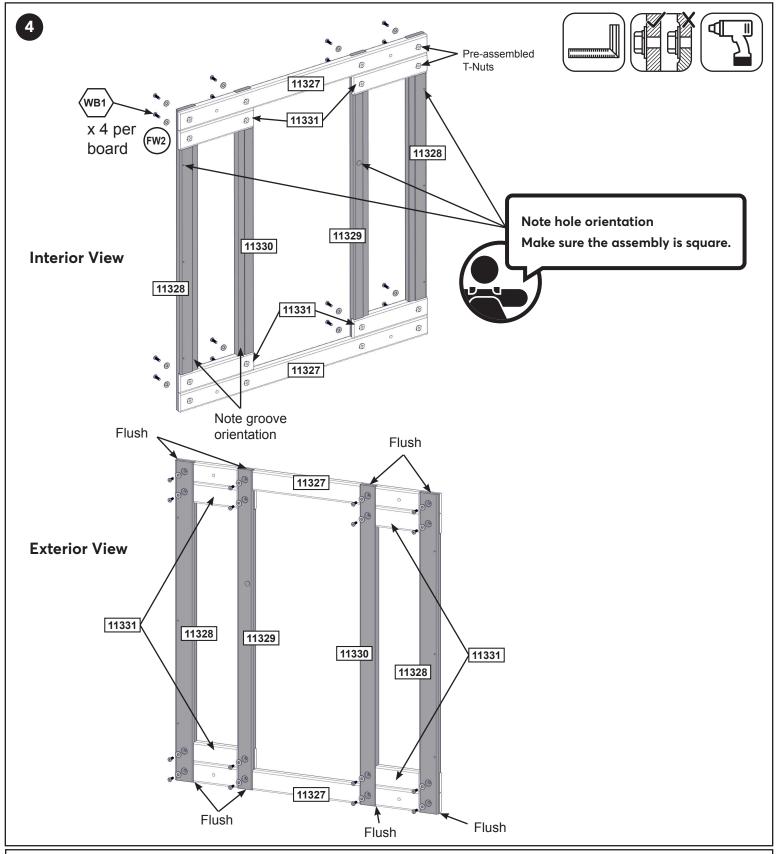



2 x 11328 31.8 mm x 76.2 mm x 1212.85 mm (1 1/4" x 3" x 47 3/4")

1 x 11329 31.8 mm x 63.5 mm x 1212.85 mm (1 1/4" x 2 1/2" x 47 3/4")

1 x 11330 31.8 mm x 63.5 mm x 1212.85 mm (1 1/4" x 2 1/2" x 47 3/4")

#### **Hardware**

16 x (WB1) 7.9 x 25.4 mm (5/16 x 1") (FW2)




parts.kidkraft.eu








### Center in the opening

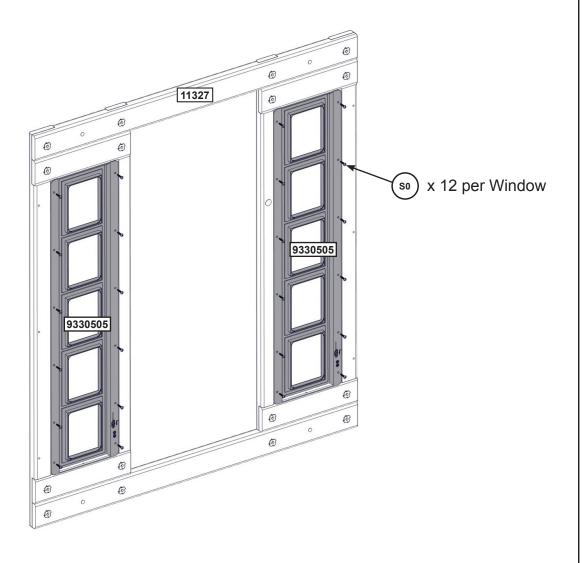

Hardware 24 x (so) #8 x 22.2 mm (#8 x 7/8") Other Parts 2 x 9330505




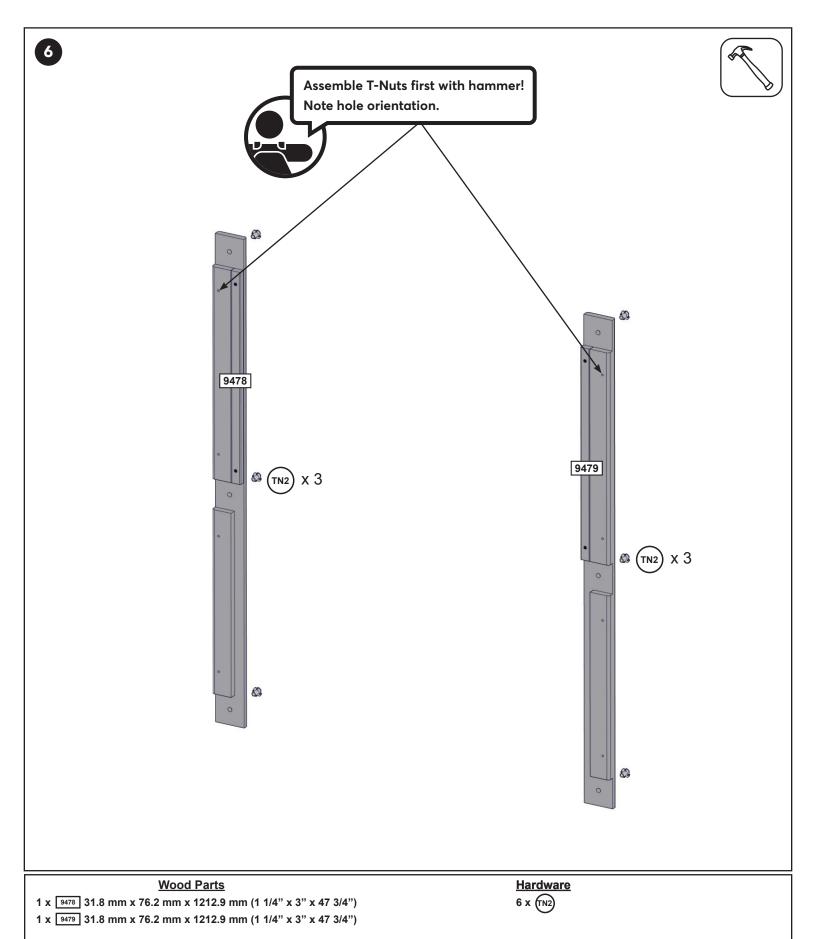

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu



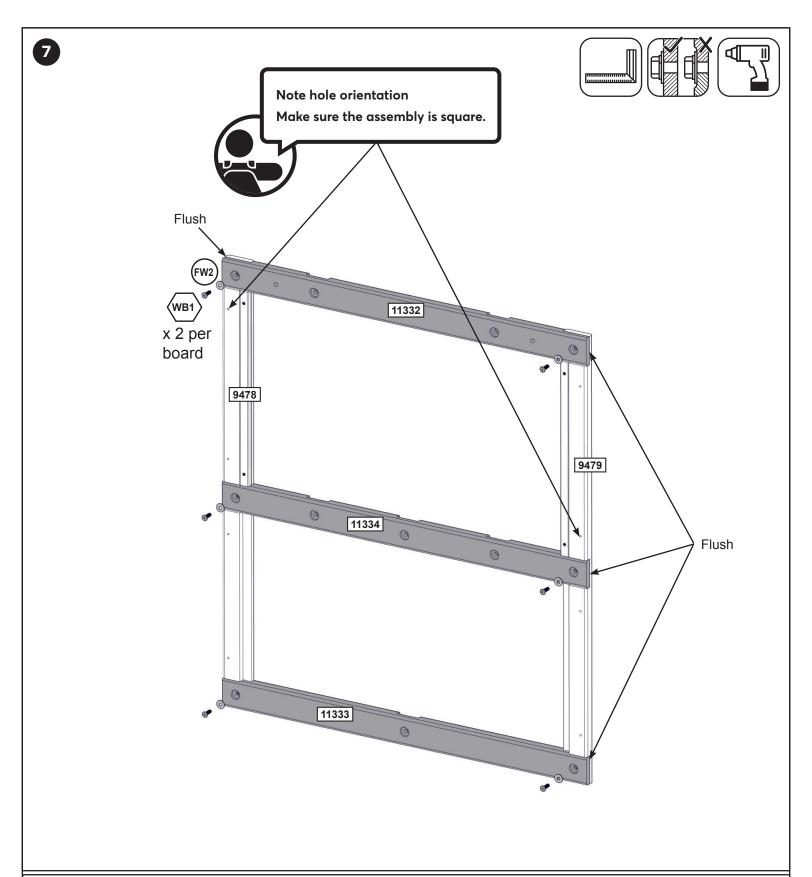

#### **Wood Parts**

1 x 11332 31.8 mm x 76.2 mm x 1059.8 mm (1 1/4" x 3" x 41 3/4")

1 x 11333 31.8 mm x 76.2 mm x 1059.8 mm (1 1/4" x 3" x 41 3/4")


1 x 11334 31.8 mm x 76.2 mm x 1059.8 mm (1 1/4" x 3" x 41 3/4")

#### <u>Hardware</u>

6 x (WB1) 7.9 x 25.4 mm (5/16 x 1") (FW2)




parts.kidkraft.com

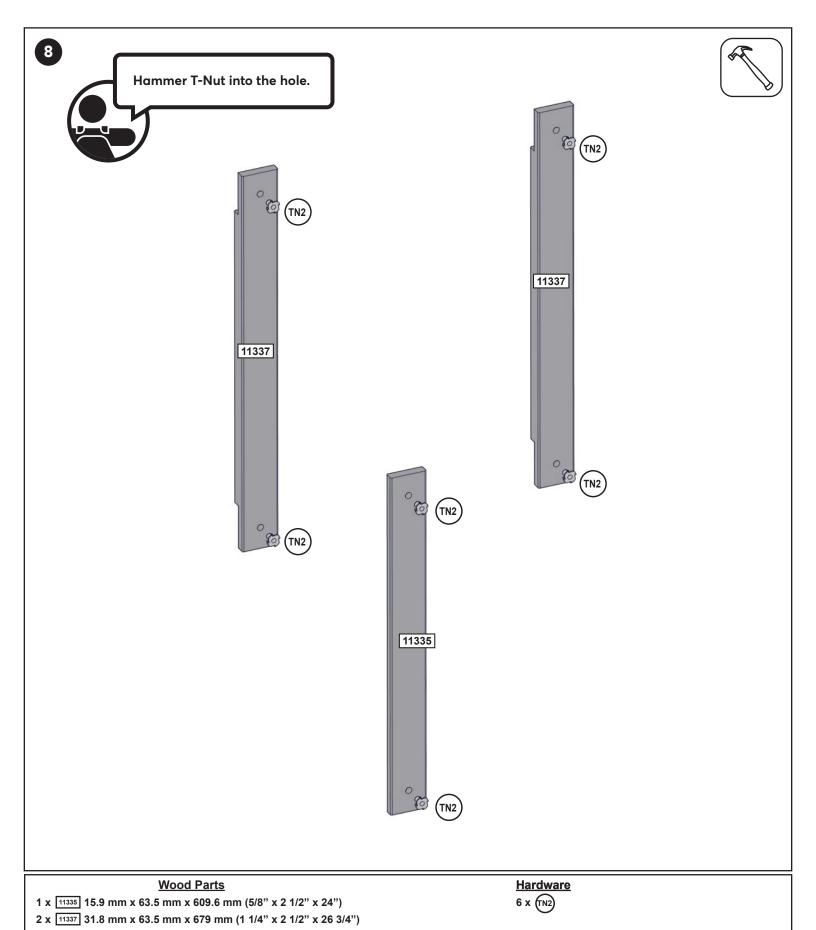

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)

parts.kidkraft.eu




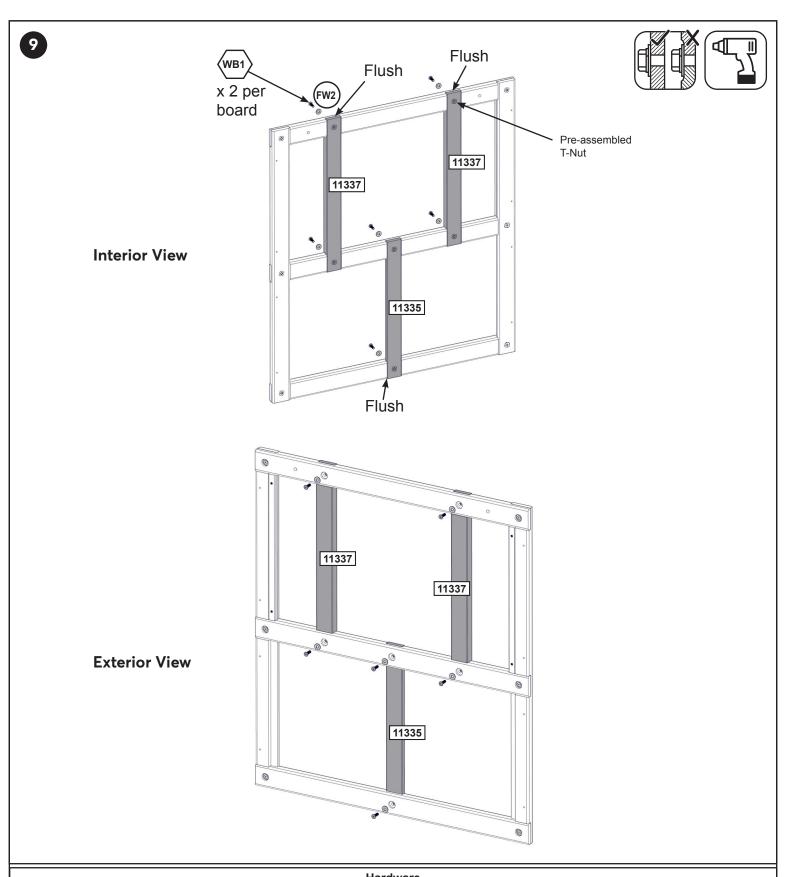





parts.kidkraft.com

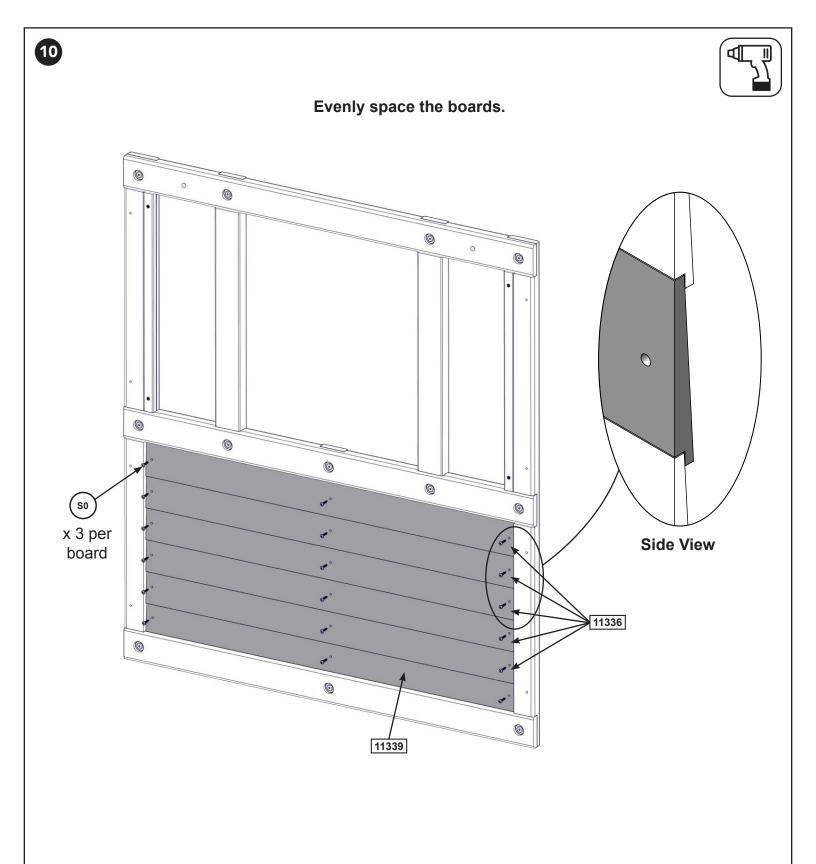

#### **Wood Parts**

5 x 11336 11.9 mm x 82.6 mm x 954 mm (7/16" x 3 1/4" x 37 9/16")

1 x 11339 11.9 mm x 69.9 mm x 954 mm (7/16" x 2 3/4" x 37 9/16")


#### **Hardware**

18 x (so) #8 x 22.2 mm (#8 x 7/8")







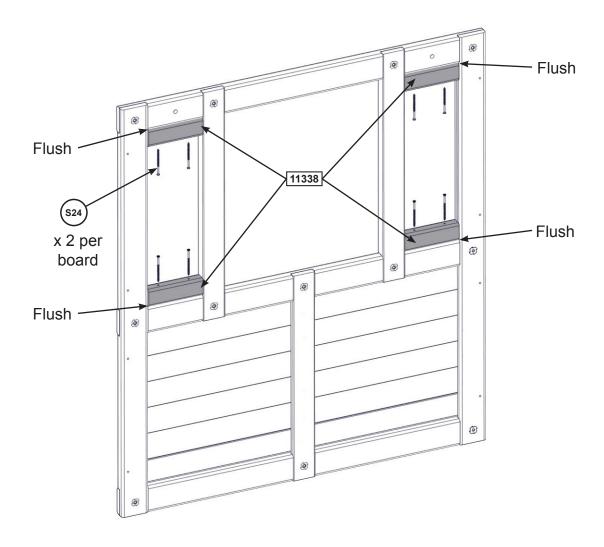

**Wood Parts** 

4 x 11338 31.8 mm x 57.2 mm x 158 mm (1 1/4" x 2 1/4" x 6 1/4")

<u>Hardware</u>


8 x (524) #10 x 101.6mm (#10 x 4")







### Center in the opening

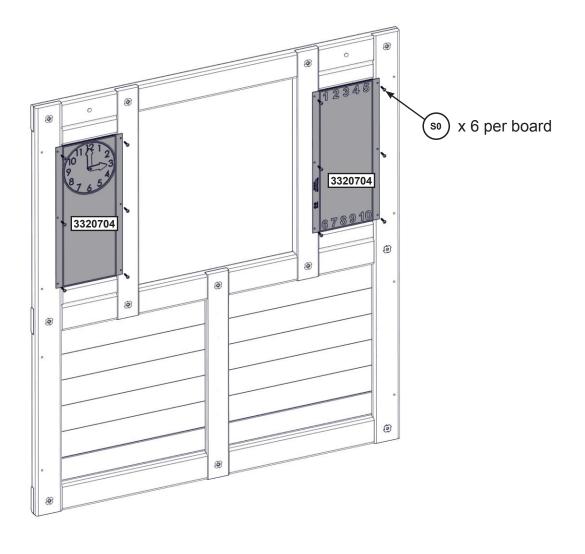

Hardware
12 x (s0) #8 x 22.2 mm (#8 x 7/8")


Other Parts 2 x 3320704





### **Middle Tower**



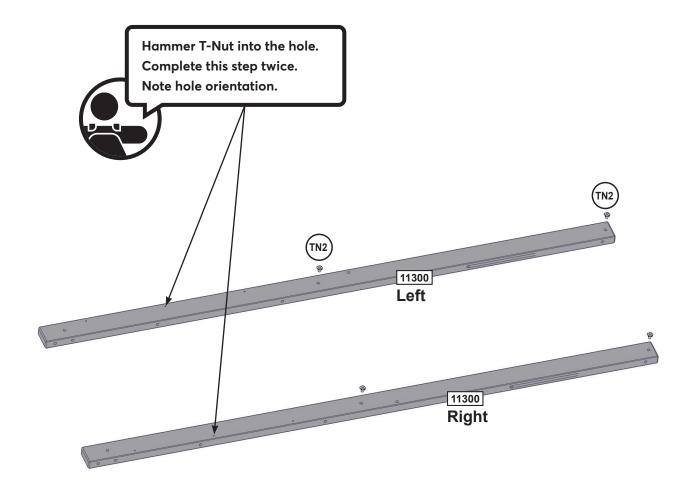


**Wood Parts** 

4 x 11300 34.9 mm x 85.7 mm x 2260.6 mm (1 3/8" x 3 3/8" x 89")

**Hardware** 


8 x (TN2)



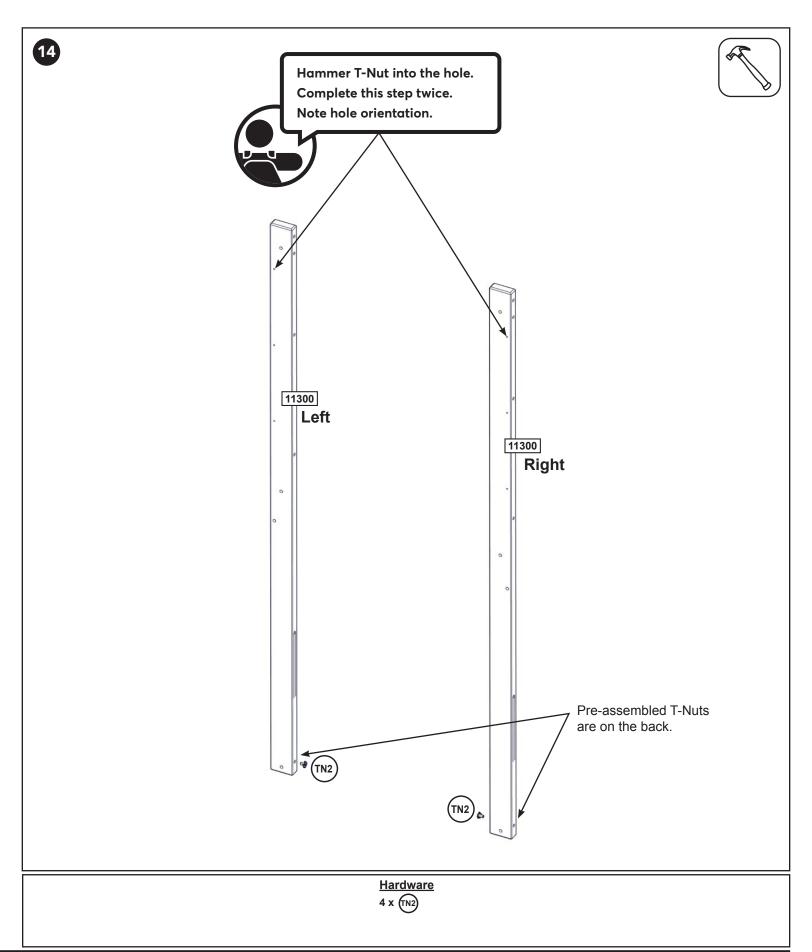


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



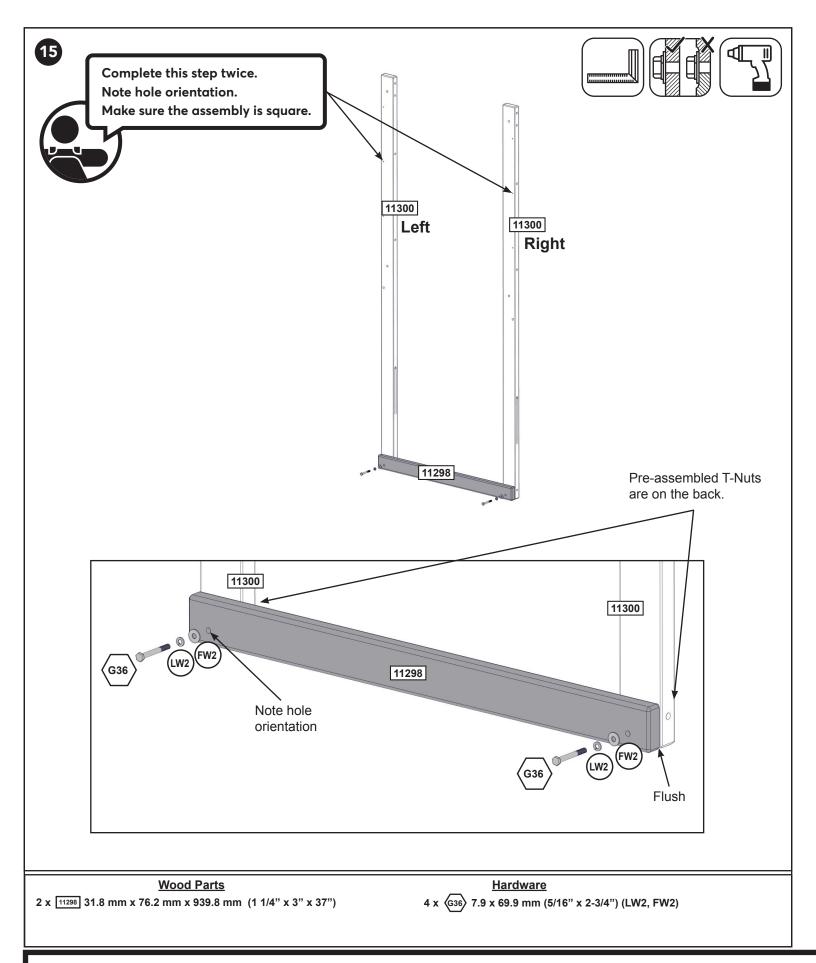



parts.kidkraft.com

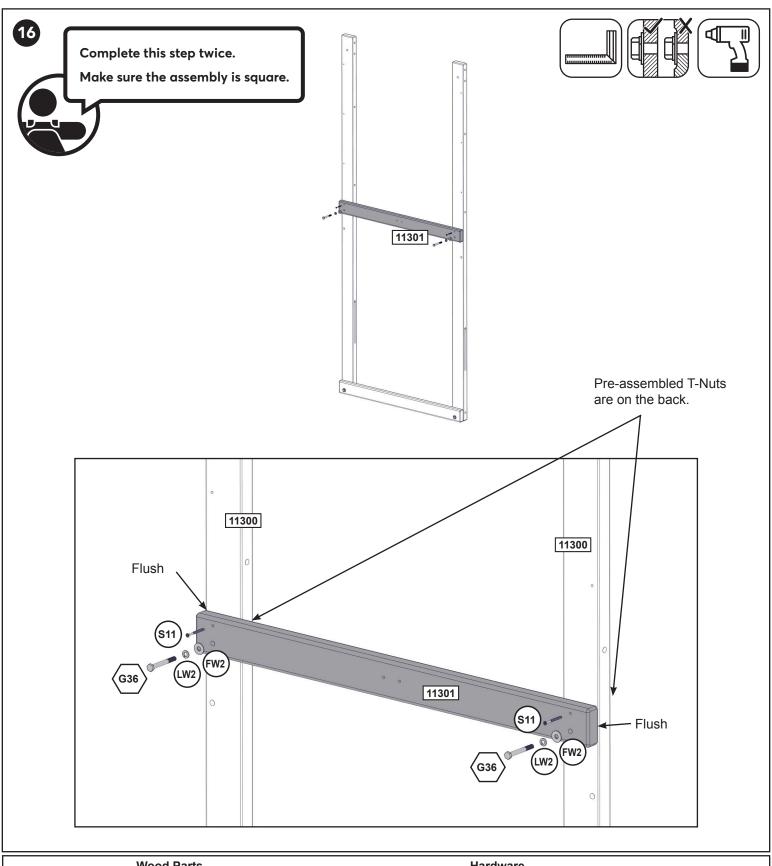

2 x 11301 31.8 mm x 76.2 mm x 939.8 mm (1 1/4" x 3" x 37")

## **Hardware**


4 x (G36) 7.9 x 69.9 mm (5/16" x 2-3/4") (LW2, FW2)

4 x (S11) #8 x 50.8 mm (#8 x 2")








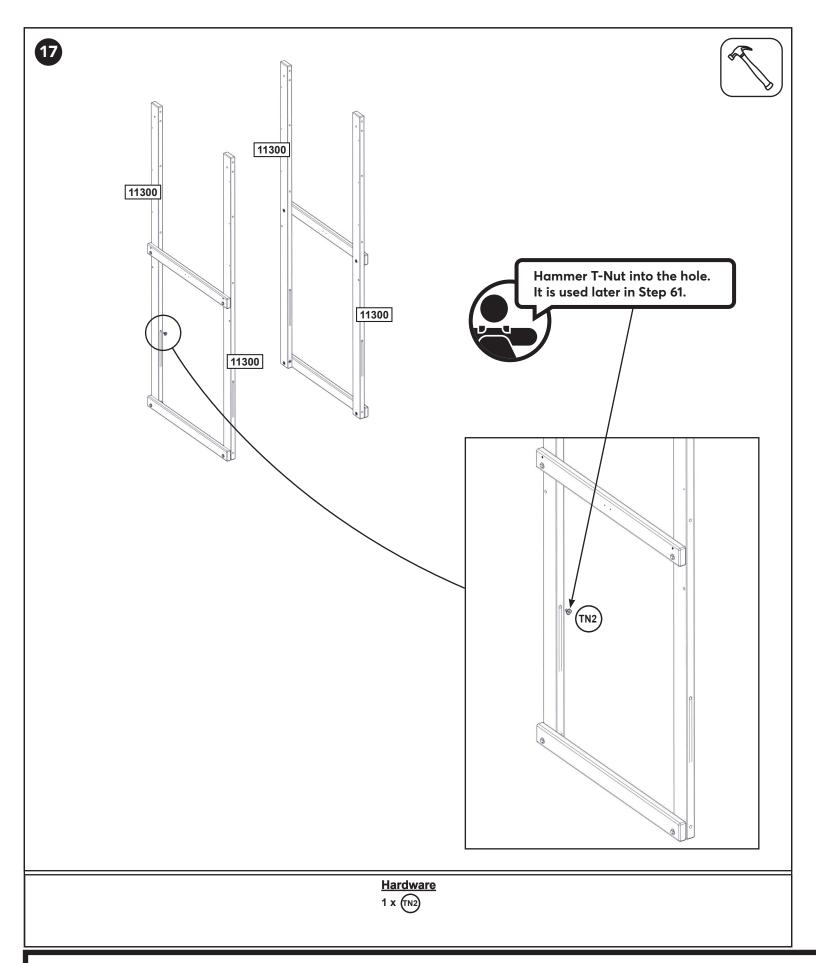




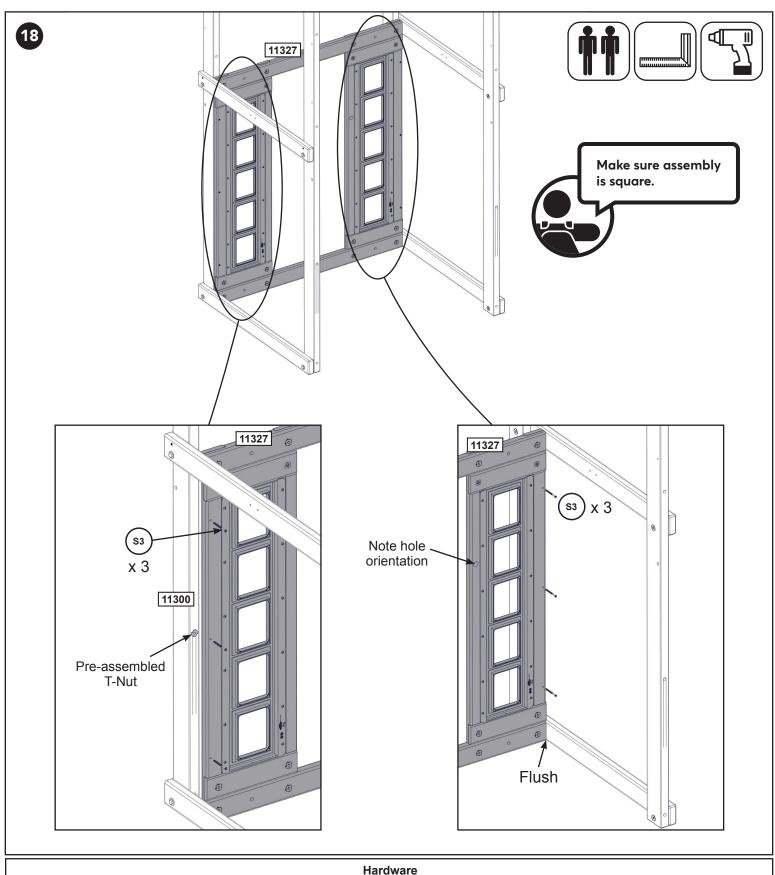

Hardware 6 x (s3) #8 x 63.5 mm (#8 x 2-1/2")

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



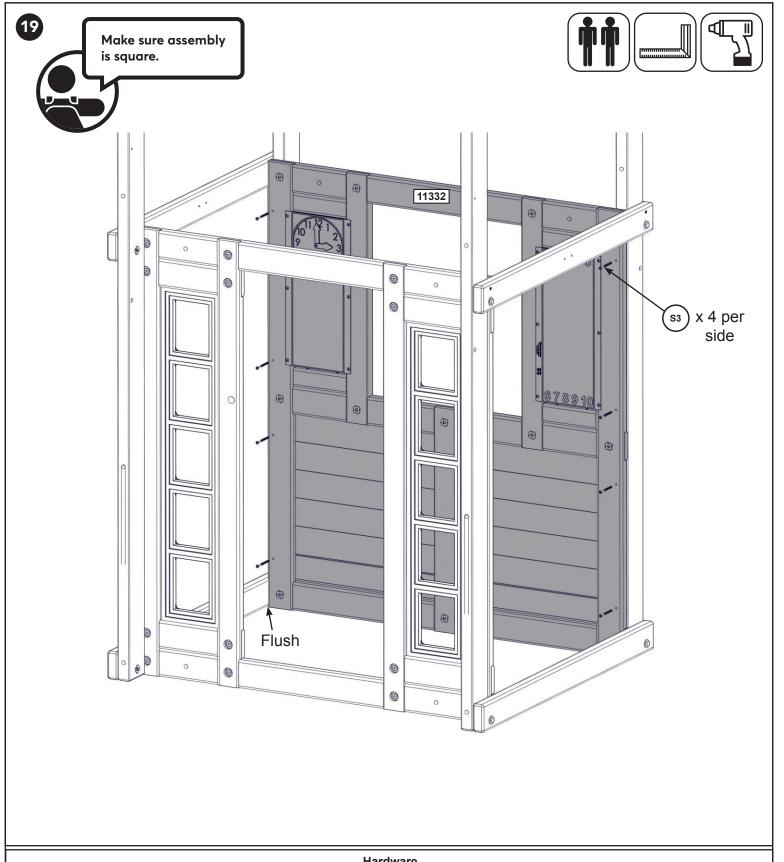


## **Hardware**

8 x (s<sub>3</sub>) #8 x 63.5 mm (#8 x 2-1/2")



parts.kidkraft.com

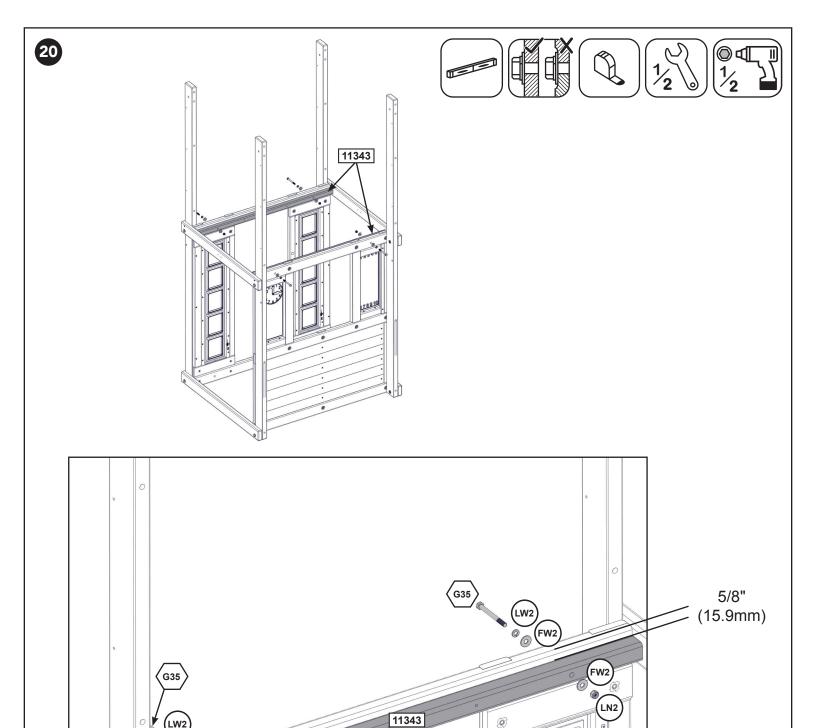

2 x 11343 38.1 mm x 38.1 mm x 1053.8 mm (1 1/2" x 1 1/2" x 41 1/2")

**Hardware** 


4 x (G35) 7.9 x 82.6 mm (5/16 x 3-1/4") (LW2, FW2 x 2, LN2)


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)







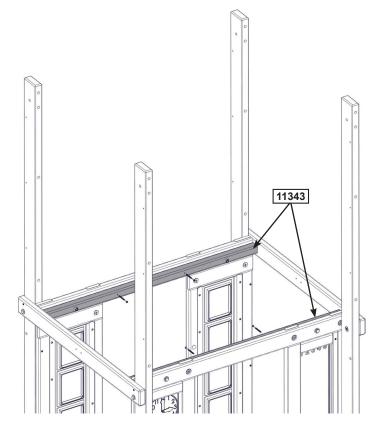

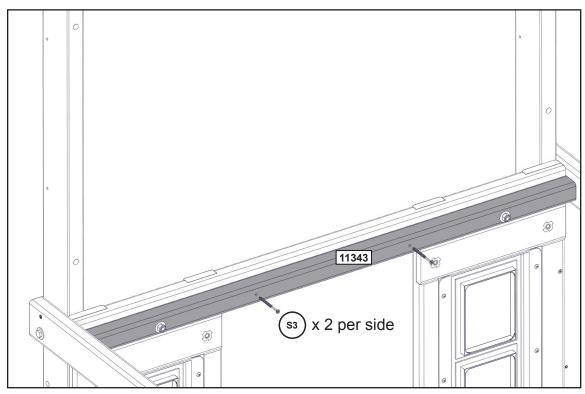


## **Hardware**

4 x (s<sub>3</sub>) #8 x 63.5 mm (#8 x 2-1/2")



parts.kidkraft.com

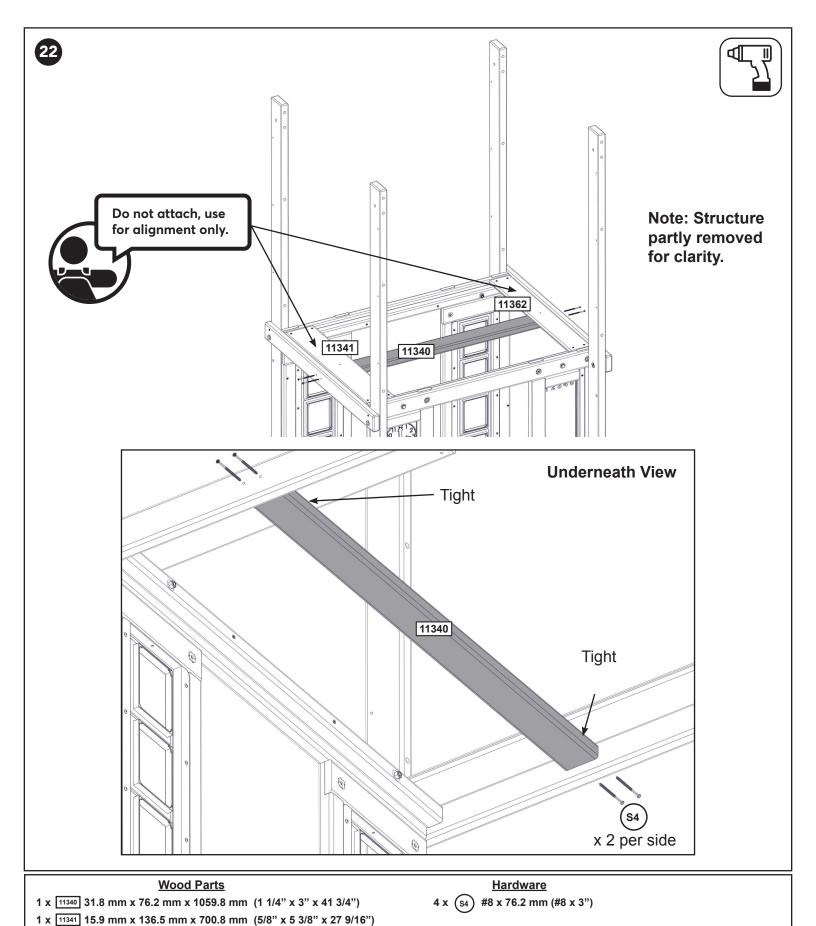




1 x 11362 15.9 mm x 101.6 mm x 700.8 mm (5/8" x 4" x 27 9/16")

M-F from 09:00 to 17:30 (GMT+1)







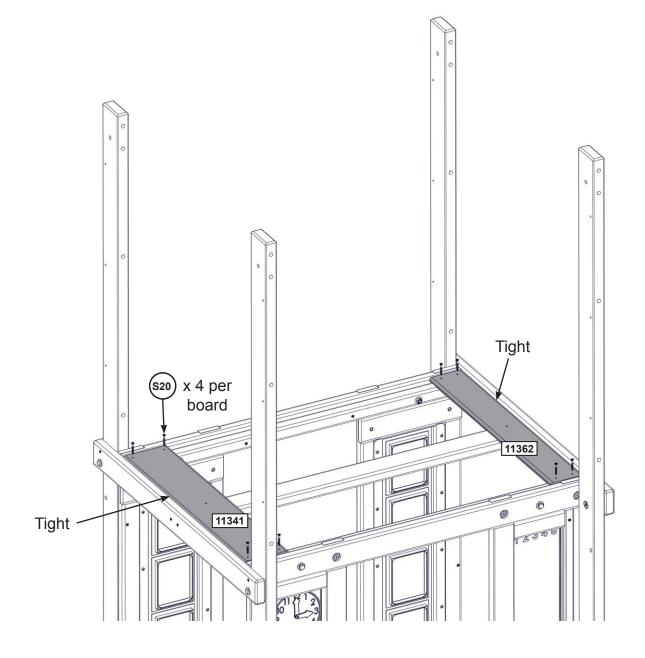

Note: Structure partly removed for clarity.

## **Hardware**



8 x (S20) #8 x 34.9 mm (#8 x 1-3/8")






## **Evenly space the boards.**



Note: Structure partly removed for clarity.

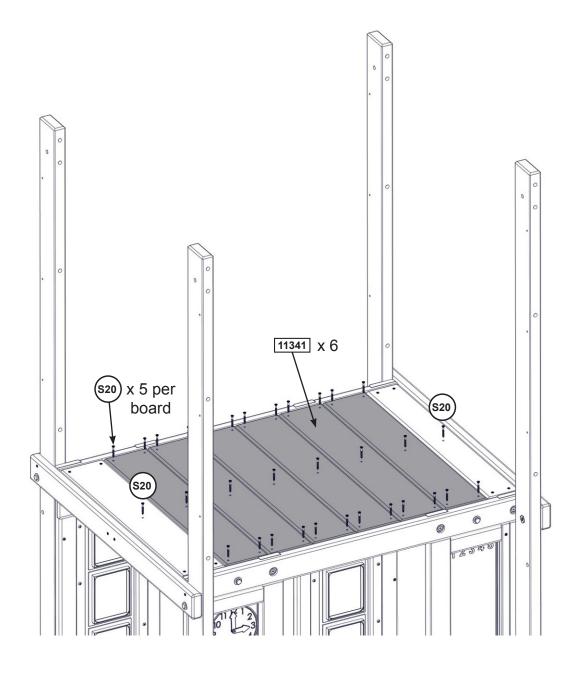

**Wood Parts** 


6 x 11341 15.9 mm x 136.5 mm x 700.8 mm (5/8" x 5 3/8" x 27 9/16")

<u>Hardware</u>


32 x (S20) #8 x 34.9 mm (#8 x 1-3/8")









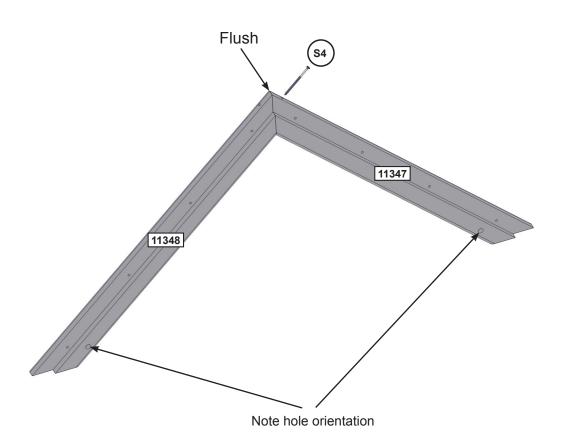

2 x 11347 31.8 mm x 69.9 mm x 771.5 mm (1 1/4" x 2 3/4" x 30 3/8")

2 x 11348 31.8 mm x 69.9 mm x 771.5 mm (1 1/4" x 2 3/4" x 30 3/8")

## <u>Hardware</u>


2 x (S4) #8 x 76.2 mm (#8 x 3")




parts.kidkraft.com





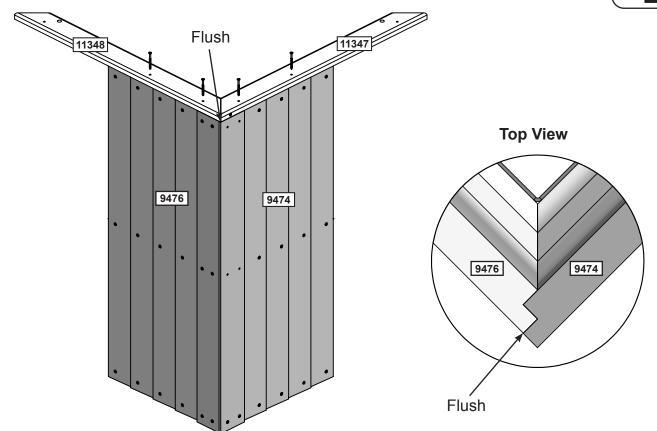

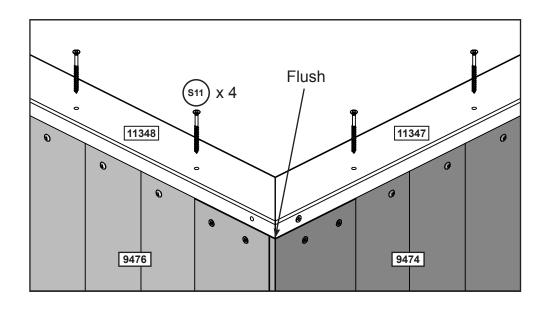

1 x 9474 31.8 mm x 424.2 mm x 951.8 mm (1 1/4" x 16 11/16" x 37 1/2")

1 x 9476 31.8 mm x 417.9 mm x 951.8 mm (1 1/4" x 16 7/16" x 37 1/2")

## **Hardware**


4 x (S11) #8 x 50.8 mm (#8 x 2")










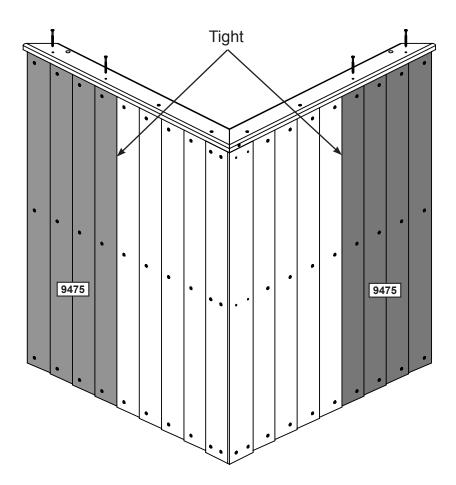

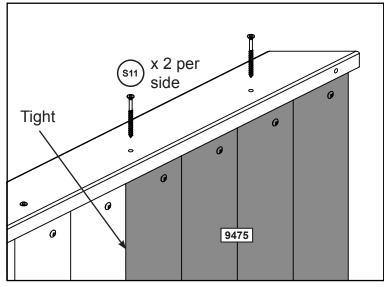


2 x 9475 31.8 mm x 339.6 mm x 951.8 mm (1 1/4" x 13 3/8" x 37 1/2")

<u>Hardware</u>

4 x (S11) #8 x 50.8 mm (#8 x 2")




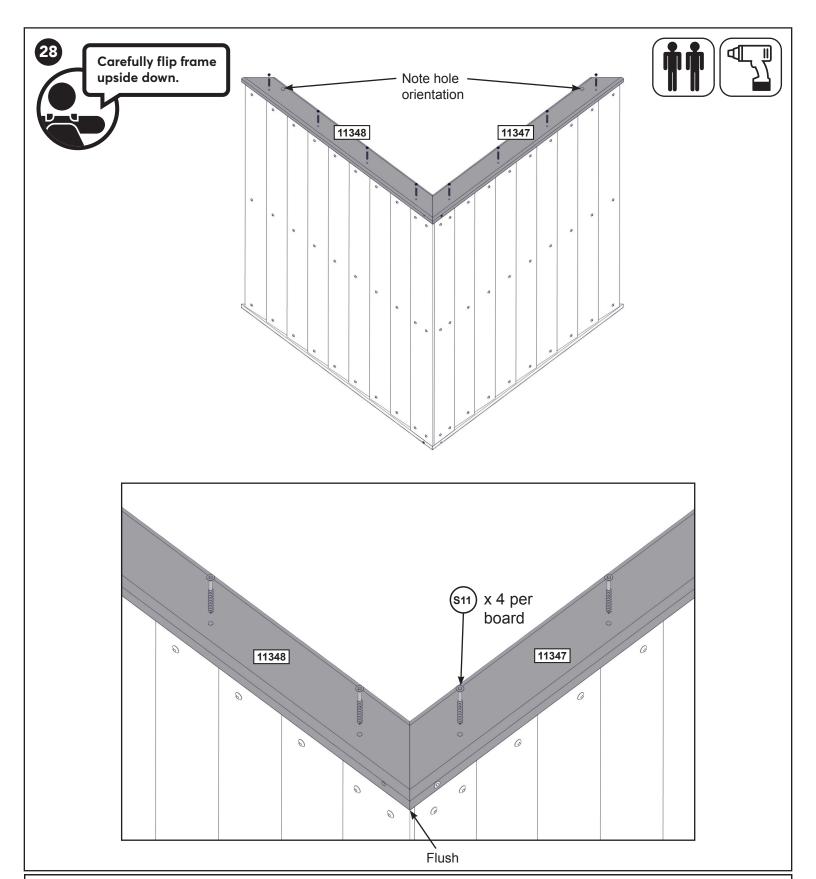

Hardware 8 x (S11) #8 x 50.8 mm (#8 x 2")


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



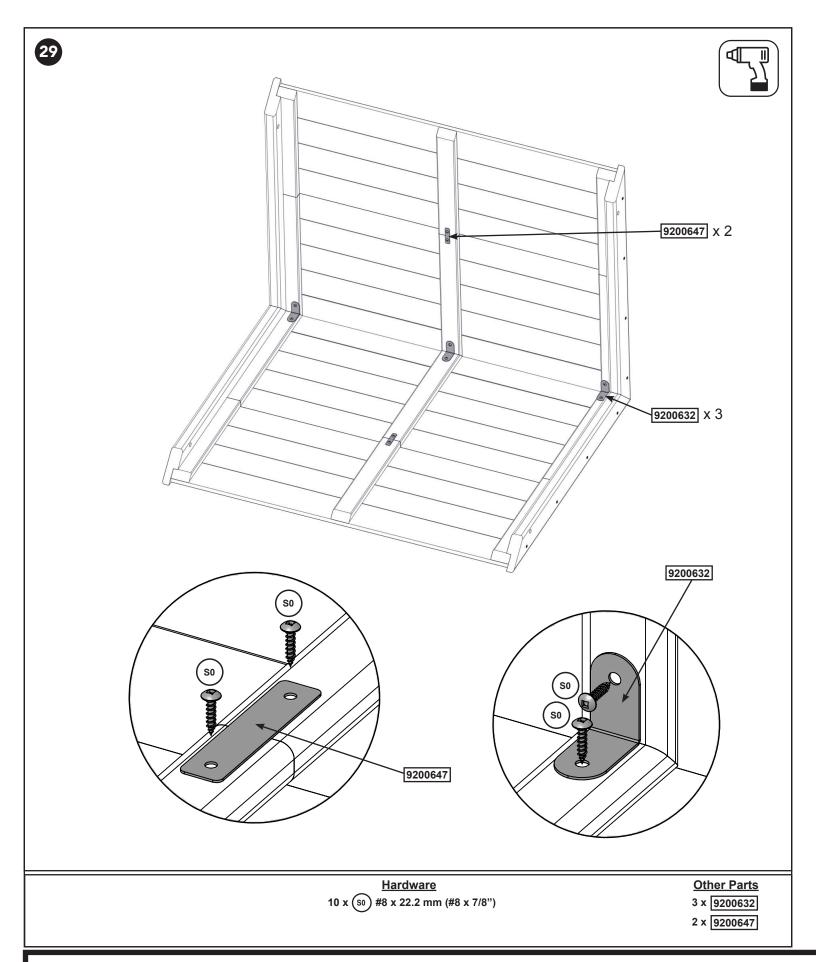



parts.kidkraft.com

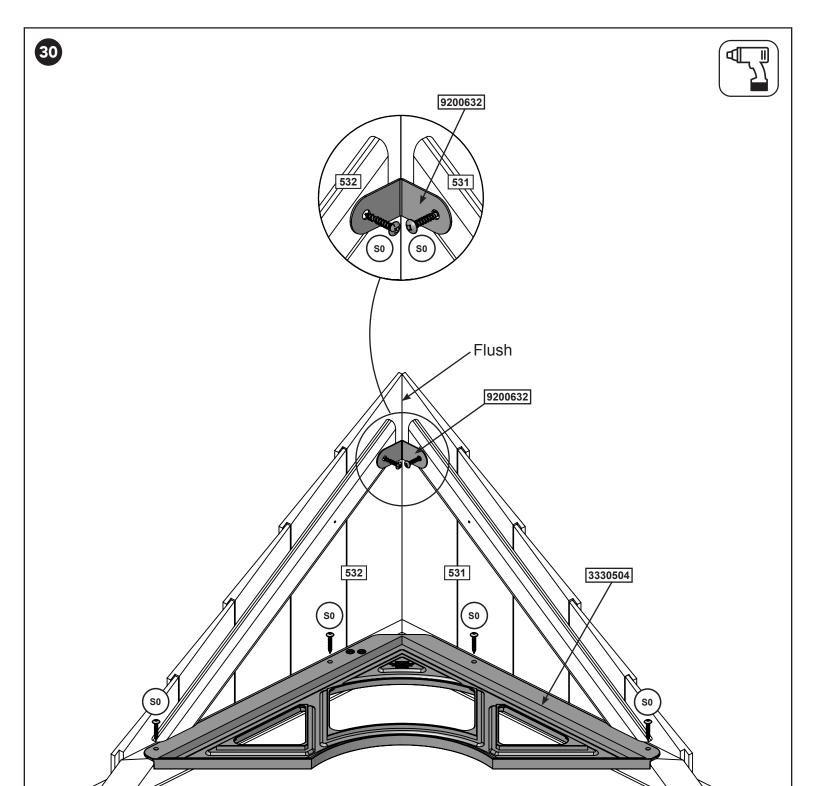

1 x 531 38.1 mm x 338.6 mm x 503 mm (1 1/2" x 13 5/16" x 19 13/16")

1 x 532 38.1 mm x 338.6 mm x 503 mm (1 1/2" x 13 5/16" x 19 13/16")

**Hardware** 

6 x (S0) #8 x 22.2 mm (#8 x 7/8")

**Other Parts** 


1 x 3330504


1 x 9200632







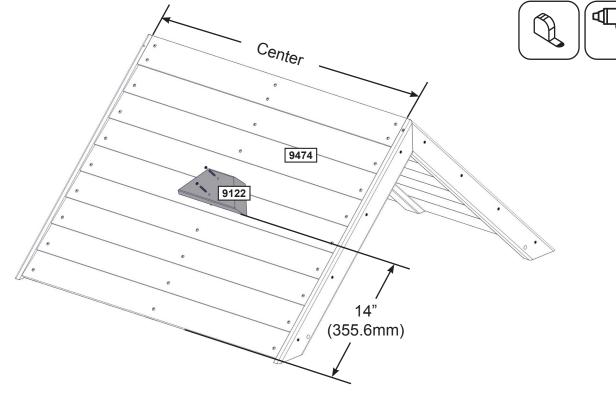

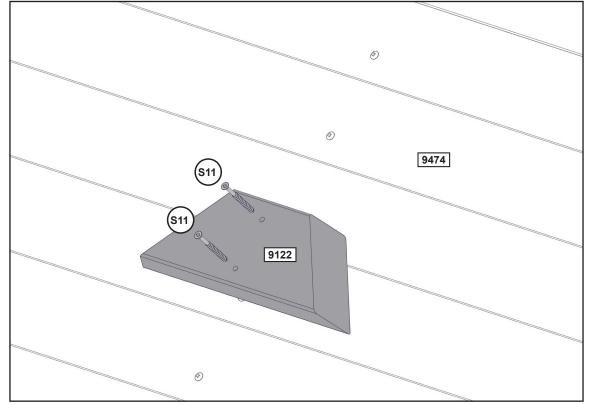


1 x 9122 34.9 mm x 85.7 mm x 254 mm (1 3/8" x 3 3/8" x 10")

<u>Hardware</u>

2 x (S11) #8 x 50.8 mm (#8 x 2")



parts.kidkraft.com

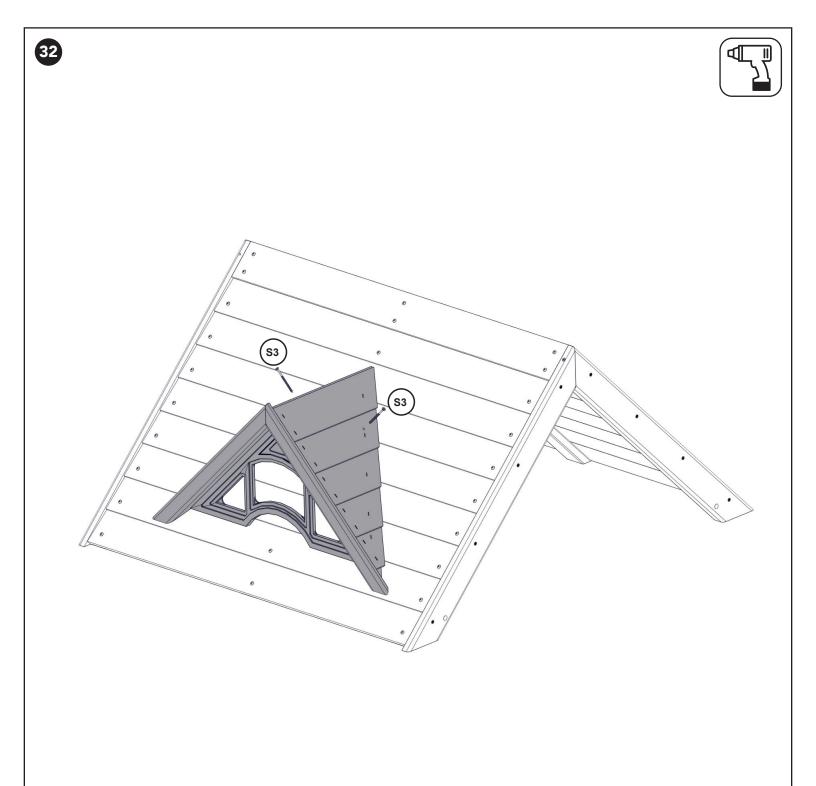


## <u>Hardware</u>

2 x (s<sub>3</sub>)#8 x 63.5mm (#8 x 2-1/2")


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



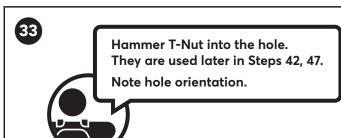






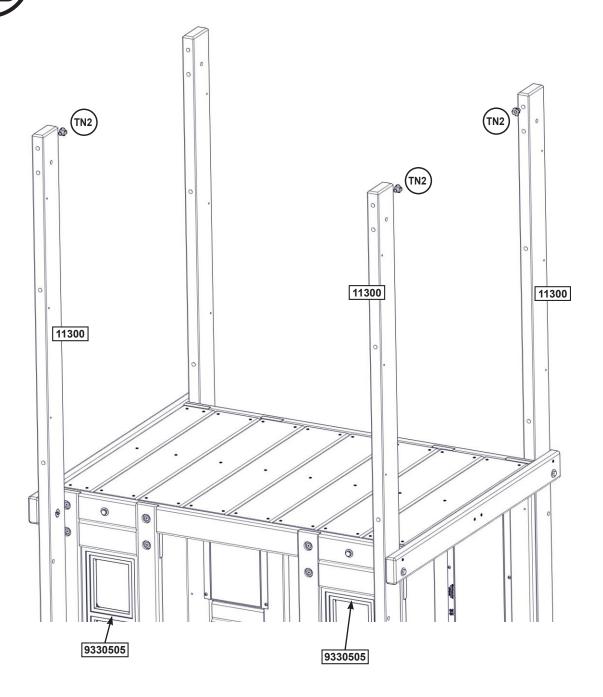

Hardware 3 x (TN2)



parts.kidkraft.com

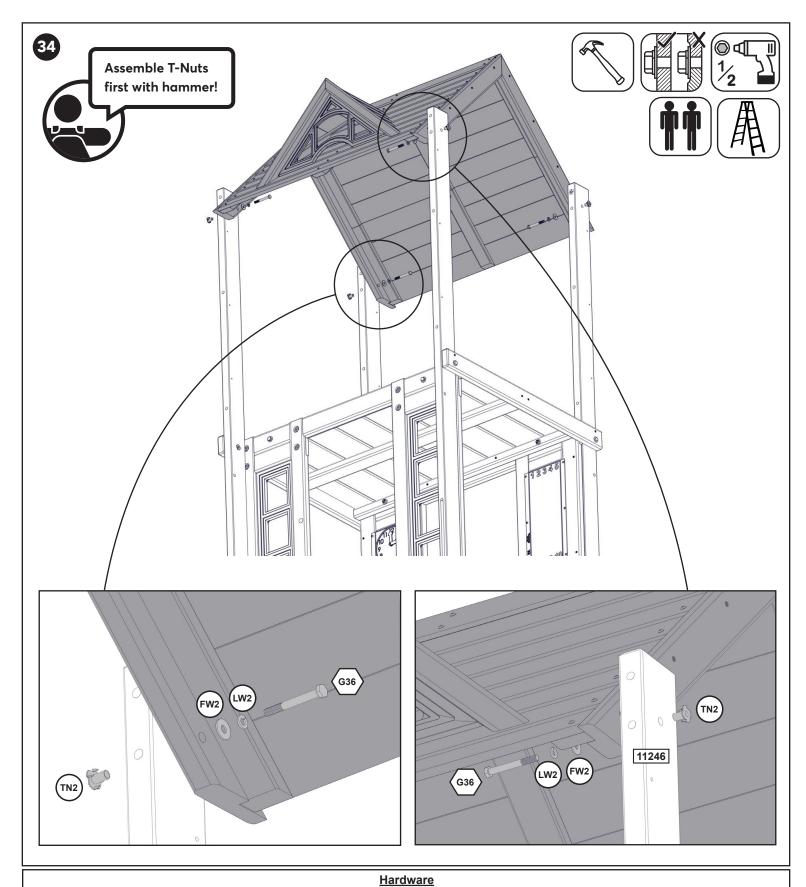

4 x (G36) 7.9 x 69.9 mm (5/16 x 2-3/4") (LW2, FW2, TN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1) SON CONTRACTOR OF THE PARTY OF













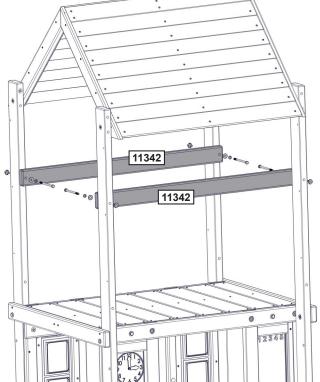

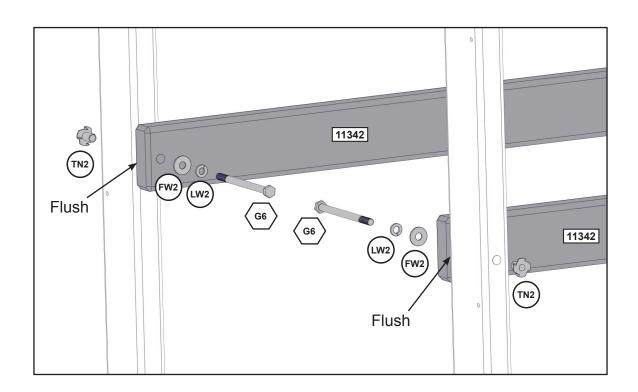


 $2 \times 11342 31.8 \text{ mm} \times 76.2 \text{ mm} \times 1059.8 \text{ mm} (1 1/4" \times 3" \times 41 3/4")$ 

**Hardware** 

4 x  $\left\langle G6 \right\rangle$  7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2, TN2)




parts.kidkraft.com

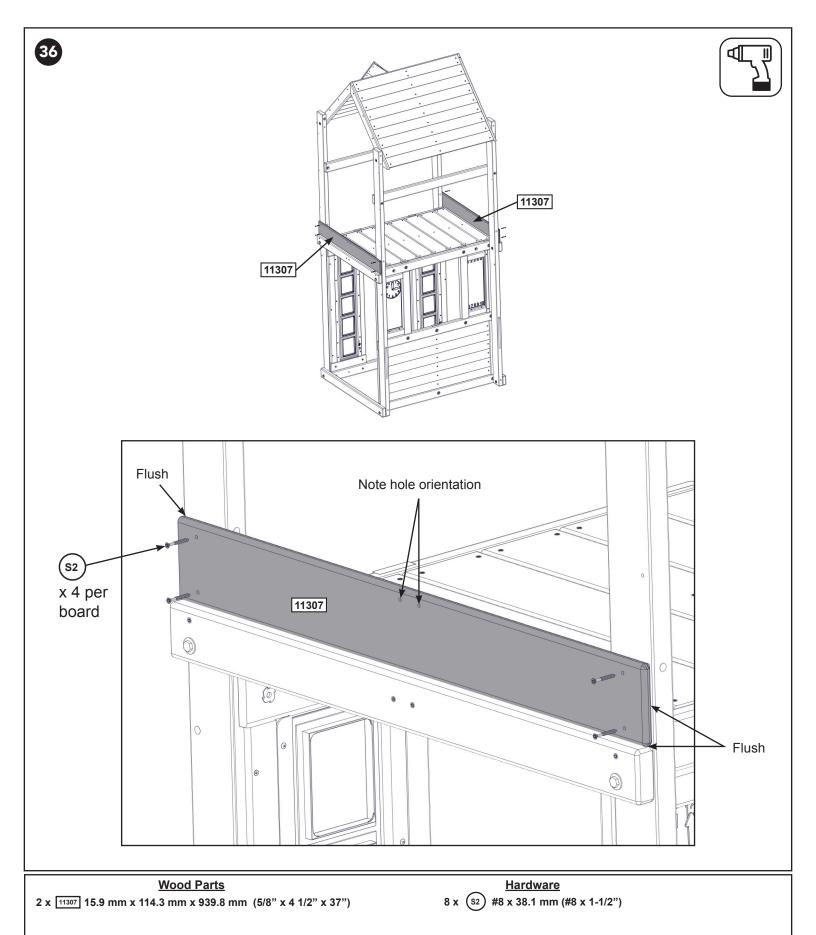

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



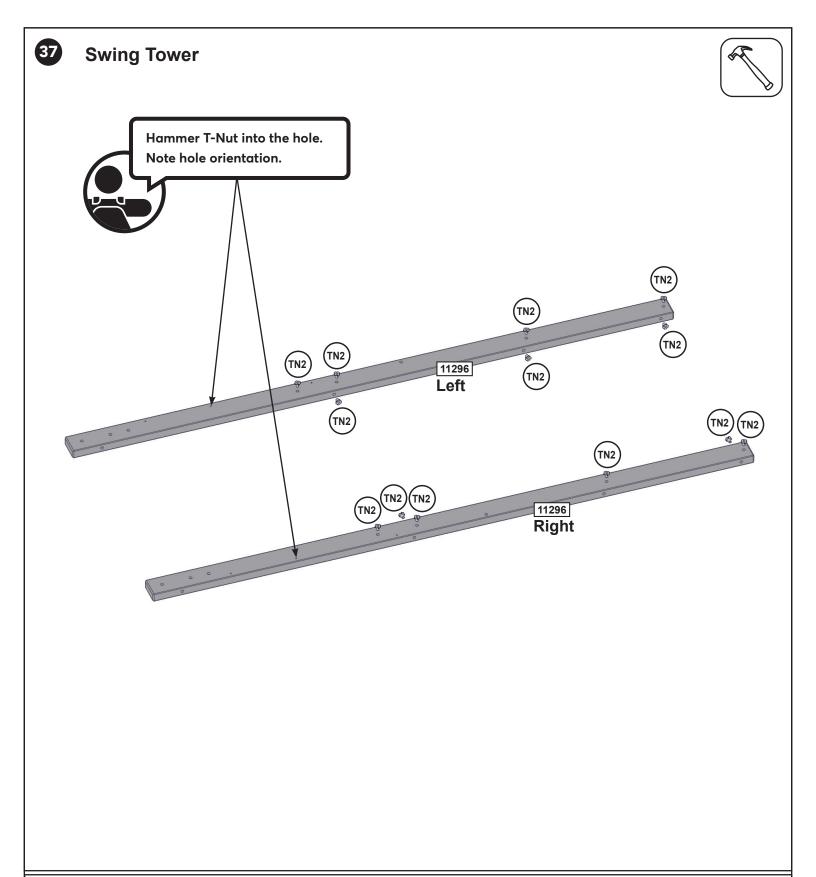


2 x 11296 34.9 mm x 85.7 mm x 2336.8 mm (1 3/8" x 3 3/8" x 92")

<u>Hardware</u>

13 x (TN2)



parts.kidkraft.com

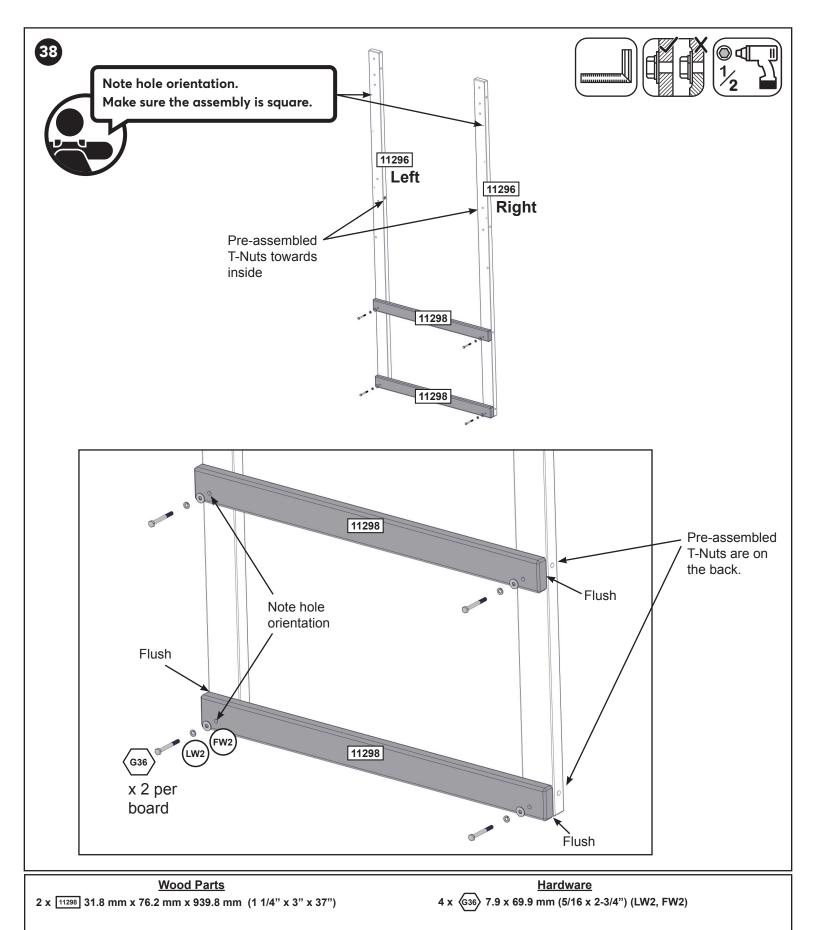


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)










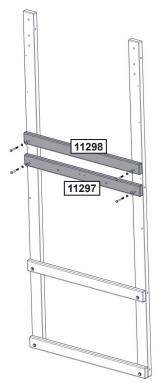

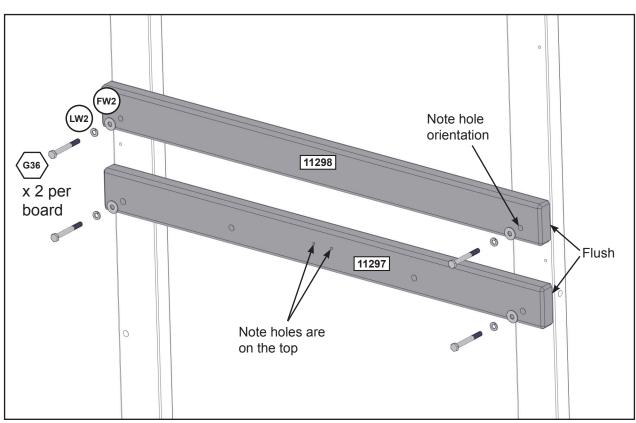

1 x 11297 31.8 mm x 76.2 mm x 939.8 mm (1 1/4" x 3" x 37")

1 x 11298 31.8 mm x 76.2 mm x 939.8 mm (1 1/4" x 3" x 37")

#### **Hardware**

4 x (G36) 7.9 x 69.9 mm (5/16 x 2-3/4") (LW2, FW2)




parts.kidkraft.com










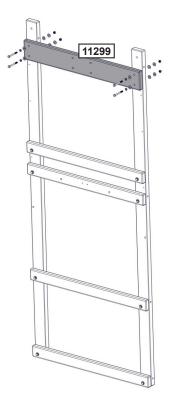

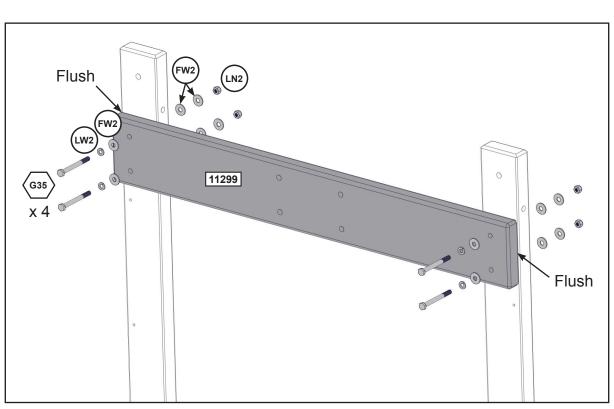


1 x 11299 31.8 mm x 133.4 mm x 939.8 mm (1 1/4" x 5 1/4" x 37")

<u>Hardware</u>

4 x (G35) 7.9 x 82.6 mm (5/16" x 3-1/4") (LW2, FW2 x 3, LN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



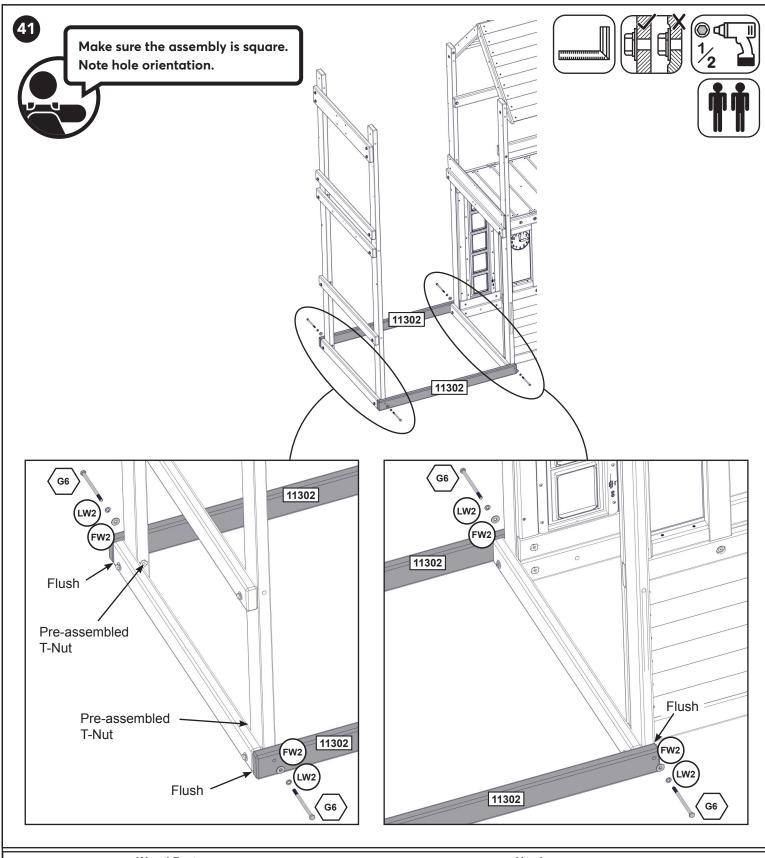


2 x 11302 31.8 mm x 76.2 mm x 1092.2 mm (1 1/4" x 3" x 43")

<u>Hardware</u>

4 x  $\langle G6 \rangle$  7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2)



parts.kidkraft.com

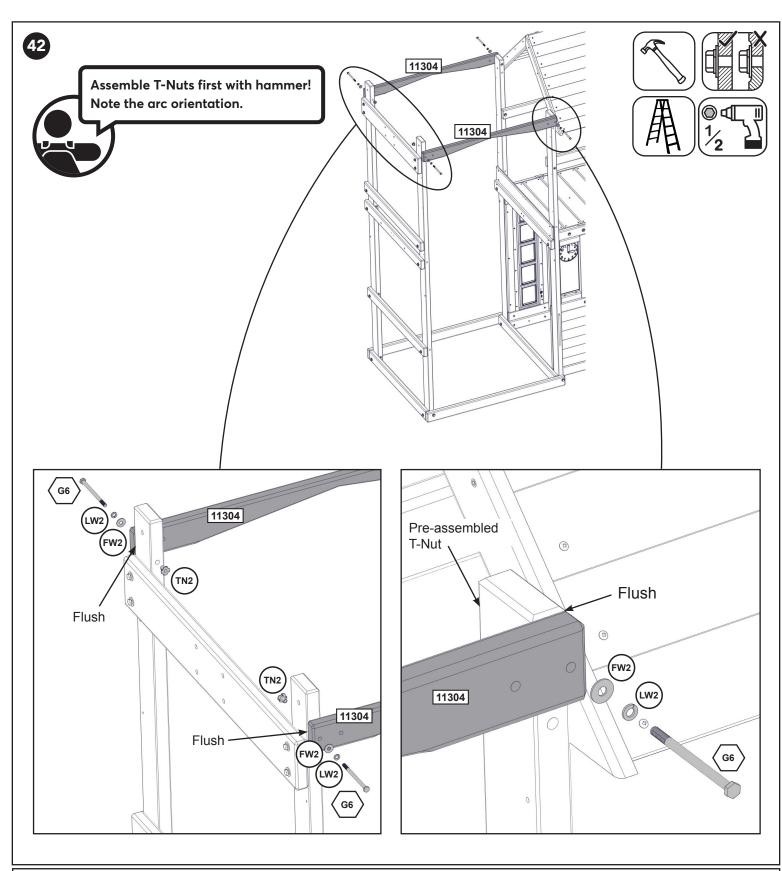

2 x 11304 31.8 mm x 76.2 mm x 1060.4 mm (1 1/4" x 3" x 41 3/4")


## **Hardware**

2 x (G6) 7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2)


2 x (G6) 7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2, TN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



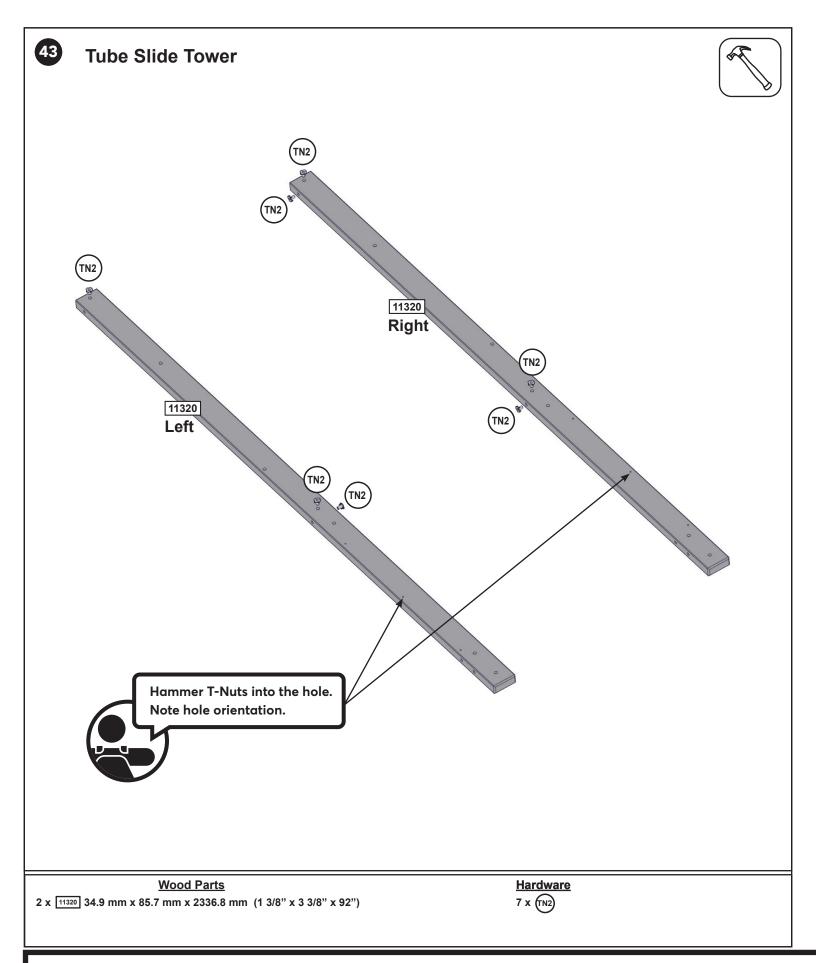




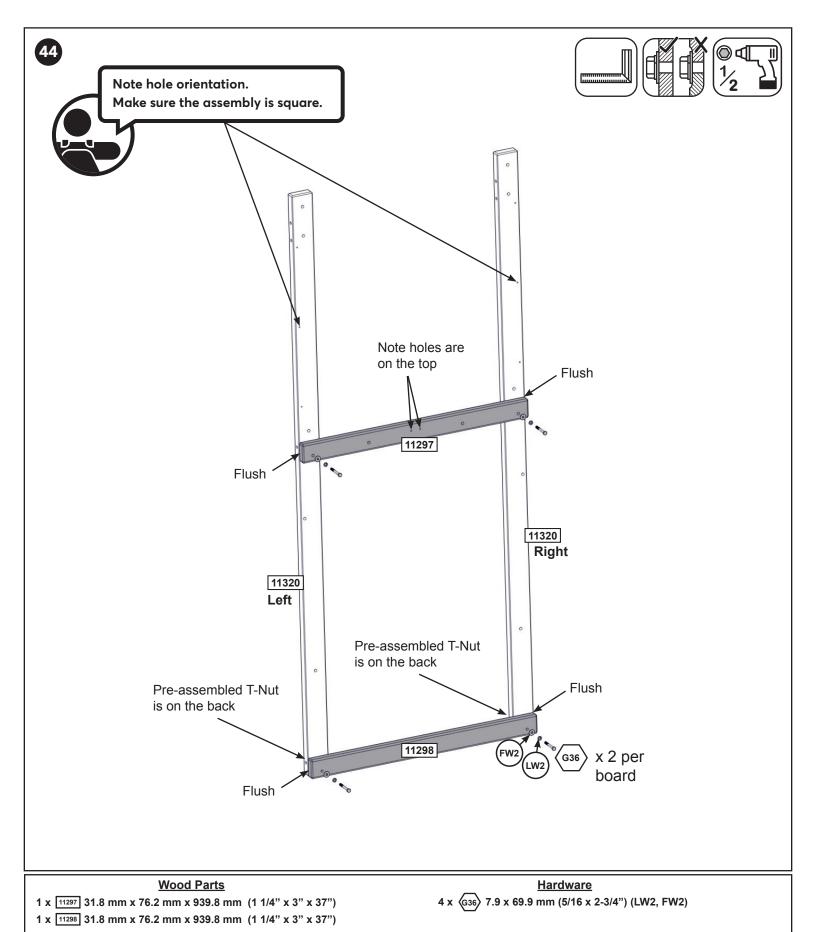

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



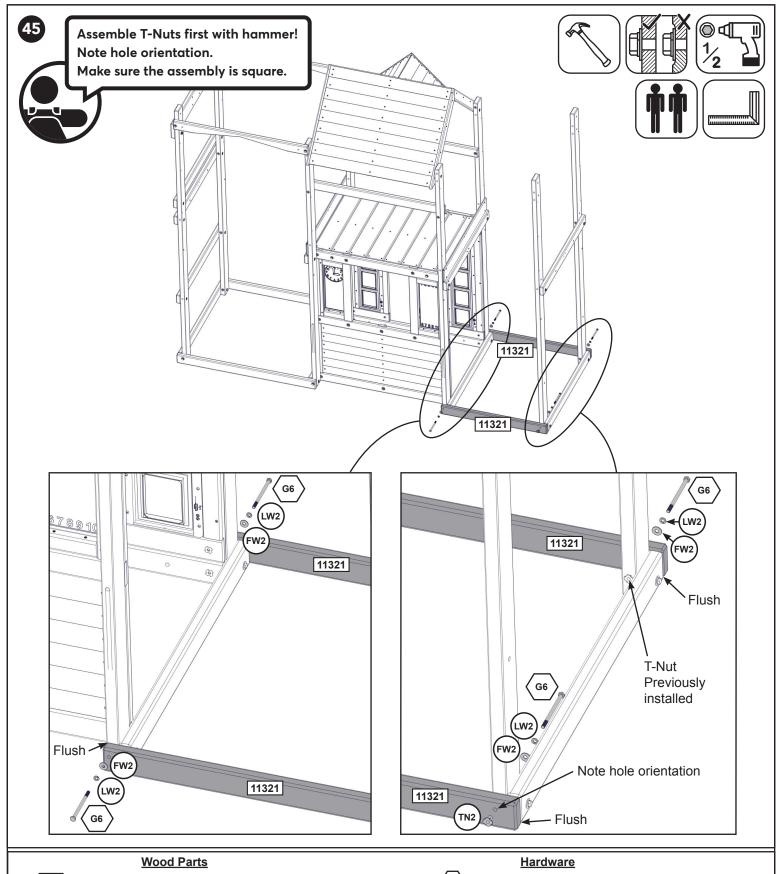

2 x 11321 31.8 mm x 76.2 mm x 832.2 mm (1 1/4" x 3" x 32 3/4")


3 x (G6) 7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2)


1 x  $\langle G6 \rangle$  7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2, TN2)



parts.kidkraft.com



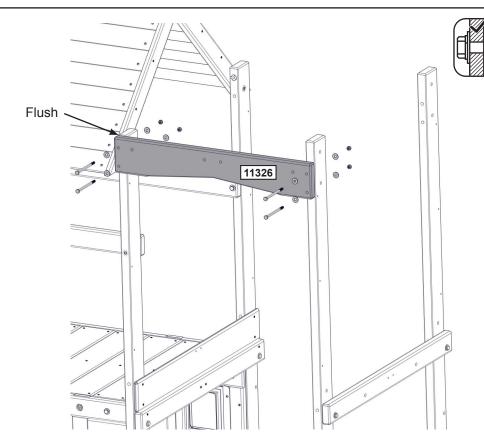

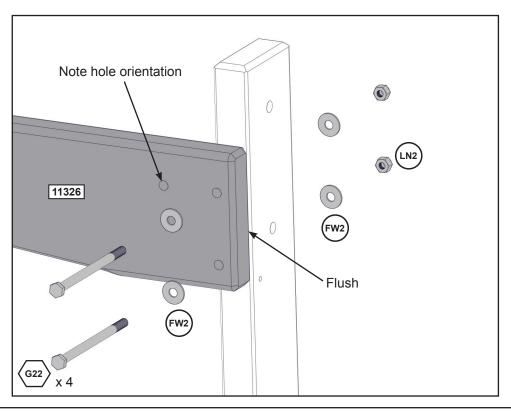


1 x 11326 31.8 mm x 133.4 mm x 800.4 mm (1 1/4" x 5 1/4" x 31 1/2")


**Hardware** 

4 x (G22) 7.9 x 127 mm (5/16 x 5") (FW2 x 2, LN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



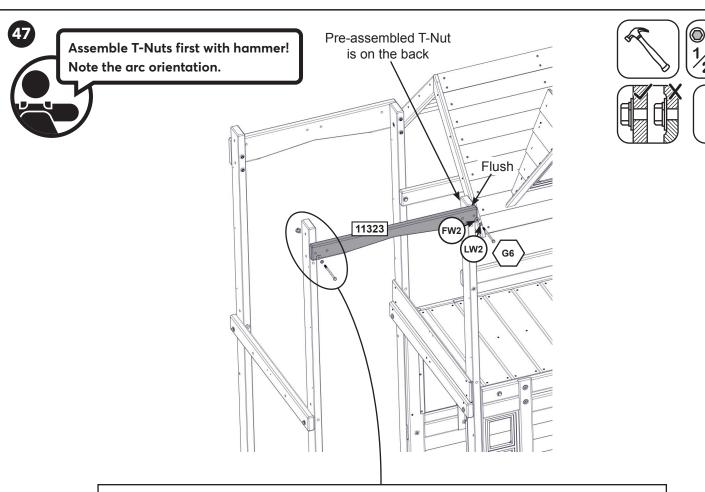

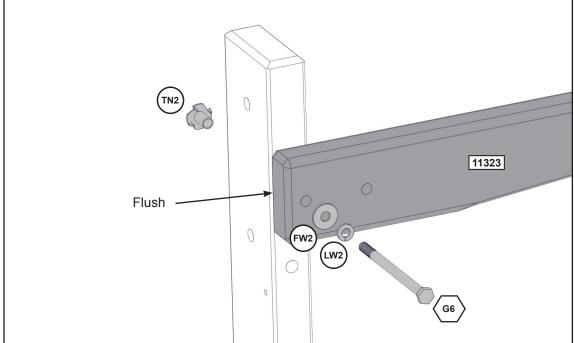

1 x  $\boxed{\mbox{11323}}$  31.8 mm x 76.2 mm x 800.4 mm (1 1/4" x 3" x 31 1/2")

## **Hardware**

1 x (G6) 7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2, TN2)

1 x (G6) 7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2)




parts.kidkraft.com



# Middle Railings



Complete this step twice.
Hammer T-Nut into the hole.

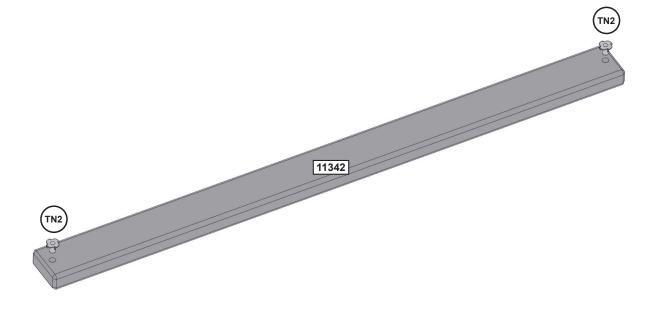


**Wood Parts** 

2 x 11342 31.8 mm x 76.2 mm x 1059.8 mm (1 1/4" x 3" x 41 3/4")

**Hardware** 

4 x (TN2)



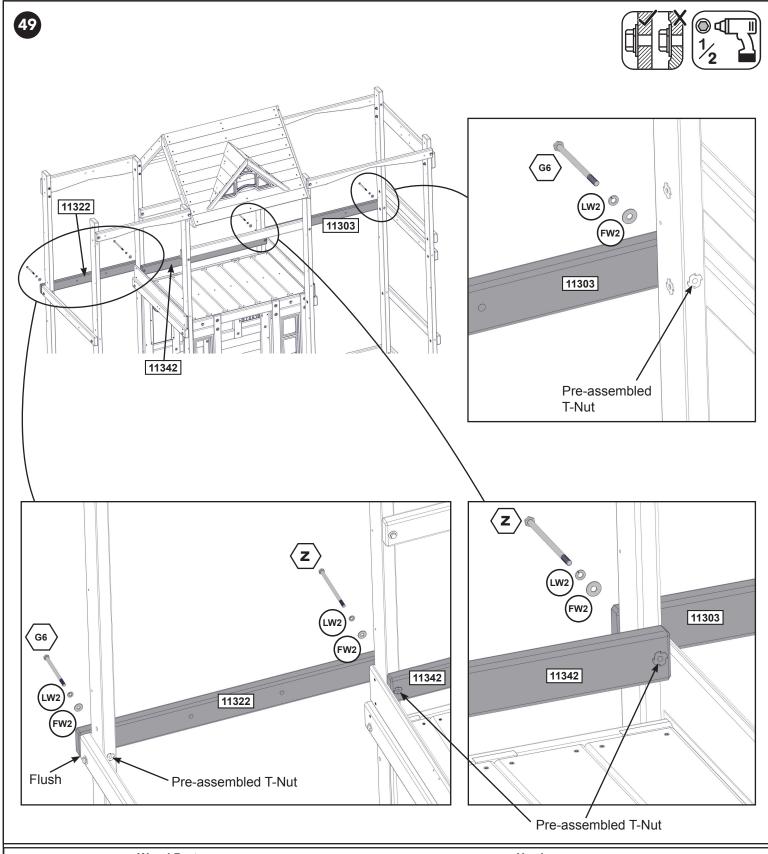



1 x 11303 31.8 mm x 76.2 mm x 1092.2 mm (1 1/4" x 3" x 43")

1 x 11322 31.8 mm x 76.2 mm x 832.2 mm (1 1/4" x 3" x 32 3/4")


## **Hardware**

2 x  $\langle G6 \rangle$  7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2)

2 x  $\langle \overline{Z} \rangle$  7.9 x 152.4 mm (5/16 x 6") (LW2, FW2)



parts.kidkraft.com

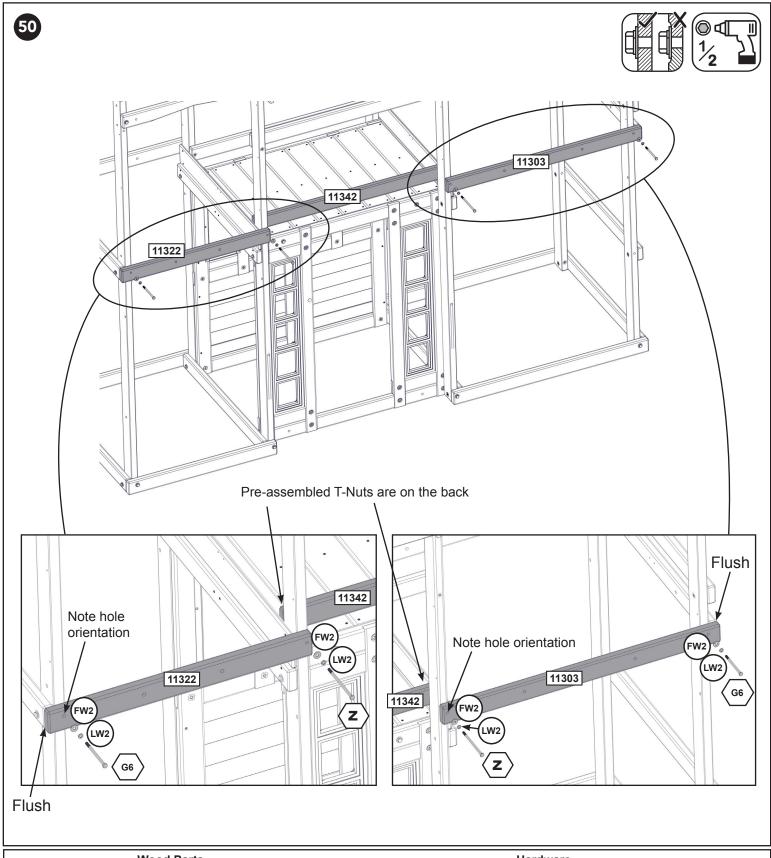

1 x 11303 31.8 mm x 76.2 mm x 1092.2 mm (1 1/4" x 3" x 43")

1 x 11322 31.8 mm x 76.2 mm x 832.2 mm (1 1/4" x 3" x 32 3/4")


### **Hardware**

2 x (G6) 7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2)

2 x **Z** 7.9 x 152.4 mm (5/16 x 6") (LW2, FW2)





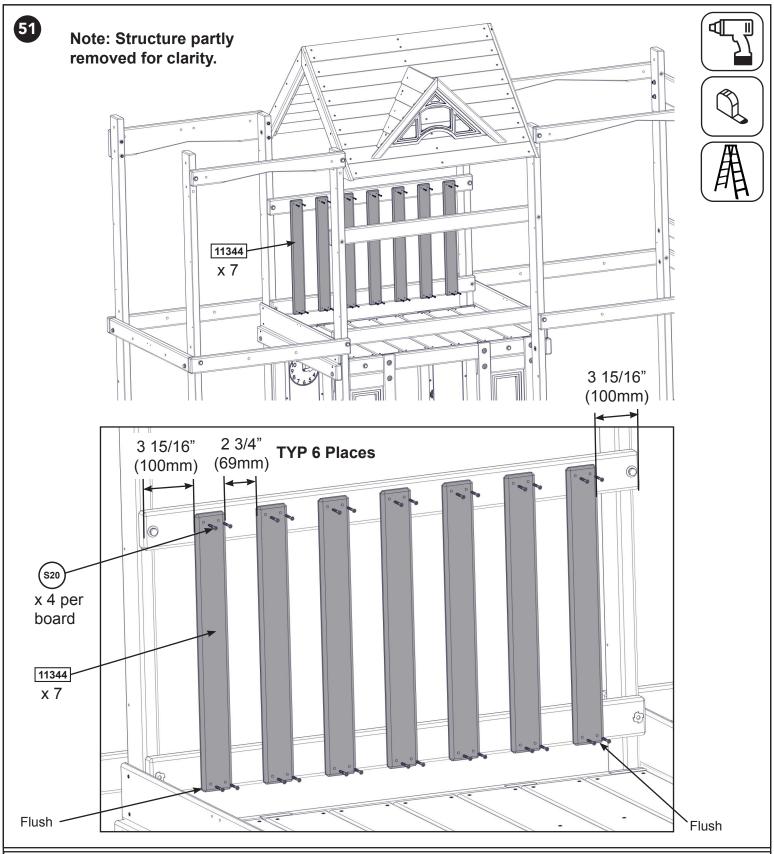


7 x 11344 15.9 mm x 63.5 mm x 558.8 mm (5/8" x 2 1/2" x 22")

**Hardware** 

28 x (S20) #8 x 34.9 mm (#8 x 1-3/8")



parts.kidkraft.com

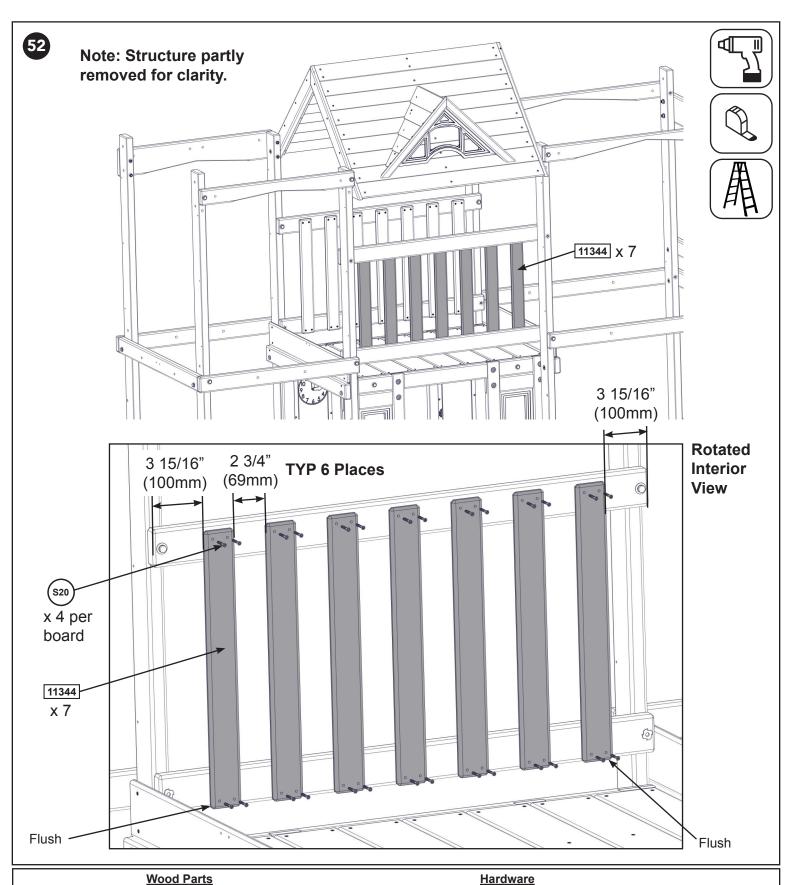

7 x 11344 15.9 mm x 63.5 mm x 558.8 mm (5/8" x 2 1/2" x 22")

**Hardware** 

28 x (S20) #8 x 34.9 mm (#8 x 1-3/8")

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)






# **Swing Tower**










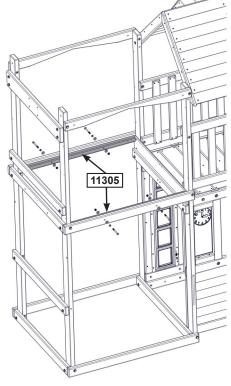

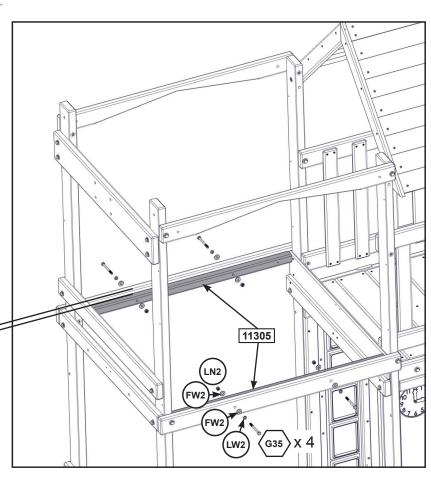

**Wood Parts** 

2 x 11305 38.1 mm x 38.1 mm x 965.2 mm (1 1/2" x 1 1/2" x 38")

5/8" (15.9mm)

**Hardware** 


4 x (G35) 7.9 x 82.6 mm (5/16 x 3-1/4") (LW2, FW2 x 2, LN2)



parts.kidkraft.com





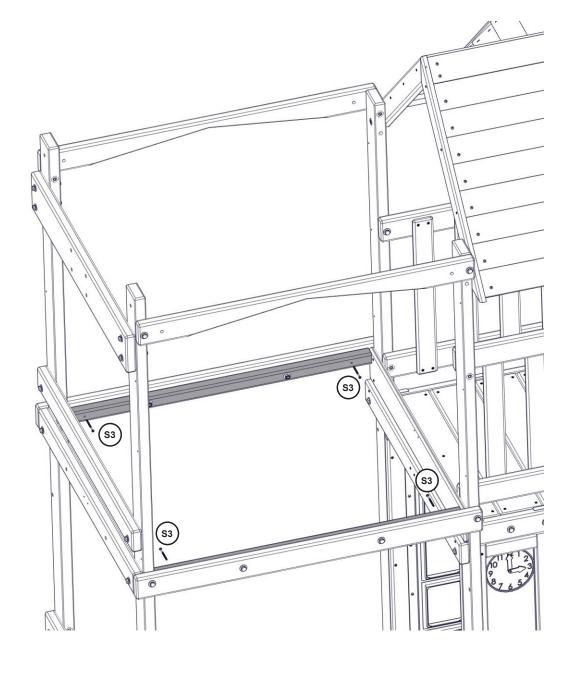


<u>Hardware</u>

4 x (S3) #8 x 63.5 mm (#8 x 2-1/2")

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



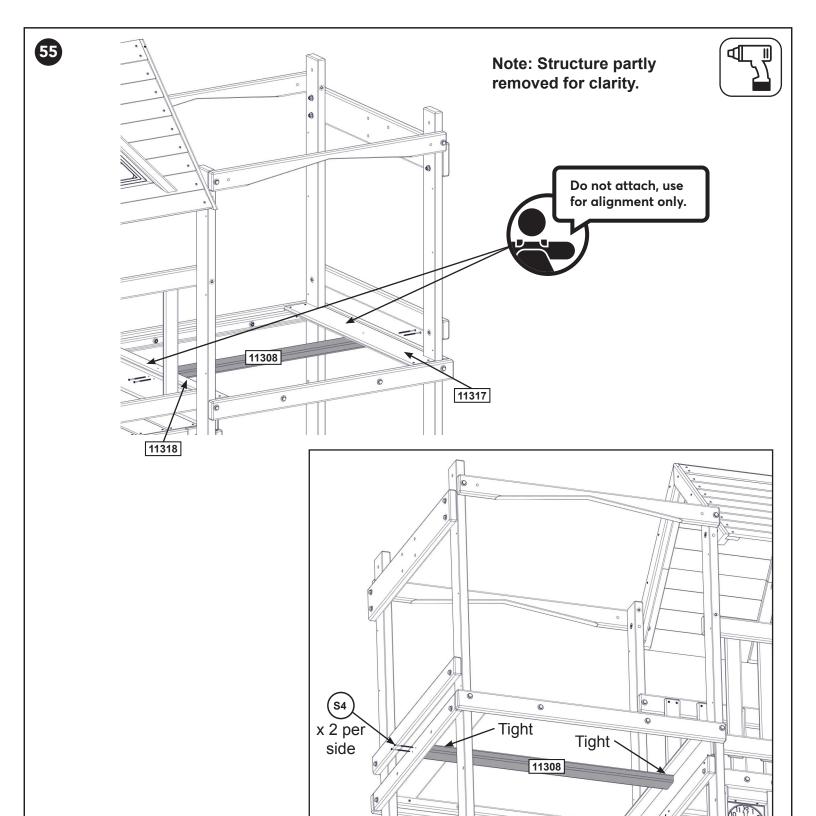

1 x 11308 31.8 mm x 76.2 mm x 1009 mm (1 1/4" x 3" x 39 3/4")

1 x 11317 15.9 mm x 136.5 mm x 935.8 mm (5/8" x 5 3/8" x 36 13/16")

Underneath

View

1 x 11318 15.9 mm x 63.5 mm x 935.8 mm (5/8" x 2 1/2" x 36 13/16")

### <u>Hardware</u>

4 x (S4) #8 x 76.2 mm (#8 x 3")




parts.kidkraft.com



## Note: Structure partly removed for clarity.



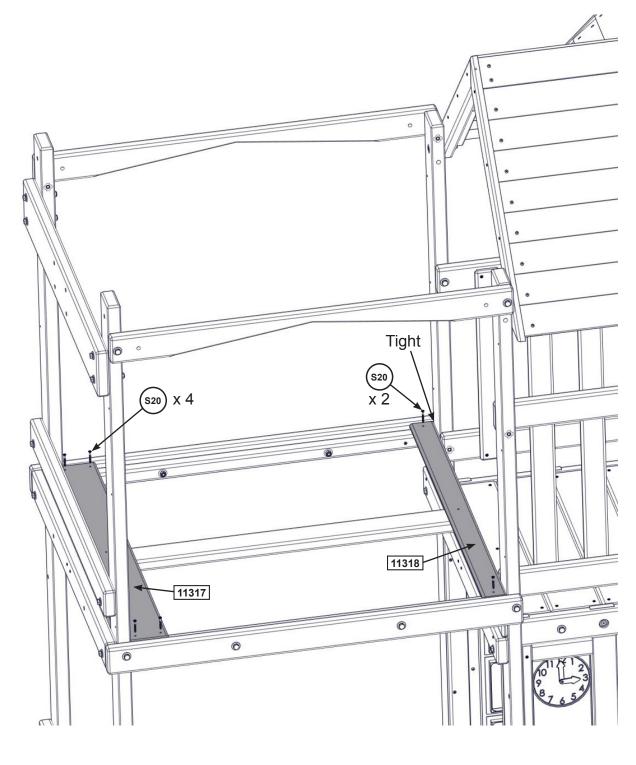


**Hardware** 

6 x (S20) #8 x 34.9 mm (#8 x 1-3/8")


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)









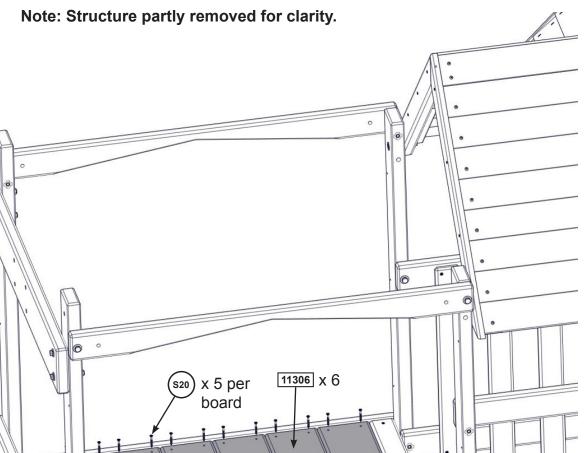


6 x 11306 15.9 mm x 136.5 mm x 935.8 mm (5/8" x 5 3/8" x 36 13/16")

<u>Hardware</u>

32 x (S20) #8 x 34.9 mm (#8 x 1-3/8")



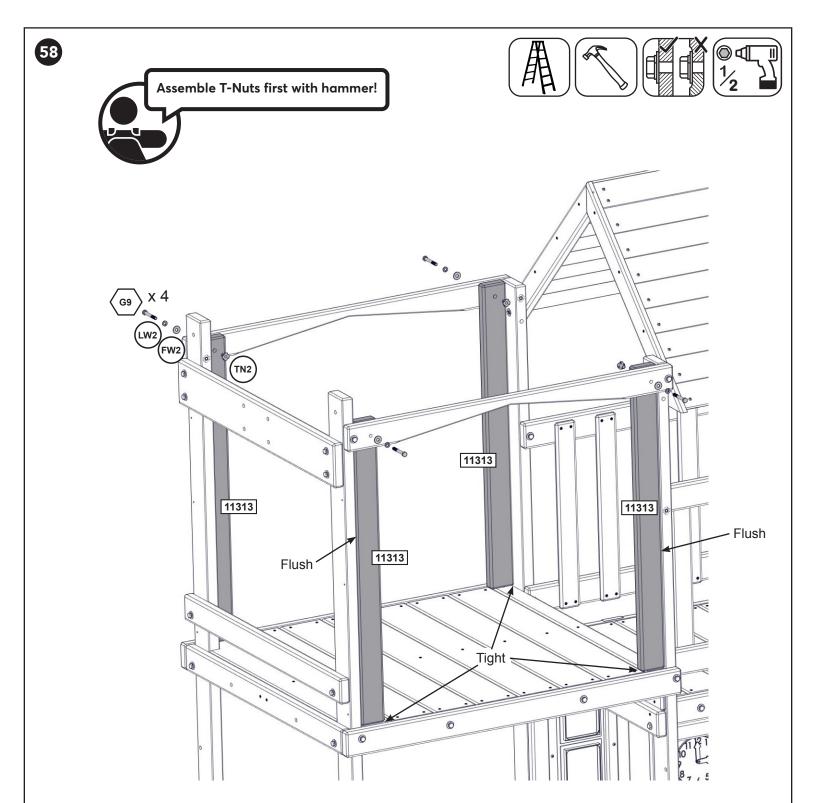

Note: Structure partly removed for clarity.

**Wood Parts** 


4 x 11313 31.8 mm x 76.2 mm x 914.4 mm (1 1/4" x 3" x 36")

**Hardware** 

4 x (G9) 7.9 x 63.5 mm (5/16 x 2-1/2") (LW2, FW2, TN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



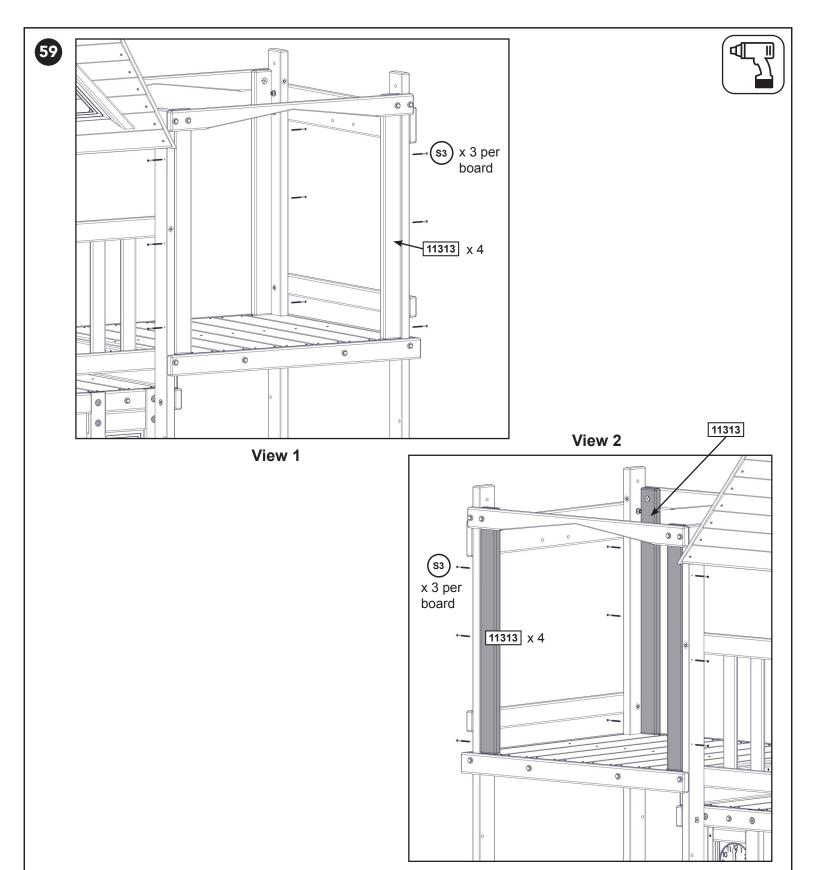







parts.kidkraft.com



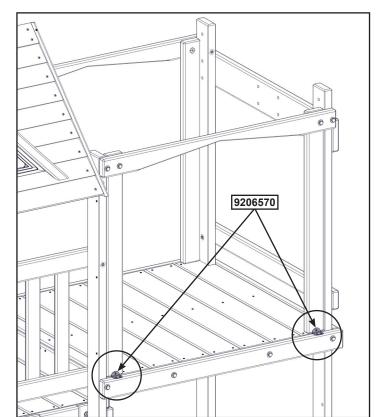


Note: Structure partly removed for clarity.

View 1

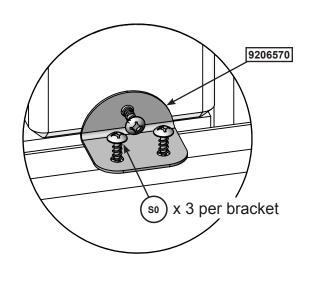

View 2

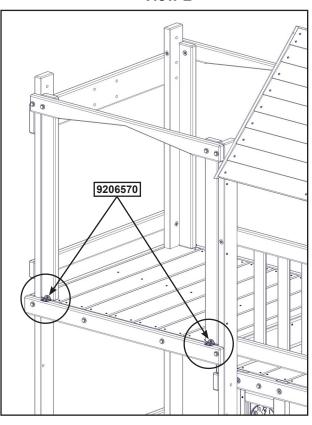

Hardware
12 x (so) #8 x 22.2 mm (#8 x 7/8")

Other Parts
4 x 9206570

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)












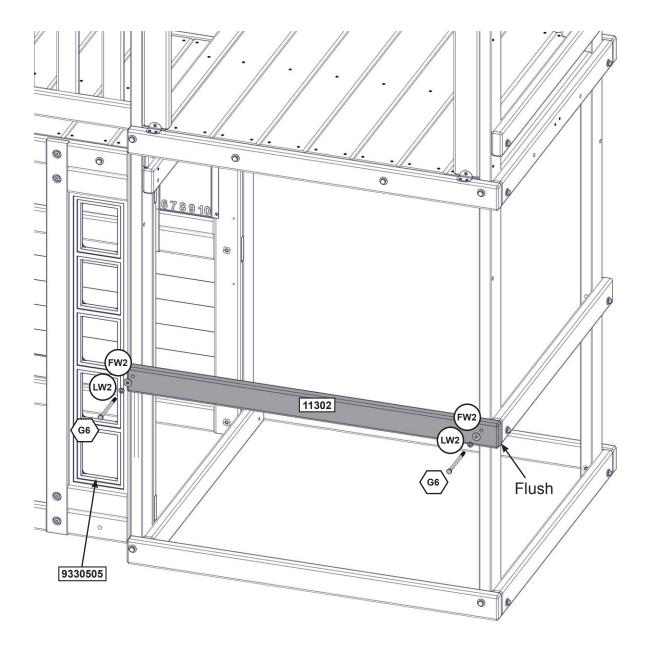


1 x 11302 31.8 mm x 76.2 mm x 1092.2 mm (1 1/4" x 3" x 43")

**Hardware** 

2 x G6 7.9 x 120.7 mm (5/16 x 4-3/4") (LW2, FW2)



parts.kidkraft.com

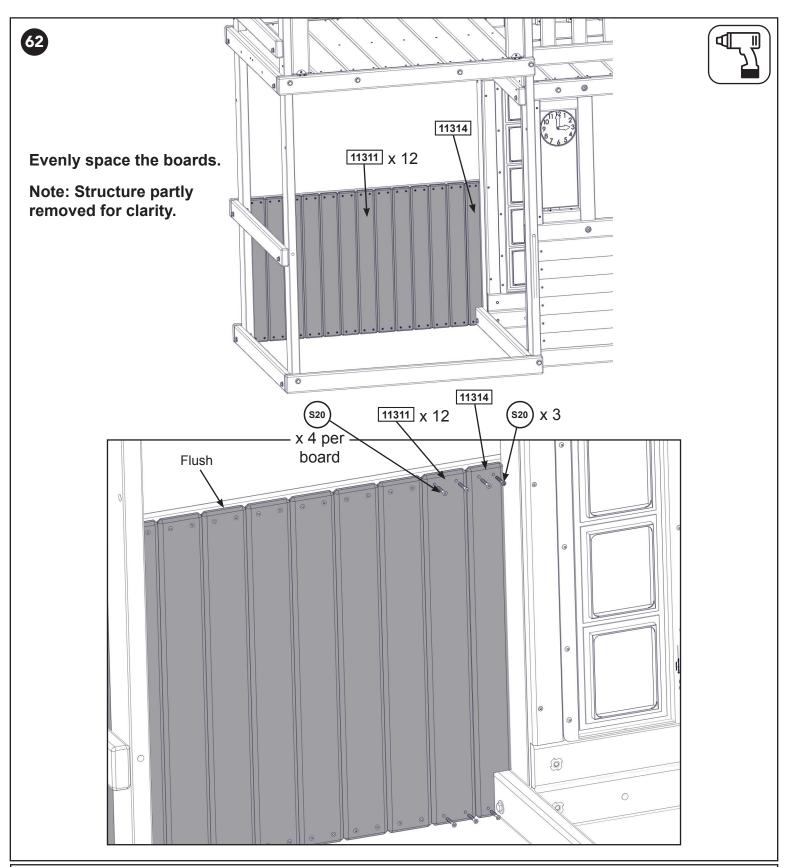

12 x 11311 15.9 mm x 76.2 mm x 609.6 mm (5/8" x 3" x 24")

1 x 11314 15.9 mm x 63.5 mm x 609.6 mm (5/8" x 2 1/2" x 24")


**Hardware** 

51 x (\$20) #8 x 34.9 mm (#8 x 1-3/8")







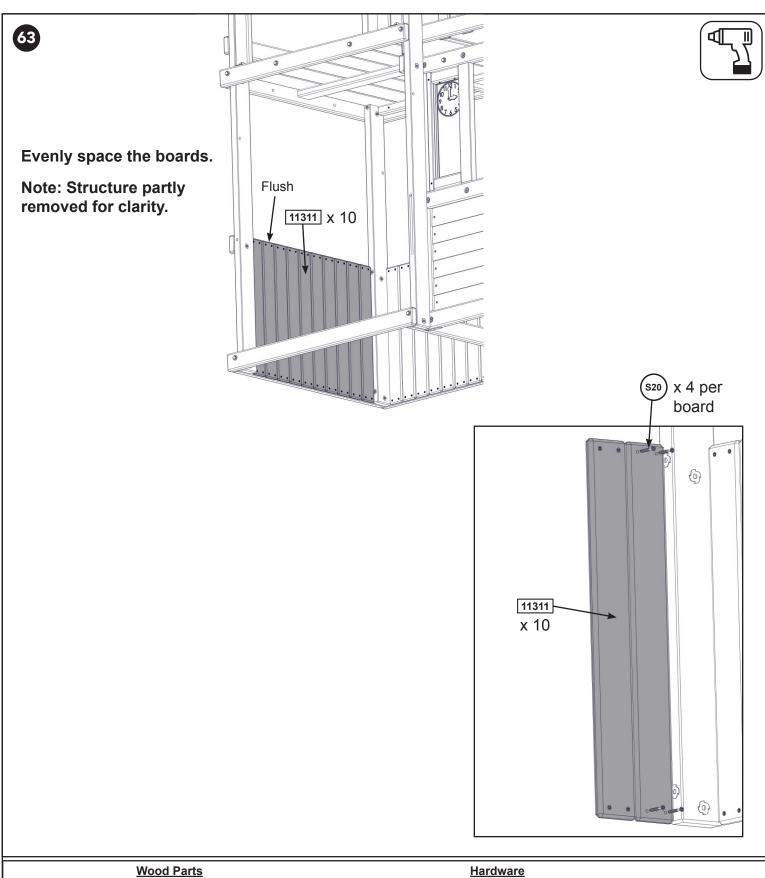


10 x 11311 15.9 mm x 76.2 mm x 609.6 mm (5/8" x 3" x 24")

40 x (S20) #8 x 34.9 mm (#8 x 1-3/8")



parts.kidkraft.com

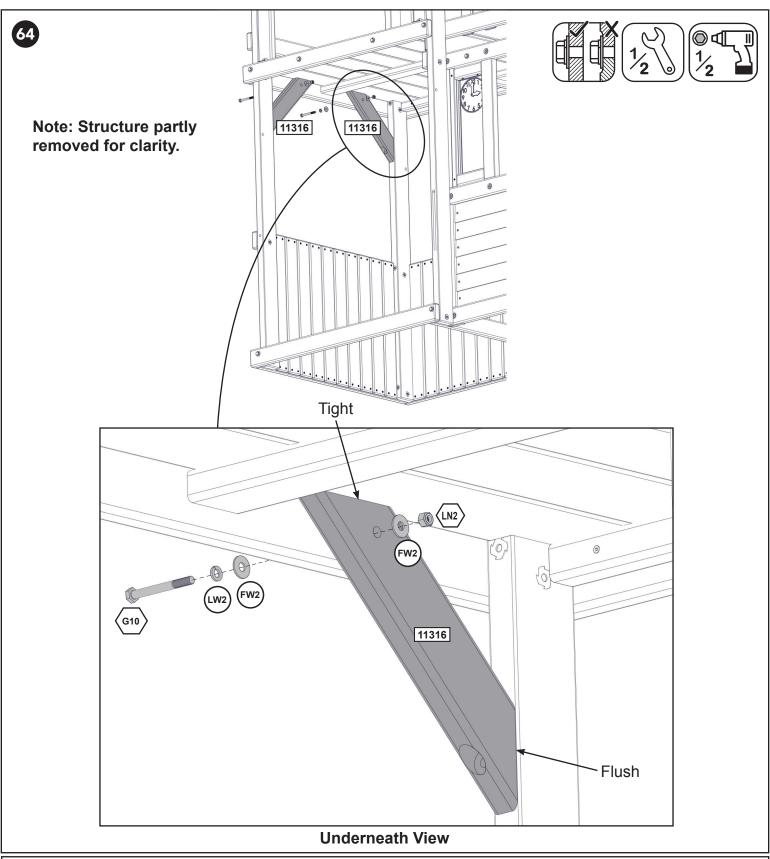


2 x 11316 31.8 mm x 76.2 mm x 384.1 mm (1 1/4" x 3" x 15 1/8")


**Hardware** 

2 x  $\langle \!\!\! \text{G10} \rangle$  7.9 x 76.2 mm (5/16 x 3") (FW2 x 2, LW2, LN2)






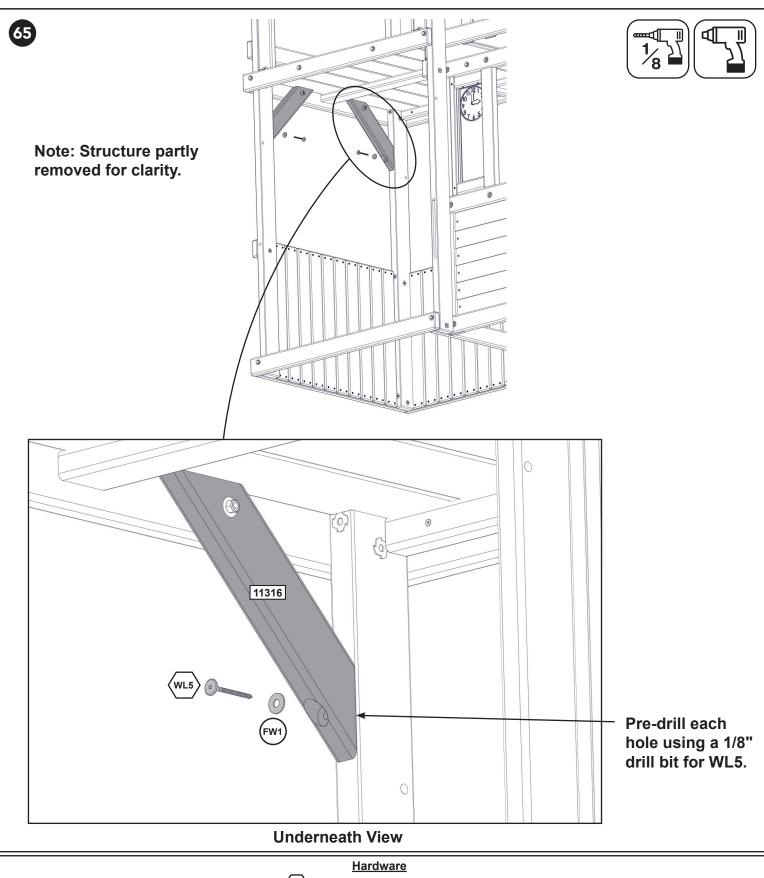






parts.kidkraft.com

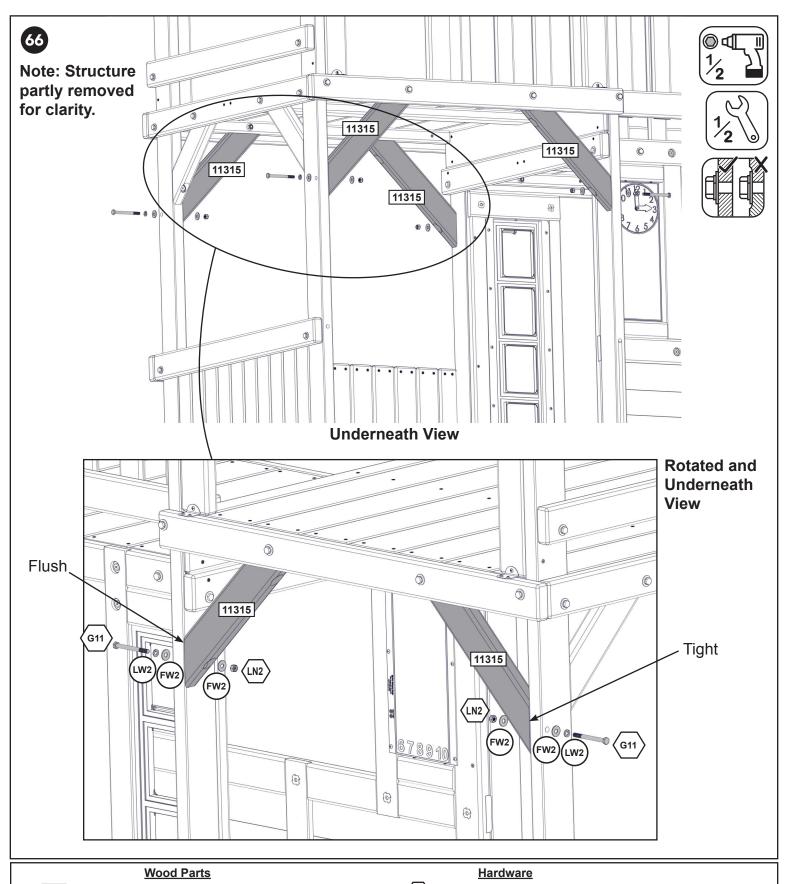

4 x 11315 31.8 mm x 76.2 mm x 442 mm (1 1/4" x 3" x 17 3/8")

4 x (G11) 7.9 x 88.9 mm (5/16 x 3-1/2") (LW2, FW2 x 2, LN2)



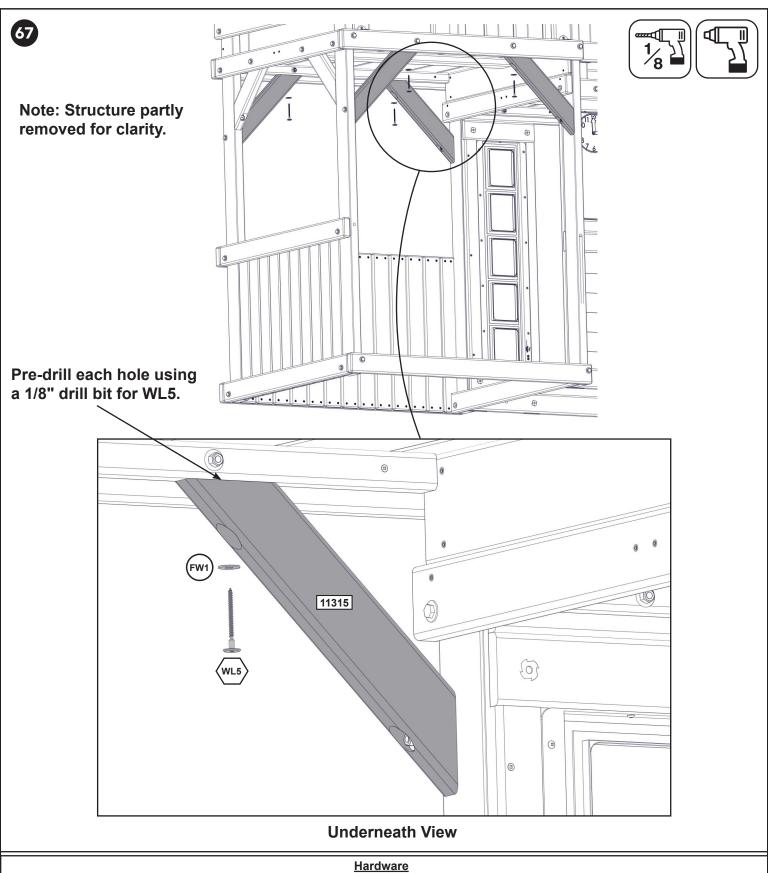



4 x (WL5) 6.4 x 63.5 mm (1/4 x 2-1/2") (FW1)




parts.kidkraft.com



### Note: Structure partly removed for clarity.





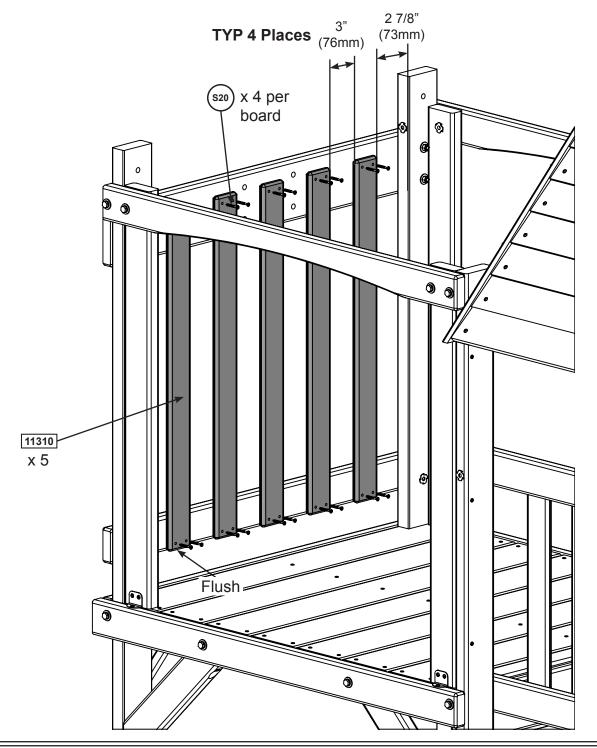


**Wood Parts** 

5 x 11310 15.9 mm x 63.5 mm x 750.6 mm (5/8" x 2 1/2" x 29 9/16")

**Hardware** 

20 x (S20) #8 x 34.9 mm (#8 x 1-3/8")



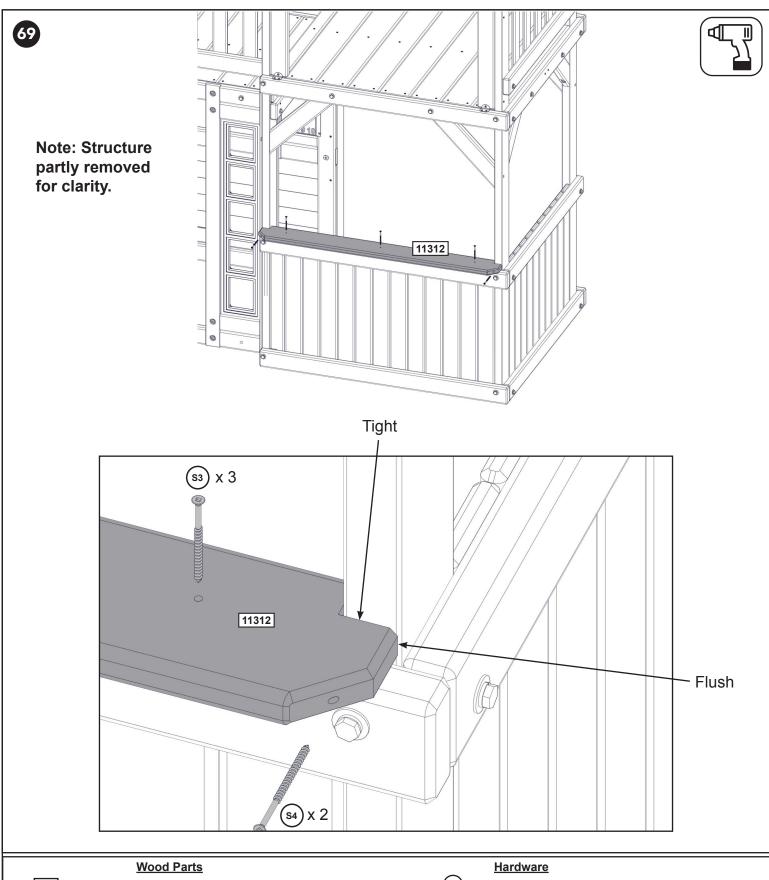



3 x (§3) #8 x 63.5 mm (#8 x 2-1/2")

2 x (s4) #8 x 76.2 mm (#8 x 3")




parts.kidkraft.com




### Pre-drill holes using a 1/8" drill bit.





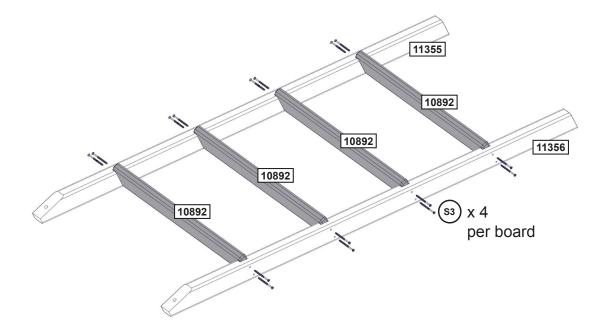

### **End View**

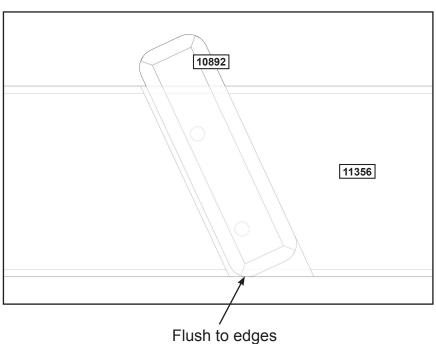

#### **Wood Parts**

1 x 11355 34.9 mm x 63.5 mm x 1490 mm (1 3/8" x 2 1/2" x 58 11/16")


1 x 11356 34.9 mm x 63.5 mm x 1490 mm (1 3/8" x 2 1/2" x 58 11/16")

4 x 10892 23.8 mm x 82.6 mm x 539.8 mm (15/16" x 3 1/4" x 21 1/4")

#### **Hardware**

16 x (S3) #8 x 63.5 mm (#8 x 2-1/2")



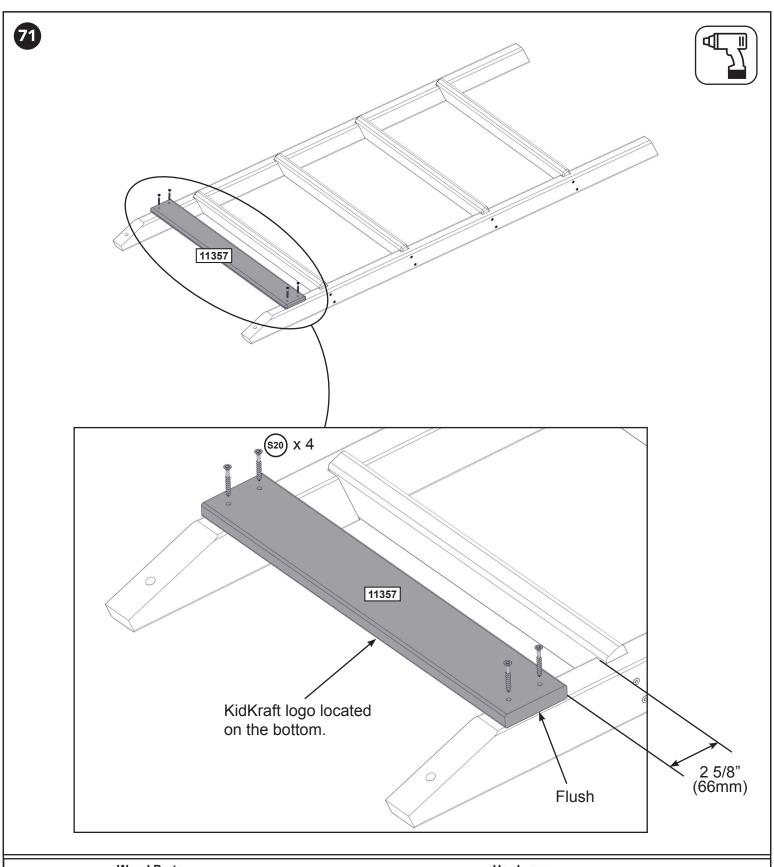


1 x 11357 15.9 mm x 76.2 mm x 577.8 mm (5/8" x 3" x 22 3/4")

### **Hardware**

4 x (S20) #8 x 34.9 mm (#8 x 1-3/8")



parts.kidkraft.com

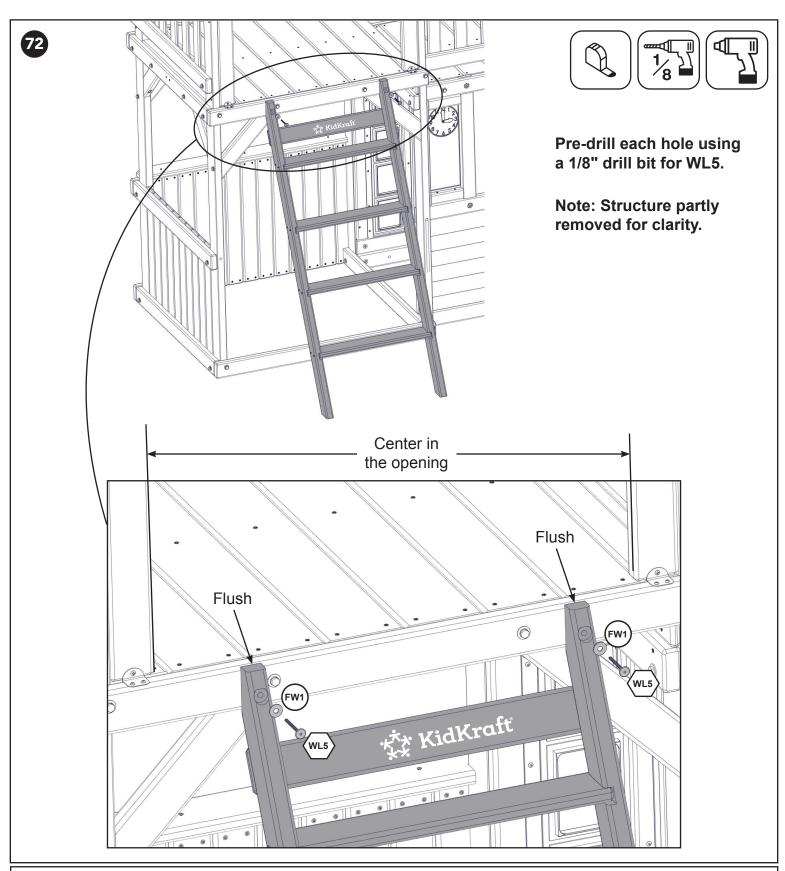

 $\frac{Hardware}{2~x~\sqrt{\text{WL5}}}~6.4~x~63.5~mm~(1/4~x~2-1/2")~(FW1)$ 

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)




Pre-drill each hole using a 1/8" drill bit for WL3.







Note: Structure partly removed for clarity.

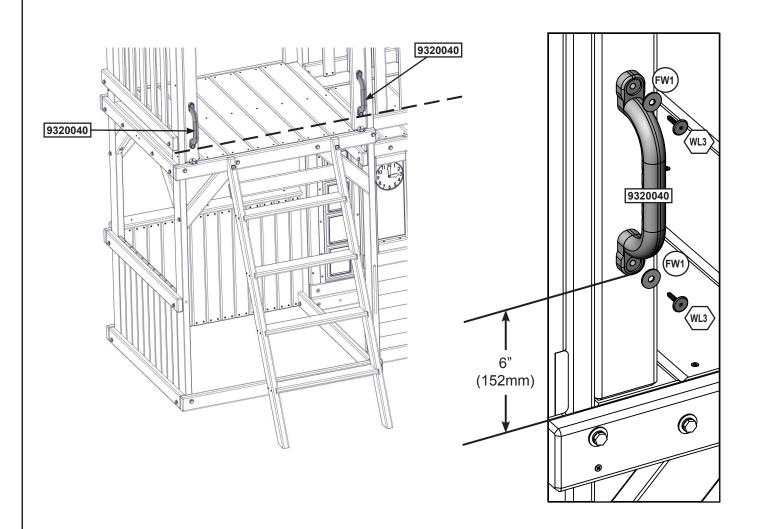

<u>Hardware</u>


4 x (WL3) 6.4 x 34.9 mm (1/4 x 1-3/8") (FW1)

**Other Parts** 

2 x 9320040



parts.kidkraft.com

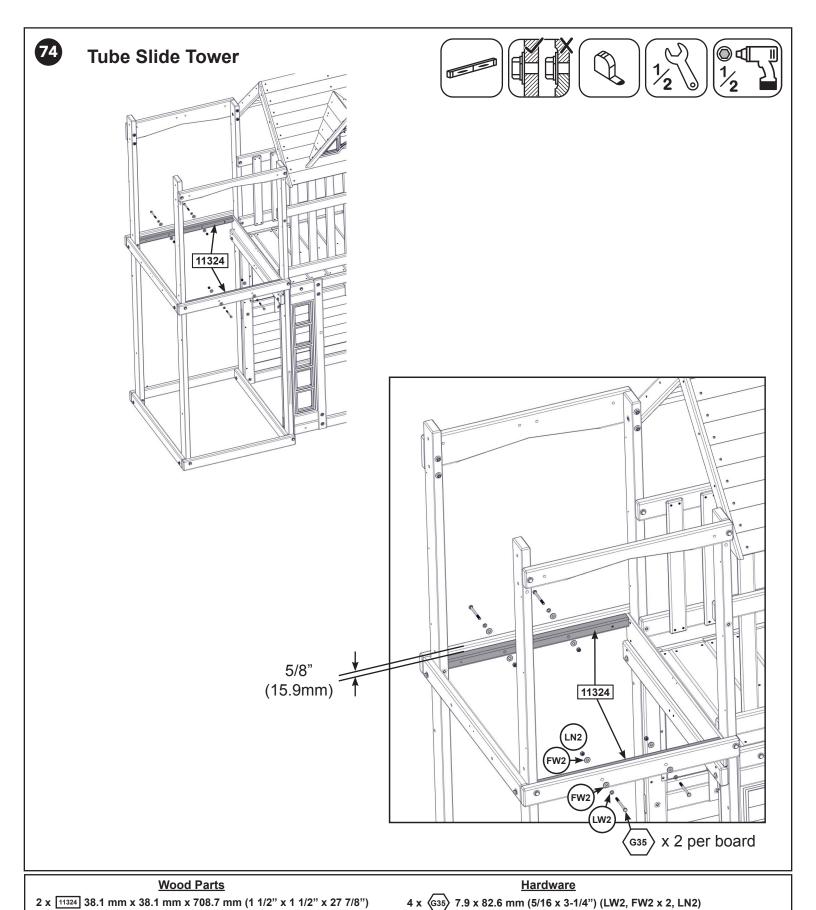


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)








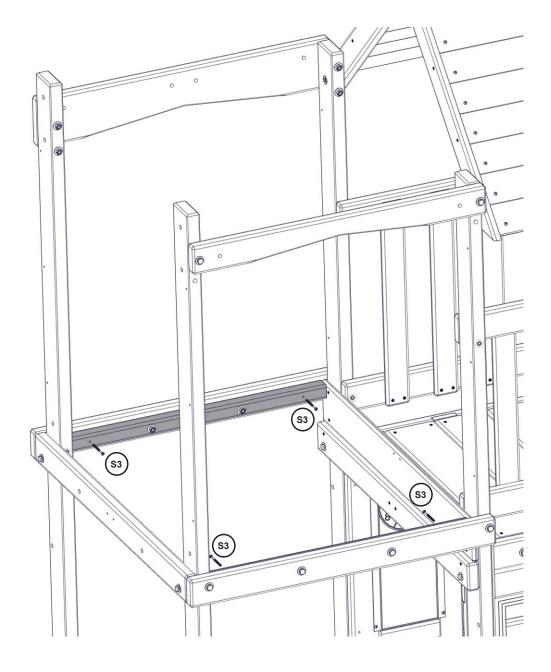

### <u>Hardware</u>


4 x (s<sub>3</sub>) #8 x 63.5 mm (#8 x 2-1/2")




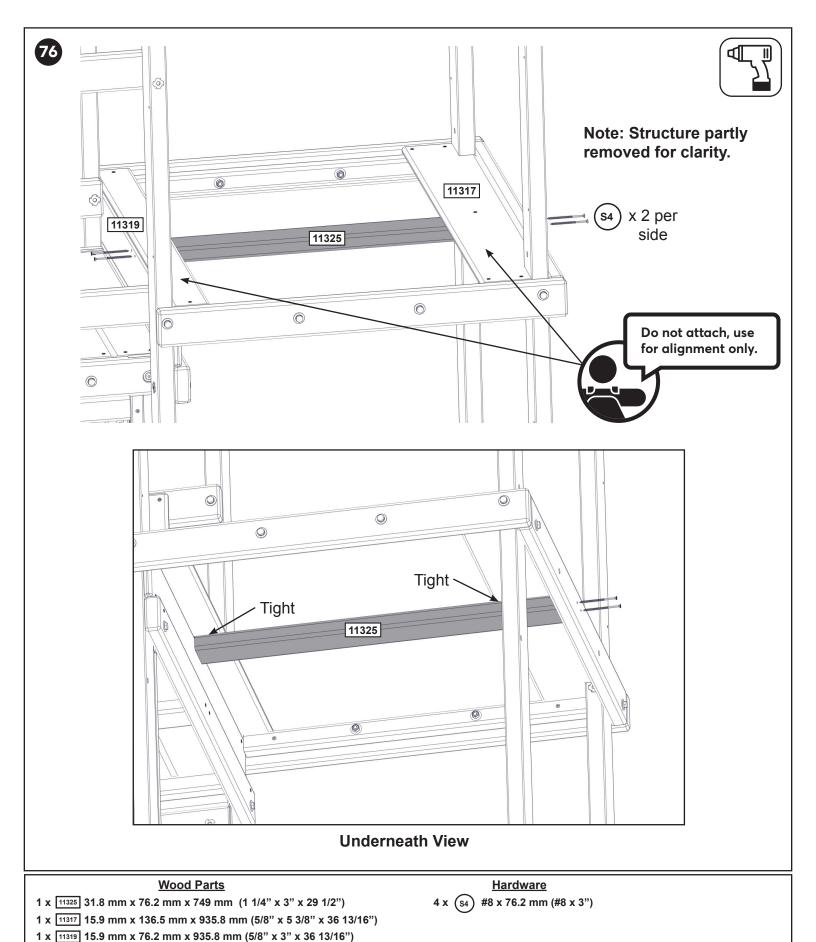

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



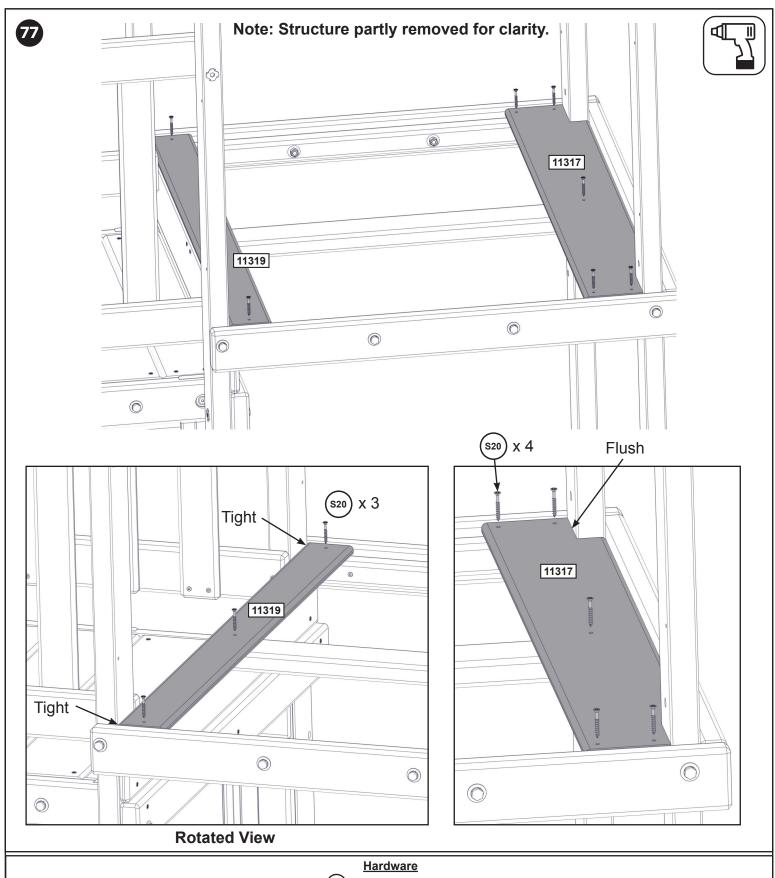







parts.kidkraft.com







Note: Structure partly removed for clarity.

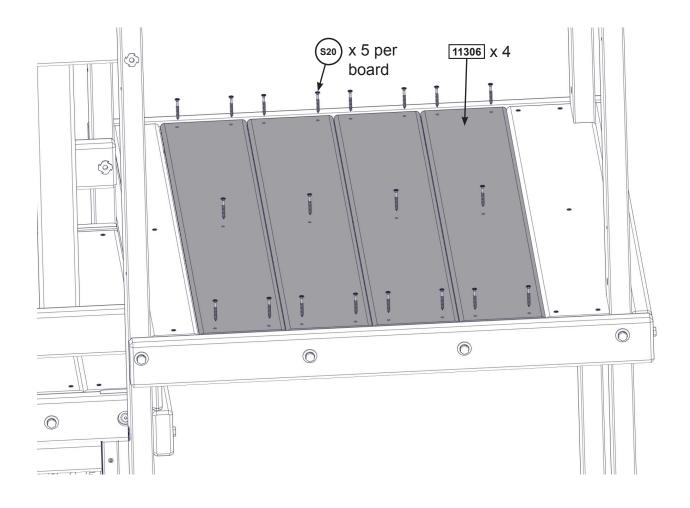


**Wood Parts** 


4 x 11306 15.9 mm x 136.5 mm x 935.8 mm (5/8" x 5 3/8" x 36 13/16")

**Hardware** 

20 x (S20) #8 x 34.9 mm (#8 x 1-3/8")



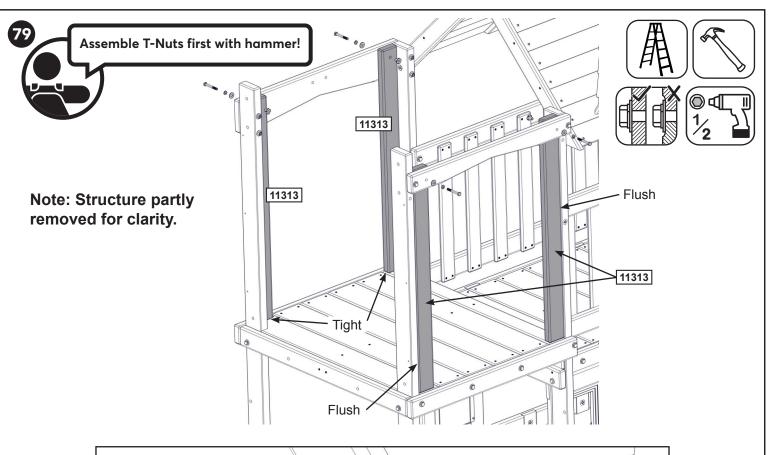

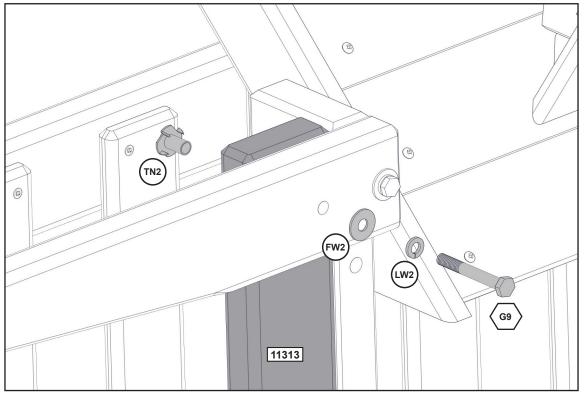

4 x 11313 31.8 mm x 76.2 mm x 914.4 mm (1 1/4" x 3" x 36")


**Hardware** 

4 x  $\left\langle \text{G9} \right\rangle$  7.9 x 63.5 mm (5/16 x 2-1/2") (LW2, FW2, TN2)



parts.kidkraft.com




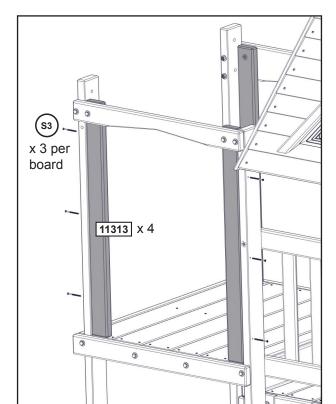

View 1



View 2

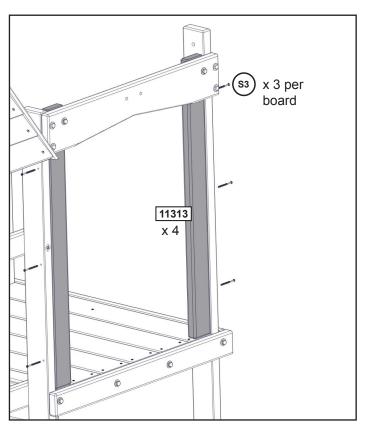

<u>Hardware</u>

12 x (S3) #8 x 63.5 mm (#8 x 2-1/2")

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)









Note: Structure partly removed for clarity.

9206570

View 1



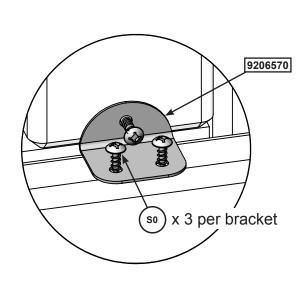

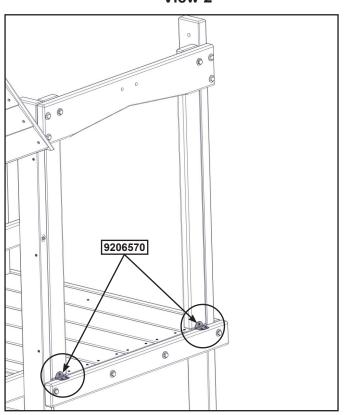


Hardware
12 x (so) #8 x 22.2 mm (#8 x 7/8")

**Other Parts** 

4 x 9206570



parts.kidkraft.com

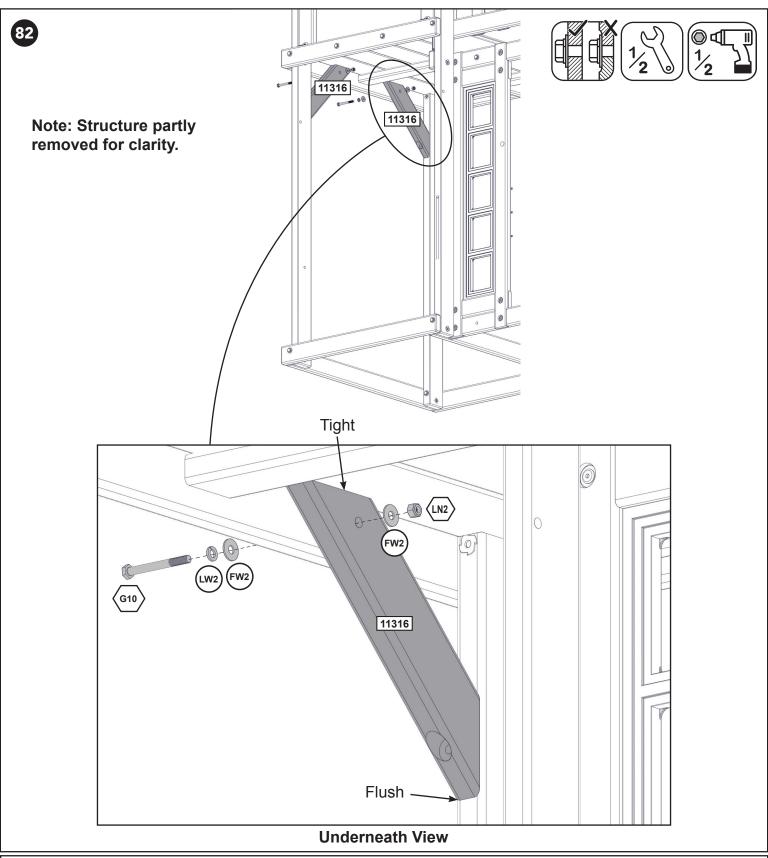


2 x 11316 31.8 mm x 76.2 mm x 384.1 mm (1 1/4" x 3" x 15 1/8")

**Hardware** 

2 x  $\langle \!\!\! \text{G10} \rangle$  7.9 x 76.2 mm (5/16 x 3") (FW2 x 2, LW2, LN2)






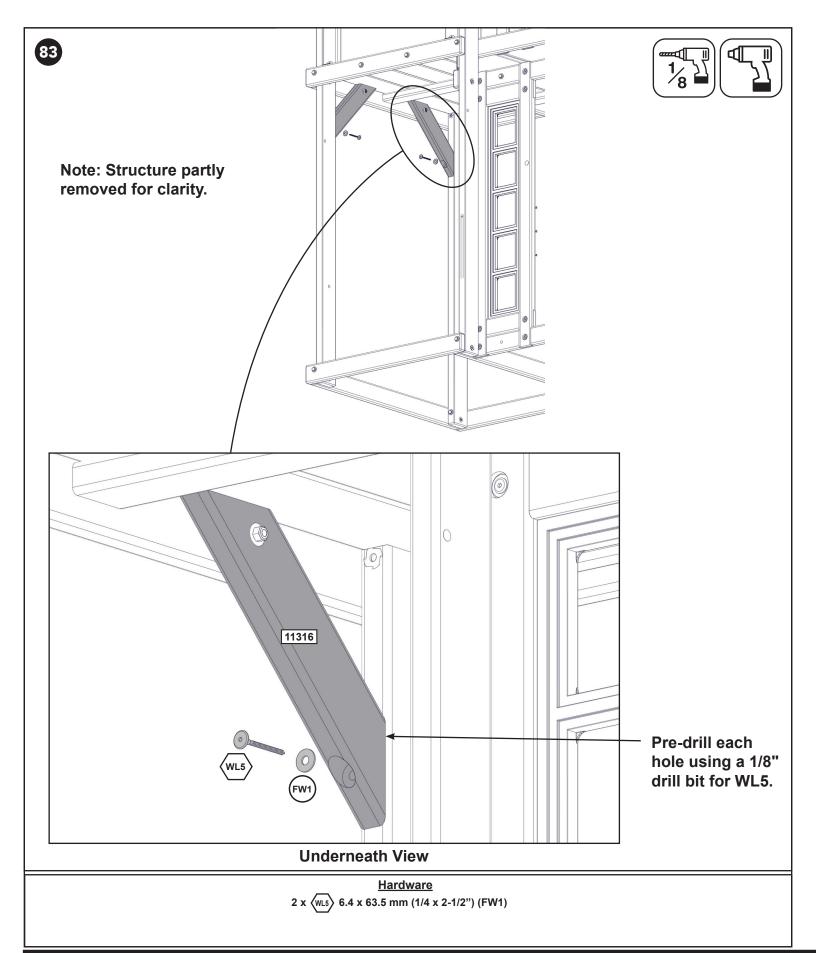



parts.kidkraft.com

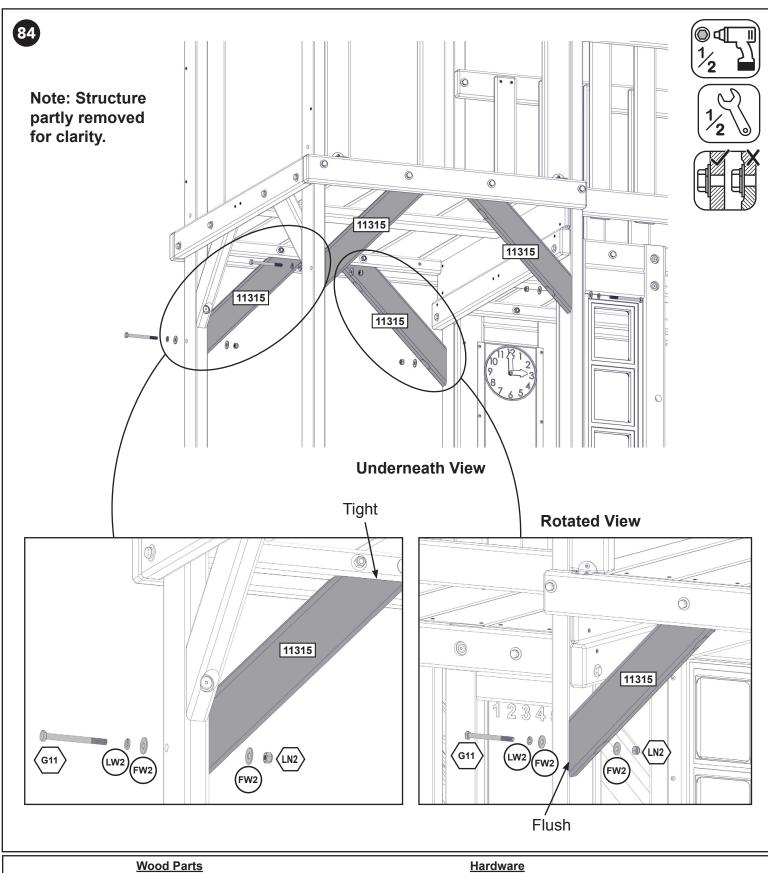


4 x 11315 31.8 mm x 76.2 mm x 442 mm (1 1/4" x 3" x 17 3/8")

**Hardware** 

4 x (G11) 7.9 x 88.9 mm (5/16 x 3-1/2") (LW2, FW2 x 2, LN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



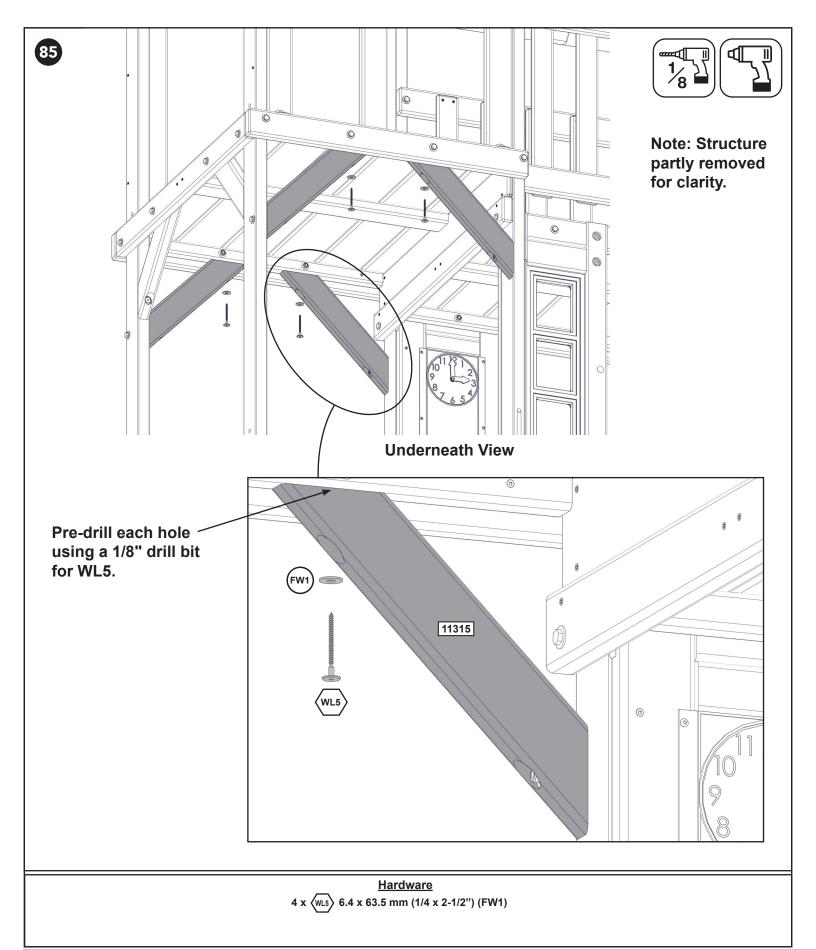



parts.kidkraft.com




Assemble T-Nuts first with hammer!

Note: Structure partly removed for clarity.








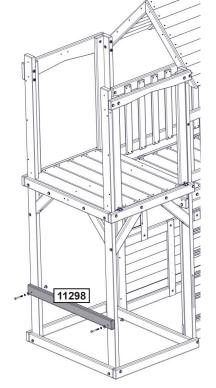

Note hole orientation

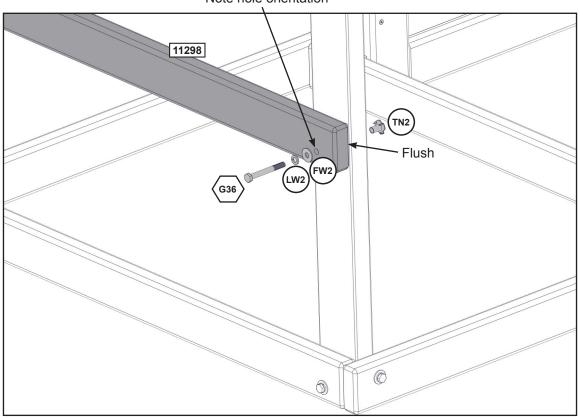

**Wood Parts** 

1 x 11298 31.8 mm x 76.2 mm x 939.8 mm (1 1/4" x 3" x 37")

**Hardware** 

2 x (G36) 7.9 x 69.9 mm (5/16" x 2-3/4") (LW2, FW2, TN2)






## Pre-drill S7 holes using a 1/8" drill bit.







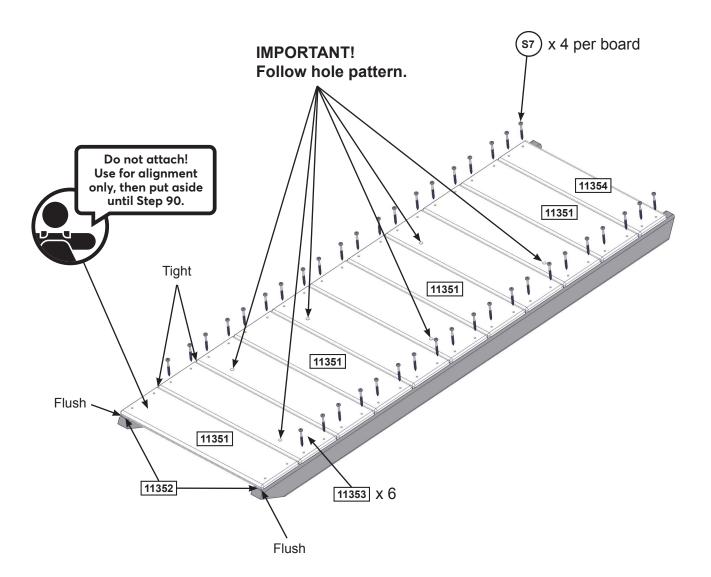

**Wood Parts** 

2 x 11352 34.9 mm x 63.5 mm x 1500 mm (1 3/8" x 2 1/2" x 59 1/16")


4 x 11351 15.9 mm x 136.5 mm x 508 mm (5/8" x 5 3/8" x 20") 6 x 11353 15.9 mm x 136.5 mm x 508 mm (5/8" x 5 3/8" x 20") 1 x 1354 15.9 mm x 101.6 mm x 508 mm (5/8" x 4" x 20")

Hardware 1 x (97) #12 x 50 8 mm

40 x (S7) #12 x 50.8 mm (#12 x 2")



parts.kidkraft.com

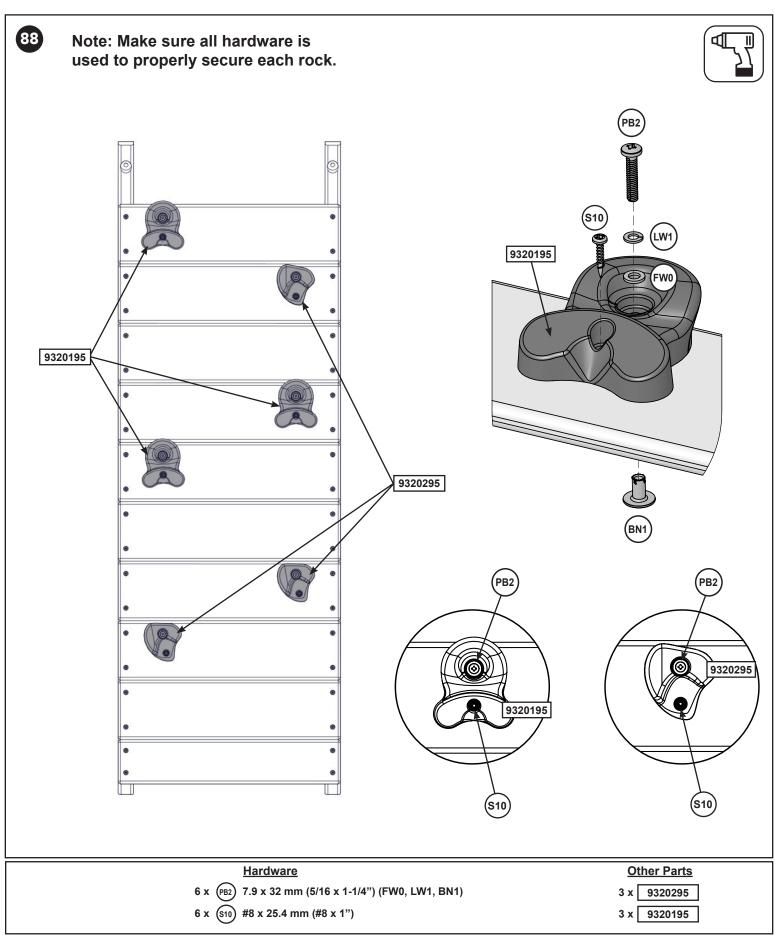









**Note: Structure partly** removed for clarity.







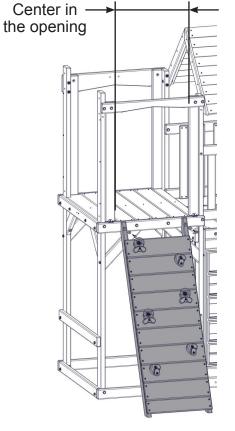

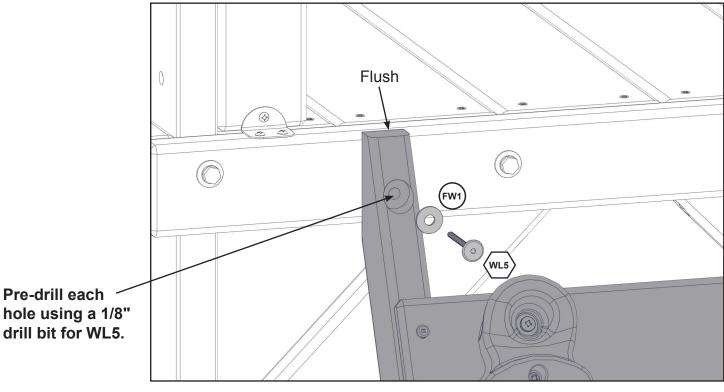


**Hardware** 2 x (WL5) 6.4 x 63.5 mm (1/4 x 2-1/2") (FW1)



Pre-drill each

parts.kidkraft.com

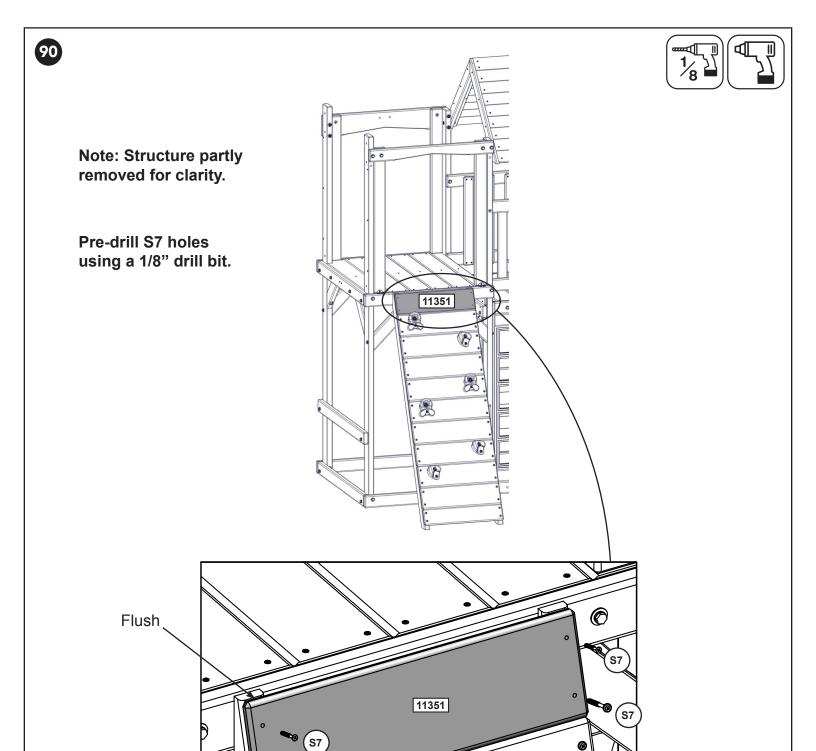

Hardware 4 x (\$7) #12 x 50.8 mm (#12 x 2")

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)






Pre-drill each hole using a 1/8" drill bit for WL3.








Note: Structure partly removed for clarity.

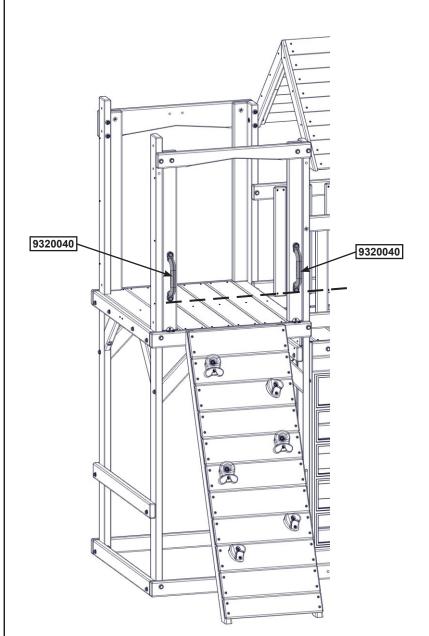

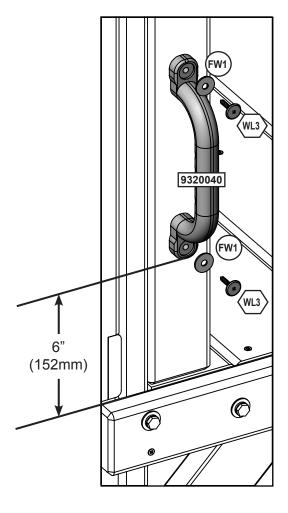

**Hardware** 


4 x (WL3) 6.4 x 34.9 mm (1/4 x 1-3/8") (FW1)

Other Parts

2 x 9320040



parts.kidkraft.com

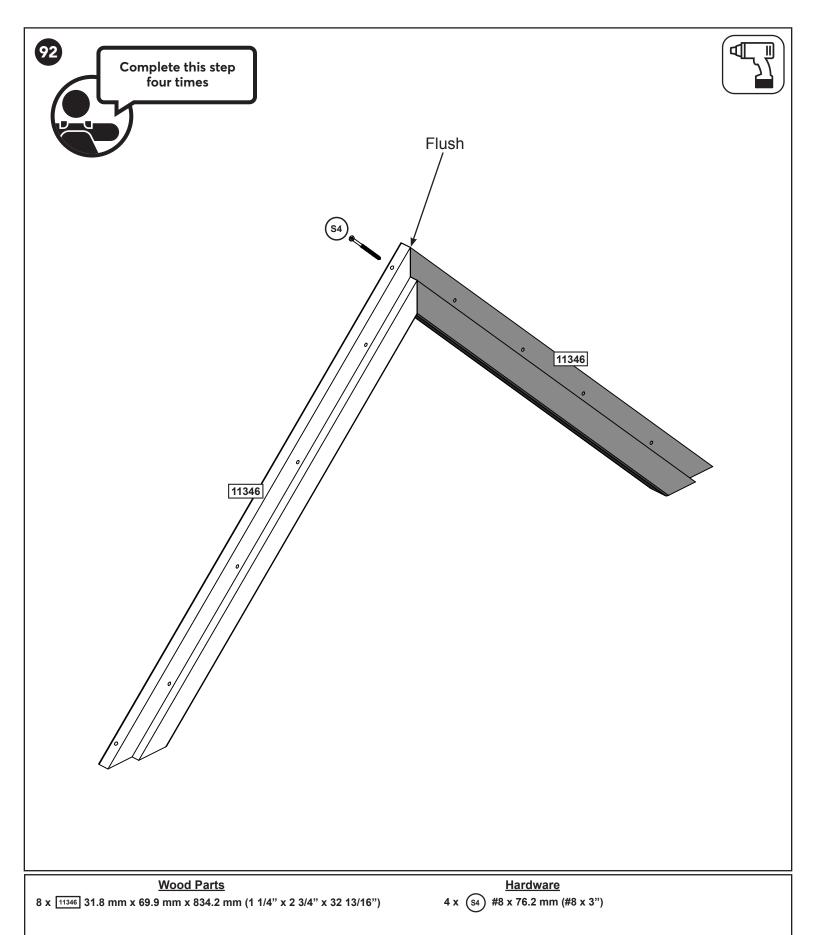


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)







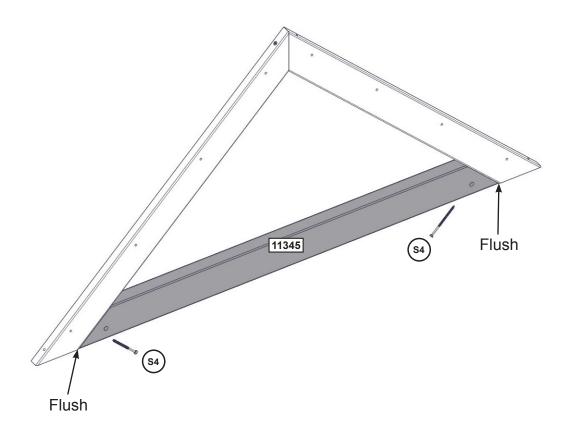

2 x 11345 31.8 mm x 76.2 mm x 982 mm (1 1/4" x 3" x 38 11/16")


<u>Hardware</u>


4 x (s4) #8 x 76.2 mm (#8 x 3")



parts.kidkraft.com



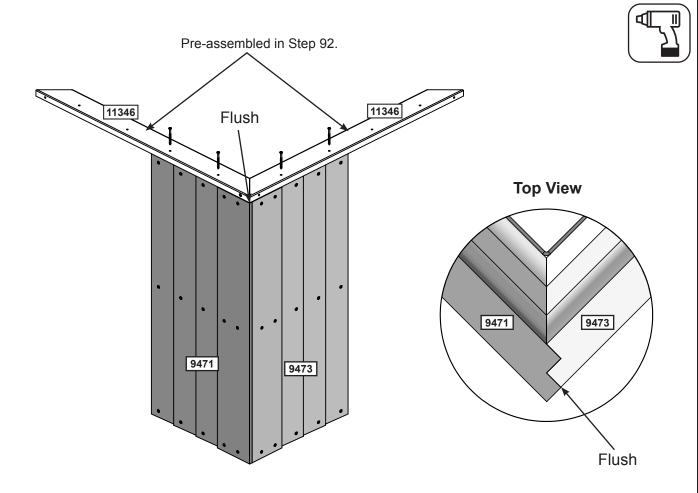

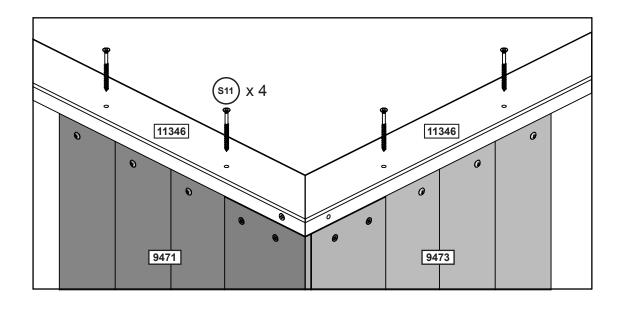

1 x 9471 31.8 mm x 424.2 mm x 826.8 mm (1 1/4" x 16 11/16" x 32 9/16")

1 x 9473 31.8 mm x 417.9 mm x 826.8 mm (1 1/4" x 16 7/16" x 32 9/16")

#### <u>Hardware</u>


4 x (S11) #8 x 50.8mm (#8 x 2")










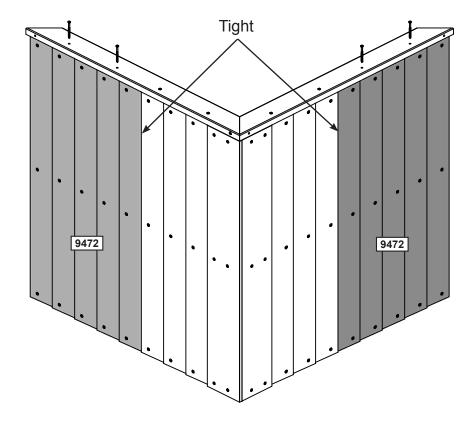

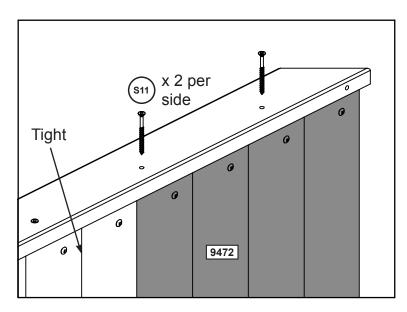


2 x 9472 31.8 mm x 405 mm x 826.8 mm (1 1/4" x 15 15/16" x 32 9/16")

**Hardware** 

4 x (S11) #8 x 50.8mm (#8 x 2")




parts.kidkraft.com

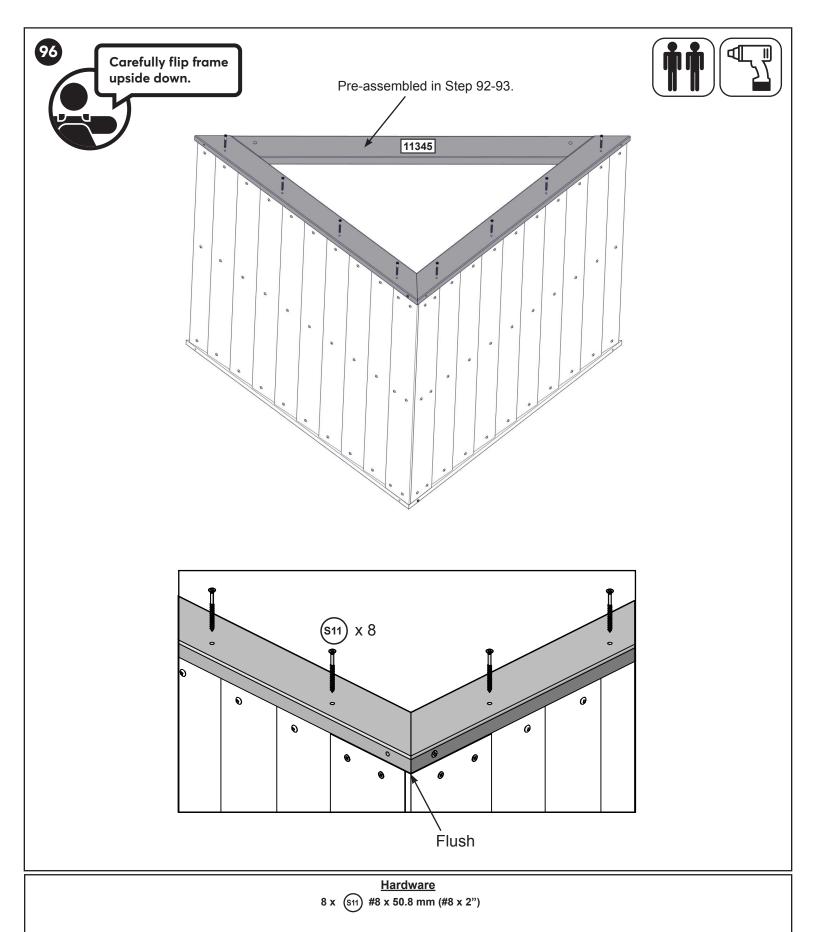

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



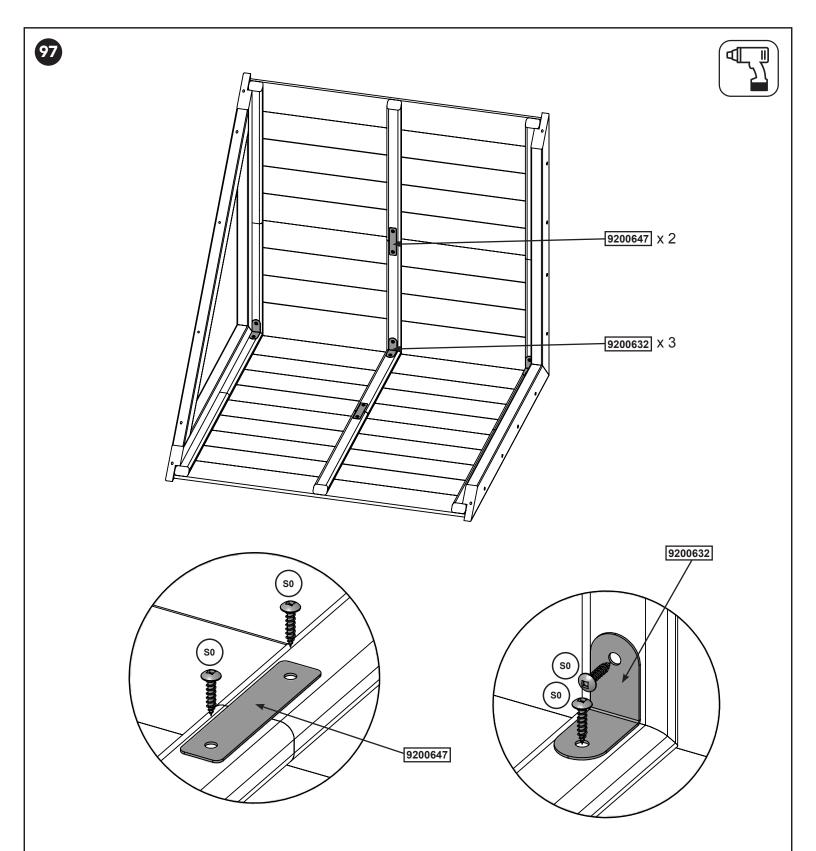

Hardware 10 x (s0) #8 x 22.2 mm (#8 x 7/8")

#### **Other Parts**

3 x 9200632

2 x 9200647




parts.kidkraft.com





# Center in the opening

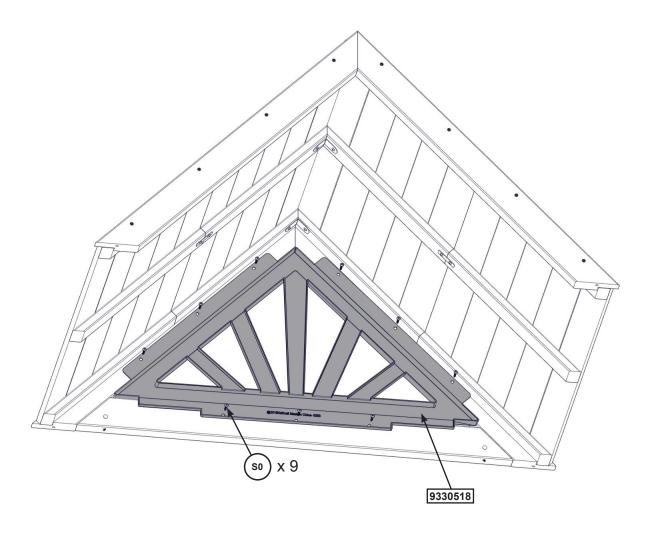

**Inside View** 

<u>Hardware</u>

9 x (so) #8 x 22.2 mm (#8 x 7/8")

Other Parts


1 x 9330518

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)








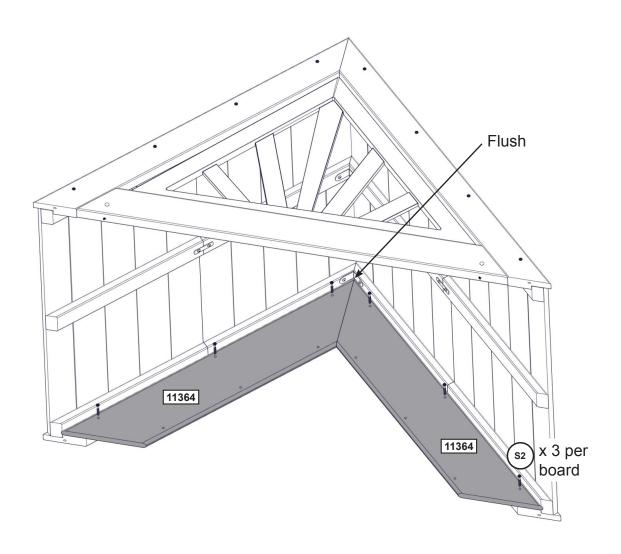

2 x 11364 15.9 mm x 136.5 mm x 770 mm (5/8" x 5 3/8" x 30 5/16")

Hardware 6 x S2 #8 x 38.1 mm (#8 x 1-1/2")



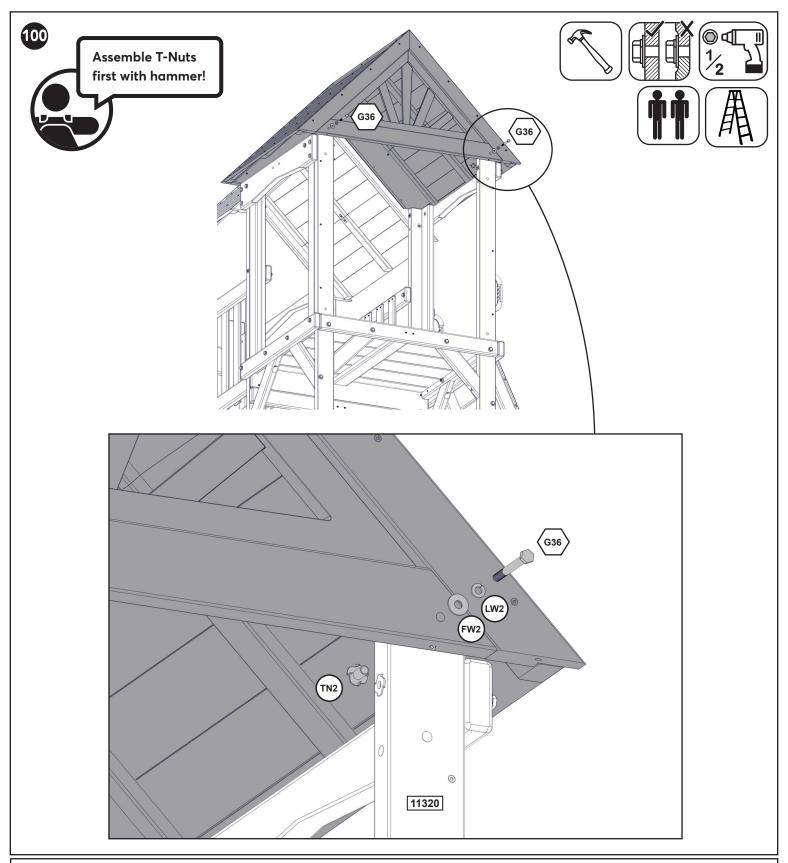



Hardware 2 x (G36) 7.9 x 69.9 mm (5/16 x 2-3/4") (LW2, FW2, TN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)





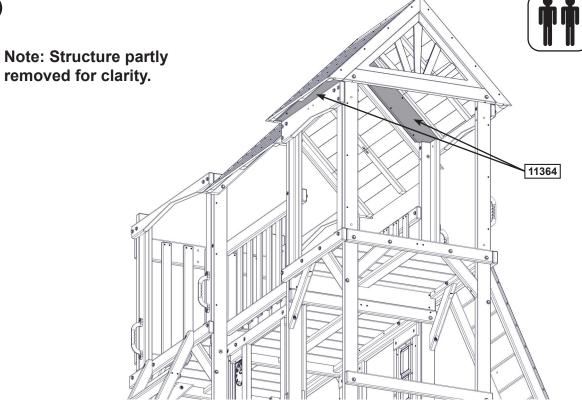

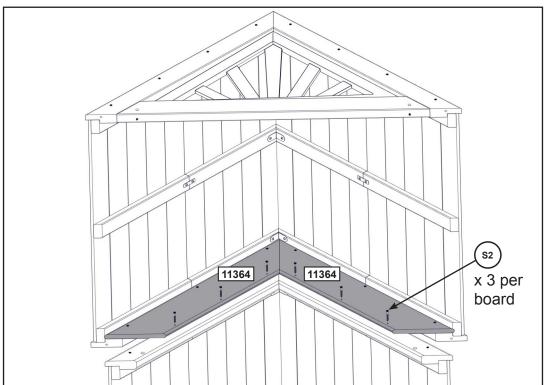

# **Inside and Underneath View**

#### **Hardware**


6 x (s<sub>2</sub>) #8 x 38.1 mm (#8 x 1-1/2")




parts.kidkraft.com





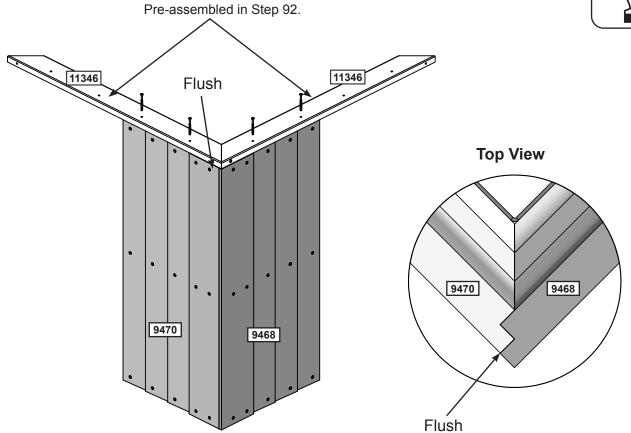

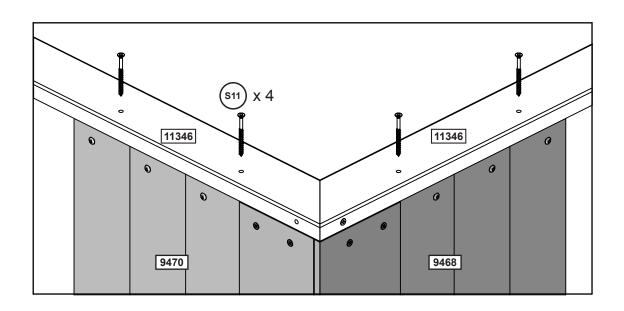

1 x 9468 31.8 mm x 424.2 mm x 1086.8 mm (1 1/4" x 16 11/16" x 42 13/16")

1 x 9470 31.8 mm x 418.7 mm x 1086.8 mm (1 1/4" x 16 1/2" x 42 13/16")

#### <u>Hardware</u>


4 x (S11) #8 x 50.8mm (#8 x 2")


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)







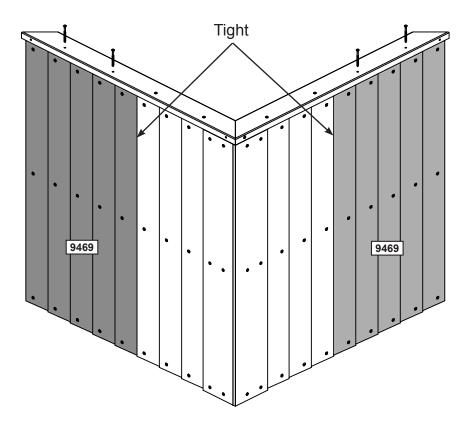

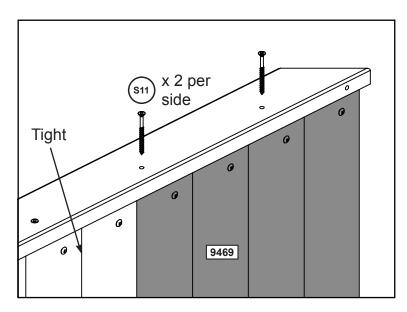


2 x 9469 31.8 mm x 405 mm x 1086.8 mm (1 1/4" x 15 15/16" x 42 13/16")

<u>Hardware</u>


4 x (S11) #8 x 50.8mm (#8 x 2")



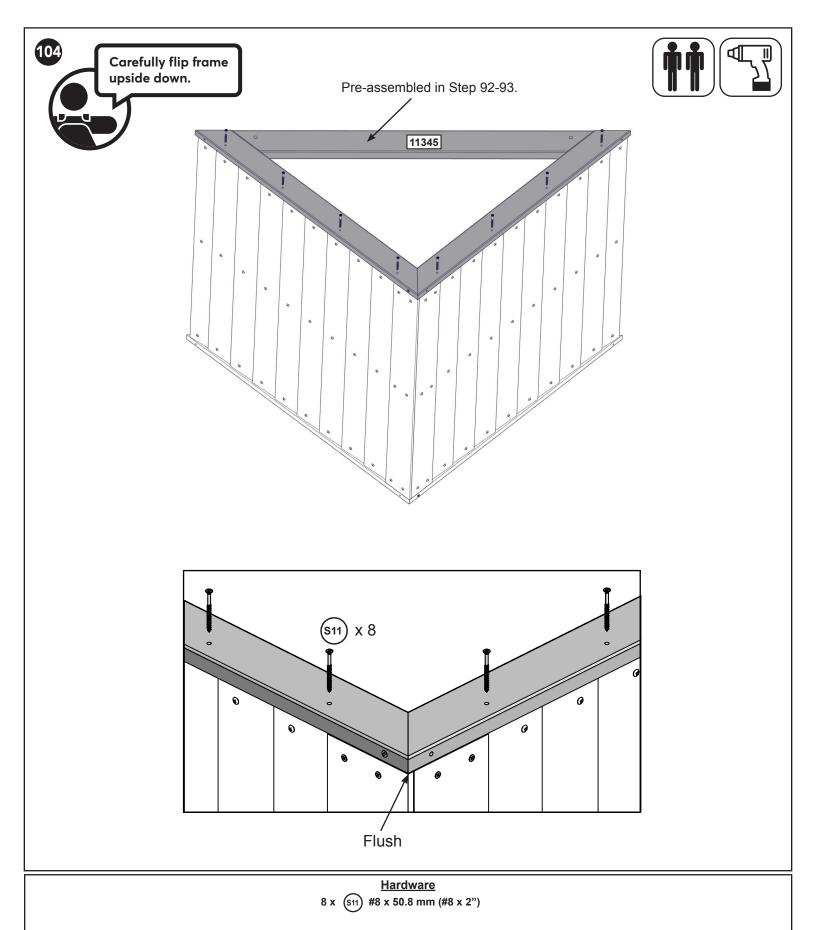

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



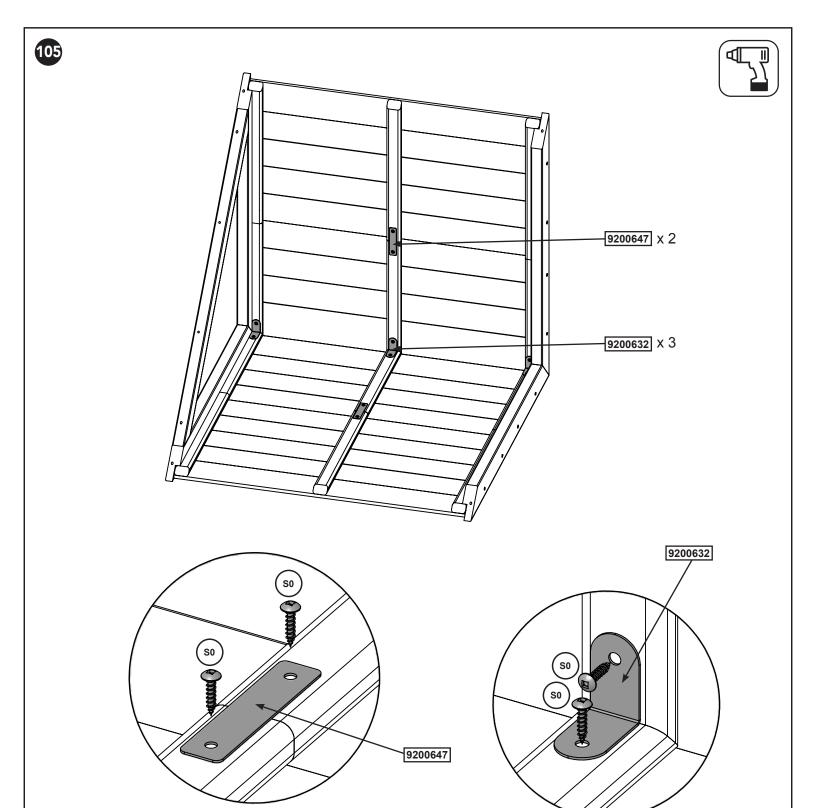



Hardware 10 x (s0) #8 x 22.2 mm (#8 x 7/8")

#### **Other Parts**

3 x 9200632

2 x 9200647




parts.kidkraft.com





## Center in the opening

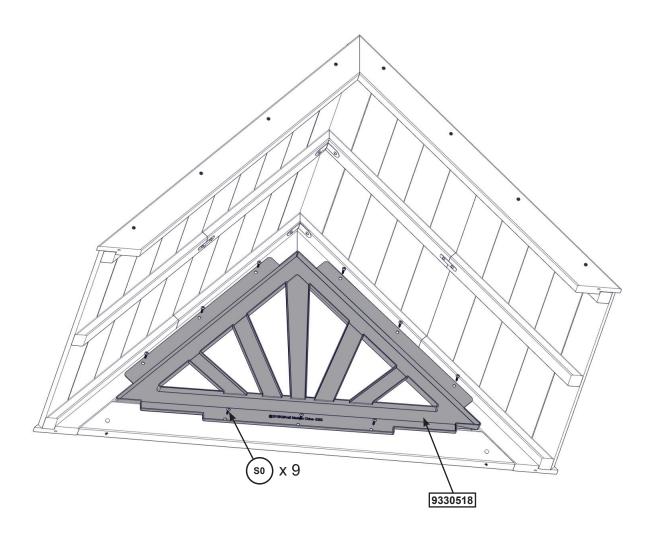

**Inside View** 

<u>Hardware</u>

9 x (so) #8 x 22.2 mm (#8 x 7/8")

Other Parts


1 x 9330518

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)








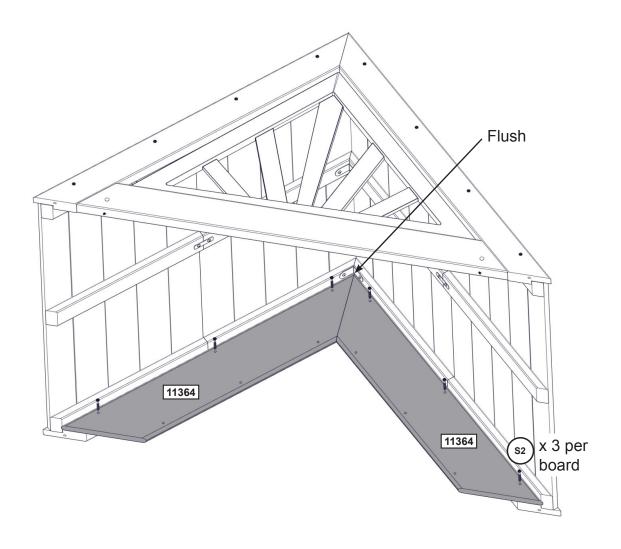

2 x 11364 15.9 mm x 136.5 mm x 770 mm (5/8" x 5 3/8" x 30 5/16")

Hardware 6 x S2 #8 x 38.1 mm (#8 x 1-1/2")




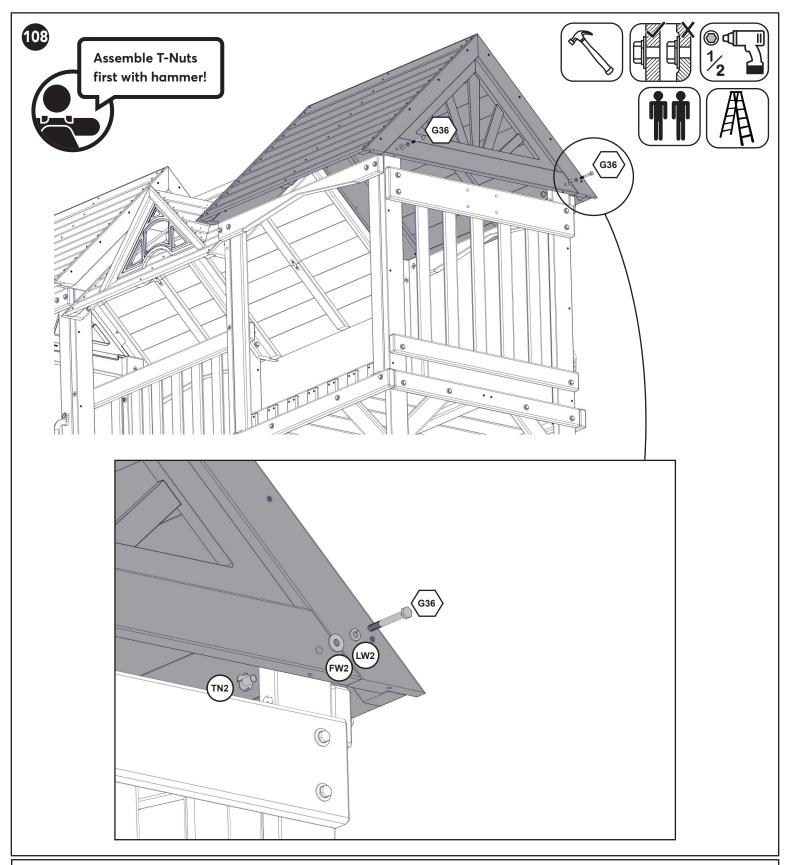


Hardware 2 x (G36) 7.9 x 69.9 mm (5/16 x 2-3/4") (LW2, FW2, TN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



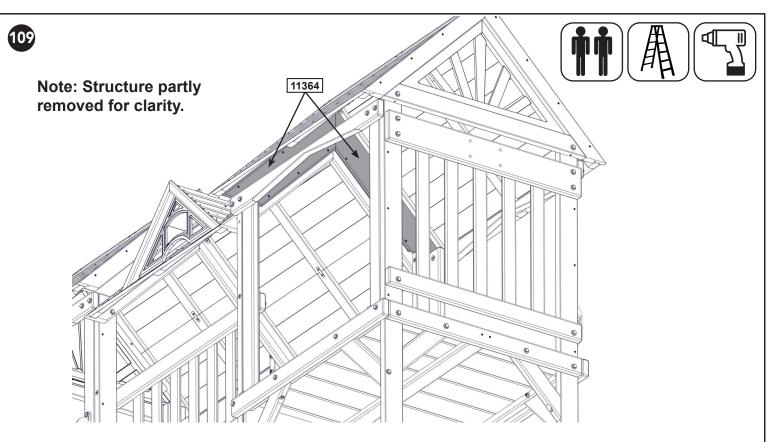

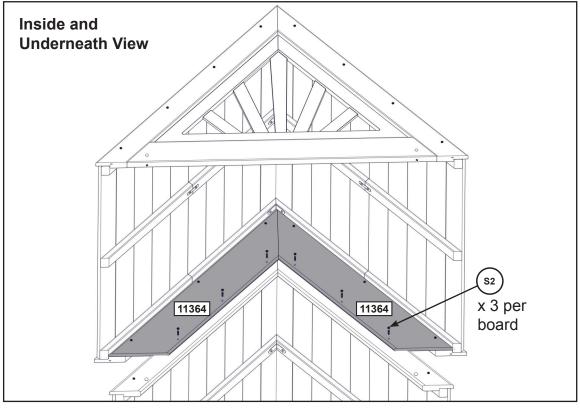


#### **Hardware**



6 x (S2) #8 x 38.1 mm (#8 x 1-1/2")




parts.kidkraft.com

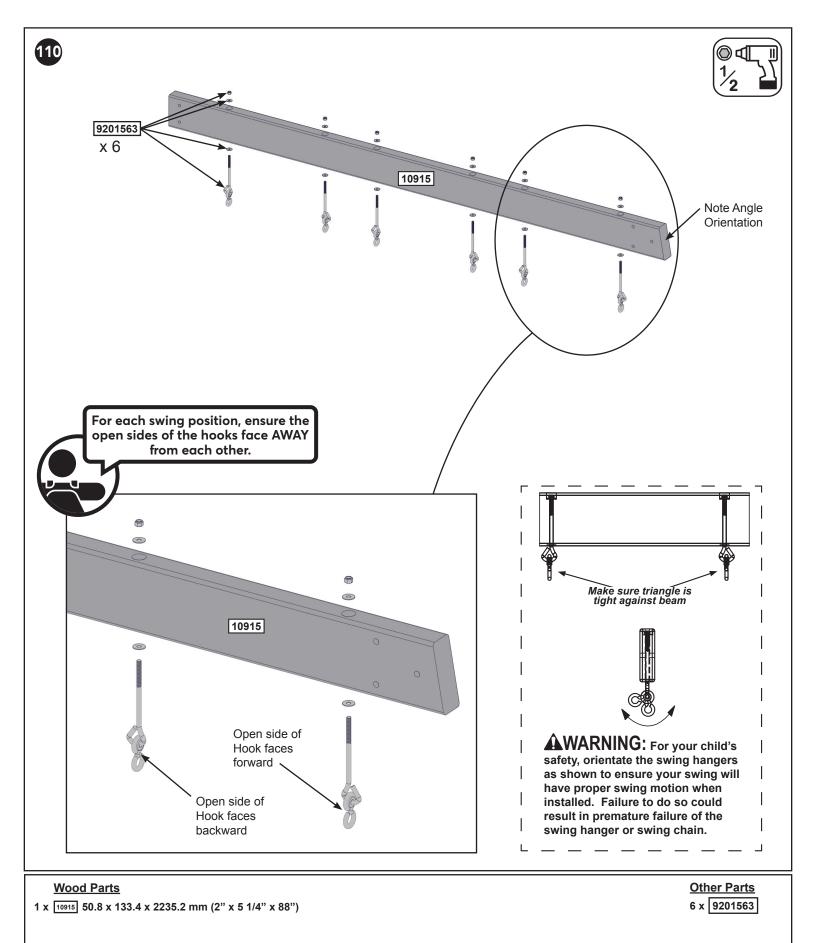


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



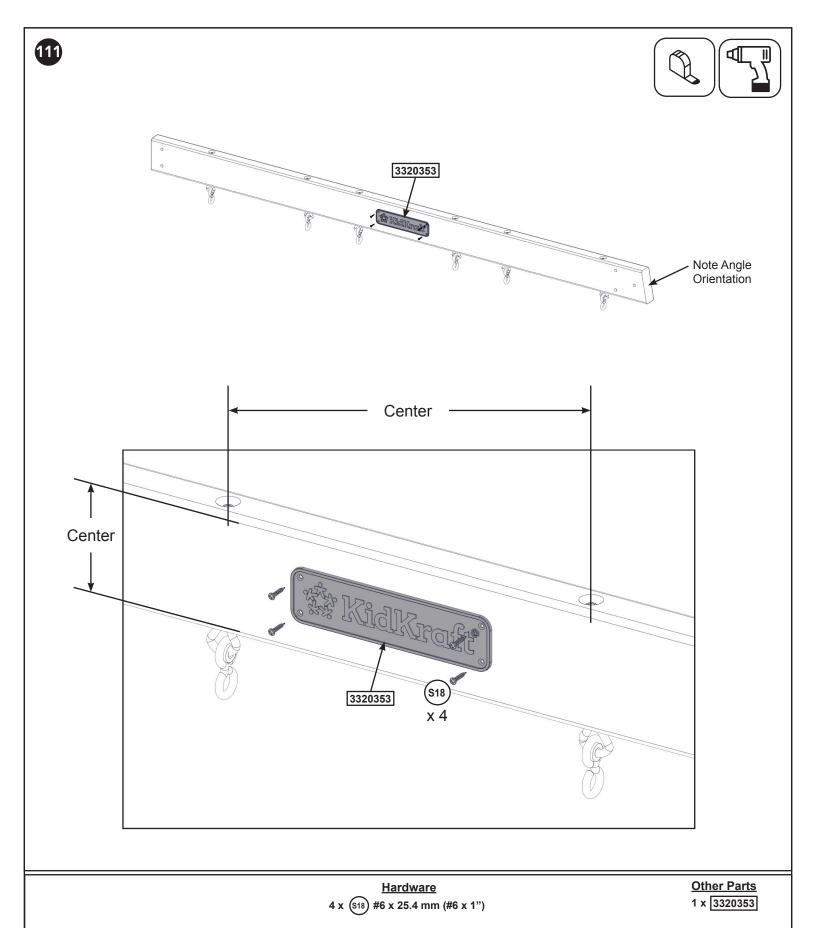




parts.kidkraft.com

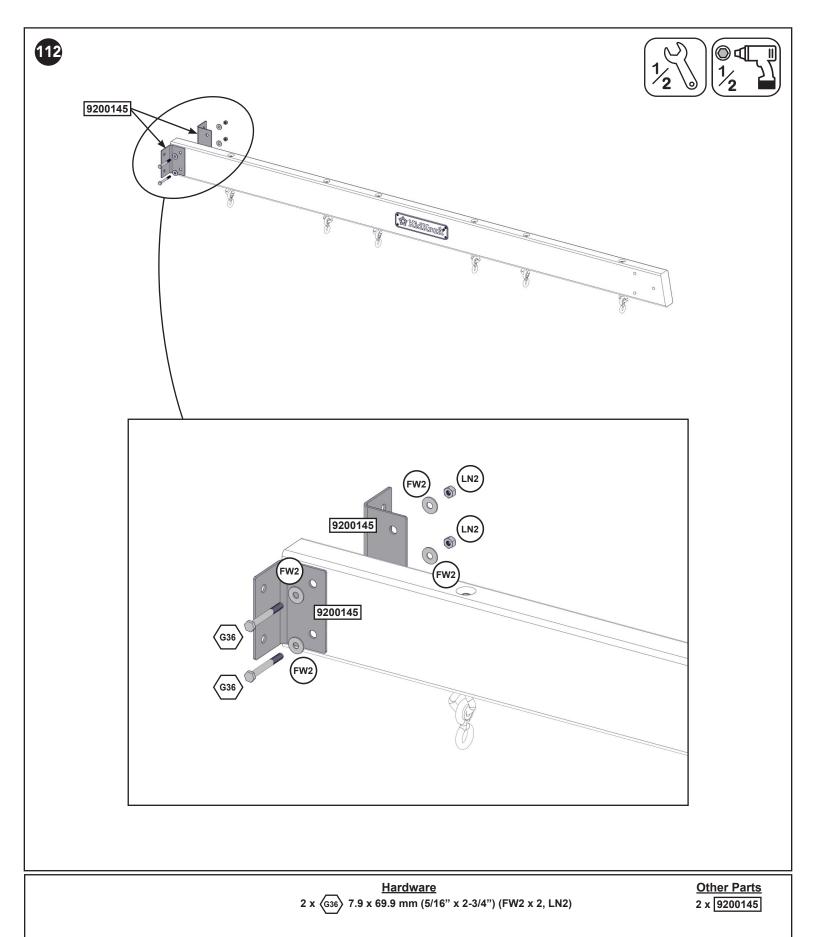

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)








Assemble T-Nut first with hammer.

Make sure the assembly is square.

Do not tighten bolt until next Step.

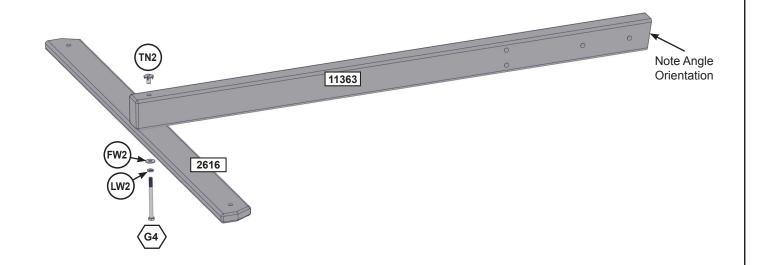

## **Wood Parts**

1 x 2616 23.8 mm x 82.6 mm x 1181.1 mm (15/16" x 3 1/4" x 46 1/2")


1 x 11363 50.8 mm x 76.2 mm x 1402.3 mm (2" x 3" x 55 3/16")

#### **Hardware**

1 x \left\{G4\right\} 7.9 x 101.5 mm (5/16 x 4") (LW2, FW2, TN2)



parts.kidkraft.com

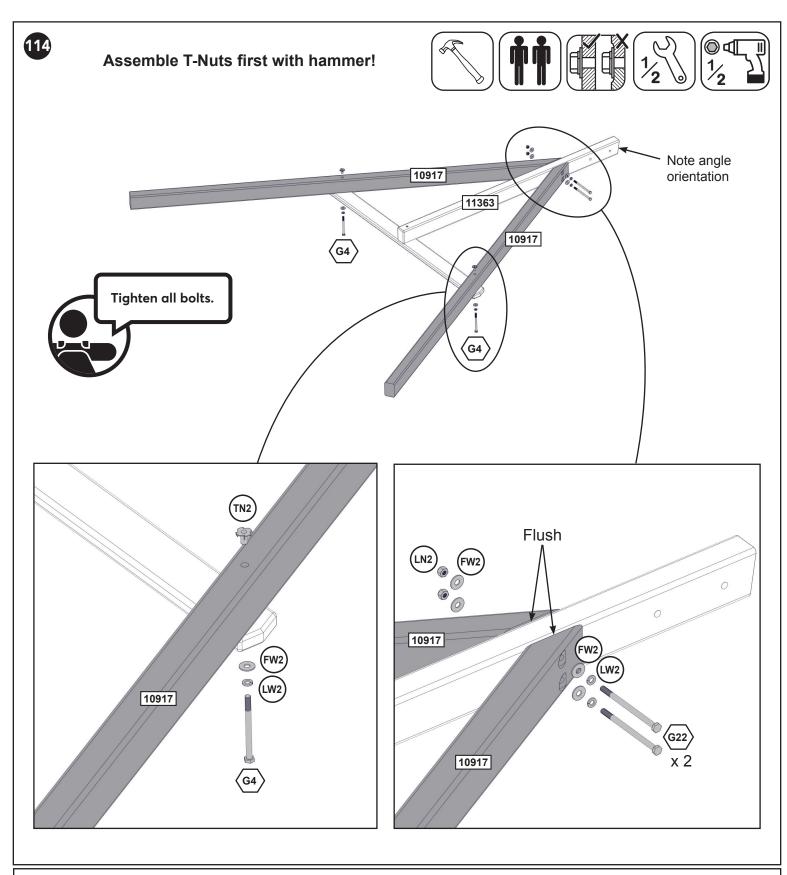

2 x 10917 50.8 x 76.2 x 2100 mm (2" x 3" x 82 11/16")

#### **Hardware**


2 x G22 7.9 x 127 mm (5/16 x 5") (LW2, FW2 x 2, LN2)


2 x (G4) 7.9 x 101.5 mm (5/16 x 4") (LW2, FW2, TN2)







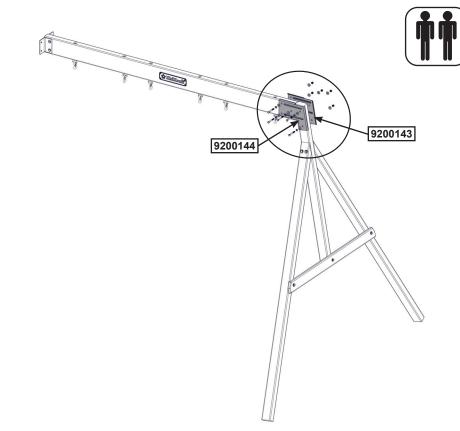

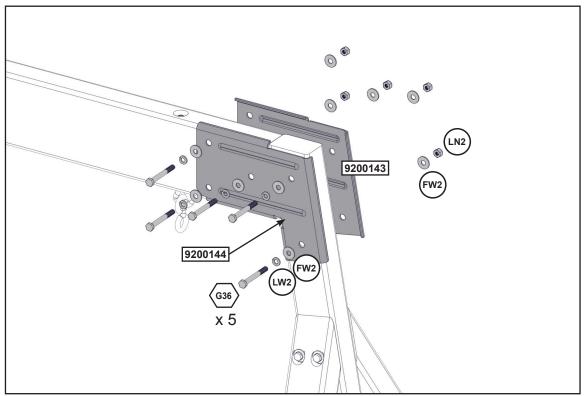

**Hardware** 

5 x (G36) 7.9 x 69.9 mm (5/16" x 2-3/4") (FW2 x 2, LW2, LN2)


**Other Parts** 

1 x 9200143

1 x 9200144



parts.kidkraft.com

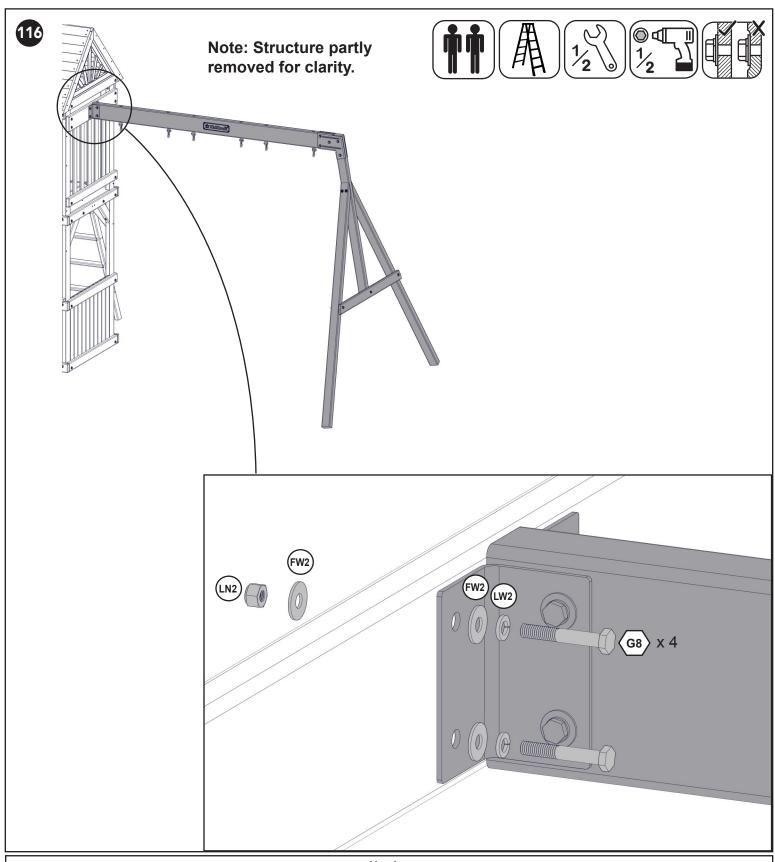


#### **Hardware**

4 x  $\langle G8 \rangle$  7.9 x 50.8 mm (5/16 x 2") (LW2, FW2 x 2, LN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



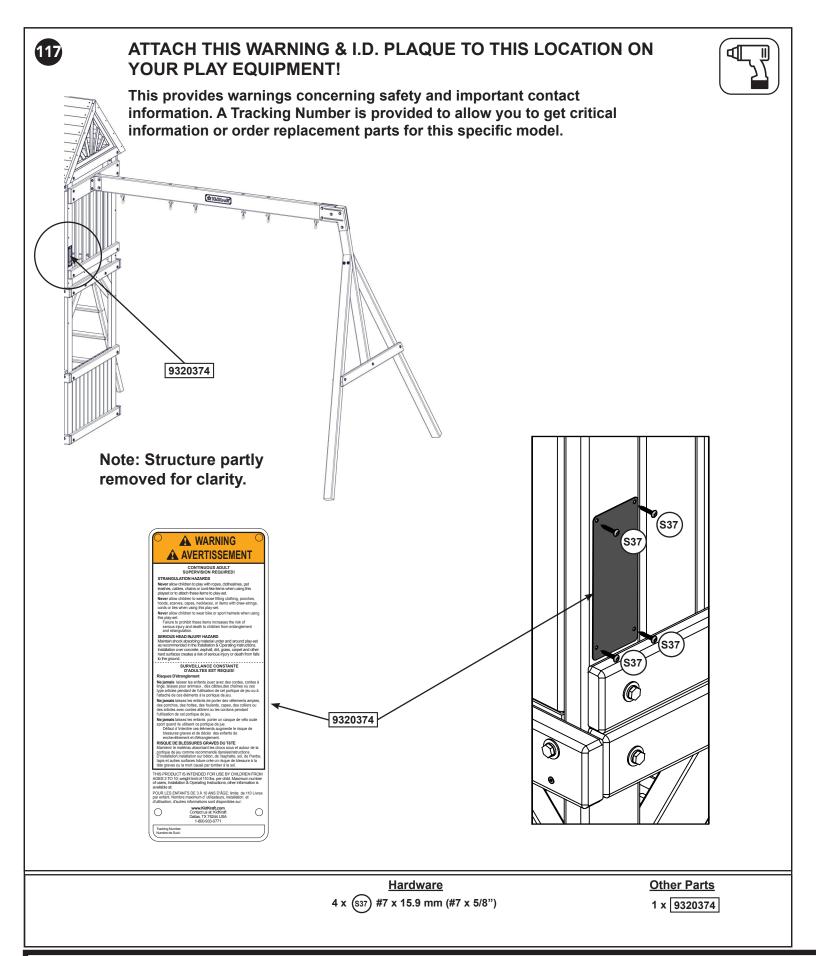







# Important: Use a hand held screw driver and DO NOT over tighten.



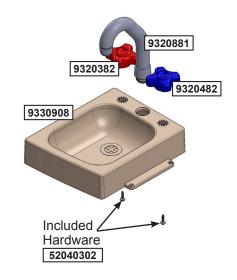

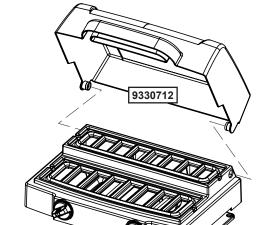

3330811

**Other Parts** 

1 x 9320881 2 x 52040302 1 x 9330908

1 x 3330811 1 x 9320482


1 x 9320382



1 x 9330712


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)




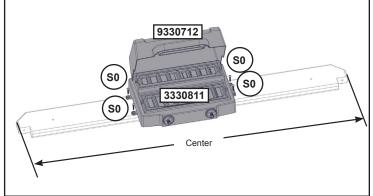






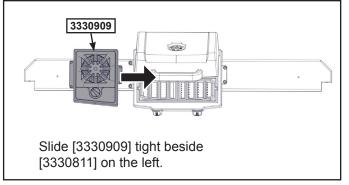


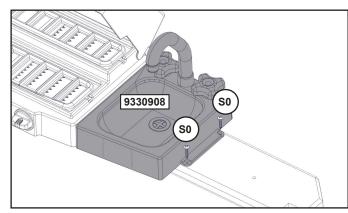





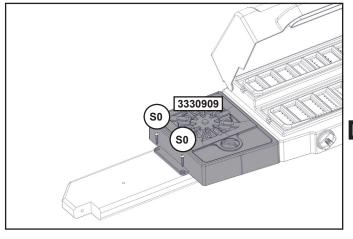

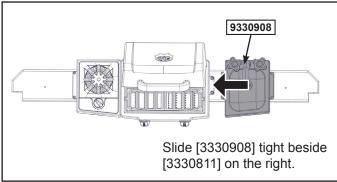


<u>Hardware</u>

8 x (so) #8 x 22.2 mm (#8 x 7/8")

Other Parts
1 x 3330909



parts.kidkraft.com

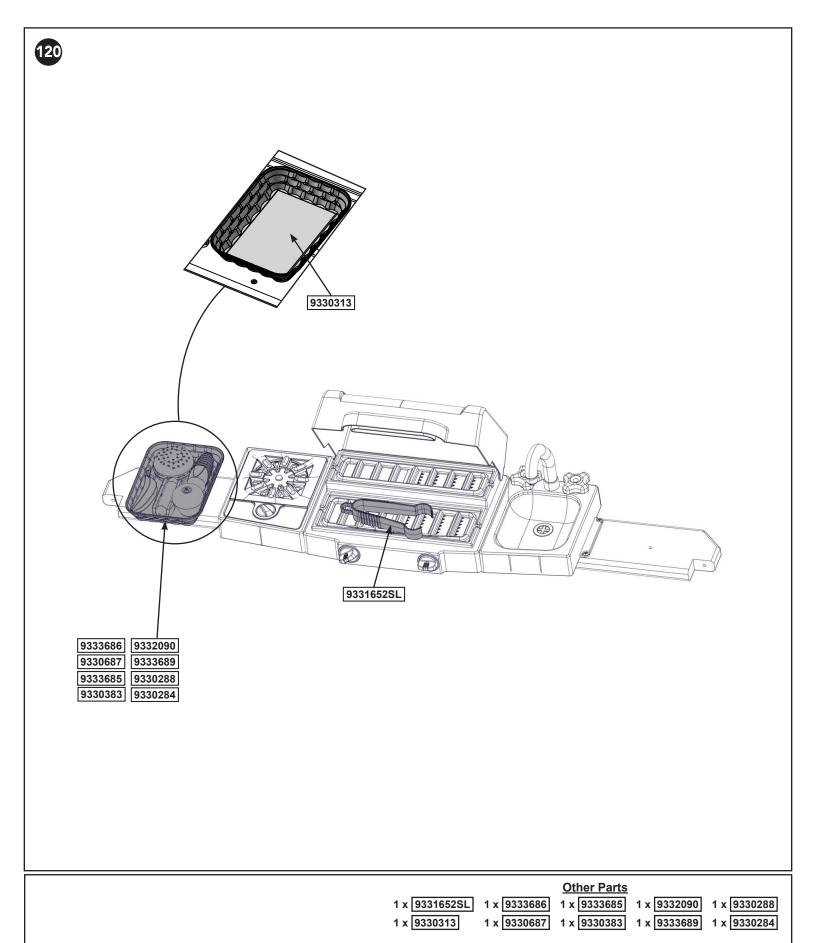

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)












Note: Structure partly removed for clarity.

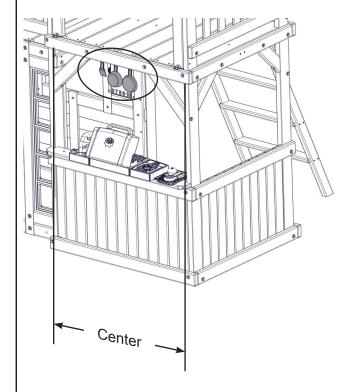

## **Inside annd Underneath View**

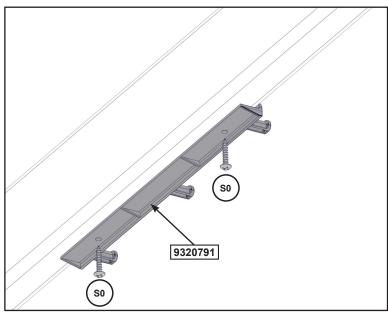



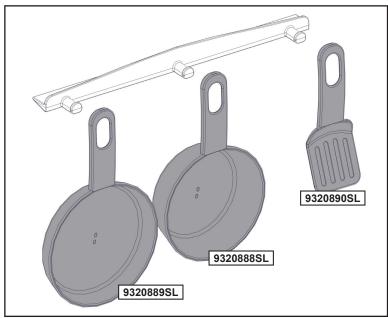

## <u>Hardware</u>

2 x (S0) #8 x 22.2 mm (#8 x 7/8")

#### Other Parts

1 x 9320888SL


1 x 9320791

1 x 9320889SL

1 x 9320890SL




parts.kidkraft.com

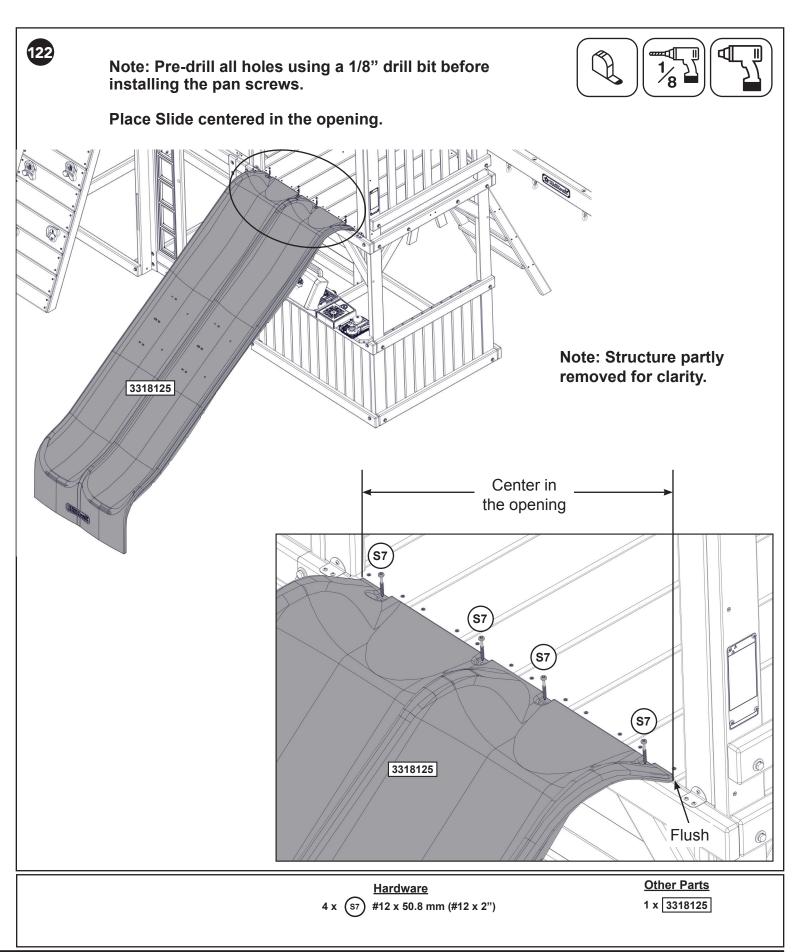





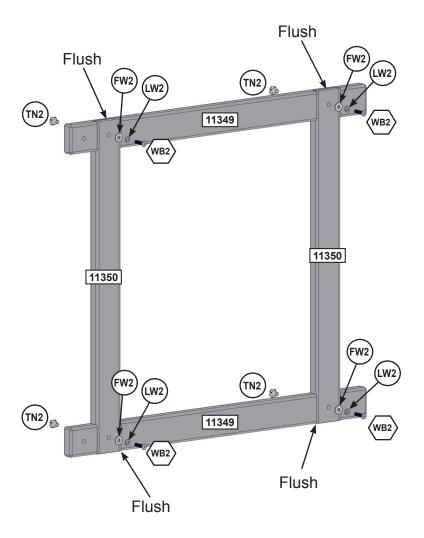

#### **Wood Parts**


2 x 11349 31.8 mm x 76.2 mm x 939.8 mm (1 1/4" x 3" x 37")

2 x 11350 31.8 mm x 76.2 mm x 860.2 mm (1 1/4" x 3" x 33 7/8")

#### **Hardware**

4 x (WB2) 7.9 x 34.9 mm (5/16 x 1-3/8") (FW2, LW2, TN2 )




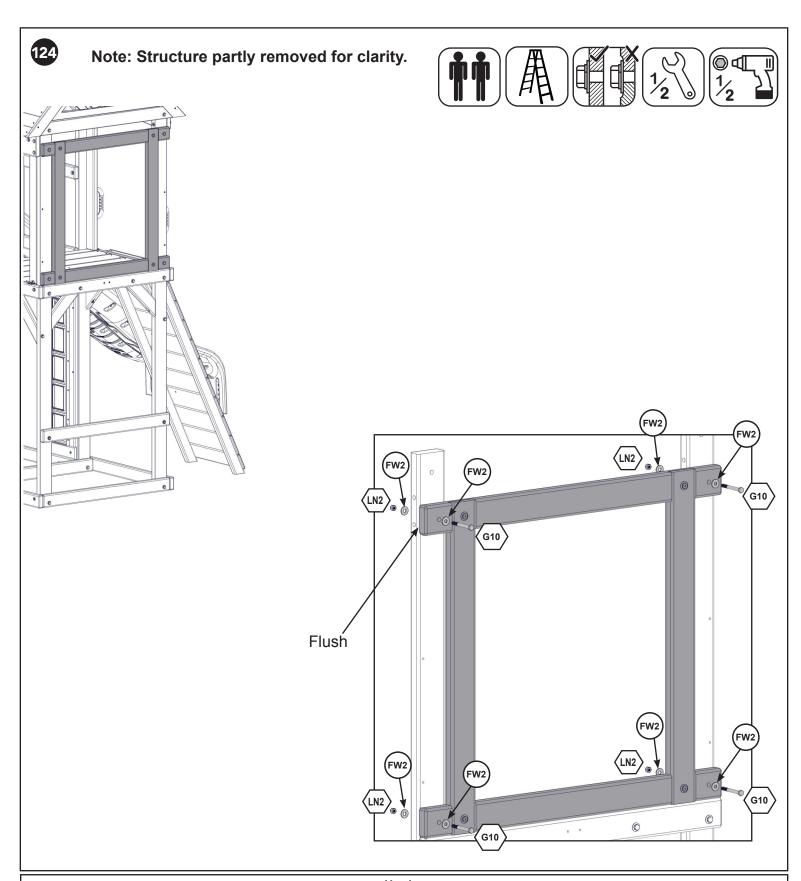

<u>Hardware</u>


4 x 610 7.9 x 76.2 mm (5/16 x 3") (FW2 x 2, LN2)

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1) SOME THE SOM

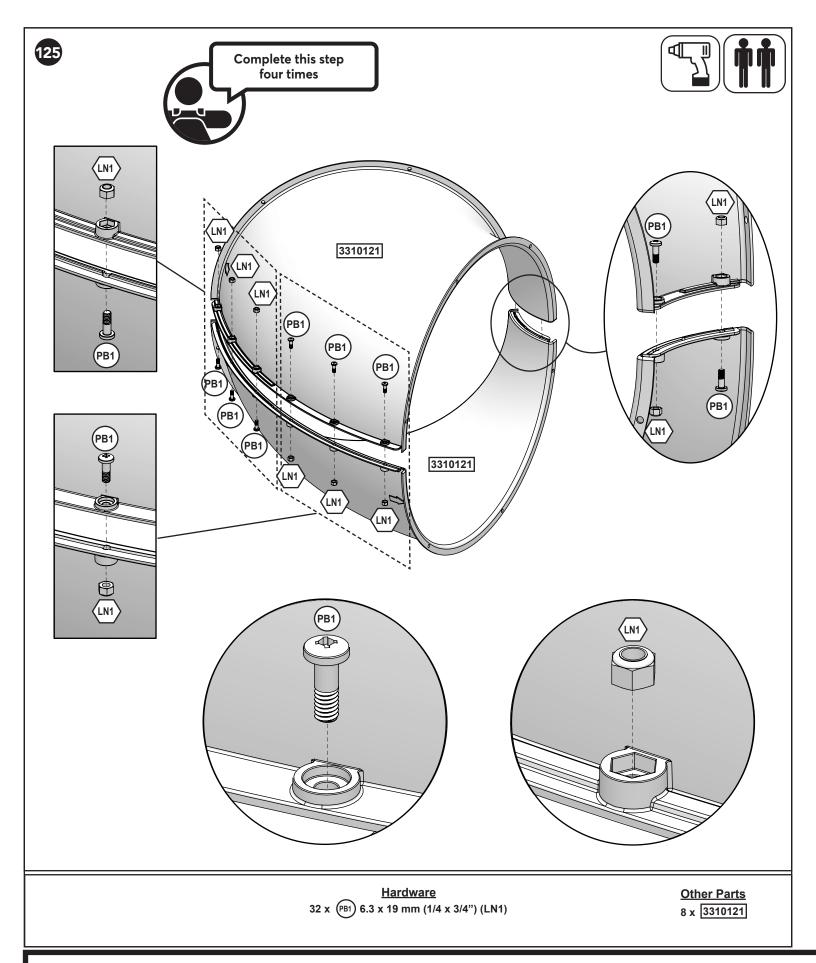




parts.kidkraft.com

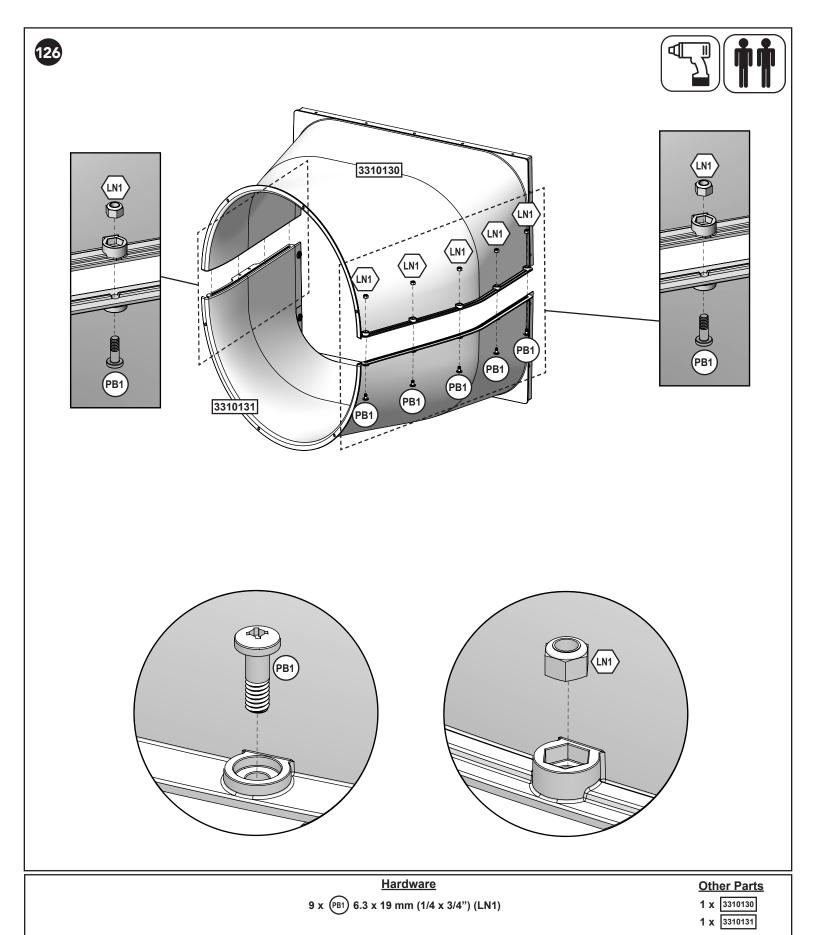




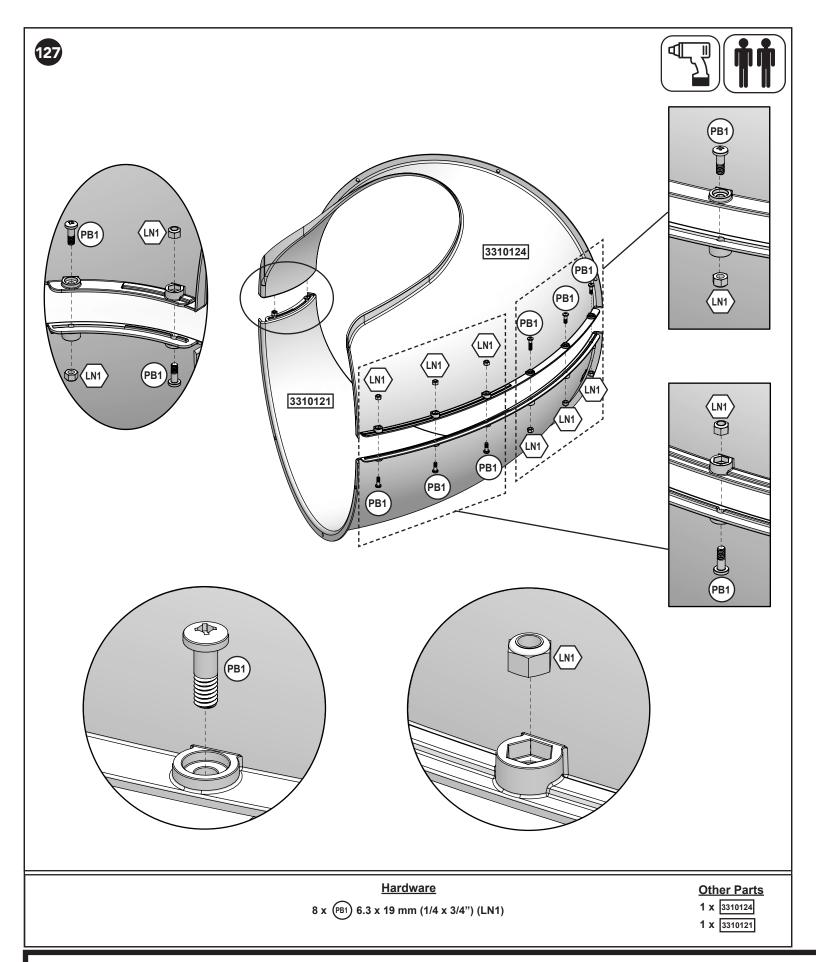




parts.kidkraft.com

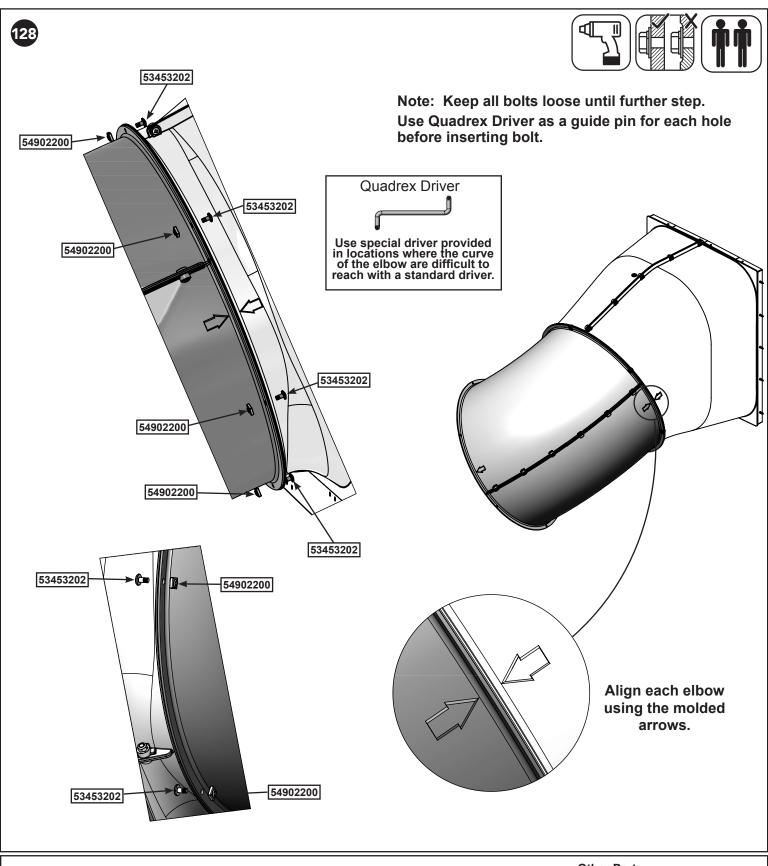

**Other Parts** 

6 x 54902200

6 x 53453202 1/4" x 12.7mm

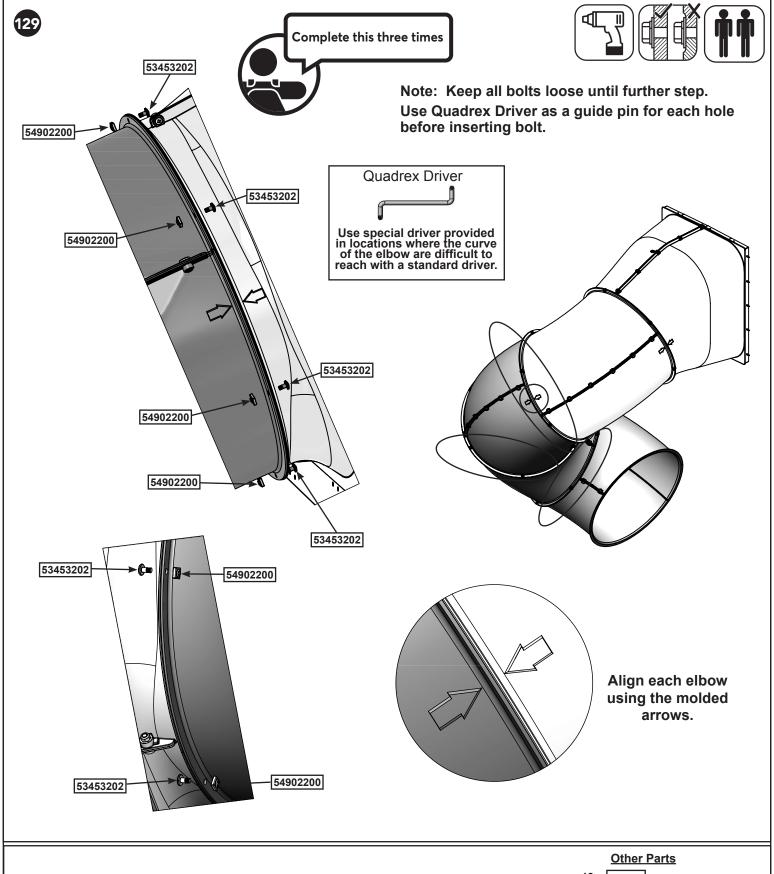


18 x 54902200


18 x 53453202 1/4" x 12.7mm



parts.kidkraft.com

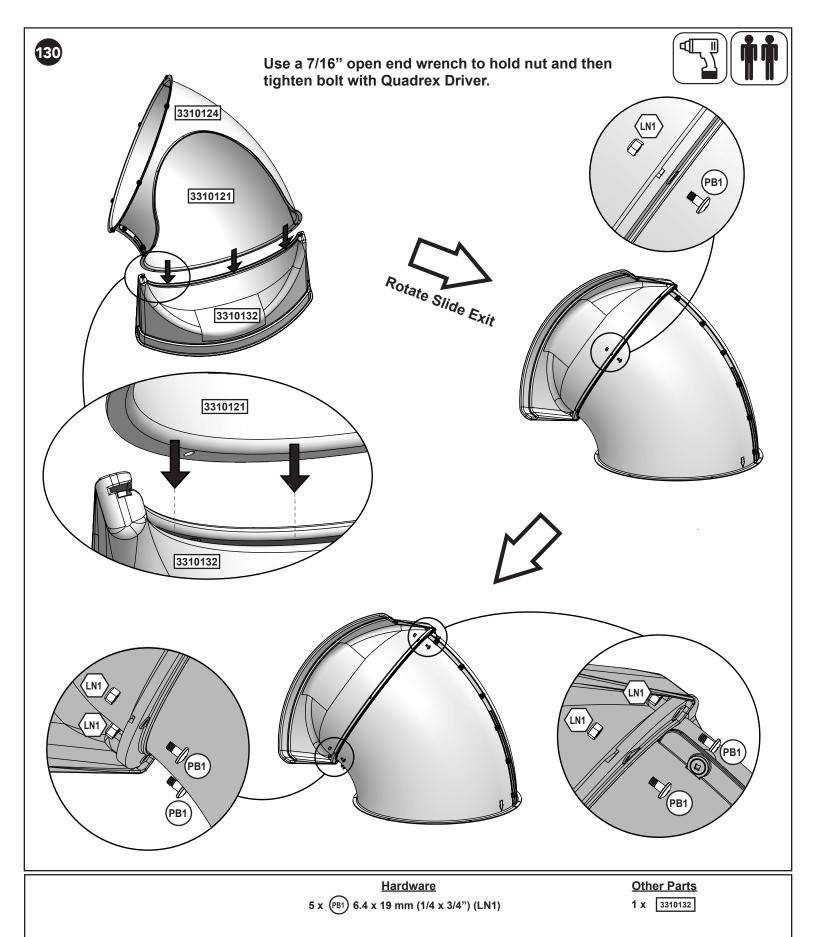



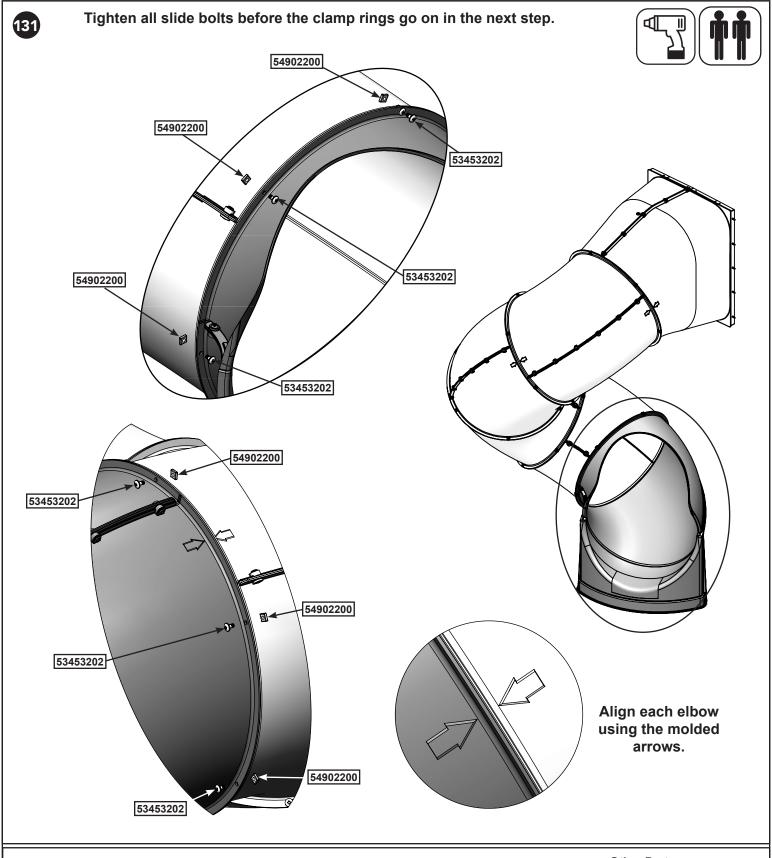

#### **Other Parts**

6 x 54902200

6 x 53453202 1/4" x 12.7mm




parts.kidkraft.com










#### Warning. Do not over tighten the clamp rings.



After the clamp rings are attached to the elbows, fasten them end to end with two pan bolts and lock nuts

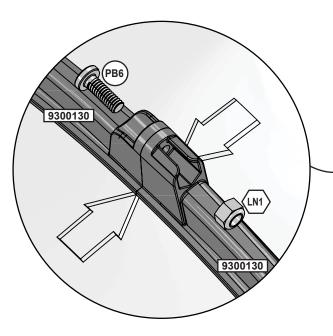

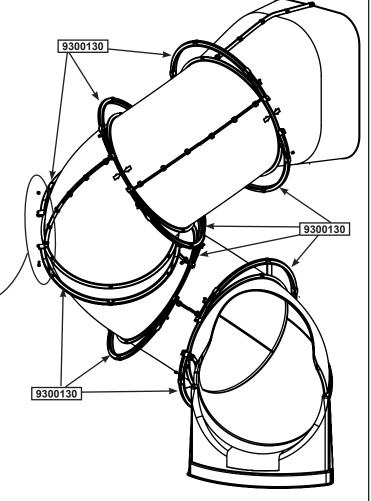

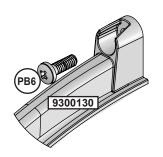



Note: For ease of assembly bottom set of clamp rings can be rotated 90 degrees to install bolts.


**Hardware** 10 x (PB6) 6.4 x 25.4 mm (1/4 x 1") (LN1) **Other Parts** 

10 x 9300130







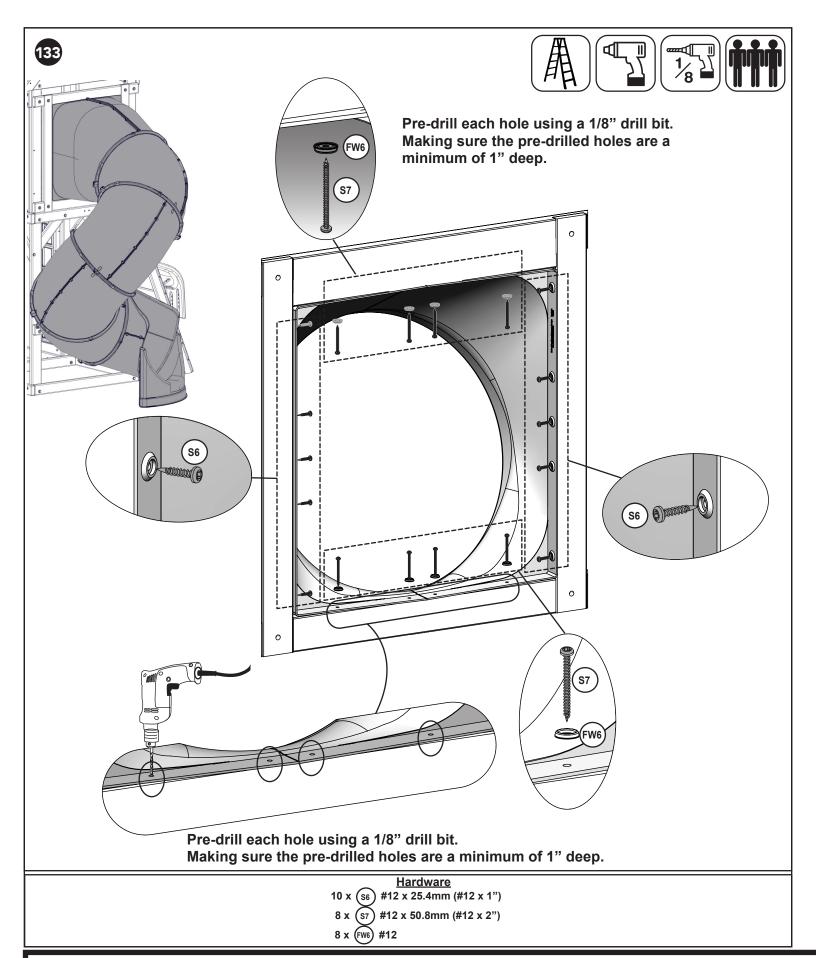





parts.kidkraft.com









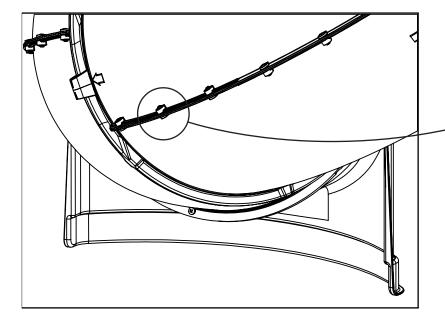

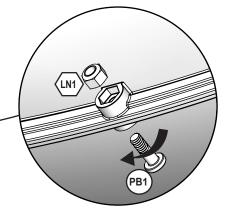

Remove PB1 (1/4 x 3/4" Pan Bolt), The bolt (PB1) will no longer be needed, but keep the lock nut (LN1)

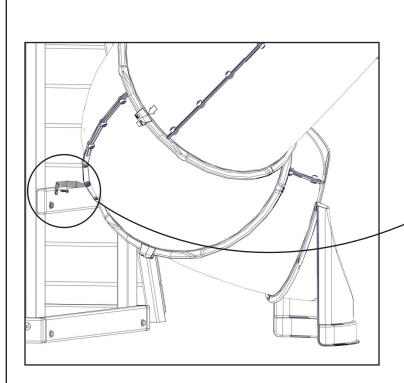

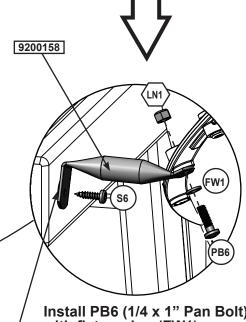

Install PB6 (1/4 x 1" Pan Bolt) with flat washer (FW1)

Note: Flat end down

**Hardware** 

1 x (PB6) 6.4 x 25.4 mm (1/4 x 1") (FW1)

1 x (S6) #12 x 25.4mm (#12 x 1")

**Other Parts** 

1 x 9200158

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)














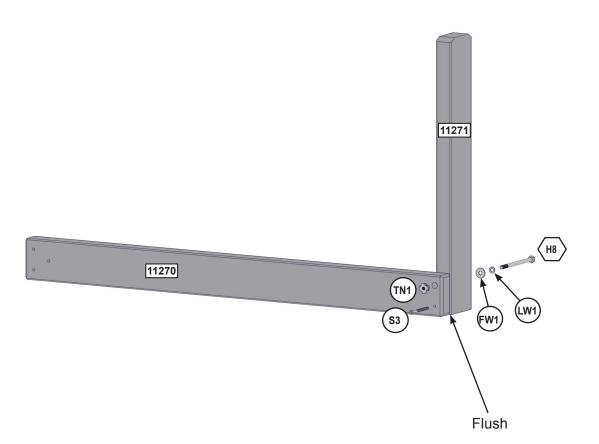

#### **Wood Parts**

1 x 11270 31.8 mm x 76.2 mm x 880.8 mm (1 1/4" x 3" x 34 11/16")

1 x 11271 31.8 mm x 76.2 mm x 510 mm (1 1/4" x 3" x 20 1/16")


#### **Hardware**

1 x (S3) #8 x 63.5mm (#8 x 2-1/2")

1 x (H8) 6.4 x 108mm (1/4 x 4-1/4") (FW1, LW1, TN1)



parts.kidkraft.com

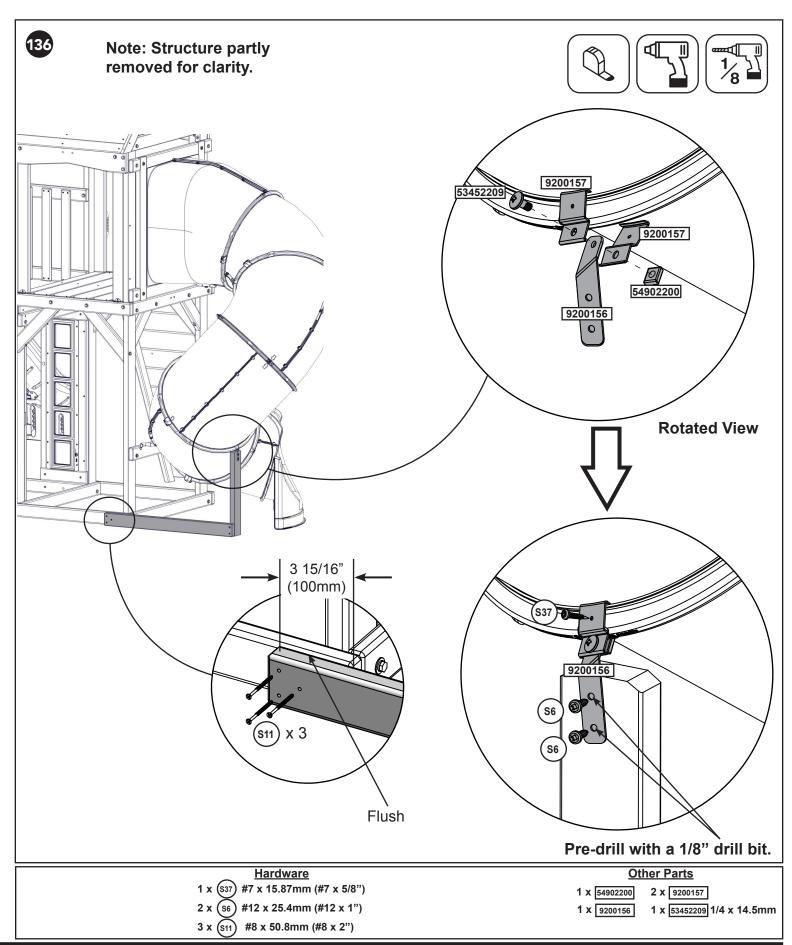






## Pre-drill holes using a 1/8" drill bit.





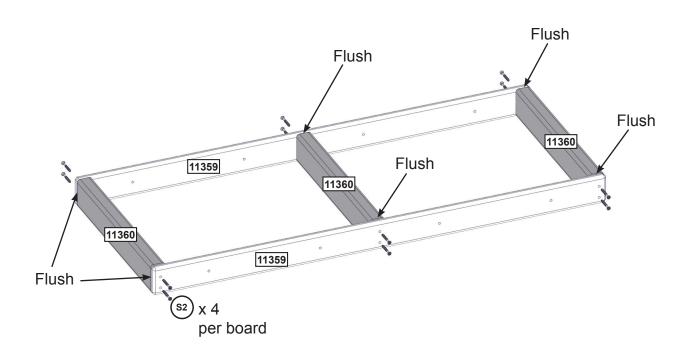

**Wood Parts** 

2 x 11359 15.9 mm x 63.5 mm x 986.8 mm (5/8" x 2 1/2" x 38 7/8")

3 x 11360 31.8 mm x 63.5 mm x 379.71 mm (1 1/4" X 2 1/2" X 14 15/16")

**Hardware** 


12 x (S2) #8 x 38.1 mm (#8 x 1-1/2")



parts.kidkraft.com





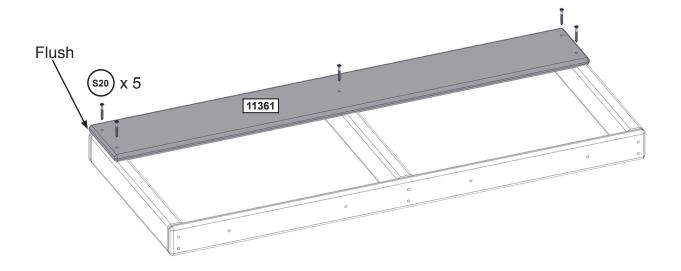

**Wood Parts** 

1 x 11361 15.9 mm x 136.5 mm x 986.8 mm (5/8" x 5 3/8" x 38 7/8")

Hardware 5 x (\$20) #8 x 34.9 mm (#8 x 1-3/8")









## Pre-drill each hole using a 1/8" drill bit for WL3.

Note: Structure partly removed for clarity.





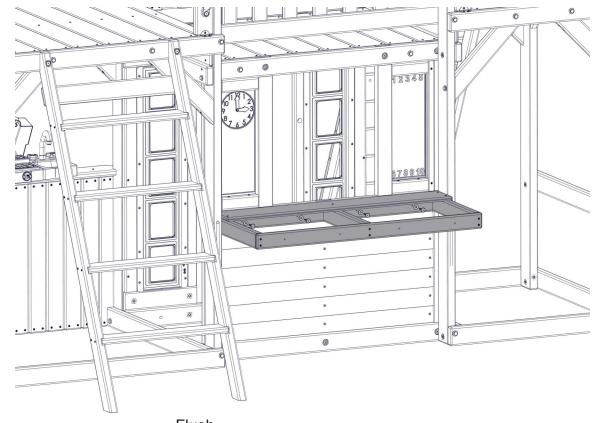

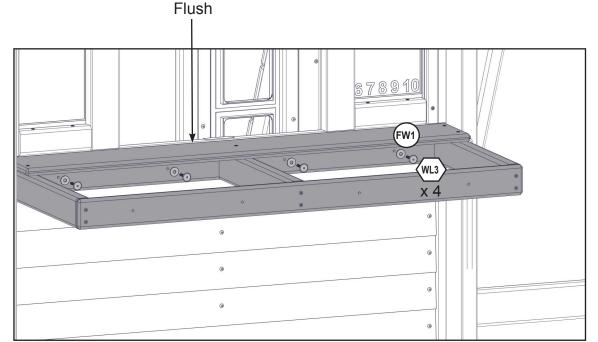

#### **Hardware**

4 x (WL3) 6.4 x 34.9 mm (1/4 x 1-3/8") (FW1)






## Pre-drill holes using a 1/8" drill bit for S4.





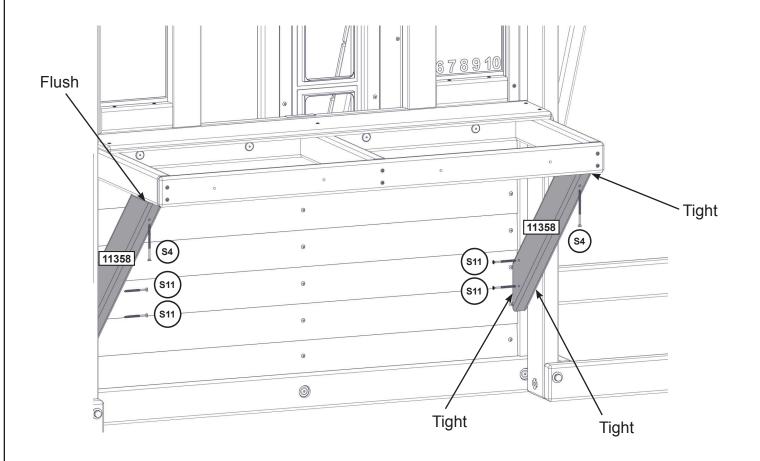

Note: Structure partly removed for clarity.

**Wood Parts** 

2 x 11358 31.8 mm x 76.2 mm x 508 mm (1 1/4" x 3" x 20")

**Hardware** 

4 x (S11) #8 x 50.8 mm (#8 x 2")

2 x (S4) #8 x 76.2 mm (#8 x 3")


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)







## Evenly space the boards.

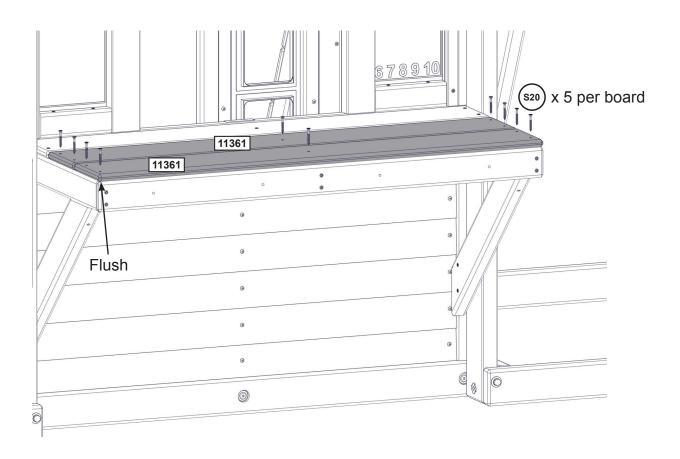

Note: Structure partly removed for clarity.


**Wood Parts** 

2 x 11361 15.9 mm x 136.5 mm x 986.8 mm (5/8" x 5 3/8" x 38 7/8")

**Hardware** 

10 x (S20) #8 x 34.9 mm (#8 x 1-3/8")



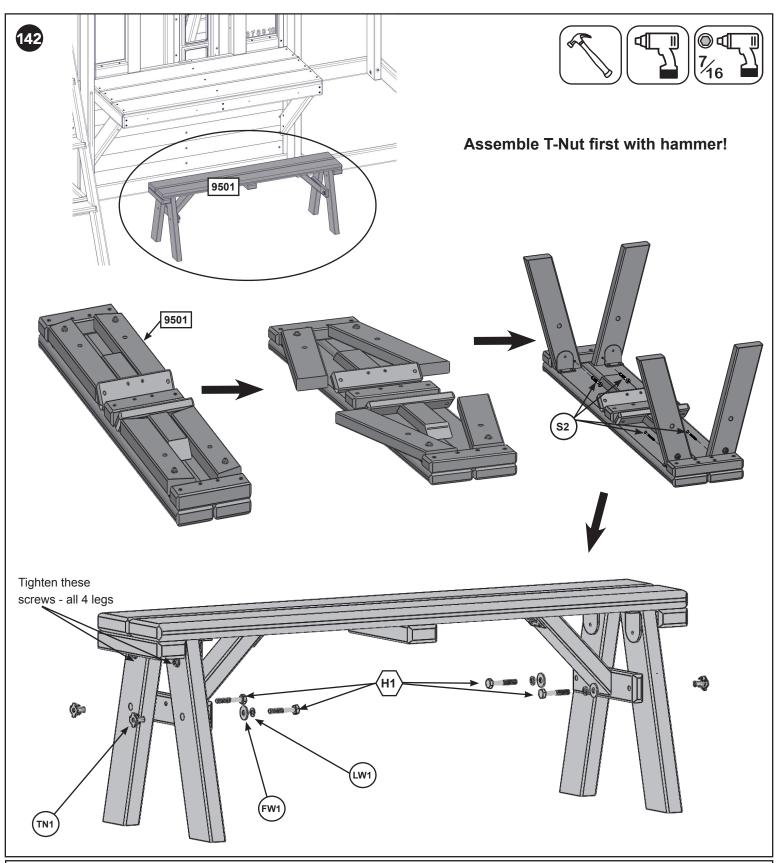

#### **Wood Parts**

1 x 9501 66.8 mm x 165.1 mm x 809.6 mm (2 5/8" x 6 1/2" x 31 7/8")


#### **Hardware**


4 x (H1) 6.4 x 38.1mm (1/4 x 1-1/2") (LW1, FW1, TN1)


4 x (S2) #8 x 38.1 mm (#8 x 1-1/2")

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



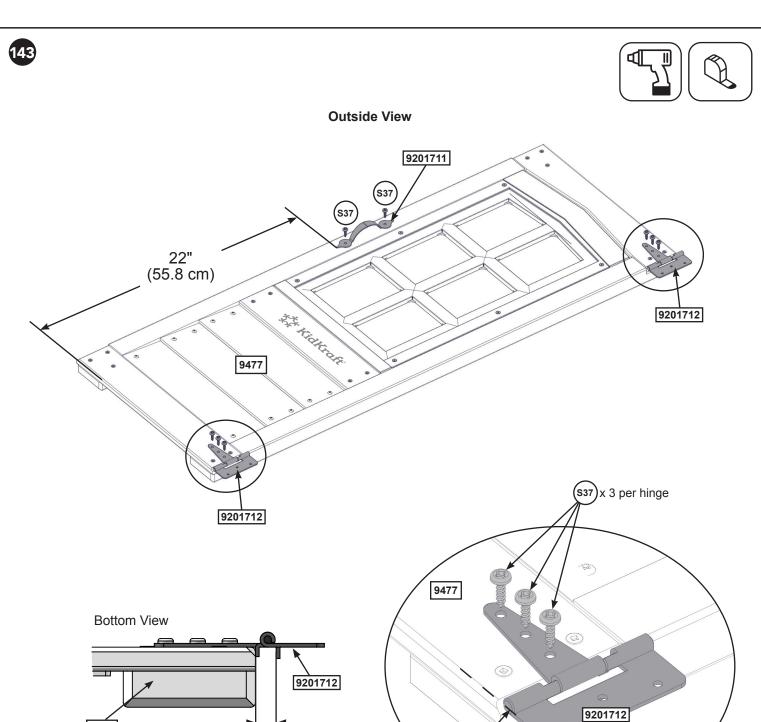

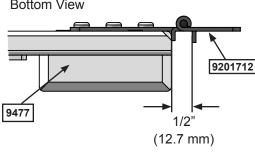

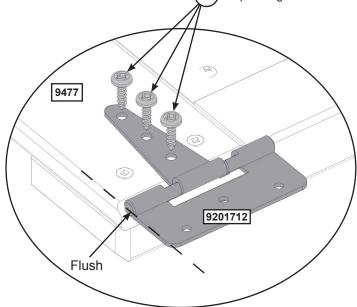

#### **Wood Parts**

1 x 9477 31.8 mm x 400.1 mm x 1028.6 mm (1 1/4" x 15 3/4" x 40 1/2")

#### <u>Hardware</u>

8 x (S37) #7 x 15.87mm (#7 x 5/8")

#### **Other Parts**

1 x 9201711

2 x 9201712




parts.kidkraft.com









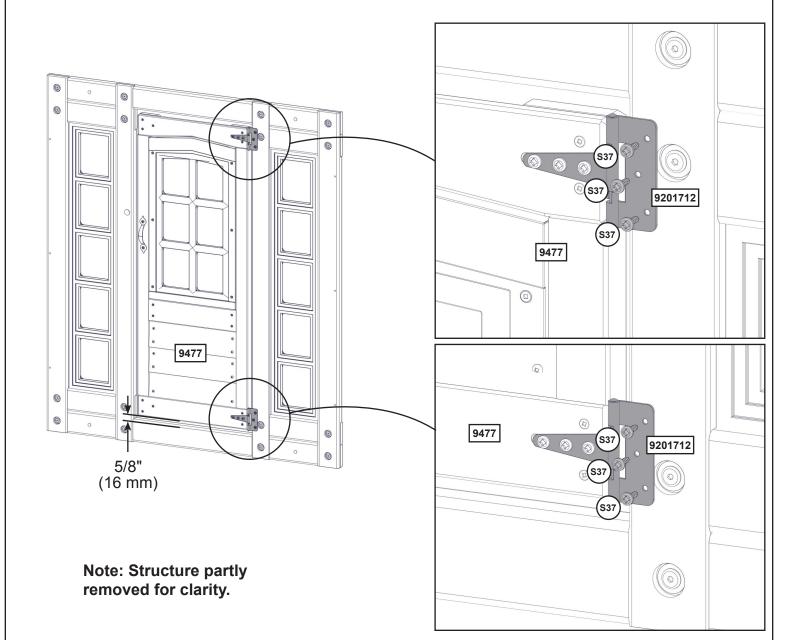

#### **Hardware**

6 x (S37) #7 x 15.87mm (#7 x 5/8")


europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)










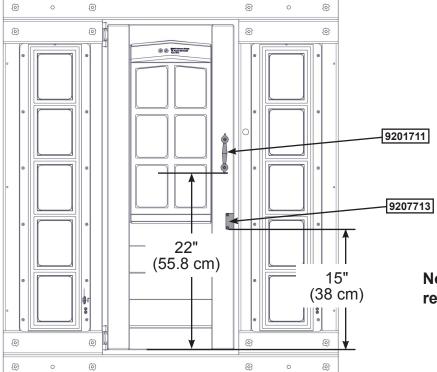

**Note: Structure partly** removed for clarity.

**Inside View** 

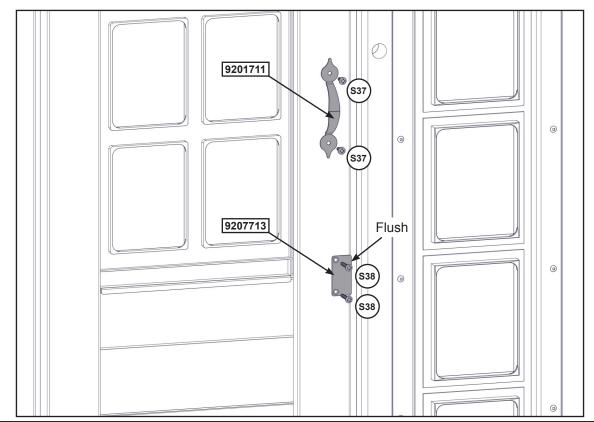

#### **Hardware**

2 x (S37) #7 x 15.87 mm (#7 x 5/8")

2 x (S38) #7 x 28.6 mm (#7 x 1-1/8")

#### **Other Parts**

1 x 9201711

1 x 9207713




parts.kidkraft.com





Important: Use a hand held screw driver and DO NOT over tighten.

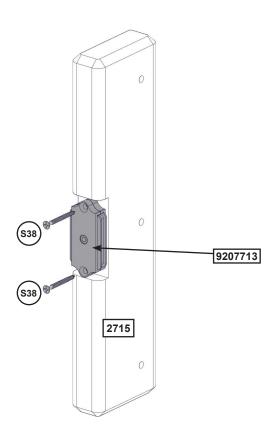


**Wood Parts** 

1 x 2715 25.4 mm x 63.5 mm x 254 mm (1" x 2 1/2" x 10")

<u>Hardware</u>

2 x (\$38) #7 x 28.6 mm (#7 x 1-1/8")



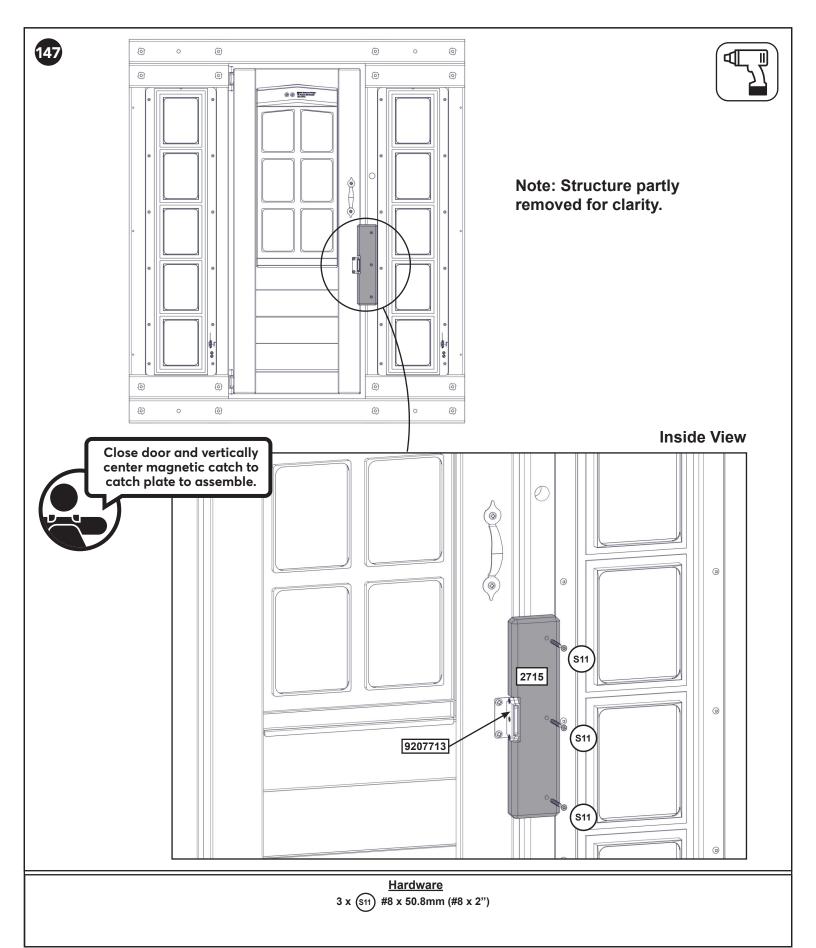




parts.kidkraft.com



### Requires 2 AAA batteries (not included)

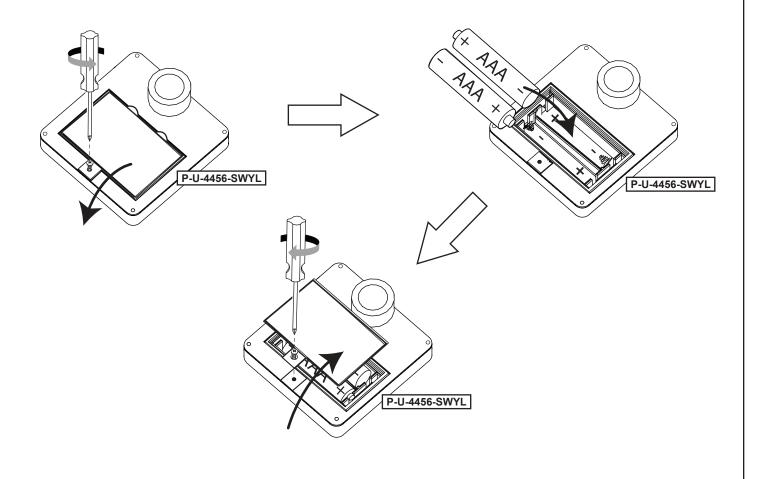

Test the electronics before proceeding with assembly. If you have any issues, please contact customer service.


Other Parts

1 x P-U-4456-SWYL









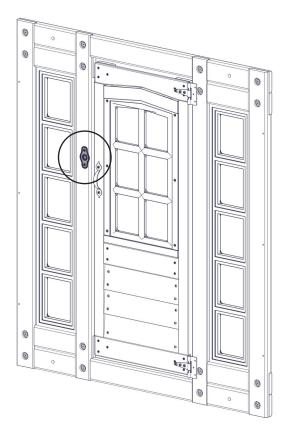

Note: Structure partly removed for clarity.

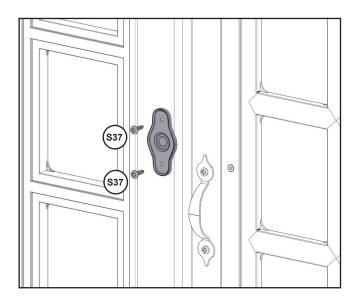

**Outside View** 

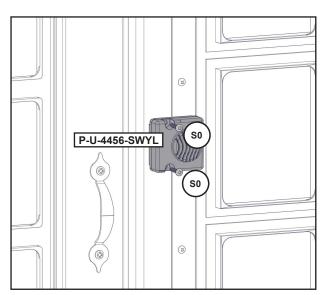


**Inside View** 

#### **Hardware**


- 2 x (so) #8 x 22.2 mm (#8 x 7/8")
- 2 x (S37) #7 x 15.87 mm (#7 x 5/8")



parts.kidkraft.com

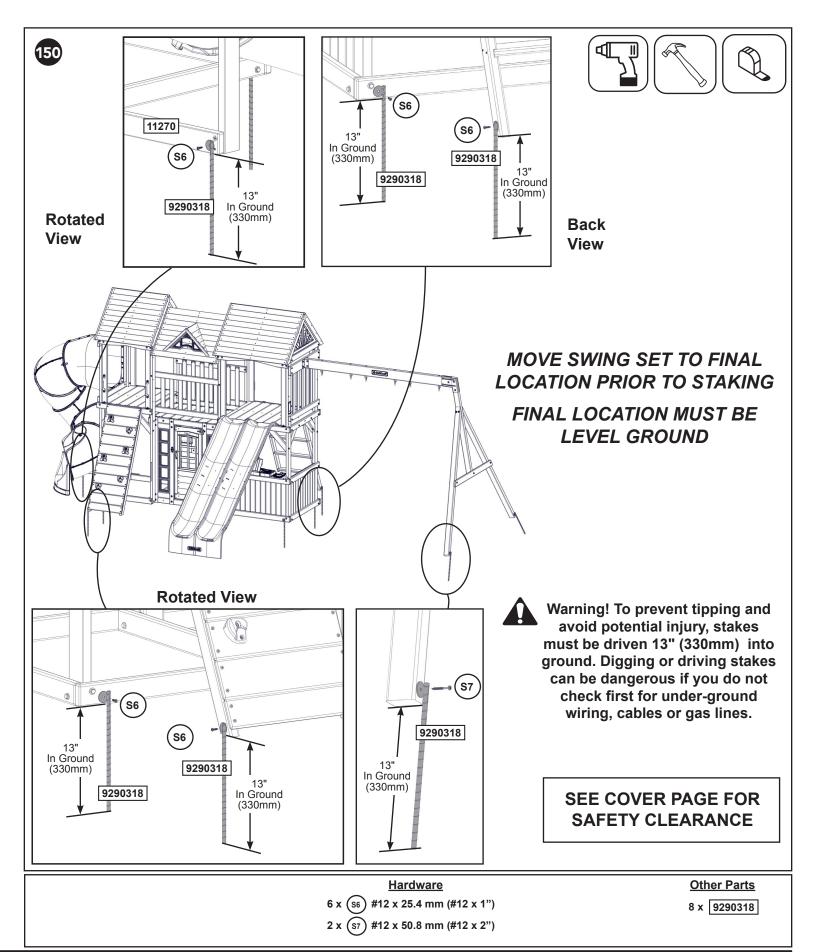




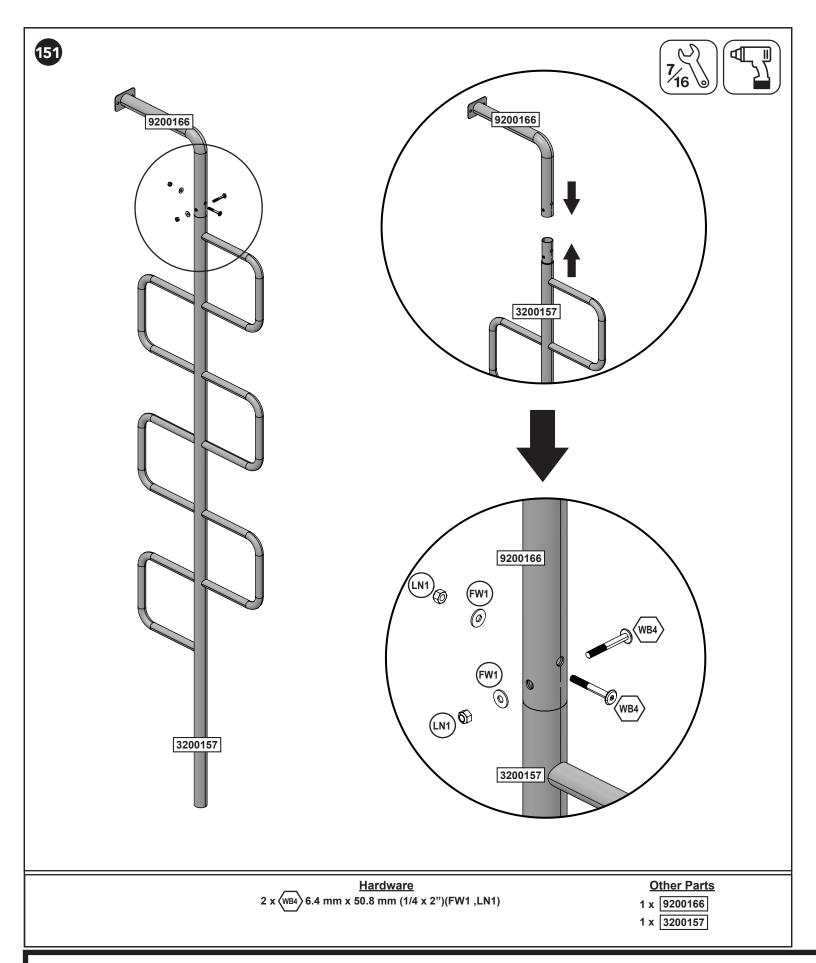



parts.kidkraft.com

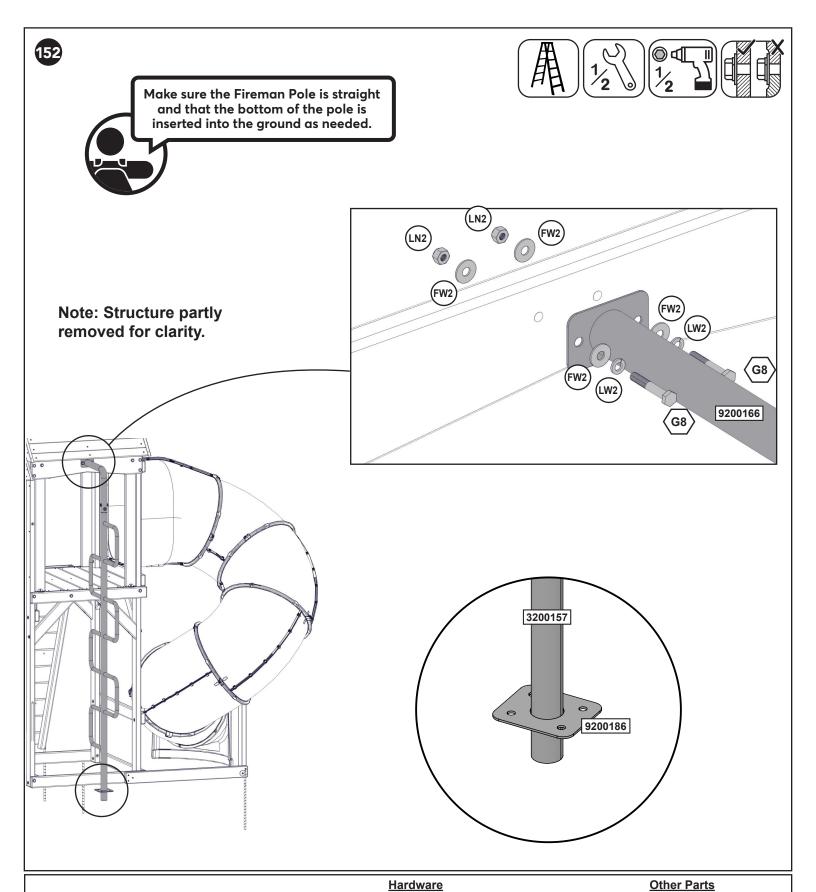

parts.kidkraft.eu



1 x 9200186

2 x (G8) 7.9 x 50.8 mm (5/16 x 2") (LW2, FW2 x 2, LN2)






Warning! To prevent tipping and avoid potential injury, stakes must be driven 13"(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for under-ground wiring, cables or gas lines.



Hammer U-Style Ground Stakes into the holes in the plate until they are fully anchored into the ground.

Note: Structure partly removed for clarity.

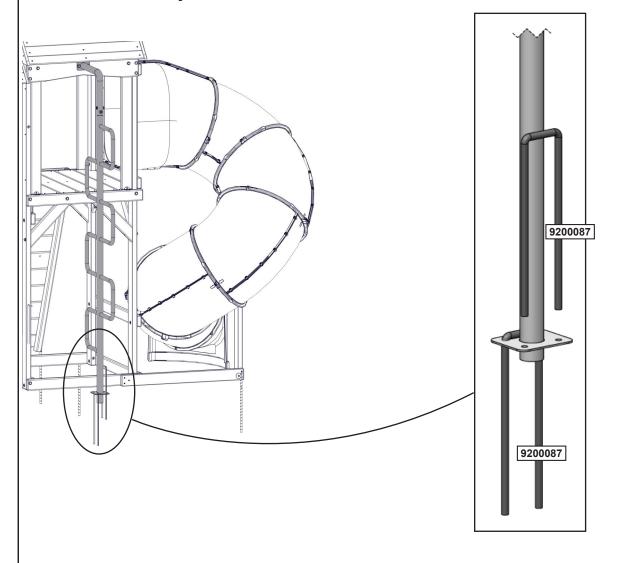


Other Parts

2 x 9200087



parts.kidkraft.com

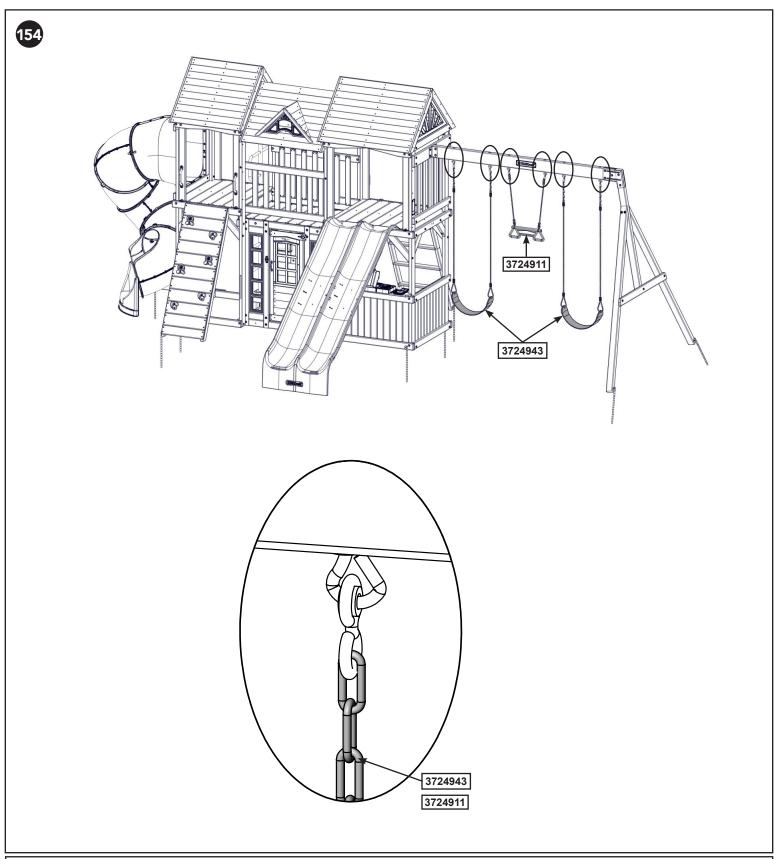

Other Parts

2 x 3724943

1 x 3724911

europecustomerservice@kidkraft.com +31 20 305 8620 M-F from 09:00 to 17:30 (GMT+1)



NOTES			
	_		
	_		
	_		
	_		
	_		
	_		
	_		
	_		
	_		
	_		
	_		
	_		



NOTES	



# **3 EASY WAYS TO REGISTER YOUR PRODUCT 24/7**

- 1) Scan this QR Code with your smart phone to complete your product registration directly from your phone:
- 2) Complete the registration online at: <a href="https://www.kidkraft.com/us\_en/warranty/">https://www.kidkraft.com/us\_en/warranty/</a>
- 3) Mail this completed form to: KidKraft Inc., 4630 Olin Road, Dallas, Tx 75244 USA

  Make sure to include a copy of your proof of purchase



KIDKRAFT  Consumer Registration Card						
First Name	Initial Last	Name				
Street		Apt.	No.			
City		State/Province	z IP/Postal Code			
Country	untry Telephone Number					
E-Mail Address						
Model Number Model Name						
			umber & Name example NINSLEY PLAY SYSTEM			
Purchased From		Date Purchase	A WARNING A WARNING WANING WARNING WARNING WANNING WAN			
Serial Number (on ID Plaque)		MM / DD / YY	Plaggue de la companya del la companya de la companya del			
			Section of Andreas or Section of			
Box #: 1 of	Box #:	4 of Box # (	Ex: B29410 1of 6)			
Box #:2 of	Box #:	5 of	F ITEM# ARTICLE N* N: DOE ARTICULO			
Box #: 3 of	Box #:	6 of	B29410			

For common questions or for information on ordering replacement parts:

