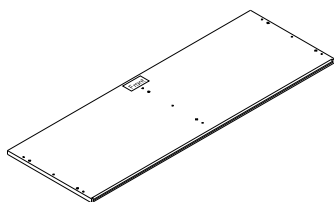# PARTS LIST
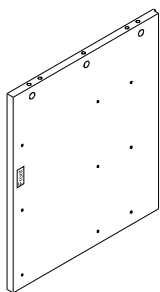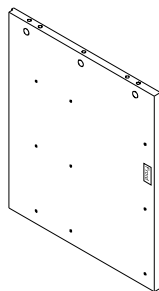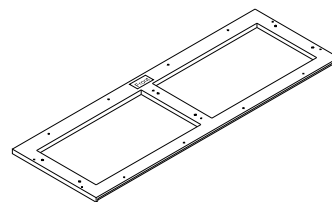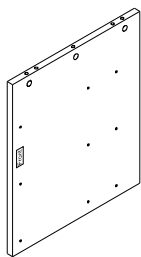
NAME: TOP PANEL
CODE: 1
QTY:  1Pc

NAME: SIDE PANEL(LEFT)
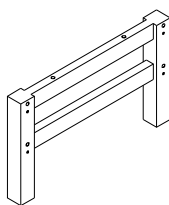CODE: 2
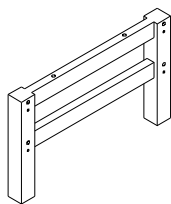QTY:  1Pc

NAME: SIDE PANEL(RIGHT)
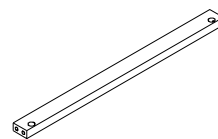CODE: 3
QTY:  1Pc

NAME: BOTTOM FRAME
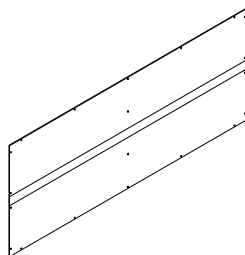CODE: 4
QTY:  1Pc

NAME: PARTITION
CODE: 5
QTY:  1Pc

NAME: SIDE LEG
CODE: 6
QTY:  2Pcs

NAME: CENTER LEG
CODE: 7
QTY:  1Pc

NAME: BOTTOM BAR
CODE: 8
QTY:  8Pcs

NAME: BACK PLYWOOD
CODE: 9
QTY:  1Pc
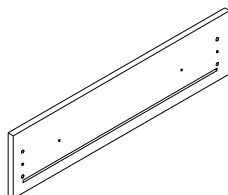
NAME: DRAWER FRONT(LEFT)
CODE: 101
QTY:  3Pcs
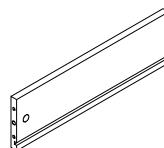
NAME: DRAWER SIDE(LEFT)
CODE: 102
QTY:  6Pcs

NAME: DRAWER BACK
CODE: 103
QTY:  6Pcs

NAME: DRAWER BASE
CODE: 104
QTY:  6Pcs

NAME: DRAWER SIDE(RIGHT)
CODE: 105
QTY:  6Pcs
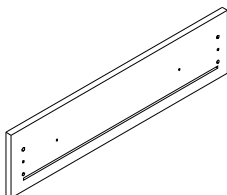
NAME: DRAWER FRONT (RIGHT)
CODE: 106
QTY:  3Pcs
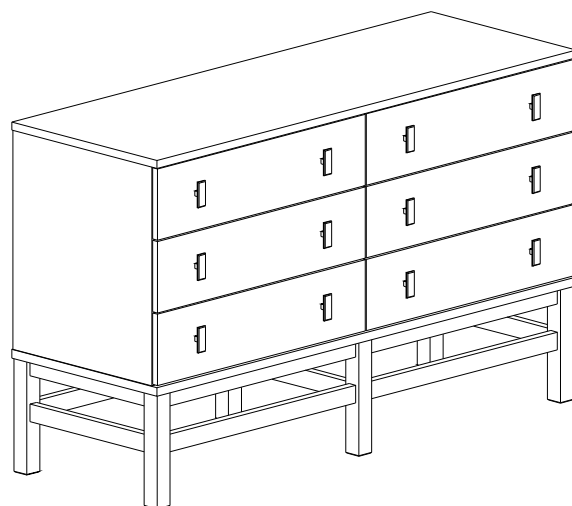
6 DRAWER DRESSER

-THE UNIT SHOULD BE ASSEMBLED BY 2 OR MORE PEOPLE
-EXTRA  HARDWARE  INCLUDED

# HARDWARE LIST

NAME: CHIPBOARD SCREW M3X16mm
CODE: A
QTY: 72Pcs

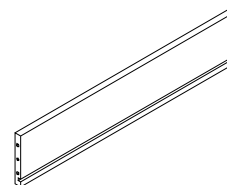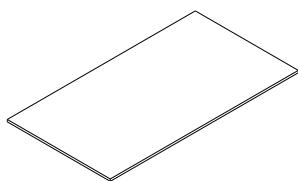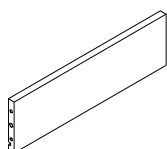NAME: PANHEAD SCREW M4X20mm
CODE: B
QTY: 12Pcs
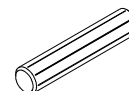
NAME: WOOD DOWEL M8X35mm
CODE: C
QTY: 34Pcs
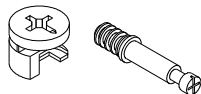
NAME: CAM LOCK & CAM BOLT
CODE: D
QTY: 49Sets

NAME: WOOD DOWEL M6X30mm
CODE: E
QTY: 48Pcs

NAME: RUNNER 400mm
CODE: F
QTY: 6Sets

NAME: CAM LOCK COVER
CODE: G
QTY: 49Pcs

NAME: PANHEAD CHIPBOARD SCREW M4X16mm(BLACK)
CODE: H
QTY: 20Pcs

NAME: CHIPBOARD SCREW M4X38mm
CODE: I
QTY: 14Pcs

NAME: HANDLE
CODE: J
QTY: 12Pcs

## STEP 1

A) Insert and secure Cam Bolt(D) to Top Panel(1)

90°

90°

D

D

D

D

①

## STEP 2

A) Insert Wood Dowel(C) to Left&Right Side Panel(2&3)
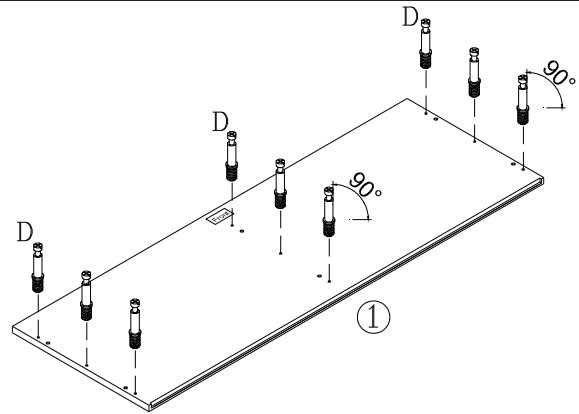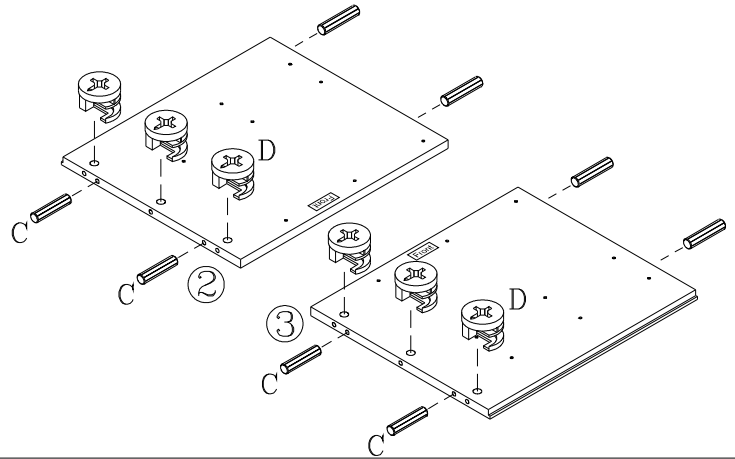
B) Attach Cam Lock(D) to Left&Right Side Panel(2&3)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes
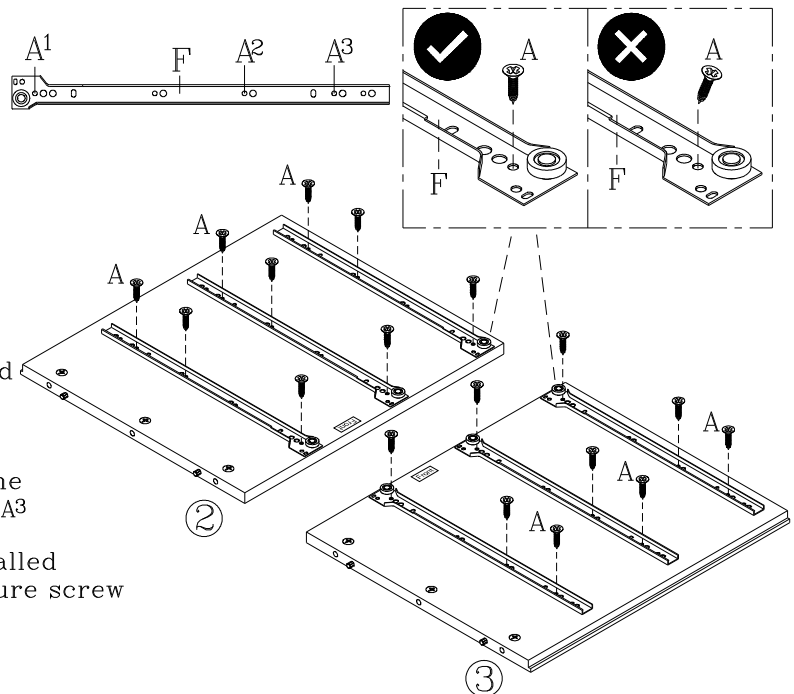
D

C

C

②

D

③

C

C

## STEP 3

A) Attach Runner(F) to Left&Right Side Panel(2&3) using Chipboard Screw(A) to secure

NOTE : Do not over tighten the screw

NOTE : Runner roller should be toward the front of the panel

NOTE : Chipboard Screw(A) should be assembled from the front of the runner. Start from $A^1$, $A^2$ then $A^3$

NOTE : Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole

$A^1$     F     $A^2$     $A^3$

A     A

A     F     A     F

A

A

A

A

A

②

A

A

③

## STEP 4

A) Insert Wood Dowel(C) to Partition(5)

B) Attach Cam Lock(D) to Partition(5)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

D

C

D

D

C

C

⑤

## STEP 5

A) Attach Runner(F) to both side of Partition(5) using Chipboard Screw(A) to secure

   NOTE : Do not over tighten the screw

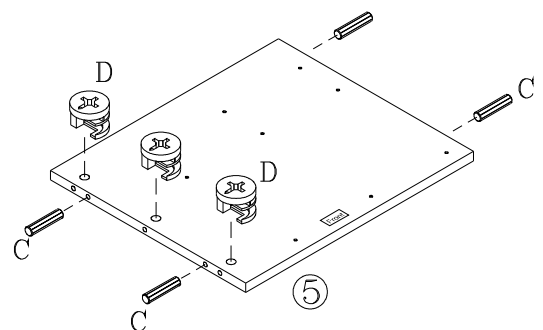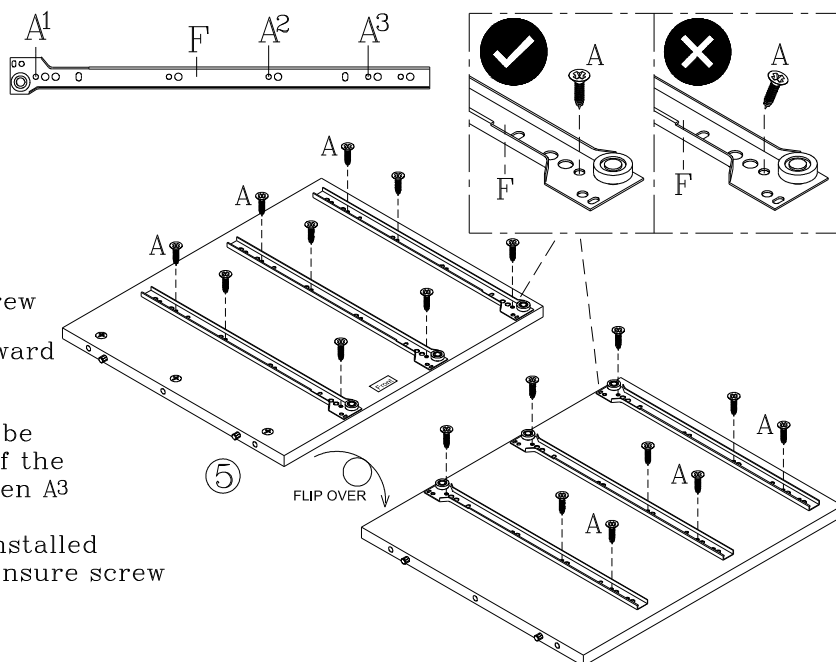   NOTE : Runner roller should be toward the front of the panel

   NOTE : Chipboard Screw(A) should be assembled from the front of the runner. Start from $A^1$, $A^2$ then $A^3$

   NOTE : Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole
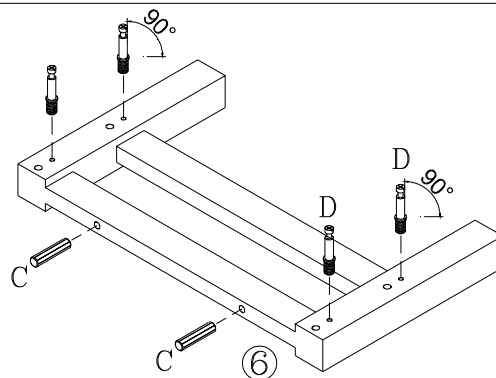
## STEP 6

A) Attach Wood Dowel(C) to 8 of Bottom Bar(8)
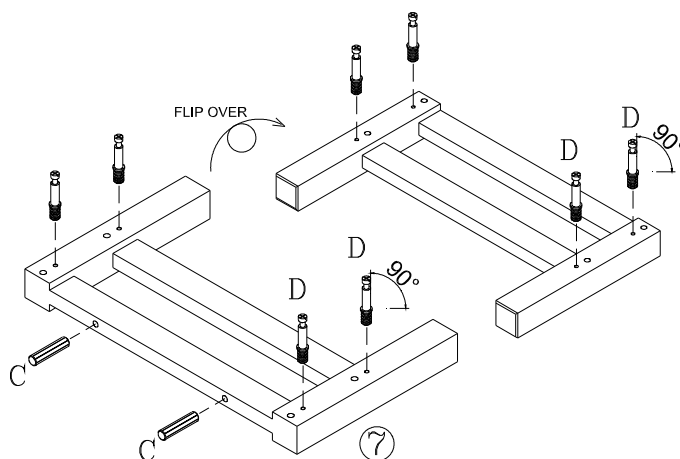
B) Attach Cam Lock(D) to 8 of Bottom Bar(8)

   NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes
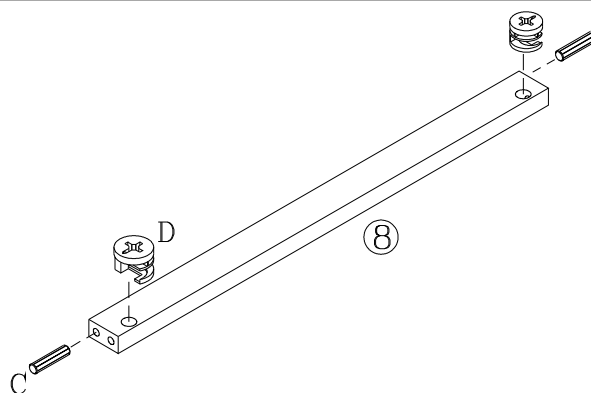
## STEP 7

A) Attach Wood Dowel(C) to both Side Leg (6)
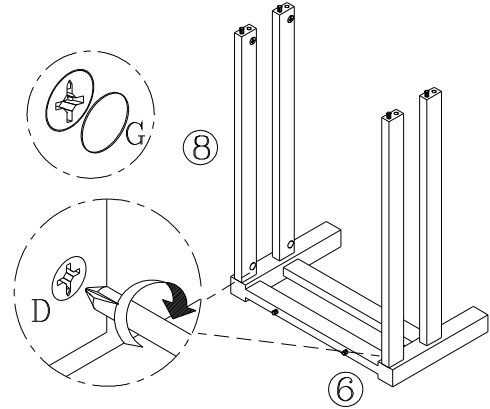
B) Insert and secure Cam Bolt(D) to Side Leg (6)

## STEP 8

A) Attach Wood Dowel(C) to Center Leg(7)

B) Insert and secure Cam Bolt(D) to both side of Center Leg (7)

## STEP 9

A) Attach Bottom Bar(8) to both Side Leg (6) turn each Cam Lock clockwise until it securely engages each Cam Bolt(D).

B) Cover Cam Lock with Cam Lock Cover(G)

NOTE: Do not over tighten the Cam Lock

## STEP 10

A) Attach Bottom Bar(8) to Center Leg(7) turn each Cam Lock clockwise until it securely engages each Cam Bolt(D).

B) Cover Cam Lock with Cam Lock Cover(G)

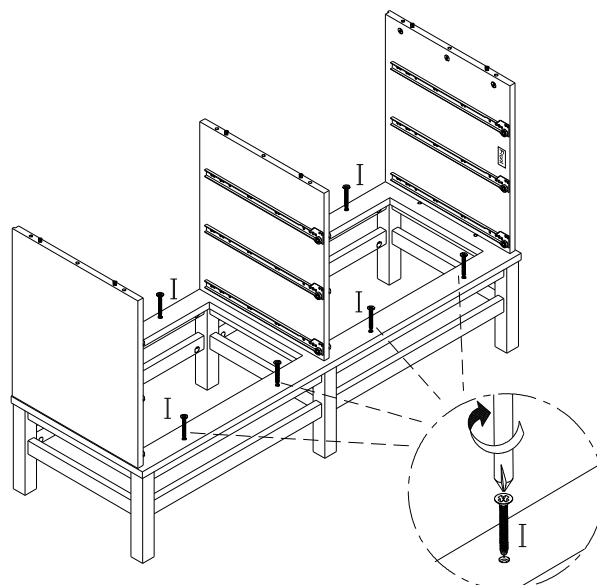NOTE: Do not over tighten the Cam Lock
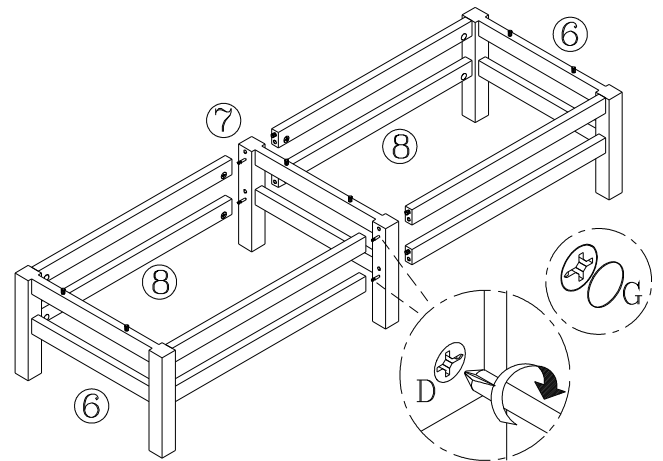
## STEP 11

A) Attach Side Panel Left&Right(2&3) & Partition(5) to Bottom Frame(4) and secure with Chipboard Screw(I)
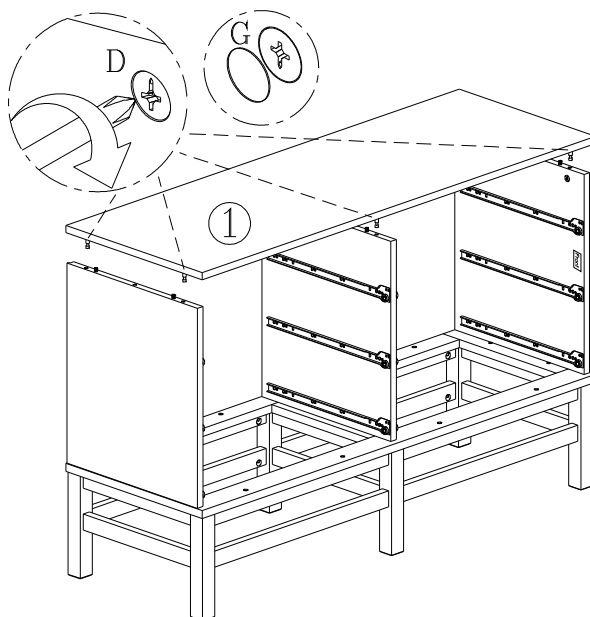
NOTE: Do not over tighten the Screw
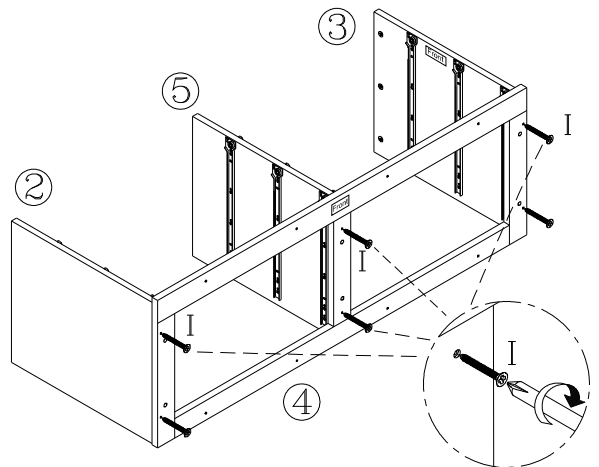
## STEP 12

A) Attach Bottom Frame(4) to Leg Frame secure with Chipboard Screw(I)
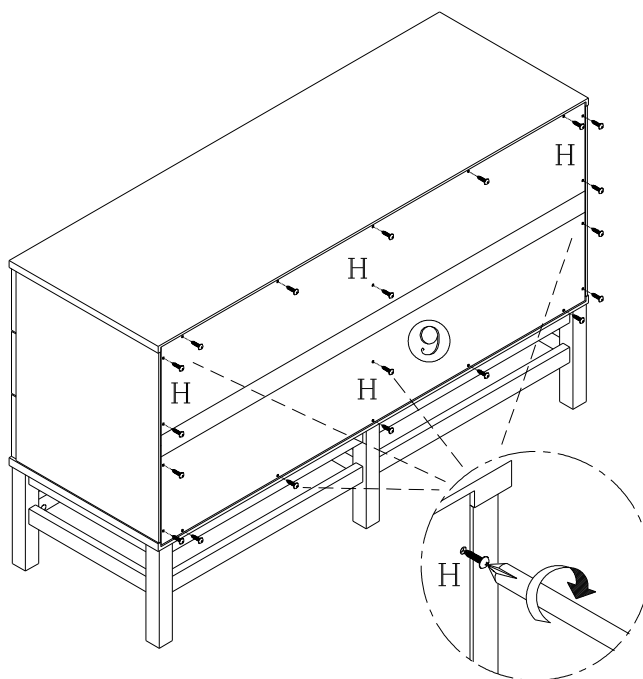
    NOTE : Do not over tighten the screw

## STEP 13

A) Attach Top Panel(1) to assembled unit secure with Cam Lock(D).
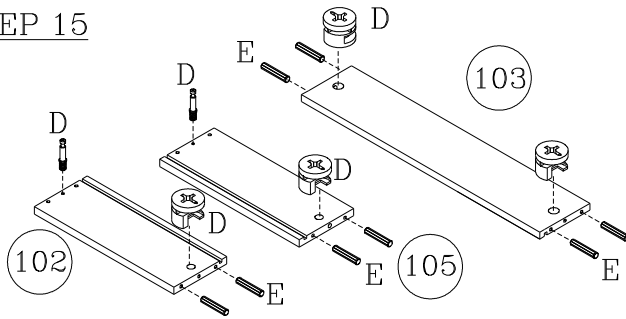
B) Cover Cam Lock with Cam Lock Cover(G)

    NOTE : Do not over tighten the Cam Lock

## STEP 14

A) Attach Back Plywood(9) to assembled unit using Panhead Chipboard Screw(Black)(H) to secure
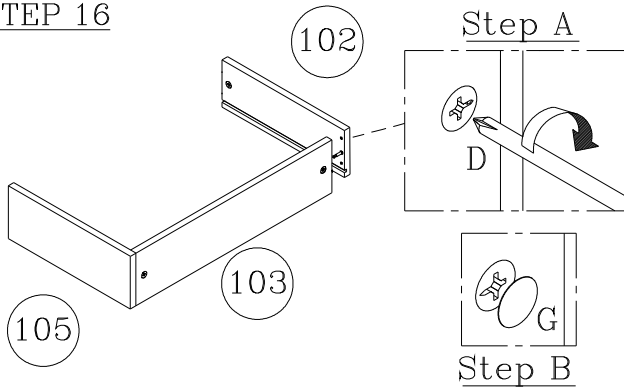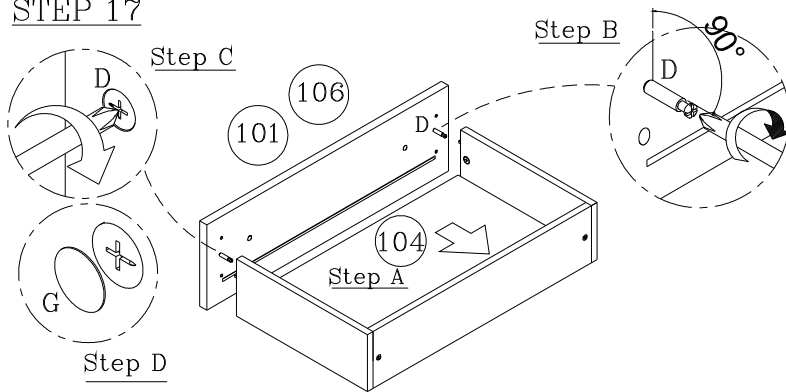
## STEP 15

A) Insert Wood Dowel(E) to Left&Right Drawer Side(102&105) & Drawer Back(103)

B) Attach Cam Lock(D) to Left&Right Drawer Side(102&105) & Drawer Back(103)

C) Insert secure Cam Bolt(D) to Left&Right Drawer Side(102&105)

## STEP 16

A) Attach Left&Right Drawer Side(102&105) to Drawer Back(103) secure with Cam Lock(D)

B) Using Cam Lock Cover(G) to cover Cam Lock(D)

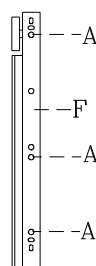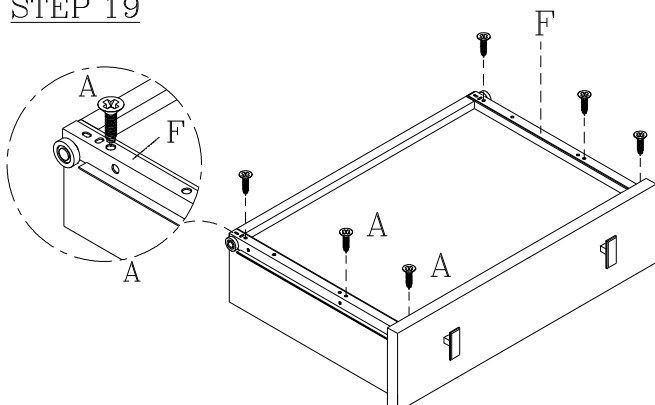Step A

Step B

## STEP 17

A) Slot in Drawer Base(104) in corresponding grooves

B) Insert and secure Cam Bolt(D) to Drawer Front(101&106)

C) Attach Drawer Front(101&106) to Drawer Box & secure with Cam Lock(D)

D) Using Cam Lock Cover(G) to Cover Cam Lock(D)

Step C

Step B

Step A

Step D
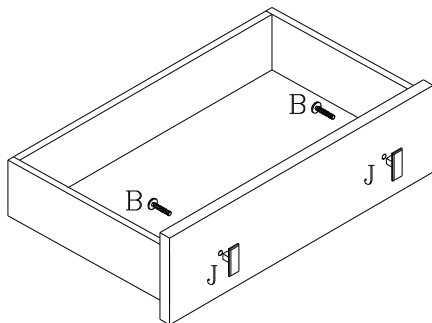
## STEP 18

A) Attach Handle(J) to Drawer Front(101&106) secure using Panhead Screw(B)

## STEP 19

A) Turn over the Drawer box, Attach Runner(F) to Drawer Side(102&105) using Chipboard Screw(A) to secure

NOTE: Runner roller should be flush and toward the back of the Drawer Box