



WARNING



HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors and covers before turning on power to this equipment.

Failure to follow these instructions can result in death, serious injury or equipment damage.

This product is intended for use in HVAC and building environmental control applications. It is not intended for direct medical monitoring of patients. Read and understand these instructions before installing this product. The installer is responsible for all applicable codes. If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

HW2 Protocol Series

Wall Mount Humidity Sensors

Product Overview

The HW2 Protocol Series of humidity sensors for living space is a flexible multisensor platform for use with BAS controllers designed to accept BACnet and Modbus outputs. HW2 Protocol Series sensors are available with three user interface options: touchscreen, LCD with three buttons and blank. Humidity and temperature sensors are included with all HW2 Protocol Series sensors.

Product Identification

Model	User Interface	RH*	Temperature	Setpoint	Override
HW2TP2A	Touchscreen	X	X	X	X
HW2LP2A	LCD / 3 Buttons	X	X	X	X
HW2XP2A	Blank	X	X		

* Replaceable RH module available to be ordered separately per table below.

Replaceable RH Elements

Model	Description	Temp. Calibration	RH Calibration
HS1N	Replaceable RH sensor, 1% with NIST certificate	N/A	2-point calibration
HS2N	Replaceable RH sensor, 2% with NIST certificate	N/A	2-point calibration
HS2X	Replaceable RH sensor, 2%	N/A	2-point calibration

Specifications


OPERATING ENVIRONMENT	
Input Power	Class 2; 20 to 30 Vdc, 24 Vac, 50 to 60 Hz
Protocol Output	BACnet or Modbus via RS-485, selectable
Operating Temp. Range	0 to 50 °C (32 to 122 °F)
Operating Humidity Range	0 to 95% RH non-condensing
Housing Material	High-impact ABS plastic
Terminal Block Torque	0.5 to 0.6 N-m (0.37 to 0.44 in-lbf)
IP Rating	IP 30
Mounting Location	For indoor use only. Not suitable for wet locations.
Surface Mount	The device can be surface mounted on Single Gang J-Box, British Standard and CE60 wall boxes
RH TRANSMITTER	
HS Sensor	Solid state capacitive, replaceable
Accuracy (Includes Hysteresis)*	±3.8% RH from 10 to 60% RH @ 25°C (77 °F) ±4.8% RH from 60 to 80% RH @ 25°C (77 °F) ±5.8% RH from 80 to 100% RH @ 25°C (77 °F)
Hysteresis	1.5% typical
Stability	±1% @ 20°C (68 °F) annually for 2 years
Output Range	0 to 100% RH

Specifications (cont.)

Temperature Coefficient	±0.1% RH/°C above or below 25 °C (77 °F) typical
TEMPERATURE TRANSMITTER	
Sensor Type	Solid state, integrated circuit
Accuracy	±0.2 °C (±0.4 °F) typical
Resolution	0.1 °C (0.1 °F)
Range	0 to 50 °C (32 to 122 °F)
DISPLAY MODELS	
Touchscreen	61 mm (2.4 in), color, backlit, capacitive, 240x300 px Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
LCD	52mm (2.05 in), segmented with 3 buttons Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
SETPOINTS	
Temperature Setpoint	Scale: 0 to 50 °C (32 to 122 °F) or 10 to 35 °C (50 to 95 °F) max., adjustable span
Humidity Setpoint	Scale: 0 to 100% RH
Fan Speed Setpoint	Off, Low, Medium, High, Auto
OVERRIDE	
Override Button	Display models feature a momentary override button
WIRING TERMINALS	
Terminal Blocks	Screw terminals, 18-24 AWG
Screw Terminal Torque	0.2 N-m (2.0 in-lbf) max.
WARRANTY	
Limited Warranty	5 years
COMPLIANCE INFORMATION	
Agency Approvals	UL 916 European Conformance CE: EN 60730-1, EN 60730-2-9, EN 60730-2-13, EN 61000-6-2, EN 61000-6-3, EN 61000 Series - Industrial Immunity, EN 61326-1 FCC Part 15 Class B, REACH, RoHS, RCM (Australia), ICES-003 (Canada), UKCA (UK)

* Humidity sensor overall accuracy should include: accuracy, temperature coefficient and stability. Humidity accuracy is shown as an absolute value, so if testing accuracy with a hand-held device, you must check for deviation in its readings instead of calculating the percentual deviation. Additionally, you must consider the overall accuracy of the hand-held device in the comparison.

Dimensions

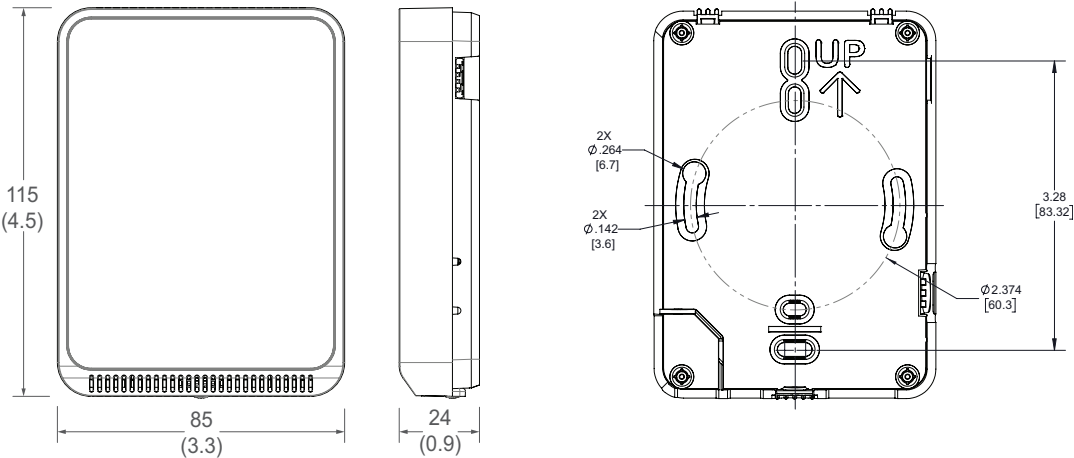

Installation


1. Remove the cover from the base at the bottom of the device.




2. Position the sensor base vertically on the wall 1.35 m (4.5 ft.) above the floor with the “UP” arrow facing upward. Locate away from windows, vents and other sources of draft. If possible, do not mount on an external wall, as this may cause inaccurate temperature readings.



3. Pull 18 or 22 AWG cable(s) through the hole in the backplate.

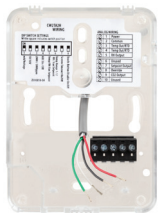


4. Mount the backplate onto the wall using the screws provided.

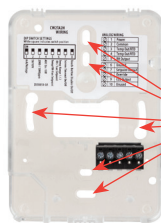


Six screw holes available. Use a minimum of two for secure mounting.

5. Connect the wires to the screw terminals. Do not over-tighten the screws.

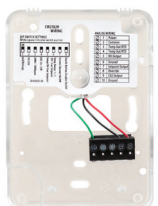

Installation (cont.)

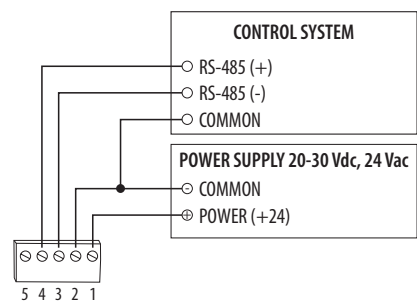


6. Configure the device.

Address Configuration:


Each device on a single network must have a unique address. Set the DIP switch labeled “ADDRESS” to assign a unique address before the device is connected to the network. If an address is selected that conflicts with another device, neither device will be able to communicate.

Address the device as any whole number between and including 1 to 127. Note that zero is not a valid address for Modbus; zero is a valid address for BACnet. Positions 1 through 7 of the “ADDRESS” DIP switch designate the address. Position 8 toggles between the Modbus and BACnet communication protocols, as shown in the diagram below. This is the left bank of DIP switches on the sensor.

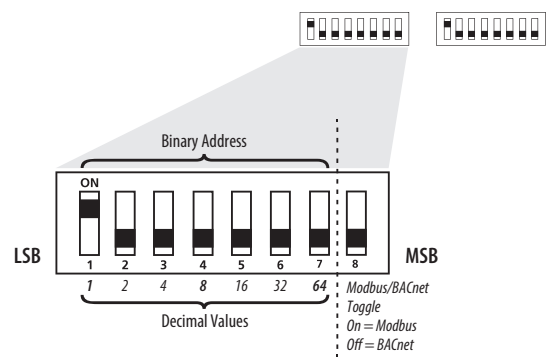

To set an address using the DIP switch, simply add the values of any switches that are in the ON position.

For example, an address of 73 is set as shown in the diagram below.

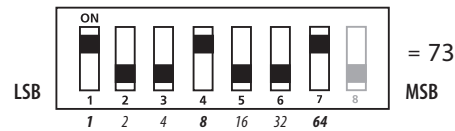


Position number 1 has an ON value of 1, position number 4 has an ON value of 8 and position number 7 has an ON value of 64 (1 + 8 + 64 = 73).

Installation (cont.)

Communications Configuration:

The following parameters are configurable:

- Parity (Modbus only): None, Odd, None1 (one stop bit), Even
- Baud rate: 9600, 19200, 38400, 57600 (Modbus), 76800 (BACnet)

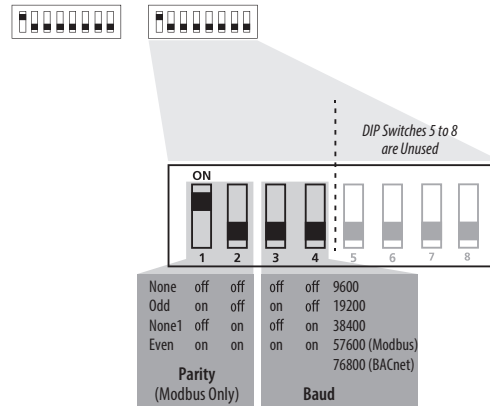

Example: No Parity, 19200 Baud

1	2	3	4	5	6	7	8
off	off	on	off	off	off	off	off
None		19200 Baud		Unused			

Modbus Point Map

Function Codes:

Function Code	Function
03	Read holding (RW) registers
04	Read input (RO) registers
06	Write single register*
16	Write multiple registers
01	Read coils
05	Write single coil
15	Write multiple coils

* Not supported.

All of these values correspond to BACnet objects with the same name. See the BACnet Conformance Statement for their definitions.

Note that an attempt to write to "read only" holding registers will give an error and the entire write command will not be executed even if writing to read/write locations were also requested. Exception code 2 is given in this case. "Preserved" means the values is maintained through power outages.

Installation (cont.)

32-Bit Input Registers (Read Only):

16-Bit Register Location	Description	Format
1	Temperature reading	32-bit floating point
2		
3	Humidity reading	32-bit floating point
4		
5-8	Unused	NA
9	Model number	4x16-bit ASCII characters as a single query
10		
11		
12		
13~41	Unused	NA
42	Serial number	4x16-bit ASCII characters as a single query
43		
44		
45		

32-Bit Holding Registers (Read/Write):

16-Bit Register Location	Description	Format
1	Temperature setpoint	32-bit floating point
2		
3	Humidity setpoint	32-bit floating point
4		
5	Screen color set	32-bit
6		
7~39	Device name	4x16-bit ASCII characters as a single query
40	Fan speed	32-bit
41		
42~51	Unused	NA
52	Offset temp by this value	32-bit floating point
53		
54	Offset humidity by this value	32-bit floating point
55		

Note: All holding registers are preserved during power outages.

Coils (Read/Write):

Register	Description
3*	Touchbutton disable
5*	Temperature (°C)
6	Occupancy override
7*	Touch timeout
8*	Display shows humidity
12*	Display shows temperature setpoint on main screen
14*	Display shows setpoint

**Preserved during power outages.*

Installation (cont.)

BACnet Descriptions

Note: In the tables below, all properties are read-only unless otherwise noted. "Preserved" means the value is maintained through power outages.

Present_Value Range Restrictions:

Object Name	Minimum Value	Maximum Value
DEV - Object_Name	1 Character	65 Characters
Temperature Setpoint Min_Pres_Value Max_Pres_Value	Min_Pres_Value 0 Min_Pres_Value +1	Max_Pres_Value Max_Pres_Value -1 50
Humidity Setpoint Min_Pres_Value Max_Pres_Value	Min_Pres_Value 0 Min_Pres_Value +1	Max_Pres_Value Max_Pres_Value -1 100
Screen Color	1	4
Fan Speed	1	5
Device_Instance	0	4,194,302
Temp Offset	-5	5
Humidity Offset	-10	10

Standard Object Types Supported:

Object Type	Supported Optional Properties	Writable Properties
Analog Input - AI	Reliability	None
Analog Value - AV	Min_Pres_Value Max_Pres_Value	Min_Pres_Value Max_Pres_Value Present_Value
Binary Value - BV	None	Present Value
Multistate Value - MSV	None	Present Value
Device - DEV	Max Info Frames Max_Master	APDU_Timeout Max_Master Object_Name

Objects Table:

Object Name	Object Identifier	Object Property
Room Temperature	AI 1	Temperature in Room
Room Humidity	AI 2	Humidity in Room
Temperature Setpoint*	AV 1	Setpoint Value for Temperature
Humidity Setpoint*	AV2	Setpoint Value for Humidity
Touch Disable*	BV2	ACTIVE disables Touch Response INACTIVE enables Touch Response
Temperature Units*	BV4	ACTIVE displays temperature in Fahrenheit INACTIVE displays temperature in Celsius
Occupancy Override	BV5	ACTIVE means room is not occupied INACTIVE means room is occupied
Screen Timeout*	BV 6	ACTIVE enables Screen Timeout INACTIVE disables Screen Timeout
Display Humidity*	BV7	ACTIVE displays humidity on Screen INACTIVE removes humidity from Screen
Select Temperature Display*	BV11	ACTIVE displays temperature setpoint on main screen INACTIVE displays temperature setpoint in upper left corner and current temperature on main screen

Installation (cont.)

Object Name	Object Identifier	Object Property
Display Setpoint*	BV13	ACTIVE enables temperature setpoint display on home screen INACTIVE disables temperature setpoint display on home screen
Screen Color Set*	MSV 1	Selection for Screen Color Theme
Fan Speed*	MSV 2	Fan Speed Selection

* Preserved during power outages.

Device Objects Table:

Object Name	Object Identifier	Object Property	Description
Living Space Room Unit XXXXXXX	Vendor_ID + nnn	Object _Identifier (R/W)	Unique value where nnn initially is the MS/TP address

BACnet Protocol Implementation Conformance Statement

Vendor Name: Veris Industries

Product Name: Living Space Room Unit

Product Model: HW2XXXX

BACnet Protocol Version : 1

BACnet Protocol Revision: 16

Product Description: Environmental Sensor

BACnet Standardized Device Profile (AnnexL):

BACnet Application Specific Controller (B-ASC)

List All BACnet Interoperability Building Blocks Supported(Annex K):

DS-RP-B, DS-RPM-B, DS-WP-B, DM-DDB-B, DM-DOB-B, DM-DCC-B, DM-RD-B

Data Link Layer Options: MS/TP (Clause 9), baud rates, 9600, 19200, 38400, 76800

Device Address Binding: Static Device binding is not supported.

Networking Options: None

Character Sets supported: ISO 10646 (UTF-8)

- With sensor base fully installed, align top of cover to mounting tabs on top of sensor base. Swing cover downward until it latches at the bottom.



- Install locking screw to secure cover in closed position.




Touchscreen Operation


Main Screen

The touchscreen user interface displays applicable sensor output values (temperature and RH), setpoint value and menu button.

Setpoint value (temperature setpoint shown)

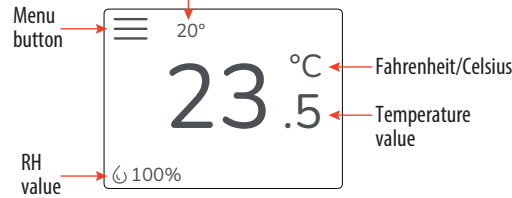


Room Temperature Display Option

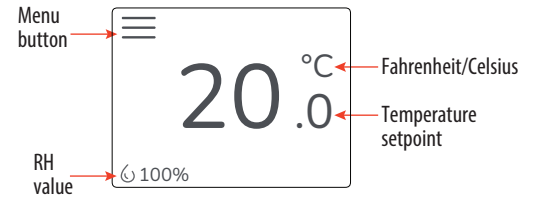

Temperature Setpoint Display Option

Menu Screen

The menu screen opens when pressing the Menu button on the main screen. Integrator's submenu, occupancy/override, Fahrenheit/Celsius, settings and setpoint submenu (temp, RH and fan) buttons are displayed on the menu screen.



Note: RH setpoint will not appear on non-RH models.


Menu Button Functions



Integrator's Submenu

Press this icon to access the Integrator's menu.

Submenu Only



Occupied Override Button

Press this icon to provide momentary signal output to the controller

Single Press Only



Signals occupied/override call to controller.





Fahrenheit/Celsius Switch

Press this icon to display either °C or °F.

Single Press Only



Changes units to Fahrenheit when pressed.
Changes units to Celsius when pressed.





Touchscreen Operation (cont.)



Settings

This icon provides the ability to change the color scheme of the display.

Submenu Only

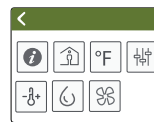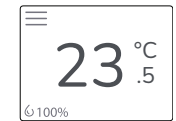


Temp Setpoint Adjustment

Click this icon to access the setpoint change menu.
Toggle the Temp Setpoint Display button to display or hide the setpoint value on the home screen.


Submenu Only




Temp Setpoint Display Button Off

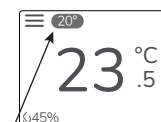

Setpoint

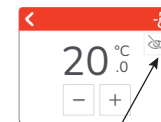


Temp Setpoint Display Button On

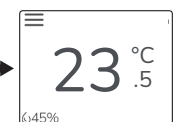

Humidity Setpoint Adjustment

Click this icon to access the setpoint change menu.

Submenu Only



Fan Speed

Click this icon to access the fan speed menu.


Submenu Only



Selected

LCD Display Operation


Button Functions

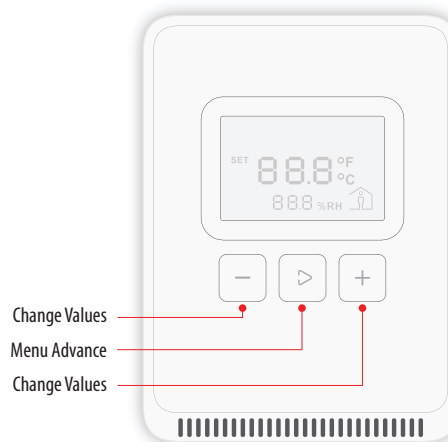

LCD Display Operation (cont.)

Display Icons


The main screen displays sensor values for RH, room temperature or temperature setpoint and Celsius/Fahrenheit.

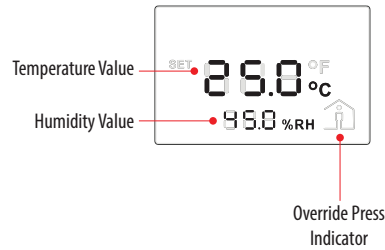

Setpoint Function


The Menu Advance button cycles between Temperature, RH, Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

Temperature Setpoint Adjustment

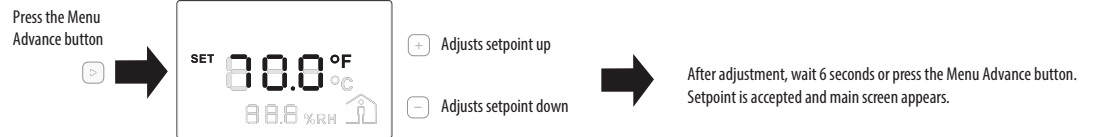


Note: Numeric information will flash while in Set mode.

RH Setpoint Adjustment

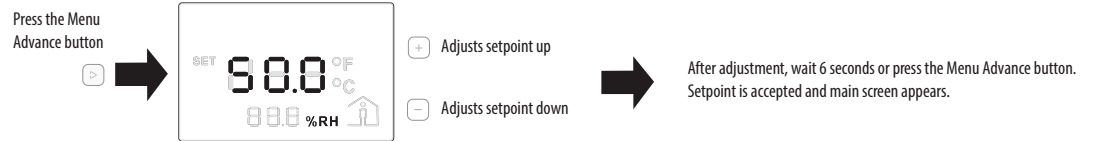

Note: Numeric information will flash while in Set mode.


Fan Speed Setpoint Adjustment

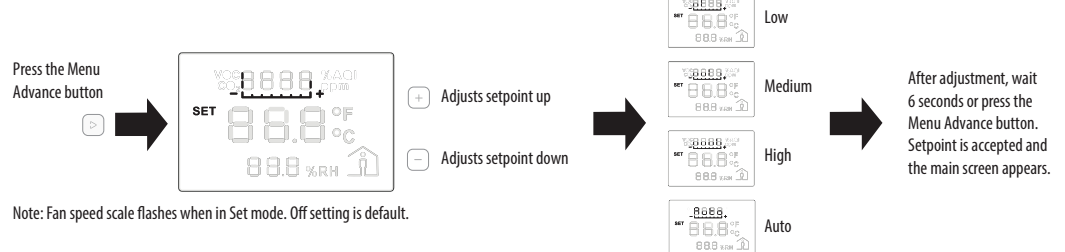

Note: Fan speed scale flashes when in Set mode. Off setting is default.

Changing Celsius and Fahrenheit Scales

The Menu Advance button cycles between Temperature, RH, Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

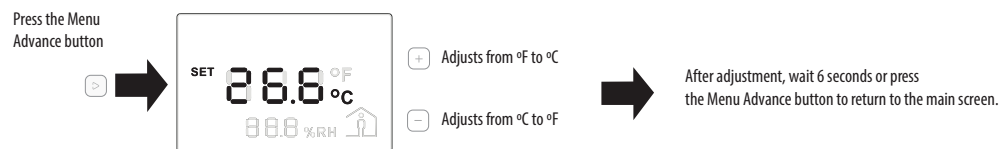


Note: °F or °C text will flash while in Set mode.

Setpoint Function
(cont.)

Occupied/Override Button

Press and hold the Menu Advance button for 1 second

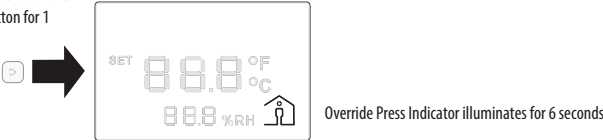

China RoHS
Compliance
Information

Environment-Friendly Use Period (EFUP) Table

部件名称 Part Name	有害物质 - Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子件 Electronic	X	O	O	O	O	O

本表格依据SJ/T11364的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572规定的限量要求。

(企业可在此处，根据实际情况对上表中打“X”的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Z000057-0B