

OPERATING INSTRUCTIONS



Figure 1

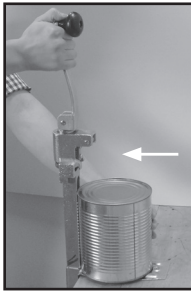


Figure 2

1. Make sure can opener handle is in the unlock position (Figure 1) and slide it up enough to place a can underneath it on the metal base. (Figure 2)
2. Hold the can against the bar of the opener with a height distance of 3" between the blade and the top of the can. (Figure 3)

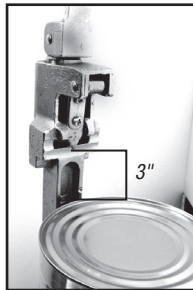


Figure 3

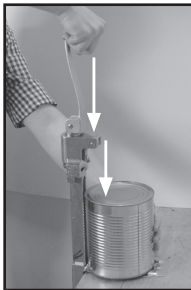


Figure 4

3. Grip the handle firmly and thrust down onto the can to puncture it. (Figure 4)
4. Lock the handle (Figure 5) and turn it clockwise. This will automatically turn the can around. Use your free hand to guide the can as it rotates. Continue turning the handle until the top of the can is removed. (Figure 6)
5. Raise the handle to unlock position and lift it up to slide the opened can out. (Figure 1)

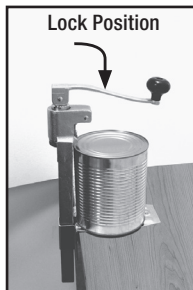


Figure 5

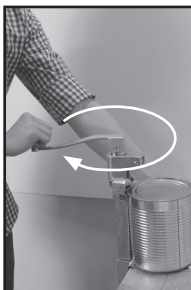


Figure 6

IMPORTANT NOTE: Knife of this opener may be reversed for double wear but should not be reshaped.

CLEANING INSTRUCTIONS

The can opener must be cleaned daily or after each extended use. Regular maintenance will help prevent unwanted build-up and harmful bacteria growth.

1. Use a stainless cleaning brush to remove all the food and can opening residue from the gear, the gear cavity, and the knife blade.
2. Wash the knife, gear, and any splash area on the opener using warm soapy water. Do not allow components to soak.
3. Thoroughly dry the knife, gear, and can opener using a dry cloth or paper towel.
4. Coat the knife and gear with light non-sticking vegetable oil to prevent rusting when the can opener is not in use.

WARRANTY INFO

Winco warrants these products to be free from defects in material and workmanship for a period of one year from the date of purchase. The Company's obligation under this warranty is limited to repairing or replacing without charge any part or parts found to be defective under normal use. It is the sole responsibility of the purchaser to return the entire unit to the distributor, transportation charges prepaid.

This warranty does not cover parts that must be replaced under normal use, including, but not limited to, blades and gears on can openers. No other warranty, written or verbal, is authorized by the Company. Warranty information outside the United States may vary; please consult your distributor.

REPLACEMENT PARTS


Replacement parts are available for purchase. Please check our website for up to date parts list and prices: www.wincous.com.

WINCO
www.wincous.com

winco

Manual Can Opener

CO-1

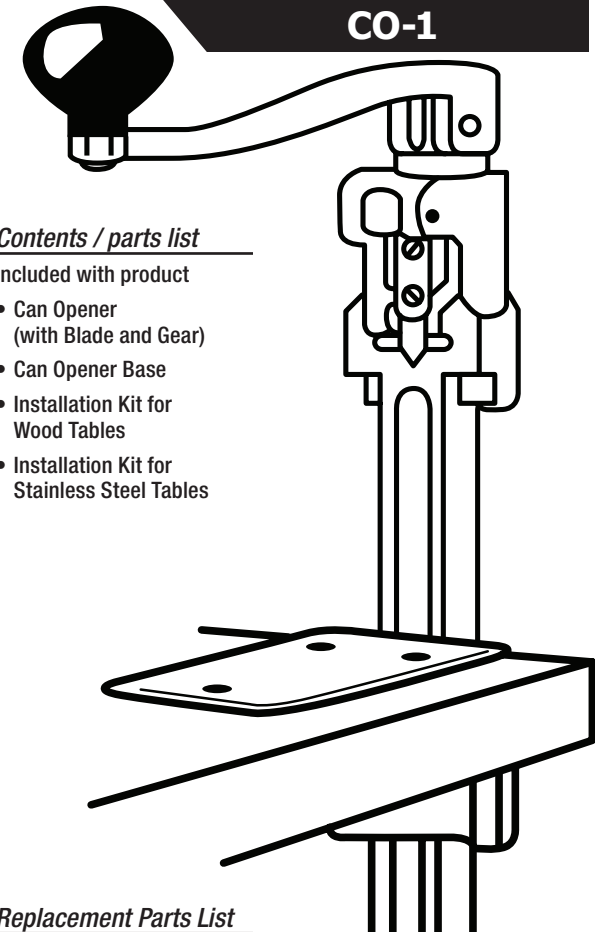


Contents / parts list

Included with product

- Can Opener (with Blade and Gear)
- Can Opener Base
- Installation Kit for Wood Tables
- Installation Kit for Stainless Steel Tables

Replacement Parts List

- CO-1B: Replacement Blade Set
- CO-1BS: Blade Screw Set
- CO-1G: Replacement Gear
- CO-1WI: Installation Kit for Wood Tables
- CO-1SI: Installation Kit for Stainless Steel Tables

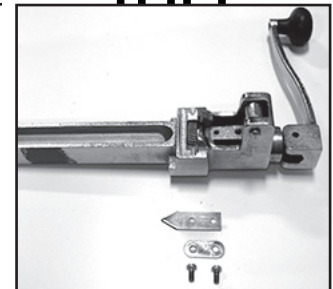

USE & CARE MANUAL

MOUNTING INSTRUCTIONS

Mounting can opener on a stainless steel table

Tools required for mounting on a stainless steel table

- 1/8" cobalt or titanium drill bit
- 9/32" cobalt or titanium drill bit
- 7/16 socket, box or open-end wrench

Mounting instructions

1. Place the L-bracket on the stainless steel table in the desired position where you want to secure the can opener.
2. Mark the center of each of the three mounting holes of the L-bracket. These three points will be your drilling location.

IMPORTANT

3. **To prevent the drill from slipping out of position, place a piece of masking tape on each of the three marked points. Then mark the points again on the masking tape.**
4. Drill a small starter hole on each marked point with a 1/8" cobalt or titanium drill bit that is specifically used for drilling into stainless steel.
5. Complete drilling the holes for the screws by using a 9/32" cobalt or titanium drill bit that is specifically used for drilling into stainless steel.
6. Insert size 1/4 x 20 x 3/4" screws through the L-bracket. Use the split washers and nylon lock nut provided.
7. Use a 7/16" socket, bow or open-end wrench to tighten and secure the screws.

Mounting can opener on a wooden table (standard 2" thick)

Tools required for mounting on a standard 2" thick wooden table

- 9/32" drill bit
- 7/16 socket, box or open-end wrench

Mounting instructions

1. Place the L-bracket on the stainless steel table in the desired position where you want to secure the can opener.
2. Mark the center of each of the three mounting holes of the L-bracket. These three points will be your drilling location.
3. Drill through each point with a 9/32" drill bit.
4. Insert size 1/4 x 20 x 2-1/2" screws through the L-bracket. Use the split washers and nylon lock nut provided.
5. Use a 7/16" socket, bow or open-end wrench to tighten and secure the screws.

REPLACEMENT PARTS INSTRUCTIONS

Instructions for replacing gear

1. Stand facing opener on the gear side with the handle lowered. (Figure 7)
2. Wedge a flat headed screwdriver into the slot on the right side of the gear to keep it from turning. (Figure 8)

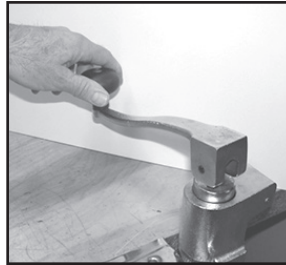


Figure 7

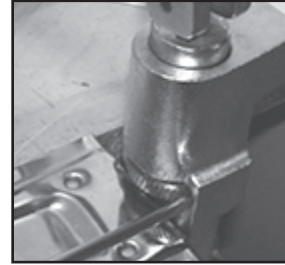


Figure 8

3. Gently turn the handle counter clockwise to unscrew. (Figure 9)
4. Remove used gear and washer.
5. Insert the new gear and washer into the slot. Make sure the printed side of the gear is facing out. (Figure 10)

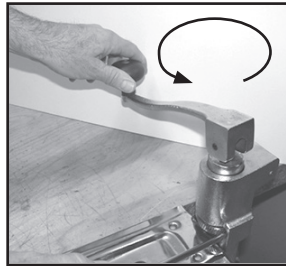


Figure 9

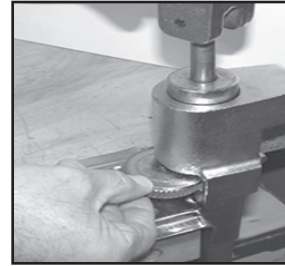


Figure 10

6. Position screwdriver on the left of the gear. (Figure 11)
7. Turn handle clockwise to screw on. Do not over tighten. (Figure 12)



Figure 11

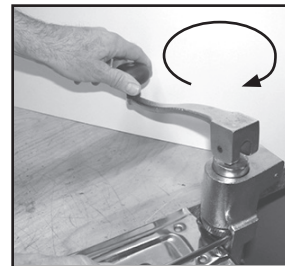


Figure 12

MAINTENANCE: Keep gear and other parts of opener clean. The shaft end for the gear must be lubricated regularly with vegetable oil.

REPLACEMENT PARTS INSTRUCTIONS

Instructions for replacing knife blade

1. Make sure handle is raised before removing the two screws holding the old knife blade. (Figure 13)

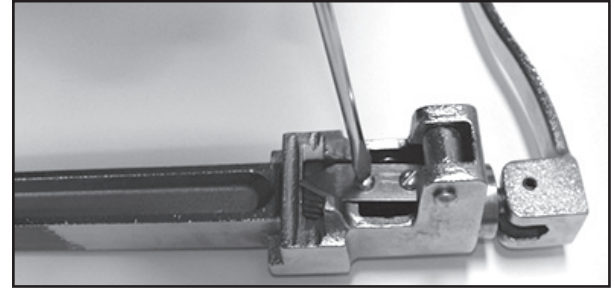


Figure 13

2. Place new knife blade on the holder and then the support plate over the knife blade. (Figure 14)

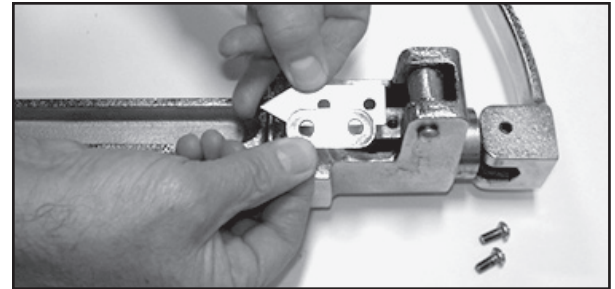


Figure 14

3. Align holes and refasten the two screws. (Figure 15)

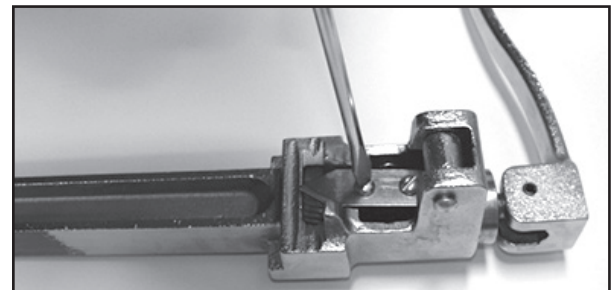


Figure 15

4. Do not remove or adjust any other parts of the opener.

IMPORTANT NOTE: At the first sign of wear, knife blade must be replaced with a new factory blade to ensure safe and optimal operation. Do not attempt to sharpen old knife blade to reuse.