

Halogen/Incandescent Dimmer with Radio Frequency Receiver

MRF2-600M 120 V~ 60 Hz 600 W (Single-Pole or Multi-Location)

Halogen/Incandescent/Magnetic Low-Voltage Dimmer with Radio Frequency Receiver

MRF2-6MLV 120 V~ 60 Hz 600 W Halogen/Incandescent 600 VA/450 W Magnetic Low-voltage (Single-Pole or Multi-Location)

MRF2-10D-120 120 V~ 60 Hz 1 000 W Halogen/Incandescent 1 000 VA/800 W Magnetic Low-voltage (Single-Pole or Multi-Location)

Companion Dimmer

MA-R 120 V~ 60 Hz 8.3 A MSC-AD 120 V~ 60 Hz 8.3 A


Important Notes. Please read before installing.

- CAUTION!** When installing Halogen/Incandescent Dimmers — To reduce the risk of overheating and possible damage to other equipment, **DO NOT** use to control receptacles, motor-operated appliances, fluorescent lighting fixtures, low-voltage fixtures, compact fluorescent (Energy Saver) lamps, or transformer-supplied appliances.
- CAUTION!** When installing Halogen/Incandescent/Magnetic Low-voltage Dimmers — To reduce the risk of overheating and possible damage to other equipment, **DO NOT** use to control receptacles, motor-operated appliances, fluorescent lighting fixtures, compact fluorescent (Energy Saver) lamps, or electronic low-voltage fixtures.
- CAUTION!** Operating a dimmed magnetic low-voltage circuit with all lamps inoperative or removed may result in current flow in excess of normal levels. To avoid possible transformer overheating or failure, Lutron strongly recommends the following: Do not operate without operative lamps in place. Replace burned-out lamps as soon as possible. To prevent premature failure due to overcurrent, use transformers with thermal protection or fused primary transformer windings.
- Install in accordance with all national and local electrical codes.
- When no "grounding means" exist within the wallbox, then the NEC® 2008, Article 404.9 allows a Dimmer without a grounding connection to be installed as a replacement, as long as a plastic, noncombustible wallplate is used. For this type of installation, twist a wire connector onto the green ground wire or remove the green ground wire on the Dimmer and use an appropriate wallplate such as Claro® or Satin Colors® series wallplates by Lutron.
- Do not paint the Dimmers or the Companion Dimmers.
- The Dimmers are not compatible with standard 3-way or 4-way switches. Use only with Lutron Companion Dimmers.
- In any 3-way/4-way circuit use only one Dimmer with up to 9 Companion Dimmers.
- Do not use where the total load is greater than the rating indicated in the Derating Chart below.
- Do not use where total load is less than 50 W/VA.
- Operate between 32 °F (0 °C) and 104 °F (40 °C).
- For indoor use only.
- It is normal for the Dimmers to feel warm to the touch during operation.
- Recommended minimum wallbox depth is 2.5 in (64 mm).
- Maximum wire length between the Dimmers and the furthest Companion Dimmer is 250 ft (76 m).
- Clean with a soft damp cloth only. Do not use any chemical cleaners.
- DO NOT** mix MRF and MRF2 lighting controls products within the same system. Products are **NOT compatible**, contact Lutron Technical Support Center.
- Controls must be mounted vertically. See stamp on control for correct positioning.
- DO NOT** wire while circuit breaker is open. Permanent damage to the Dimmer may result.
- DO NOT** use Incandescent/Halogen or Electronic Low-voltage Dimmers for Magnetic Low-voltage lighting.
- Up to 10 Maestro Wireless controls can be configured to work together.

Multigang Installations

When installing more than one control in the same wallbox, the maximum load capacity is reduced. No derating is required for Companion Dimmers.

Refer to the Derating Chart below.

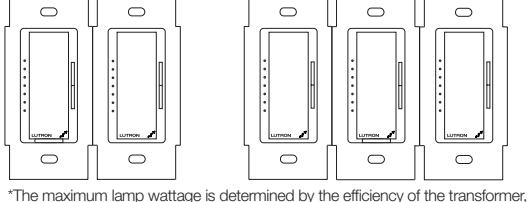

*The maximum lamp wattage is determined by the efficiency of the transformer, with 70%-85% as typical. For actual transformer efficiency, contact either the fixture or transformer manufacturer. The total VA rating of the transformer(s) shall not exceed the VA rating of the dimmer.

Derating Chart

Model	Type of Load	Single Gang	End of Gang	Middle of Gang
MRF2-600M	Halogen/Incandescent	600 W	500 W	400 W
MRF2-6MLV	Halogen/Incandescent	600 W	500 W	400 W
Magnetic Low-Voltage*	600 VA/450 W	500 VA/400 W	400 VA/300 W	
MRF2-10D-120	Halogen/Incandescent	1000 W	800 W	650 W
	Magnetic Low-Voltage*	1000 VA/800 W	800 VA/600 W	650 VA/500 W

*The total VA rating of the transformer(s) shall not exceed the VA rating of the dimmer.

Dimming Rocker

Press to brighten.

Press to dim.

LEDs

Light level indicators.

FASST™ - Front Accessible Service Switch**Important Notice:**

To replace the bulb, power may be conveniently removed by pulling the FASS switch out on the Dimmer.

For any procedure other than routine bulb replacement, power must be disconnected at the main electrical panel.

Multiple Dimmer Applications

If multiple Maestro Wireless Dimmers are set up to the same Wireless Controller, they will perform as follows:

- Pressing the On Button on the Wireless Dimmers Controller will cause all Dimmers to turn on fully.
- Pressing the Off Button on the Wireless Controller will cause all Dimmers to turn off completely.
- Pressing the Raise Button on a Wireless Controller will cause the Dimmer to turn on and gradually increase the light level.
- Pressing the Lower Button on a Wireless Controller will cause the Dimmer to gradually decrease light level.

Important Notice: To replace the bulb, power may be conveniently removed by pulling the FASS switch out on the Dimmer. **For any procedure other than routine bulb replacement, power must be disconnected at the main electrical panel.**

Set-Up

Important: Set up Wireless Controller or Sensor to a Dimmer before use.

1 Press and hold the Dimmer's Tap Button (Figure 1) for approximately 6 seconds. Once all of the LEDs start to blink slowly, release the Tap Button and go to step 2.

5 To save a favorite light setting, adjust all the Dimmers controlled by a Wireless Controller to the desired light setting, then press and hold the Preset Button on the Wireless Controller for approximately 6 seconds until all the LEDs on the Dimmer stop blinking. Once a favorite light setting is set, pressing the Preset Button will cause each Dimmer to return to its favorite light setting.

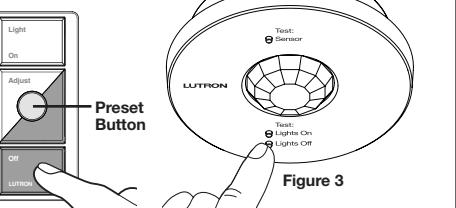


Figure 2

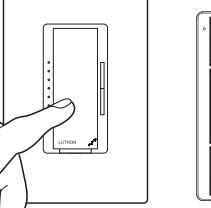


Figure 3

Technical AssistanceFor questions concerning the installation or operation of this product, call the **Lutron Technical Support Center**.

Please provide exact model number when calling.

U.S.A. and Canada (24 hrs / 7 days)

1-800-523-9466

Fax +1-610-282-6311

Mexico +1-888-235-2910

Other countries 8am - 8pm (Hora del este)

+1-610-282-3800

www.lutron.com

Troubleshooting**Symptoms****Possible Causes**

Load does not turn on or LEDs do not light up.

- FASS switch on the Dimmer (or Companion Dimmer) is in the Off position.
- Light bulb(s) burned out.
- Breaker is OFF or tripped.
- Load not properly installed.
- Wiring error. Call Lutron Technical Support Center.

Light does not respond to Radio Frequency Wireless Controller or Sensor.

- The Dimmer failed to learn Wireless Controller or Sensor; see *Set-Up*.
- The Dimmer has already received and responded to a command, or is already at the Light Setting the Wireless Controller or Sensor is requesting.
- The Wireless Controller or Sensor is outside the operating range.
- The Wireless Controller or Sensor batteries are low.
- The Wireless Controller or Sensor batteries are installed incorrectly.

Limited Warranty (Valid only in U.S.A., Canada, Puerto Rico, and the Caribbean.) Lutron will, at its option, repair or replace any unit that is defective in materials or manufacture within one year after purchase. For warranty service, return unit to place of purchase or mail to Lutron at 7200 Suter Rd., Coopersburg, PA 18036-1299, postage pre-paid.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, AND THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE HEREBY DISCLAIMED. THIS WARRANTY DOES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REINSTALLATION, OR DAMAGE RESULTING FROM MISUSE, ABUSE, OR DAMAGE FROM IMPROPER WIRING OR INSTALLATION. THIS WARRANTY DOES NOT COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES. LUTRON'S LIABILITY ON ANY CLAIM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, DELIVERY, OR USE OF THE UNIT SHALL NEVER EXCEED THE PURCHASE PRICE OF THE UNIT.

This product is covered under one of the following U.S. patents: 5,249,919; 5,359,940; 5,637,930; 5,798,581; 6,169,377; 6,380,696; 7,362,285; 7,365,282; 7,408,527; 7,542,216 and the corresponding foreign patents. U.S. and foreign patents pending. Lutron, Claro, Sunburst, Maestro, Maestro Wireless, The Sunburst Logo and Satin Colors are registered trademarks and FASS is a trademark of Lutron Electronics Co., Inc. NEC is a registered trademark of National Fire Protection Association, Quincy, Massachusetts. © 2009 Lutron Electronics Co., Inc.

When in set-up mode the LEDs flash when trying to set up the wireless controller or sensor. To remove a previously set-up wireless controller or sensor, tap the wireless controller or sensor's On button three times, on the third tap hold for 3 seconds and then tap 3 more times. This will remove the wireless controller from all dimmers or switches it was previously setup with.

- The maximum number of Wireless Controllers or Sensors have been set up to the Dimmer (you cannot add any more Wireless Controllers or Sensors).
- To remove a previously set-up wireless controller or sensor, tap the wireless controller or sensor's On button three times, on the third tap hold for 3 seconds and then tap 3 more times. This will remove the wireless controller from all dimmers or switches it was previously setup with.

FCC Information:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

Cautions: Changes or modifications not expressly approved by Lutron Electronics Co. could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference and
- This device must accept any interference received, including interference that may cause undesired operation.

Información exigida por la FCC: (Única solamente en los E.U.A., Canadá, Puerto Rico y el Caribe.)

Lutron, a discreción propia, reparará o reemplazará las unidades con fallas en sus materiales o fabricación dentro de los Estados Unidos o en Canadá, garantizadas para una protección razonable contra las interferencias perjudiciales en un entorno residencial. Si se instala y se usa de acuerdo con las instrucciones, este dispositivo no causa interferencias perjudiciales a la recepción de radio y televisión, lo cual se puede determinar encendiendo y apagando el dispositivo. El usuario puede tratar de corregir cualquier interferencia adoptando una o más de las siguientes medidas:

- Reorientar o relocate la antena receptora.
- Aumentar la separación entre el dispositivo y el receptor.
- Conectar el dispositivo en un tomacorriente que esté en un circuito diferente al del receptor.

Precavición: Todo cambio o modificación que no cuente con la aprobación explícita de Lutron Electronics Co. puede anular la autorización del usuario para operar el dispositivo.

Este dispositivo cumple con la Parte 15 de los reglamentos de la FCC. Su funcionamiento está sujeto a las siguientes dos condiciones:

- Este dispositivo no debe causar interferencias perjudiciales, y
- Este dispositivo debe aceptar cualquier interferencia recibida, incluyendo interferencias que puedan causar operación inadecuada.

Solución de problemas

Síntomas**Possibles causas**

Load does not turn on or LEDs do not light up.

- FASS switch on the Dimmer (or Companion Dimmer) is in the Off position.
- Light bulb(s) burned out.
- Breaker is OFF or tripped.
- Load not properly installed.
- Wiring error. Call Lutron Technical Support Center.

Light does not respond to Radio Frequency Wireless Controller or Sensor.

- The Dimmer failed to learn Wireless Controller or Sensor; see *Set-Up*.
- The Dimmer has already received and responded to a command, or is already at the Light Setting the Wireless Controller or Sensor is requesting.
- The Wireless Controller or Sensor is outside the operating range.
- The Wireless Controller or Sensor batteries are low.
- The Wireless Controller or Sensor batteries are installed incorrectly.

Limited Warranty (Valid only in U.S.A., Canada, Puerto Rico, and the Caribbean.)

Lutron will, at its option, repair or replace any unit that is defective in materials or manufacture within one year after purchase. For warranty service, return unit to place of purchase or mail to Lutron at 7200 Suter Rd., Coopersburg, PA 18036-1299, postage pre-paid.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, AND THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE HEREBY DISCLAIMED. THIS WARRANTY DOES NOT COVER THE COST OF INSTALLATION, REMOVAL OR REINSTALLATION, OR DAMAGE RESULTING FROM MISUSE, ABUSE, OR DAMAGE FROM IMPROPER WIRING OR INSTALLATION. THIS WARRANTY DOES NOT COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES. LUTRON'S LIABILITY ON ANY CLAIM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, DELIVERY, OR USE OF THE UNIT SHALL NEVER EXCEED THE PURCHASE PRICE OF THE UNIT.

This product is covered under one of the following U.S. patents: 5,249,919; 5,359,940; 5,637,930; 5,798,581; 6,169,377; 6,380,696; 7,362,285; 7,365,282; 7,408,527; 7,542,216 and the corresponding foreign patents. U.S. and foreign patents pending. Lutron, Claro, Sunburst, Maestro, Maestro Wireless, The Sunburst Logo and Satin Colors are registered trademarks and FASS is a trademark of Lutron Electronics Co., Inc. NEC is a registered trademark of National Fire Protection Association, Quincy, Massachusetts. © 2009 Lutron Electronics Co., Inc.

When in set-up mode the LEDs flash when trying to set up with the wireless controller or sensor. To remove a previously set-up wireless controller or sensor, tap the wireless controller or sensor's On button three times, on the third tap hold for 3 seconds and then tap 3 more times. This will remove the wireless controller from all dimmers or switches it was previously setup with.

- The maximum number of Wireless Controllers or Sensors have been set up to the Dimmer (you cannot add any more Wireless Controllers or Sensors).
- To remove a previously set-up wireless controller or sensor, tap the wireless controller or sensor's On button three times, on the third tap hold for 3 seconds and then tap 3 more times. This will remove the wireless controller from all dimmers or switches it was previously setup with.

Atenuador para lámparas halógenas / incandescentes, con receptor de radiofrecuencia

MRF2-600M 120 V~ 60 Hz 600 W (Unipolar o para posiciones múltiples)


Atenuador para lámparas halógenas / incandescentes de bajo voltaje magnético, con receptor de radiofrecuencia

MRF2-6MLV 120 V~ 60 Hz 600 W halógeno/incandescente 600 VA/450 W BVM (Unipolar o de posiciones múltiples)


MRF2-10D-120 120 V~ 60 Hz 1 000 W halógeno/incandescente 1 000 VA / 800 W BVM (Unipolar o de posiciones múltiples)

Atenuador accesorio


MA-R 120 V~

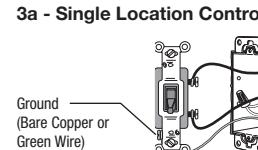Installation**3 Identifying the Circuit Type and Tagging the Wire on the COMMON Terminal of the Switches**

One switch controlling a light fixture:
This switch will be a single-pole. The switch will have insulated wires connected to two screws of the same color plus a green ground screw.

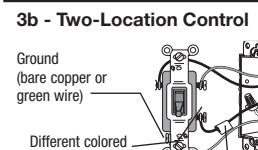

Two switches controlling a light fixture:
Both switches will be 3-way. Each switch will have insulated wires connected to three screws plus a green ground screw. One of these wires is connected to a screw of a different color (not green) or labeled COMMON. Tag this wire on both switches to identify when rewiring.

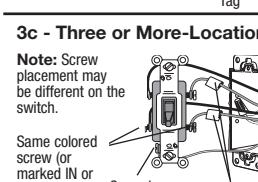

Three or more switches controlling a light fixture:
Two switches will be 3-way and any others will be 4-way. Tag the two 3-way switches as in the Two-Location diagram above. The 4-way switch will have insulated wires connected to four screws plus a green ground screw. Tag the two same-color insulated wires that are connected to opposite colored screws. Follow this procedure for each 4-way switch.

4 Disconnecting the Switch Wires

Important Note: The wall switch may have two wires attached to the same screw (see illustrations below for examples). Tape these two wires together before disconnecting. When rewiring, connect wires to the Dimmer the same way they were connected to the switch.



One wire in the backwired hole




One continuous wire to the screw.



Push-in Terminals: Insert screwdriver. Pull wire out.



Screw Terminals: Turn screw to loosen.




Looped Wire: Turn screw to loosen.

5 Wiring


When making wire connections, follow the recommended strip lengths and combinations for the supplied wire connector.

Note: All wire connectors provided are suitable for **copper wire only**. For aluminum wire, consult an electrician.

Trim or strip wallbox wires to the length indicated by the strip gauge on the back of the Dimmer.

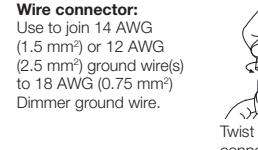


Push-in terminals:
Insert wires fully.
Note: Push-in terminals are for use with 14 AWG (1.5 mm²) or 14 AWG (1.5 mm²) solid copper wire only. DO NOT use stranded or twisted wire.

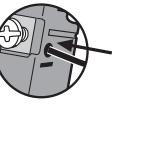


Screw terminals:
Tighten securely.
Note: Screw terminals are for use with 14 AWG (1.5 mm²) or 14 AWG (1.5 mm²) solid copper wire only. DO NOT use stranded or twisted wire.


- For installations involving more than one control in a wallbox, refer to Multigang Installations before beginning.
- Use the screw or push-in terminals when making connections on the Dimmer or Companion Dimmer.
- Wire all controls before mounting.

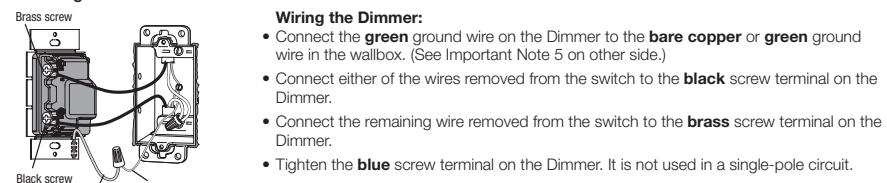5a - Single-Location Control

Single Location Wiring Diagram

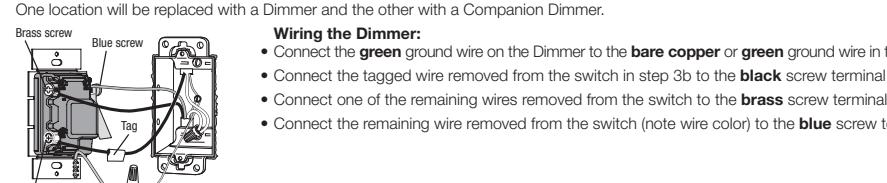5b - Two-Location Control

Two-Location Wiring Diagram

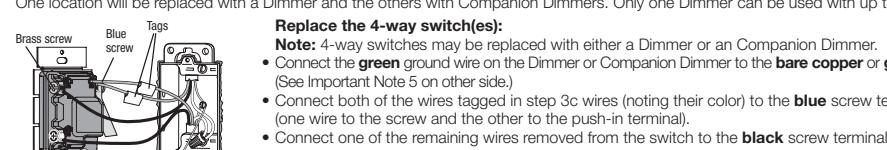5c - Three or More-Location Control

Three or More Location Wiring Diagram

6 Mounting Switches to Wallbox

Form wires carefully into the wallbox, mount and align Dimmer (and Companion Dimmers).




Attach Claro or Satin Colors™ Wallplate(s) (sold separately).



Align Dimmer and tighten screws.

7 Turning Power ON

Turn power ON at circuit breaker (or replace fuse).

**Instalación**

Control de una lámpara con un interruptor: Este interruptor será unipolar. El interruptor tendrá cables aislados conectados a dos tornillos del mismo color más un tornillo verde de tierra.



Control de una lámpara con dos interruptores: Ambos interruptores serán de 3 vías. Cada interruptor tendrá cables aislados conectados a tres tornillos más un tornillo de tierra de color verde. Uno de los cables está conectado a un tornillo de distinto color (no verde) o etiquetado como COMÚN. Identifique este cable en ambos interruptores para poder distinguirlo cuando vuelva a cablear.



Control de una lámpara con tres interruptores o más: Los interruptores serán de 3 vías y los demás de 4. Etiquete los dos interruptores de 3 vías tal como se muestra en el diagrama anterior para control desde dos lugares. El interruptor de 4 vías tendrá cables aislados conectados a cuatro tornillos, además de un tornillo de tierra de color verde. Etiquete los dos cables aislados del mismo color que están conectados a tornillos de colores opuestos. Siga este procedimiento para cada interruptor de 4 vías.




Nota Importante: El interruptor de pared puede tener dos cables conectados al mismo tornillo (vea los ejemplos ilustrados a continuación). Una ambos cables con cinta adhesiva antes de desconectarlos. Cuando realice el cableado nuevamente, conecte los cables al atenuador de la misma forma en que estaban conectados al interruptor que se reemplaza.



Un cable en el orificio para cables.

Un cable continuo al tornillo.



Terminales a presión: Introduzca el desatornillador y extraiga el cable.




Terminales de tornillo: Afloje el tornillo.




Cuando se hagan las conexiones de los cables, se deben respetar las recomendaciones para la longitud de los extremos desnudos y demás combinaciones correspondientes al conector de cable provisto. **Nota:** Todos los conectores que se proporcionan son para **cable de cobre sólido**. Para cables de aluminio, consulte a un electricista.

Recorte o pele los cables de la caja de empotrar hasta la medida indicada en el reverso del atenuador.



Conector para cable: Use para un cable 1.5 mm² (14 AWG) o 2.5 mm² (12 AWG) a cable(s) de tierra 0.75 mm² (18 AWG) de cobre sólido.

Terminales a presión: Inserta los cables completamente.



Terminales de tornillo: Afloja firmemente.



Terminales de tornillo: Utiliza firmemente.

- Para instalaciones con más de un control en una caja, consulte la sección "Instalación con varios dispositivos acoplados" antes de comenzar.
- Use los bornes de tornillo o de presión cuando haga conexiones en el atenuador o el atenuador accesorio.
- Complete el cableado de todos los controles antes del montaje.



Cableado del atenuador: • Conecte el cable de tierra verde del atenuador al cable de **cobre sin aislamiento** o al cable a **tierra verde** de la caja de empotrar. (Ver Nota Importante 5 del otro lado.)


• Conecte uno de los cables retirados del interruptor al terminal de tornillo **negro** en el atenuador.

• Conecte el otro cable extraído del interruptor al borne de tornillo **latón** en el atenuador.

• Ajuste el terminal de tornillo **azul** en el atenuador. No se usa en un circuito unipolar.



Diagrama de cableado de una sola posición



Cableado del atenuador: Una posición se reemplazará con un atenuador y la otra con un atenuador accesorio.

Cableado del atenuador: • Conecte el cable de tierra verde del atenuador al cable de **cobre sin aislamiento** o al cable a **tierra verde** de la caja de empotrar.

• Conecte uno de los cables retirados del interruptor al terminal de tornillo **negro** del atenuador.

• Conecte el cable restante removido del interruptor (nota el color del cable) al terminal de tornillo **azul** en el atenuador.



Cableado del atenuador accesorio (MA-R): • Conecte el cable de tierra verde del atenuador accesorio al cable de tierra de **cobre desnudo** o **color verde** de la caja de empotrar (Vea la Nota Importante 5 en el reverso).

• Conecte el cable etiquetado en el paso 3b al borne de tornillo **negro** del atenuador.

• Conecte el cable del mismo color que el conectado al borne de tornillo **azul** en el atenuador (según anotado anteriormente) al borne de tornillo **azul** en el atenuador accesorio.

• Conecte el cable restante extraído del interruptor al borne de tornillo **latón** en el atenuador accesorio.





Diagrama de cableado de dos posiciones



Nota: Los interruptores de 4 vías pueden ser reemplazados con un atenuador o un atenuador accesorio. Se usará sólo un atenuador con un máximo de nueve atenuadores accesorios.

Reemplazar los interruptores de 4 vías: Nota: Los interruptores de 4 vías pueden ser reemplazados con un atenuador o un atenuador accesorio.

• Conecte el cable de tierra verde del atenuador o del atenuador accesorio al cable de **cobre desnudo** o cable a **tierra verde** de la caja de empotrar. (Ver Nota Importante 5 del otro lado.)

• Conecte los dos cables etiquetados en el paso 3c (anote los colores), al borne de tornillo **azul** del atenuador o atenuador accesorio (un al borne a presión y el otro al tornillo).

• Conecte uno de los cables restantes removidos del interruptor al borne de tornillo **negro** de tornillo en el atenuador o atenuador accesorio.

• Conecte el cable restante removido del interruptor al terminal de tornillo o de presión de **latón** en el atenuador o en el atenuador accesorio.



Reemplazar los interruptores de 3 vías: • Conecte el cable a **tierra verde** del atenuador o atenuador accesorio al cable de **cobre desnudo** o **color verde** de la caja de empotrar. (Ver Nota Importante 5 del otro lado.)

• Conecte el cable etiquetado en el paso 3b al borne de tornillo **negro** del atenuador o atenuador accesorio.

• Conecte el cable del mismo color conectado al borne de tornillo **azul** en el atenuador o atenuador accesorio que reemplaza a un atenuador de 4 puntos (anote el color del cable). Conecte el cable etiquetado en el paso 3b al borne de tornillo **azul** en el atenuador o atenuador accesorio.

• Conecte el cable restante removido del interruptor al terminal de tornillo o de presión de **latón** en el atenuador o en el atenuador accesorio.



Diagrama de cableado de tres posiciones o más