


FORESTVIEW II CEDAR PLAYHOUSE – P280095

INSTALLATION AND OPERATING INSTRUCTIONS

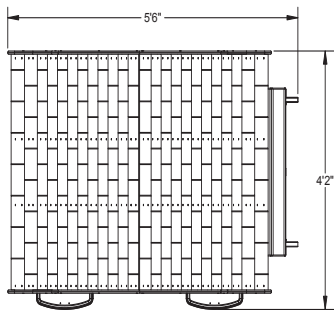

WARNING

To reduce the risk of serious injury or death, you must read and follow these instructions. Keep and refer to these instructions often and give them to any future owner of this play set.

Manufacturer contact information provided below.

CAPACITY - 5 Users Maximum, Ages 3 to 10.

RESIDENTIAL HOME USE ONLY. Not intended for public areas such as schools, churches, nurseries, day cares or parks.



Big Backyard by KidKraft
4630 Olin Road
Dallas, TX 75244, United States

customersupport@kidkraft.com
Online Parts Replacement:
Bigbackyard.com/parts-center-warranty/
Customer Service:
1(800) 933-0771 or (972) 385-0100

KidKraft Netherlands BV
Olympisch Stadion 29
1076DE Amsterdam, The Netherlands

Europe Customer Service: +31 (0)20 305 8620
europecustomerservice@kidkraft.com
EU Online Parts Replacement: parts.kidkraft.eu

Table of Contents

Warnings and Safe Play Instructions	pg. 2
Instructions for Proper Maintenance.	pg. 2
Keys to Assembly Success	pg. 3
About Our Wood – Limited Warranty	pg. 4
Keys to Quick Assembly	pg. 5
Part ID	pg. 6
Step-By-Step Instructions	pg. 13
Installation of I.D./Warning Plaque	Final Step

Warnings and Safe Play Instructions



CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



WARNING

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

STRANGULATION HAZARD

- **NEVER** allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this playhouse or to attach these items to the playhouse.
- **NEVER** allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this playhouse.
- **NEVER** allow children to wear bike or sport helmets when using this playhouse.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the playhouse tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the playhouse until the assembly is complete.



WARNING – Safe Play Instructions

- | | |
|--|--|
| <ul style="list-style-type: none"> ✓ Dress children with well fitting and full foot enclosing footwear. ✓ Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing. | <ul style="list-style-type: none"> ✗ Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs. ✗ Do not permit climbing on equipment when it is wet. ✗ Do not permit rough play or use of equipment in a manner for which it was not intended. Standing or climbing on or jumping from the roof. |
|--|--|


Instructions for Proper Maintenance

Your Solowave Design Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Playhouse, it is important that you, the owner, properly maintain it.

Check the following at the beginning of the play season:

HARDWARE:

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies **DO NOT OVER-TIGHTEN** as to cause crushing and splintering of wood.
- ✓ Check for sharp edges or protruding screw threads, add washers if required.

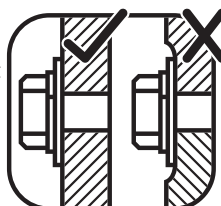

WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.

Check twice a month during play season:

HARDWARE:

- | | |
|--|---|
| <ul style="list-style-type: none"> ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. DO NOT OVER-TIGHTEN. This will cause splintering of wood. | <ul style="list-style-type: none"> ✓ Check for sharp edges or protruding screw threads. Add washers if required. |
|--|---|

If you dispose of your playhouse: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

Keys to Assembly Success

Tools Required

<ul style="list-style-type: none"> • Carpenters Level • Carpenters Square • Standard or Cordless Drill 	<ul style="list-style-type: none"> • Tape Measure • Ratchet with extension (7/16" sockets) 	<ul style="list-style-type: none"> • Claw Hammer • Pencil 	<ul style="list-style-type: none"> • Safety Glasses • Adult Helpers
---	--	---	---

Part Identification Key









On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.

2X	012	Post 2 x 4 x 83"
Quantity	Key Number	Part Description, Part Size

Key Number: The first two digits represent the step number. The third digit represents the piece. Note that if the part is used in multiple steps then the number only reflects the first step it is used in.


Symbols

Throughout these instructions symbols are provided as important reminders for proper and safe assembly.
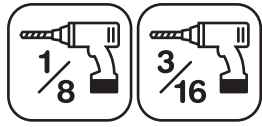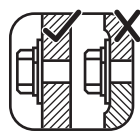
<p>This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.</p> 		<p>Check that set or assembly is properly level before proceeding.</p> <p>Use Level</p> 
<p>Use Help</p> 	<p>Use Help</p> 	<p>Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!</p>
<p>Measure Distance</p> 	<p>Check that assembly is square before tightening bolts.</p>	<p>Square Assembly</p> 
<p>Use a measuring tape to assure proper location.</p>		<p>Pre-drill 1/8" & 3/16" Bit</p>  <p>Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.</p> <p>Tighten Bolts</p>  <p>This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.</p>

CAUTION – Protrusion Hazard

Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.

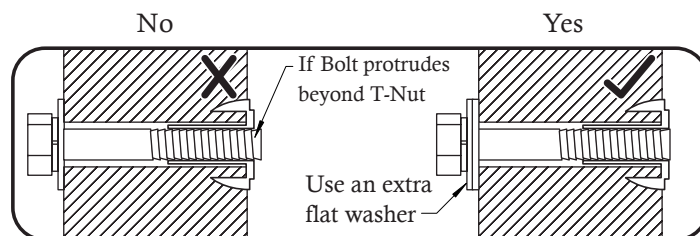


Proper Hardware Assembly

Lag screws require drilling pilot holes to avoid splitting wood. Only a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.

For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" is slightly larger than 1/4".

Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.

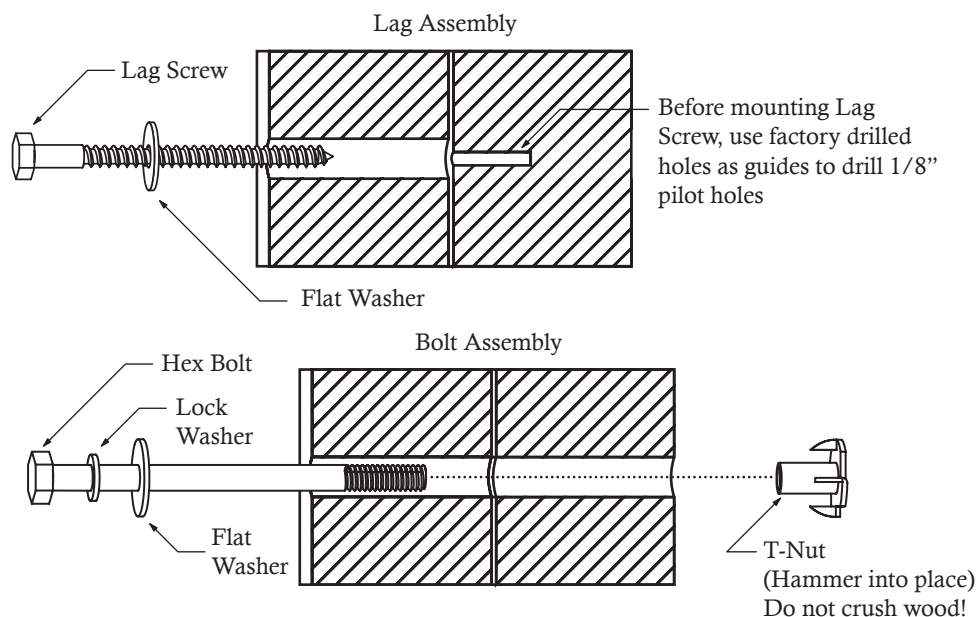

About Our Wood

Big Backyard Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.
2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, applying a water repellent or stain on a yearly basis is important maintenance. (see your local stain and paint supplier for a recommended product)

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.

5 Year Limited Warranty

Big Backyard by KidKraft warrants that this product is free from defect in materials and workmanship for a period of one year from the original date of purchase. In addition, lumber is warranted for 5 years against structural failure due to rot and insect damage. All other parts, such as hardware, swings, rides, accessories, and slides carry a one-year warranty only.

This warranty applies to the original owner and registrant and is non-transferable.

Regular maintenance is required to assure the integrity of your Play System. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty. This warranty does not cover any inspection cost.

This Limited Warranty does not cover:

- Labour for replacement of any defective item(s);
- Incidental or consequential damages;
- Cosmetic defects which do not affect performance or integrity;
- Vandalism; improper use or installation; acts of nature;
- Minor twisting, warping, checking, or any other natural occurring properties of wood that do not affect performance or integrity.

Big Backyard by KidKraft products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Big Backyard by KidKraft cannot assume any responsibility for modified products. Furthermore, modification voids any and all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a Big Backyard by KidKraft Play System be used in public settings such as schools, churches, playgrounds, parks, day cares and the like. Such use may lead to product failure and potential injury. Any and all public use will void this warranty.

Big Backyard by KidKraft disclaims all other representations and warranties of any kind, express or implied.

This Warranty gives you specific legal rights. You may have other rights as well which vary from state to state or province to province. This warranty excludes all consequential damages, however, some states do not allow the limitation or exclusion of consequential damages, and therefore this limitation may not apply to you.

Battery Instruction and Warranty

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.


Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Please retain the information on this pack for future reference.

- Batteries should always be installed and changed under adult supervision.
- Non-Rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy and disposed of properly.
- The supply terminals are not to be short circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Be sure to insert new batteries with positive (+) side up.
- Rechargeable batteries are to be removed from the toy before being charged.
- EU Regulations require exhausted batteries to be separately collected so that they can be treated using the best available recovery and recycling techniques. This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space.
- Batteries or battery packs must be recycled or disposed of properly. When the batteries in this product have reached the end of their useful life, they should not be disposed of with other household waste.
- Please do your part by keeping waste batteries out of the municipal waste stream!

Your Key To Quick Assembly

SORTING WOOD PARTS
INTO EACH ASSEMBLY
STEP WILL SAVE TIME!

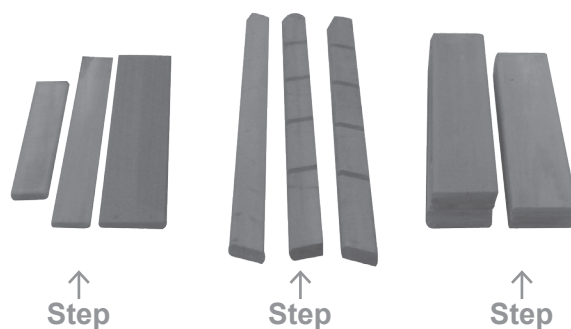

SAVE TIME - TIP #1:

Open box with wood parts and look for the Key Number stamped on the end of the wood part (see chart below). Sort each wood part into the different assembly steps.

1X	131	Roof Side Top	15.9 x 127 x 1225.6 mm
↑	↑	↑	↑
Part Quantity	Key Number	Part Description	Part Size

Step Number (This is Step 13)	131	Order Listed (The order the part is listed in step 13)
----------------------------------	-----	---

Key Number: The first two digits represent the step number. The third digit represents the order in which the part is listed in the step.

Note that if the part is used in multiple steps then the key number only reflects the first step it is used in.

SAVE TIME - TIP #2:

In addition to the key number stamp, you can also identify the wood parts by using the Parts Identification pages in the manual.

HARDWARE:


The majority of each hardware part comes packed in a separate bag so you do not need to sort the hardware. Each assembly step indicates which hardware (bolt, screw, washer etc.) you will require to complete the step.

Part Identification (Reduced Part Size)


4pc. - **[110]** - 12.7 x 57.2 x 1063.6 - Corner Trim - 38046713



4pc. - **[099]** - 15.9 x 115 x 356.7 - Roof Side Bottom - 38055069




4pc. - **[091]** - 15.9 x 127 x 260.4 - Gable End A - 38055613



4pc. - **[094]** - 15.9 x 127 x 304.8 - Gable End D - 38055913



4pc. - **[093]** - 15.9 x 127 x 431.8 - Gable End C - 38055813



4pc. - **[092]** - 15.9 x 127 x 558.8 - Gable End B - 38055713




1pc. - **[071]** - 15.9 x 34.9 x 1060.4 - Counter Top - 38046013



4pc. - **[042]** - 15.9 x 38.1 x 654.1 - Soffit Front Back - 38056213




2pc. - **[072]** - 15.9 x 50.8 x 171.5 - Counter Side - 38045513




4pc. - **[098]** - 15.9 x 50.8 x 723.9 - Roof Side Top - 38055169




2pc. - **[041]** - 15.9 x 50.8 x 1060.5 - Soffit Side - 38055513




2pc. - **[097]** - 15.9 x 69.6 x 254 - Shutter Top - 38055469



1pc. - **[032]** - 15.9 x 69.9 x 1060.4 - Counter Front - 38045913



4pc. - **[096]** - 15.9 x 76.2 x 406.4 - Shutter Side - 38055269




1pc. - **[031]** - 15.9 x 82.6 x 1060.4 - Counter Back - 38045813



Part Identification (Reduced Part Size)


4pc. - **[095]** - 15.9 x 85.7 x 177.8 - Gable End E - 38056013



2pc. - **[073]** - 15.9 x 85.7 x 469.9 - Counter Mid Top - 38045113




1pc. - **[061]** - 23.8 x 63.5 x 127 - Door Latch Block - 38031913




1pc. - **[051]** - 23.8 x 108 x 616 - Cafe Table Top - 38055313




3pc. - **[043]** - 25.4 x 25.4 x 482.6 - Panel Tie - 38045313




5pc. - **[033]** - 25.4 x 50.8 x 209.6 - Counter Joist - 38045713




1pc. - **[035]** - 25.4 x 50.8 x 318.9 - Counter Brace Centre - 38045613




2pc. - **[034]** - 25.4 x 50.8 x 318.9 - Counter Brace - 38046113



4pc. - **[024]** - 31.8 x 38.1 x 866.8 - Roof Side - 38056113



1pc. - **[040]** - 108 x 1257.3 x 1066.8 - Panel Assembly - 378058813




2pc. - **[023]** - 43.7 x 172.5 x 1136.7 - Roof Panel Side - 378057013




Part Identification (Reduced Part Size)


1pc. - **021** - 31.8 x 911.2 x 1136.7 - Roof Panel - 378056313

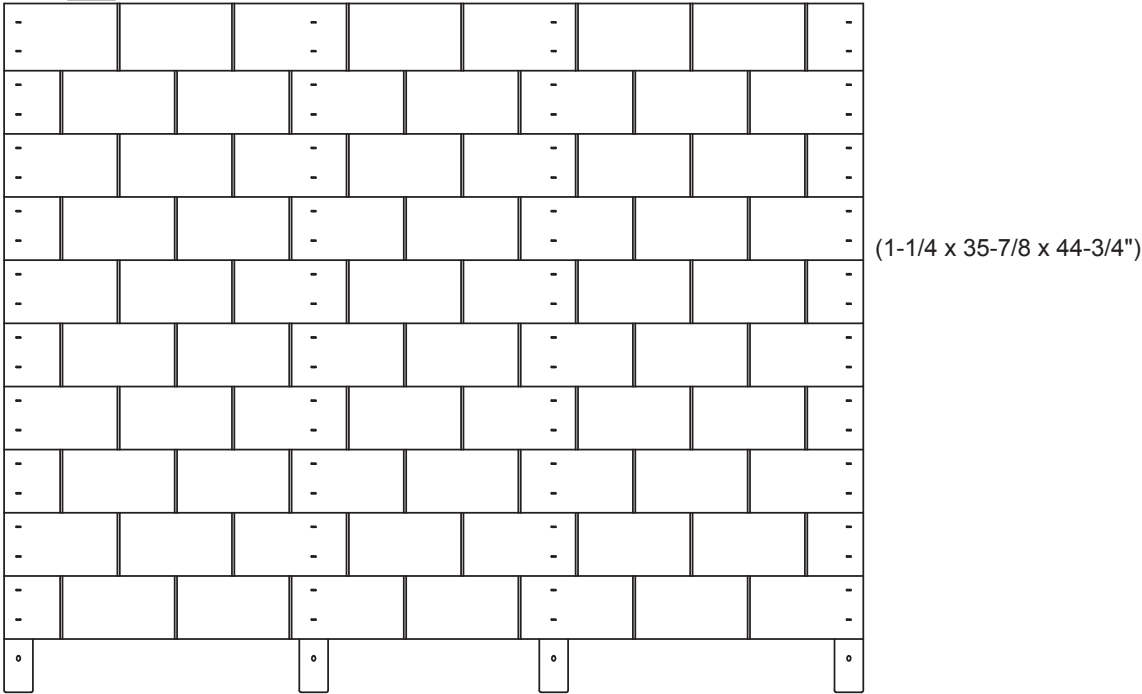

1pc. - **022** - 31.8 x 917.6 x 1136.7 - Roof Panel Wide - 378056813

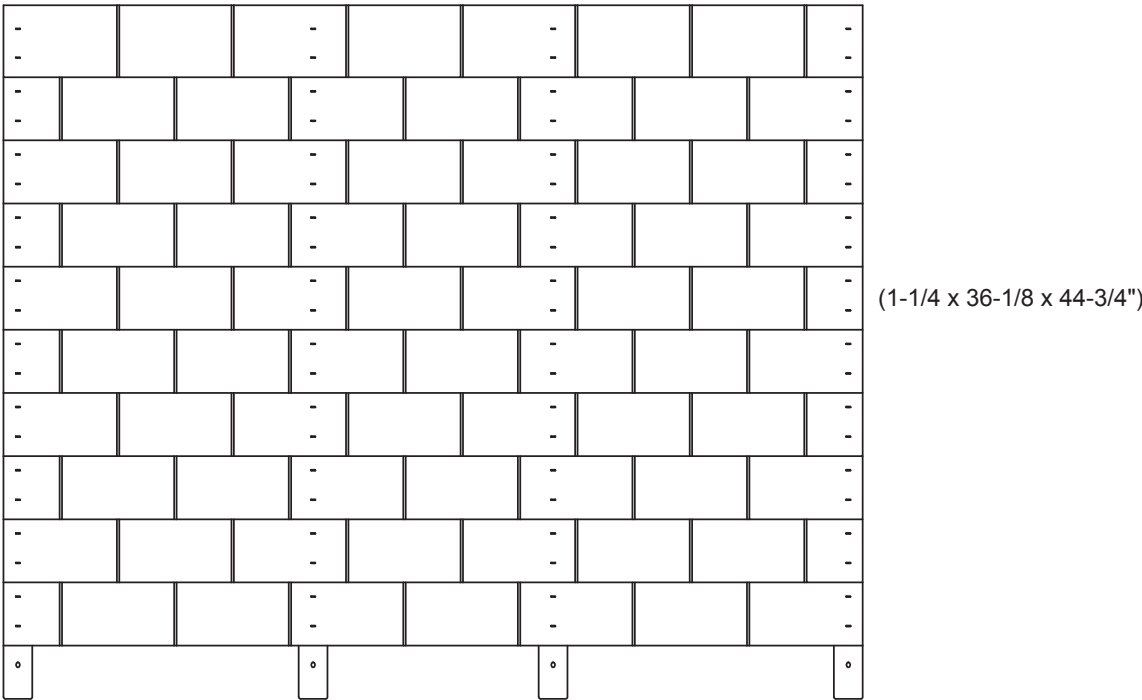

1pc. - **140** - 61.1 x 165.1 x 809.6 - Folding Bench - 378053913




Hardware Identification (Actual Size)


4pc. **LW1** - 1/4" Lock Washer - (51303200)




4pc. **FW1** - 1/4" Flat Washer - (51103200)

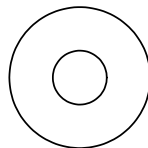

4pc. **TN1** - 1/4" T - Nut -(54503200)

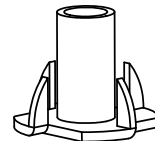

14pc. **S18** - Wood Screw #6 x 1" - (52013910)




80pc. **S13** - Pan Screw #6 x 5/8" - (52413908)



32pc. **S15** - Wood Screw #8 x 1-3/4" - (52043513)




6pc. **S10** - Pan Screw #8 x 1" - (52433510)



110pc. **S2** - Wood Screw #8 x 1-1/2" - (52043512)





71pc. **TS** - Trim Screw #6 x 30mm - (52953911)



15pc. **S3** - Wood Screw #8 x 2-1/2" - (52043522)



4pc. **H1** - Hex Bolt 1/4 x 1-1/2" - (53703212)

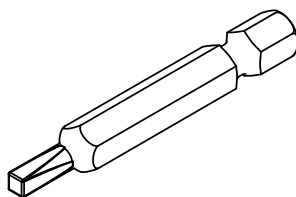

1pc. **D4** - #2 x 2 Robertson Driver Bit - (9200014)


Part Identification (Reduced Part Size)



1x - Playhouse Plaque
(9320371)




1x - Narrow Angle
Bracket (2 Pk)
(3206732)

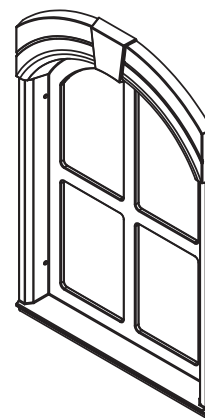

2x - Deep Window (3Pk)
(3323539) White

1x - Deluxe Kitchen Set
(3320969)

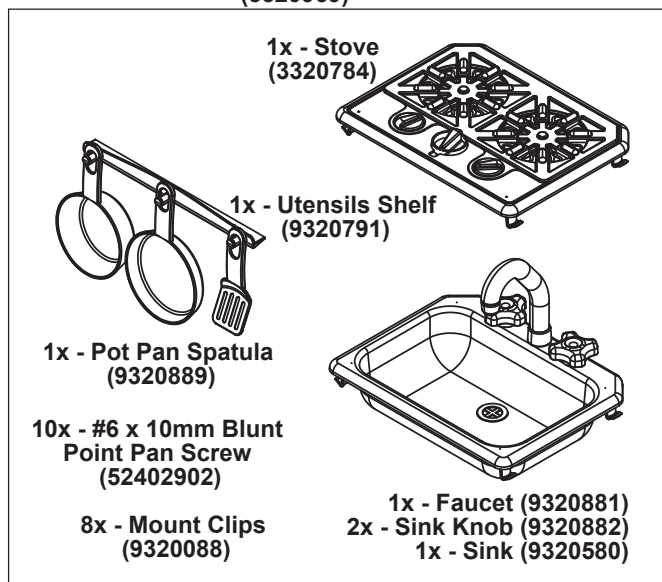

1x - Stove
(3320784)

1x - Utensils Shelf
(9320791)

1x - Pot Pan Spatula
(9320889)


10x - #6 x 10mm Blunt
Point Pan Screw
(52402902)

8x - Mount Clips
(9320088)

1x - Faucet (9320881)
2x - Sink Knob (9320882)
1x - Sink (9320580)




1x - Door Bell 2/Door Trim
(3320546)

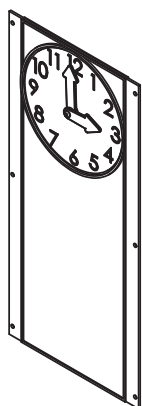


2x - Chalk Clock Sign
(3320704)



1x - Clicker Phone &
Phone Pocket Set
(3320252)

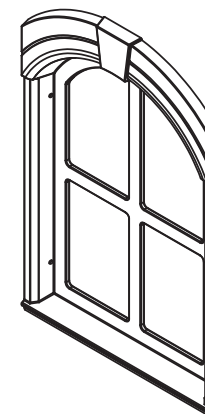


1x - Deep Window (1Pk)
(3320540)

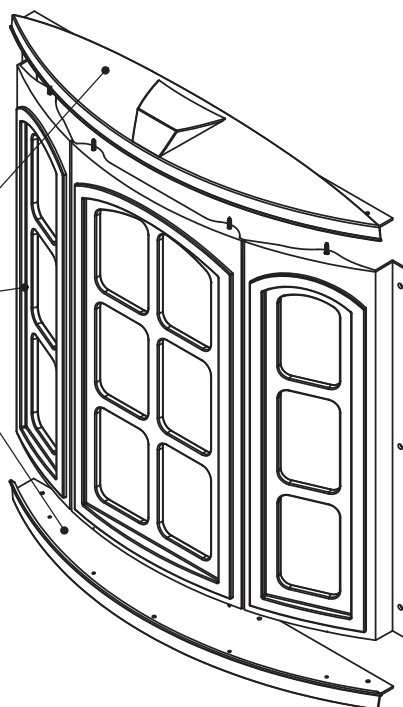


1x - Bay Window Set (1Pk)
(3320543)


1x - Magnetic Catch Kit (3201730)

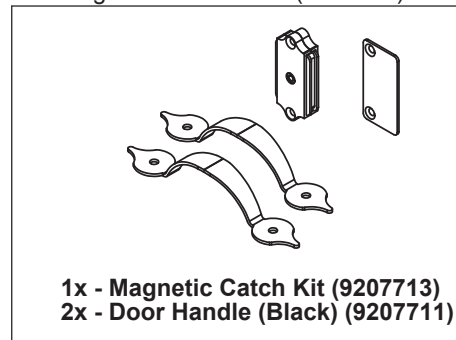





1x - Magnetic Catch Kit (9207713)
2x - Door Handle (Black) (9207711)

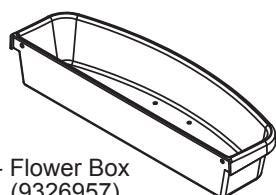


2x - Flower Box
(9326957)

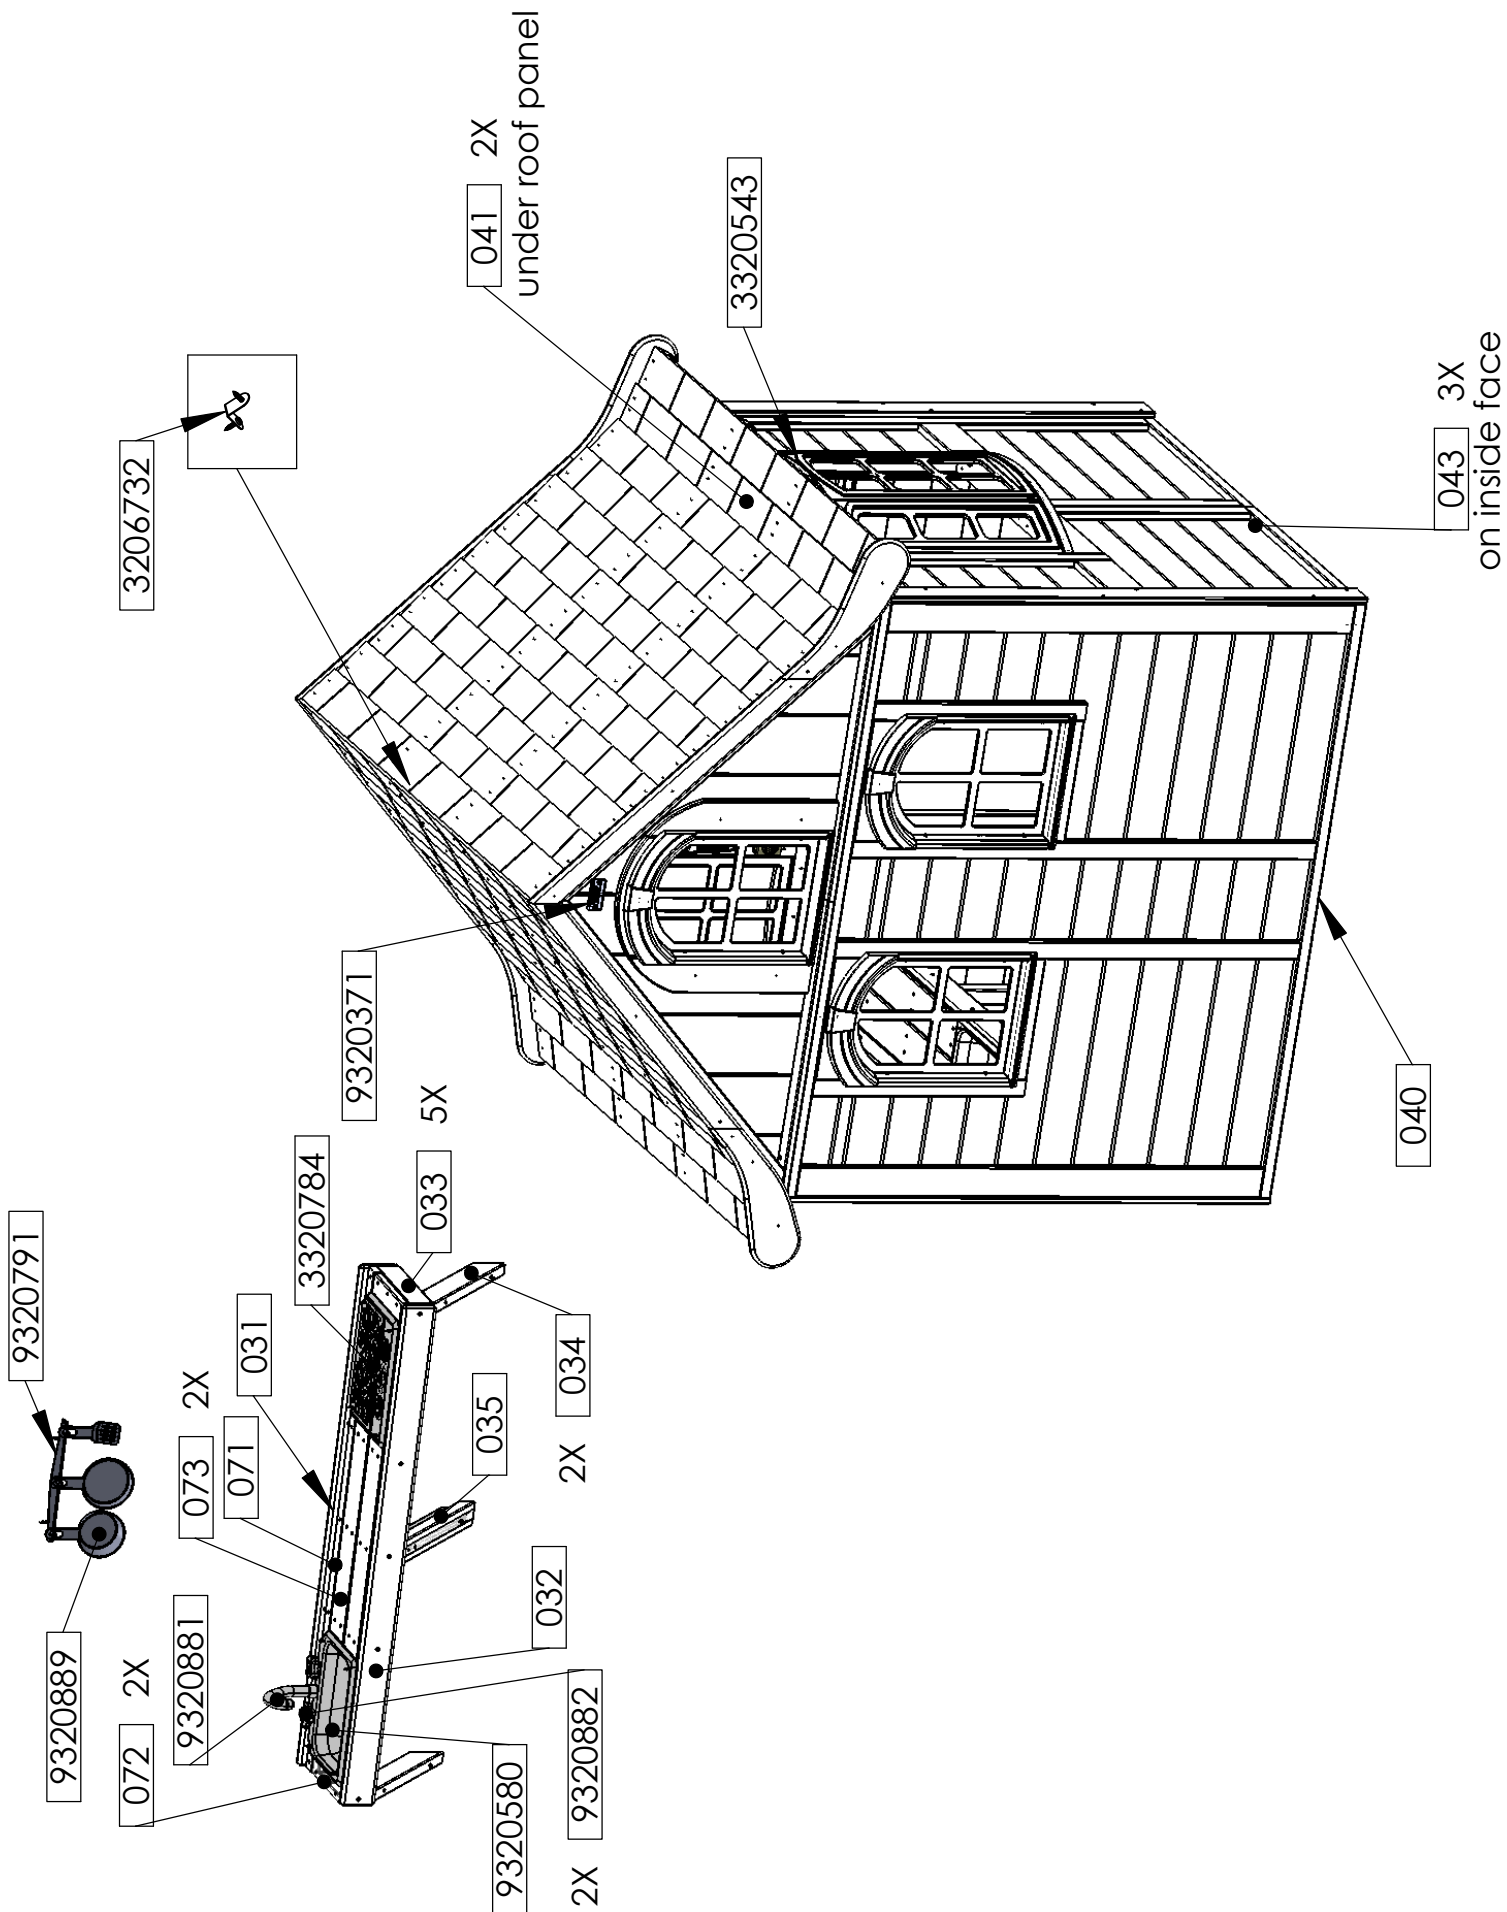

Step 1: Inventory Parts - Read This Before Starting Assembly

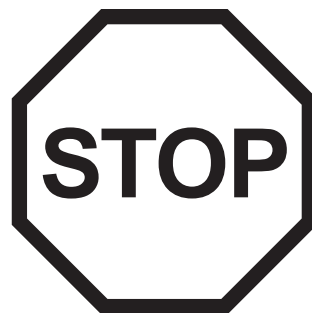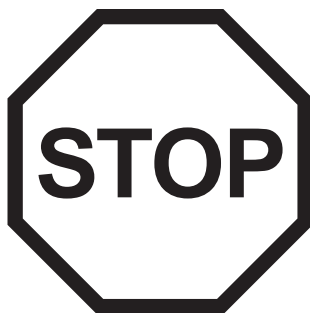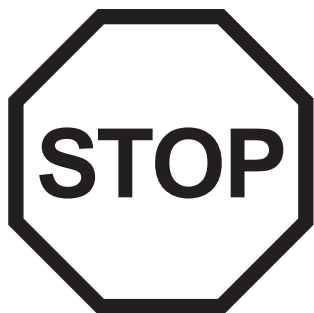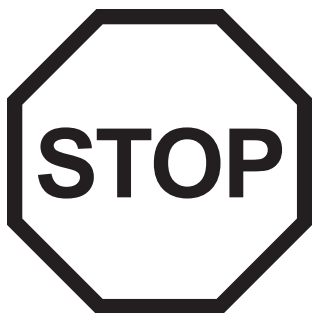

- A. This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.
- The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.

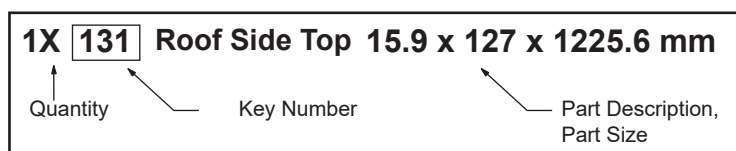

Key Number: The first two digits represent the step number. The third digit represents the piece. Note that if the part is used in multiple steps then the number only reflects the first step it is used in.

- Please refer to Page 3 for proper hardware assembly.
 - Each step indicates which bolts and/or screws you will need for assembly, as well as any flat washers, lock washers, t-nuts or lock nuts.
- B. If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. Call us before going back to the store.
- customersupport@kidkraft.com**
Online Parts Replacement:
Bigbackyard.com/parts-center-warranty/
Customer Service:
1(800) 933-0771 or (972) 385-0100

Europe Customer Service: +31 (0)20 305 8620
europecustomerservice@kidkraft.com
EU Online Parts Replacement: parts.kidkraft.eu
- C. Read the assembly manual completely, paying special attention to ANSI warnings; notes; and safety/maintenance information.
- D. Before you discard your cartons fill out the form below.
- The carton I.D. stamp is located on the end of each carton.
 - Please retain this information for future reference. You will need this information if you contact the Consumer Relations Department.

MODEL NUMBER: P280095

CARTON I.D. STAMP: _ _ _ _ _ 14459 _ (Box 1)

Step 2: Roof Assembly

Part 1

A: Flush to the bottom of (021) Roof Panel attach 1 (023) Roof Panel Side using 4 (S3) #8 x 2-1/2" Wood Screws. Make sure (023) Roof Panel Side is tucked in under the siding overhang. This will help prevent leaks when it rains. (fig. 2.1 and 2.2)

Repeat Step A for (022) Roof Panel Wide.

Fig. 2.1


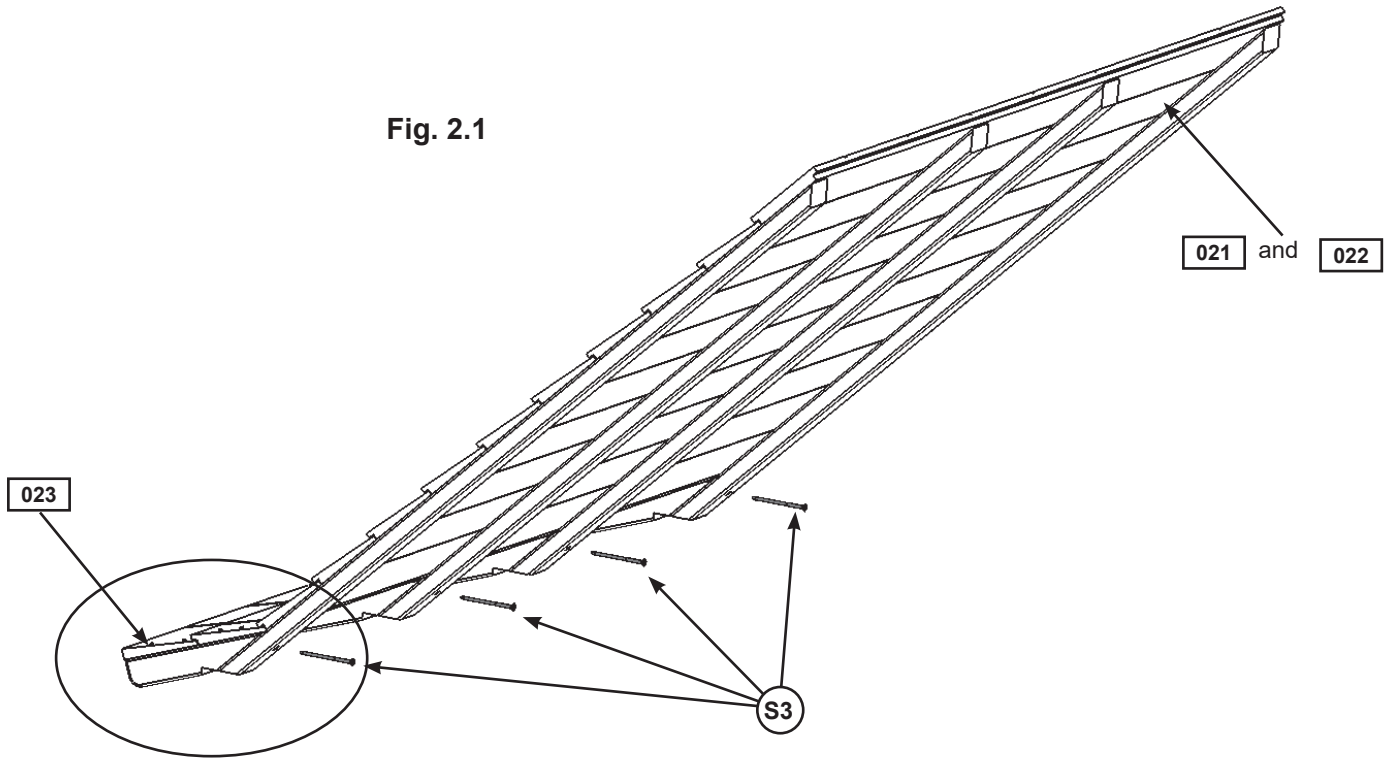


Fig. 2.2

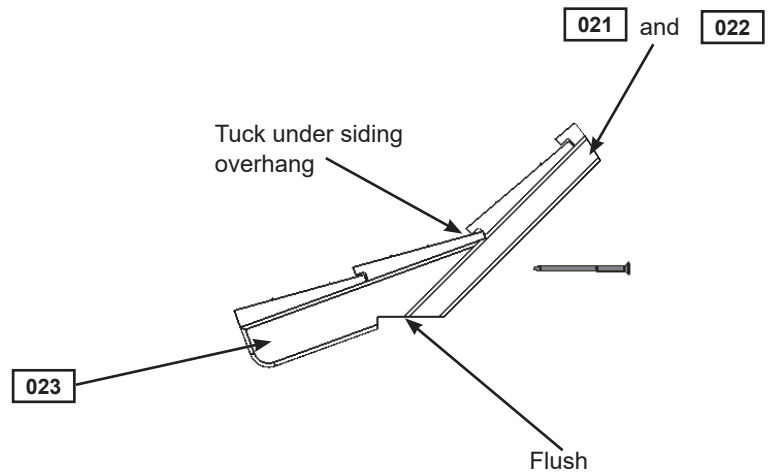

Wood Parts

- 1 x (021) Roof Panel 1-1/4 x 35-7/8 x 44-3/4"
- 1 x (022) Roof Panel Wide 1-1/4 x 36-1/8 x 44-3/4"
- 2 x (023) Roof Panel Side 1-11/16 x 6-3/4 x 44-3/4"

Hardware

- 8 x (S3) #8 x 2-1/2" Wood Screw

Step 2: Roof Assembly Part 2

B: From underneath the Roof Assembly centre 1 Narrow Angle Bracket on each inside joist and attach with 2 (S13) #6 x 5/8" Pan Screws per bracket. (fig. 2.3 and 2.4)

Fig. 2.3
View from Underneath


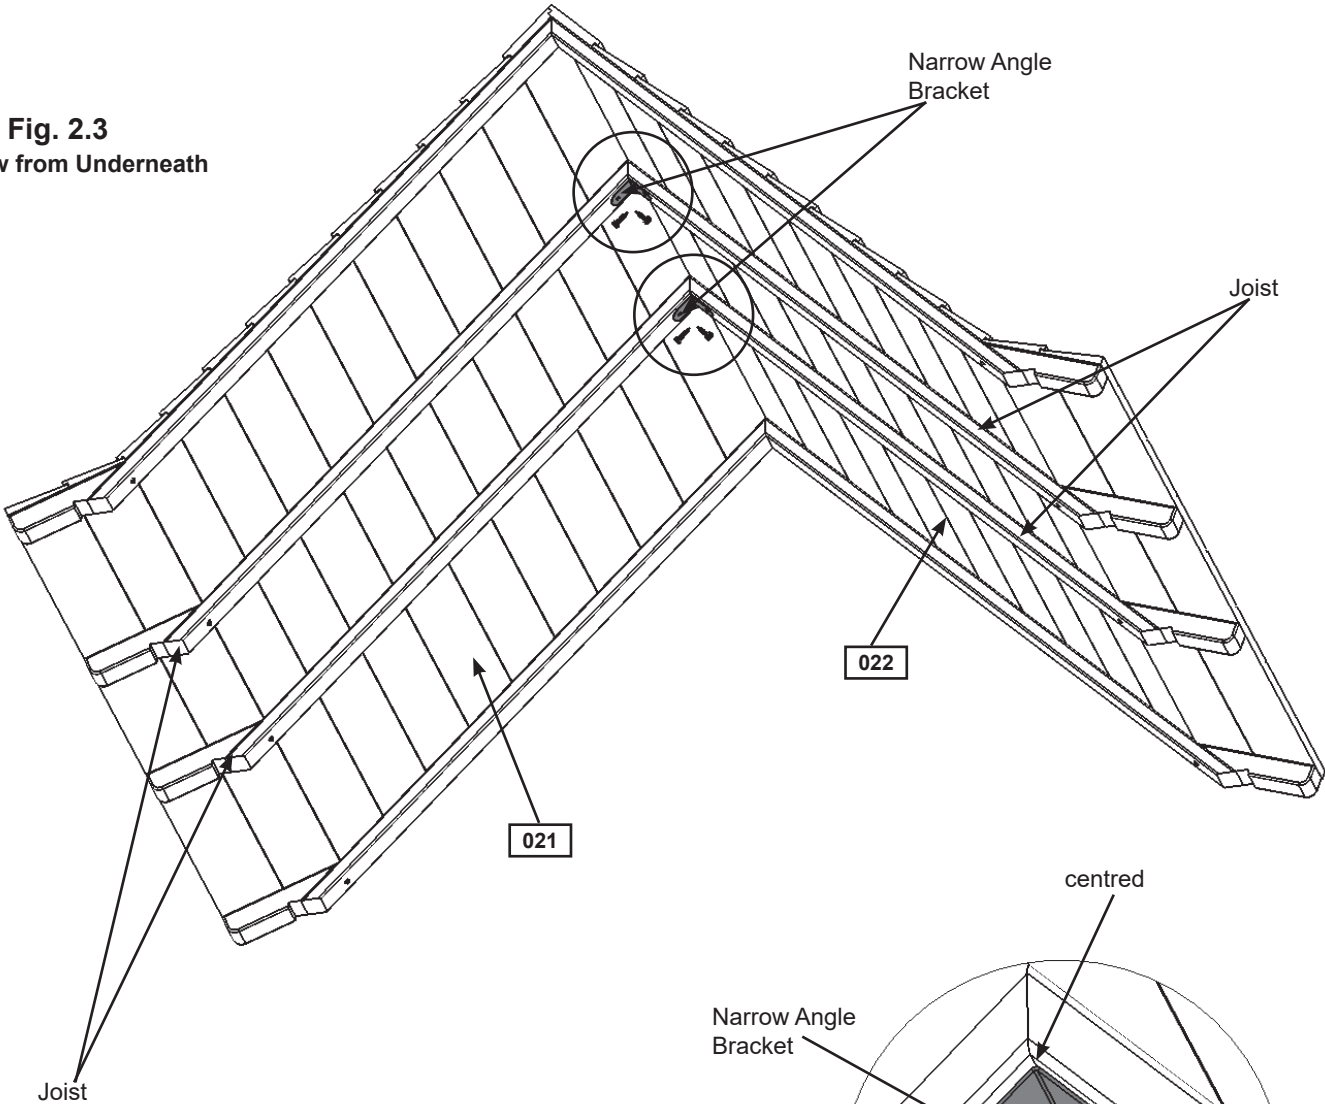


Fig. 2.4

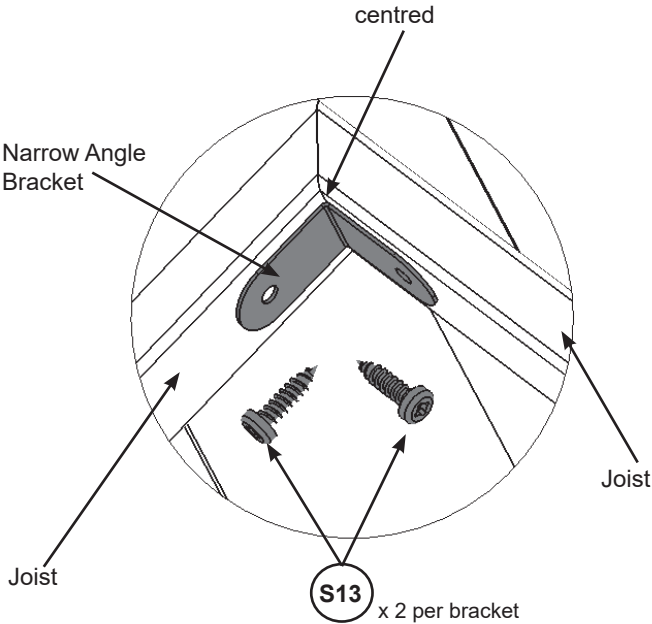

Hardware

4 x **S13** #6 x 5/8" Pan Screw

Other Parts


2 x Narrow Angle Bracket

Step 2: Roof Assembly

Part 3

C: Attach 1 (024) Roof Side to another flush at the peak using 1 (S3) #8 x 2-1/2" Wood Screw. Do this twice so you have 2 Roof Support Assemblies. (fig. 2.5)

Fig. 2.5

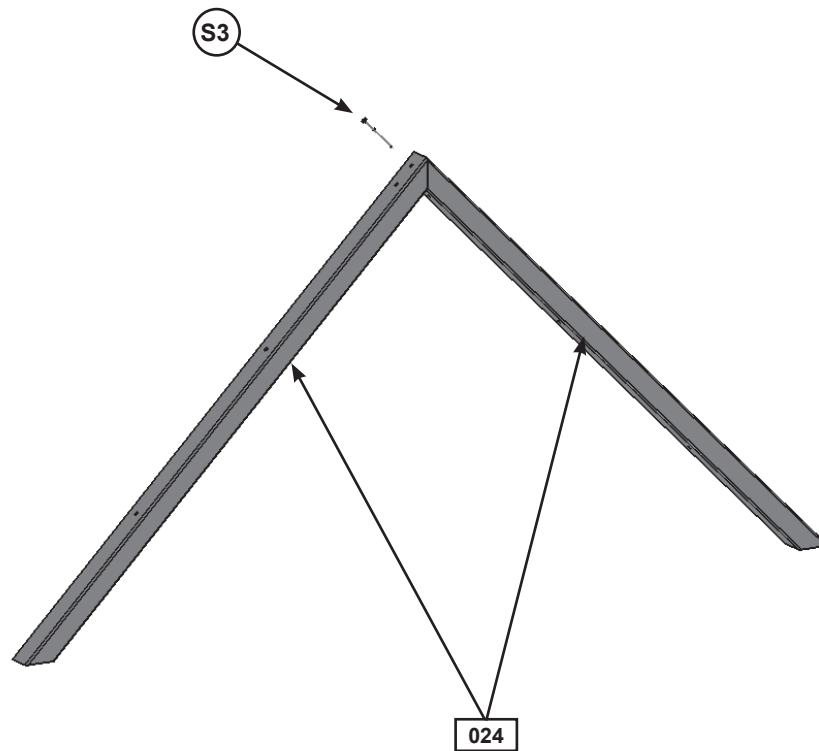

Wood Parts

4 x 024 Roof Side 1-1/4 x 1-1/2 x 34-1/8"

Hardware

2 x S3 #8 x 2-1/2" Wood Screw

Step 2: Roof Assembly

Part 4

D: Place 1 Roof Side Assembly on each end of the Roof Assembly so the peaks fit together and the outside face of each (024) Roof Side is flush to the outside face and bottoms of the joists. (fig. 2.6 and 2.7)

E: Attach each Roof Side Assembly to the Roof Panels with 6 (S15) #8 x 1-3/4" Wood Screws per assembly. (fig. 2.6)


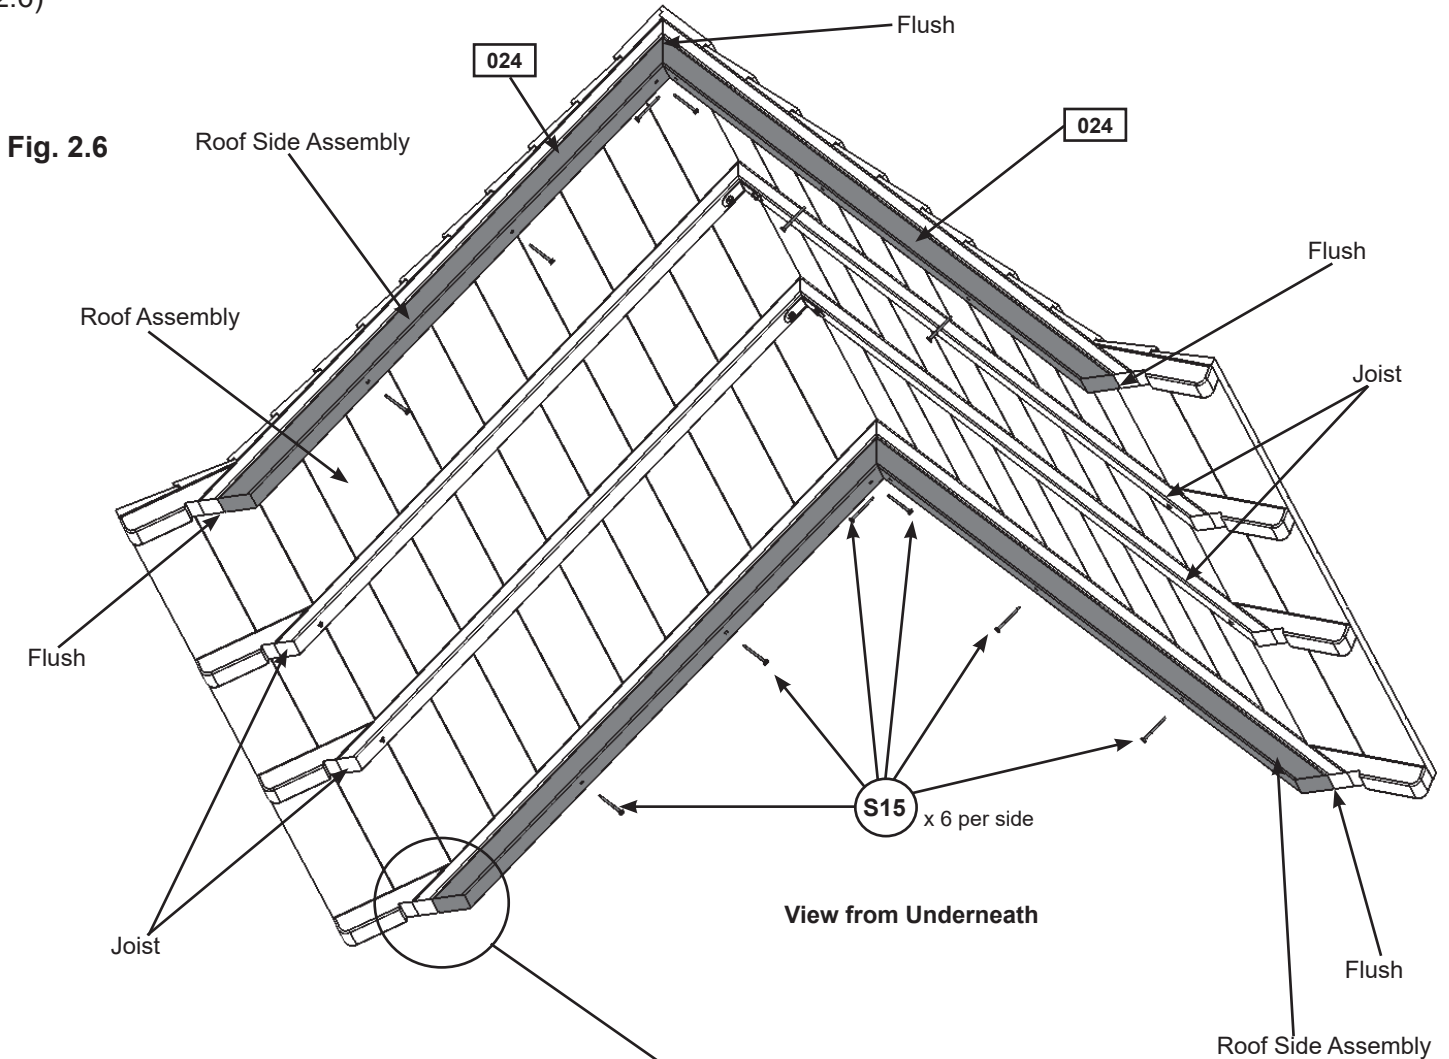


Fig. 2.7

Important: Failure to make sure the bottom of the Joists and (024) Roof Sides are flush will cause assembly issues in later steps.

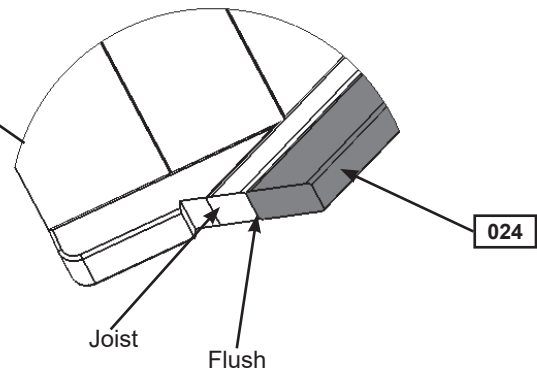

Hardware

12 x (S15) #8 x 1-3/4" Wood Screw

Step 3: Counter Assembly

Part 1



A: Flush to each end and to the bottom of (031) Counter Back attach 1 (033) Counter Joist per end with 1 (S2) #8 x 1-1/2" Wood Screw per joist. Notice the holes at the top of (031) Counter Back. (fig. 3.1 and 3.2)

B: Place the remaining 3 (033) Counter Joists centred over the pilot holes in the middle of (031) Counter Back and flush to the bottom of the board, then attach, in the bottom holes, with 1 (S2) #8 x 1-1/2" Wood Screw per joist. (fig. 3.1 and 3.2)

C: Place (032) Counter Front against (033) Counter Joists so the ends are flush and the centre (033) Counter Joists are centred over the pilot holes. Measure 5/8" down from the top of (032) Counter Front on both ends and attach to the (033) Counter Joists with 5 (S2) #8 X 1-1/2" Wood Screws. (fig. 3.1 and fig. 3.2)


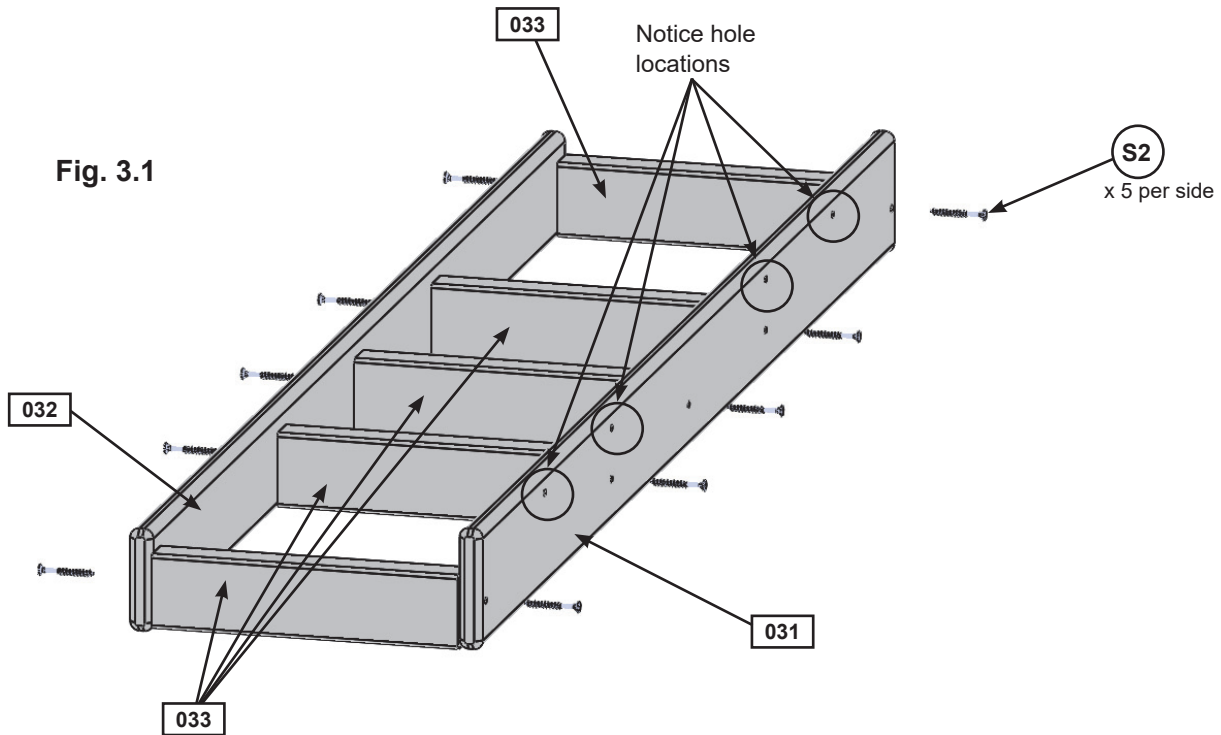


Fig. 3.2

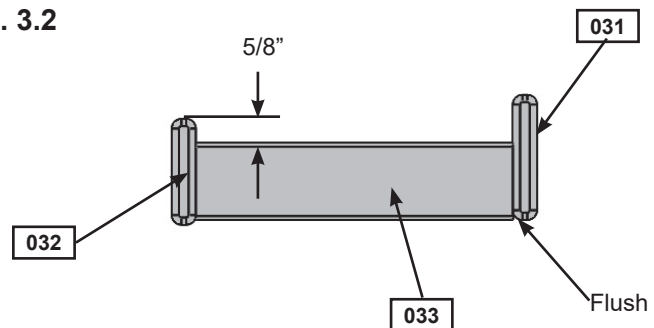

Wood Parts

- 1 x 031 Counter Back 5/8 x 3-1/4 x 41-3/4"
- 1 x 032 Counter Front 5/8 x 2-3/4 x 41-3/4"
- 5 x 033 Counter Joist 1 x 2 x 8-1/4"



Hardware

- 10 x S2 #8 x 1-1/2" Wood Screw

Step 3: Counter Assembly Part 2

D: Place 1 (034) Counter Brace tight to the bottom of each outside (033) Counter Joist, tight to (032) Counter Front and attach using 1 (S3) #8 x 2-1/2" Wood Screw per brace. (fig. 3.3 and 3.4)

E: Place (035) Counter Brace Centre tight to the bottom of the centre (033) Counter Joist, tight to (032) Counter Front and attach using 1 (S3) #8 x 2-1/2" Wood Screw. (fig. 3.3 and 3.4)

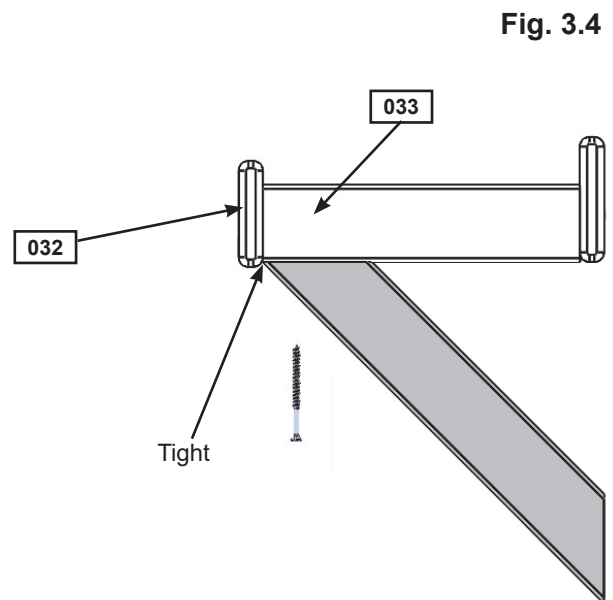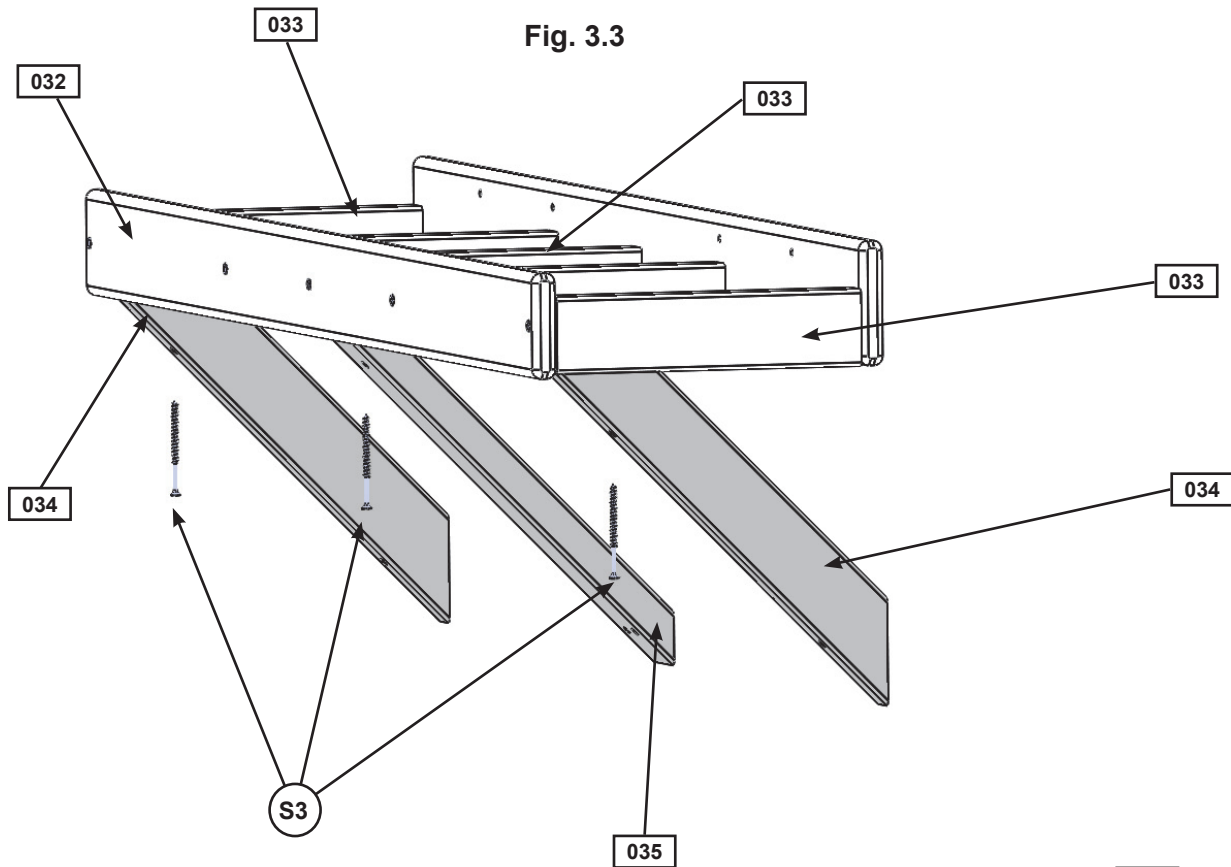

Wood Parts


2 x 034 Counter Brace 1 x 2 x 12-9/16"

1 x 035 Counter Brace Centre 1 x 2 x 12-9/16"

Hardware

3 x S3 #8 x 2-1/2" Wood Screw

Step 4: Frame Assembly Part 1

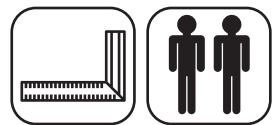

A: Stand (040) Panel Assembly up so window openings are at the top then with a helper at the opposite end open (040) Panel Assembly all the way so corners are at a 90 degree angle. (fig. 4.1 and 4.2)

Fig. 4.1


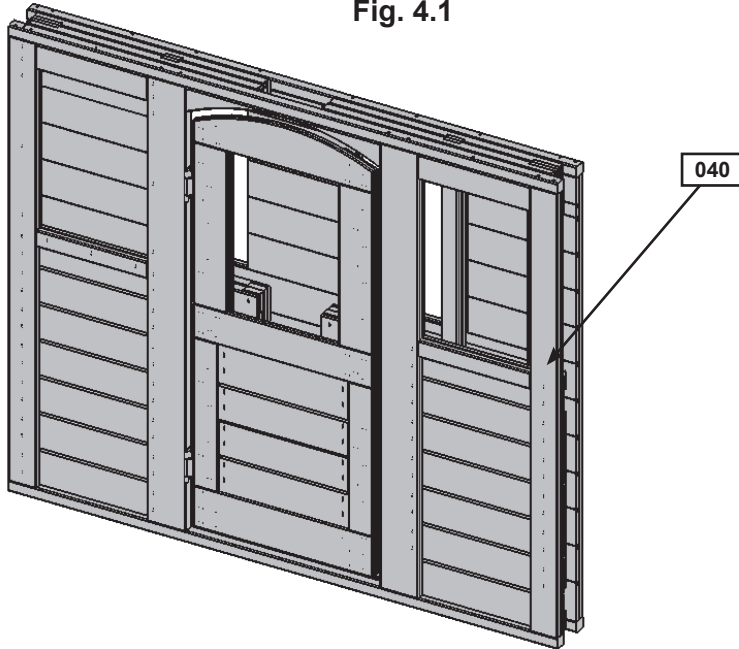


Fig. 4.2

Open frame all the way so all corners are at 90 degrees.

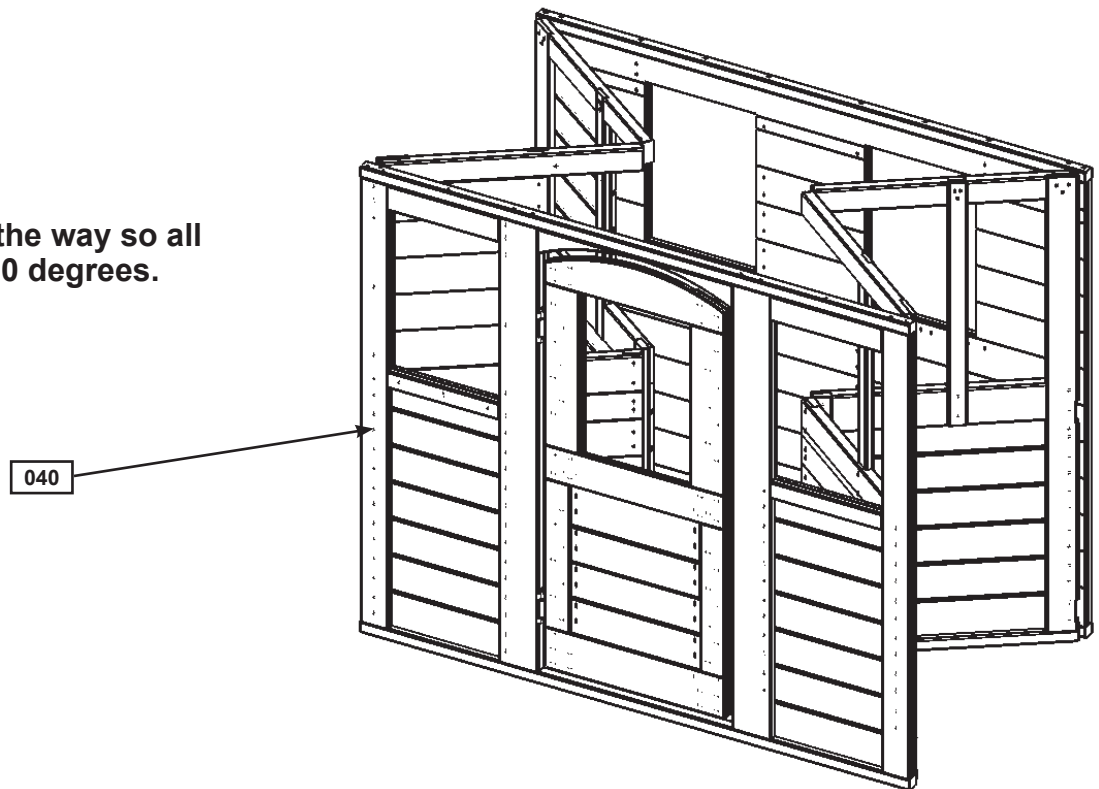

Wood Parts

1 x 040 Panel Assembly 4-1/4 x 49-1/2 x 42"

Step 4: Frame Assembly Part 2




B: Flush to the inside face of the Side Wall and Cafe Wall place 1 (041) Soffit Side centred in each opening and attach with 4 (S2) #8 x 1-1/2" Wood Screws per board. Notice the holes are towards the inside of the frame. (fig. 4.3)

C: On the Door Wall and Back Wall, tight to each (041) Soffit Side and flush to the inside face of each wall attach 2 (042) Soffit Front Backs to each wall with 2 (S2) #8 x 1-1/2" Wood Screws per board. Notice the holes are towards the inside of the frame. (fig. 4.3)

D: Make sure the assembly is square on all four corners.

Fig. 4.3

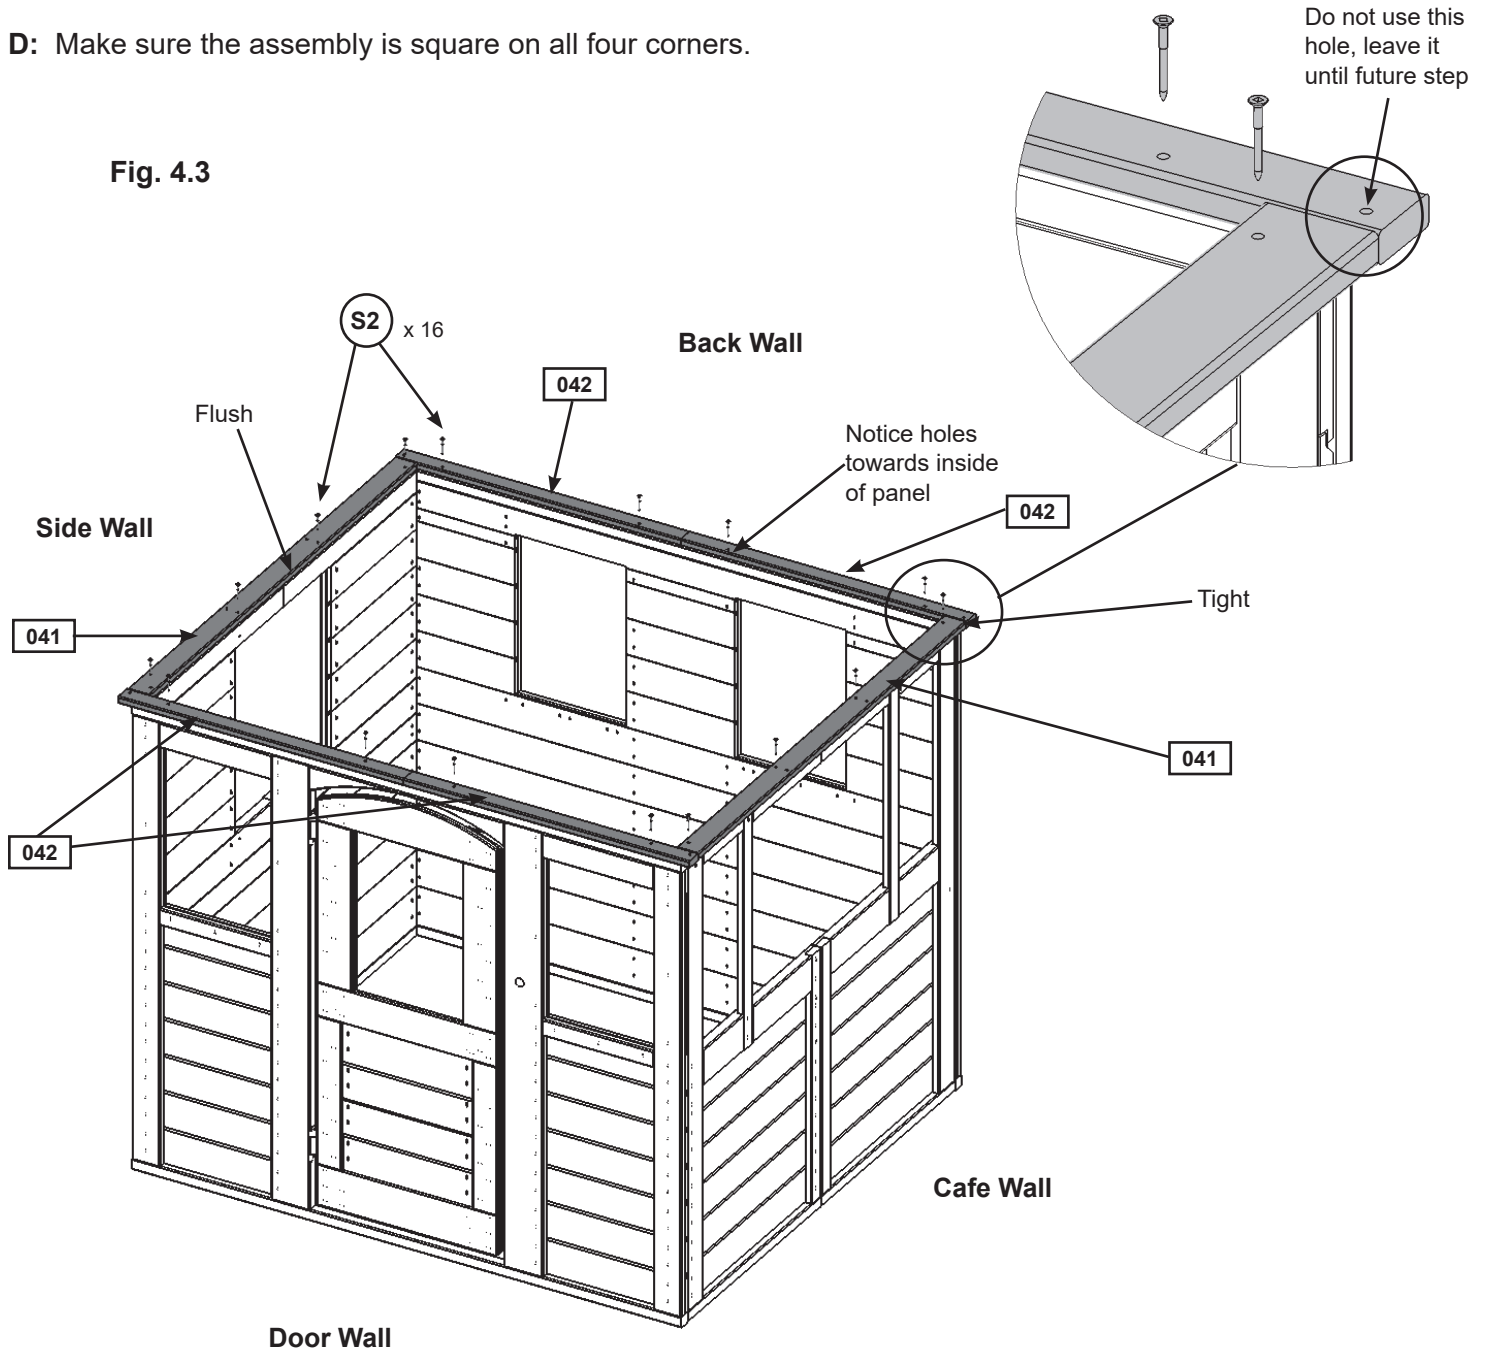

Wood Parts

2 x 041 Soffit Side 5/8 x 2 x 41-3/4"

4 x 042 Soffit Front Back 5/8 x 1-1/2 x 25-3/4"

Hardware

16 x S2 #8 x 1-1/2" Wood Screw

Step 4: Frame Assembly

Part 3

E: Flush to the bottom and centred on the Side Wall and Cafe Wall attach 1 (043) Panel Tie to each wall with 4 (S15) #8 x 1-3/4" Wood Screws per board. (fig. 4.4, 4.5 and 4.6)

Fig. 4.4
View from Above

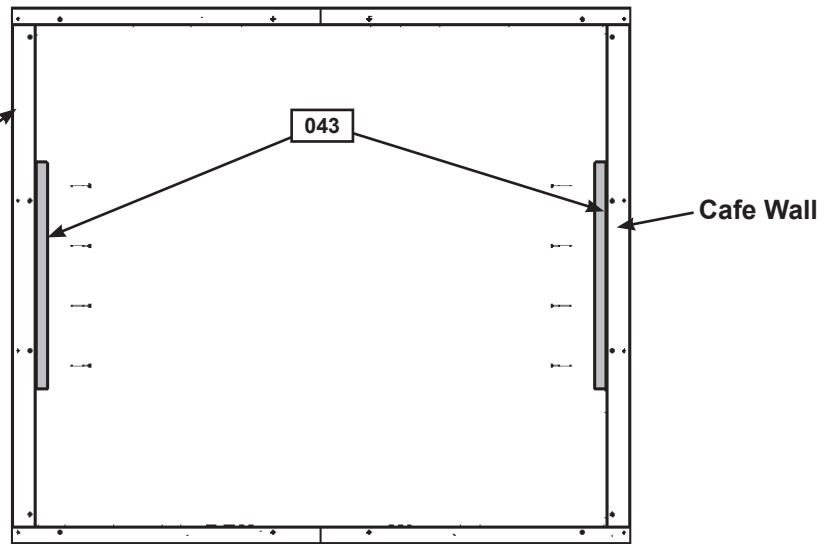


Fig. 4.5
Parts Removed For Clarity


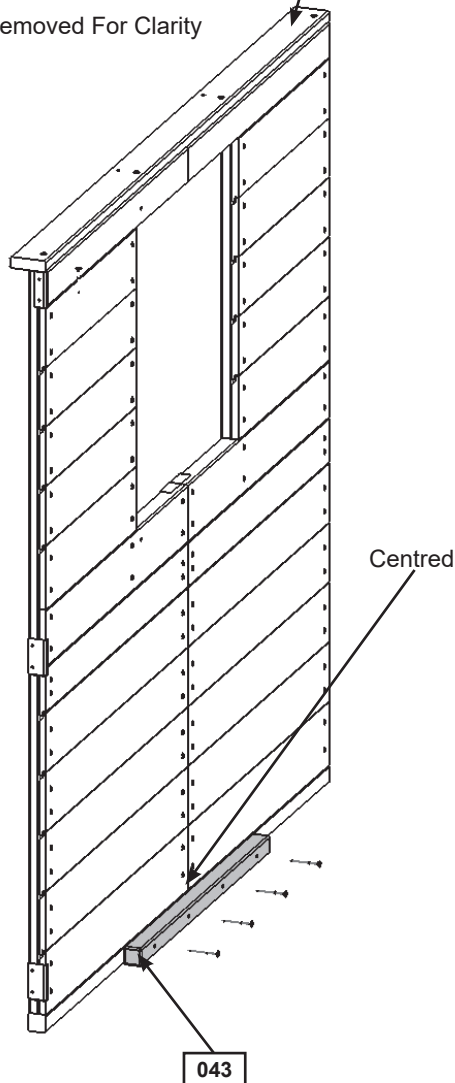


Fig. 4.6

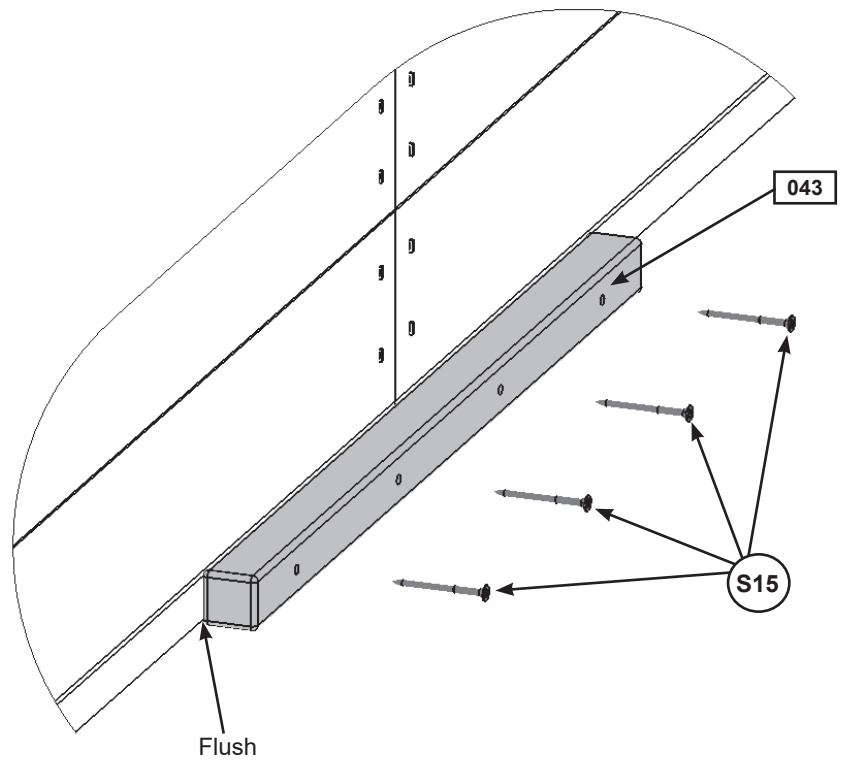

Wood Parts

2 x **043** Panel Tie 1 x 1 x 19"

Hardware

8 x **S15** #8 x 1-3/4" Wood Screw

Step 5: Cafe Wall Assembly

Part 1

A: Place (051) Cafe Table Top in large opening of Cafe Wall so the grooves are tight to the wall and attach with 2 (S15) #8 x 1-3/4" Wood Screws in the outside holes. (fig. 5.1 and 5.2)

B: Centred and tight to the bottom of (051) Cafe Table Top attach (043) Panel Tie to Cafe Wall with 4 (S15) #8 x 1-3/4" Wood Screws. (fig. 5.1 and 5.2)

C: Attach (051) Cafe Table Top to (043) Panel Tie with 2 (S15) #8 x 1-3/4" Wood Screws in the middle holes. (fig. 5.1 and 5.2)

Fig. 5.1


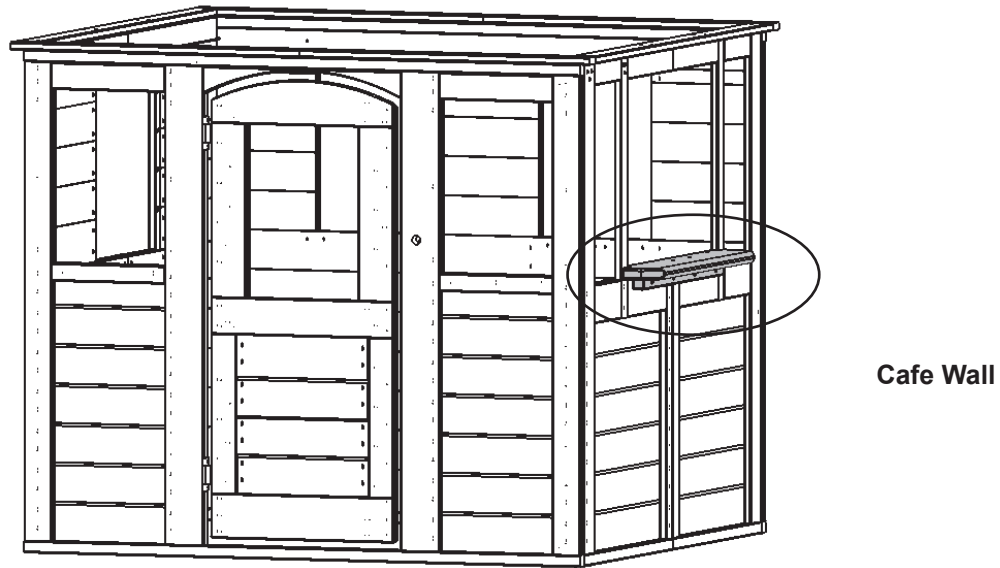


Fig. 5.2

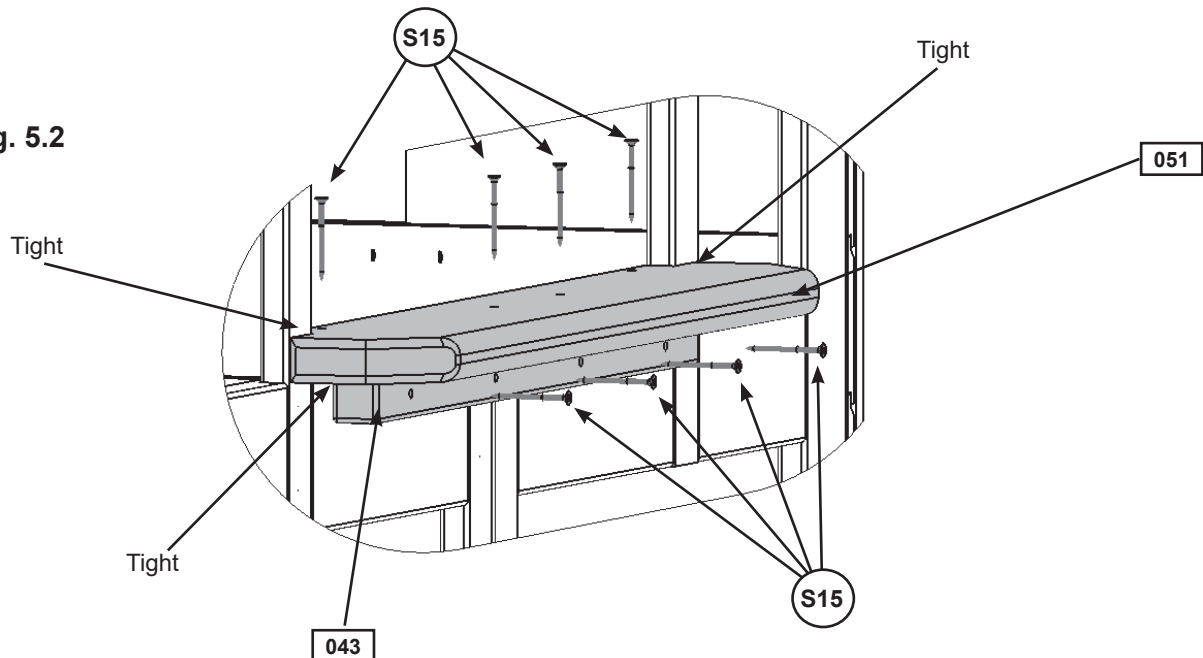

Wood Parts

1 x 051 Cafe Table Top 5/4 x 5 x 24-1/4"

1 x 043 Panel Tie 1 x 1 x 19"

Hardware

8 x S15 #8 x 1-3/4" Wood Screw

Step 5: Cafe Wall Assembly Part 2

D: From inside the assembly, centred in the large opening of the Cafe Wall attach Utensil Shelf with 2 (S13) #6 x 5/8" Pan Screws as shown in fig. 5.3, 5.4 and 5.5.

E: Attach Pot, Pan and Spatula to the Utensil Shelf. (fig. 5.3)

F: From inside the assembly place 1 Clock Chalk Sign in each side opening of the Cafe Wall so the top is tight to the opening and attach with 6 (S13) #6 x 5/8" Pan Screws per sign. Reverse signs so one clock is facing in and the other out. (fig. 5.3, 5.5 and 5.6).

Fig. 5.3
Outside View

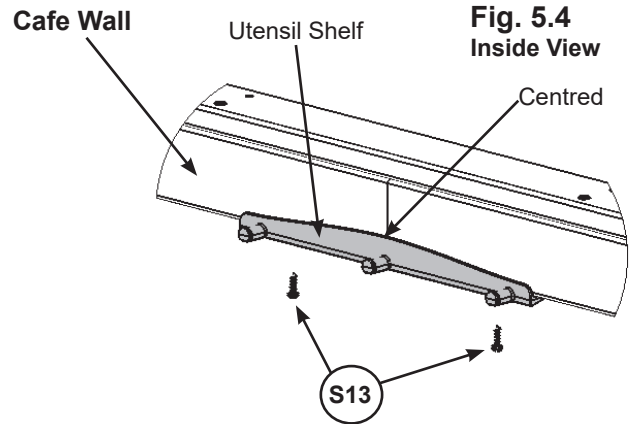
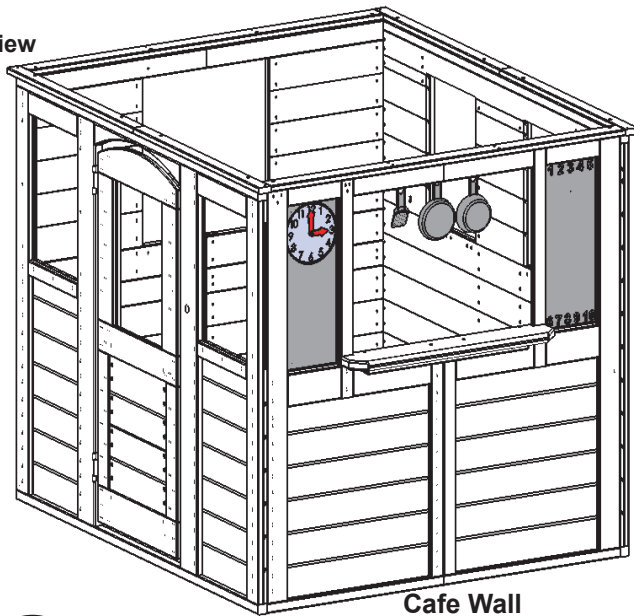


Fig. 5.4
Inside View

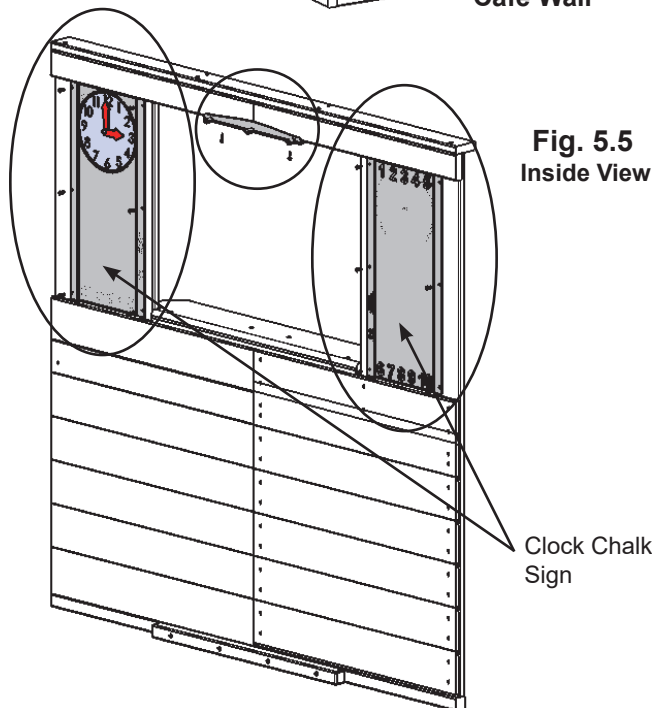


Fig. 5.5
Inside View

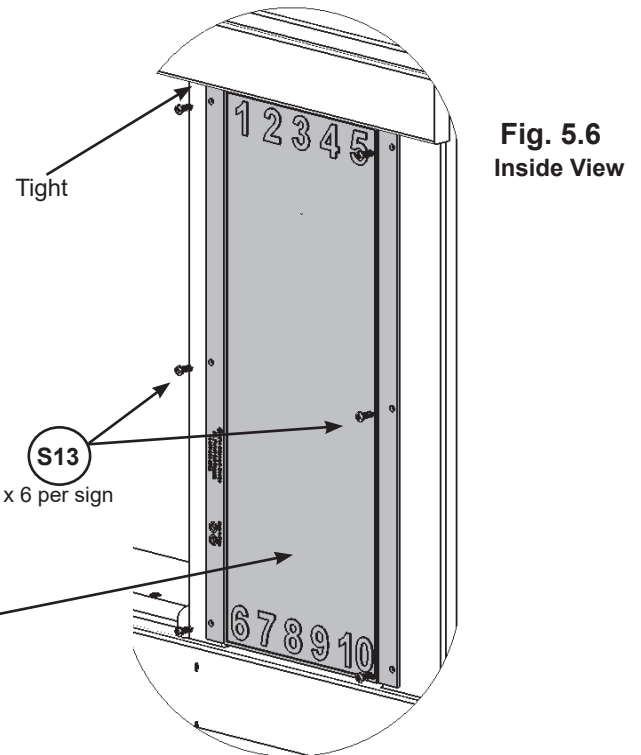


Fig. 5.6
Inside View

Hardware

14 x (S13) #6 x 5/8" Pan Screw

Other Parts

1 x Utensil Shelf
1 x Pot
1 x Pan
1 x Spatula
2 x Clock Chalk Sign

Step 6: Attach Door Panel Accessories Part 1



A: Measure 18-1/4" up from the bottom of the Door on the outside and inside and attach 1 Door Handle per side using 2 (S13) #6 x 5/8" Pan Screws per handle. (fig. 6.1 and 6.2)

B: Measure 15" up from the bottom of the Door on the inside and attach 1 Catch Plate flush to the outside edge of the Door using 2 (S13) #6 x 5/8" Pan Screws. (fig. 6.1 and 6.2)

Fig. 6.1


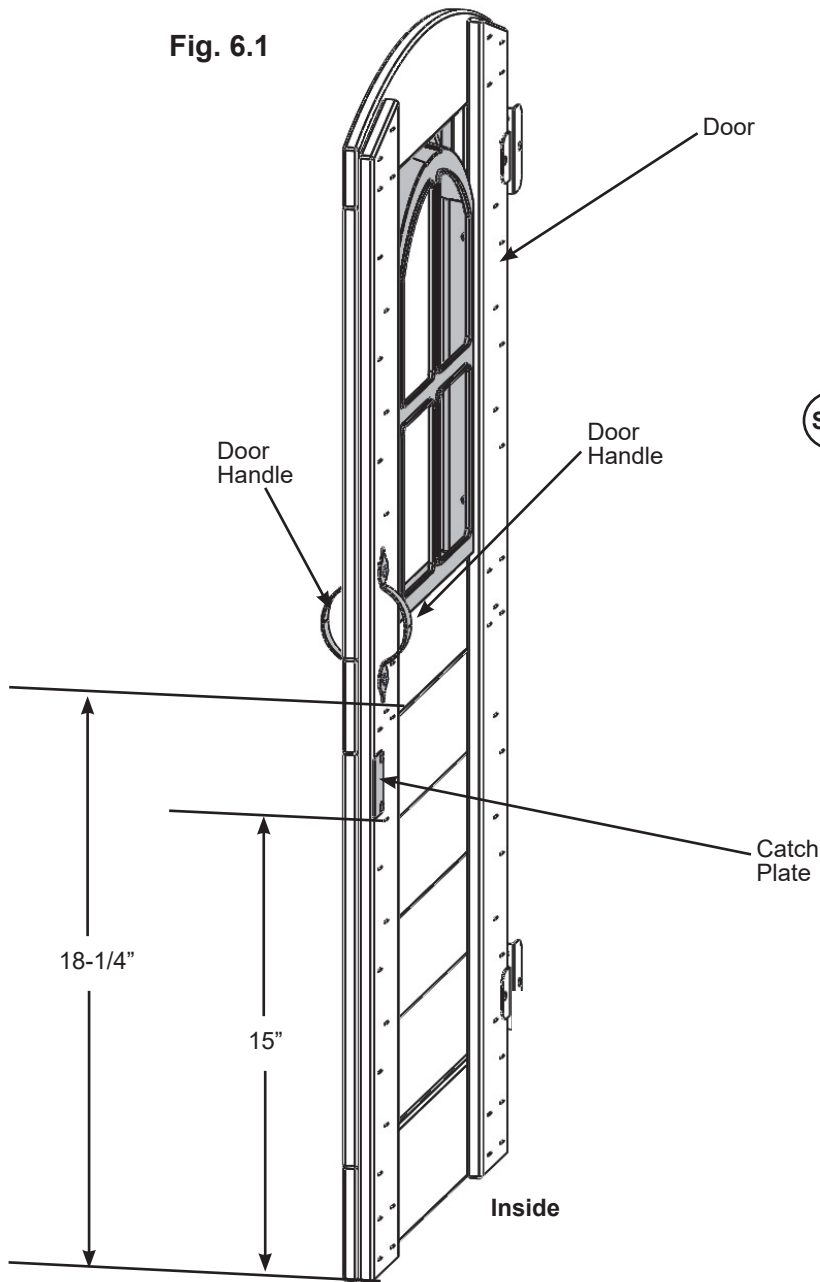


Fig. 6.2

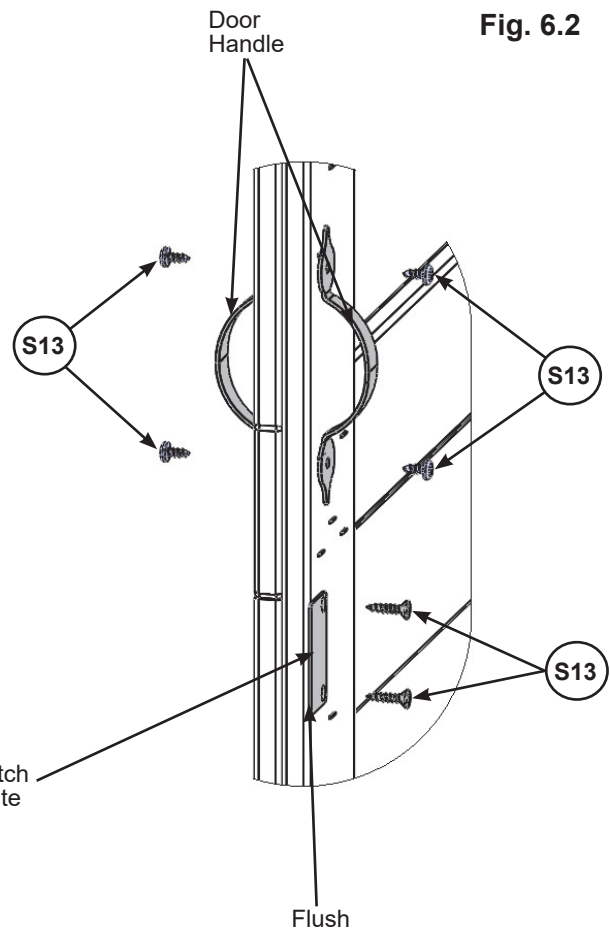

Hardware

6 x (S13) #6 x 5/8" Pan Screw

Other Parts

2 x Door Handle

1 x Catch Plate

Step 6: Attach Door Panel Accessories Part 2



C: In the notched out opening of (061) Door Latch Block attach the Magnetic Catch using 2 (S18) #6 x 1" Wood Screws. (fig. 6.3 and 6.4) **Important: Use a hand held screw driver and DO NOT over tighten.**




D: From inside the assembly centre (061) Door Latch Block on Catch Plate so the Magnetic Catch and the Catch Plate can connect then attach to Door Wall with 2 (S15) #8 x 1-3/4" Wood Screws. (fig. 6.3 and 6.4)

Note: Install 2 AAA/LR03 batteries in Doorbell prior to attaching to assembly.

E: From inside the assembly insert Doorbell 2 into the hole in the Door Wall and attach with 2 (S10) #8 x 1" Pan Screws. (fig. 6.3 and 6.4)

F: On the outside of the assembly place Doorbell Trim over the hole in the Door Wall so when you press it the doorbell rings then attach with 2 (S13) #6 x 5/8" Pan Screws as shown in fig. 6.5.

G: Above the Door Bell attach 1 Clicker Phone (with holder) using 2 (S13) #6 x 5/8" Pan Screws. (fig. 6.3 and 6.4)

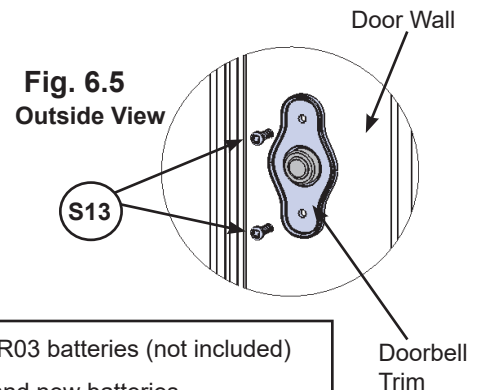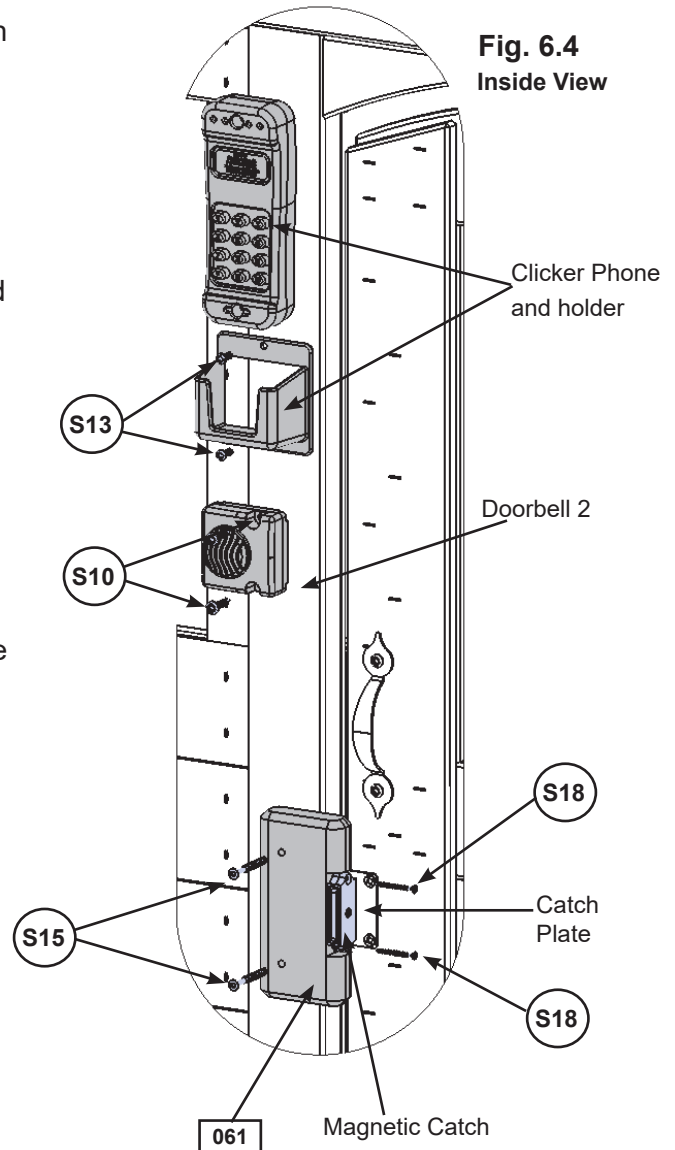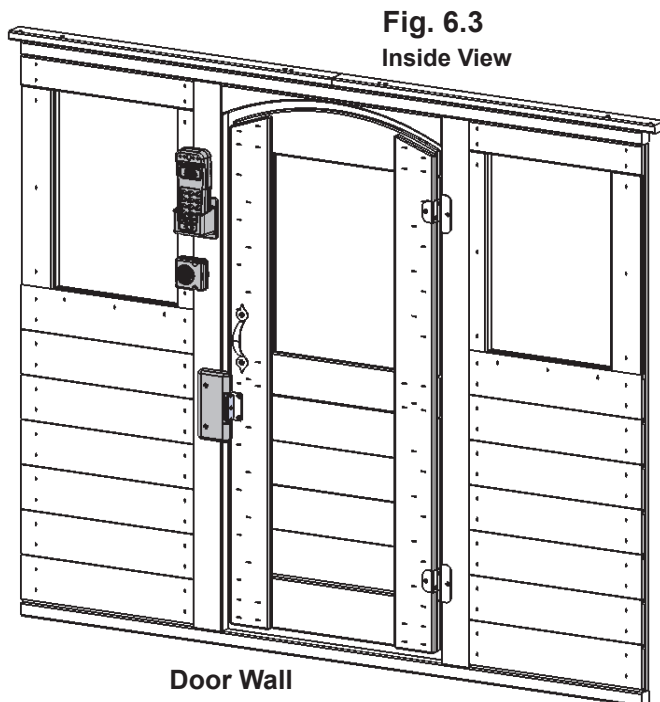

Note: Use only AAA/LR03 batteries (not included)
Do not mix old and new batteries
Do not mix alkaline, standard (carbonized) or rechargeable (nickel-cadmium batteries)

Wood Parts

1 x 061 Door Latch Block 15/16 x 2-1/2 x 5"

Hardware

2 x S15 #8 x 1-3/4" Wood Screw
2 x S18 #6 x 1" Wood Screw
2 x S10 #8 x 1" Pan Screw
4 x S13 #6 x 5/8" Pan Screw

Other Parts

1 x Magnetic Catch
1 x Door Bell 2 Set
1 x Clicker Phone

Step 7: Attach Counter Assembly Part 1



A: On the inside of the playhouse assembly place Counter Assembly from Step 3 against the Cafe Wall. The top of (031) Counter Back should be flush and level to the bottom of (051) Cafe Table Top. (fig. 7.1 and 7.2)

B: Attach (031) Counter Back to Cafe Wall with 4 (S2) #8 x 1-1/2" Wood Screws. (fig. 7.2)

C: Attach both (034) Counter Braces to Cafe Wall with 1 (S3) #8 x 2-1/2" Wood Screw per brace and (035) Counter Brace Centre to Cafe Wall with 2 (S15) #8 x 1-3/4" Wood Screws. (fig. 7.2)


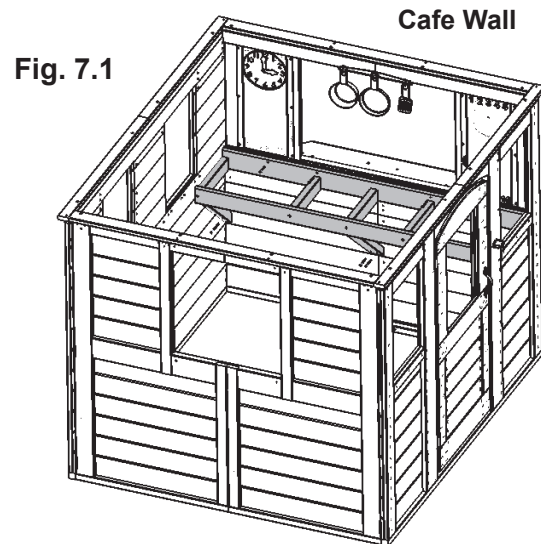


Fig. 7.2
Inside View

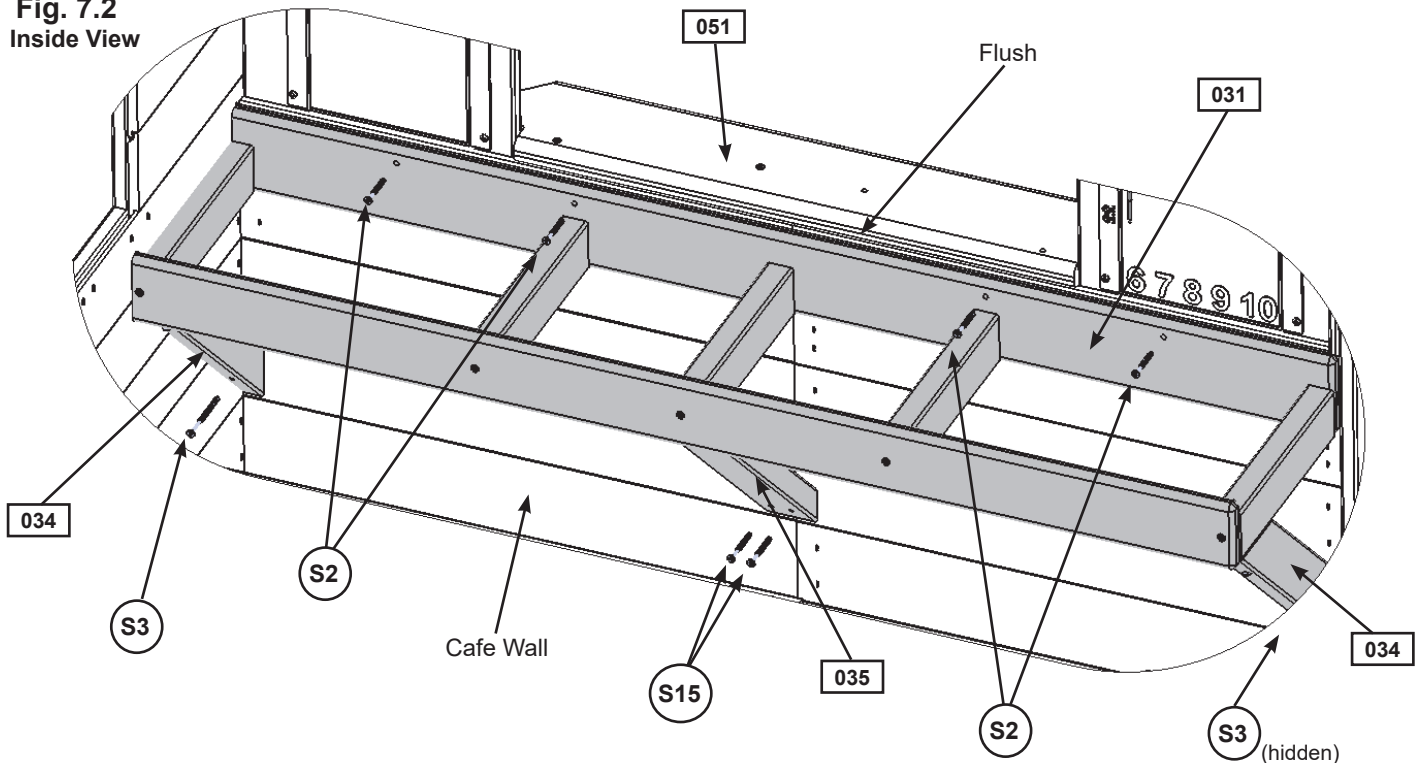

Hardware

- 4 x (S2) #8 x 1-1/2" Wood Screw
- 2 x (S3) #8 x 2-1/2" Wood Screw
- 2 x (S15) #8 x 1-3/4" Wood Screw


Step 7: Attach Counter Assembly Part 2

D: Tight to (031) Counter Back attach (071) Counter Top to each (033) Counter Joist with 5 (TS) #6 x 30 mm Trim Screws. (fig. 7.3)

E: Tight to (071) Counter Top and flush to the outside edges of the outer (033) Counter Joists attach 1 (072) Counter Side per joist with 3 (TS) #6 x 30 mm Trim Screws per board. (fig. 7.3)

F: Tight to (071) Counter Top and centred over the middle 3 (033) Counter Joists with ends flush to the outside edges attach 2 (073) Counter Mid Tops with 6 (TS) #6 x 30 mm Trim Screws per board. (fig. 7.3)

Fig. 7.3

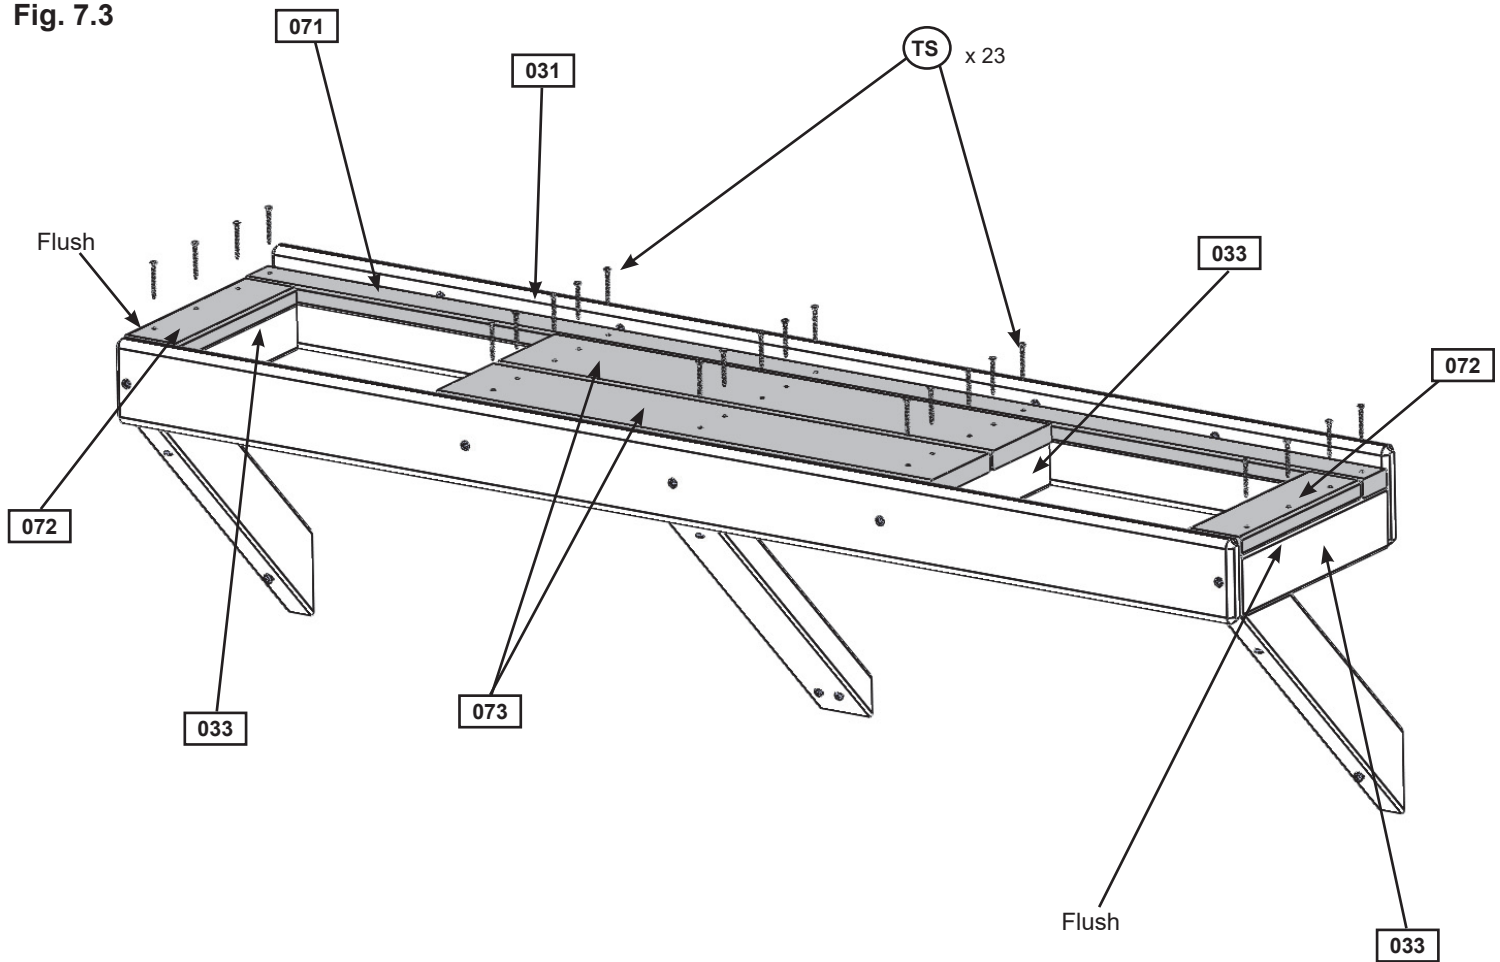

Wood Parts

2 x **073** Counter Mid Top 5/8 x 3-3/8 x 18-1/2"

1 x **071** Counter Top 5/8 x 1-3/8 x 41-3/4"

2 x **072** Counter Side 5/8 x 2 x 6-3/4"

Hardware


23 x (TS) #6 x 30 mm Trim Screw

Step 7: Attach Counter Assembly Part 3

G: Place Faucet and 2 Sink Knobs in opening of Sink and attach Sink Knobs with included hardware. (fig. 7.4)

Important: Use a hand held screw driver and **DO NOT** over tighten.

Fig. 7.4

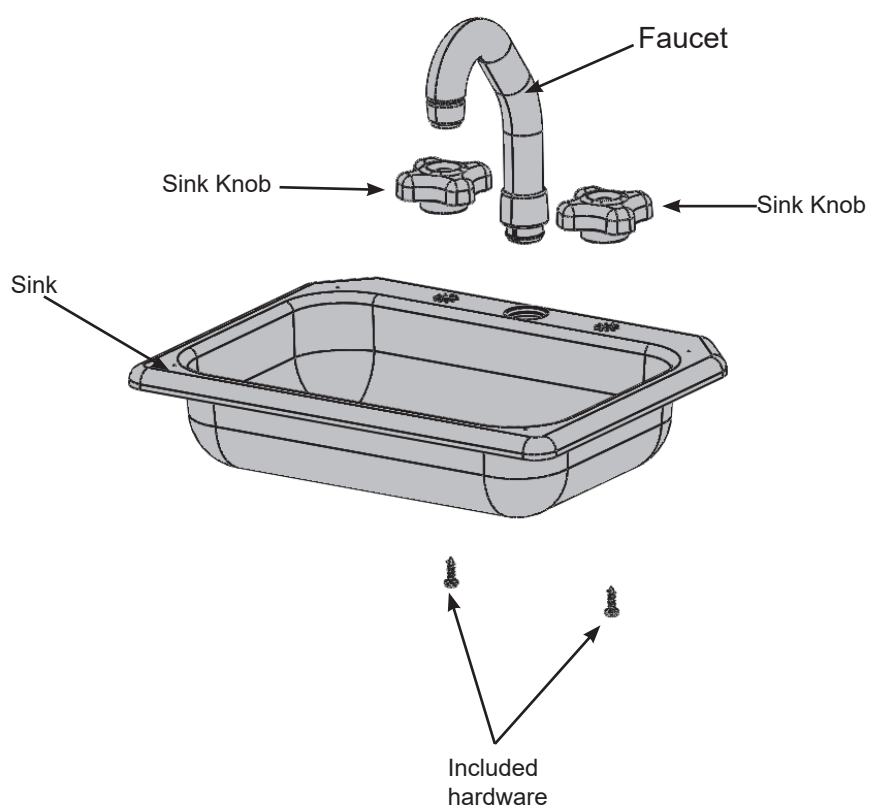

Other Parts

1 x Sink
2 x Sink Knobs
1 x Faucet

Step 7: Attach Counter Assembly Part 4

H: Place Sink and Stove in the openings of the Counter Assembly then attach 4 Mount Clips with included hardware to the bottom of the Sink and Stove to secure in place. (fig. 7.5 and 7.6)

Important: Use a hand held screw driver and **DO NOT** over tighten.

Note: To remove the Sink or Stove loosen screw 1/4 turn then twist Mount Clips.

Fig. 7.5


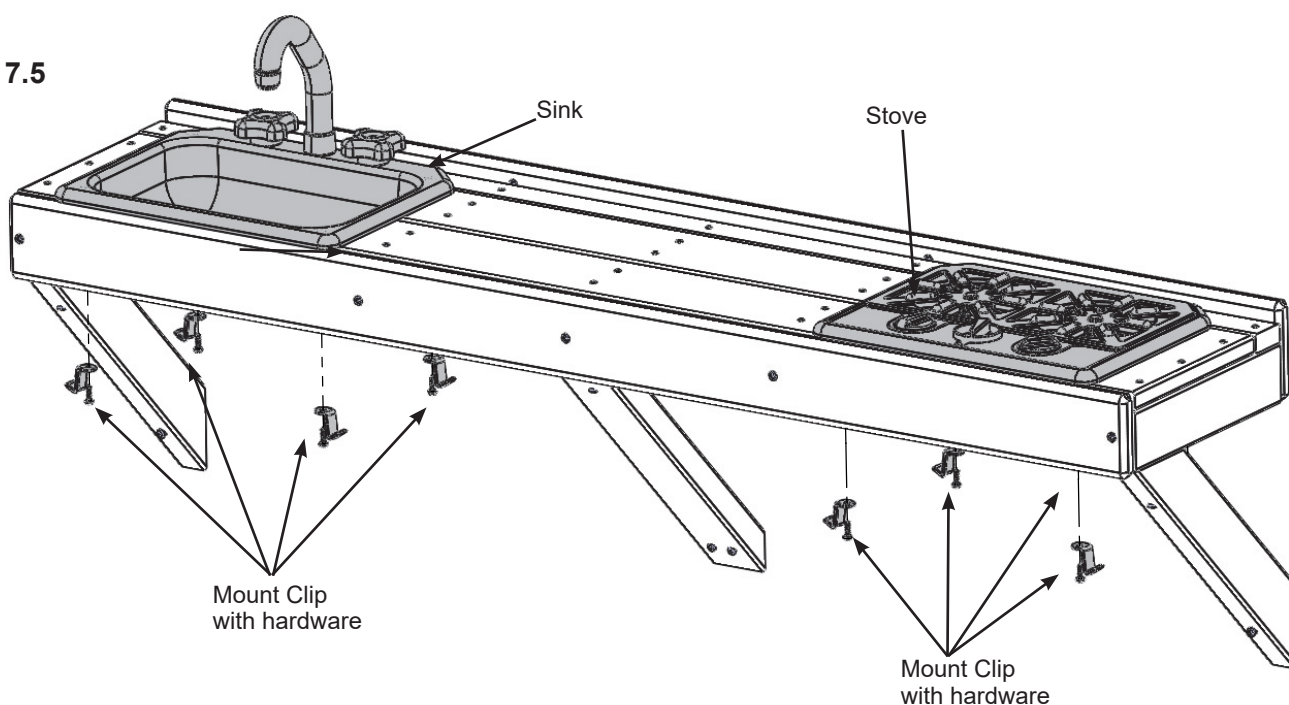



Fig. 7.6

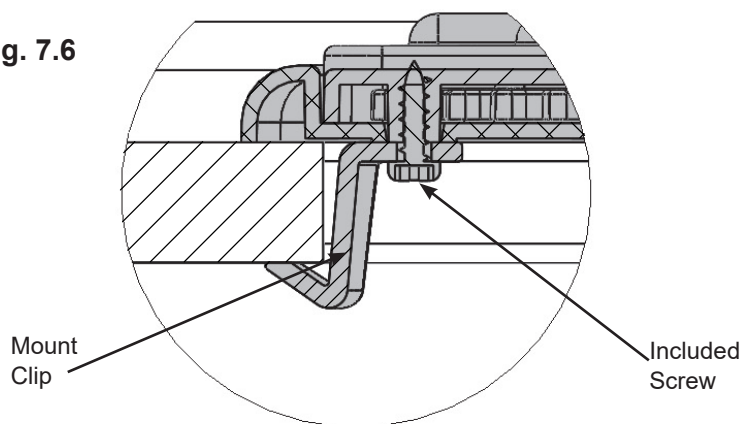

Other Parts

1 x Stove
8 x Mount Clip

Step 8: Attach Roof to Assembly

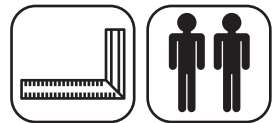

Make sure assembly is square before proceeding in this Step.

A: With an adult helper lift the Roof Assembly from Step 2 onto the (041) Soffit Sides and (042) Soffit Front Back so the notches in each (023) Roof Panel Side fit tight to the ends of each (042) Soffit Front Back. The opening should face the Door and Back Walls (fig. 8.1, 8.2 and 8.3)

B: Attach (041) Soffit Sides to Roof Assembly with 4 (S2) #8 x 1-1/2" Wood Screws per soffit. Make sure screws go into each Joist in the Roof Assembly. (fig. 8.2 and 8.3)

Fig. 8.1

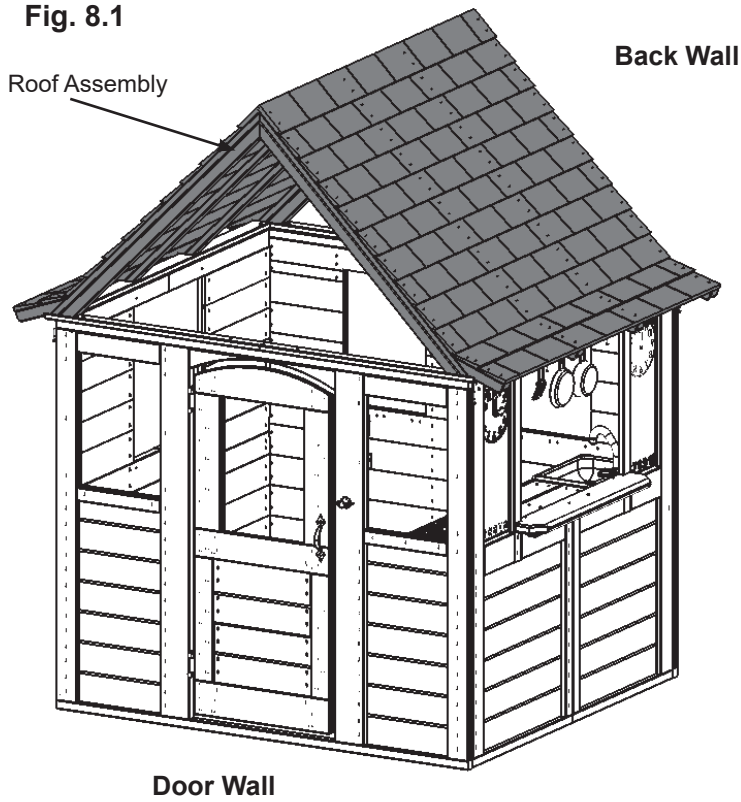


Fig. 8.2


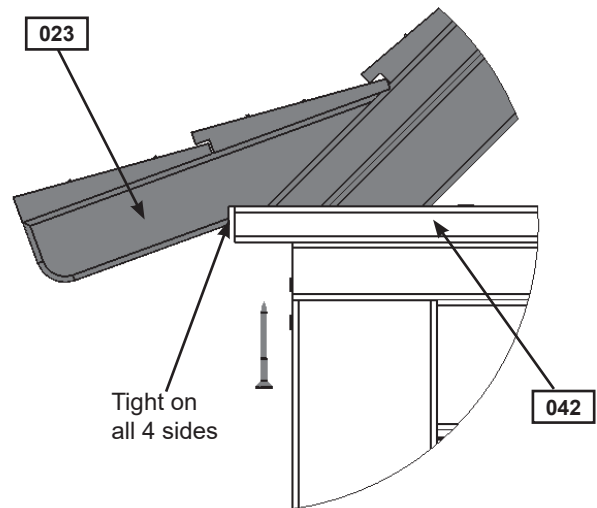


Fig. 8.3

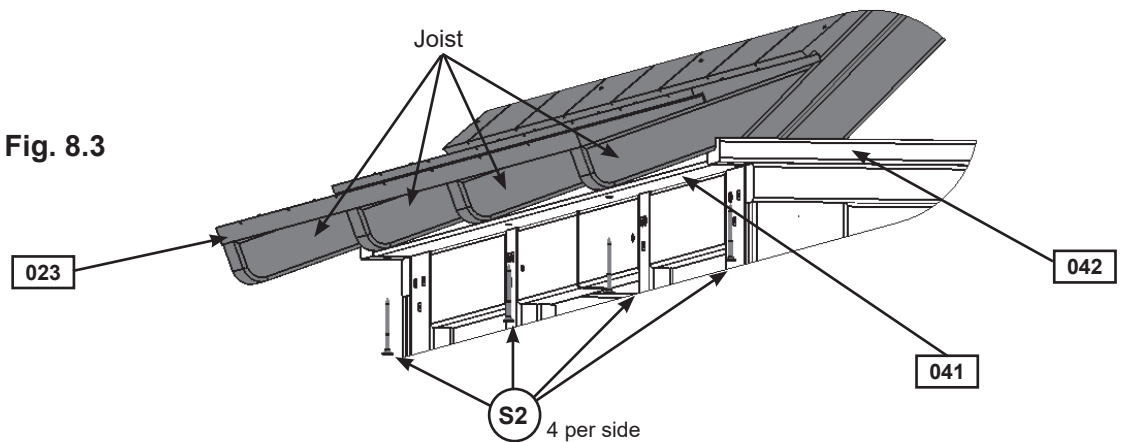

Hardware

8 x (S2) #8 x 1-1/2" Wood Screw

Step 9: Gable Assembly Part 1

A: From inside the assembly, tight to the Roof Assembly and centred at the peak, attach 2 (091) Gable End A with 2 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 9.1 and 9.2)

B: Tight to each (091) Gable End A and tight to the Roof Assembly attach 2 (092) Gable End B with 4 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 9.1 and 9.2)

C: Tight to each (092) Gable End B and tight to the Roof Assembly attach 2 (093) Gable End C, followed by 2 (094) Gable End D and 2 (095) Gable End E with 4 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 9.1 and 9.2)

Repeat Steps A - C for both the Door Wall and Back Wall sides.

Fig. 9.1
Inside View


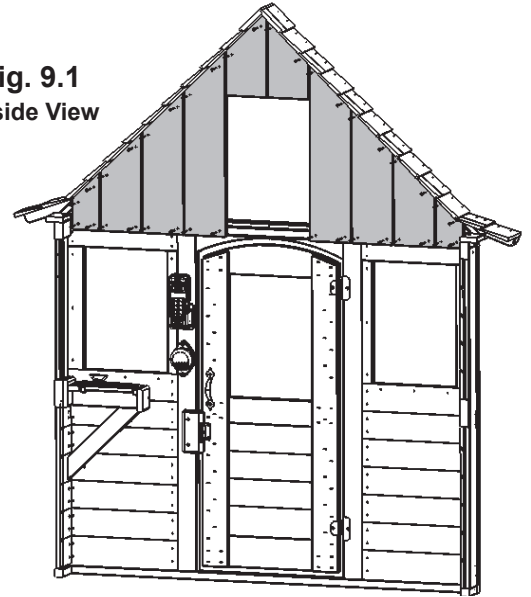


Fig. 9.2
Inside View

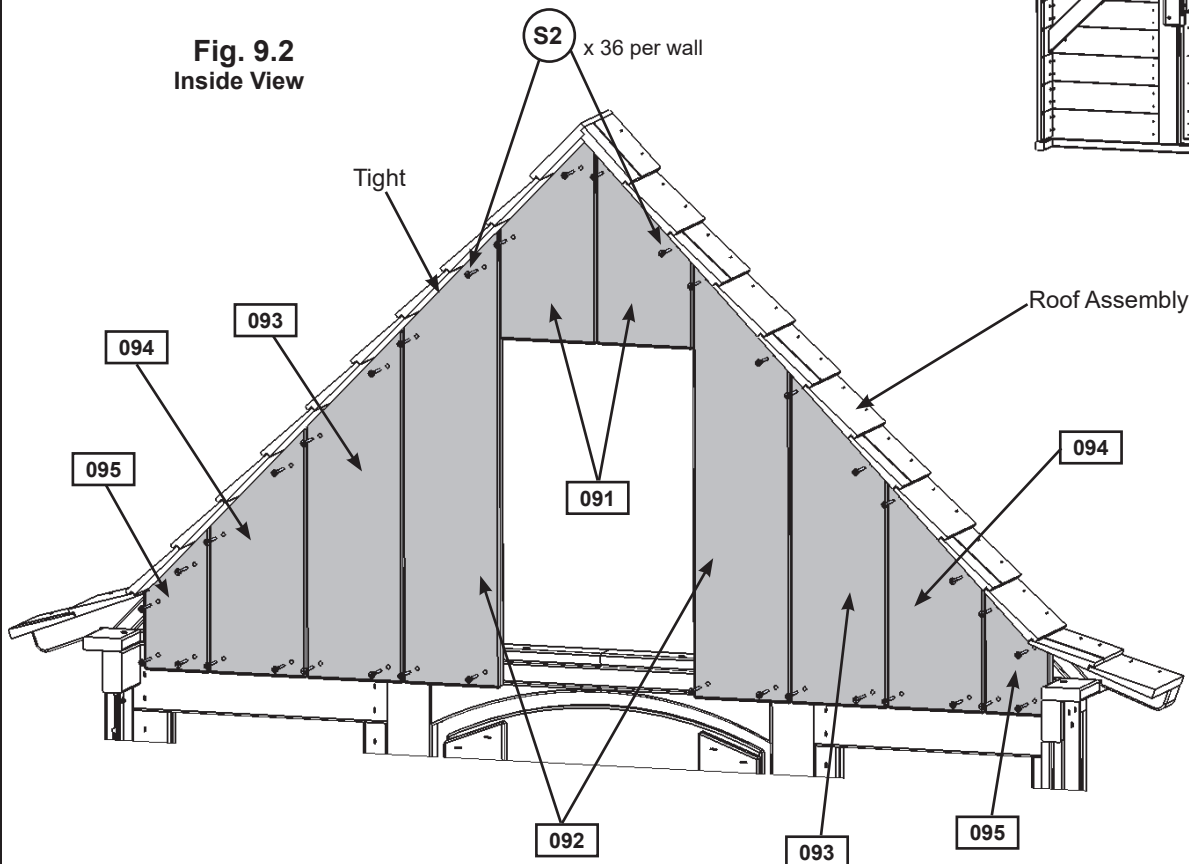

Wood Parts

4 x	091	Gable End A 5/8 x 5 x 10-1/4"
4 x	092	Gable End B 5/8 x 5 x 22"
4 x	093	Gable End C 5/8 x 5 x 17"
4 x	094	Gable End D 5/8 x 5 x 12"
4 x	095	Gable End E 5/8 x 3-3/8 x 7"

Hardware



72 x (S2) #8 x 1-1/2" Wood Screw

Step 9: Gable Assembly Part 2

D: From outside the assembly, flush to the inside edge of each (092) Gable End B and tight to (042) Soffit Front Back, attach 2 (096) Shutter Sides with 2 (S18) #6 x 1" Wood Screws per board. (fig. 9.3 and 9.4)

E: Flush to the bottom of each (091) Gable End A in between (096) Shutter Sides attach 1 (097) Shutter Top with 2 (S18) #6 x 1" Wood Screws. The tops of (096) Shutter Sides and (097) Shutter Tops should be flush. (fig. 9.3 and 9.4)

Repeat Steps D - E for both the Door Wall and Back Wall sides.

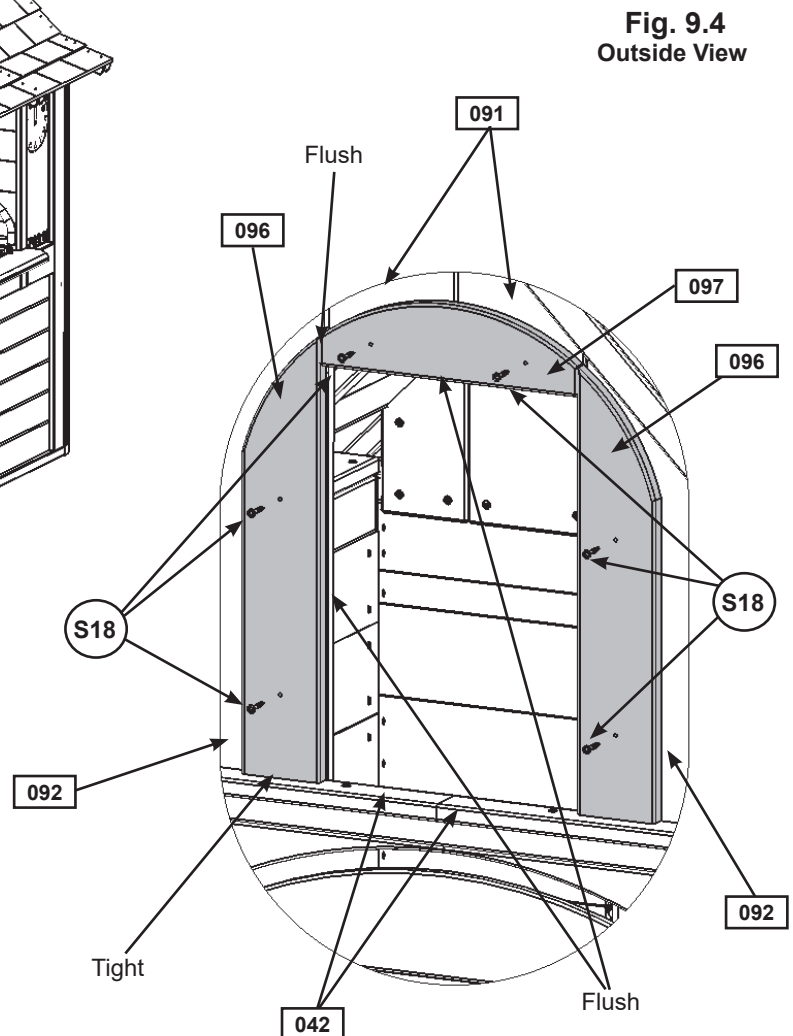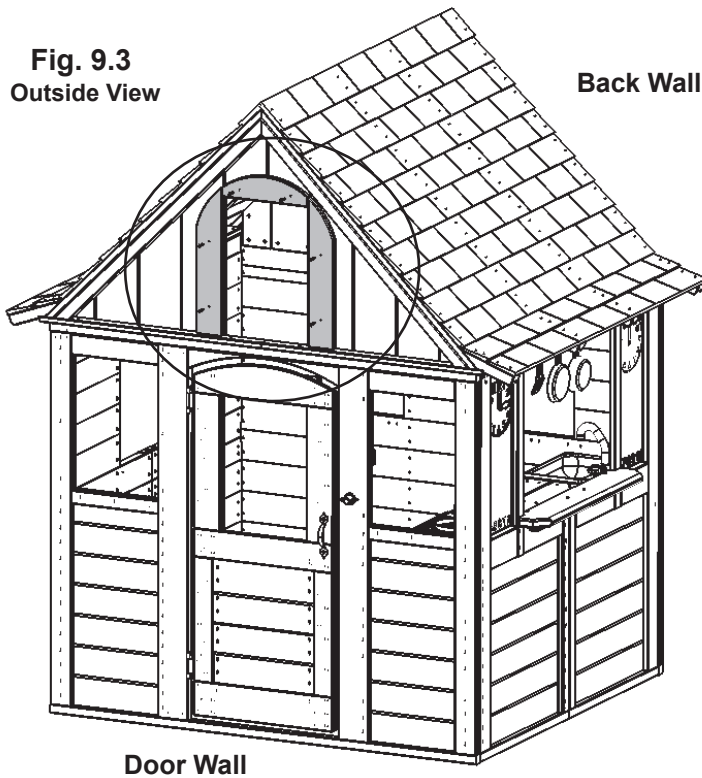

Wood Parts

- 4 x (096) Shutter Side 5/8 x 3 x 16"
- 2 x (097) Shutter Top 5/8 x 2-3/4 x 10"

Hardware



- 12 x (S18) #6 x 1" Wood Screw

Step 9: Gable Assembly Part 3

F: Centred at the peak and flush to the top of the Roof Assembly, attach 2 (098) Roof Side Tops with 3 (TS) #6 x 30 mm Trim Screws per board. (fig. 9.5 and 9.6)

G: Tight to the bottom of each (098) Roof Side Top attach 1 (099) Roof Side Bottom with 3 (TS) #6 x 30 mm Trim Screws per board. (fig. 9.5 and 9.6)

Repeat Steps F - G for both the Door Wall and Back Wall sides.

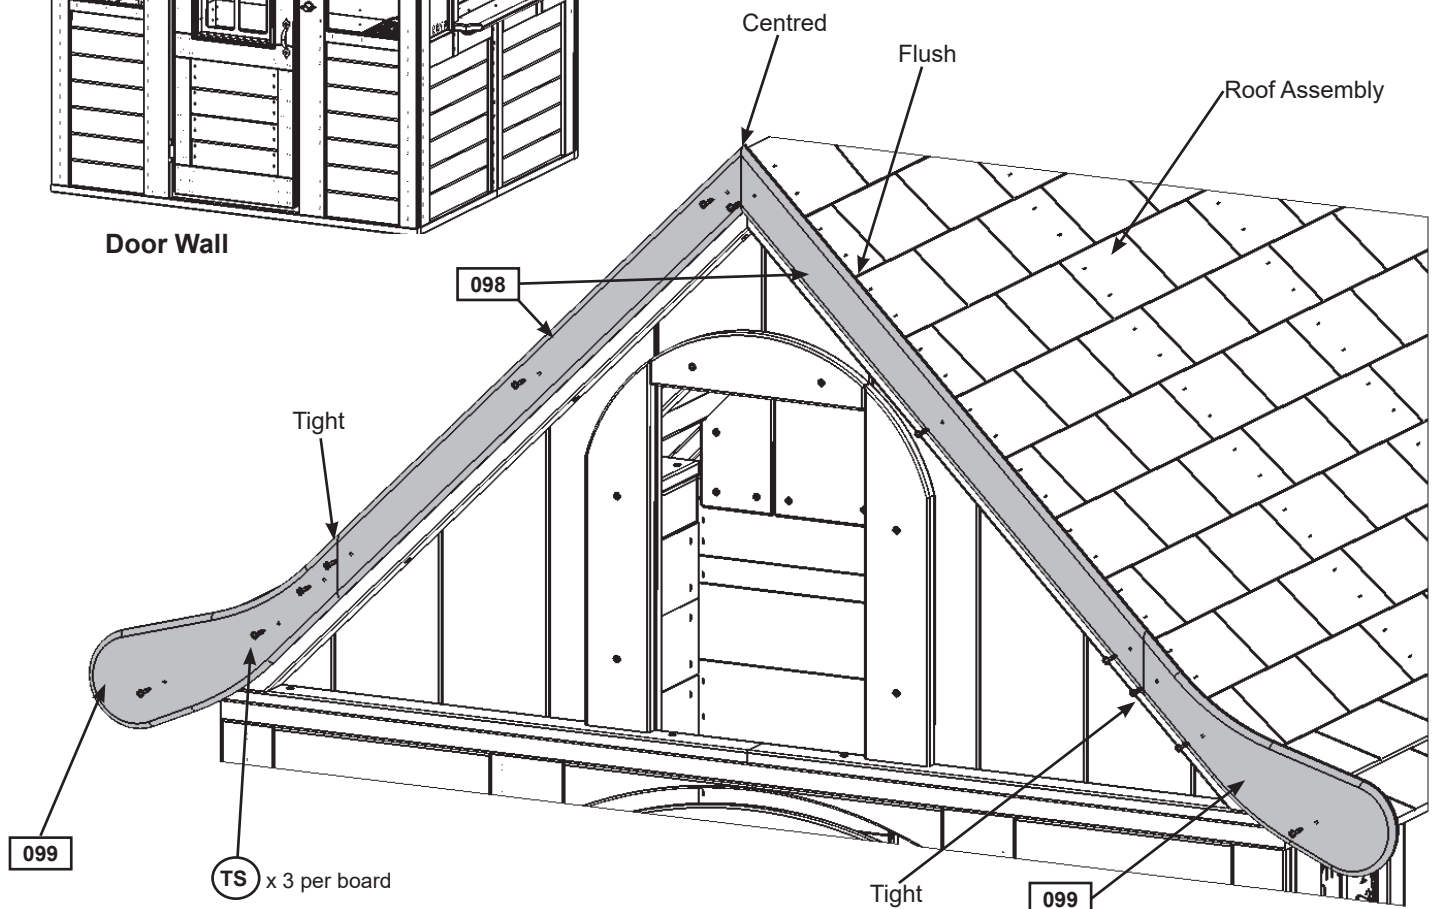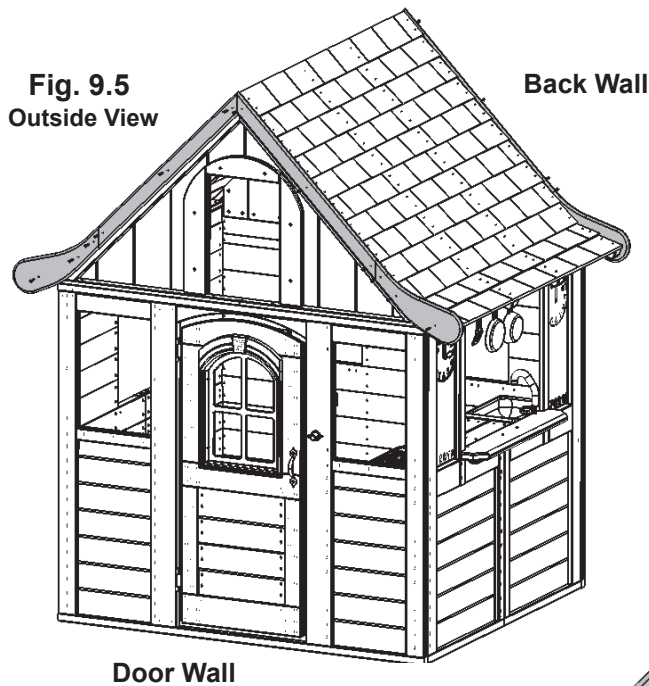

Wood Parts


- 4 x 098 Roof Side Top 5/8 x 2 x 28-1/2"
- 4 x 099 Roof Side Bottom 5/8 x 4-17/32 x 14-3/64"

Hardware


- 24 x TS #6 x 30 mm Trim Screw

Step 10: Bay Window Assembly Part 1

A: From outside the assembly place Bay Window Bottom in the opening of the Side Wall as shown in fig. 10.1. Attach with 4 (S13) #6 x 5/8" Pan Screws.

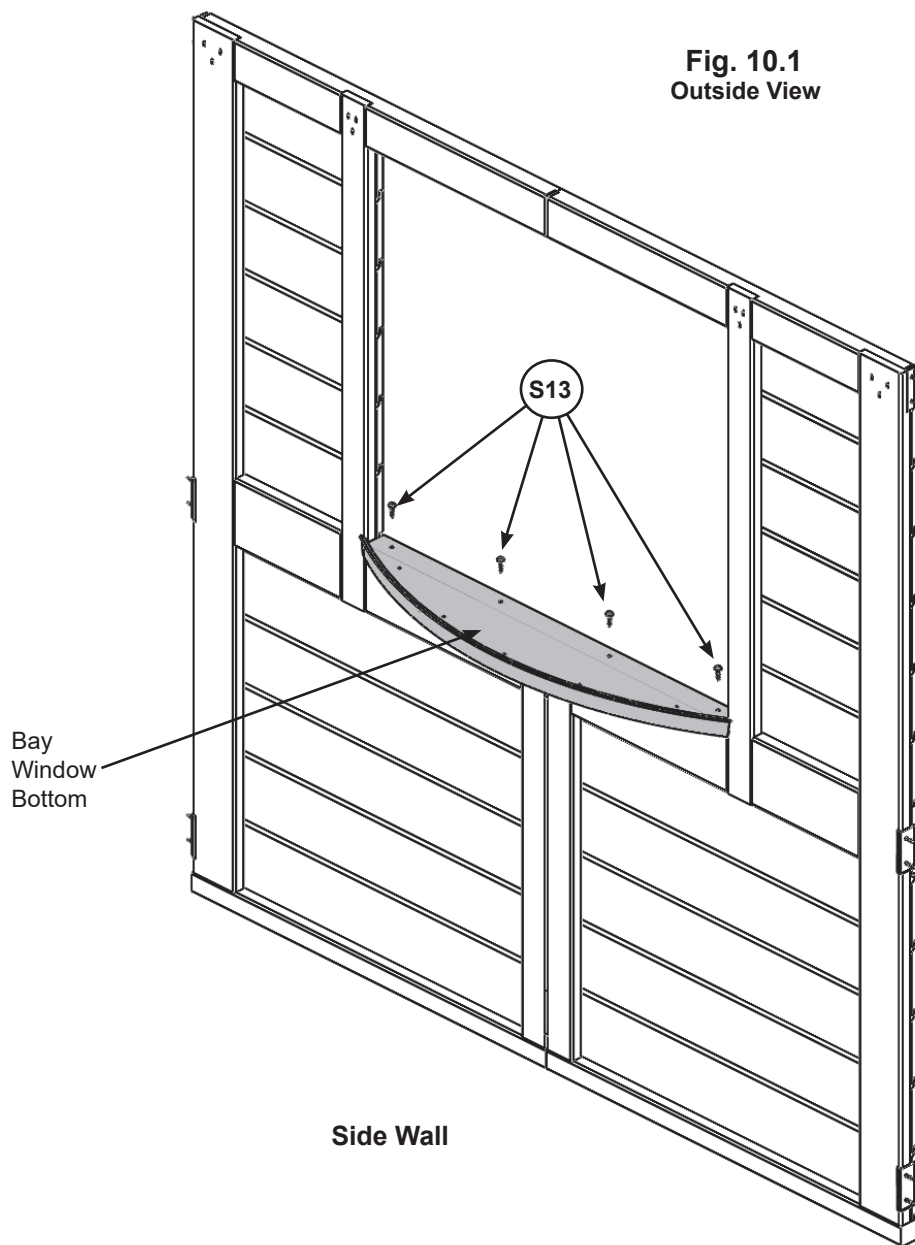

Hardware

4 x  #6 x 5/8" Pan Screw

Other Parts

1 x Bay Window Bottom

Step 10: Bay Window Assembly Part 2

B: Bend Bay Window Insert so it is curved and from inside the assembly place into the opening on top of the Bay Window Bottom as shown in fig. 10.2, 10.3 and 10.4. Attach with 4 (S13) #6 x 5/8" Pan Screws. The sides of the Bay Window Insert should fit tight to the inside of the wall panel.

C: Attach the sides of the Bay Window Insert to the inside of the Side Wall with 3 (S13) #6 x 5/8" Pan Screws per side. (fig. 10.3 and 10.5)

Fig. 10.2
Inside View

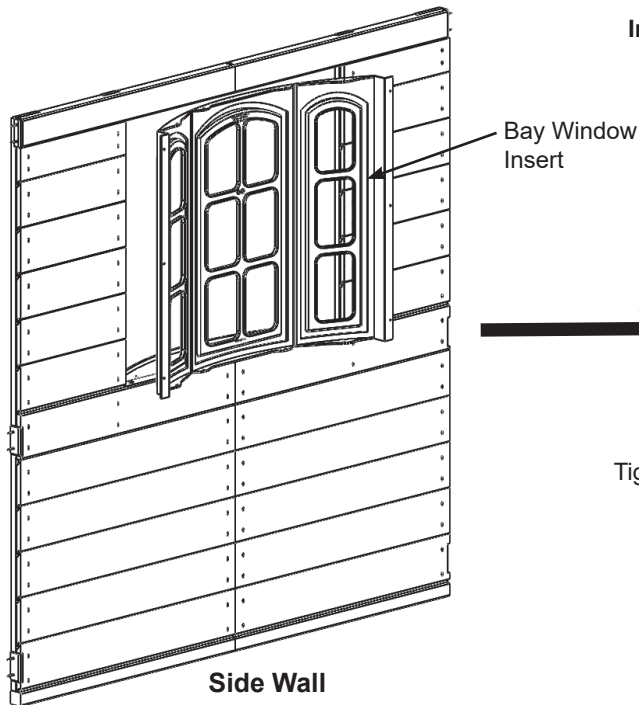


Fig. 10.3
Inside View

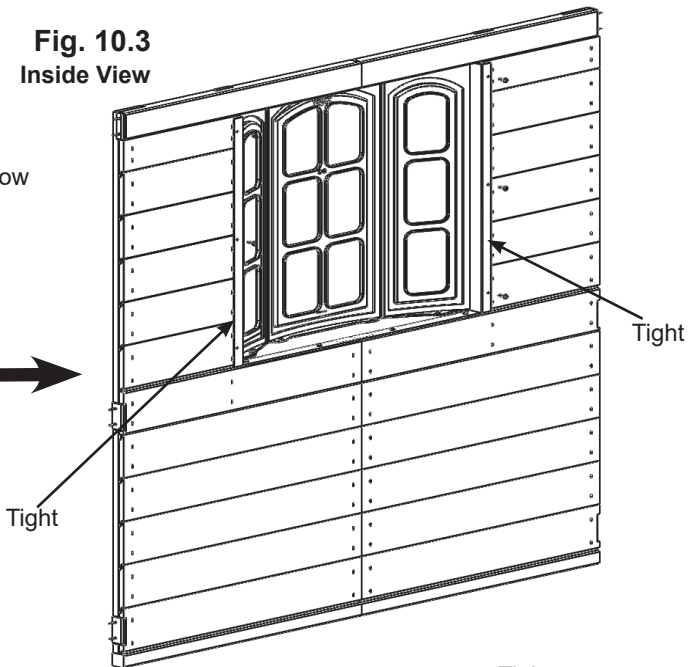


Fig. 10.4
Inside View


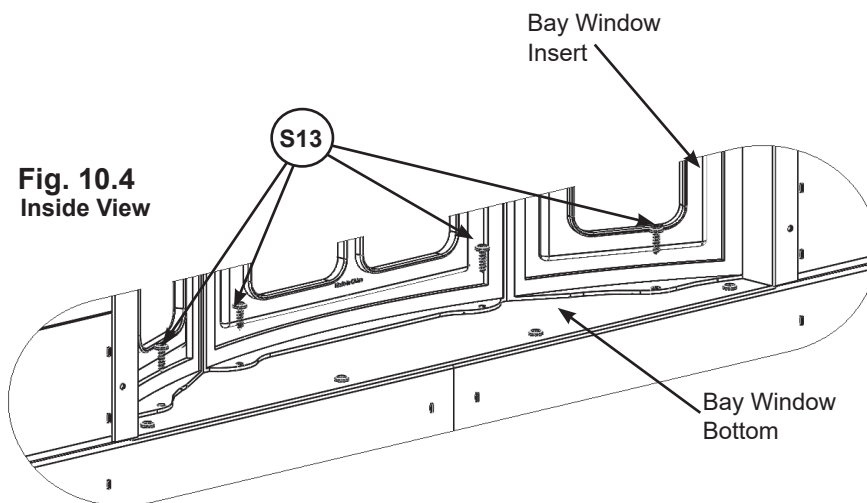


Fig. 10.5
Inside View

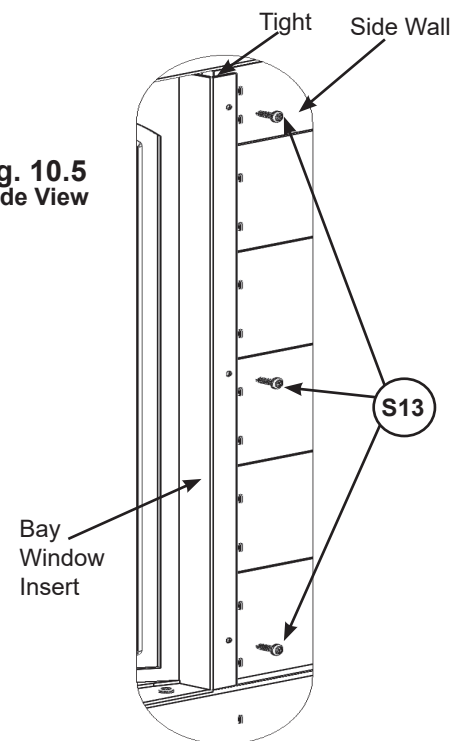

Hardware

10 x (S13) #6 x 5/8" Pan Screw

Other Parts

1 x Bay Window Insert

Step 10: Bay Window Assembly Part 3

D: From outside the assembly place Bay Window Top on top of Bay Window Insert and under the wall panel then attach to Bay Window Insert with 4 (S13) #6 x 5/8" Pan Screws. (fig. 10.6, 10.7 and 10.8)

E: Attach Bay Window Top to the Side Wall with 4 (S13) #6 x 5/8" Pan Screws. (fig. 10.8)

Fig. 10.7
Outside View

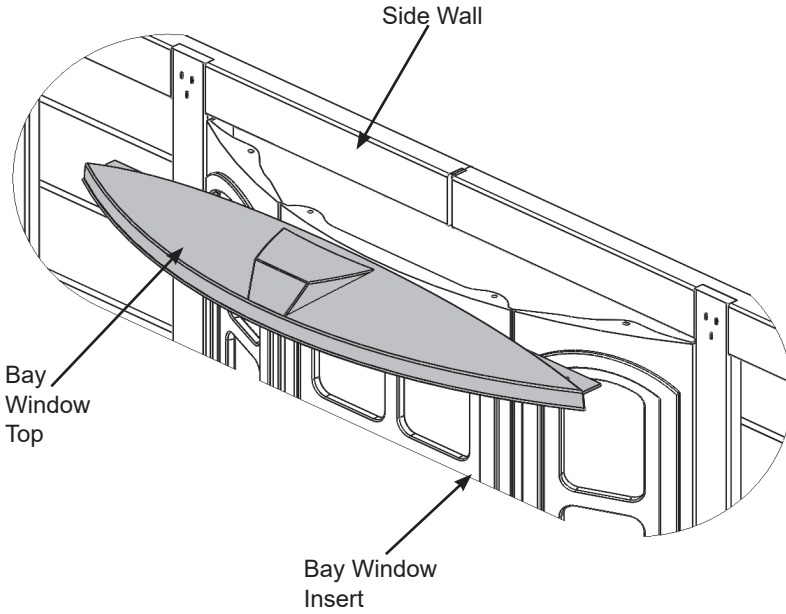


Fig. 10.6
Outside View


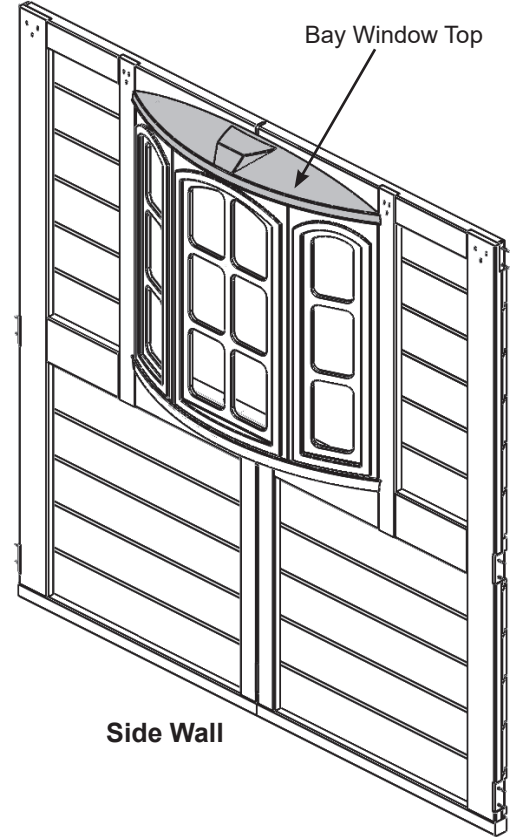


Fig. 10.8
Inside/Underneath View

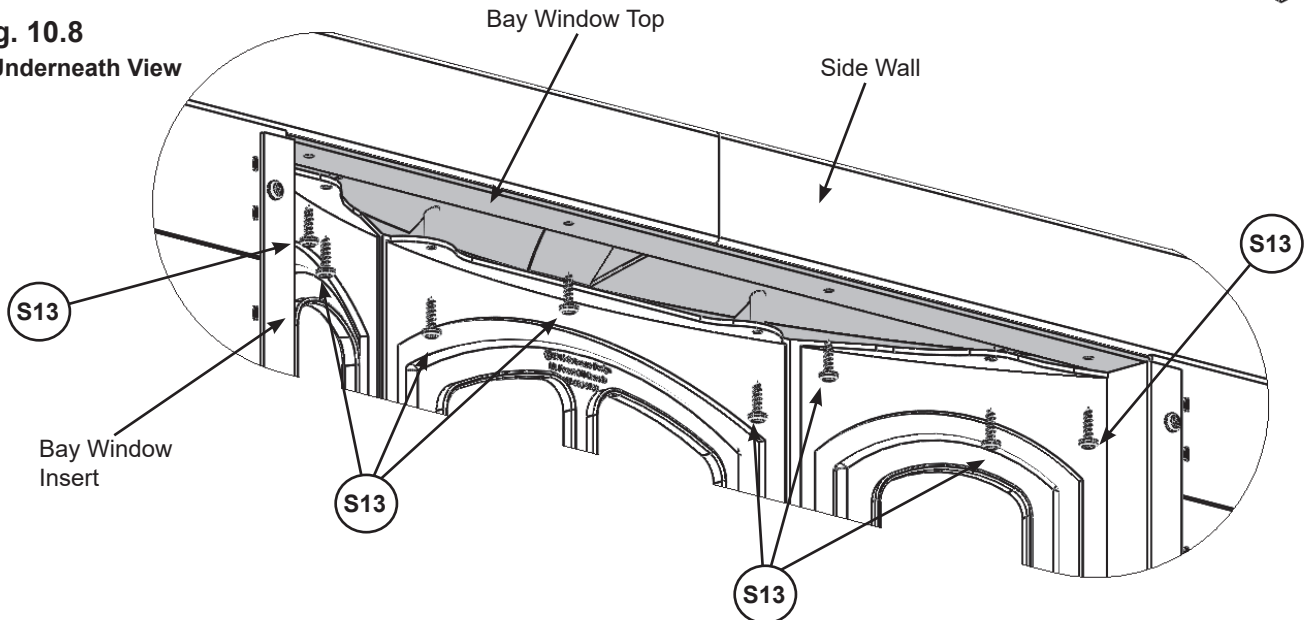

Hardware

8 x (S13) #6 x 5/8" Pan Screw

Other Parts

1 x Bay Window Top

Step 11: Attach Corner Trim

A: Flush to the outside edges and bottom of the Cafe Wall attach 2 (110) Corner Trims with 6 (TS) #6 x 30 mm Trim Screws per board. (fig. 11.1 and 11.2)

Repeat Step A for Side Wall.

Fig. 11.1 Side Wall


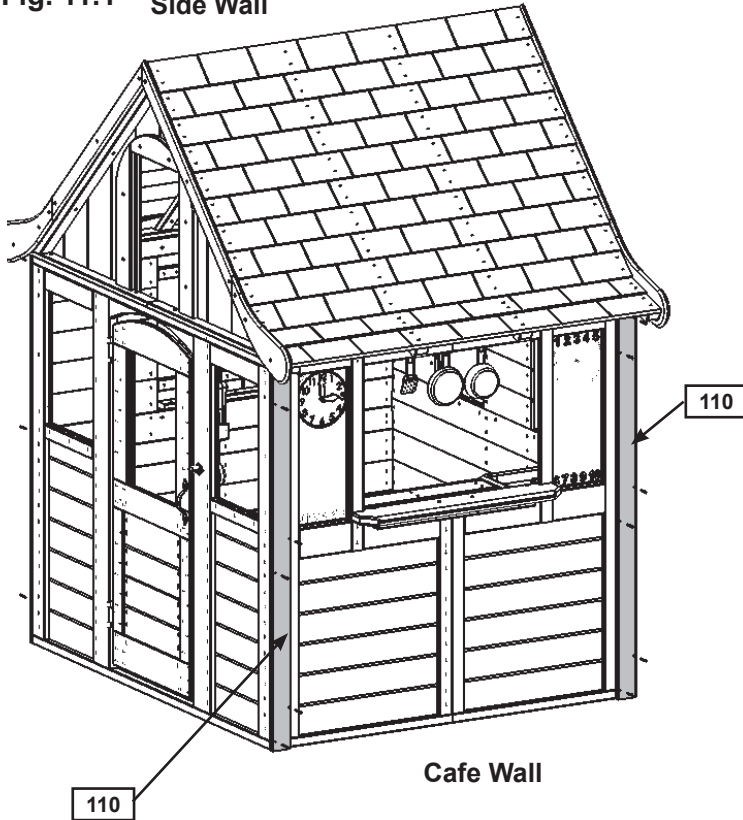


Fig. 11.2

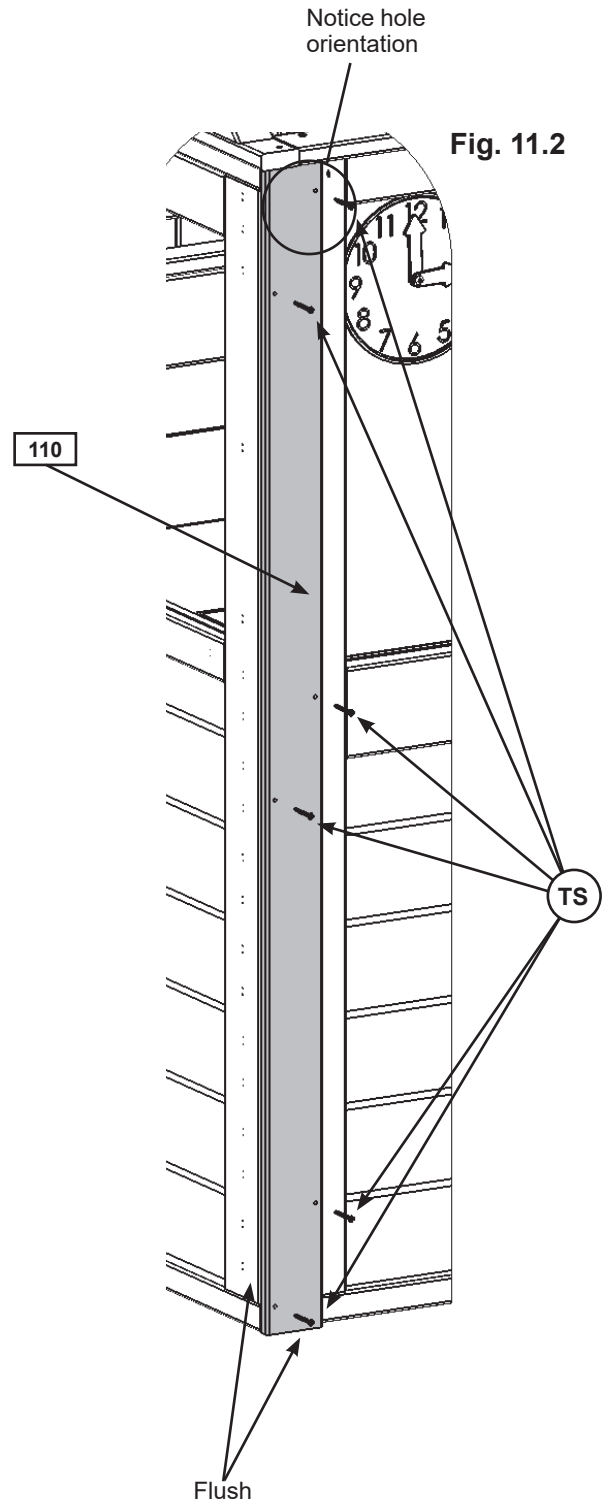

Wood Parts

4 x **110** Corner Trim 1/2 x 2-1/4 x 41-7/8"

Hardware

24 x **TS** #6 x 30 mm Trim Screw

Step 12: Attach Windows

A: Place 1 Deep Window in each window opening on the Door Wall and Back Wall. There should be 7 Deep Windows in total, 4 on the Door Wall and 3 on the Back Wall. Attach each window with 4 (S13) #6 x 5/8" Pan Screws. (fig. 12.1 and 12.2)

Fig. 12.1


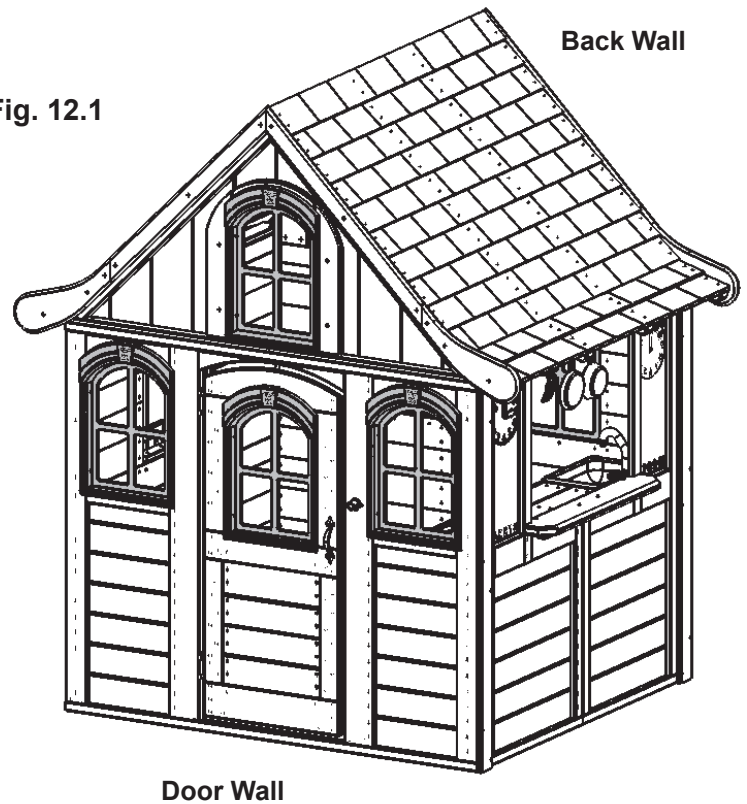


Fig. 12.2

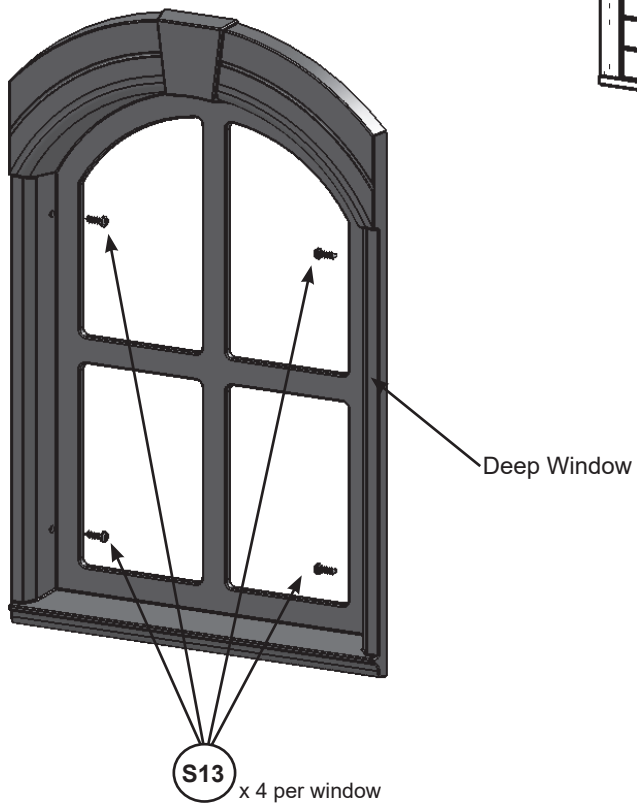

Hardware

28 x (S13) #6 x 5/8" Pan Screw

Other Parts

7 x Deep Windows

Step 13: Attach Flower Boxes



A: Place 1 Flower Box under each side Window on the Door Wall and attach with 2 (S10) #8 x 1" Pan Screws per Flower Box. (fig. 13.1 and 13.2)

Fig. 13.1


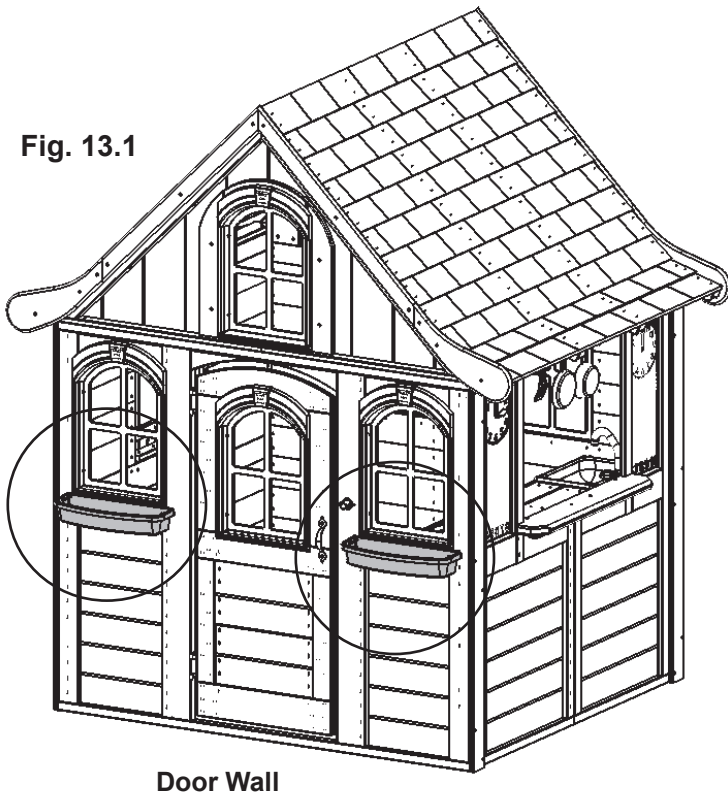


Fig. 13.2

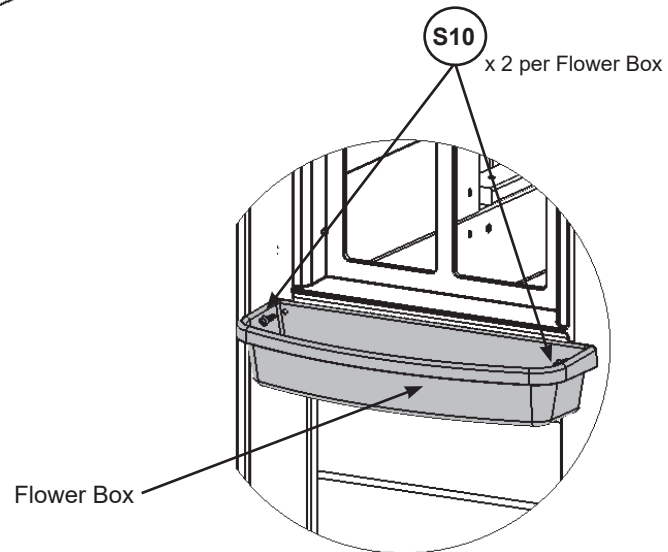


Hardware

4 x (S10) #8 x 1" Pan Screw

Other Parts

2 x Flower Box


Step 14: Bench Assembly

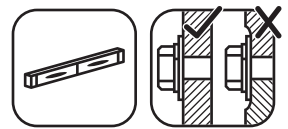

A: Open the (140) Folding Bench Assembly. (fig. 14.1, 14.2 and 14.3)

B: Make sure assembly is level then secure with 2 (H1) 1/4 x 1-1/2" Hex Bolts (with lock washer, flat washer and t-nut) per side. (fig. 14.4)

C: Tighten the top screws in all 4 Bench Legs. (fig. 14.4)

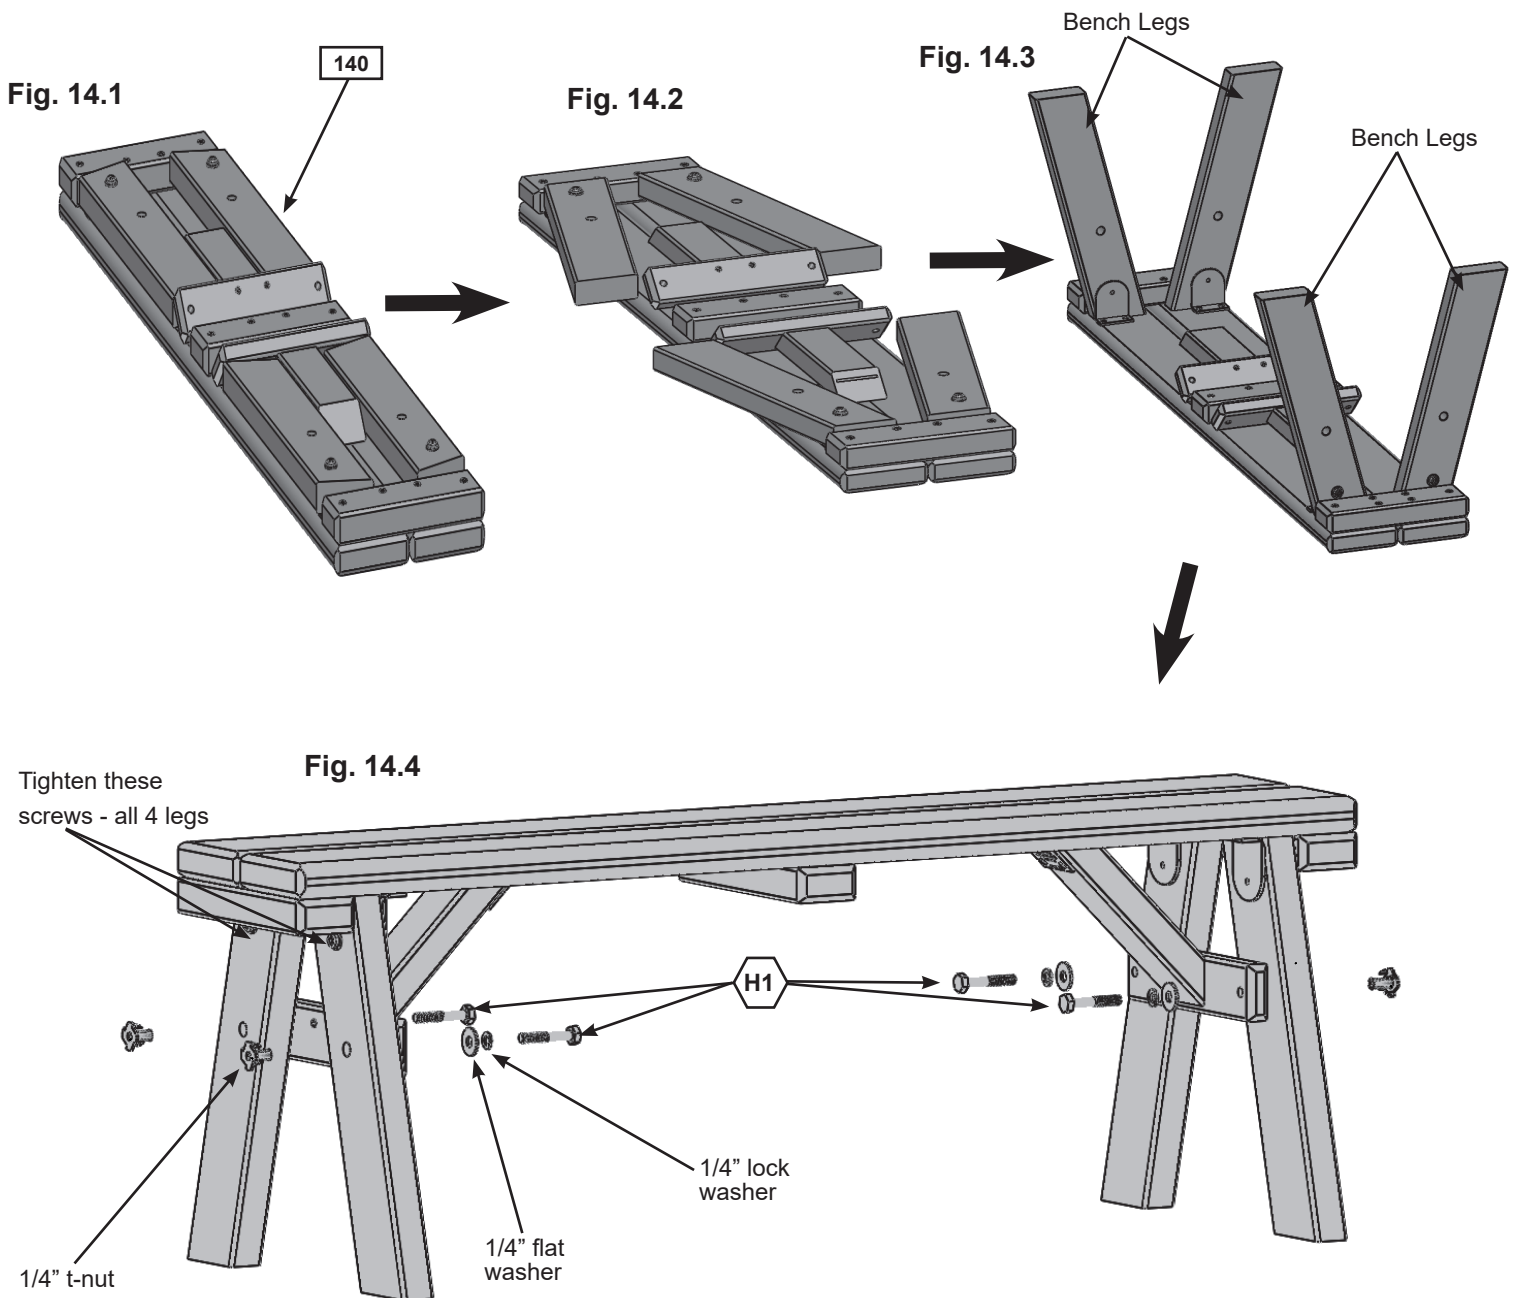

Wood Parts


1 x 140 Folding Bench 2-13/32 x 6-1/2 x 31-7/8"

Hardware

4 x H1 1/4 x 1-1/2" Hex Bolt
(1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

Step 15: Attach Playhouse Plaque

A: On the Back Wall above the top Deep Window install the Playhouse Plaque with 2 (S13) #6 x 5/8" Pan Screws. (fig. 15.1 and 15.2)

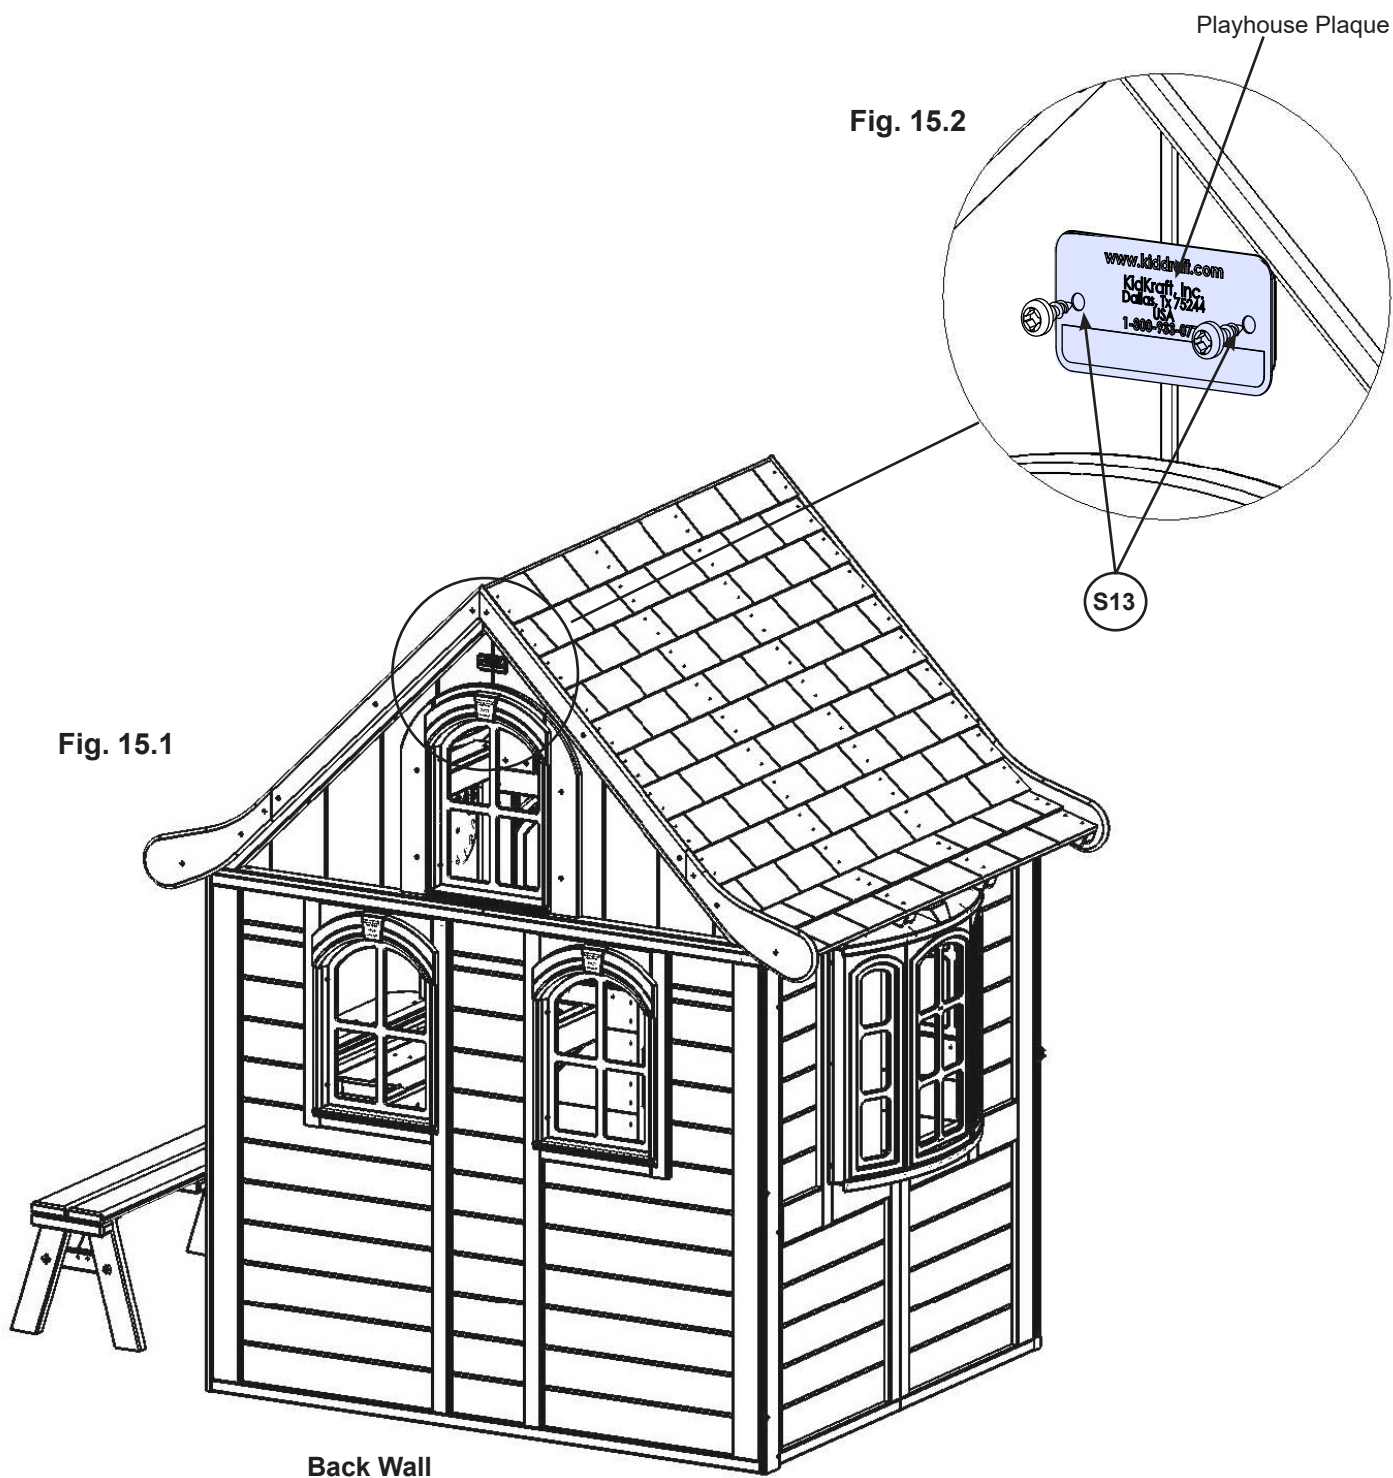

Hardware

2 x (S13) #6 x 5/8" Pan Screw

Other Parts

1 x Playhouse Plaque

[illegible]

BIG BACKYARD Consumer Registration Card

Initial

[illegible][illegible][illegible]

