

Product Contents

- 1x VXT-LR Transmitter
 - 2x Transmitter Mounting Ears
 - 4x Transmitter Mounting Screws
 - 4x Transmitter Plastic Cushions
 - 1x 3-pole Terminal Block
 - 1x Power Adapter (12V DC 2A)
 - 1x Reference Guide
- 1x VXT-LR Receiver
 - 2x Receiver Mounting Ears
 - 4x Receiver Mounting Screws
 - 4x Receiver Plastic Cushions
 - 1x 3-pole Terminal Block

Safety Suggestions

Read and Follow Instructions. Read all safety and operating instructions before operating the unit.

Retain Instructions. Keep the safety and operating instructions for future reference.

Heed Warnings. Adhere to all warnings on the unit and in the operating instructions.

Heat. Keep the unit away from heat sources such as radiators, heat registers, stoves, etc., including amplifiers that produce heat.

Power Sources. Connect the unit only to a power supply of the type described in the operating instructions, or as marked on the unit.

Power Cord Protection. Route power supply cords so that they are not likely to be walked on or pinched by items placed on or against them, paying particular attention to the cord plugs at power receptacles and at the point at which they exit from the unit.

Water and Moisture. Do not use the unit near water—for example, near a sink, in a wet basement, near a swimming pool, near an open window, etc.

Object and Liquid Entry. Do not allow objects to fall or liquids to be spilled into the enclosure through openings.

Servicing. Do not attempt any service beyond that described in the operating instructions. Refer all other service needs to qualified service personnel.

Damage Requiring Service. The unit should be serviced by qualified service personnel when:

- The power supply cord or the plug has been damaged.
- Objects have fallen or liquid has been spilled into the unit.
- The unit has been exposed to rain.
- The unit does not appear to operate normally or exhibits a marked change in performance.
- The unit has been dropped or the enclosure has been damaged.

Cleaning

To clean this product, lightly dampen a lint-free cloth with plain water or a mild detergent and wipe the outer surfaces.

NOTE: Do not use harsh chemicals as damage to the unit may occur.

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

Industry Canada Compliance Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes:

1. Ce dispositif ne peut causer des interférences nuisibles.
2. Cet appareil doit accepter toute interférence reçue y compris des interférences qui peuvent provoquer un fonctionnement indésirable.



DECLARATION OF CONFORMITY (DOC)
The Declaration of Conformity for this product can be found on the RTI website at: www.rticorp.com/declaration

Contacting RTI

For news about the latest updates, new product information, and new accessories, please visit our web site at: www.rticorp.com

For general information, you can contact RTI at:
Remote Technologies Incorporated
5775 12th Ave. E Suite 180
Shakopee, MN 55379
Tel. (952) 253-3100
Fax (952) 253-3131
info@rticorp.com

Service & Support

If you are encountering any problems or have a question about your RTI product, please contact RTI Technical Support for assistance (see the Contacting RTI section of this guide for contact details).

RTI provides technical support by telephone or e-mail. For the highest quality service, please have the following information ready:

- Your Name
- Company Name
- Telephone Number
- E-mail Address
- Product model and serial number (if applicable)

If you are having a problem with hardware, please note the equipment in your system, a description of the problem, and any troubleshooting you have already tried.

Please do not return products to RTI without return authorization.

Limited Warranty

RTI warrants new products for a period of three (3) years (excluding consumables such as rechargeable batteries which are warrantied for one (1) year) from the date of purchase by the original purchaser (end user) directly from RTI / Pro Control (herein referred to as "RTI"), or an authorized RTI dealer.

Warranty claims may be initiated by an authorized RTI dealer using the original dated sales receipt or other proof of warranty coverage. In the absence of the receipt of purchase from the original dealer, RTI will provide warranty coverage extension of six (6) months from the date code of the product. Note: RTI warranty is limited to the provisions set forth in this policy and does not preclude any other warranties offered by third parties who are solely responsible for those other warranties.

Except as specified below, this warranty covers defects in product material and workmanship. The following are not covered by the warranty:

- Product purchased via unauthorized sellers or internet sites will not be serviced-regardless of purchase date.
- Damages caused by accident, misuse, abuse, neglect or acts of God.
- Cosmetic damage, including, but not limited to, scratches, dents and normal wear and tear.
- Failure to follow instructions contained in the Product Installation Guide.
- Damages due to products used in an application or environment other than that for which it was intended, improper installation procedures or adverse environmental factors such as incorrect line voltages, improper wiring, or insufficient ventilation.
- Repair or attempted repair by anyone other than RTI and Pro Control or authorized service partners.
- Failure to perform recommended periodic maintenance.
- Causes other than product defects, including lack of skill, competence or experience of user.
- Damage due to shipment of this product (claims must be made to the carrier).
- Altered unit or altered serial number: defaced, modified or removed.

RTI is also not liable for:

- Damages caused by its products or for failure of its products to perform, including any labor costs, lost profits, lost savings, incidental damages, or consequential damages.
- Damages based upon inconvenience, loss of use of the product, loss of time, interrupted operation, commercial loss, any claim made by a third party or made on behalf of a third party.
- Loss of, or damage to, data, computer systems or computer programs.

RTI's liability for any defective product is limited to repair or replacement of the product, at the sole discretion of RTI.

In cases where the warranty policy conflicts with local laws, the local laws will be adopted.



Reference Guide



VXT-LR Video Extender

The VXT-LR is a long reach HDBT video extender set which contains a VXT-LRT transmitter and a VXT-LRR receiver. Compliant with HDMI1.4 and HDCP2.2, it is capable of transmitting high-definition video signals up to 4Kx2K@60Hz. Designed with support for HDBT2.0 enables 100m (max) 4K transmission and 150m 1080p transmission as well as RS-232 and IR control signals via single Cat5e/Cat6 cable. The VXT-LR set also boasts 4 Ethernet ports to enable convenient network switch capability. Furthermore, the pair also support CEC and ARC, making the solution even more flexible.

The VXT-LR provides superior quality and reliability as well as these features:

- Supports HDMI 1.4 and HDCP2.2 and is backwards compatible with all previous HDMI standards.
- The highest resolution is up to 4Kx2K@60Hz, and support 1080p 3D.
- Supports HDBT2.0, transmits 4Kx2K signal up to 100m and 1080p signal up to 150m via CAT5e/CAT6 cable.
- Intuitive front panel switch control: Transmission Mode (100m/150m), ARC (ON/ OFF).
- Supports CEC and ARC.
- IR and RS-232 pass-through control.
- Supports bi-directional PoH.
- Works as an Ethernet Switch.
- Status LEDs on front panel for power, link and HDCP.

Installation & Operation

VXT-LRT TRANSMITTER AND VXT-LRR RECEIVER FRONT PANEL DESCRIPTION

FW

100m / 150m

ON / OFF

1

2

3

4

5

6

7

No.	Name	Function
1	FW	Micro-USB port for firmware upgrade.
2	Power Indicator	Turns red when power on.
3	HDCP Indicator	<ul style="list-style-type: none">Turns blue when the HDMI signal is transmitted with HDCP.Blinks blue when the HDMI signal is transmitted without HDCP.Turns off when there is no HDMI signal (no picture).
4	LINK Indicator	Turns blue when the transmitter and the receiver are connected successfully.
5	ON Indicator	Blinks blue when the transmitter is in working status.
6	Transmission Mode Switch	<ul style="list-style-type: none">In 100m mode, the transmission distance of 4K and 1080p signal can up to 100 meters.In 150m mode, the transmission distance of 1080p signal can up to 150 meters. <i>Note: After switching this mode, the extender set must be reboot to take effect.</i>
7	ARC Mode Switch	Turns on or off ARC (Audio Return Channel) mode.

VXT-LRT TRANSMITTER REAR PANEL DESCRIPTION

ETHERNET

HDBT OUT/PoH

HDMI IN

AUDIO OUT

SPDIF OUT

IR IN

IR OUT

RS232

DC 12V

1

2

3

4

5

6

7

8

9

No.	Name	Function
1	ETHERNET	RJ45 port, work as Ethernet Switch together with the three Ethernet ports of receiver. Connect any one with a router, the other 3 ports are able to access LAN.
2	HDBT OUT/PoH	RJ45 HDBaseT output port to connect to the HDBaseT input port of the receiver by CAT5e/ CAT6a cable.
3	HDMI IN	Type A female HDMI input port to connect HDMI source.
4	AUDIO OUT (L+R)	RCA stereo audio output port to connect the audio output device, such as speakers.
5	SPDIF OUT	Fiber digital audio output port to connect the audio output device, such as amplifier.
6	IR IN	3.5mm jack for connection to a control system IR output or IR receiver to collect IR signal. Works with VXT-LRR IR OUT
7	IR OUT	3.5mm jack for connection to an IR emitter for control of external device. Works with VXT-LRR IR IN port.
8	RS-232	3-pole captive screw connector for RS-232 pass-through control. It can be connected with control system (Use a 3-pole captive to 9 pin female D connector) , or connected with the device which needs to be controlled.
9	DC 12V	Power port to connect the 12V DC power adapter.

VXT-LRR RECEIVER REAR PANEL DESCRIPTION

ETHERNET

HDBT IN/PoH

HDMI OUT

SPDIF IN

IR IN

IR OUT

RS232

DC 12V

1

2

3

4

5


6

7

8

No.	Name	Function
1	ETHERNET	Three RJ45 ports with Ethernet Switch capability work together with the Ethernet port of VXT-LRT transmitter. Connecting any port to a router enables the other 3 ports access to the LAN.
2	HDBT IN/PoH	RJ45 HDBaseT input port to connect to the HDBaseT output port of the VXT-LRT transmitter by CAT5e/ CAT6a cable.
3	HDMI OUT	Type A female HDMI output port for connection to a display.
4	SPDIF IN	Fiber digital audio input port to connect the audio source device with optical port, such as blue-ray player.
5	IR IN	For connection to an IR receiver to collect IR signal. Works with the VXT-LRT IR OUT port.
6	IR OUT	3.5mm jack for connection to an IR emitter for control of external device. Works with VXT-LRT IR IN port.
7	RS-232	3-pole captive screw connector for RS-232 pass-through control. It can be connected with control system (Use a 3-pole captive to 9 pin female D connector) , or connected with the device which needs to be controlled.
8	DC 12V	Power port to connect the 12V DC power adapter.

CONNECTION DIAGRAM

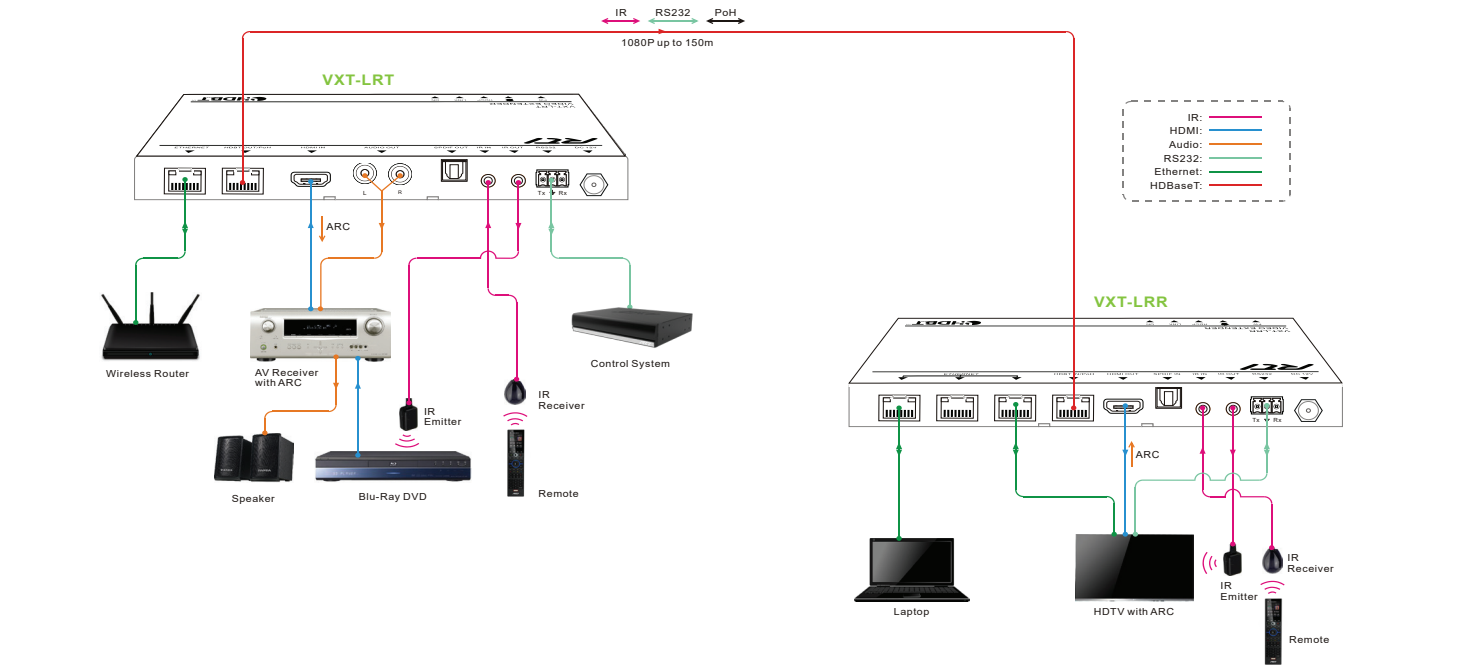

INSTALLATION

Please visit the RTI dealer portal (www.rticorp.com/dealer) for additional instructions and specifications.
NOTE: Features and specifications subject to change without notice.