

# Lumination® LED Luminaire



## LED Driver Replacement

(Recessed Architectural Luminaire Series)



### BEFORE YOU BEGIN

Read these instructions completely and carefully.

#### ⚠ WARNING / AVERTISSEMENT

##### RISK OF ELECTRIC SHOCK

- Turn power off before inspection, installation or removal.
- Properly ground electrical enclosure.

##### RISK OF FIRE

- Follow all NEC and local codes.
- Use only UL approved wire for input/output connections.
- Minimum size 18 AWG or 14 AWG for continuous runs.

##### RISQUES DE DÉCHARGES ÉLECTRIQUES

- Coupez l'alimentation avant d'inspecter, installer ou déplacer le luminaire.
- Assurez-vous de correctement mettre à la terre le boîtier d'alimentation électrique.

##### RISQUES D'INCENDIE

- Respectez tous les codes NEC et codes locaux.
- N'utilisez que des fils approuvés par UL pour les entrées/sorties de connexion. Taille minimum 18 AWG ou 14 AWG pour les rangées continues.

## Save These Instructions

Use only in the manner intended by the manufacturer.  
If you have any questions, contact the manufacturer.

## Components Supplied

- Driver of luminaire

## Tools and Components Required

- T15 torx screwdriver
- UL Listed conduit connections per NEC/CEC for nominal conduit trade sizes  $\frac{1}{2}$ " or  $\frac{3}{4}$ "
- UL Listed wire connectors

## Specifications

Description Code	Corresponding Luminaires
Recessed Architectural 22 Class 2 driver (1-10V dimming)	Recessed Architectural 2x2 Series Troffers
Recessed Architectural 24 Class 2 driver (1-10V dimming)	Recessed Architectural 2x4 Series Troffers

## Prepare Electrical Wiring



### Electrical Requirements

- The LED driver must be supplied with 120-277VAC 50/60Hz and connected to an individual properly grounded branch circuit, protected by a 20 ampere circuit breaker. Use min. 75°C supply conductor.




### Grounding Instructions


- The grounding and bonding of the overall system shall be done in accordance with National Electric Code (NEC) Article 600 and local codes.

Wiring Diagrams

1-10V Dimming: Standard Version

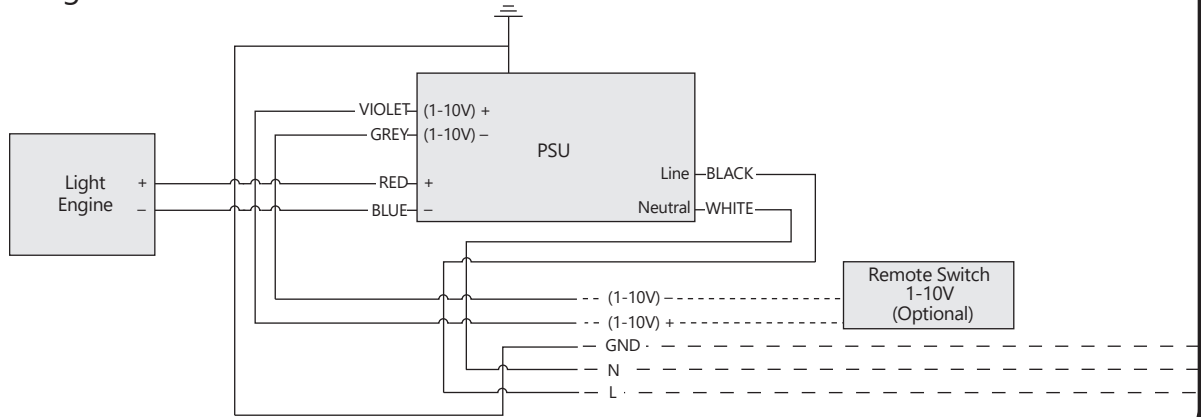


1-10V Dimming: Emergency Lighting Version

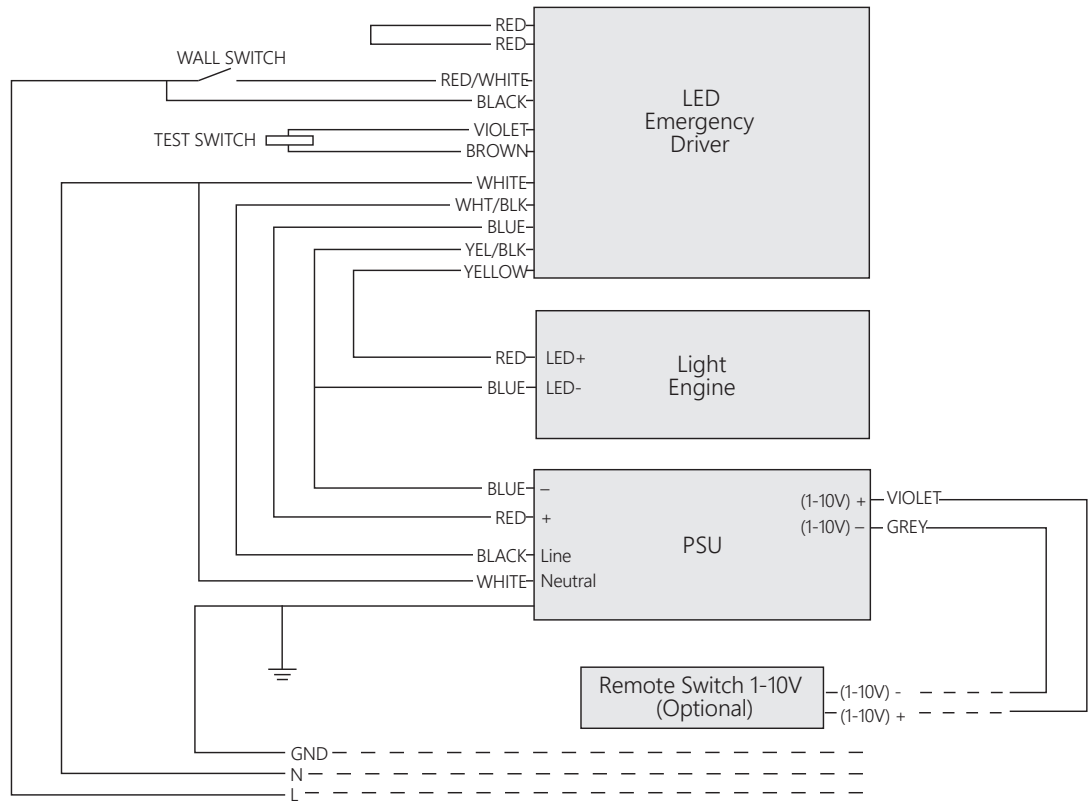


### Driver Replacement Steps


**Note:** The following depict the 22 series luminaire. However, the procedure is the same for the 14 and 24 series fixtures

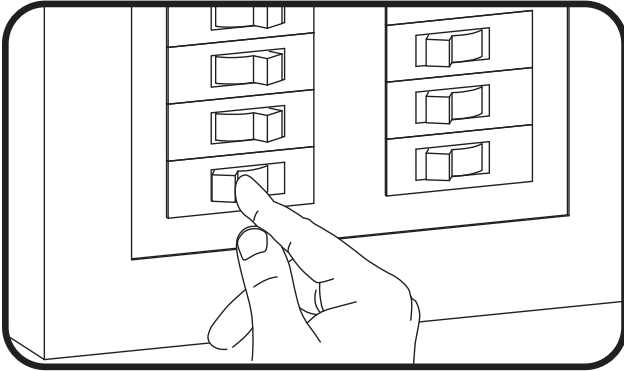


**1** TURN OFF POWER at the source of the luminaire.

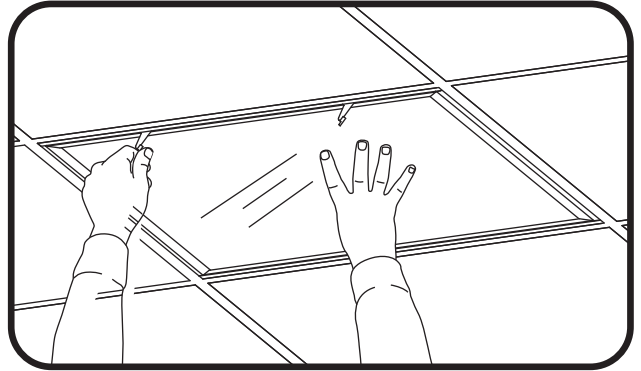

**2** Rotate latches to unlock the front bezel.

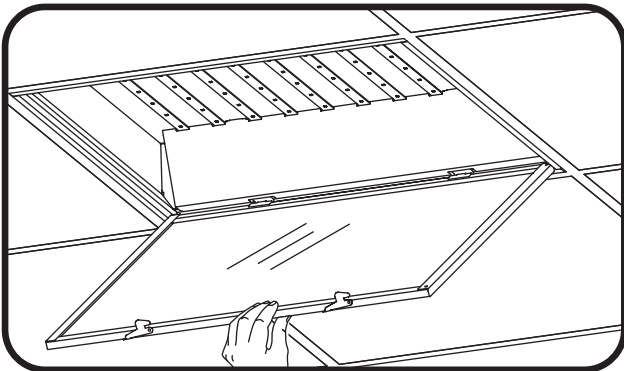


**3** Swing down panel and lift off front bezel.

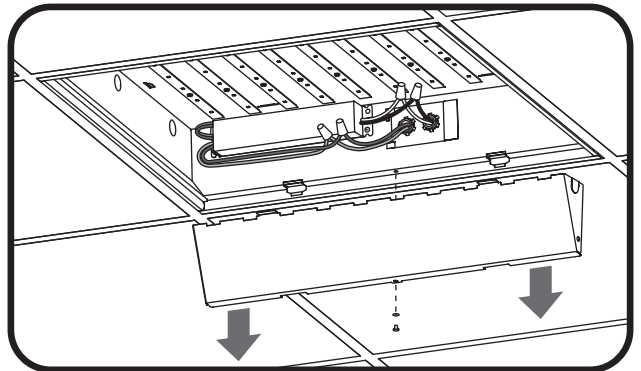


**4** Unfasten the screw(s) holding the driver cover and remove it.

### Standard Version

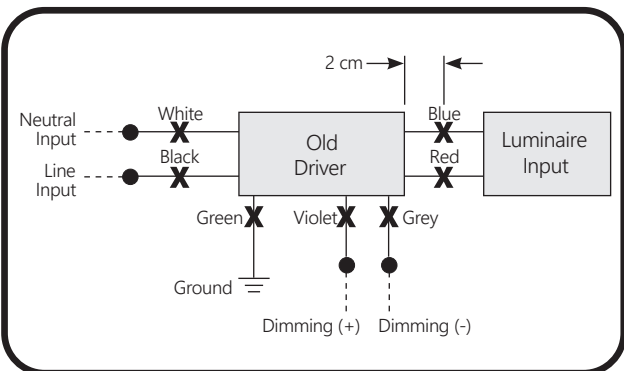

**5** First, disconnect the driver from the luminaire by cutting the wires at the distance of 2cm (0.75 in.) from the old driver. Then, unscrew the screws and star washers which attach the driver to the luminaire and remove the old driver.


**NOTE:** Keep the screws and star washers for later use.

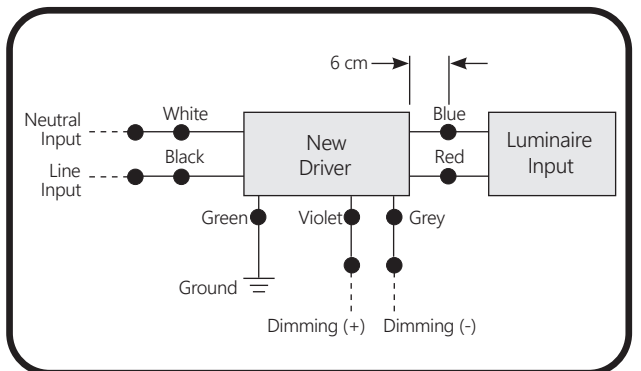

**6** The length of wires from the new driver should be no less than 6cm (2.36 in.). Reattach the new driver in the same location as the old driver using star washers and screws. Strip off 10mm (0.4 in.) from all wires and reconnect the new driver to the luminaire with UL listed connectors. Wires with the same color should be connected together.


**NOTE:** Ensure star washers are installed to keep grounding continuity. See page 2 for wiring diagrams.

Emergency Light Version

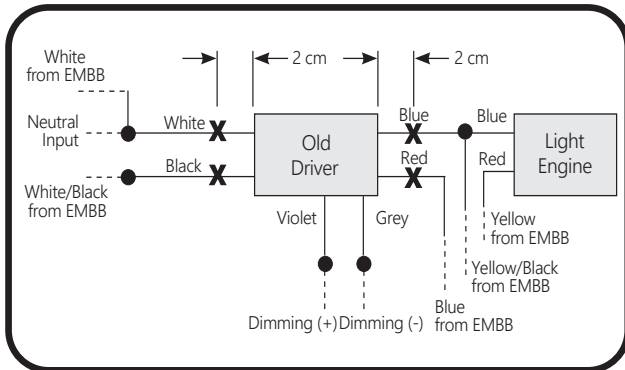


5 First, disconnect the driver from the luminaire by cutting the wires at the distance of 2cm (0.75 in.) from the old driver. Then, unscrew the screws and star washers which attach the driver to the luminaire and remove the old driver.

**NOTE:** Keep the screws and star washers for later use.

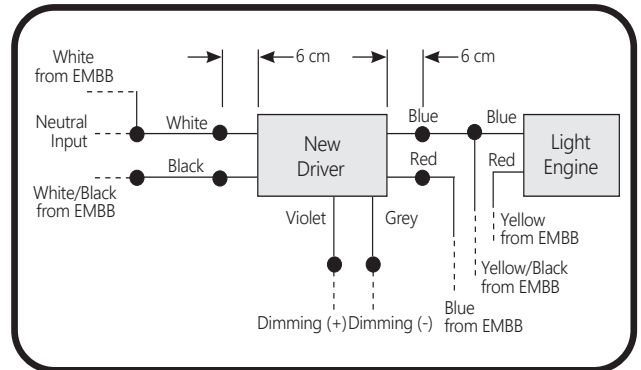


6 The length of wires from the new driver should be no less than 6cm (2.36 in.). Reattach the new driver in the same location as the old driver using star washers and screws. Strip off 10mm (0.4 in.) from all wires and reconnect the new driver to the luminaire


**NOTE:** Ensure star washers are installed to keep grounding continuity.

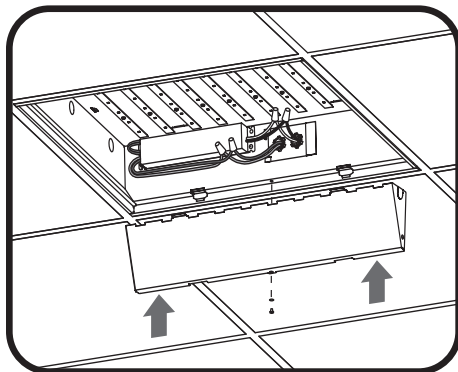

7 Reattach the driver cover with screw(s).

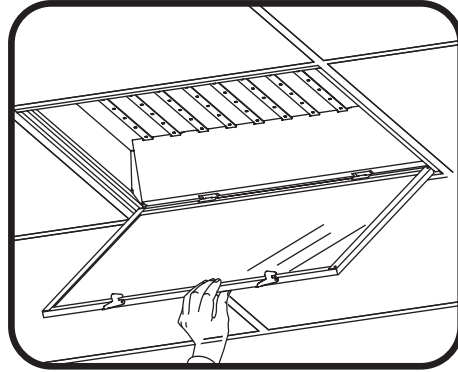

8 Hang panel on its hinges and swing into place.

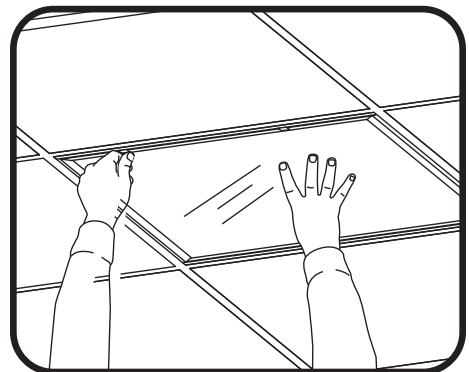

9 Rotate Latches to lock the front bezel.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-005 (A) / NMB-005 (A). This Class [A] RFLD complies with the Canadian standard ICES-003. Ce DEFR de la classe [A] est conforme à la NMB-003 du Canada.

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.