





## PERFORMANCE DATA

### To Obtain Performance Data:

- Press and hold the ▼ (Down) button.
- While holding the ▼ (Down) button for 2 seconds, press and hold the "On/Off" button (hold both buttons simultaneously).

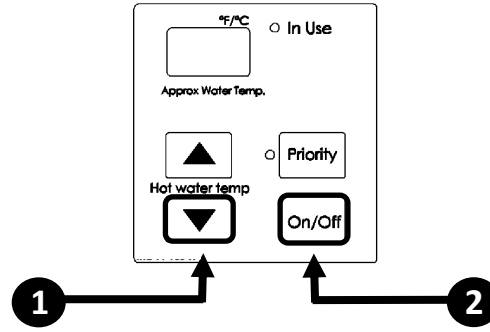

- Use the ▲ (Up) and ▼ (Down) buttons to scroll to the desired performance information described below.

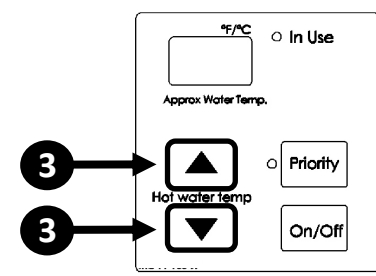

### Performance Data Table

#	DATA	UNIT
01	Water Flow Rate	x0.1 gal/min
02	Outgoing Temperature	°F
03	Combustion Hours	x100 Hours
04	Combustion Cycles	See following information
05	Fan Frequency	Hz
06	Additional Controllers Connected	See following information
07	Water Flow Control Position	0=Mid, 1=Open, 2=Closed
08	Inlet Temperature	°F
09	Fan Current	x10 mA
10	Total Bath Fill Amount	gallons
11	HEX Outlet Temperature	°F
12	By-Pass Flow Control Position	Degrees of opening
15	Freeze Protection Temperature (Indoor Unit Only)	°F
17	Freeze Protection Temperature (Outdoor Unit Only)	°F
19	Pump Hours	x100 Hours
20	Pump Cycles	See following information
21	Exhaust Temperature	°F

DISPLAY	CYCLE COUNT
000 to 999	x100 (0 to 99,900)
100 to 999	x10,000 (100,000 to 990,000)
1-- to 5--	x1,000,000 (1,000,000 to 6,000,000)


CONTROLLER MODEL	CONNECTED	NOT CONNECTED
MC	--1	--0
BC	--1	--0
BSC & BSC2	1-- , 2-- (QTY2)	0--

Default display is 100.  
-- depends on connection status of another controller.


## PARAMETER SETTINGS

### To Adjust the Parameters:

- Press the "A" button for 1 second.

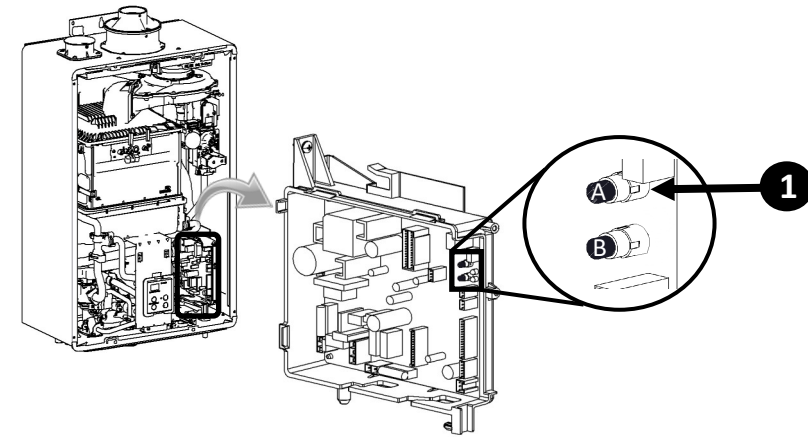

- Use the ▲ (Up) and ▼ (Down) button on the controller to select a setting number (See Parameter Settings Table).

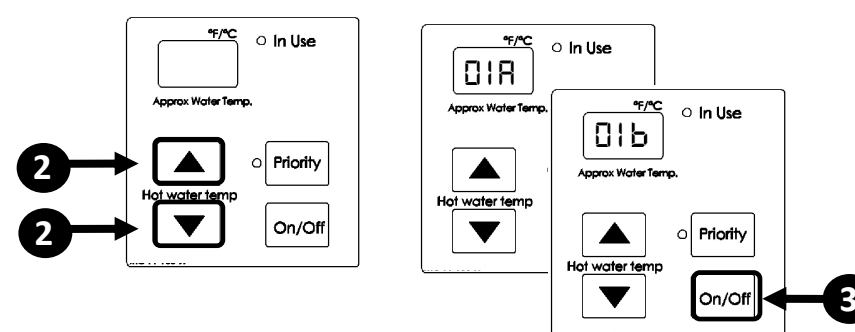

- Once the desired setting number is selected, use the "On/Off" button on the controller to change the selection for the setting number. Example: Display will change from 01A to 01b for Maximum Temperature setting (as shown below).
- To exit the parameters, press the "A" button on the PC board for 1 second.

### Parameter Settings Table

Default is A for all settings below except i0, i2, i3, and H which are factory set.

SETTING #	SETTING DESCRIPTION	SELECTION					
		R	b	C	d	E	F
01	Maximum Set Temperature	Residential: 120°F Commercial: 140°F	Residential: 140°F Commercial: 185°F				
02	High Altitude (Installation Location)	0 - 2,000 ft (0 - 610 m)	2,001 - 5,400 ft (610 - 1,646 m)	5,401 - 7,700 ft (1,646 - 2,347 m)	7,701 - 10,200 ft (2,347 - 3,109 m)		
03	Service Soon <sup>1</sup>	Disabled	0.5 Year	1 Year	2 Years		
04	Recirculation Settings	No Recirculation	Recirculation (Dedicated)	Recirculation (Crossover)			
05	Recirculation Mode <sup>2</sup>	Economy	Comfort	Commercial <sup>6</sup>			
06	Control Switch	BMS <sup>3</sup>	Air Handler (AH)				
07	Units in Standby (EZ Connect)	2	1				
08	Cascade	Secondary	Primary				
09	Units in Standby (Cascade) <sup>4</sup>	1	2	3	4	5	6
i0	Gas Type (Factory Set)	NG	LPG				
11	Maximum Flow Rate <sup>5</sup>	Standard	High				
12	Water Heater Model	Without Pump	With Pump (RUR)	With Pump (RSC)			
13	(Factory set values and not adjustable)	199 (3237)	180 (2934)	160 (2530)	130 (2024)		
14	Internal (Indoor)		External (Outdoor)				
15	Low Activation Mode	On	Off				
i7*	First Day Pump Operation	Pump Off	Pump On				

<sup>1</sup> Refer to the Installation and Operation Manual for more information on this setting.

<sup>2</sup> Setting 05 is available only if setting 04b is selected.

- **Economy mode** cycles the pump less often, using less energy to maintain the circulation loop temperature.
- **Comfort mode** cycles the pump more frequently, ensuring the loop temperature remains higher (but also uses more energy).

<sup>3</sup> BMS = Building Management System

<sup>4</sup> Setting 09 is available only if setting 08b is selected.

<sup>5</sup> Selecting "High" will increase the water flow rate to the maximum capacity.

<sup>6</sup> **Commercial mode should not be used for residential applications. Application of commercial mode may result in excessive machine wear and energy consumption.**

\*For the first 24-hours of operation, Smart-Circ will learn hot water usage patterns and operate pump based on the learned patterns. On the first day, when the tankless water heater has no learned patterns, the unit can be set to no pump operation (Pump Off/No Recirc) for the first 24 hours or to the pump operating (Pump On/Recirc) every 15 to 30 minutes for the first 24 hours.

## ELECTRICAL DIAGNOSTICS

NOTE: Wiring diagram is available in manual and on the inside front cover.

### Important Safety Notes

There are a number of (live) tests required when performing electrical diagnostics on this product. Proceed with caution at all times to avoid contact with energized components inside the water heater. Only trained and qualified service technicians should attempt to repair this product. Before checking for resistance readings, disconnect the power source to the unit and isolate the item from the circuit (unplug it).

### Freeze Protection

This unit has freeze protection heaters mounted at different points to protect the water heater from freezing. All of them should display a positive resistance reading.

### Flame Rod

Place one lead of your meter to the flame rod and the other to ground. With the unit running you should read between 5 - 150 VAC. Set your meter to the micro (μ) amp scale and arrange meter leads in line with the flame rod. You should read 1 μ amp or greater for proper flame circuit. In the event of low flame circuit, remove the flame rod and check for carbon or damage. The flame rod gasket must be replaced after it is removed.

### Amp Fuses

This unit has two glass fuses located on the PC Board, one inline (10) amp and one (4) amp glass fuse. Remove the fuses and check continuity through it. If you have continuity through each fuse then it is functioning. Otherwise the fuse is blown and must be replaced.

### Thermistors

Check all thermistors by inserting meter leads into each end of the thermistor plug. Set your meter to the 20 K scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance.

Below are examples of typical temperatures and resistance readings.

Temperature	Resistance Readings
59°F	11.4 - 14KΩ
86°F	6.4 - 7.8KΩ
113°F	3.6 - 4.5KΩ
140°F	2.2 - 2.7KΩ
221°F	0.6 - 0.8KΩ

### Electrical Circuit Table

COMPONENT	WIRE COLOR	VOLTAGE	RESISTANCE	PCB		
				CONNECTOR	CONNECTOR	PIN
Spark Electrode	Red-Black	11~13VDC*	34 K ~ 40 K ohms	D2	D	12-21
	Red-Black	7~48VDC*	N/A	D3	D	4-6
	White-Black	10~12VDC*	N/A	D3	D	10-6
Combustion Fan	Yellow-Black	11~13VDC*	N/A	D3	D	8-6
	Red-Pink	N/A	44~52 ohms	D4	D	18-20
	White-Blue	N/A	44~52 ohms	D4	D	16-14
Water Flow Control Device	Grey-Orange	12~14VDC	N/A	D4	D	30-12
	Blue-White	N/A	35~41 ohms	D5	D	5-7
	Yellow-Red	N/A	35~41 ohms	D5	D	11-9
Venturi Control Device	Black-Red	12~14 VDC	N/A	D5	D	30-12
	Black-Brown	less than 1VDC*	N/A	D5	D	30-25
	Black-Grey	less than 1VDC*	N/A	D5	D	30-23
By-Pass Flow Control Device	Red-Pink	N/A	44~52 ohms	D6	D	15-13
	White-Blue	N/A	44~52 ohms	D6	D	17-19
Gas Solenoid Valve	Yellow-Black	11~13VDC*	18~22 ohms	D7	D	29-27
Outgoing Thermistor	White-White			H1	H	3-2
	Blue-Blue					8-11
Inlet Thermistor	White-White			H2	H	4-2
Exhaust Thermistor	White-White		N/A See Example	H3	H	2-5
	White-White			H4	H	2-6
Heat Exchanger Thermistor	White-White			H4	H	2-6
Freeze Protection Thermistor	Yellow-Black			H5	H	2-7
Overheat Switch	Black-Black	11~13 VDC	less than 1 ohm	H6	H	28-14
Water Flow Sensor	Black-Red	11~13 VDC		H7	H	30-12
	Yellow-Black	4~7 VDC*	N/A	H7	H	12-30
Recirculation Pump (Optional)	White-Black	108~132 VAC	17~21 ohms	B1	B	1-2
Additional Controller(s)	White-White	10~13 VDC	N/A	K	-	-


(\* Value to be measured while unit is in operation)

## DIAGNOSTIC CODES

Visit [www.rinnai-lms.com](http://www.rinnai-lms.com) for additional troubleshooting resources

### To Display Diagnostic Codes:

- Turn off the water heater by pressing the "On/Off" button.
- Press and hold the "On/Off" for 2 seconds and then the ▲ (Up) button simultaneously.
- The last 9 maintenance codes display and flash one after the other.
- To exit diagnostic codes and return the water heater to normal operation, press and hold the "On/Off" button for 2 seconds and then the ▲ (Up) button simultaneously.
- Turn on the water heater by pressing the "On/Off" button.

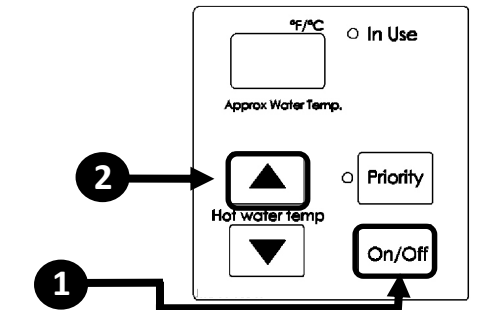

### 03 Power Interruption During Bath Fill (MC-100V/BC-100V Controllers)

- (Water will not flow when power returns)
- Turn off all hot water taps. Press "On/Off" button twice.

### 05 By-Pass Flow Control

- Measure resistance or voltage values of the by-pass flow control (See Electrical Diagnostics).
- Replace By-Pass flow control device.

### 10 Air Supply or Exhaust Blockage/Condensate Trap is Full

- Ensure condensate line is not blocked.
- Ensure internal air filter is clean with no obstructions. (Indoor Only)
- Ensure High Altitude setting. (See Parameter Settings)
- Ensure Combustion air and Exhaust vents are not blocked and approved venting materials are being used. (Indoor Only)
- Ensure vent length is within limits. (Indoor Only)
- Check fan for debris and ensure wheel turns freely.
- Verify check valve is not stuck between fan casing and burner body.

### 11 No Ignition (Heater Not Turning On)

- Check that the gas is turned on at the water heater, meter, or cylinder.
- If the system is propane, make sure that gas is in the tank.
- Ensure gas type and inlet gas pressure are correct.
- Bleed all air from gas lines.
- Check the ground wire for the PC Board.
- Ensure flame rod wire is connected.
- Ensure igniter is operational. (See Electrical Diagnostics)
- Check gas solenoid valves for open or short circuits. (See Electrical Diagnostics)
- Verify gas orifice is correct.
- Ensure condensate line is not blocked

### 12 No Flame

- Check that the gas is turned on at the water heater, gas meter, or cylinder.
- If the system is propane, make sure that gas is in the tank.
- Ensure flame rod wire is connected.
- Ensure gas type and inlet gas pressure is correct.
- Bleed all air from gas lines.

### 14 Heat Exchanger Overheat

- Measure resistance or voltage of Overheat Switch. (See Electrical Diagnostics)
- Check heat exchanger surface for hot spots which indicate blockage due to scale build-up.
- Refer to instructions in manual for flushing heat exchanger. Hard water must be treated to prevent scale build-up or damage to the heat exchanger.
- Ensure it is not forced HI setting.

### 15 Venturi Control

- Ensure the Venturi motor is operating correctly. (See Electrical Diagnostics)
- Replace gas valve assembly.
- Clear diagnostic code by resetting the main power supply to the water heater.

### 16 High Outgoing Temperature

- (safety shutdown because water heater is too hot)
- Confirm fan motor is functioning correctly.
- Replace the gas valve assembly.

### 17 Venturi Blockage

- Ensure Venturi isn't blocked.
- Please call Rinnai technical department.

### 19 Electrical Grounding

- Check all components for electrical short.

### 21 Data Transfer Error

- If the PCB has been replaced, ensure the data transfer process has been completed.

### 25 Condensate Pump (Accessory)

- Confirm wire connections and harness are good.
- Ensure condensate reservoir is empty and condensate pump is operating.

### 32 Outgoing Thermistor

- Check sensor wiring for damage.
- Measure resistance or voltage of sensor. (See Electrical Diagnostics)
- Clean sensor of scale build-up.
- Replace sensor.

### 39 Exhaust Thermistor

- Check sensor wiring for damage.
- Measure resistance or voltage of sensor. (See Electrical Diagnostics)
- Replace sensor.

### 51 Inlet Thermistor

- Check sensor wiring for damage.
- Measure resistance or voltage of sensor. (See Electrical Diagnostics)
- Clean sensor of scale build-up.
- Replace sensor.

### 52 Gas Valve

- Check flame rod and wire for damage.
- Check gas solenoid valve for open or short circuit. (See Electrical Diagnostics)
- Replace gas valve assembly.
- Please call Rinnai technical department.

### 54 High Exhaust Gas Temperature

- Ensure condensate line is not blocked
- Ensure Heat Exchanger fins are clean and not blocked.
- Confirm inlet water temperature is not too high.
- Clear diagnostic code by resetting the main power supply to the water heater.

### 61 Combustion Fan

- Check the motor wire harness for loose or damaged connections.
- Measure resistance or voltage of motor wire harness. (See Electrical Diagnostics)
- Ensure the combustion fan spins freely.

### 63 Recirculation Low Flow

- Ensure bypass plug is removed and bypass filter is installed. (COV Mode)
- Ensure both the inlet water filter and bypass filter are clean and free of debris.
- Ensure Parameter setting are correctly set for recirculation mode.
- Ensure Pump supply voltage.
- Ensure air is removed from the recirculation line.

### 65 Water Flow Control

- Measure resistance or voltage values of the water flow control (See Electrical Diagnostics)
- The water flow control valve has failed to close during the bath fill function. Immediately turn off the water and discontinue the bath fill function. Contact a licensed professional to service the appliance.

### 70 PC Board

- Replace PC Board

### 71 Solenoid Valve Circuit

- Ensure dip switch on PC board is in the OFF position.
- Ensure gas control wire is not loose or damaged.
- Ensure heater circuit is not grounded.
- Replace PC Board.

### 72 Flame Rod

- Check flame rod and wire for damage.
- Verify HEX is not leaking.

### 55 (SS) Service Soon (Flush Heat Exchanger)

- 55 is a time-based service indicator set during installation. Refer to the Installation and Operation Manual for additional details on setting and changing the 55 indicator.
- 55 indicates that it is time for service. The heat exchanger should be flushed to prevent damage. Refer to the Installation and Operation Manual for more information. **Hard water must be treated to prevent scale build-up or damage to the heat exchanger.**
- To reset the 55 code, push the On/Off button on the temperature controller 5 times in 5 seconds.

### NO CODE - Nothing happens when water flow is activated


- Verify you have at least the minimum flow rate required to fire unit.
- Measure the resistance or voltage of the water flow control sensor. (See Electrical Diagnostics)
- Clean inlet water supply filter.
- On new installations ensure hot and cold water lines are not reversed.

### 5E Cascade Diagnostic Display (Commercial units only)






- With cascade connections, display will flash between "5E" and the selected set temperature when an error code is displayed on any secondary unit.

### FF Maintenance Indicator

- Placeholder in Diagnostic code history indicating that a service provider performed maintenance or service.
- Enter this code after performing service by pressing ▲ (Up), ▼ (Down) and "On/Off" simultaneously.
- FF is visible on the monitor.

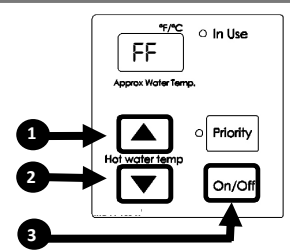

Gas Conversion Kits	
RJ199i, CU199i	103000076
RJ199e, CU199e	103000077
RJ180i	103000078
RJ180e	103000079
RJ160i, CU160i	103000080
RJ160e, CU160e	103000081
RJ130i	103000082
RJ130e	103000083

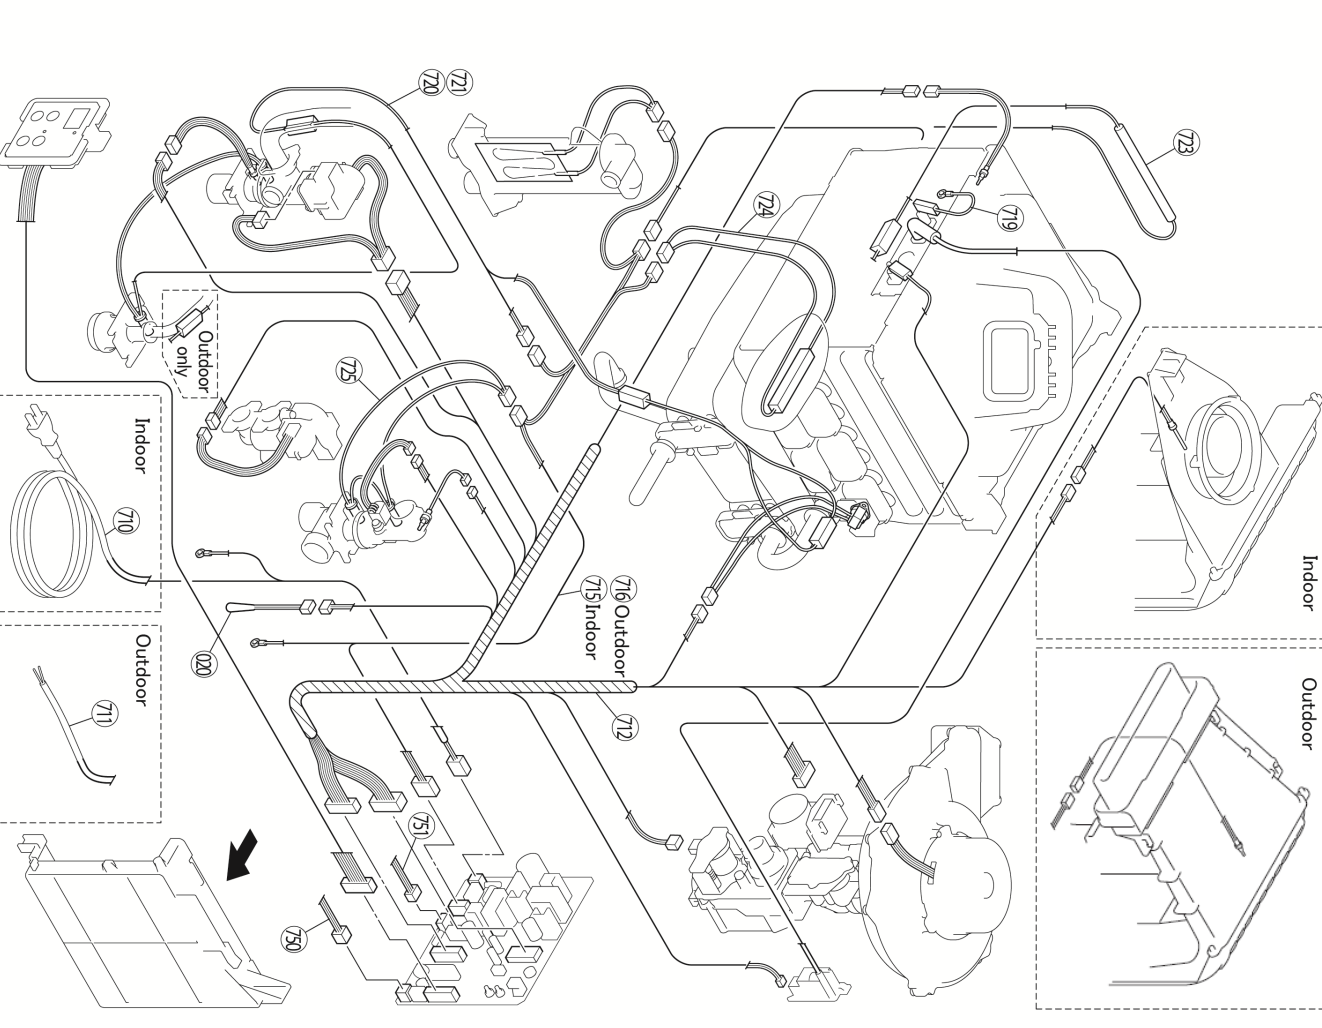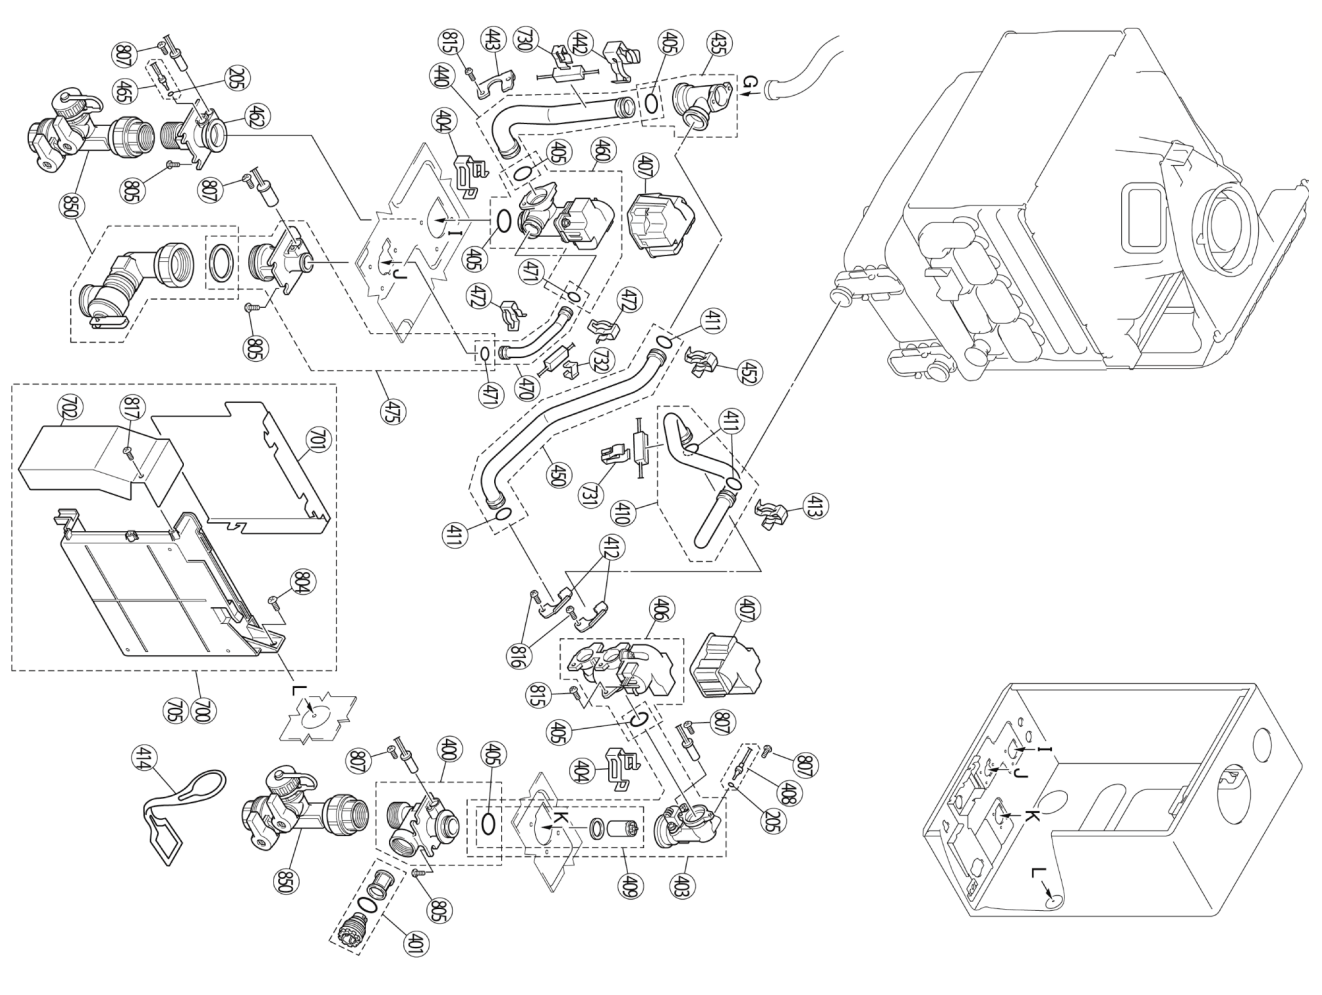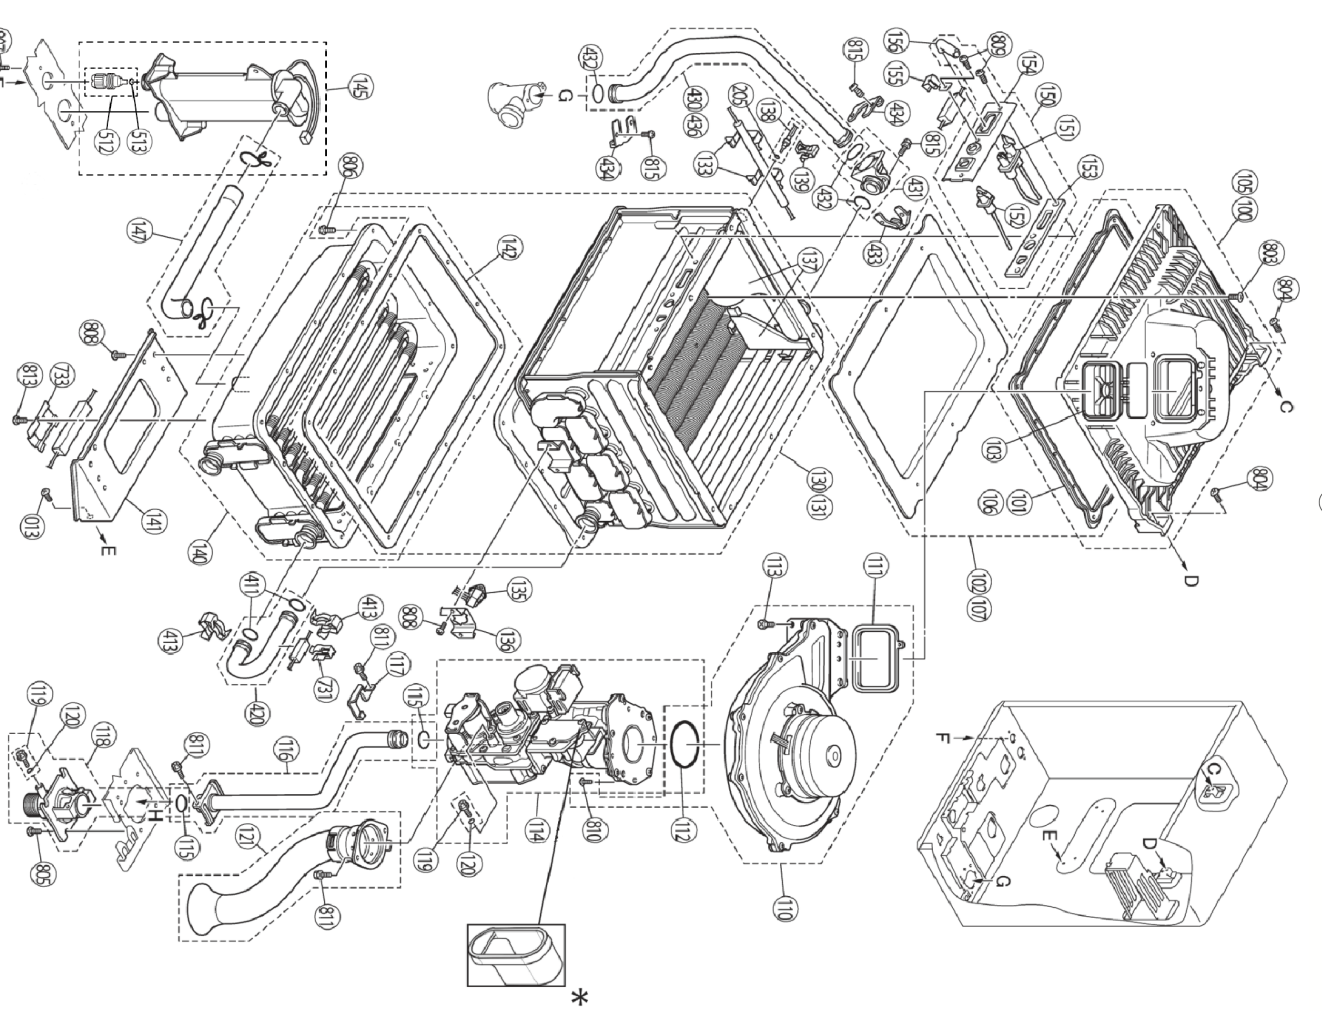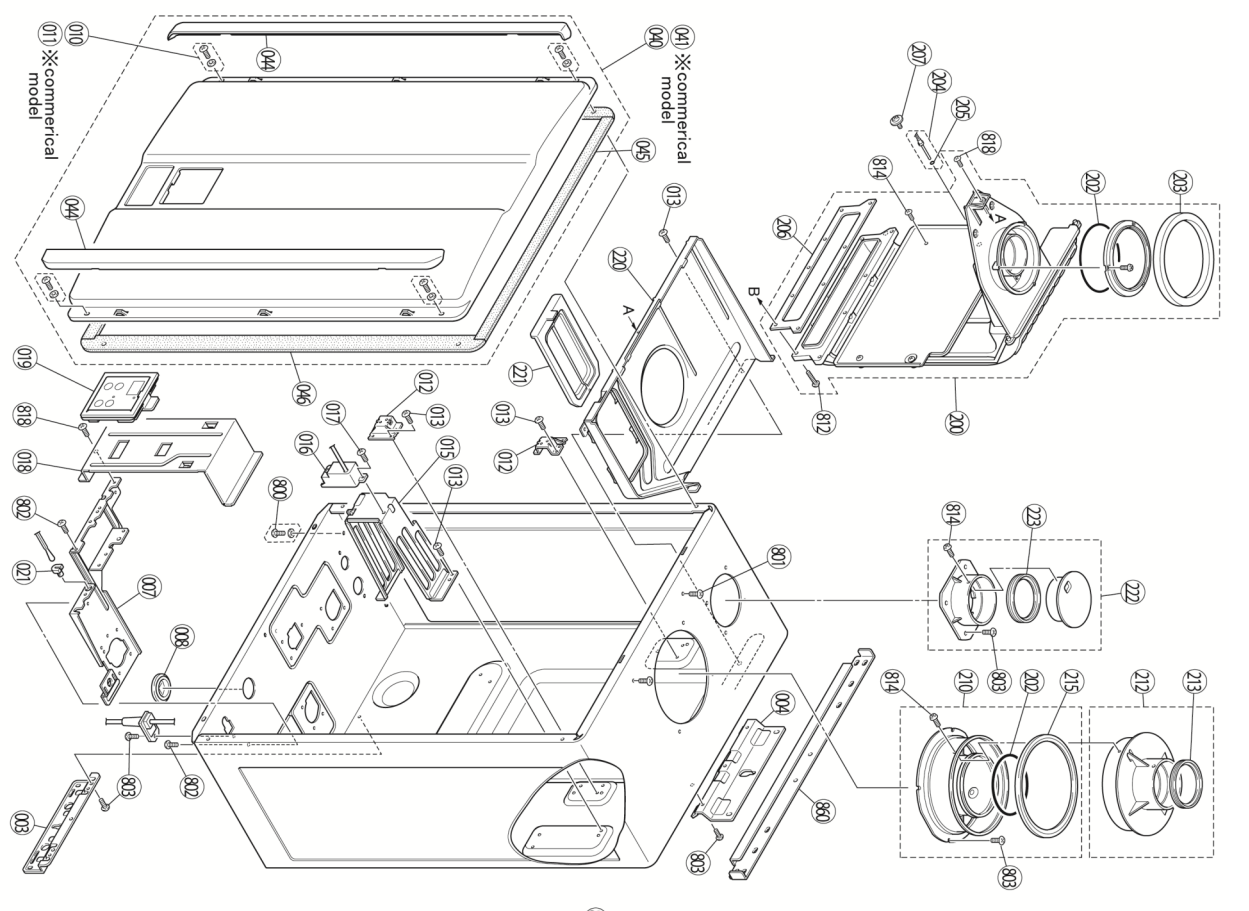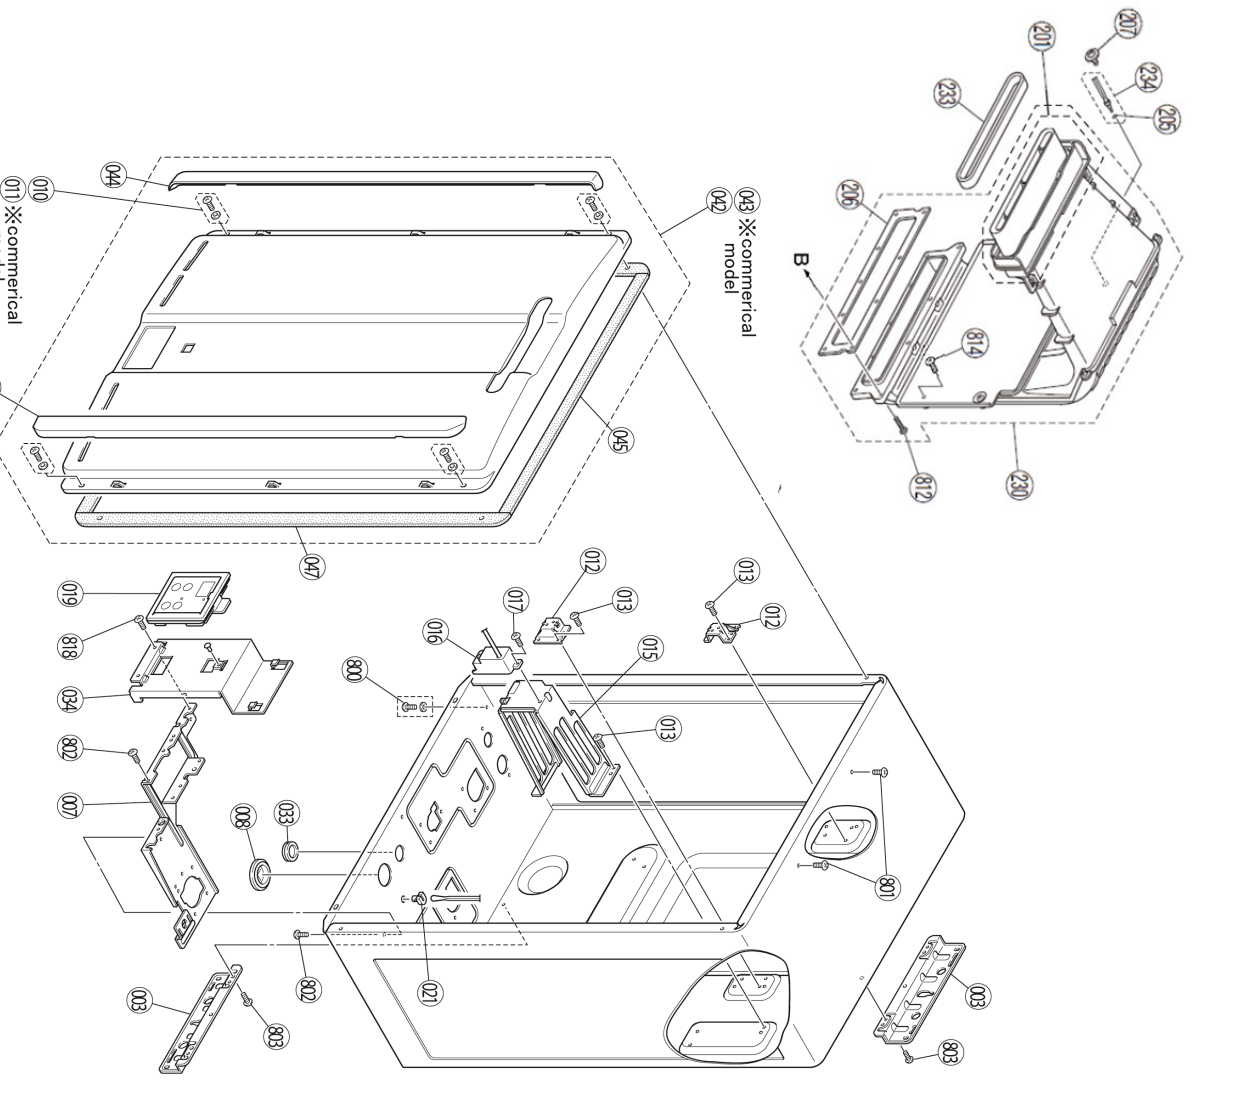

ITEM	DESCRIPTION	PART NUMBER	RU199i   RU180i	RU199e   RU180e	RU160i   RU130i	CU199i	CU199e	CU160i	CU160e
003	Lower Wall Mount Bracket	1090000281	1	2	1	2	1	2	1
004	Upper Wall Mount Bracket	1090000594	1	1	1	1	1	1	1
007	Connection Reinforcement Plate	1090000595	1	1	1	1	1	1	1
008	Rubber Bushing	1090000634	1	1	1	1	1	1	1
010	Commercial Screw & Washer-Gray	1060000645	4	4	4	4	4	4	4
011	Commercial Chamber Support Plate	1090000596	2	2	2	2	2	2	2
012	Truss Screw	1090000597	14	12	14	12	14	12	12
013	Igniter Bracket	1090000598	1	1	1	1	1	1	1
016	Igniter Assembly	1050000230	1	1	1	1	1	1	1
017	Grounding Screw	CP-80452	1	1	1	1	1	1	1
018	Controller Bracket-FF	1090000600	1	1	1	1	1	1	1
019	Controller	1050000260	1	1	1	1	1	1	1
020	Thermistor Sensor	1050000261	1	1	1	1	1	1	1
021	Thermistor Grommet	1090000490	1	1	1	1	1	1	1
033	Rubber Bushing	CF79-41020-A	1	1	1	1	1	1	1
034	Controller Bracket W	1090000603	1	1	1	1	1	1	1
040	Residential Front Cover Panel FF	1090000604	1	1	1	1	1	1	1
041	Commercial Front Cover Panel FF	1090000605	1	1	1	1	1	1	1
042	Residential Front Cover Panel W	1090000606	1	1	1	1	1	1	1
043	Commercial Front Cover Panel W	1090000607	1	1	1	1	1	1	1
044	Screw Cover	1090000230	2	2	2	2	2	2	2
045	Front Panel Packing - Top	1090000120	2	2	2	2	2	2	2
046	Front Panel Packing - Side FF	1090000608	2	2	2	2	2	2	2
047	Front Panel Packing - Side W	1090000121	1	1	1	1	1	1	1
100	Burner Assembly - Large	1090000609	1	1	1	1	1	1	1
101	Burner Gasket - Large	1090000613	1	1	1	1	1	1	1
102	Burner Plate Assembly - Large	1060000114	1	1	1	1	1	1	1
103	Combustion Check Valve Assembly	1070000262	1	1	1	1	1	1	1
105	Burner Assembly - Small	1060000115	1	1	1	1	1	1	1
106	Burner Gasket - Small	1090000610	1	1	1	1	1	1	1
107	Burner Plate Assembly - Small	1060000116	1	1	1	1	1	1	1
110	Combustion Fan Assembly	1080000081	1	1	1	1	1	1	1
111	Fan Mounting Fan Packing	1090000611	1	1	1	1	1	1	1
112	O-Ring	1090000612	1	1	1	1	1	1	1
113	Hexagon Head Screw	ZQA0A514UK	3	3	3	3	3	3	3
114	Gas Valve Assembly with Orifice	1060000117	1	1	1	1	1	1	1
115	O-Ring	1060000118	2	2	2	2	2	2	2
116	Gas Connection Pipe	1060000118	1	1	1	1	1	1	1
117	Gas Tube Bracket	1090000635	1	1	1	1	1	1	1
118	Inlet Gas Supply Connection	1060000119	1	1	1	1	1	1	1
119	Inlet Gas Test Port Screw	M10B-13-4	2	2	2	2	2	2	2
120	O-Ring	1060000120	1	1	1	1	1	1	1
121	Noise Filter	1070000263	1	1	1	1	1	1	1
130	Heat Exchanger Assembly - Large	1070000264	1	1	1	1	1	1	1
131	Heat Exchanger Assembly - Small	1090000613	2	2	2	2	2	2	2
133	Over Heat Sensor (OHS)	1050000231	1	1	1	1	1	1	1
135	OHS Bracket	1090000614	1	1	1	1	1	1	1
136	OHS Bracket	1070000265	1	1	1	1	1	1	1
137	Heat Exchanger Insulator	1050000262	1	1	1	1	1	1	1
138	Thermistor	1050000900	1	1	1	1	1	1	1
139	Clip	1070000266	1	1	1	1	1	1	1
140	Secondary Heat Exchanger	1090000615	1	1	1	1	1	1	1
141	Secondary Heat Exchanger Bracket	1090000615	1	1	1	1	1	1	1
142	Secondary Heat Exchanger Gasket	1090000616	1	1	1	1	1	1	1
143	Condensate Trap	1070000267	1	1	1	1	1	1	1
144	Condensate Drain Tube	1070000268	1	1	1	1	1	1	1
147	Electrode/Flame Rod Assembly	1050000232	1	1	1	1	1	1	1
150	Electrode	1050000233	1	1	1	1	1	1	1
151	Flame Rod	1050000234	1	1	1	1	1	1	1
152	Electrode Packing	1090000617	1	1	1	1	1	1	1
153	Electrode Plate	1090000618	1	1	1	1	1	1	1
154	Electrode Sleeve	1090000619	1	1	1	1	1	1	1
155	Electrode Heater Bracket	1090000620	1	1	1	1	1	1	1
156	Exhaust Duct Assembly FF	1080000182	1	1	1	1	1	1	1
200	Exhaust Port	1080000189	2	2	2	2	2	2	2
201	O-Ring	1080000188	1	1	1	1	1	1	1
202	Exhaust Duct Packing	1090000235	1	1	1	1	1	1	1
203	Exhaust Duct Seal	1090000236	1	1	1	1	1	1	1
204	Exhaust Duct Seal W	1080000084	1	1	1	1	1	1	1
205	Exhaust Packing	1090000622	1	1	1	1	1	1	1
206	Thermistor	1080000187	1	1	1	1	1	1	1
207	Thermistor	1080000188	1	1	1	1	1	1	1
210	Flue Connection Assembly	1090000624	1	1	1	1	1	1	1
212	Exhaust Pipe Connection Port-2"	1080000084	1	1	1	1	1	1	1
213	Exhaust Gasket-2 inch	1090000625	1	1	1	1	1	1	1
215	Air Supply Pipe Seal Ring	1080000085	1	1	1	1	1	1	1
220	Air Supply Box	1080000085	1	1	1	1	1	1	1
221	Air Supply Filter	1080000086	1	1	1	1	1	1	1
222	Air Supply Connection	1080000087	1	1	1	1	1	1	1
223	Air Supply Gasket - 2 inch	1090000624	1	1	1	1	1	1	1
230	Exhaust Duct Seal W	1080000088	1	1	1	1	1	1	1
233	Front Exhaust Seal W	1080000088	1	1	1	1	1	1	1
234	Thermistor	1050000263	1	1	1	1	1	1	1
400	3/4 Water Supply Connection	1070000316	1	1	1	1	1	1	1
401	Water Supply Filter Plug Assembly	1070000316	1	1	1	1	1	1	1
403	Water Flow Sensor Assembly	1070000318	1	1	1	1	1	1	1
404	Clip	1090000636	6	6	6	6	6	6	6
406	Bypass Servo Assembly	1070000270	1	1	1	1	1	1	1
407	Cover	1070000271	1	1	1	1	1	1	1
408	Inlet Water Thermistor	1070000318	1	1	1	1	1	1	1
409	Flow Turbine Assembly	1070000319	1	1	1	1	1	1	1
410	Water Supply Connection Pipe	M10B-2-14	6	6	6	6	6	6	6
411	O-Ring	1070000271	1	1	1	1	1	1	1
412	Retention Clip	AH69-310	2	2	2	2	2	2	2
413	Plug Band	109000018	1	1	1	1	1	1	1
420	Secondary Connecting Pipe	1070000272	1	1	1	1	1	1	1
430	Connection Pipe Assembly - Large	1070000273	1	1	1	1	1	1	1
431	Heat Exchanger Pipe Connection	1070000274	4	4	4	4	4	4	4
432	O-Ring	1070000325	4	4	4	4	4	4	4
433	Pipe Bracket	1090000637	2	2	2	2	2	2	2
434	Retention Clip	1090000496	1	1	1	1	1	1	1
435	Hot Water Connection fitting	1070000275	1	1	1	1	1	1	1
436	Connection Pipe Assembly-Small	1070000276	1	1	1	1	1	1	1
440	Hot Water Supply Connection Pipe	1070000277	1	1	1	1	1	1	1
442	Clip	1090000638	1	1	1	1	1	1	1
443	Retention Clip	U211-322X01	1	1	1	1	1	1	1
450	Bypass Pipe Assembly	1070000278	1	1	1	1	1	1	1
452	Clip	1090000639	1	1	1	1	1	1	1
460	Hot Water Servo Valve Assembly	1070000279	1	1	1	1	1	1	1
462	Hot Water Supply Connection	1070000280	1	1	1	1	1	1	1
465	Outlet Thermistor	1050000982	1	1	1	1	1	1	1
470	PRV Connection Pipe	1070000281	1	1	1	1	1	1	1
471	O-Ring	1070000326	2	2	2	2	2	2	2
475	Pressure Relief Valve Connection	1090000278	2	2	2	2	2	2	2
512	Drain Plug	1070000282	1	1	1	1	1	1	1
513	O-Ring	1090000182	1	1	1	1	1	1	1
700	PC Board Assembly - Residential	1050002002	1	1	1	1	1	1	1
701	PCB Electrical Cover	1090000626	1	1	1	1	1	1	1
702	PCB EC Cover	1090000627	1	1	1	1	1	1	1
705	PC Board Assembly - Commercial	1050000237	1	1	1	1	1	1	1
710	Power Cord Assembly-FF	1050000238	1	1	1	1	1	1	1
711	Power Cord Assembly W	1050000239	1	1	1	1	1	1	1
712	Sensor Harness	1050000240	1	1	1	1	1	1	1
715	Heater Harness FF	1050000241	1	1	1	1	1	1	1
716	Heater Harness W	1050000242	1	1	1	1	1	1	1
719	Igniter Ground Harness	1050000243	1	1	1	1	1	1	1
720	Freeze Protection Heater FF	10500							